
800001076/800002076/800003076/800004076 800001077/800002077/800003077/800004077 800001078/800002078/800003078/800004078 800001079/800002079/800003078/800004079





# RAISED GARDEN BED

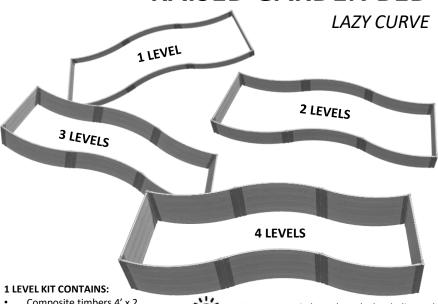

- Composite timbers 4' x 2
- Composite timbers 4' x 6 curved
- Brackets x 16
- \*\*Stakes x 8
- Plugs x 32
- Caps x 8

Layout your timbers along the borderline and connect each timber together by inserting the top of the stake through the bracket loops with the stake pointing to the sky. This enables you to freely position your border to get your desired location.





#### FOR INDOOR & HARD SURFACE:

If you plan to assemble raised bed on a hard surface, use hacksaw to remove the spike of each stake. Use these cut down stakes for the base level only of your raised garden.

Customer Service: 1800-914-9835 | support@frameitall.com © Frame It All. All Rights Reserved.

# **ASSEMBLY INSTRUCTIONS**

#### STEP 1a:


Assemble the timbers by sliding one end of timber into channel end of one of the brackets. Use plugs to cover the holes on both sides to lock the bracket in place.



Repeat this process on the opposite end of the timber flipping the bracket in the opposite direction (see image). Repeat for all straight timbers.

#### STEP 1b:

Connect outward-curving timbers with bracket orientation A and connect inward-curving timbers with bracket orientation B.



# STEP 2:

Layout the base level of your raised garden in the wavy shape below, using 2 x 4' straight & 6 x 4' curved timbers. Insert stake through the hole of the bracket and into each of the corners to lock all sides in place.

### STEP 2a:

For one level, add caps to each of the top corner joints to finish off the raised garden.

HAPPY GARDENING!

# ASSEMBLY INSTRUCTIONS – For Product with Second to Four Levels

LEVEL 2, 3 & 4: Repeat Step 2 - using 2 x 4' straight & 6 x 4' curved timbers for each levels.

**Lastly,** add the caps to each of the top corner joint.



