


Please note: Items cannot be returned once assembled

Version:1.0

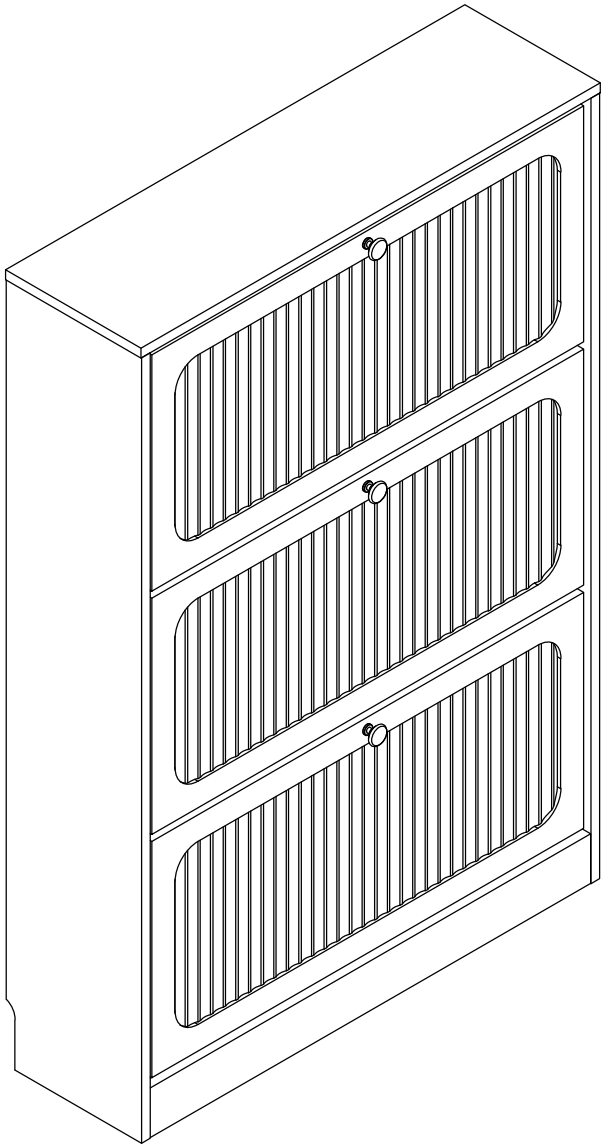


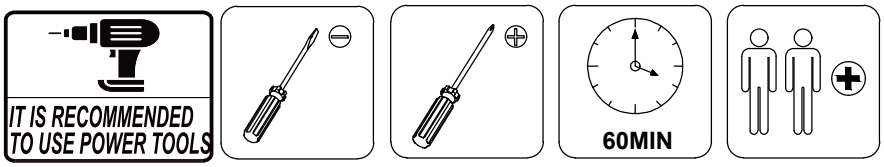


***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

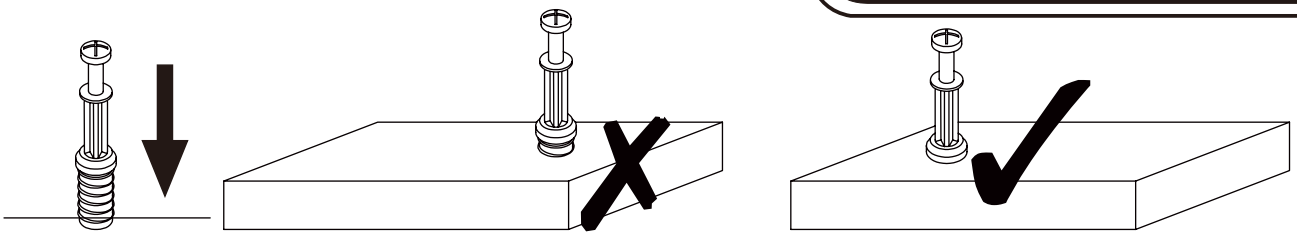


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.

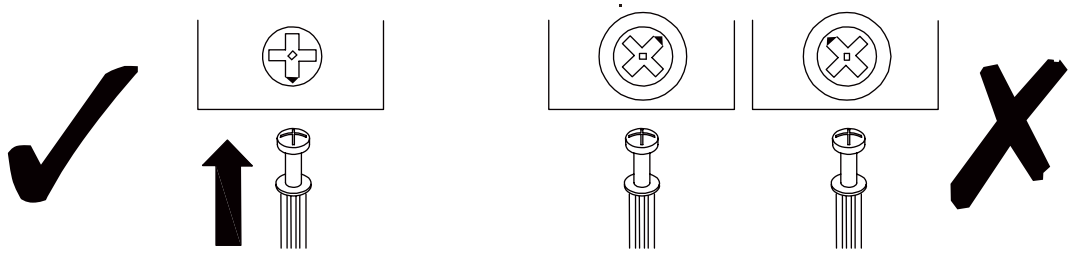









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

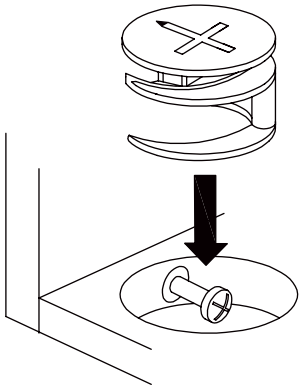



EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

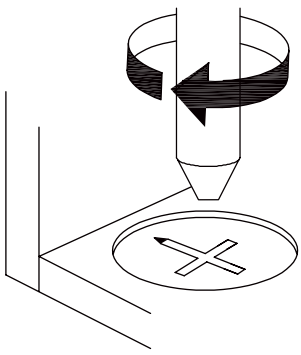


EN_ Turn cam lock clockwise to tighten.

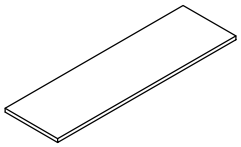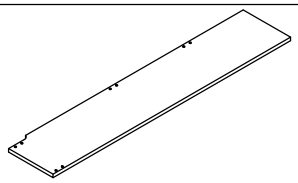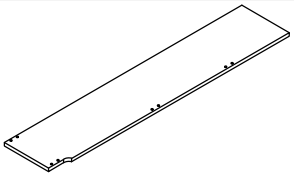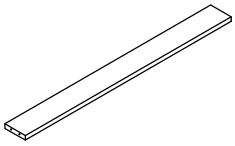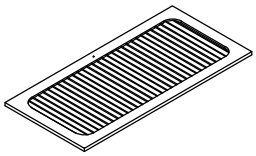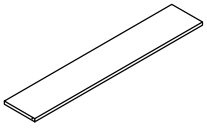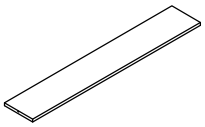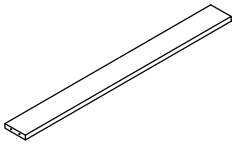NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x3	
⑤		x3	
⑥		x6	
⑦		x3	
⑧		x1	
	 Hardware Kit		

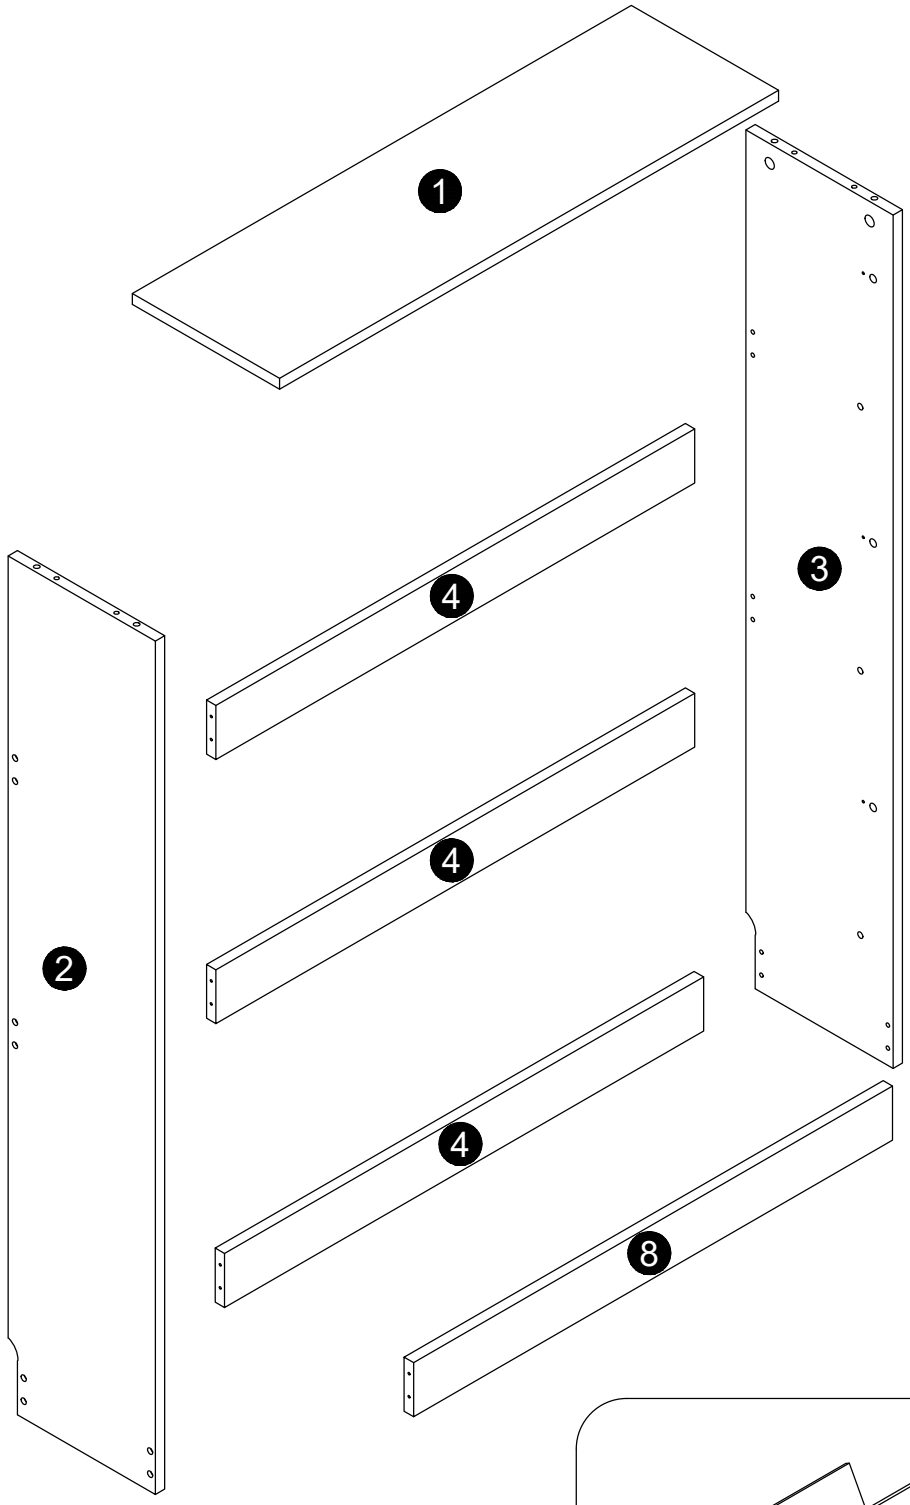

1
2
3
4
4
4
8

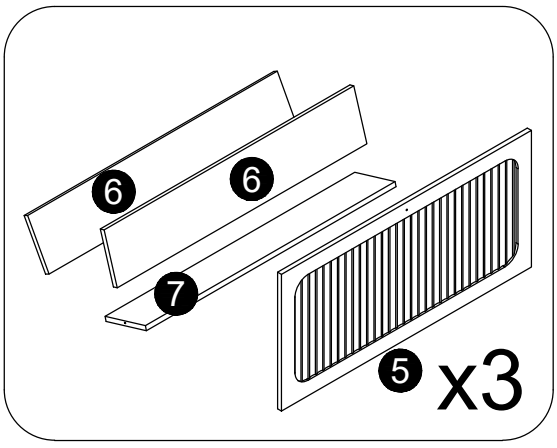

6
6
7
5 x3

HARDWARE

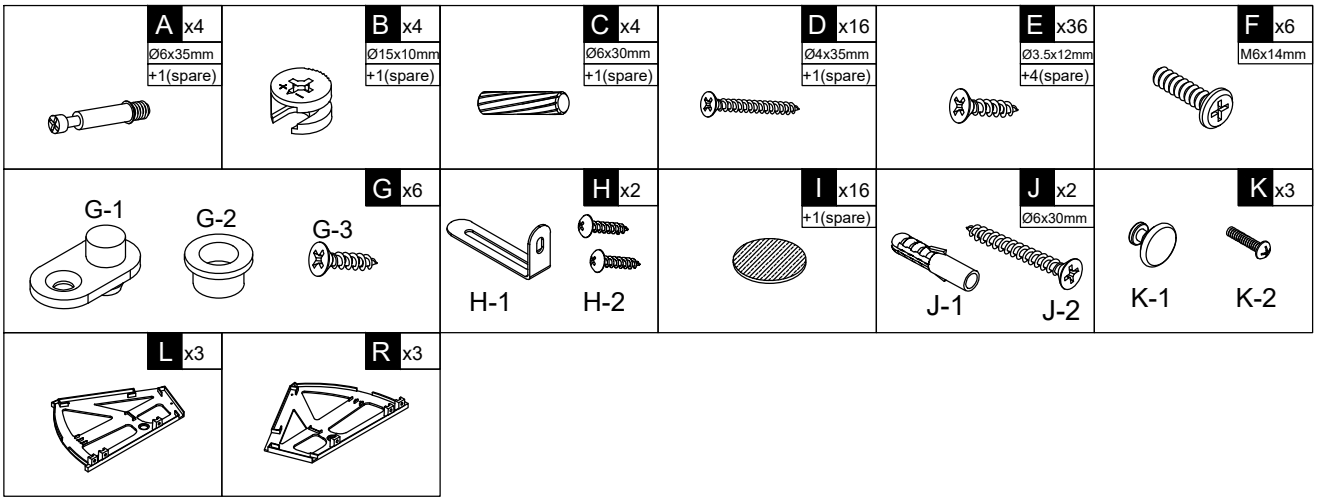
A x4
Ø6x35mm
+1(spare)
B x4
Ø15x10mm
+1(spare)
C x4
Ø6x30mm
+1(spare)
D x16
Ø4x35mm
+1(spare)
E x36
Ø3.5x12mm
+4(spare)
F x6
M6x14mm
G x6
G-1
G-2
G-3
H x2
H-1
H-2
I x16
+1(spare)
J x2
Ø6x30mm
J-1
J-2
K x3
K-1
K-2
L x3
R x3

01

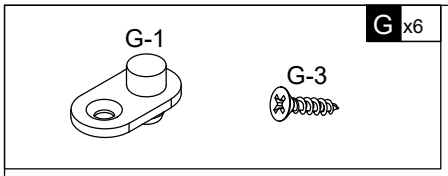

G x6
G-1
G-3

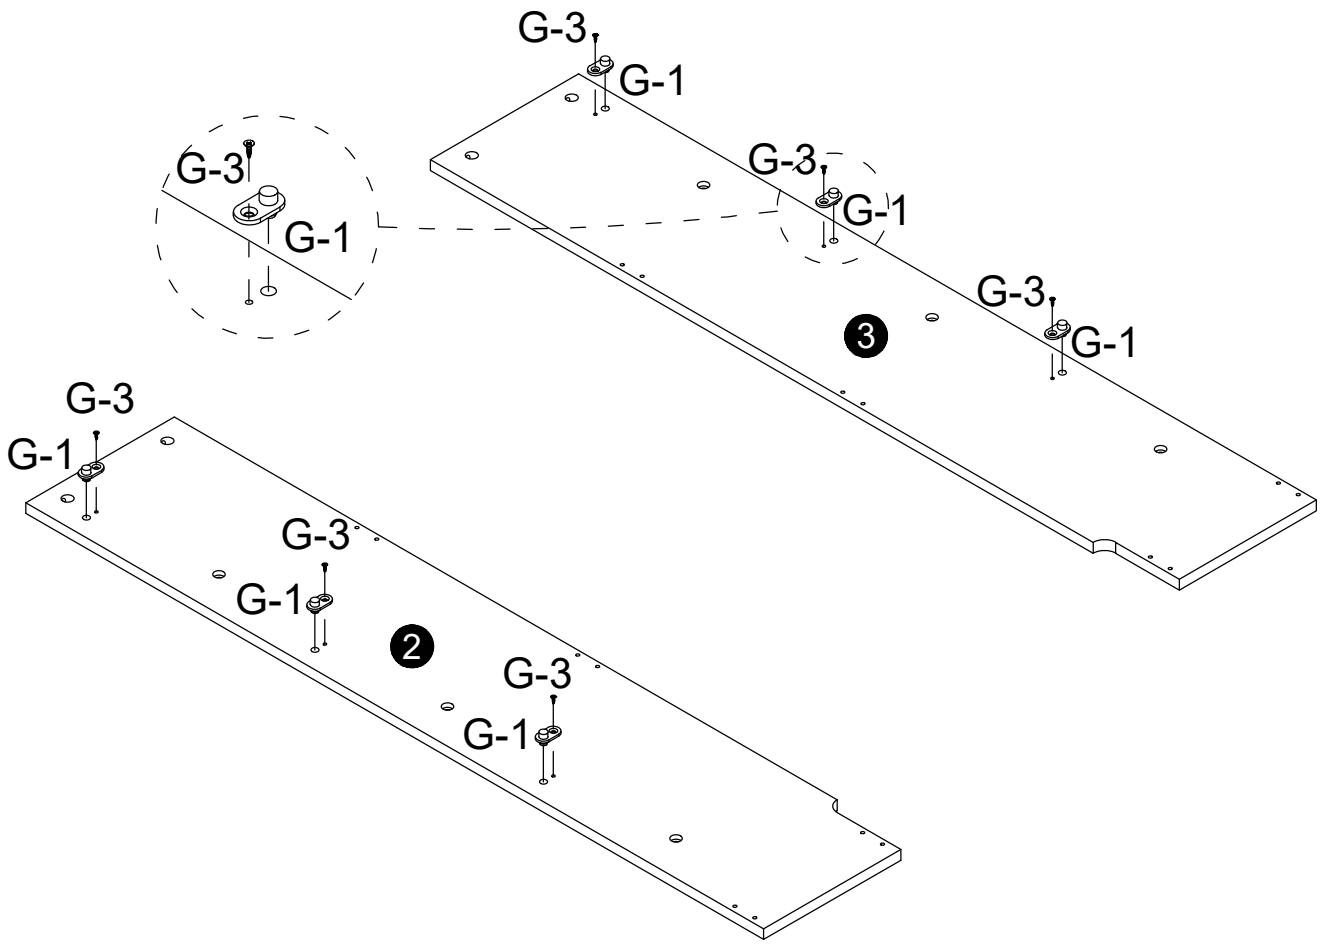
G-3
G-1
G-3
G-1
G-3
G-1
3
G-3
G-1
G-3
G-1
2
G-3
G-1

D x8




02

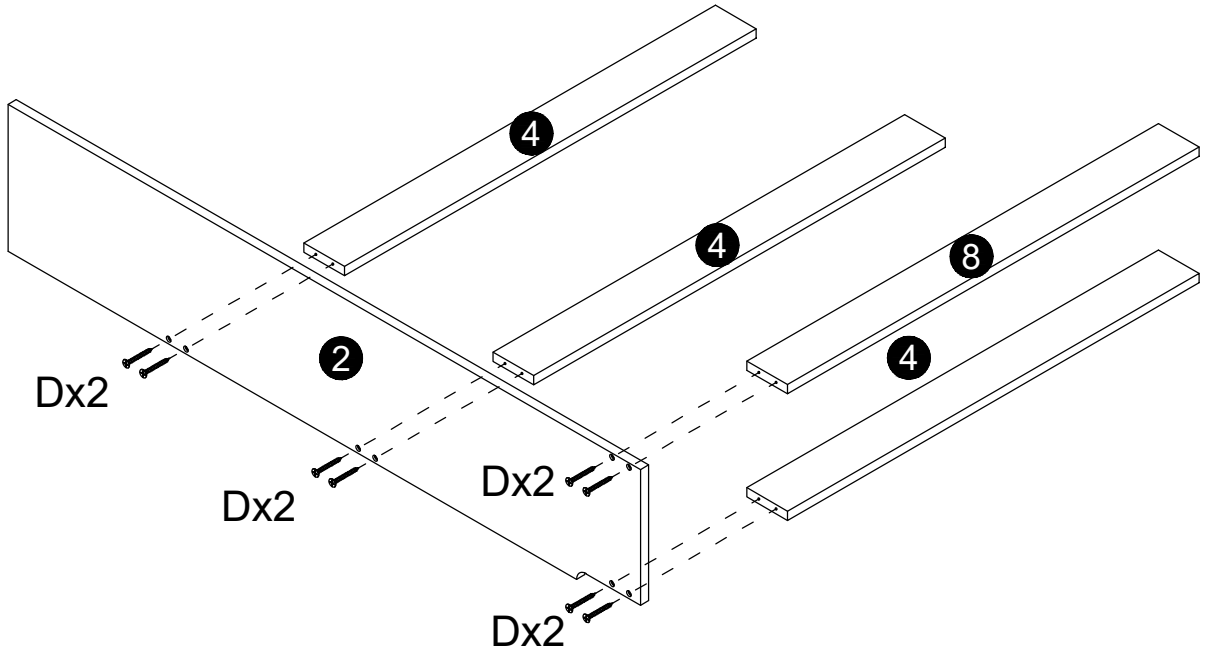

D x8




03

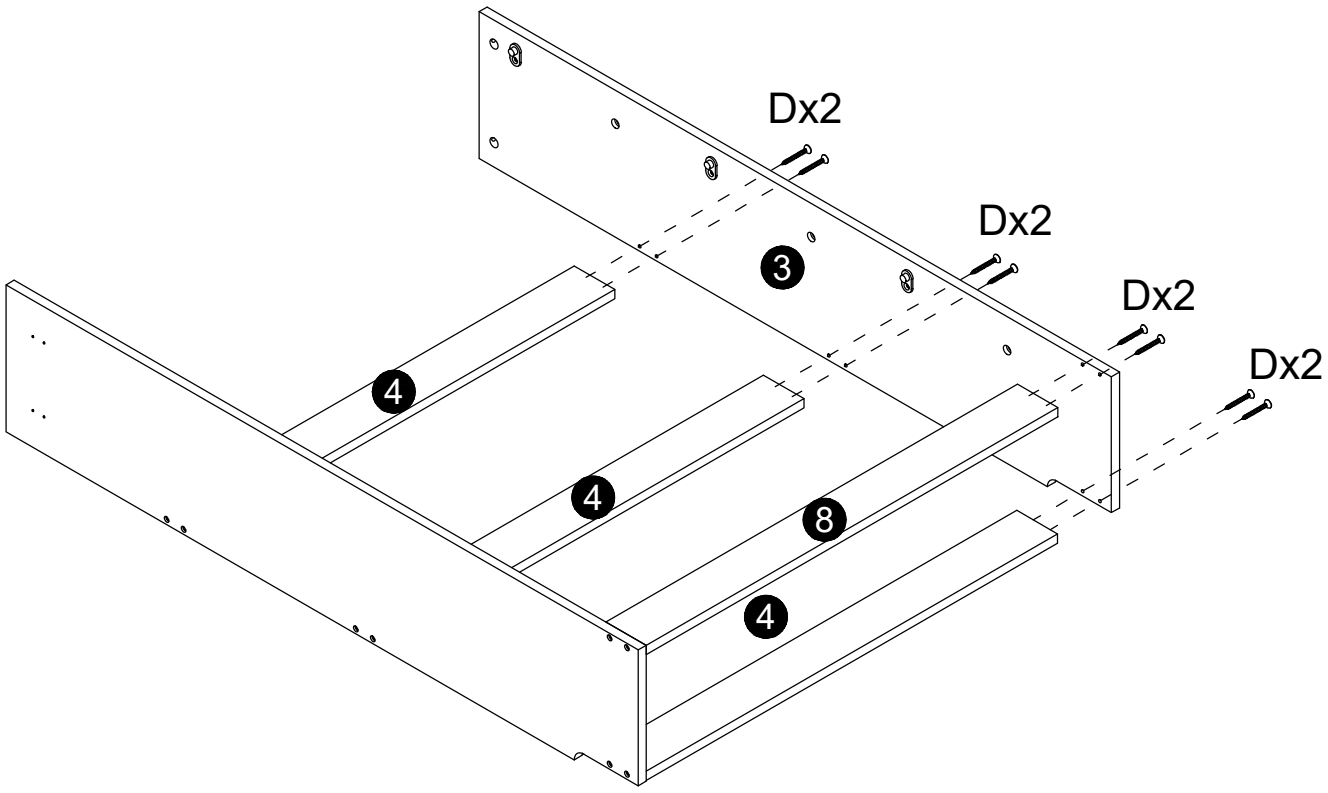



04

A x4



H x2



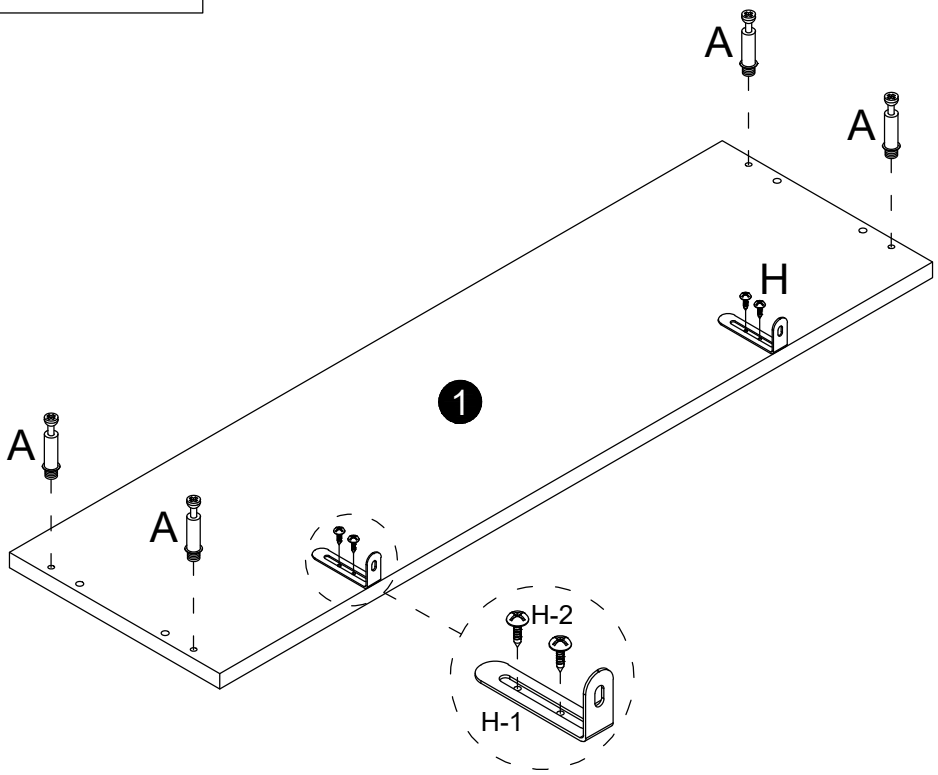


05


C x4




B x4



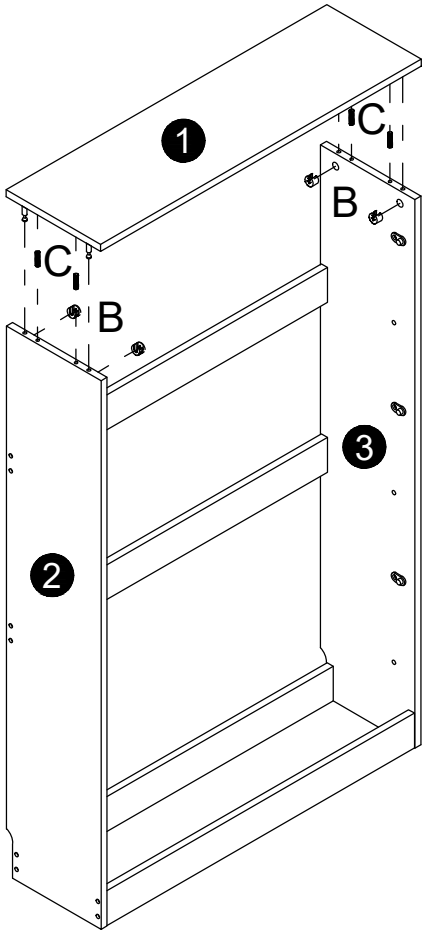


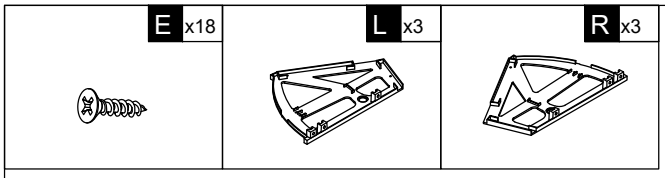

x3

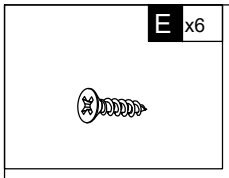

Please push the left (L) and right (R) shoe racks gently outward with your hands as shown in the figure.
Then insert the No.7 panel into the back panel slot, referring to the diagram.

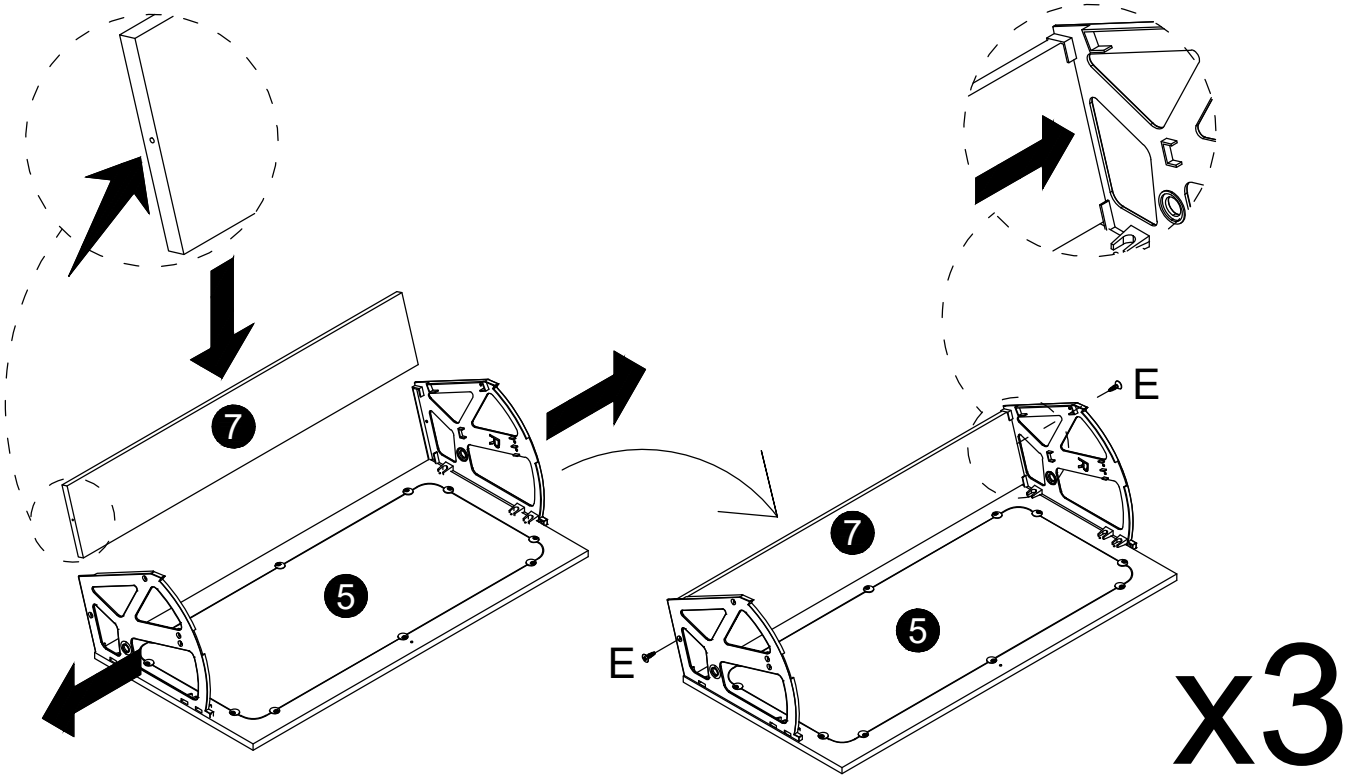


x3

E x6



08

Please push the left (L) and right (R) shoe racks gently outward with your hands as shown in the figure.
Then insert the No.6 panel into the back panel slot, referring to the diagram.

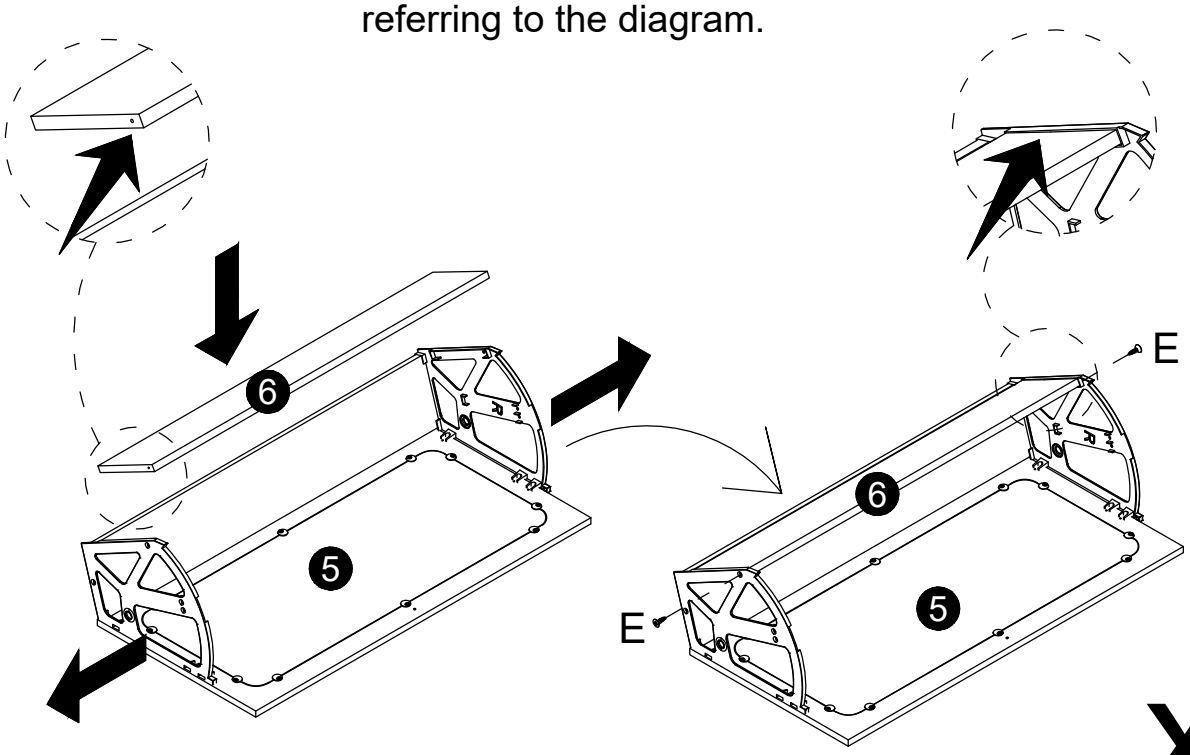


x3


K x3




K-1 K-2


09

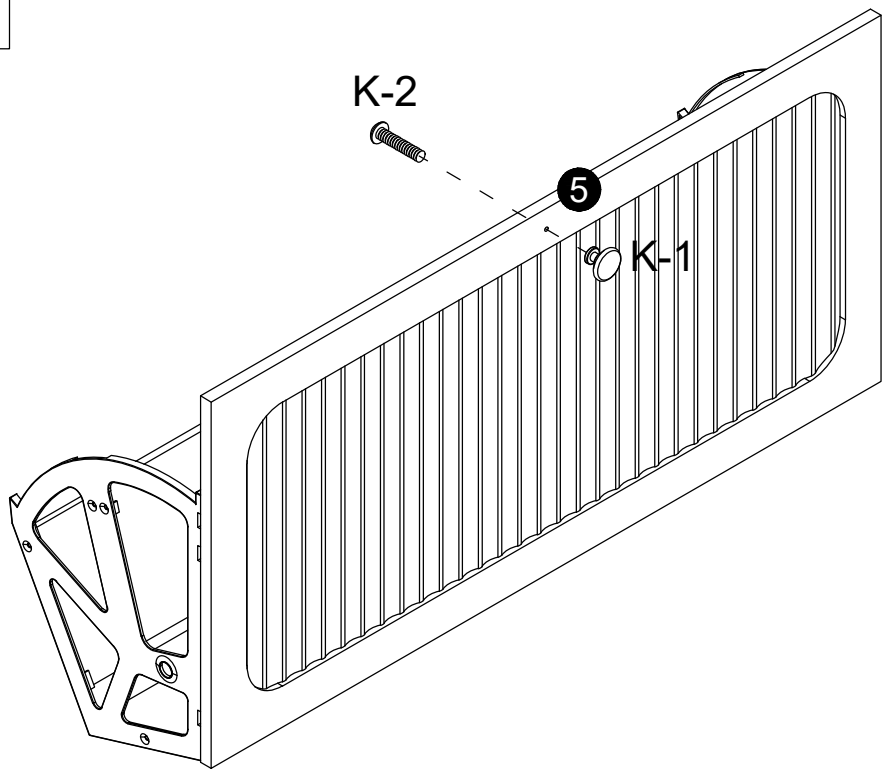

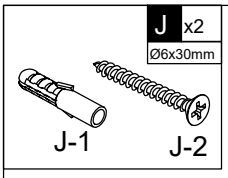


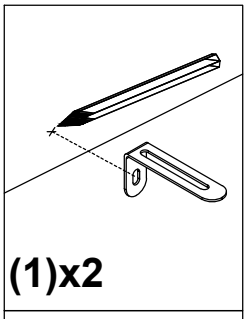


then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

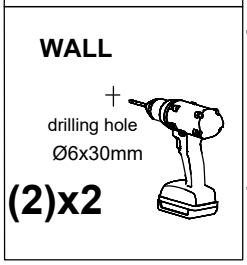


Then use a tape drill to make holes in the wall that are suitable for the product screws.

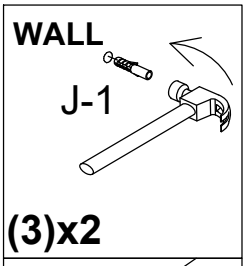

Then,put the expansion bolt into the hole

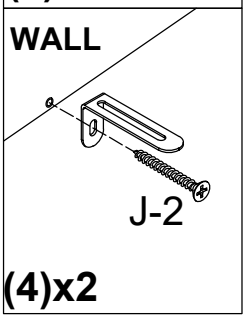

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

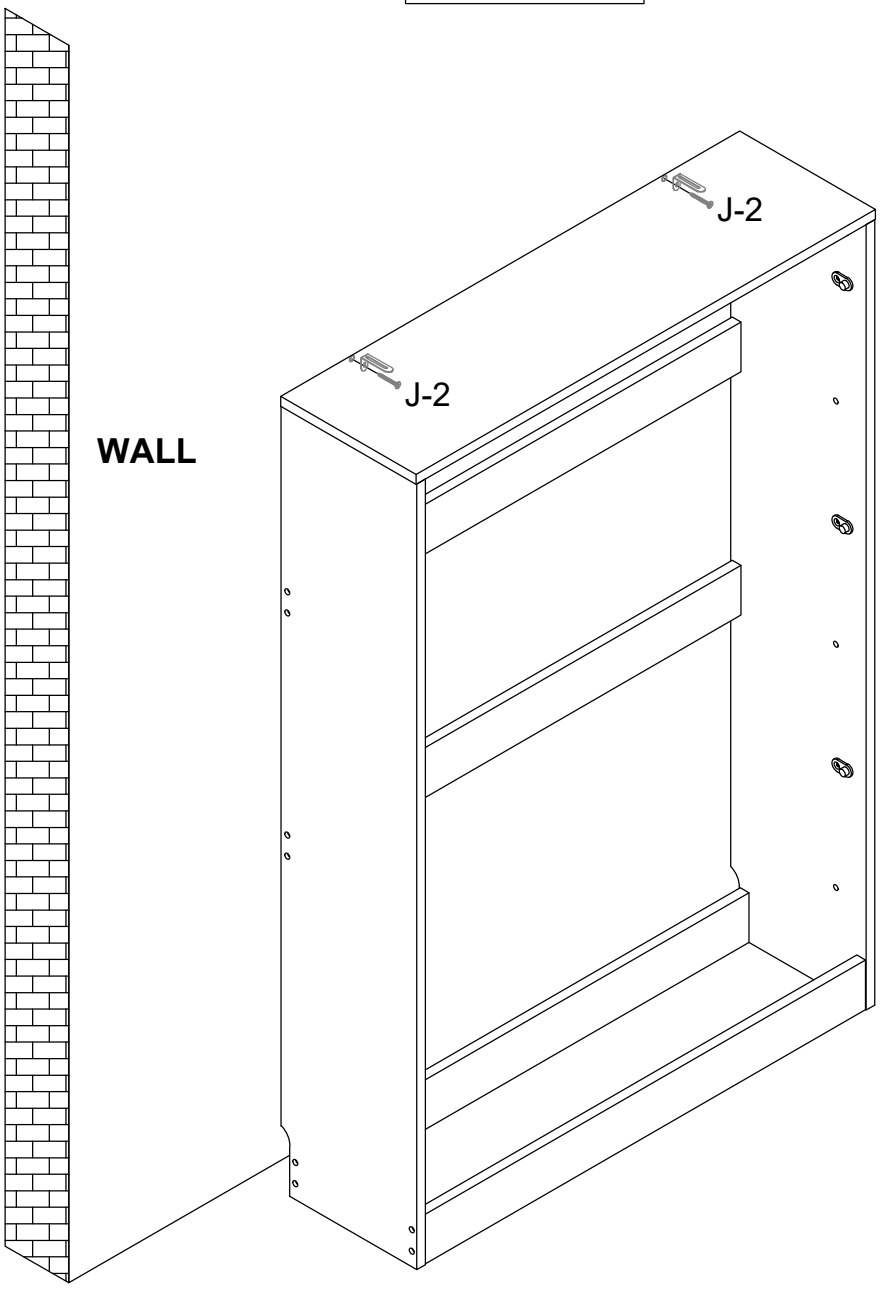

F x6




G x6


G-2




Note: When installing F,it is sufficient to reach 90% progress. Installing 100%may cause damage to G.

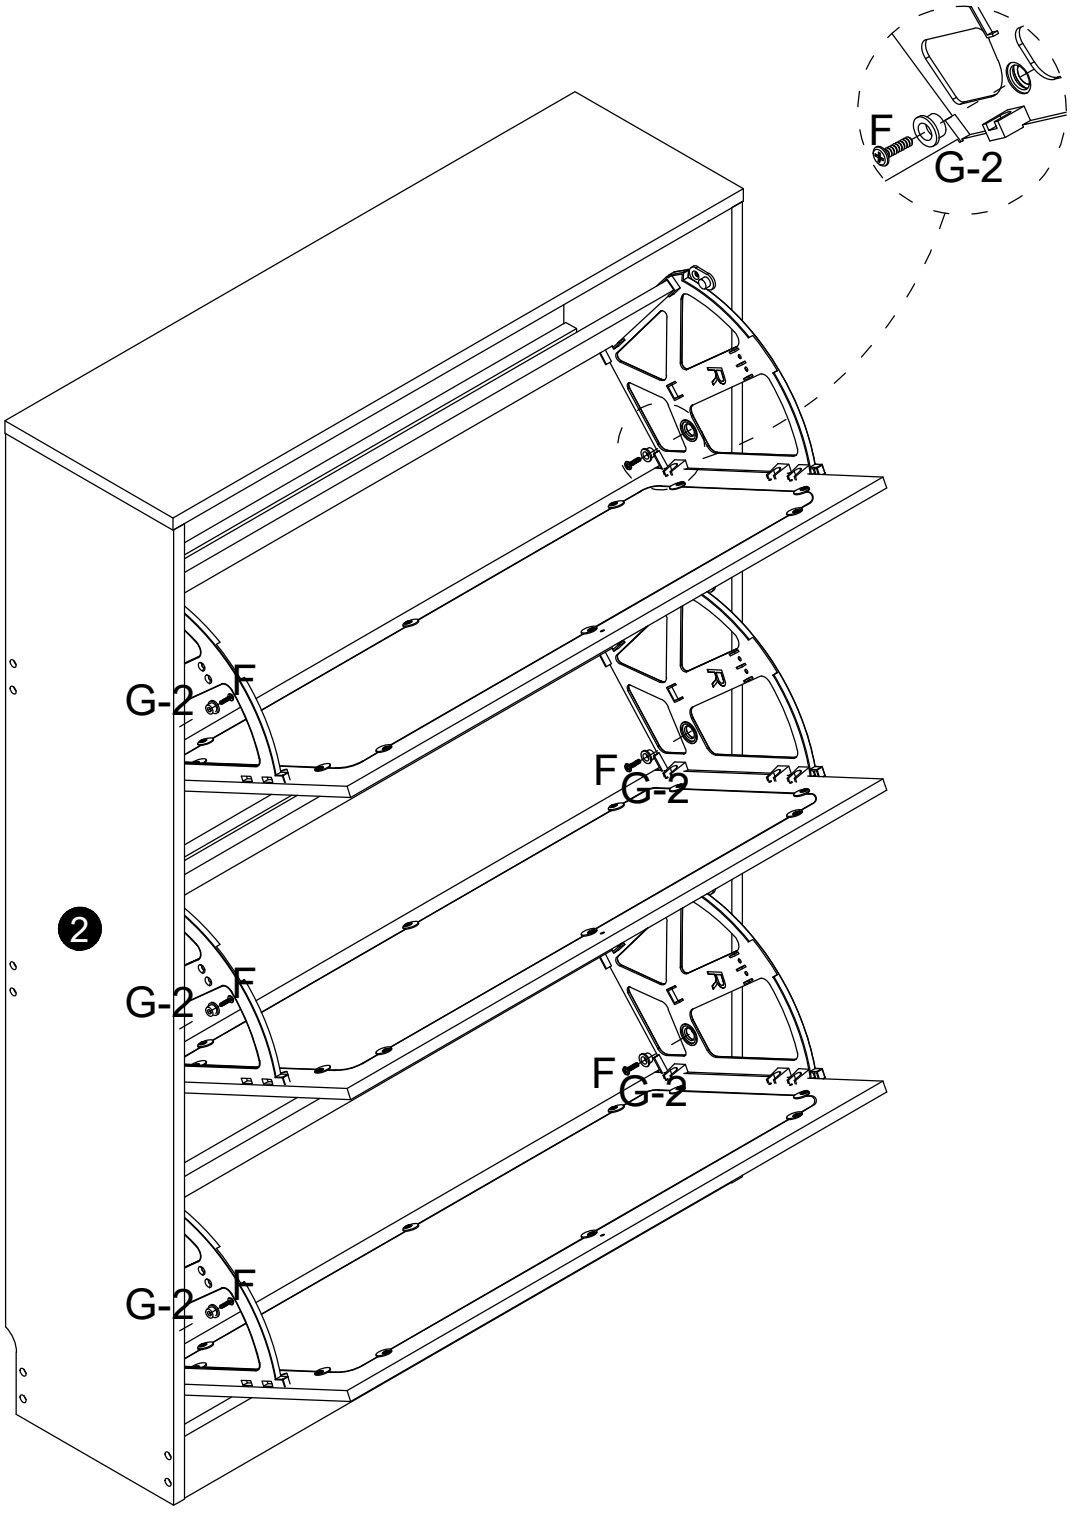


E x6

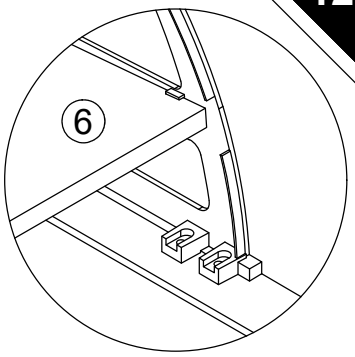

OR

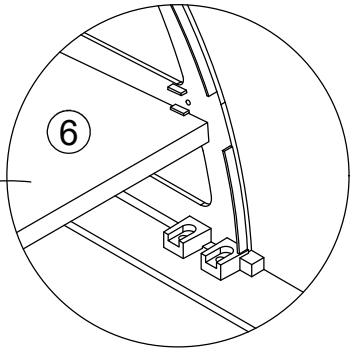

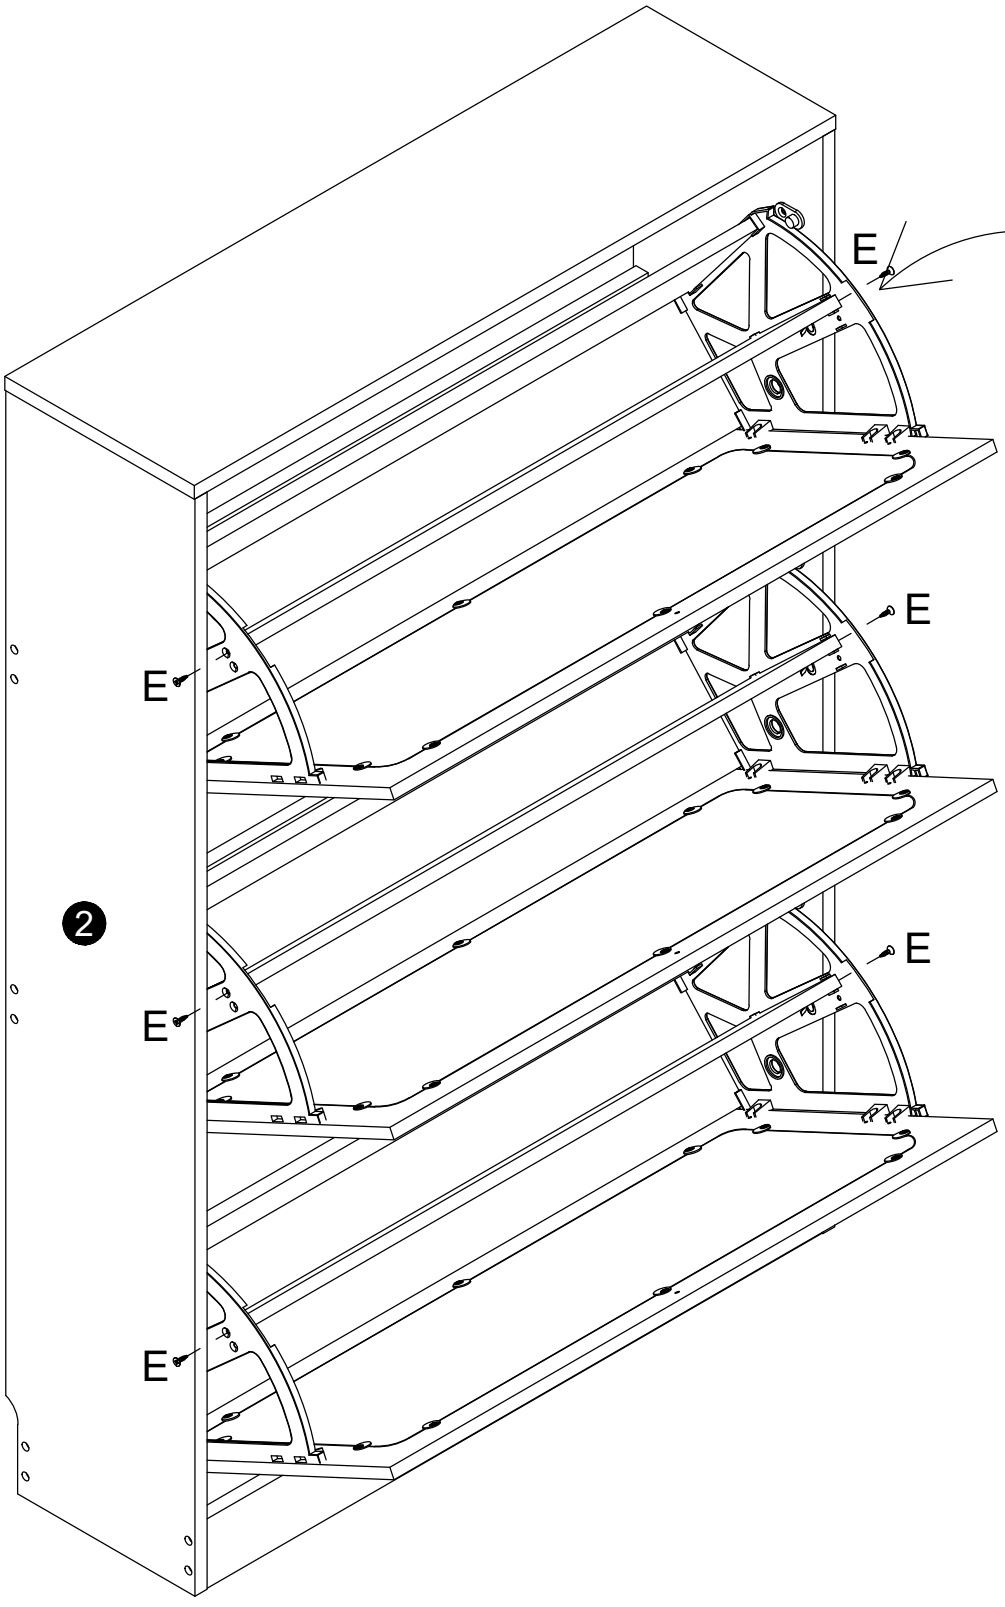

I x16

Done

