

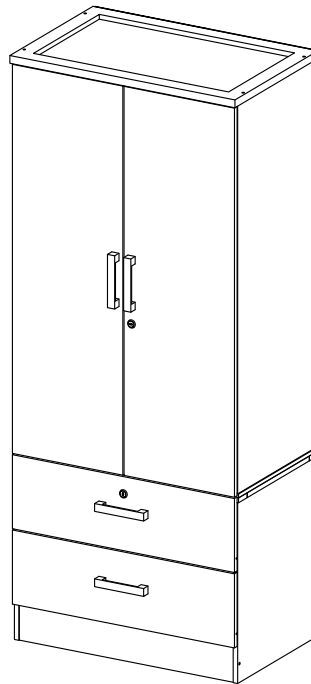









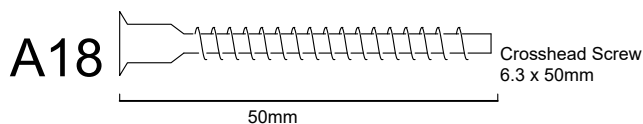

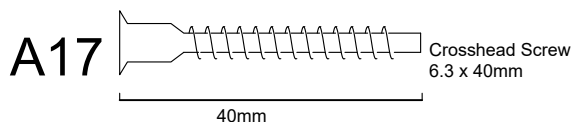













INSTRUCTIONS



HARDWARE LIST			QTY (pcs)
A1		Screw m3.5 x 12mm	2
A2		Screw m3.5 x 14mm	78
A4		Screw m3.5 x 20mm	8
A7		Screw m4 x 30mm	8
A10		Screw m4 x 38mm	8
A13		Screw m4 x 65mm	4
A17		Crosshead Screw m6.3 x 40mm	8
A18		Crosshead Screw m6.3 x 50mm	4
A34		Euro Screw m5 x 8mm	8
C5		Square Lock Set	2 Sets
C8		Square Lock L Bracket	1
D4		Wood Dowel 6 x 25mm	20
E5		Soft Closing Hinge 5/8	4
E21		Anti-Tipping Pack	1 Set
D6		Wood Dowel 8 x 25mm	2
F2		Mini Fix 15mm	16 Sets
H21		Handle 128mm	4
L2		Plastic Leg L Shape	4
M7		Drawer Metal Slide 400mm	2 Sets
N1		Allen Key	1
N3		Nail	38
P		Hanging Steel Pipe 18mm x 727mm	1
P1		Hanger 21	1
R2		Single Plastic Cap	12
S1		Door Catches	1
S2		Door Stopper	1
Y		Crosshead Cover	16

Place your screw on top of the scale to identify their size.



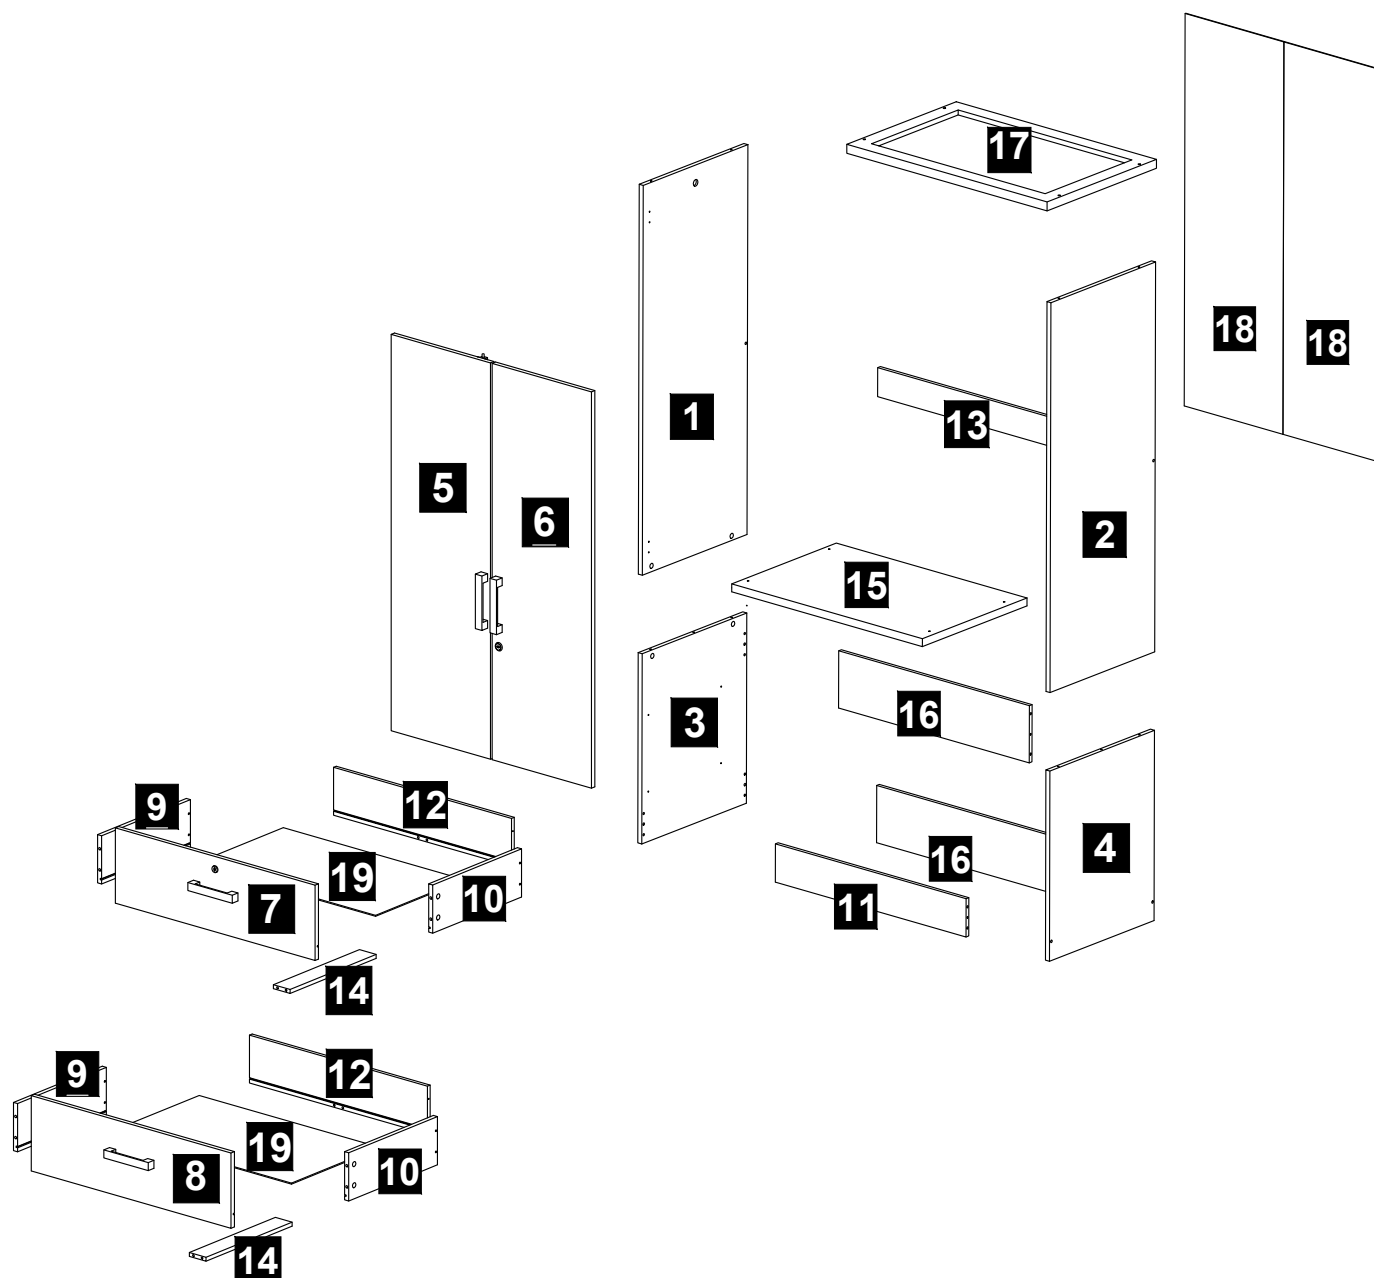

Parts List

1	Big Side Panel (L)	1 pc
2	Big Side Panel (R)	1 pc
3	Small Side Panel (L)	1 pc
4	Small Side Panel (R)	1 pc
5	Door Panel (L)	1 pc
6	Door Panel (R)	1 pc
7	Drawer Front Panel (Lock)	1 pc
8	Drawer Front Panel	1 pc
9	Drawer Side Panel (L)	2 pcs
10	Drawer Side Panel (R)	2 pcs


11	Crossbar Panel	1 pcs
12	Drawer Back Board	2 pcs
13	Small Crossbar	1 pc
14	Drawer Crossbar	2 pcs
15	Base Panel	1 pc
16	Big Crossbar	2 pcs
17	Top Panel	1 pc
18	Backboard	2 pcs
19	Drawer Bottom Panel	2 pcs



EACH PART IS LABELLED ACCORDING TO THE PARTS LIST




Before starting assembly
please verify if all parts and
hardware are included


STEP 1

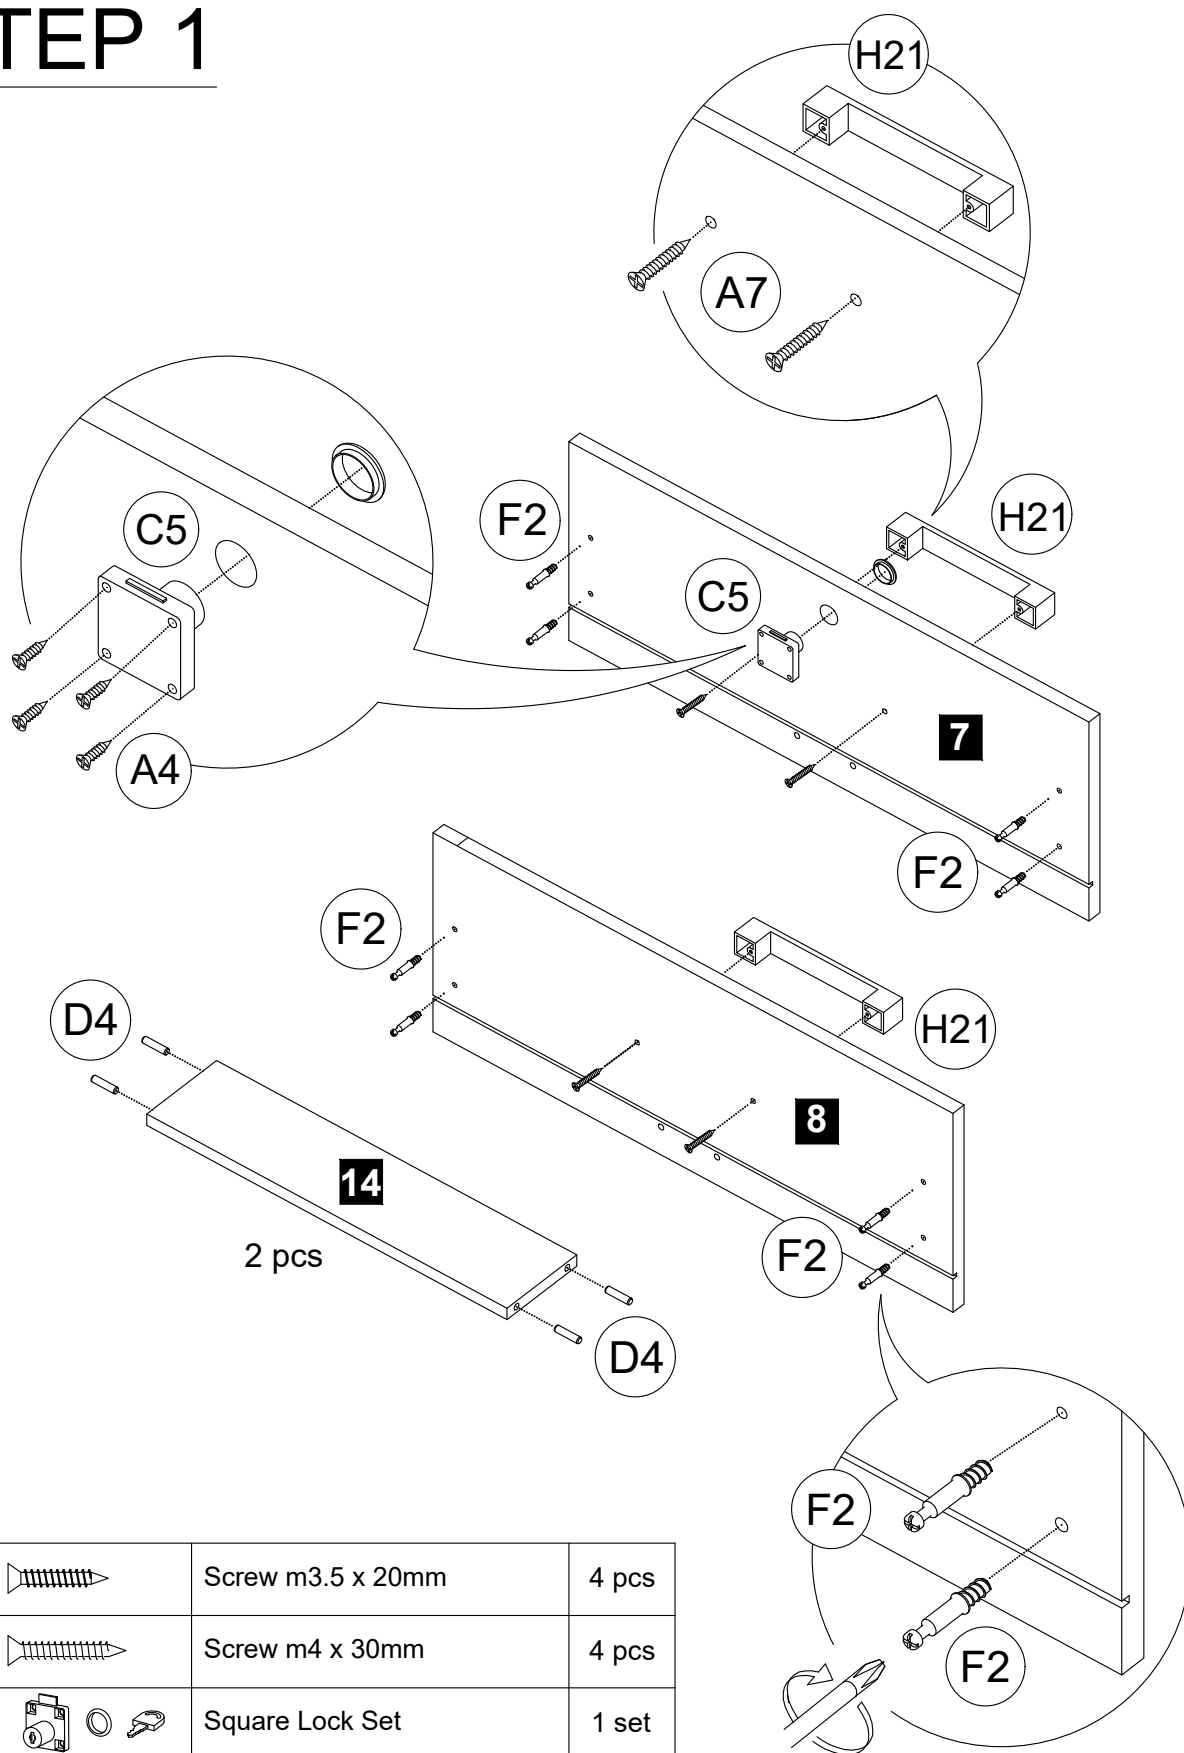


A4		Screw m3.5 x 20mm	4 pcs
A7		Screw m4 x 30mm	4 pcs
C5		Square Lock Set	1 set
D4		Wood Dowel 6 x 25mm	8 pcs
F2		Mini Fix Bolt	8 pcs
H21		Handle 128mm	2 pcs


STEP 2

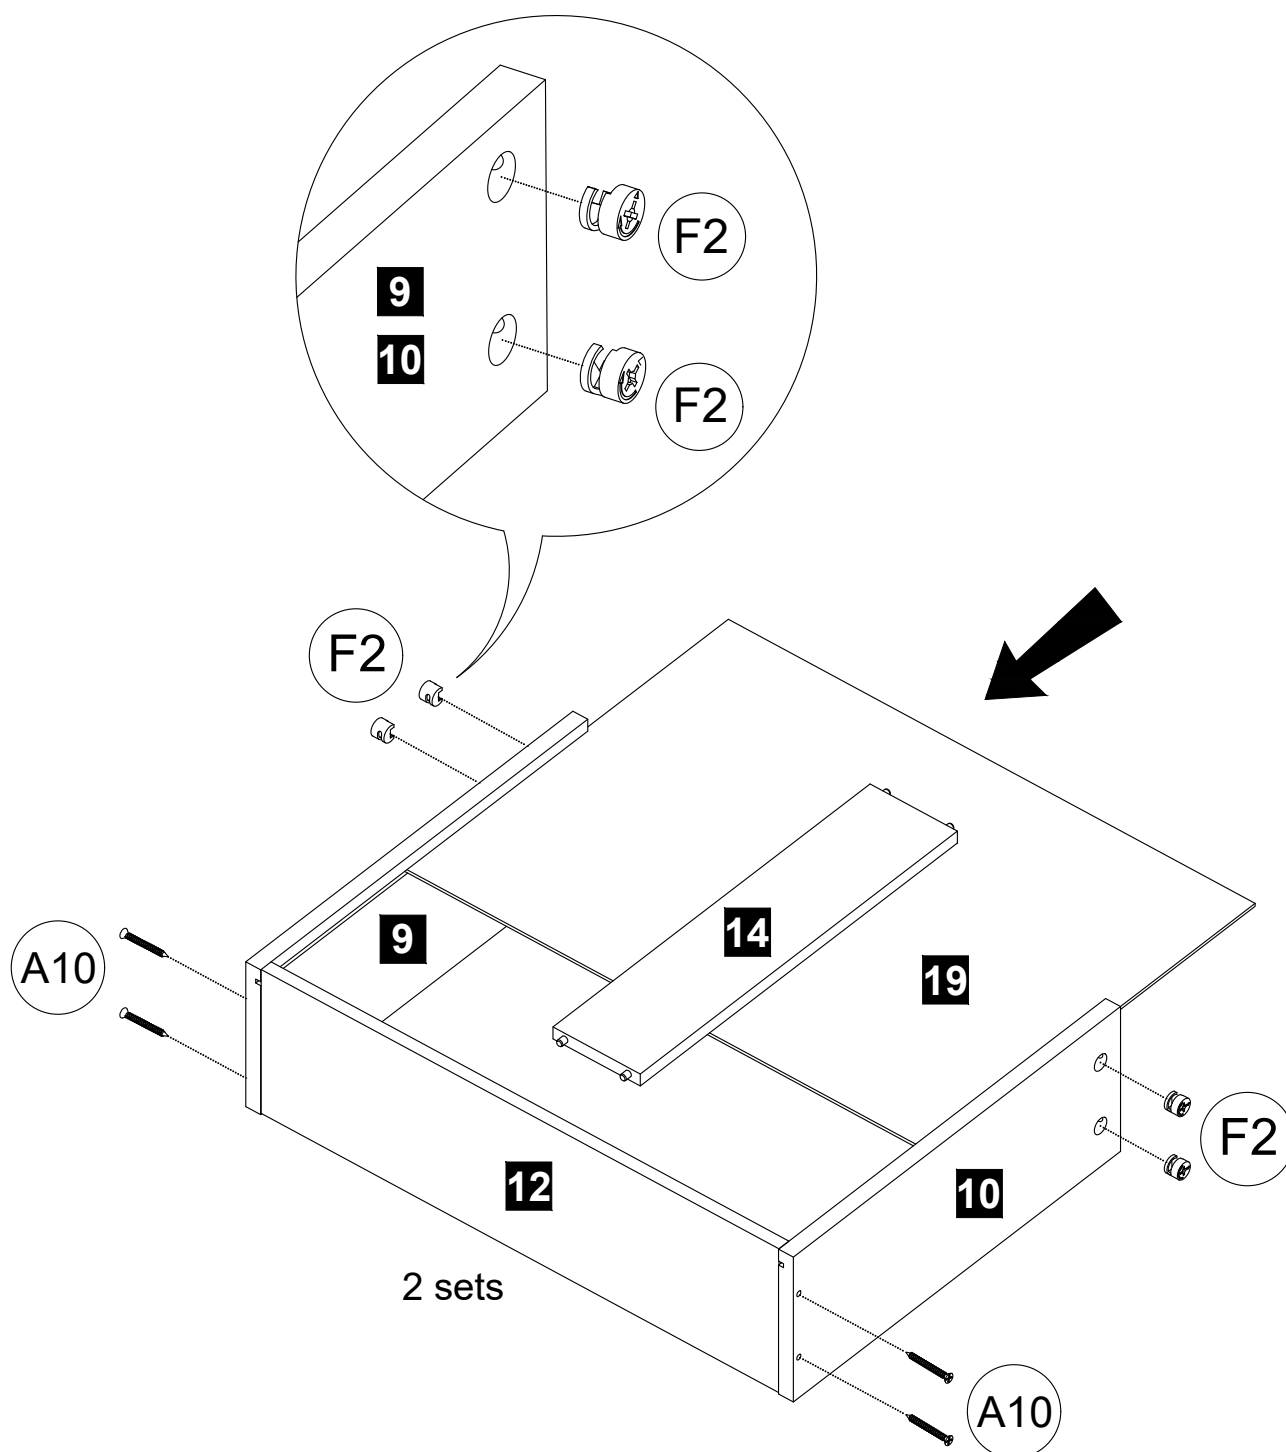


A10		Screw m4 x 38mm	8 pcs
F2		Mini Fix Cam	8 pcs


STEP 3

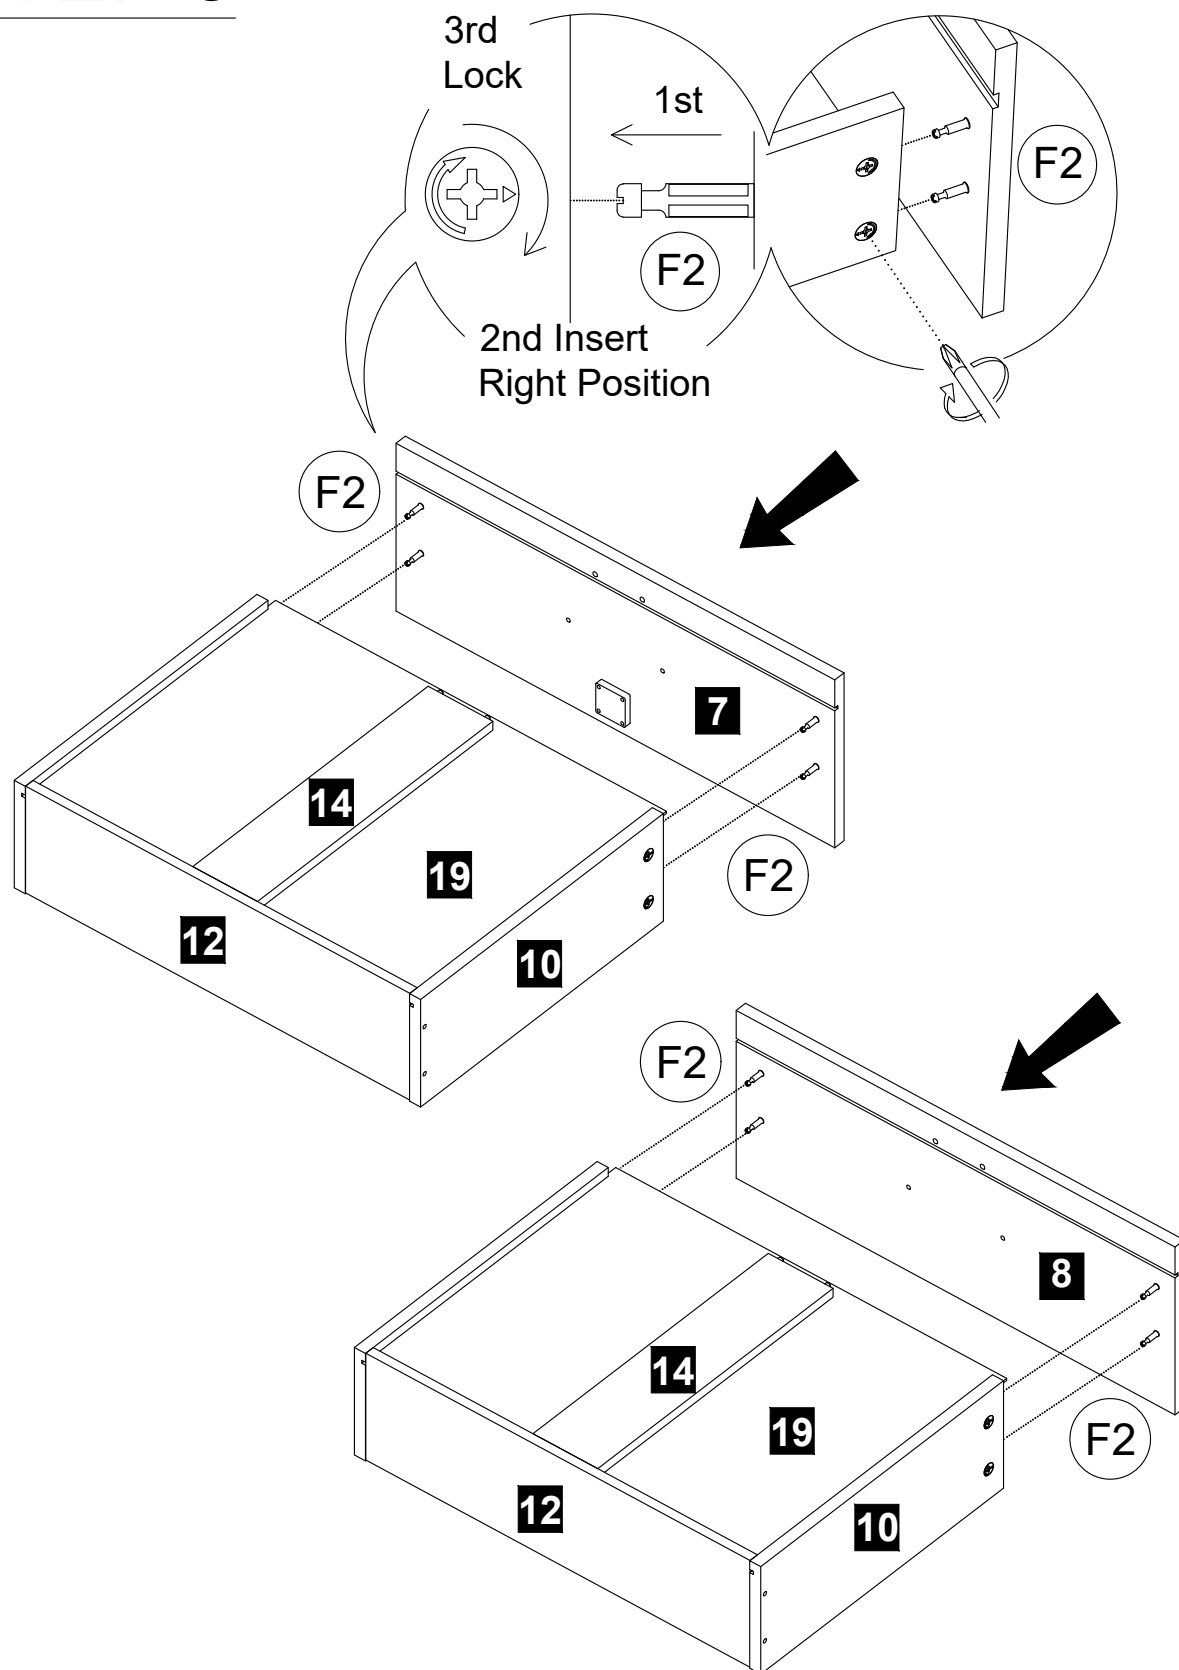


F2		Mini Fix 15mm	8 sets
----	---	---------------	--------


STEP 4

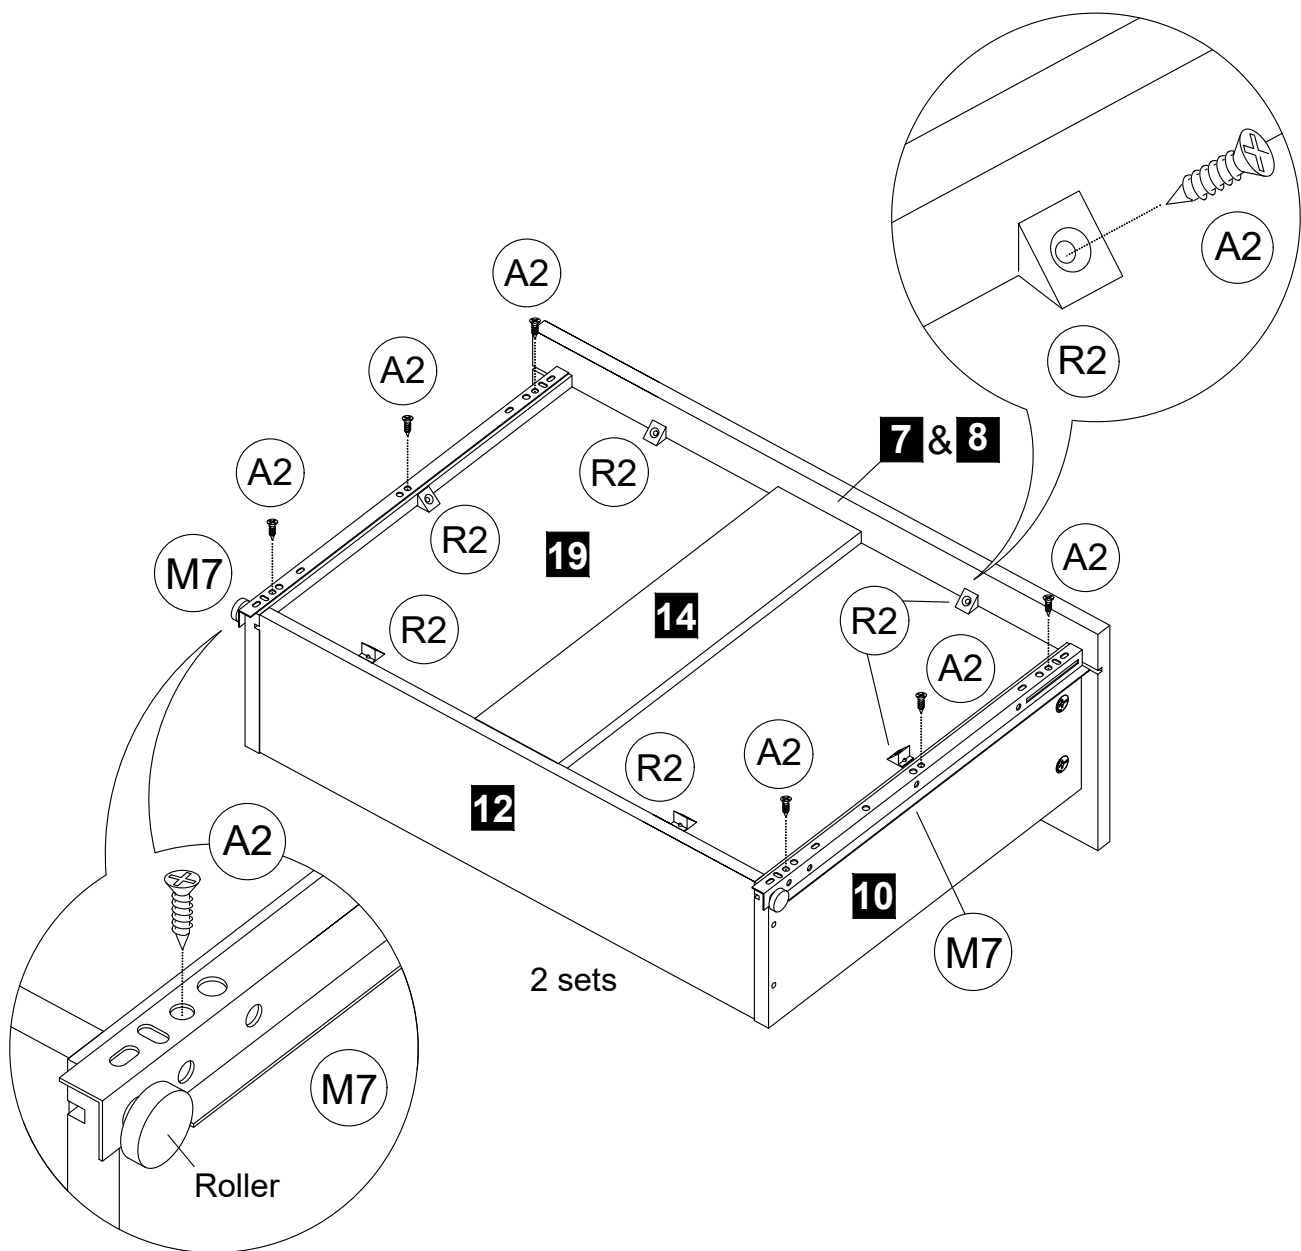


A2		Screw m3.5 x 14mm	24 pcs
M7		Drawer Metal Slide 400mm	2 sets
R2		Single Plastic Cap	12 pcs


STEP 5

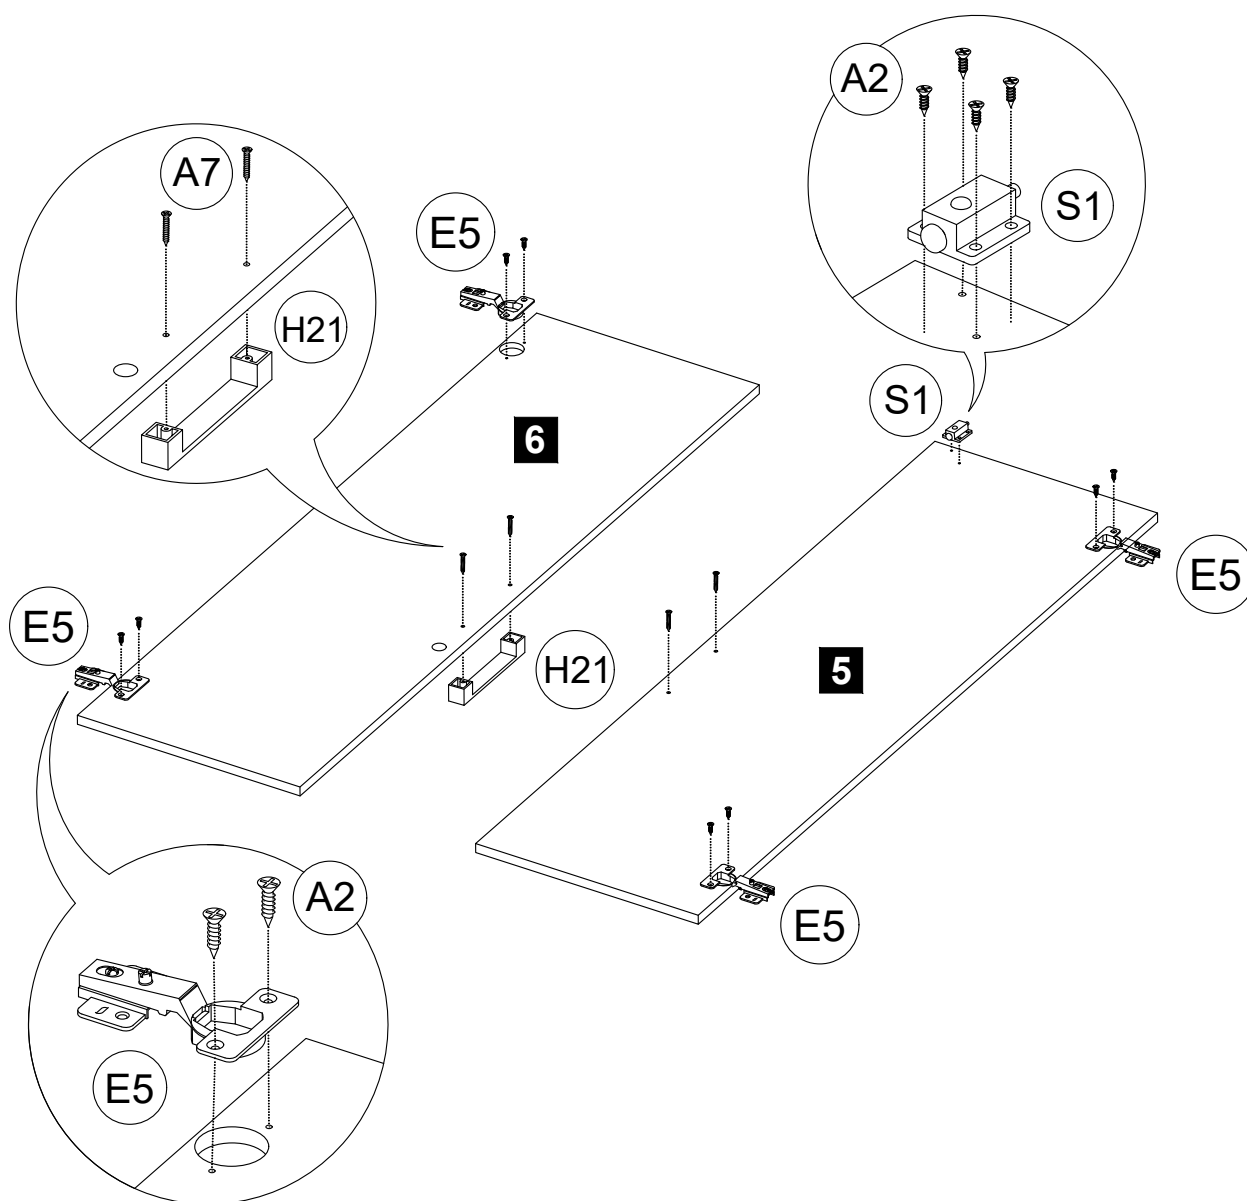

A2		Screw m3.5 x 14mm	12 pcs
A7		Screw m4 x 30mm	4 pcs
E5		Soft Closing Hinge 5/8	4 pcs
H21		Handle 128mm	2 pcs
S1		Door Catches	1 pc


A34		Euro Screw m5 x 8mm	8 pcs
M7		Drawer Metal Slide 400mm	2 sets
F3		Mini Fix Cam	8 pcs
D6		Wood Dowel 8 x 25mm	2 pcs

STEP 6 A

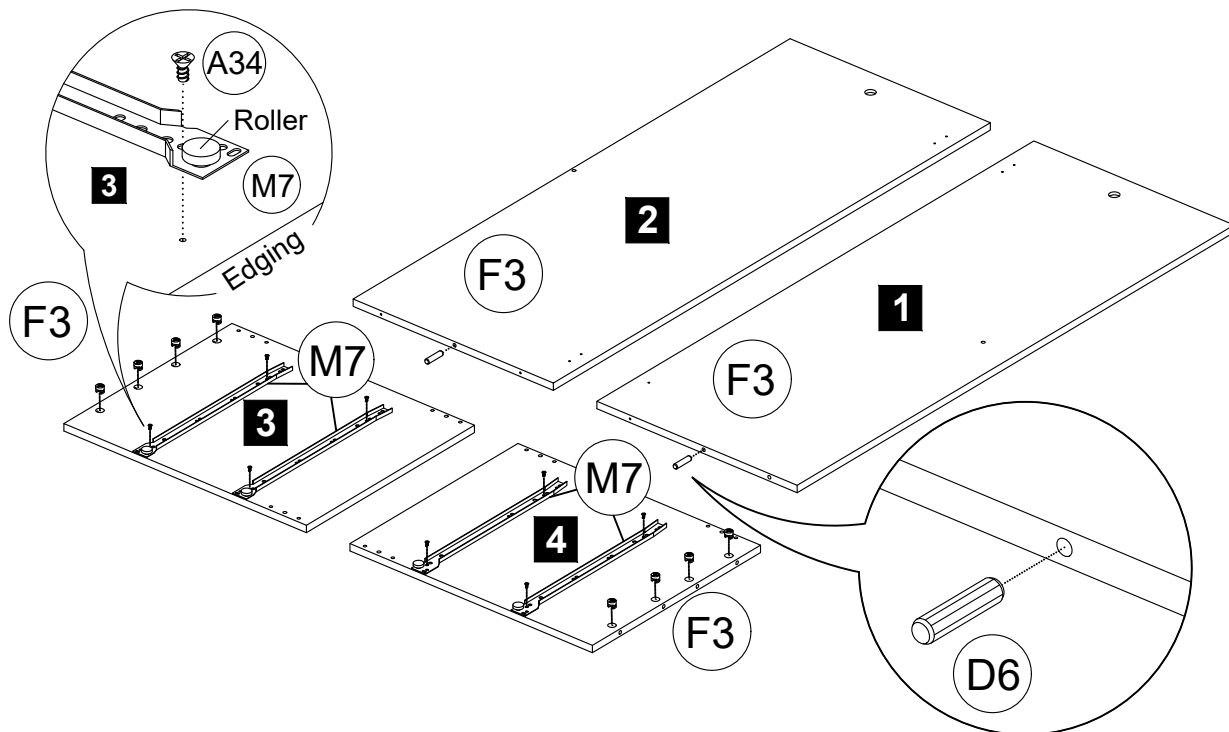



A1		Screw m3.5 x 12mm	2 pcs
C8		Square Lock L Bracket	1 pc
S2		Door Stopper	1 pc
D4		Wood Dowel 6 x 25mm	12 pcs


STEP 6 B

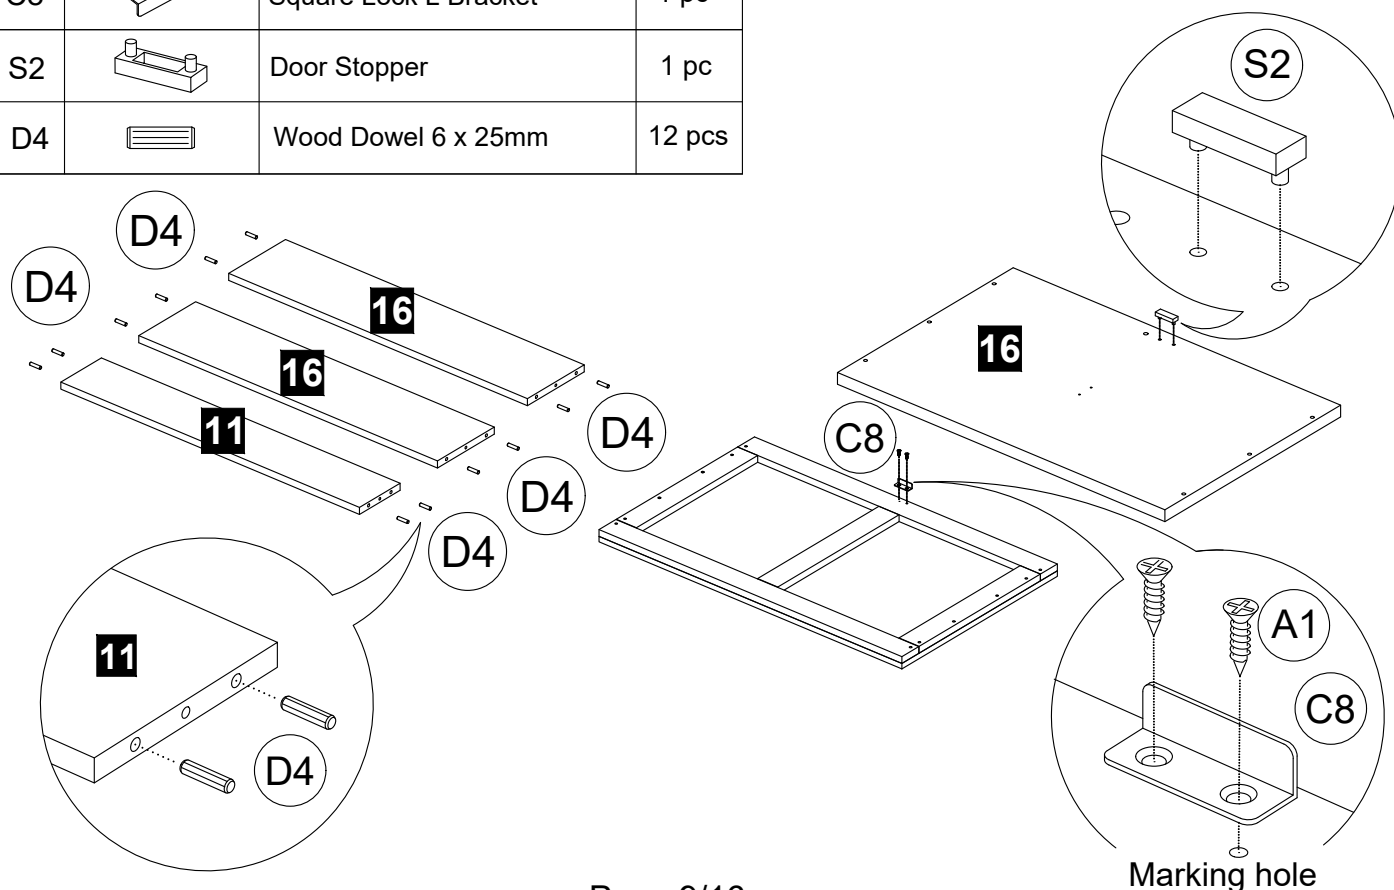


Marking hole


STEP 7 A

P1		Hanger 21	1 pc
P		Hanging Steel Pipe 18mm x 727mm	1 pc
A17		Crosshead Screw m6.3 x 40mm	2 pcs
Y		Crosshead Cover	2 pcs

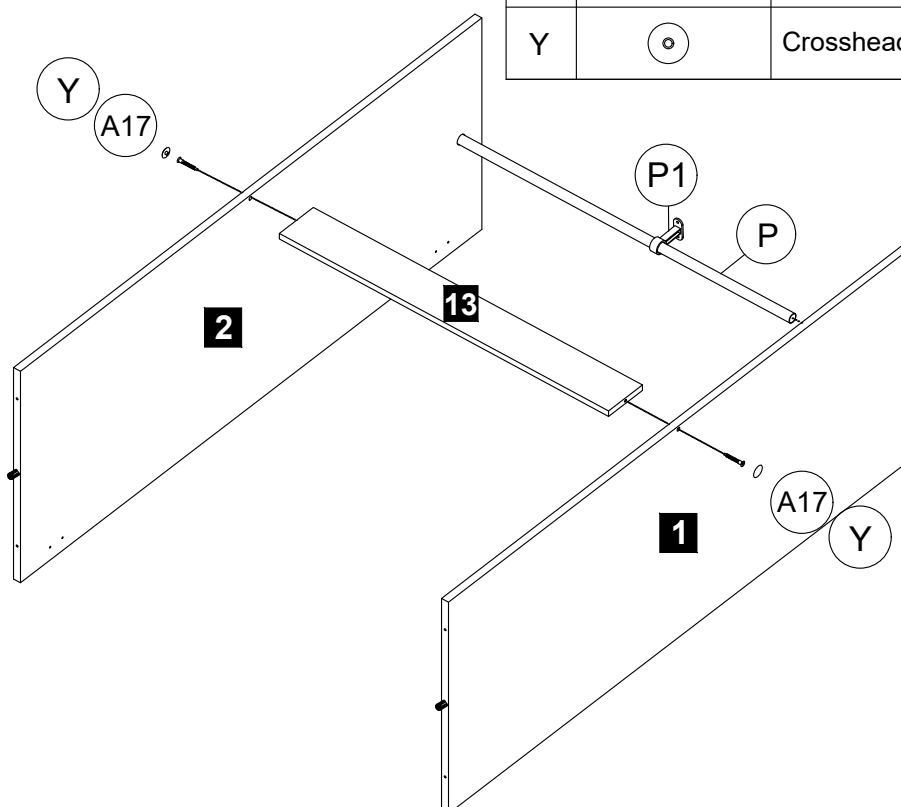



STEP 7 B

A2		Screw m3.5 x 14mm	2 pcs
A13		Screw m4 x 65mm	4 pcs
A18		Crosshead Screw m6.3 x 50mm	4 pcs
N1		Allen Key	1 pc

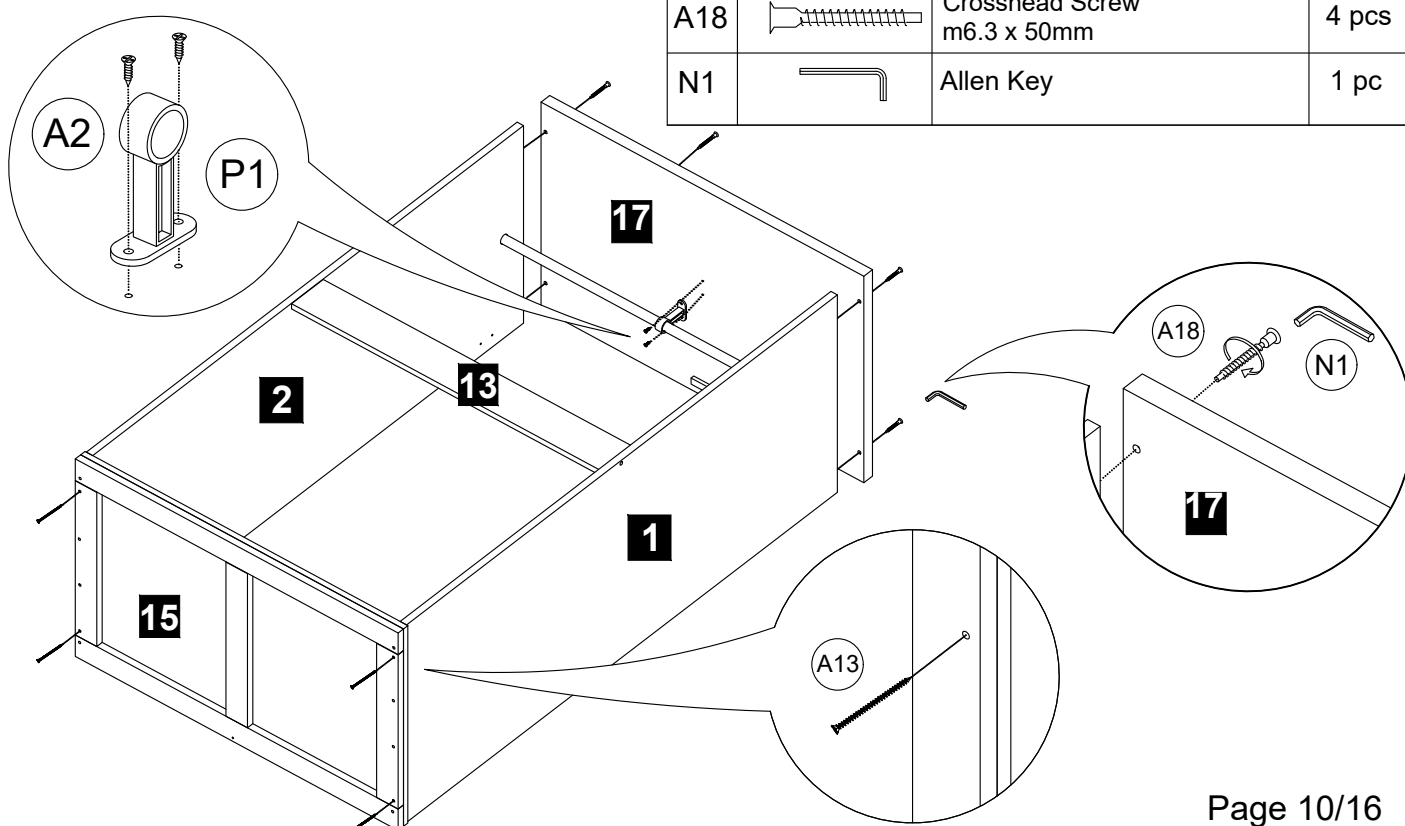


STEP 8


A17		Crosshead Screw m6.3 x 40mm	6 pcs
N1		Allen Key	1 pc
Y		Crosshead Cover	6 pcs

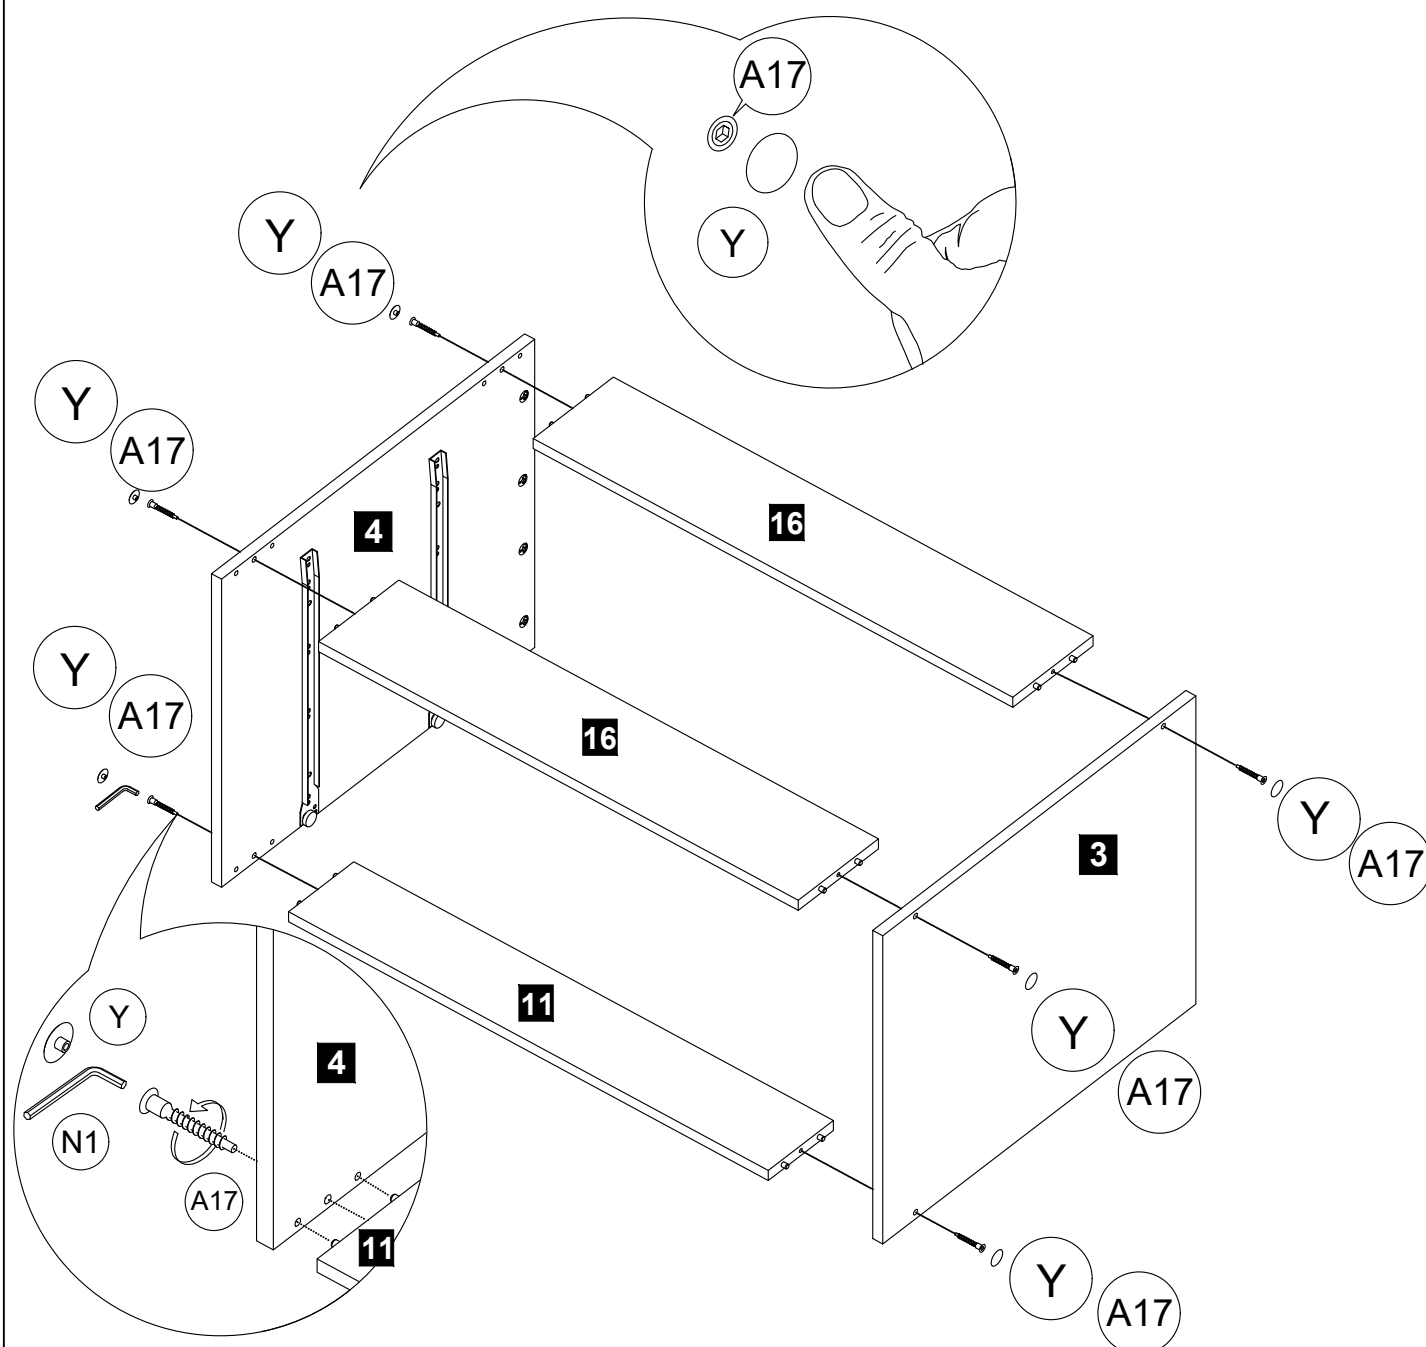


A2		Screw m3.5 x 14mm	4 pcs
N3		Nail	26 pcs
F2		Mini Fix Bolt	8 pcs

STEP 9

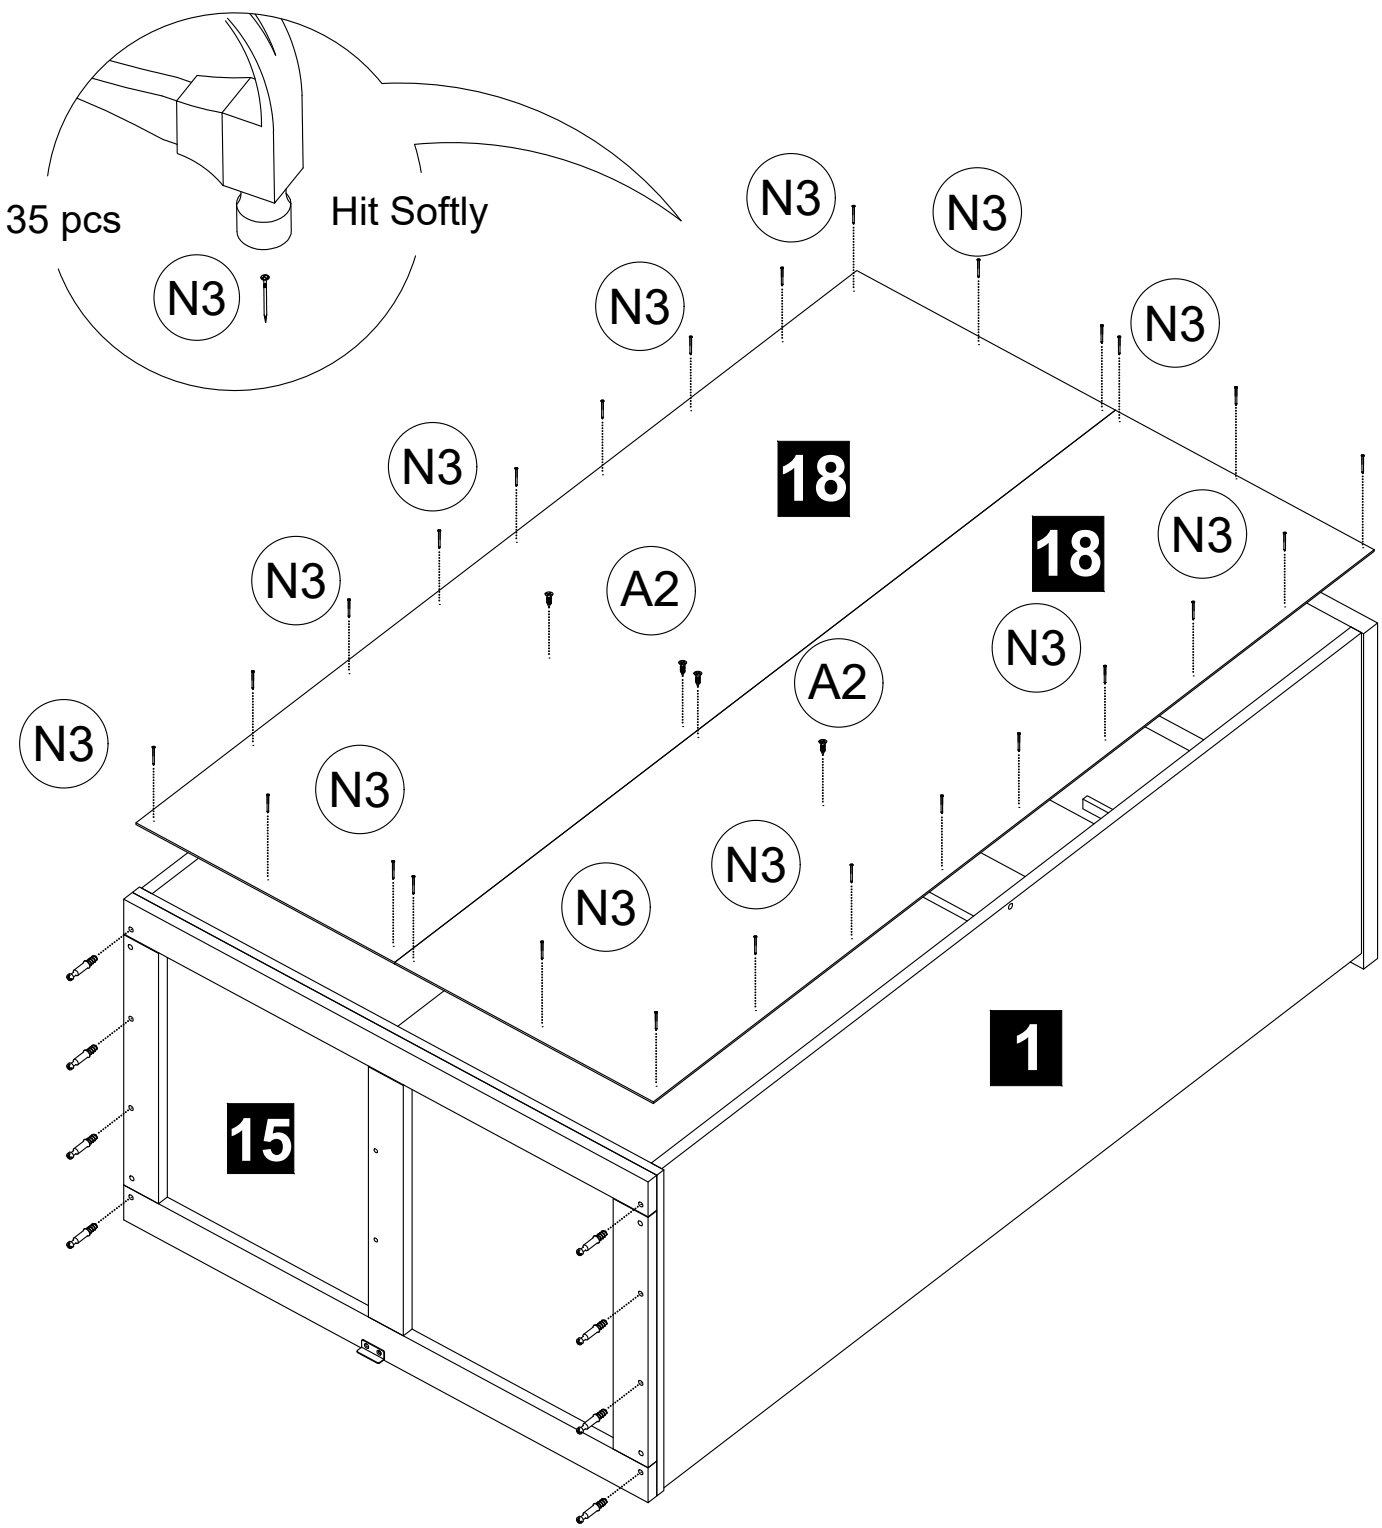


F2		Mini Fix 15mm	8 sets
Y		Crosshead Cover	8 pcs

STEP 10 A

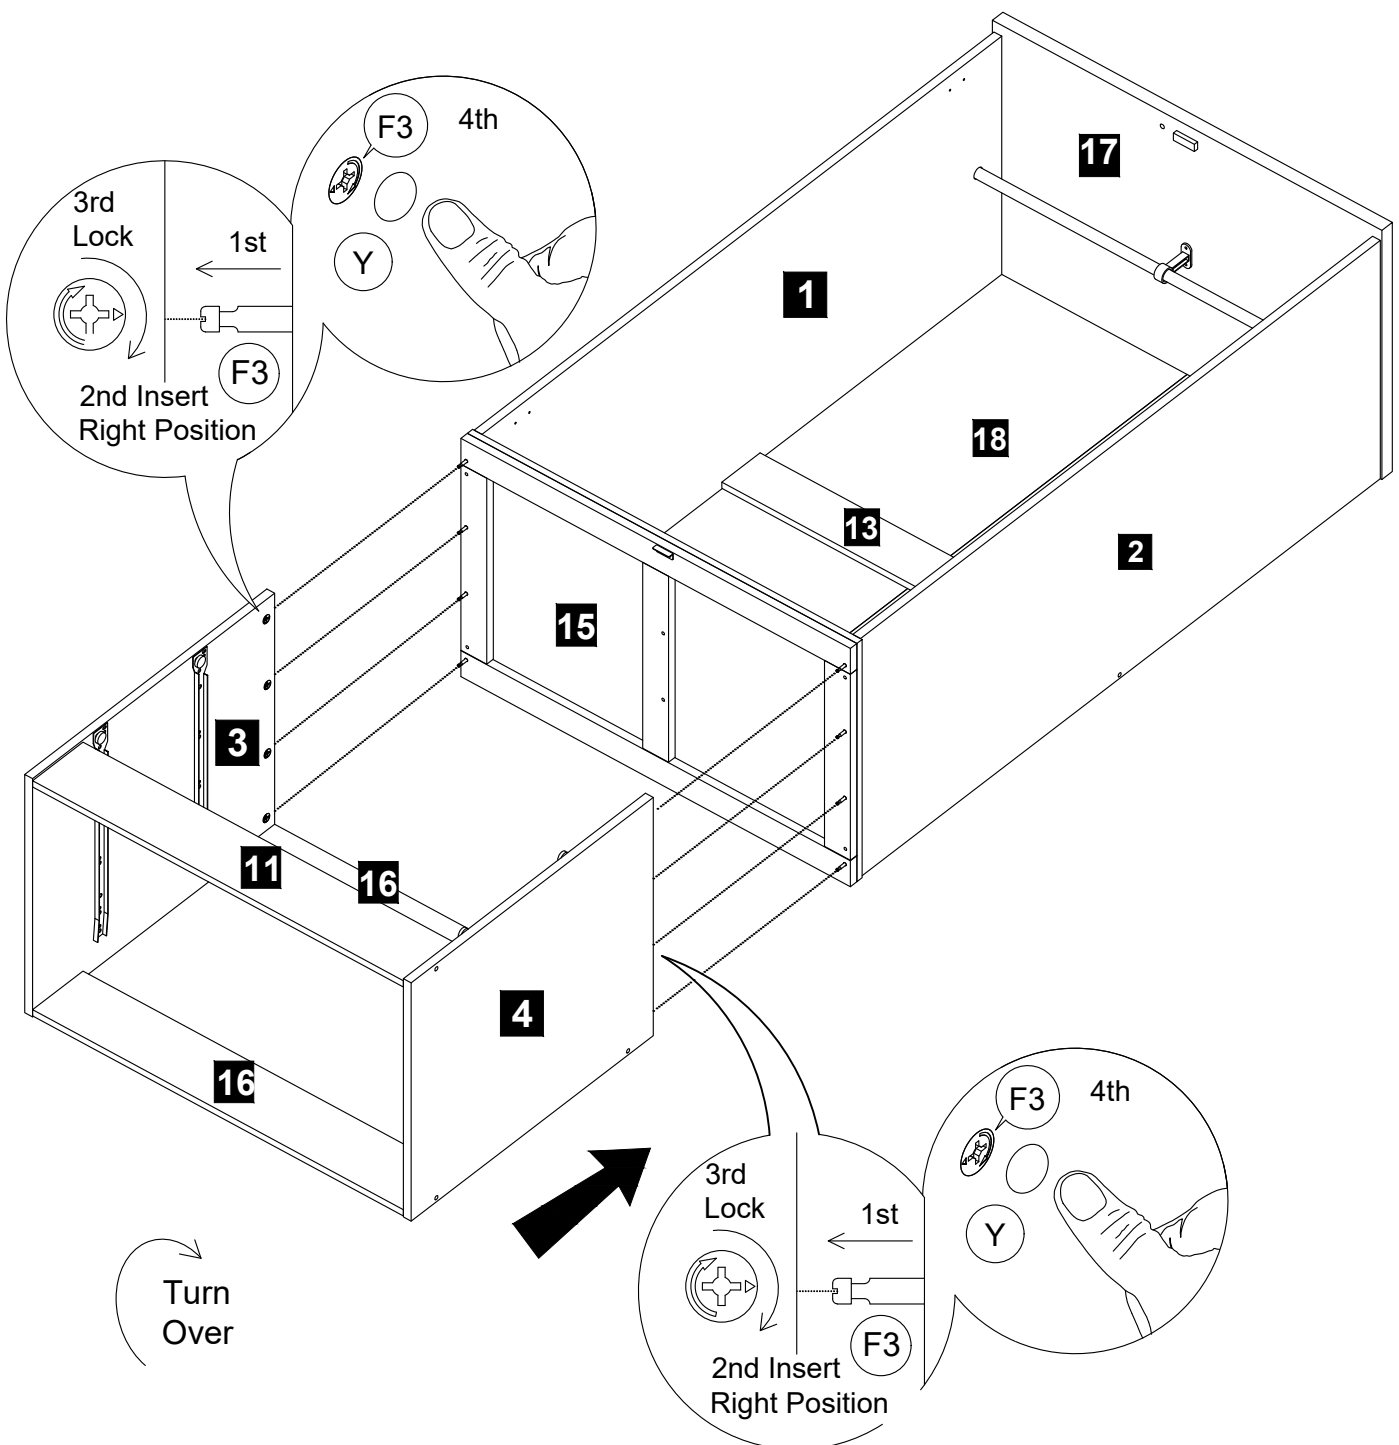

STEP 11


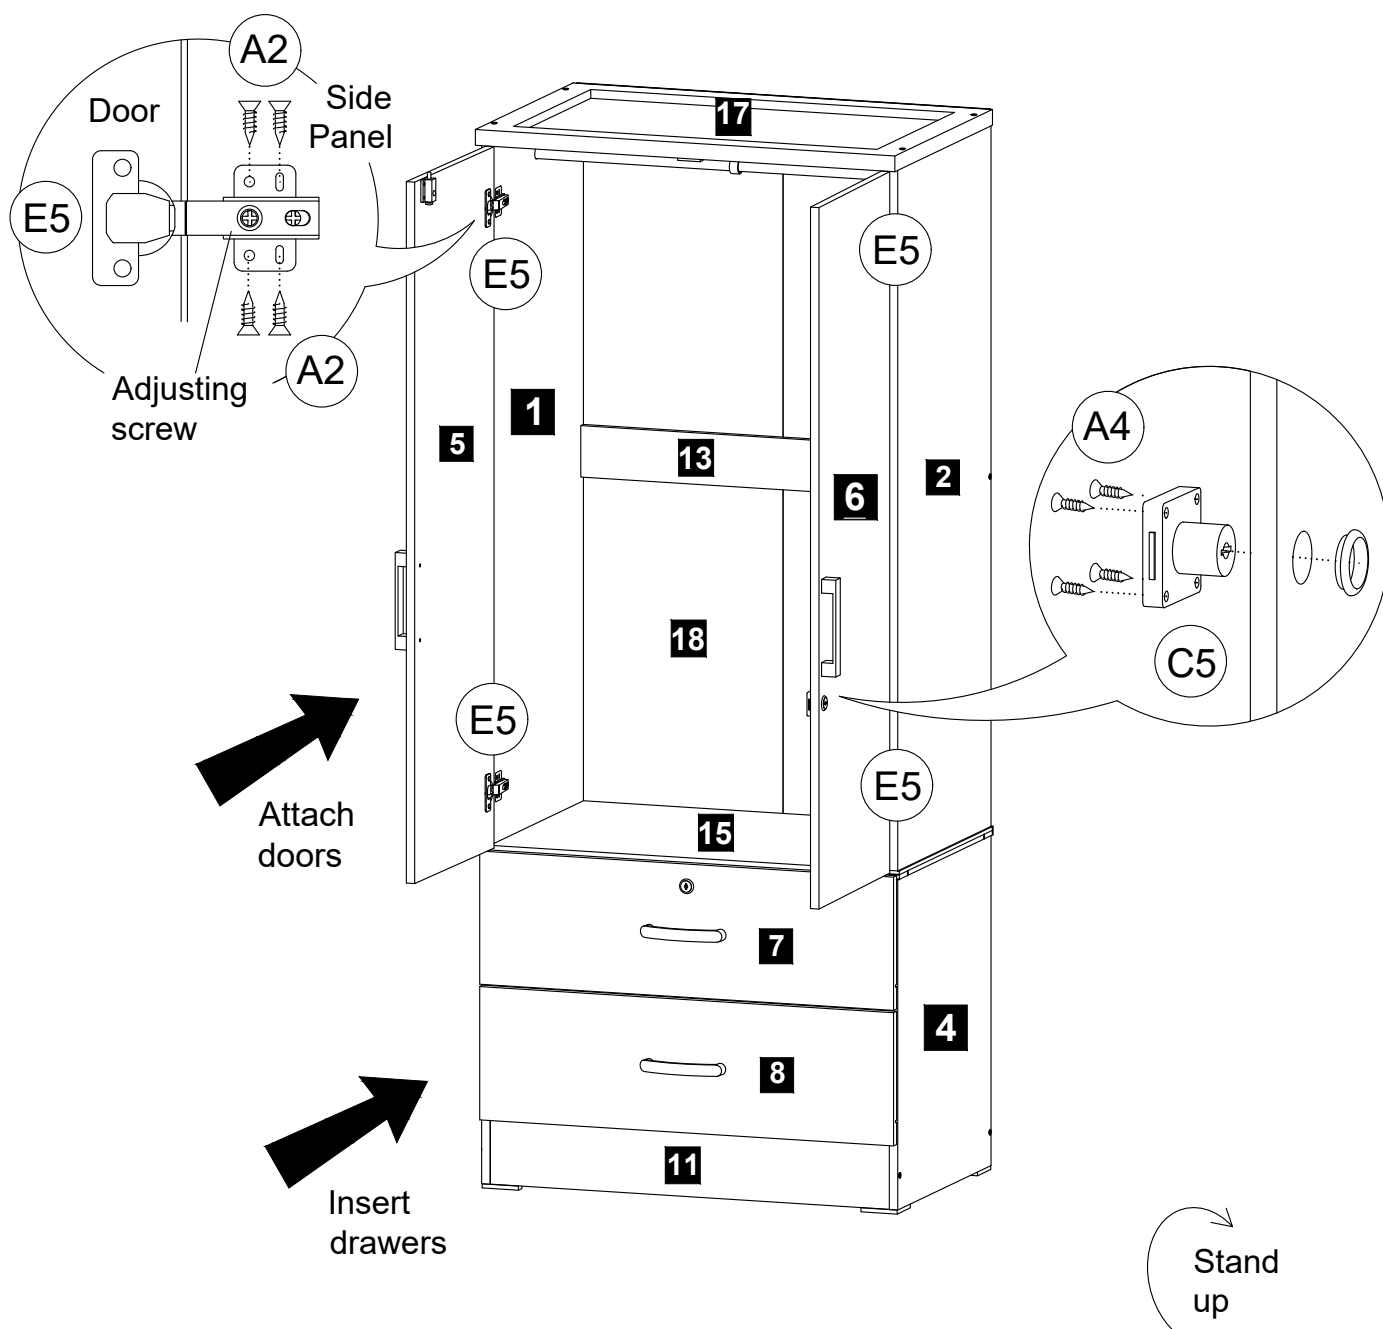


A2		Screw m3.5 x 14mm	16 pcs
A4		Screw m3.5 x 20mm	4 pcs
C5		Square Lock Set	1 set
E5		Soft Closing Hinge 5/8	4 pcs

FITTING OF TIPOVER RESTRAINT KIT


The Tipover Restraint Kit is highly recommended for this piece of furniture.

(Please take this into extra consideration around young toddlers and children)

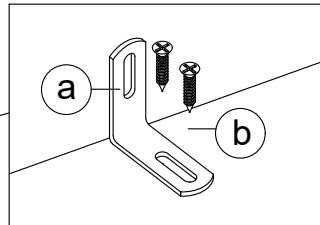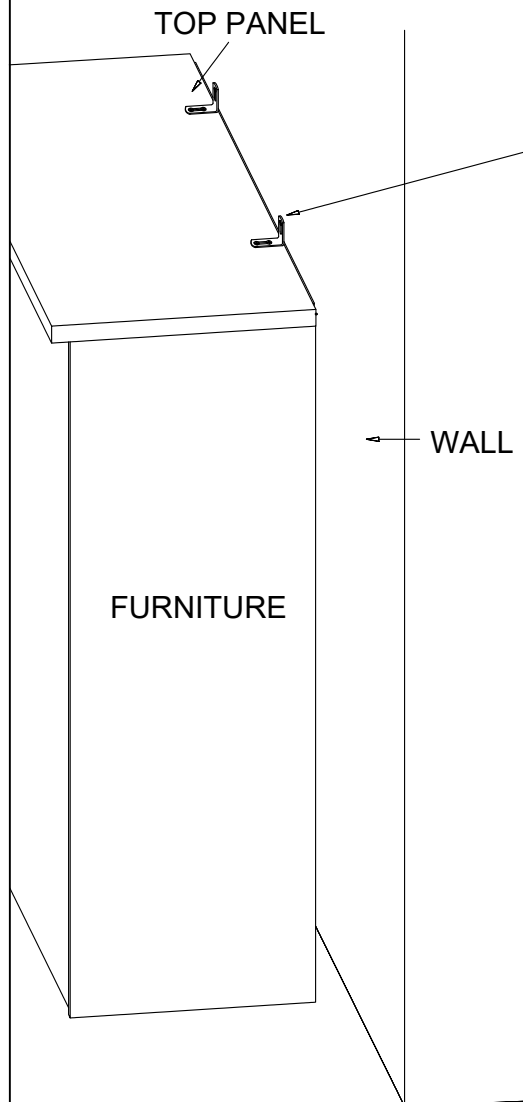


STEP 1:

- Attach the mounting bracket (a) to the top panel near the edge of the side of the unit.
- Screw (b) through the two holes of (a).

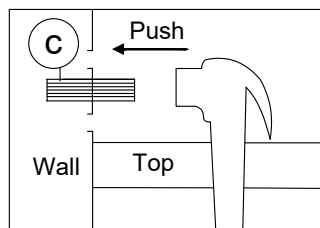

STEP 2:

- Insert the wall plug (d) into the wall behind the unit.

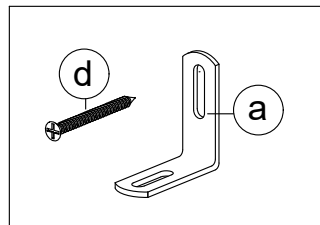

STEP 3:

- Attach to the mounting bracket (a) to the wall plug (c) through the hole by using (d).

