

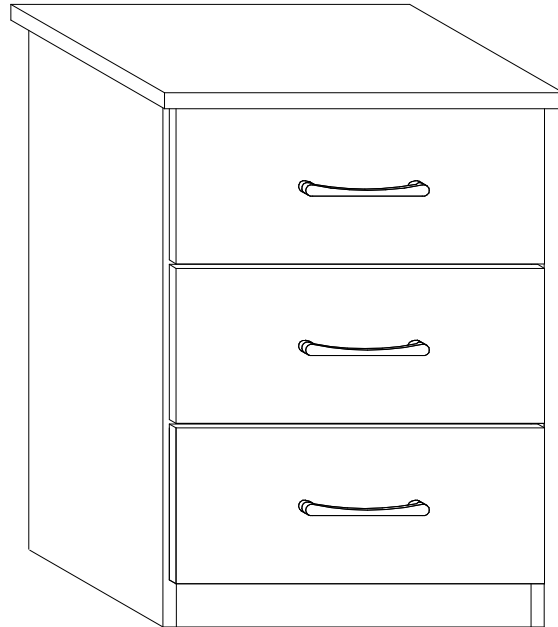
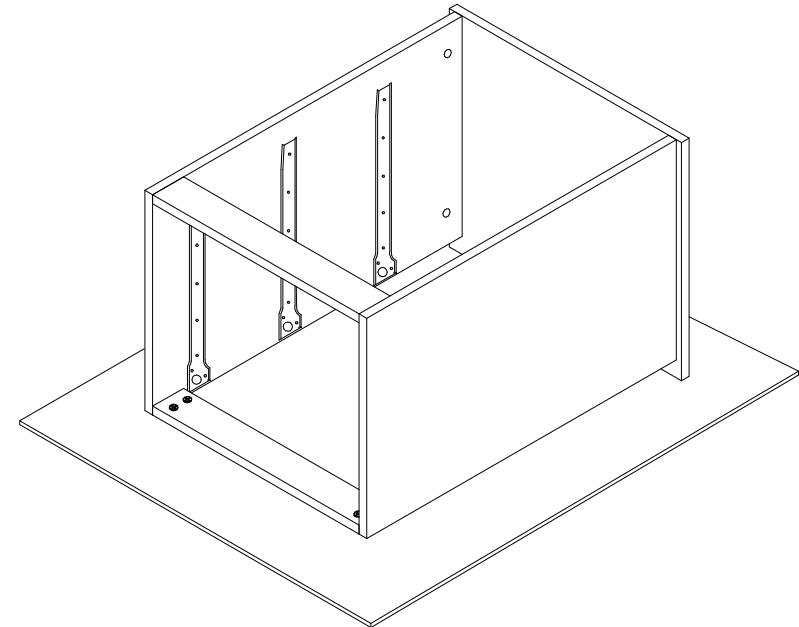



# (NIGHT STAND)

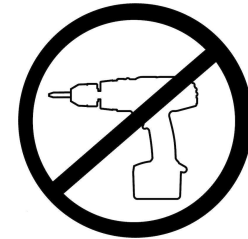

Required Tools : Screwdriver & Hammer










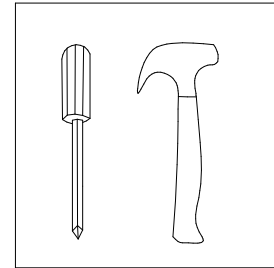


Please place on the carton while installing to prevent damage or scratches.

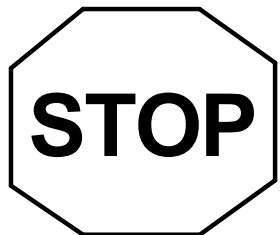

# ASSEMBLY INSTRUCTION ( PART & HARDWARE LIST )



## (NIGHT STAND)

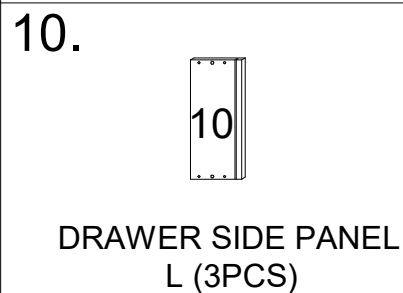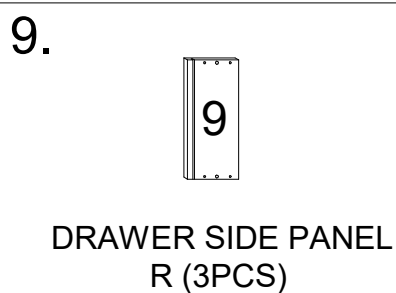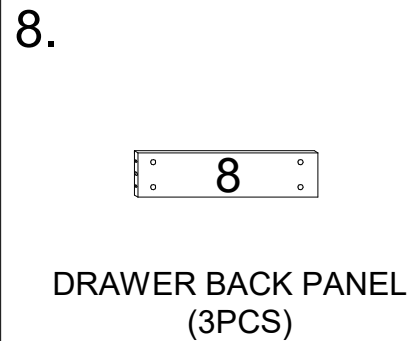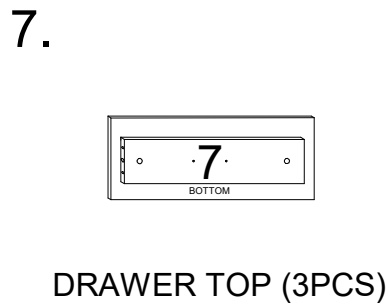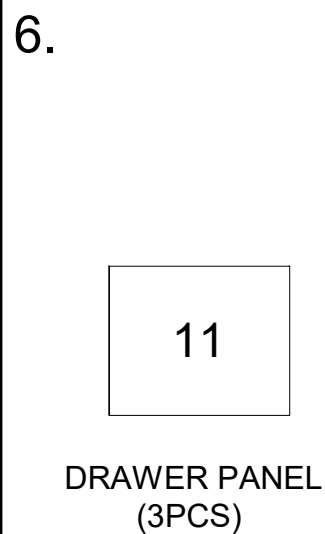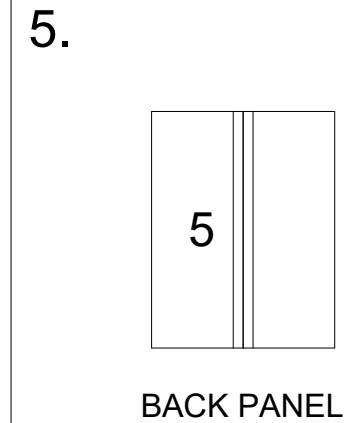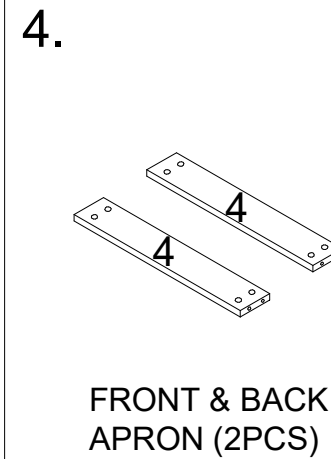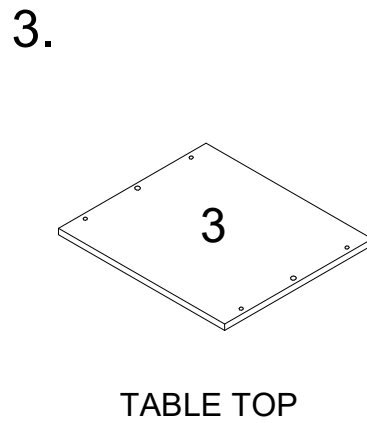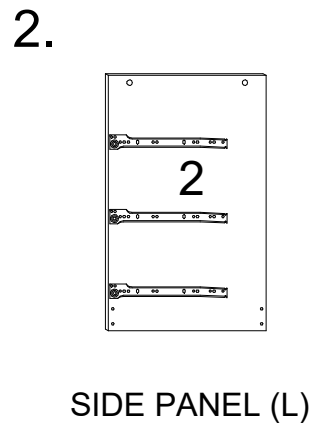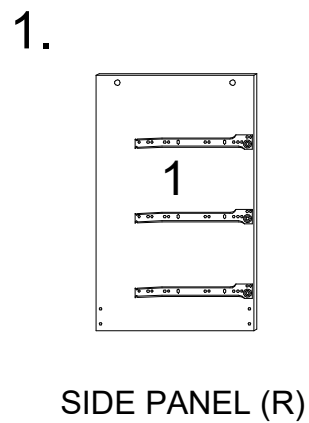

NO	HARDWARE DESCRIPTION	QTY
A.	Plastic Handle 	3
B.	Handle Screw M4 X 40mm 	6
C.	Wood Dowel M6 X 30mm 	18
D.	JCBC Bolt M6 X 50mm 	6
E.	Nail 	24
F.	Wood Dowel M8 X 30mm 	2
G.	Allen Key 	1
H.	Cam Screw 	24
I.	Cam Lock 	24
J.	Barrel Nut M6 X 13mm 	6


\*Screw Driver and Hammer Not Provided

# (NIGHT STAND)

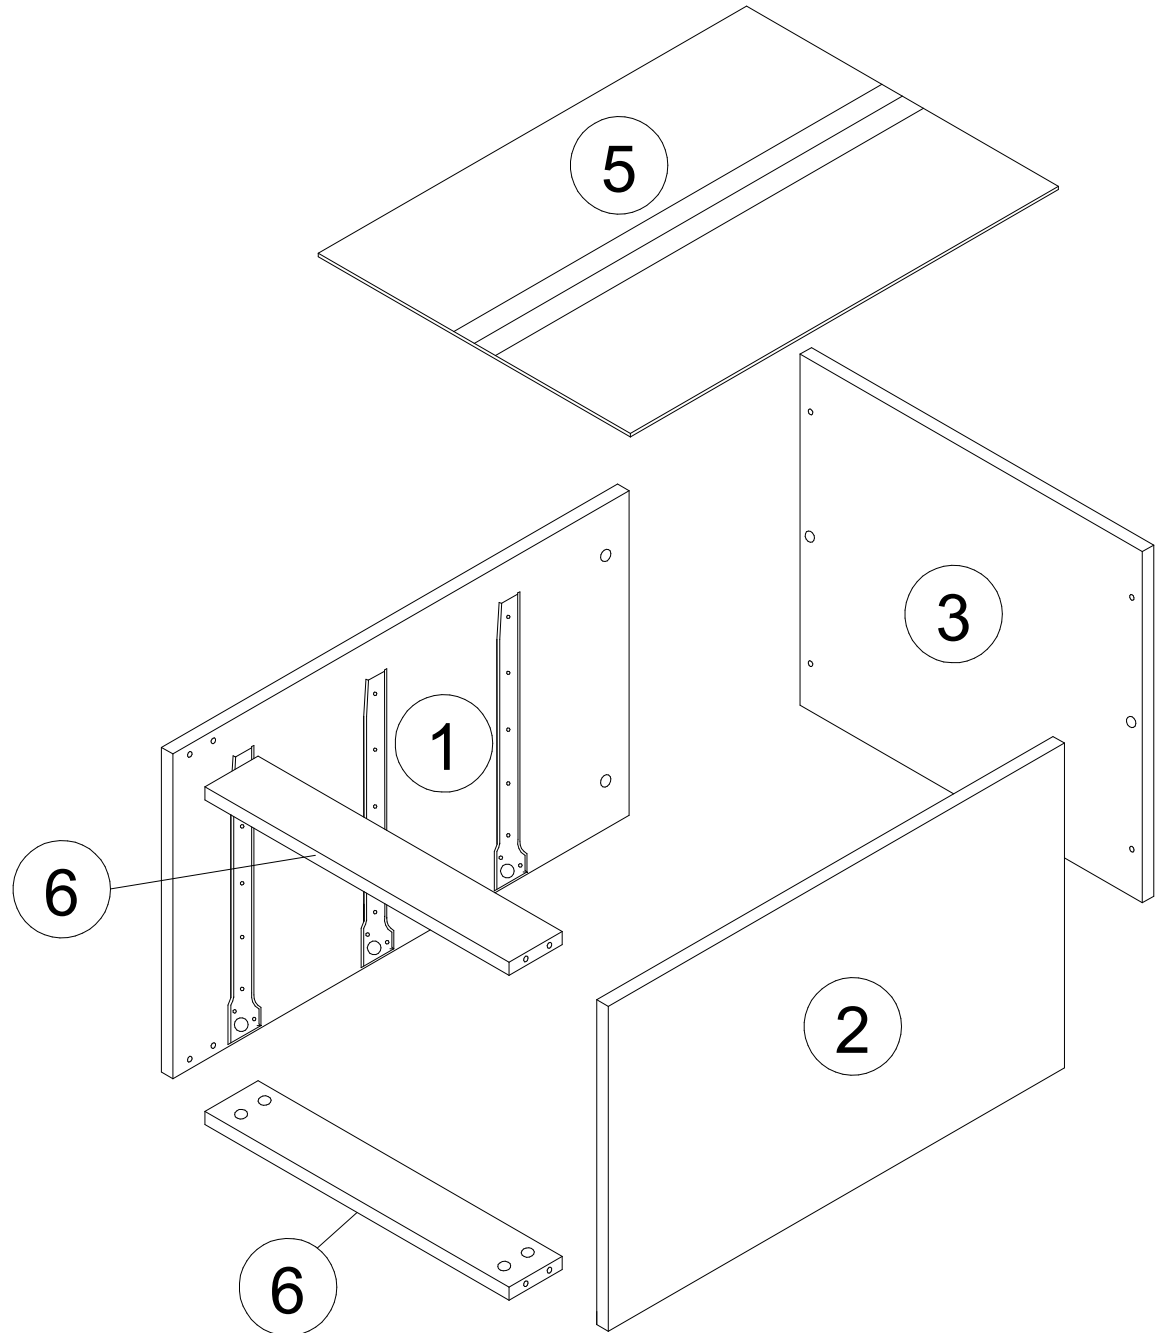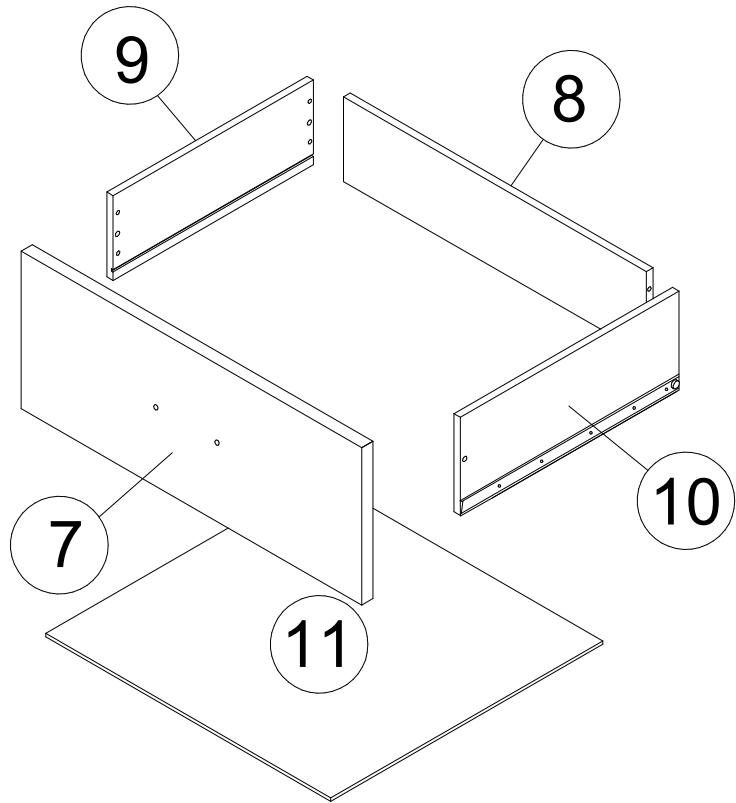


# ASSEMBLY INSTRUCTION (NIGHT STAND)

## STEP 1.

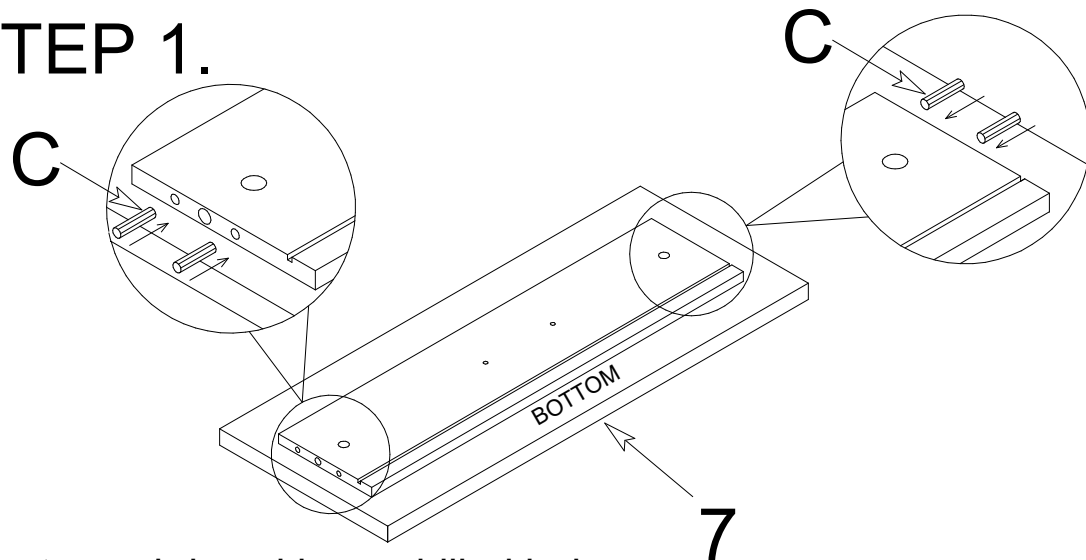


Insert wood dowel in predrilled hole.

## STEP 2.

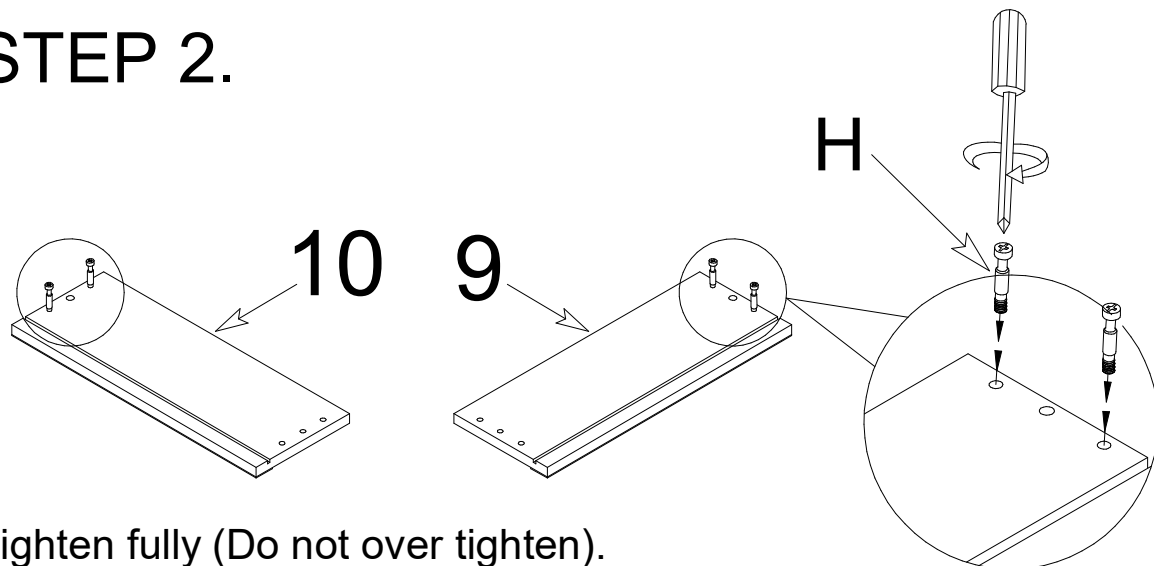

Tighten fully (Do not over tighten).


## STEP 3.

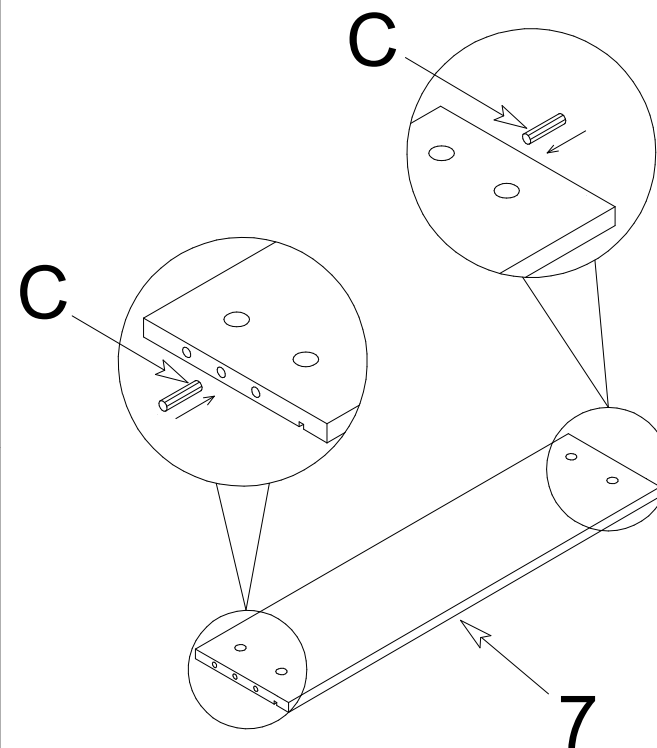


Insert wood dowel in predrilled hole.

# ASSEMBLY INSTRUCTION (NIGHT STAND)


STEP 4.

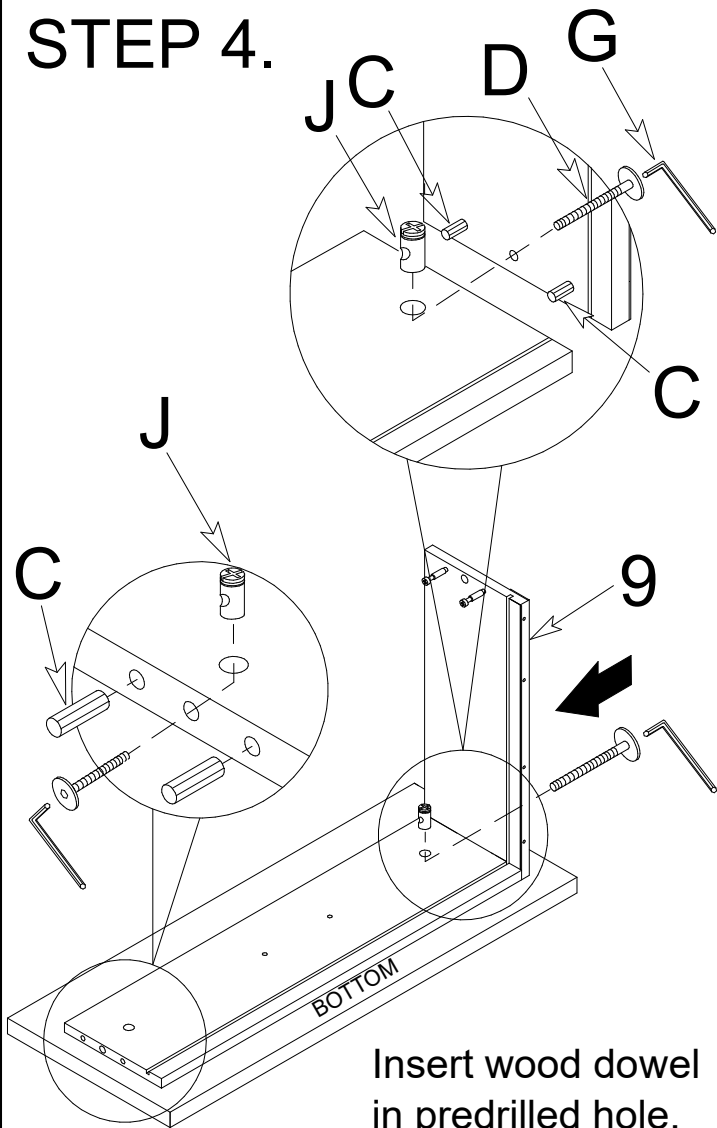

STEP 5.

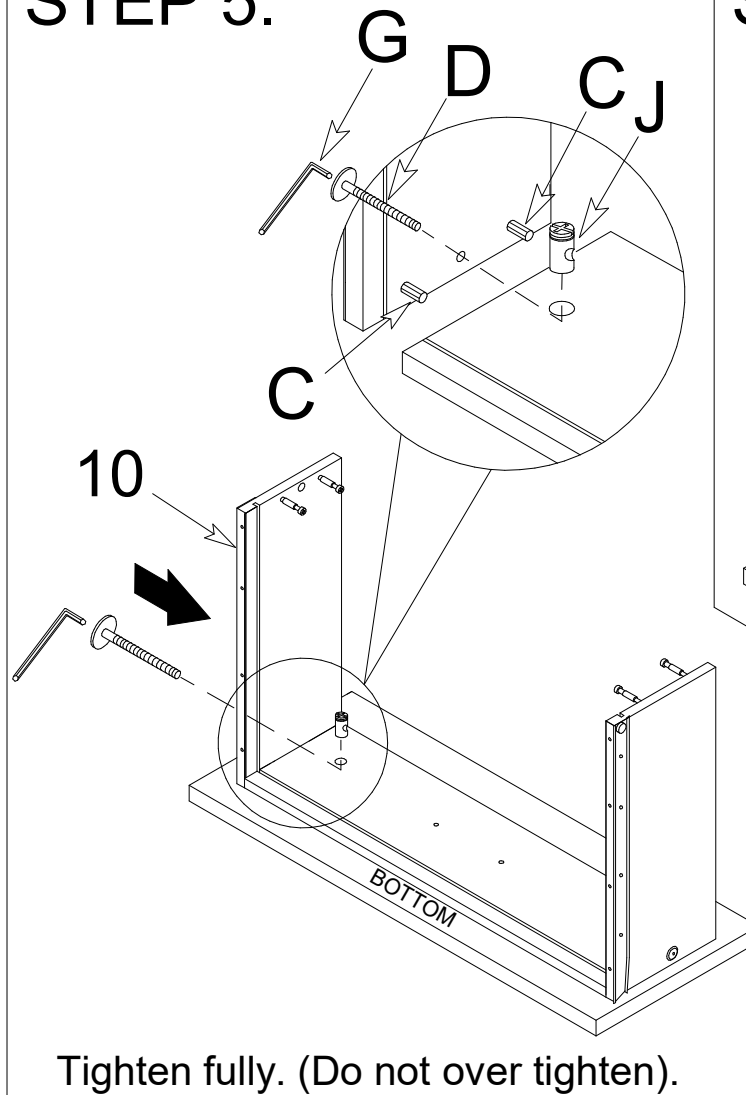


STEP 6.

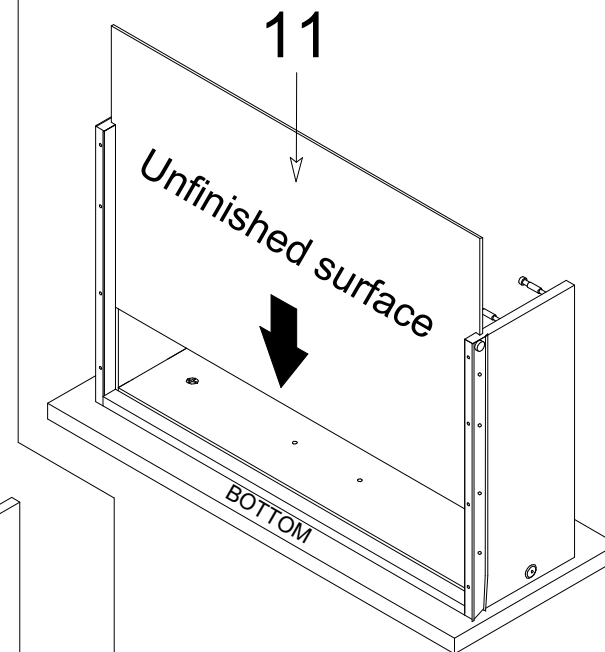


# ASSEMBLY INSTRUCTION (NIGHT STAND)

## STEP 7.

Tighten fully. (Do not over tighten).

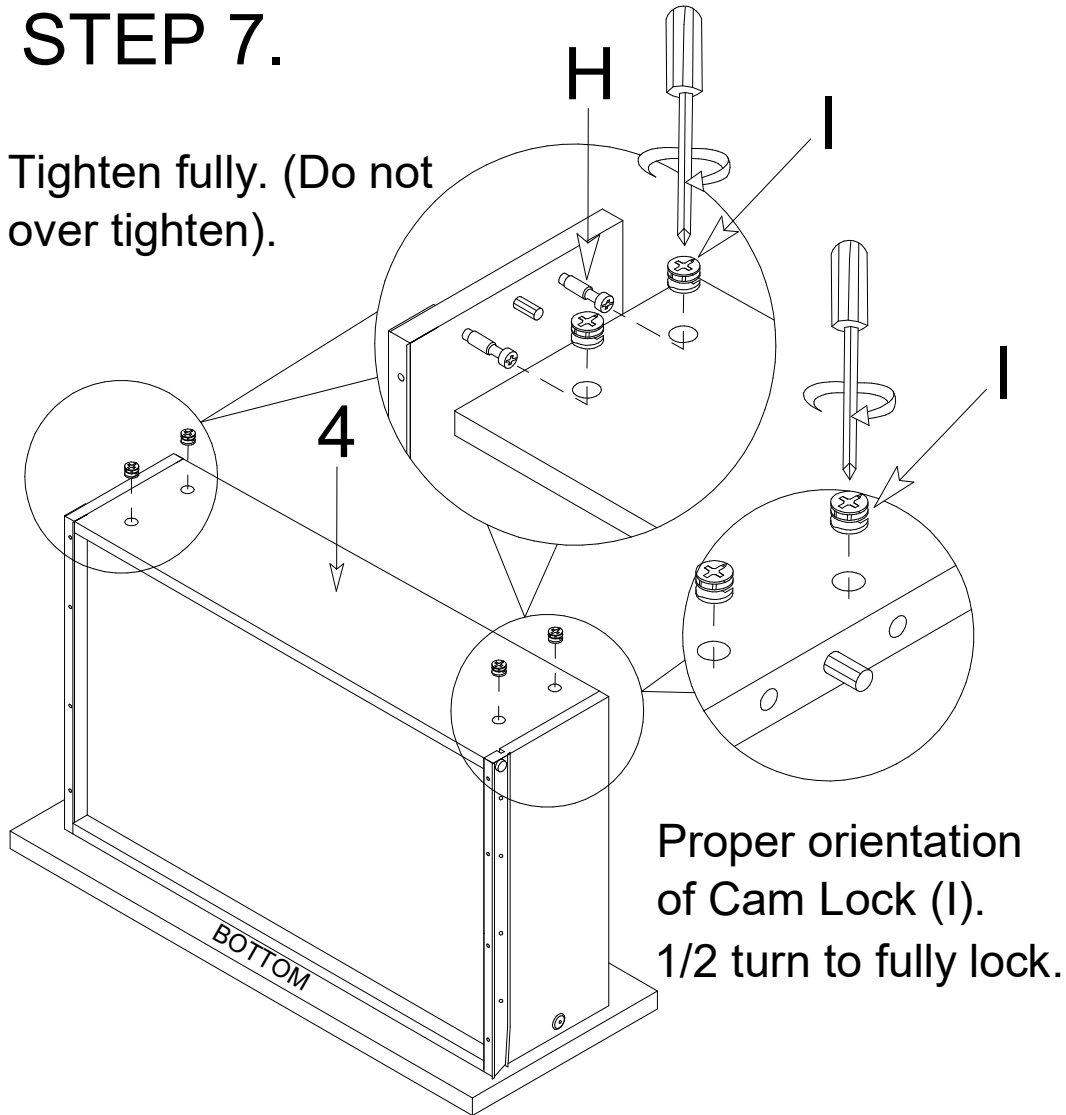

## STEP 8.

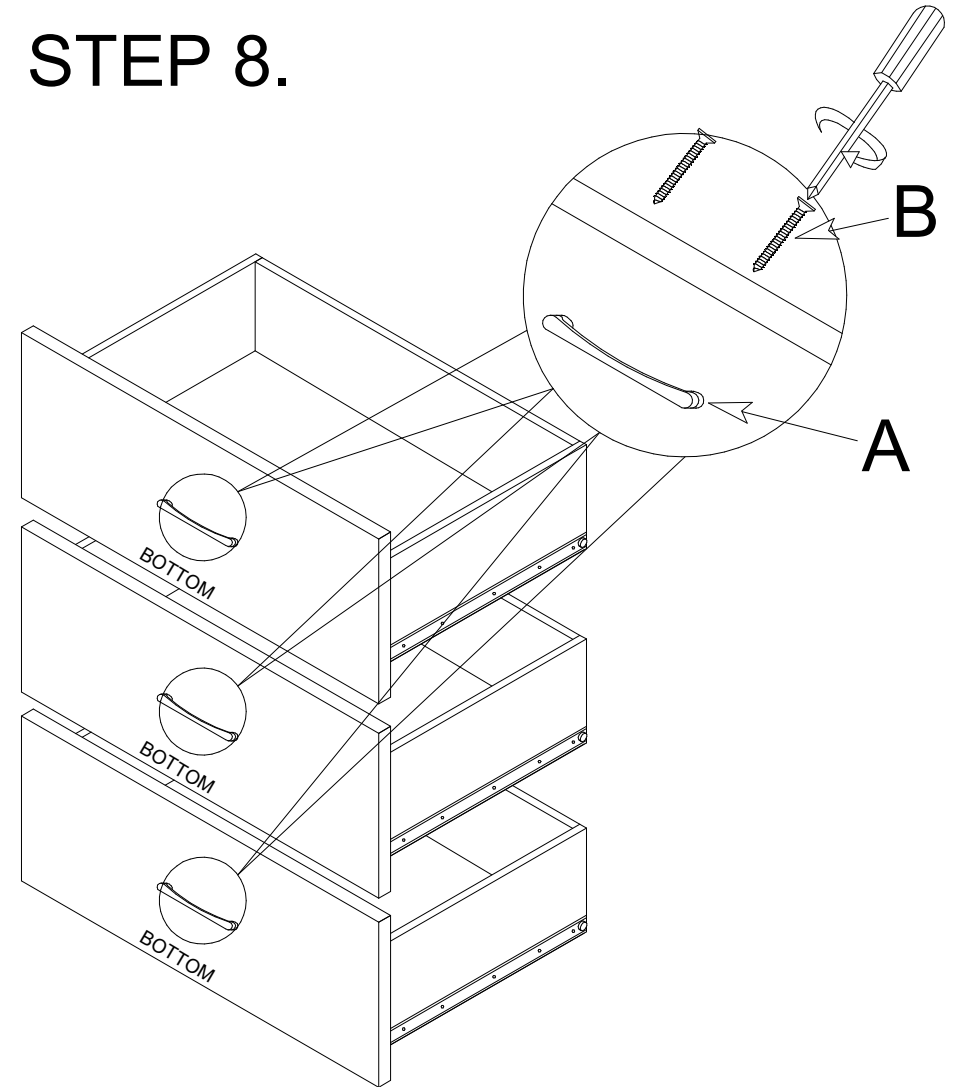


Attach handle using handle screw (B).

# ASSEMBLY INSTRUCTION (NIGHT STAND)

## STEP 9.


Tighten fully.  
(Do not over tighten).

Insert wood dowel  
in predrilled hole.

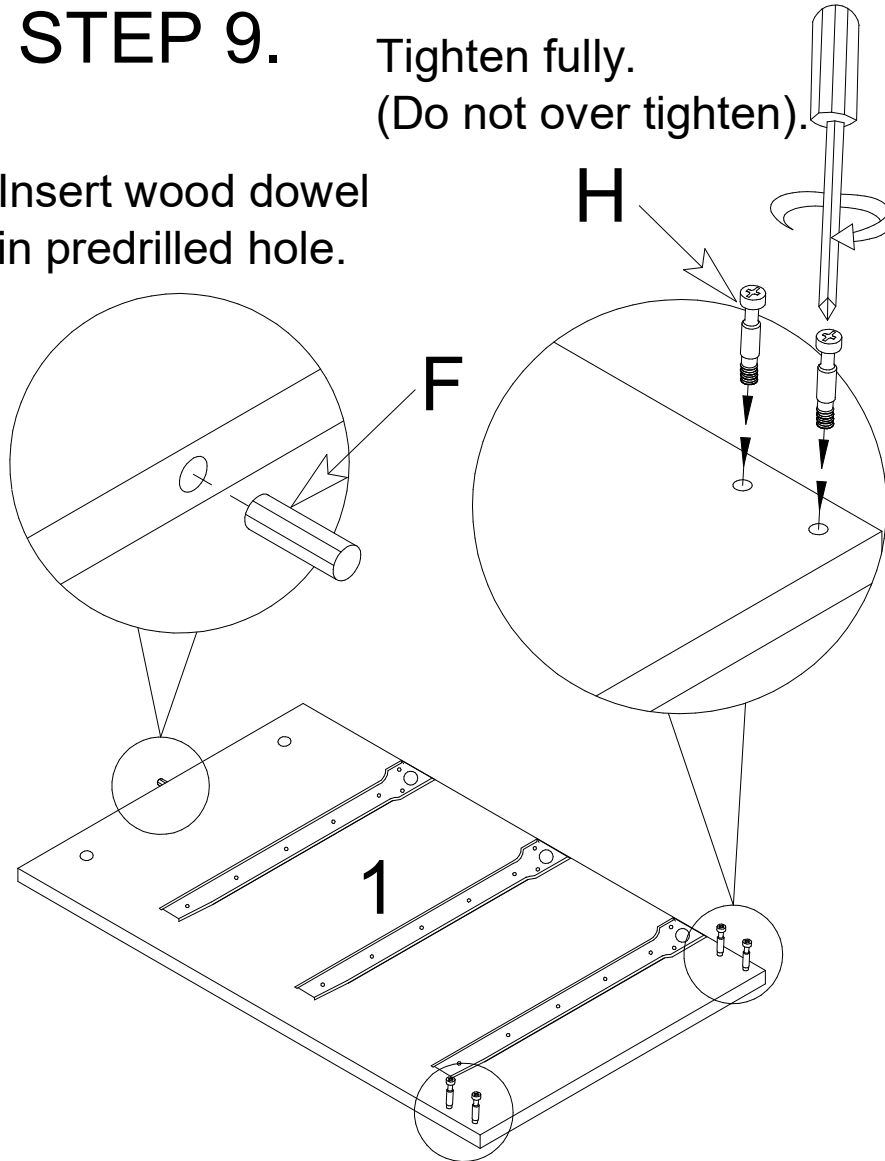


## STEP 10.

Insert wood dowel  
in predrilled hole.

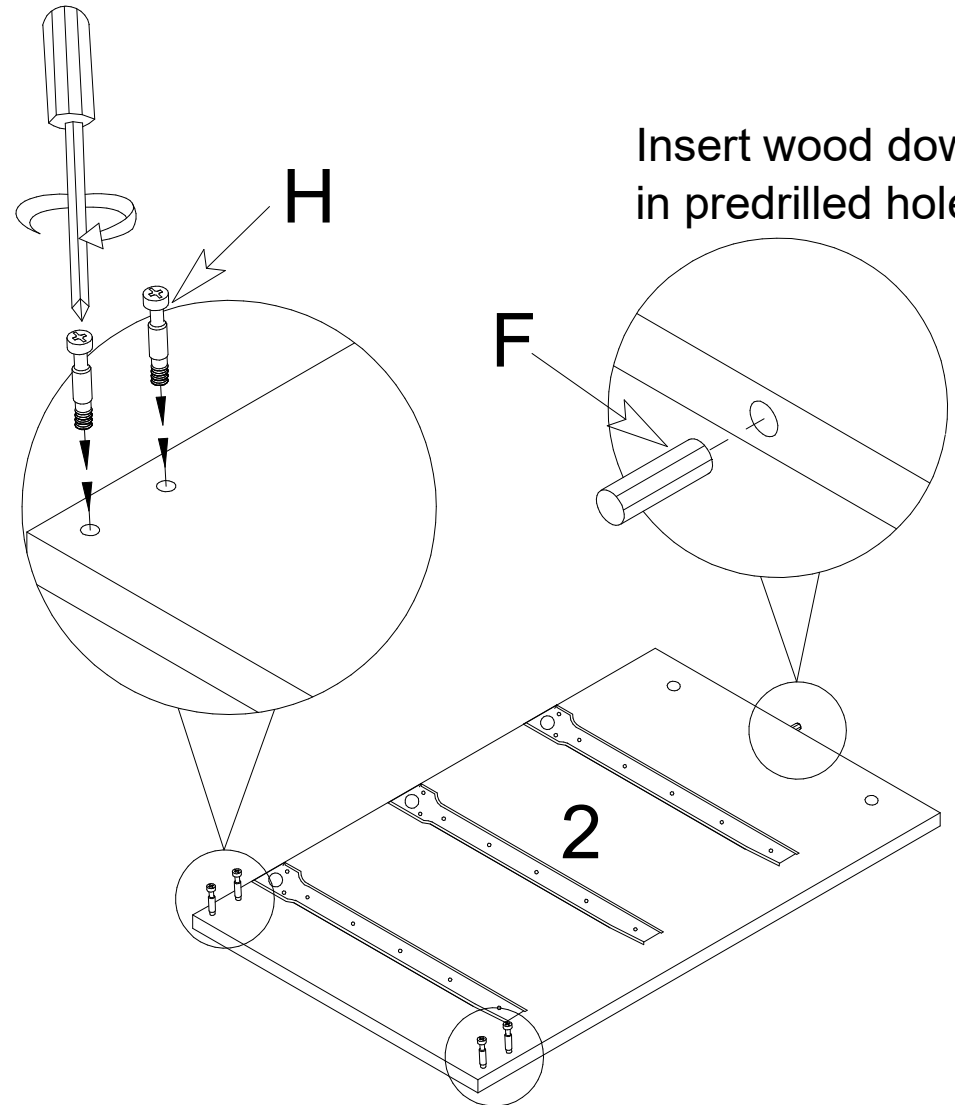


# ASSEMBLY INSTRUCTION (NIGHT STAND)

## STEP 11.

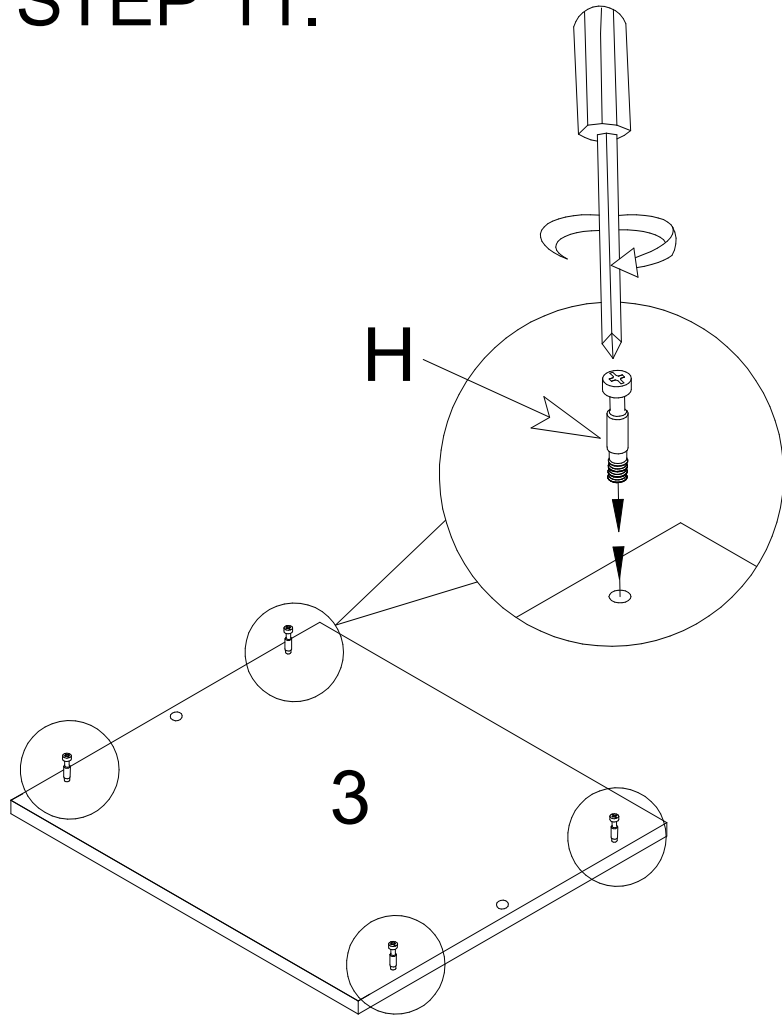

Tighten fully. (Do not over tighten).


## STEP 12.

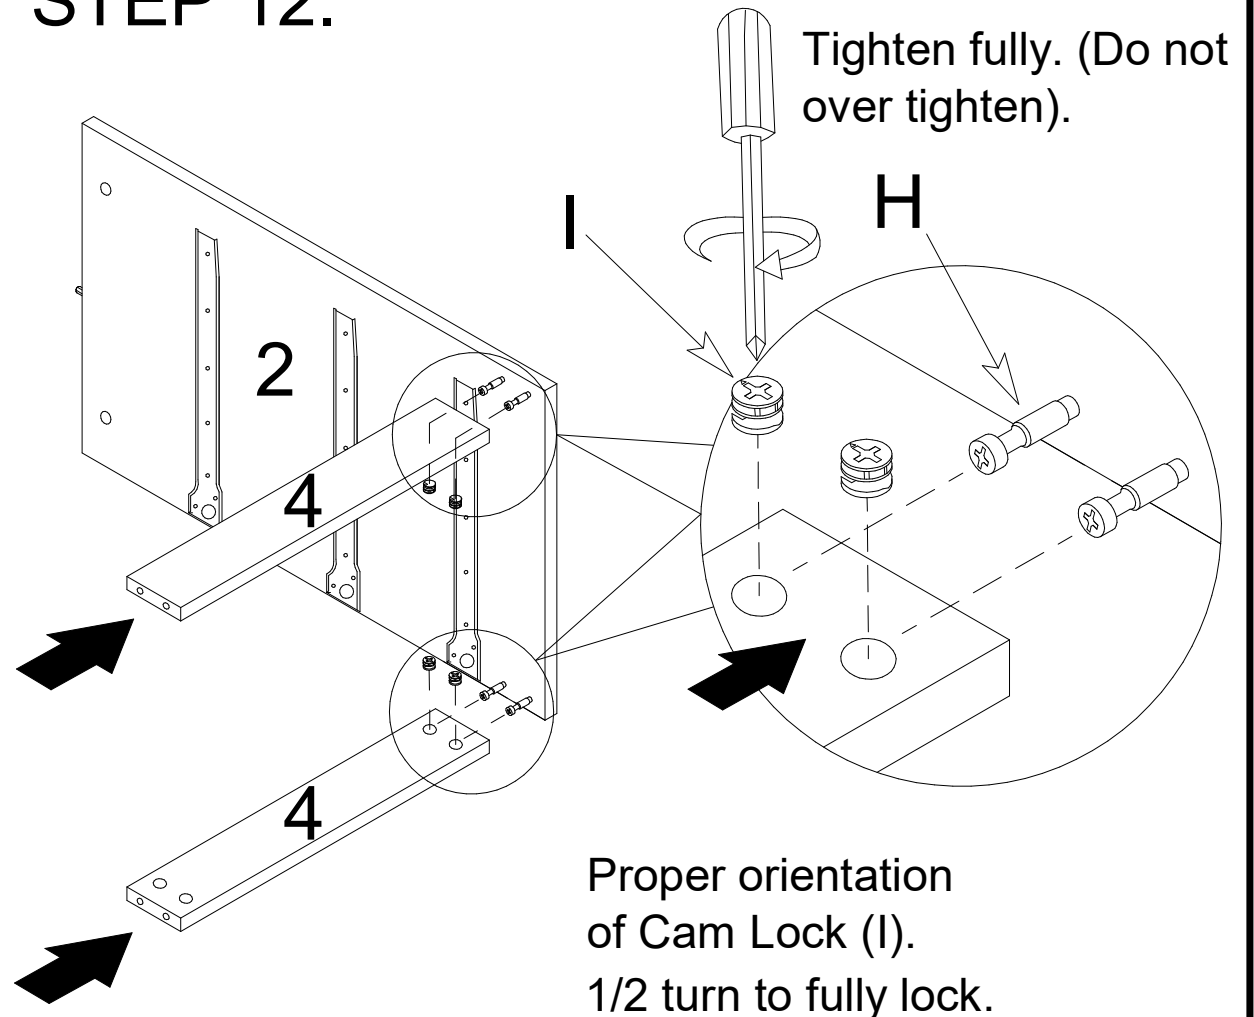

# ASSEMBLY INSTRUCTION (NIGHT STAND)


## STEP 13.

Tighten fully. (Do not over tighten).

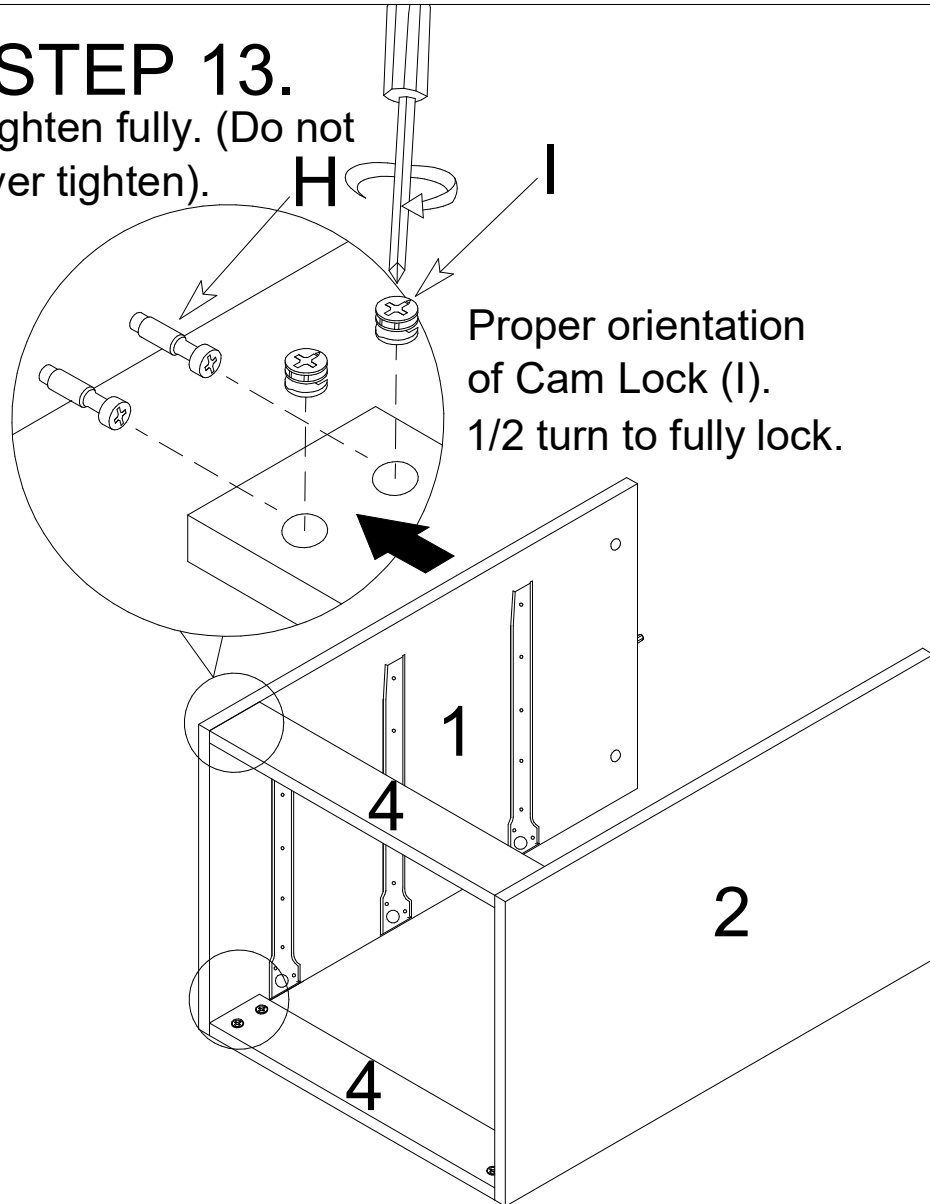


## STEP 14.

Proper orientation of Cam Lock (I).  
1/2 turn to fully lock.

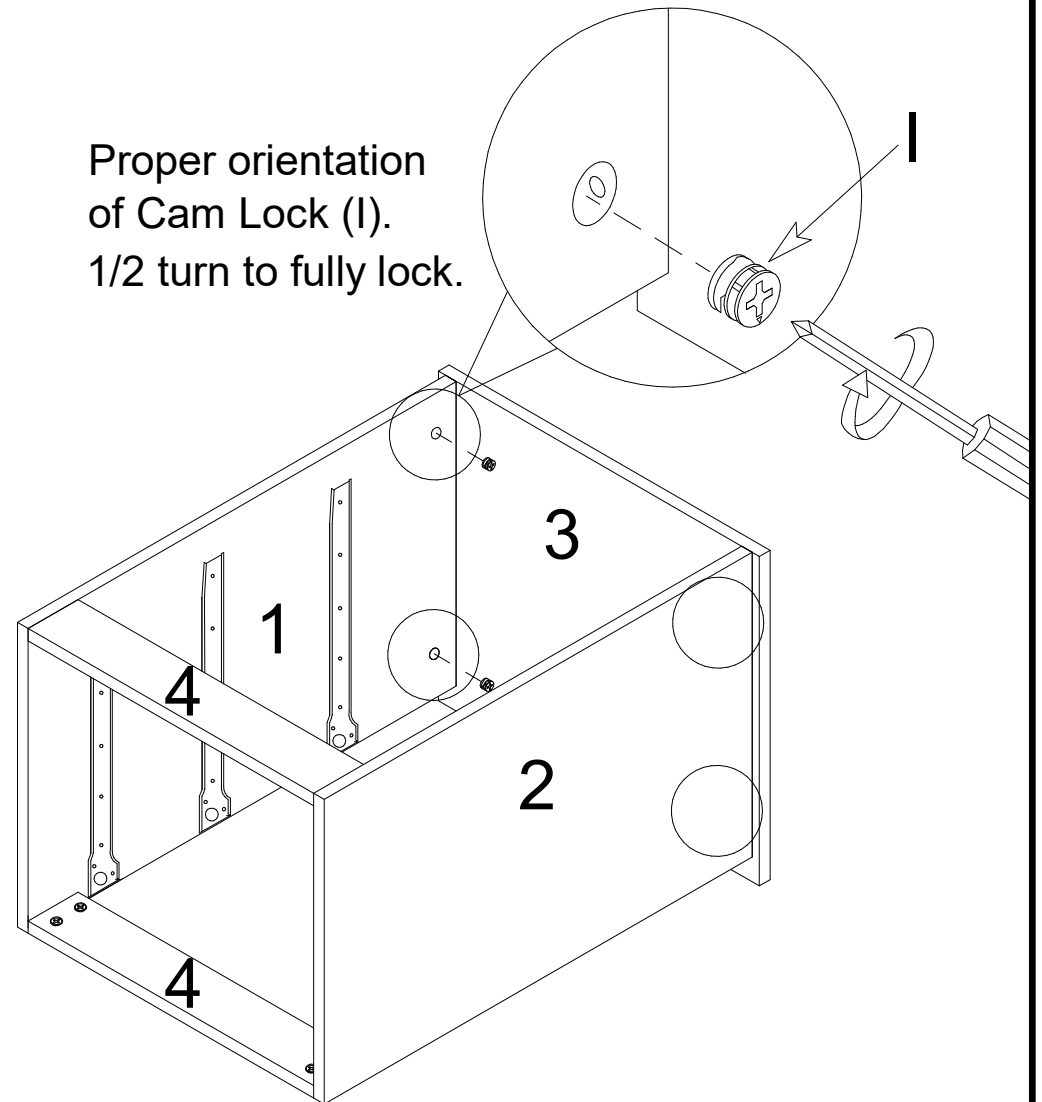


# ASSEMBLY INSTRUCTION (NIGHT STAND)

STEP 15.

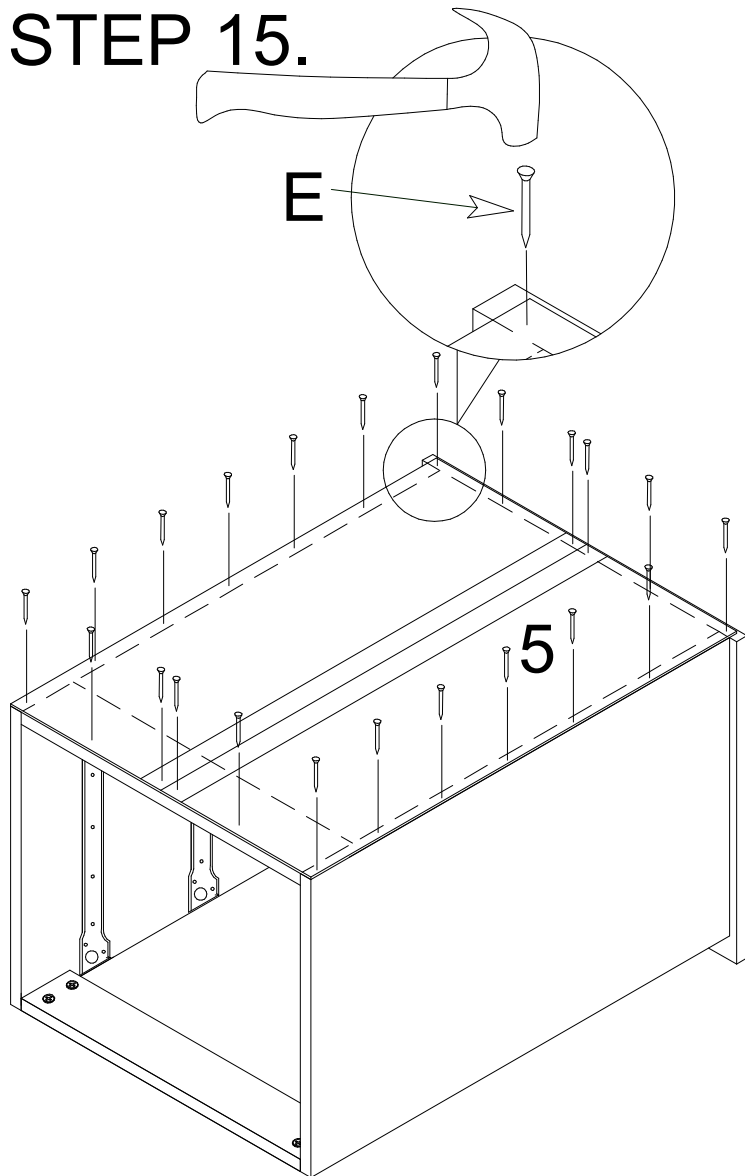

STEP 16.

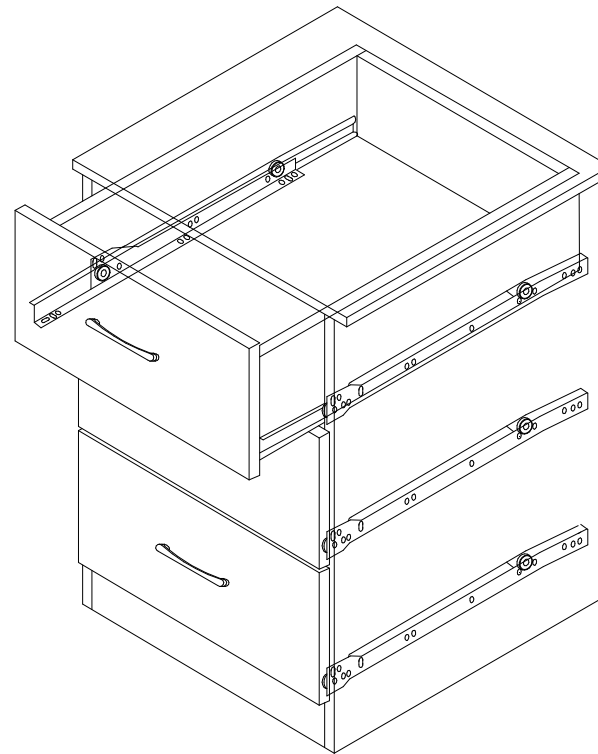

Put in drawer on the track.

