



# ASSEMBLY INSTRUCTIONS








## TWIN FLOOR BED WITH RAILINGS

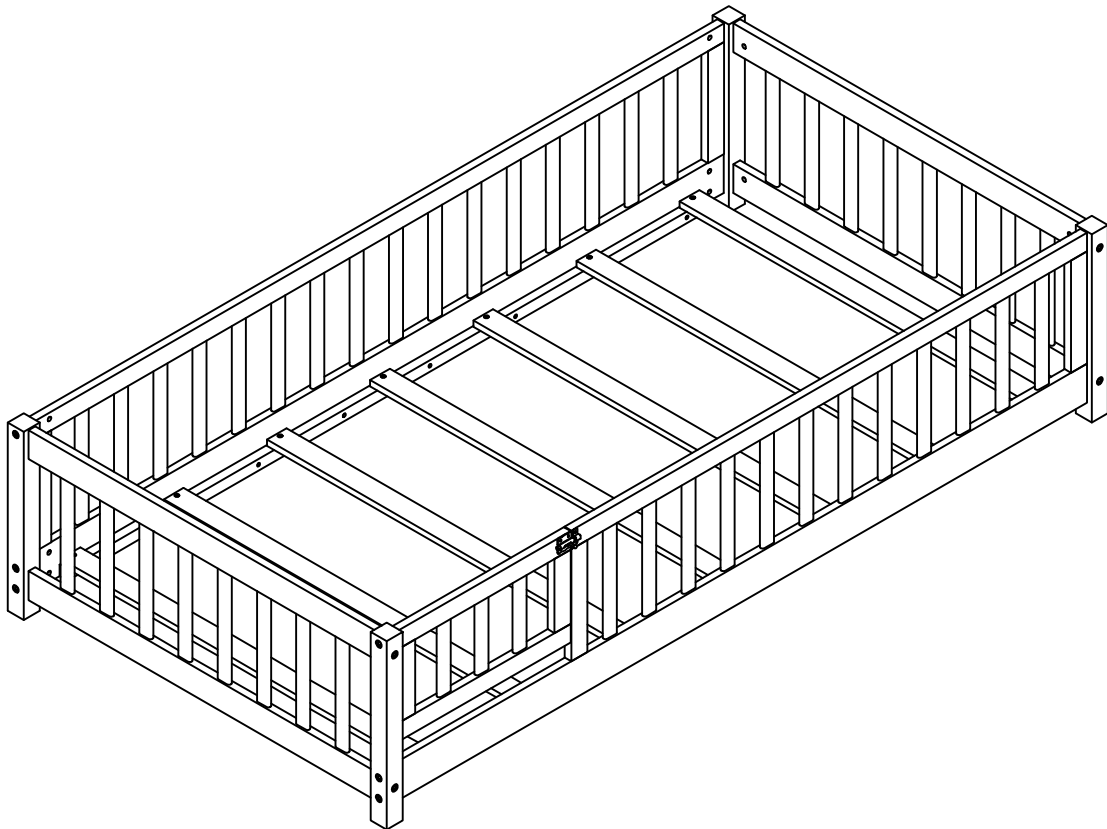







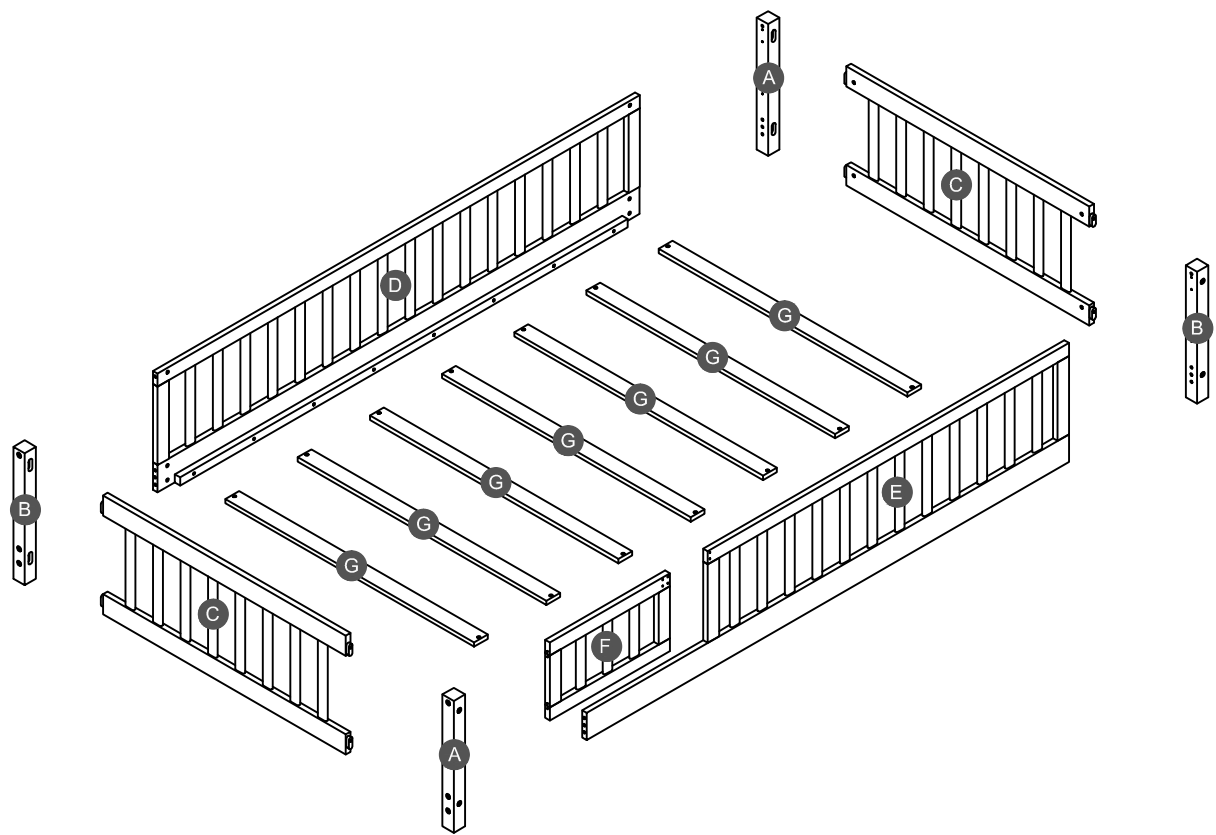


## Detail View




# Part List

<b>A</b>  Leg (Left Front/Right Back) - 2pcs	<b>B</b>  Leg (Right Front/Left Back) - 1pc	<b>C</b>  Frame HB & FB - 2pcs
<b>D</b>  Slat - 7pcs	<b>E</b>  Slat - 7pcs	<b>F</b>  Slat - 7pcs
<b>G</b>  Slat - 7pcs		

## Hardware List


<b>1</b>  Ø8*30mm Wood dowel (4pcs)	<b>2</b>  (Ø15)1/4"*100mm Hex-Head bolts (11pcs)	<b>3</b>  (Ø15)1/4"*80mm Hex-Head bolts (8pcs)
<b>4</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)	<b>5</b>  Ø4*30mm Wood screws (14pcs)	<b>6</b>  55*24*6mm(135°) Hinges (2pcs)
<b>7</b>  60*40*10mm Lock (1pc)	<b>8</b>  Ø3.5*15mm Wood screws (14pcs)	<b>9</b>  (1/4")4.5*58mm Allen key (1pc)

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

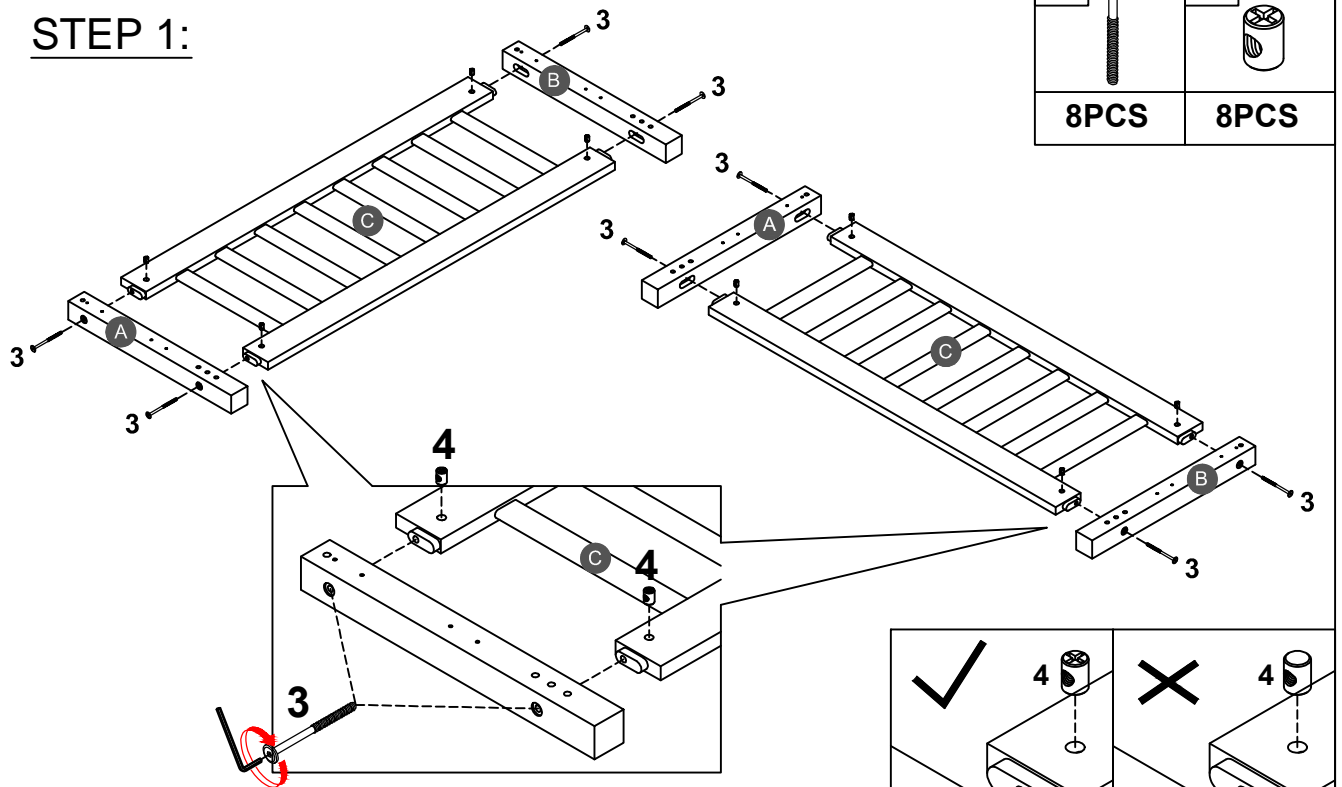



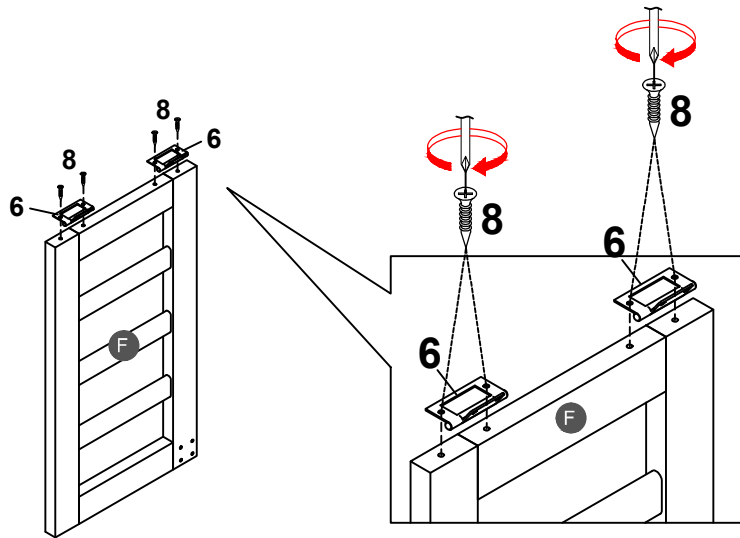
Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

## STEP 2:

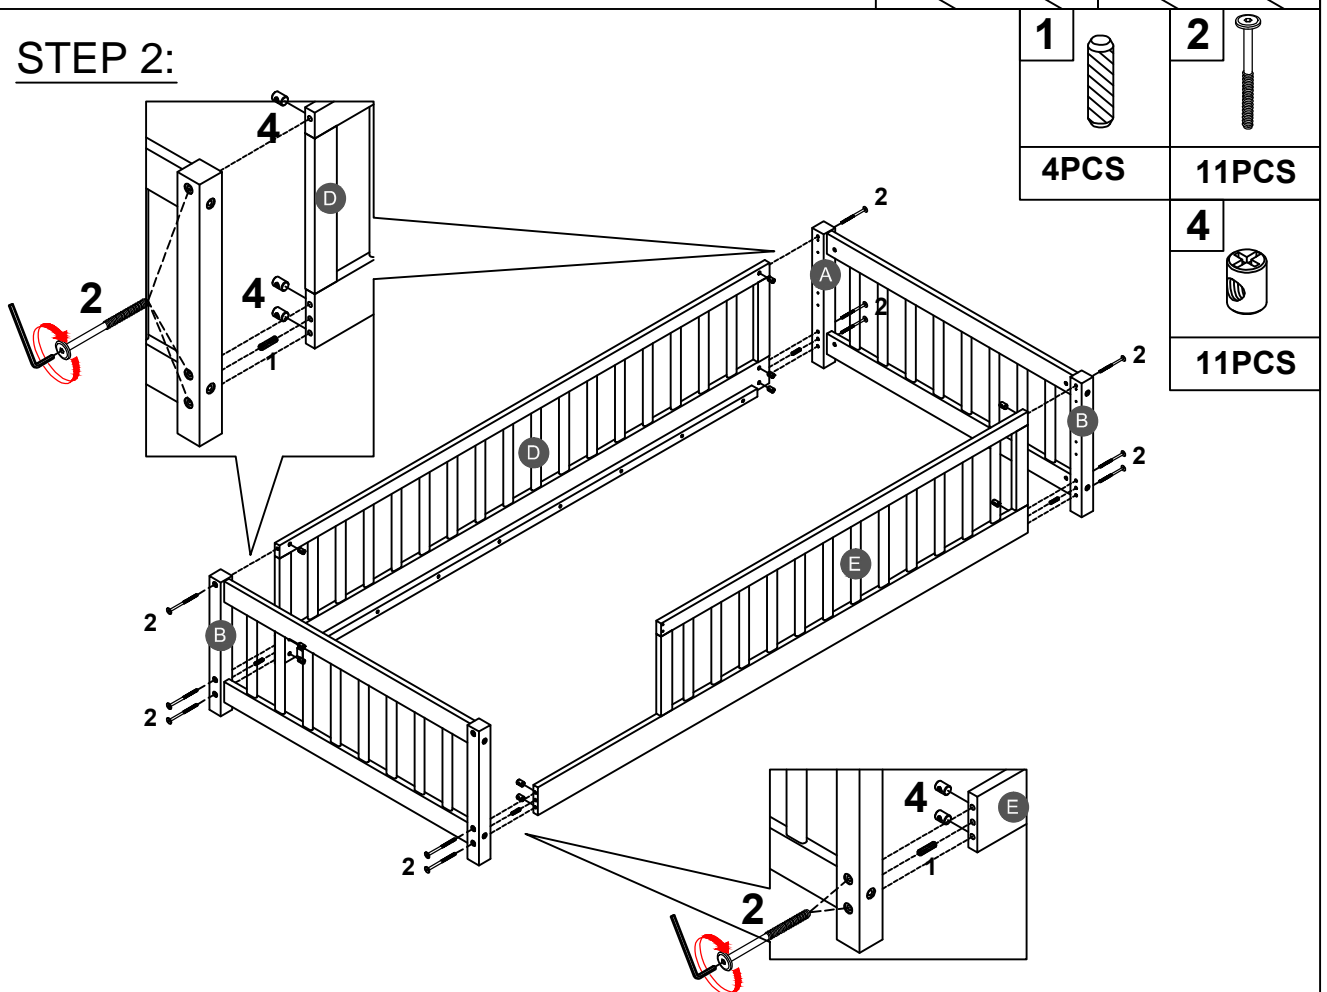


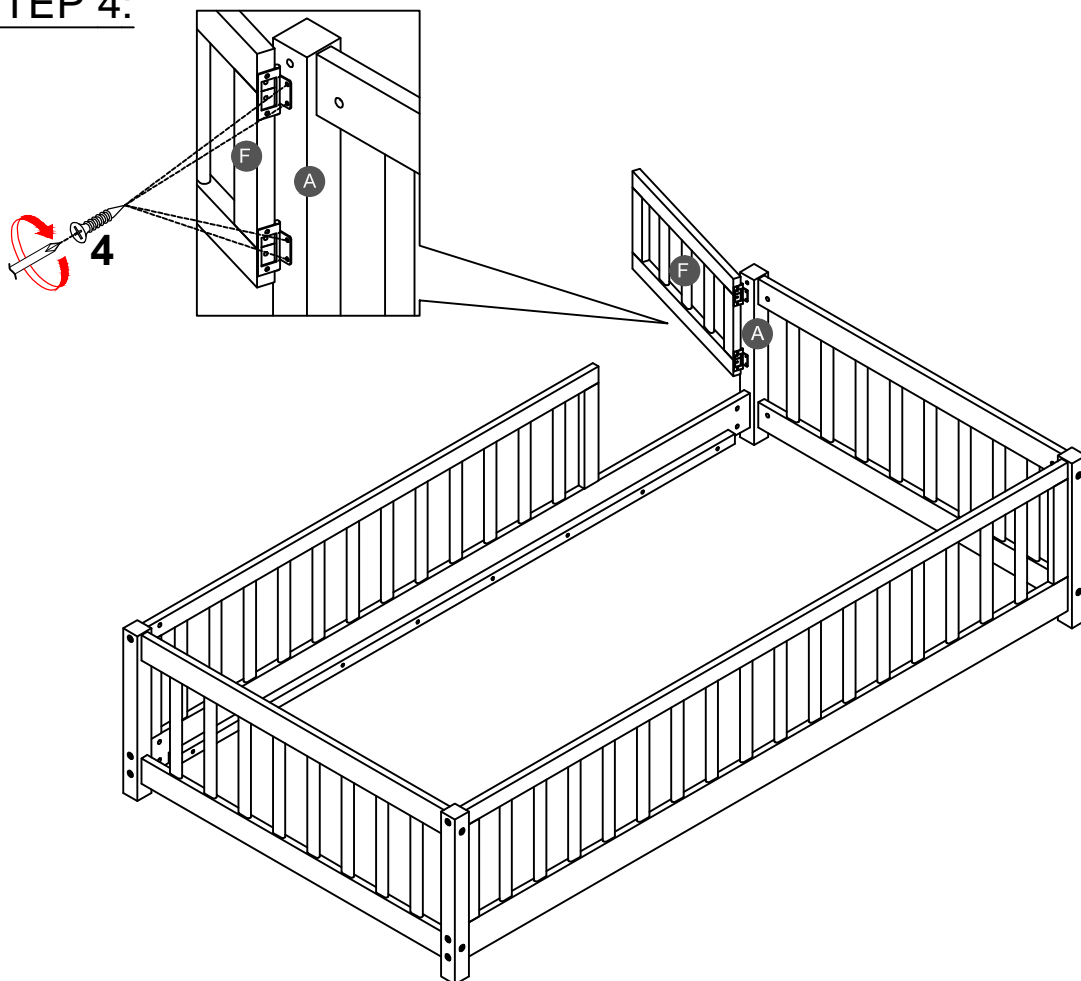
### STEP 3:

<b>6</b>	<b>8</b>
	
<b>2PCS</b>	<b>4PCS</b>






### STEP 4:

<b>8</b>

<b>4PCS</b>


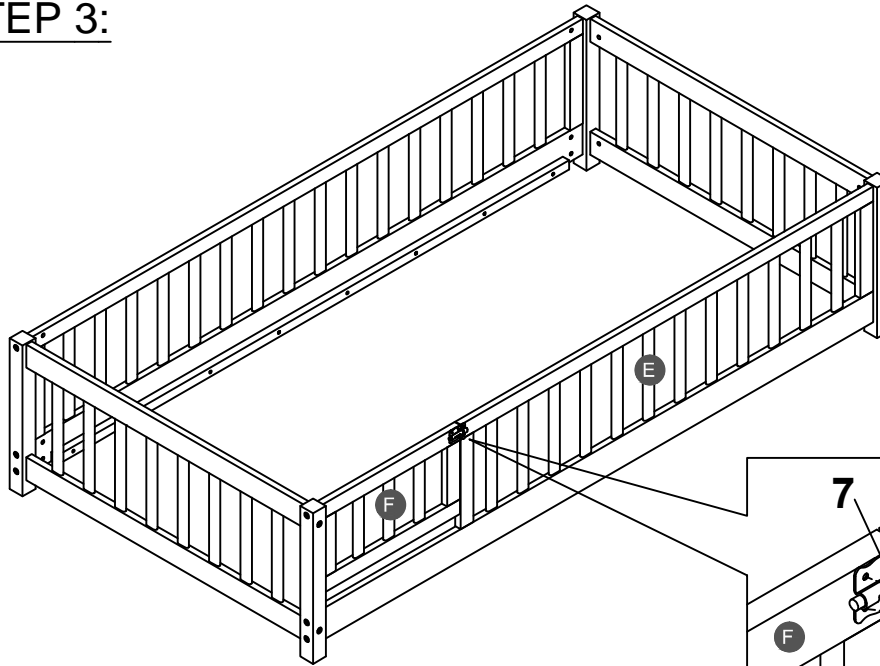



### STEP 3:





7	8
	
1PC	6PCS

### STEP 4:

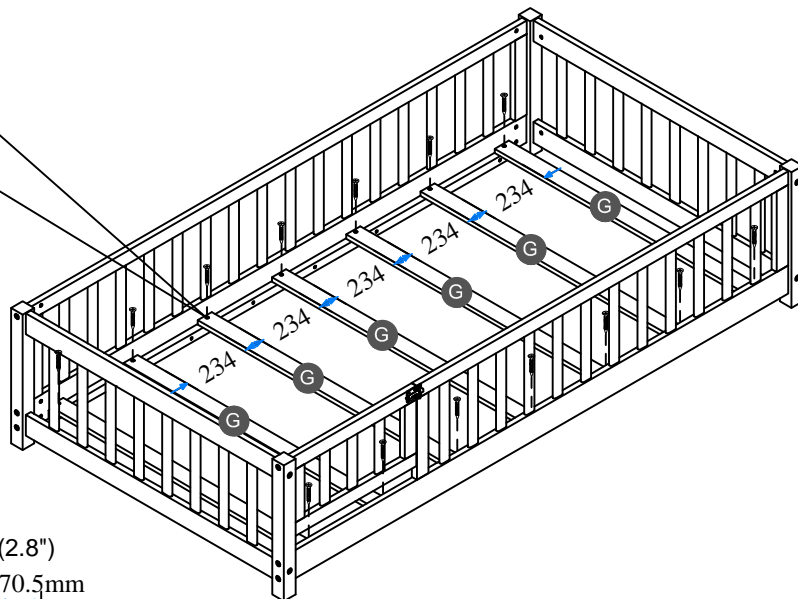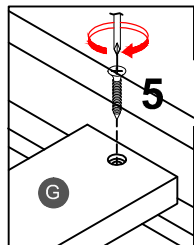

5

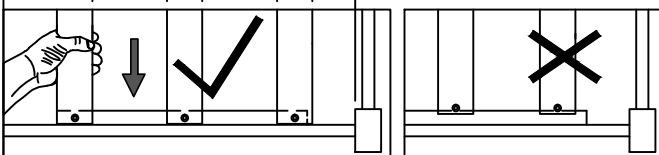14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.