

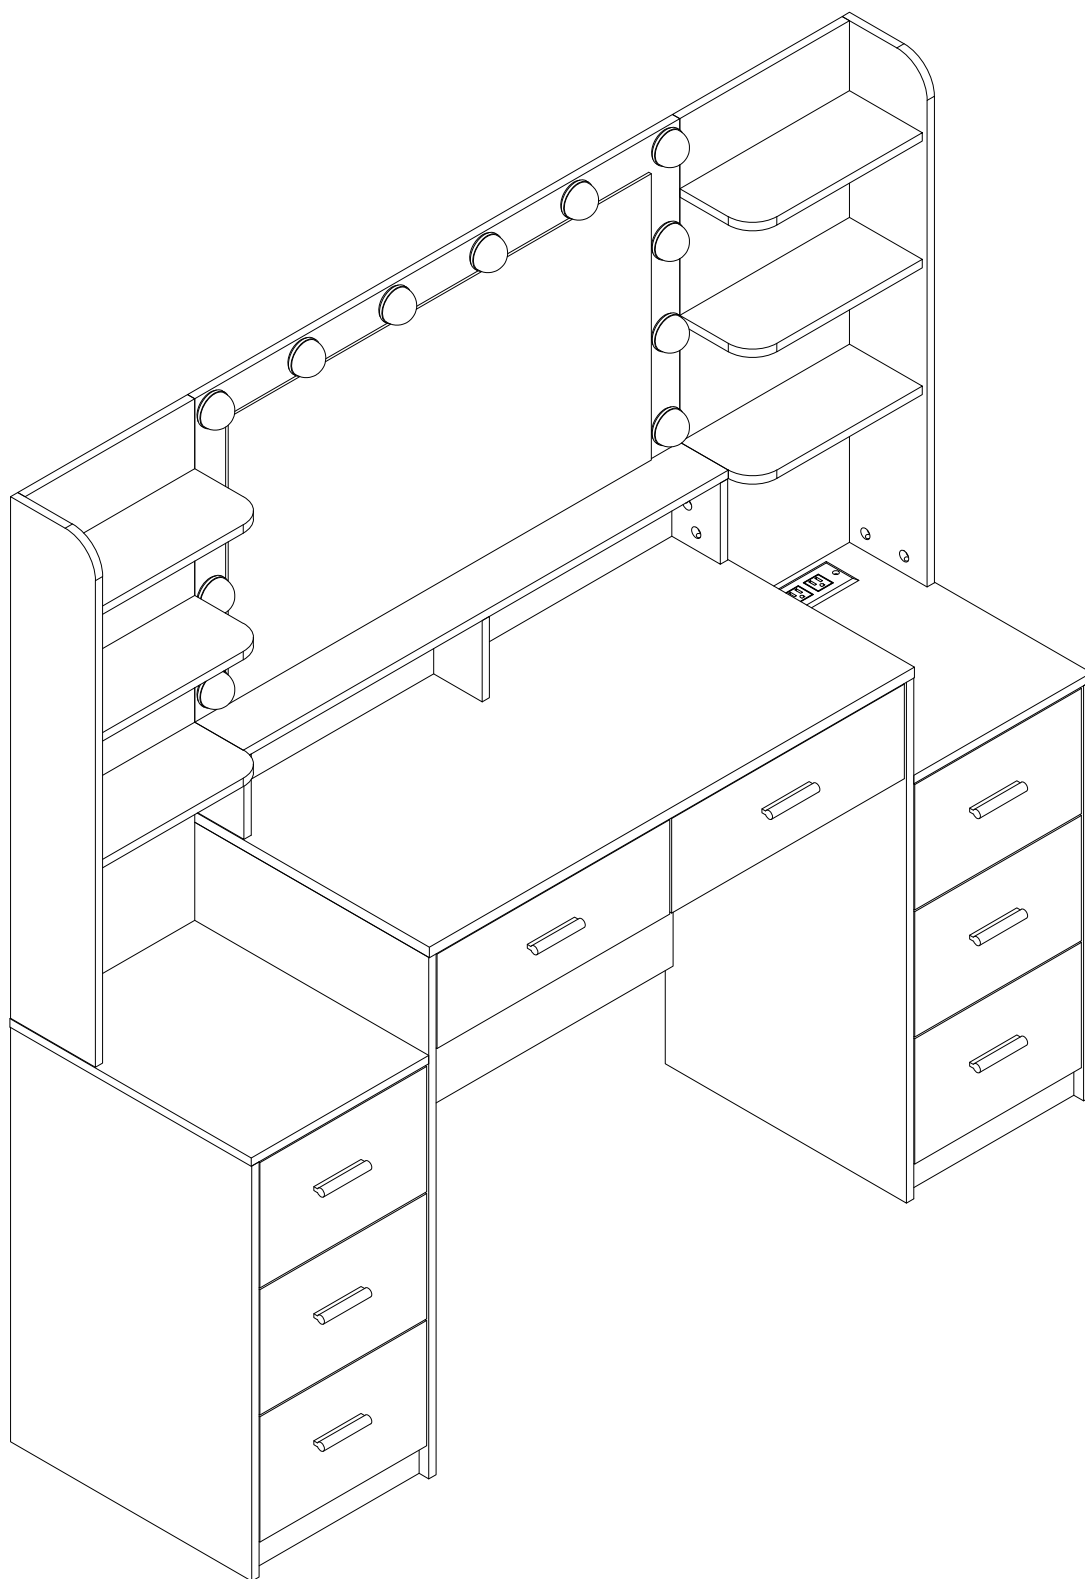
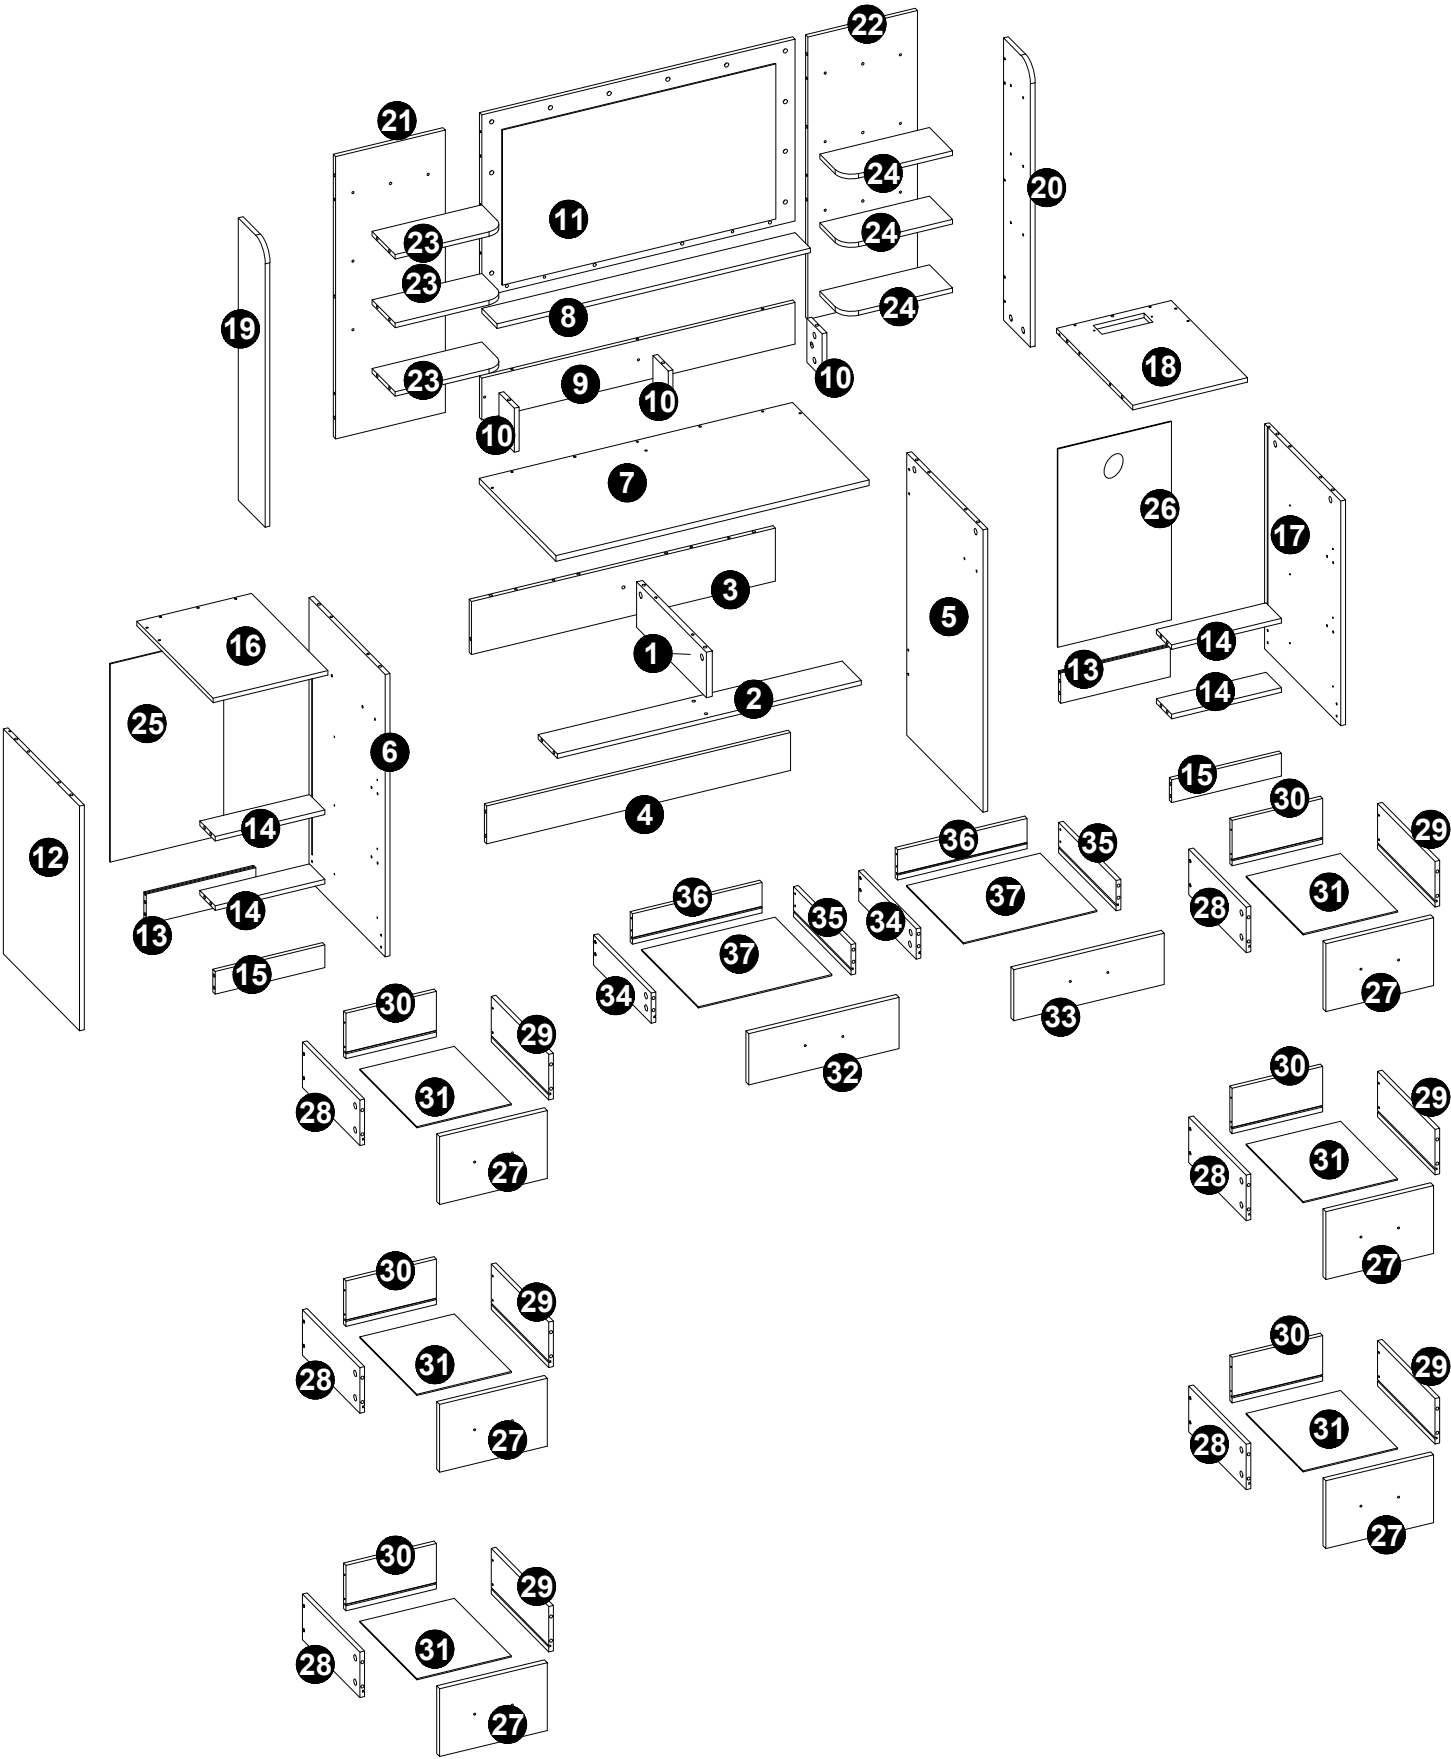
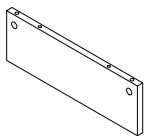
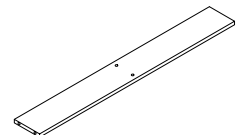
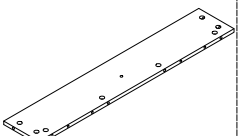
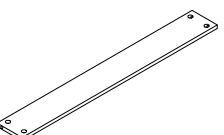
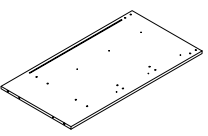
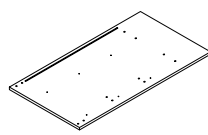
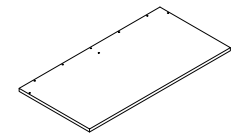
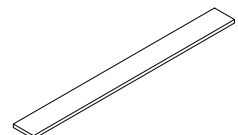
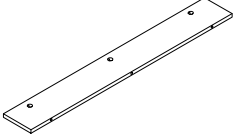
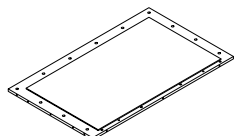
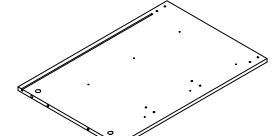




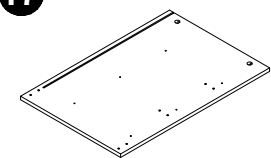
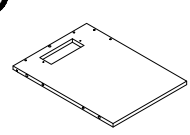
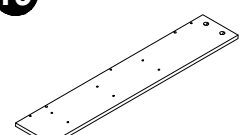
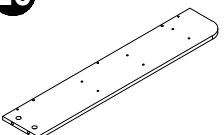
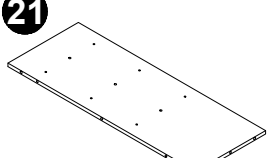
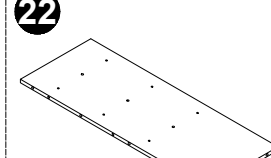


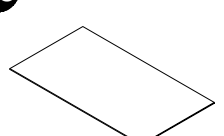
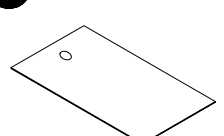
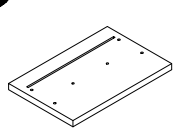



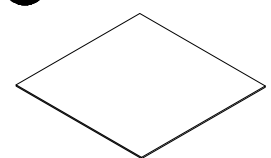
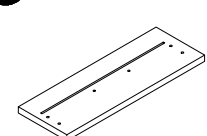
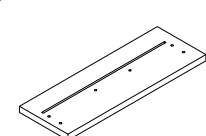


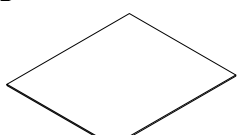
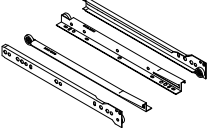


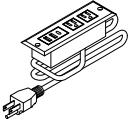

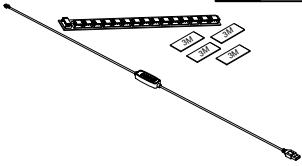







1  X1	2  X1	3  X1	4  X1	5  X1
6  X1	7  X1	8  X1	9  X1	10  X3
11  X1	12  X1	13  X2	14  X4	15  X2
16  X1	17  X1	18  X1	19  X1	20  X1
21  X1	22  X1	23  X3	24  X3	25  X1
26  X1	27  X6	28  X6	29  X6	30  X6
31  X6	32  X1	33  X1	34  X2	35  X2
36  X2	37  X2			

A X150 	B X150 	C X41 	D X8 
E X39 	F X66 	G X1 	I X8 
J X1 	K X12 	L X12 	M X12 
N X82  Ø20mm	O X2 	X1 	

D X8

01

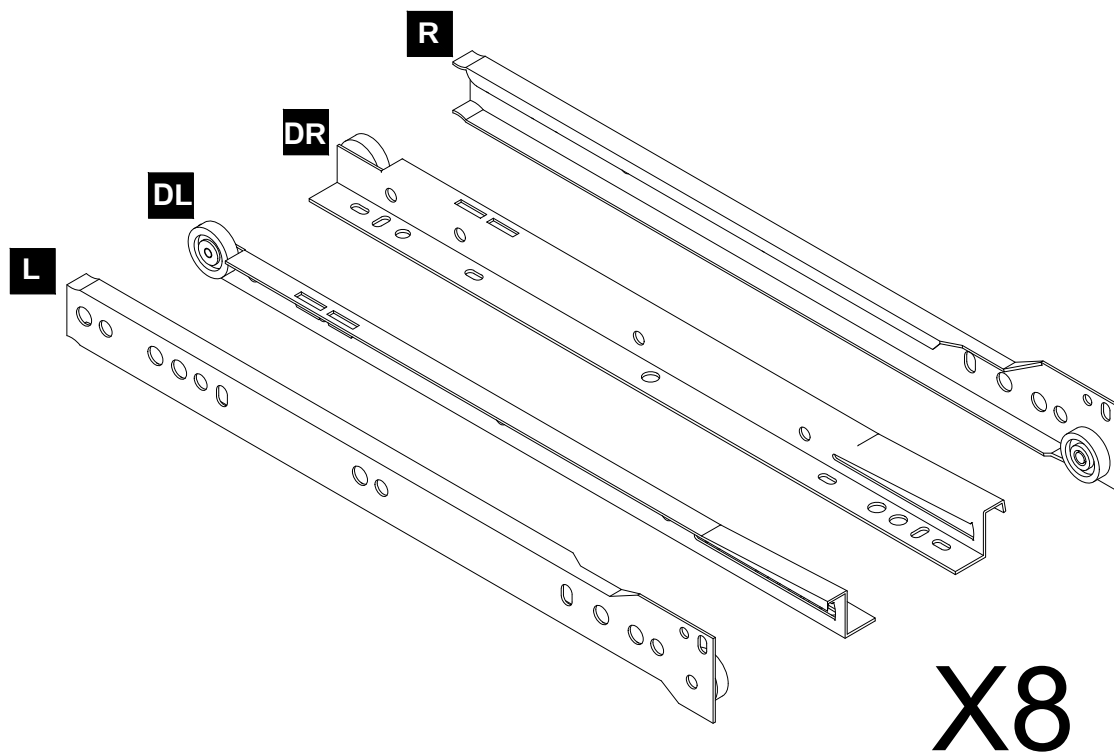


F X4

DL X1


DR X1

02

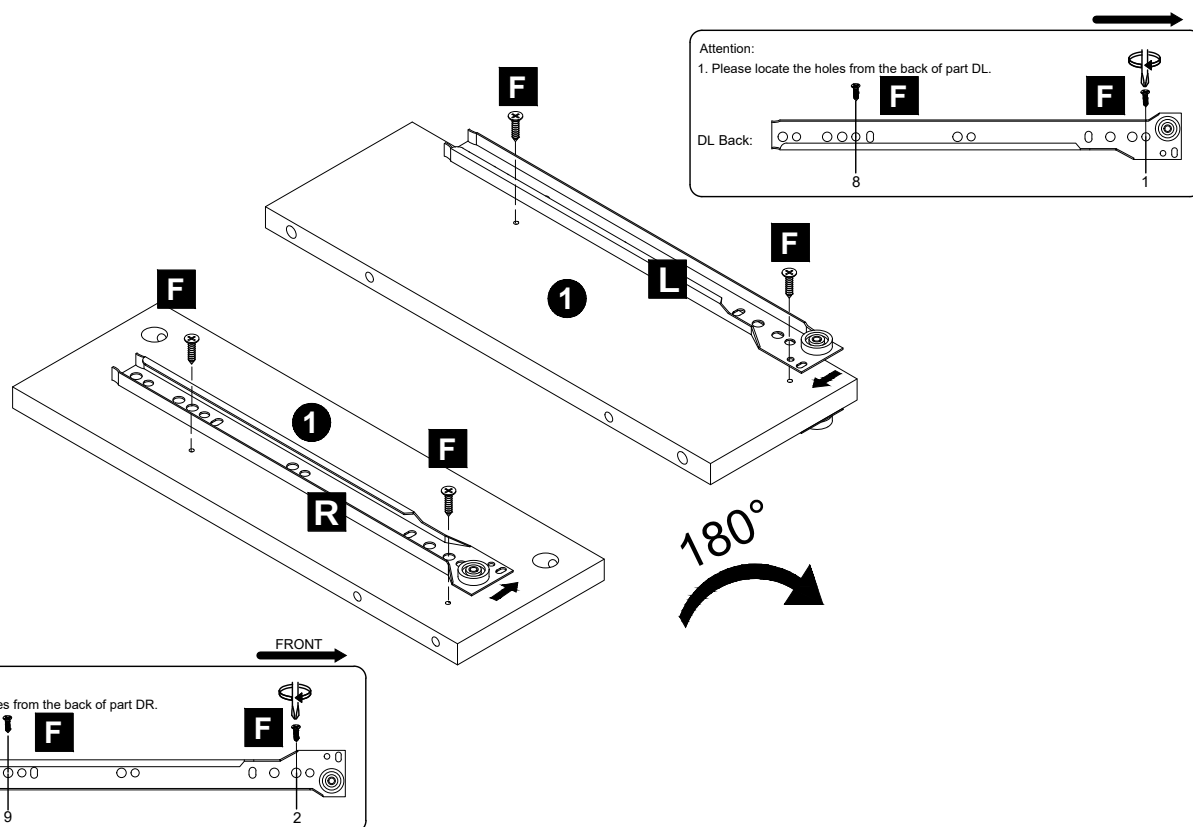


E X2

03

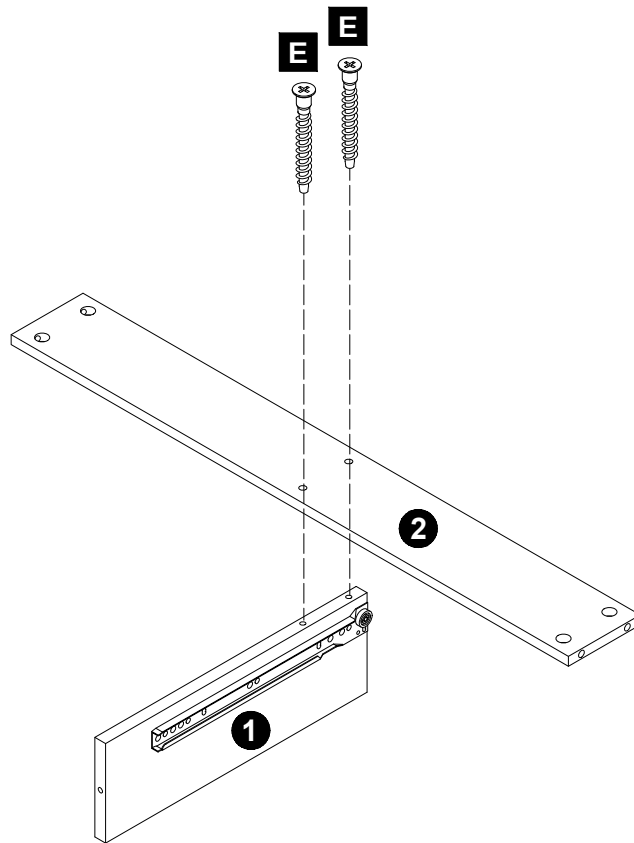


E X1

04

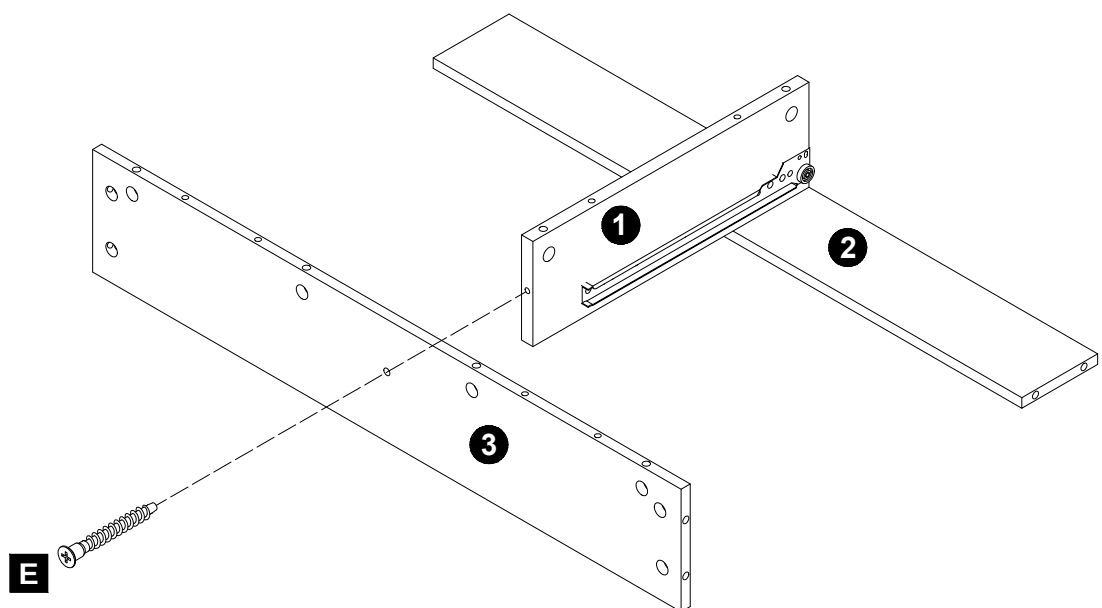

A X16

05

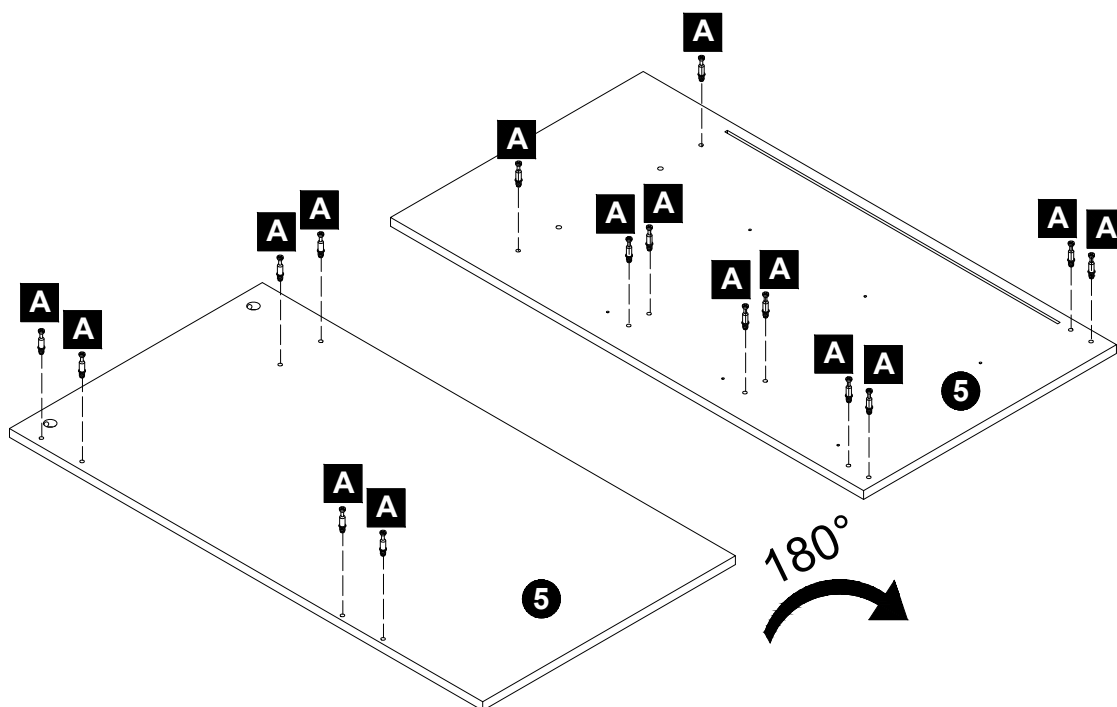


F X8



DL X3

DR X1



06


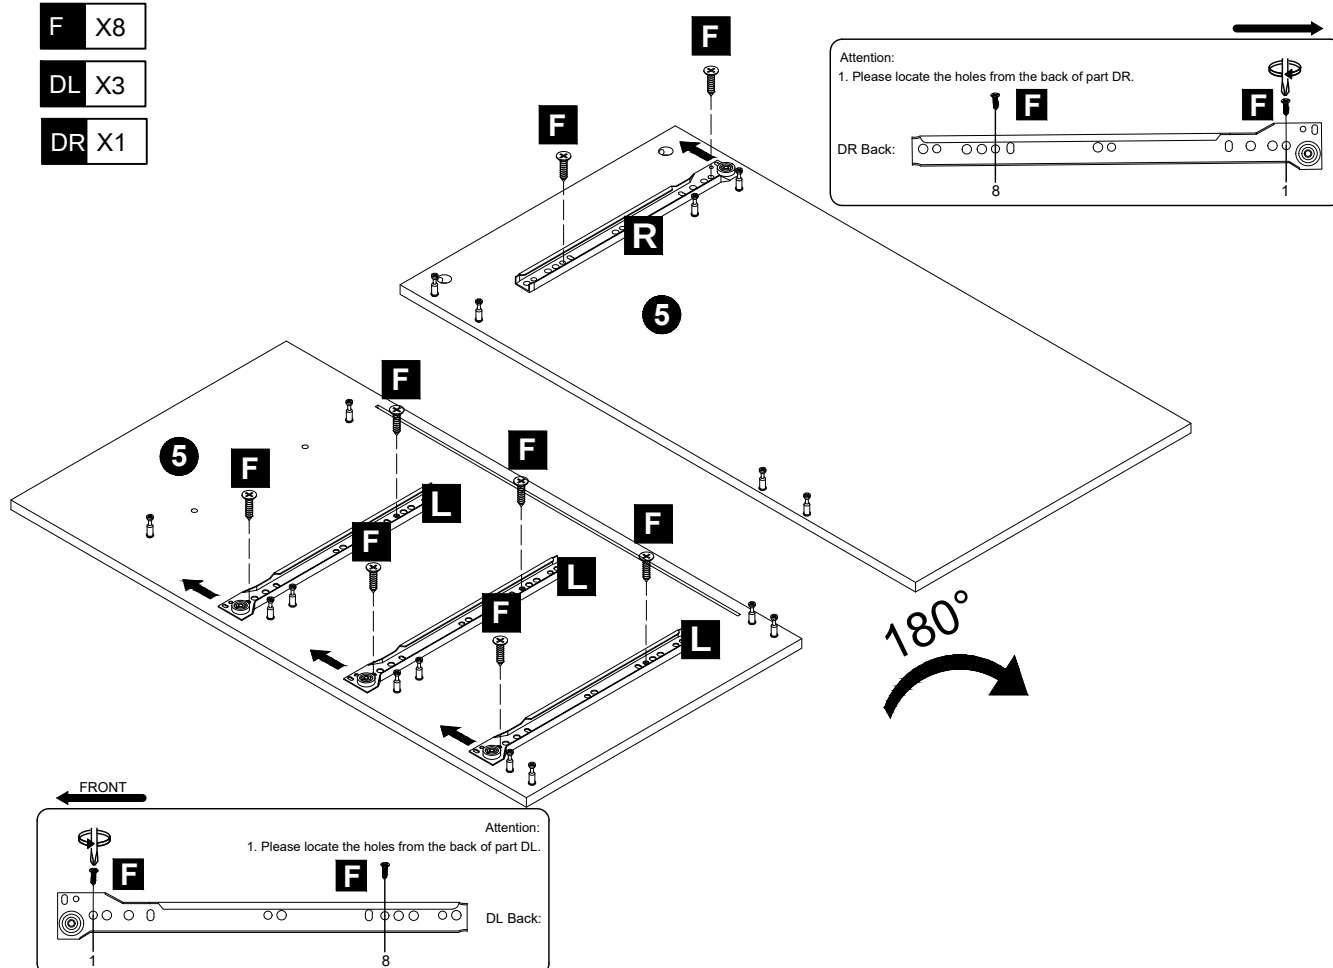


B X4

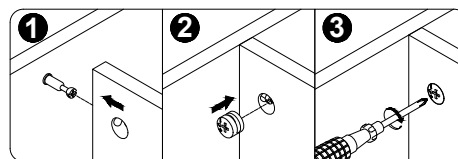
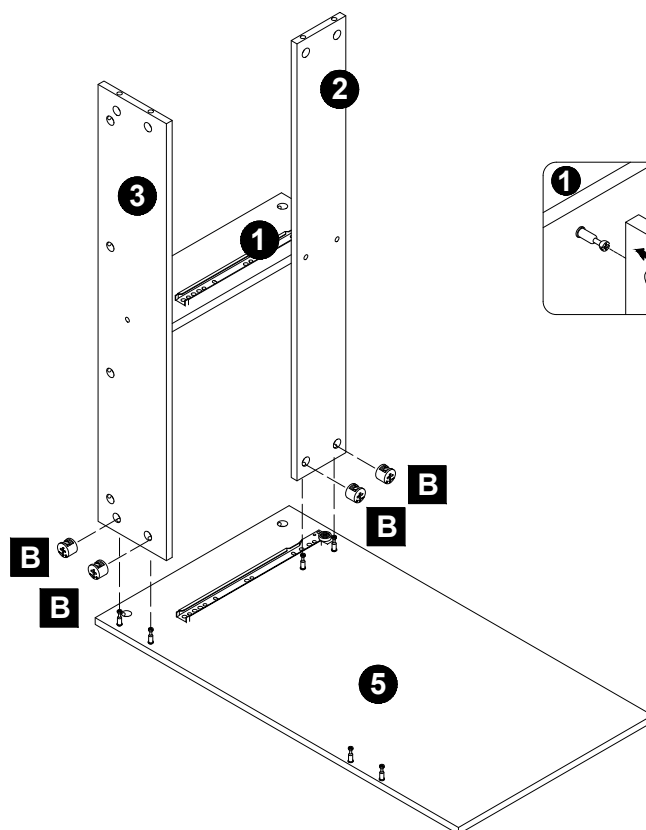


B X2

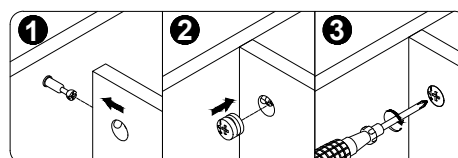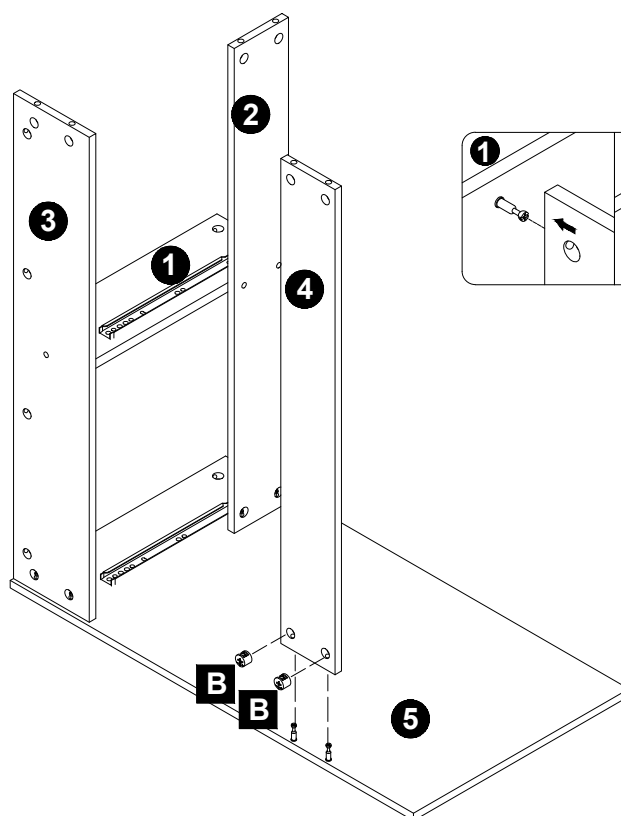


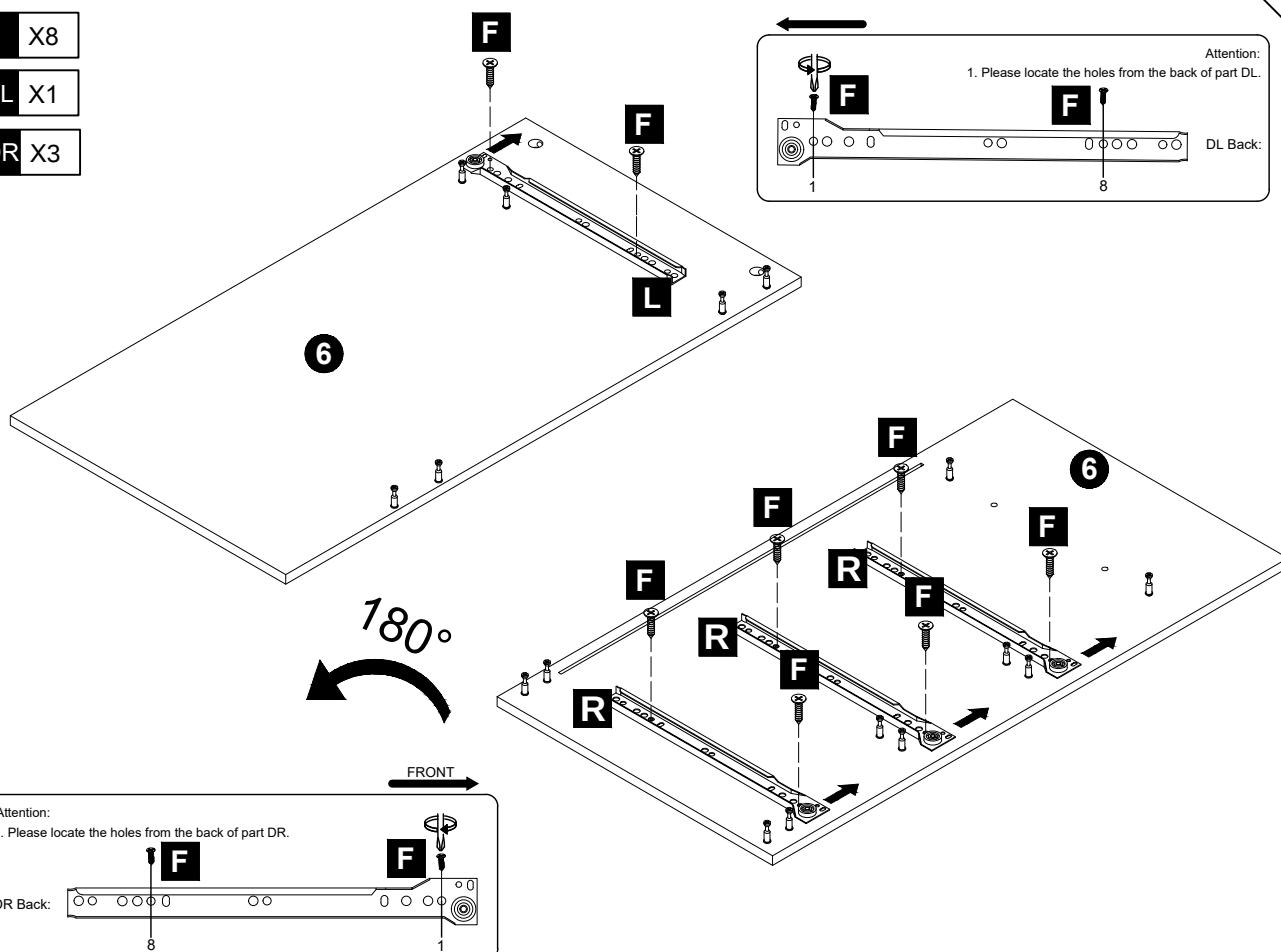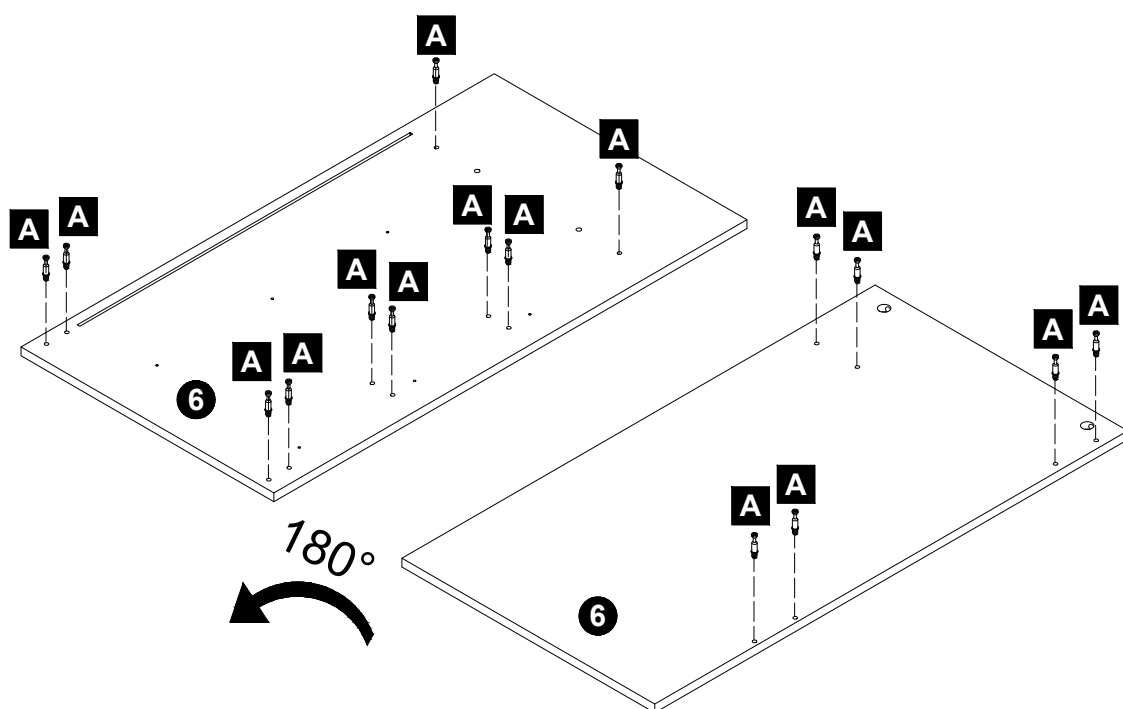


B X6

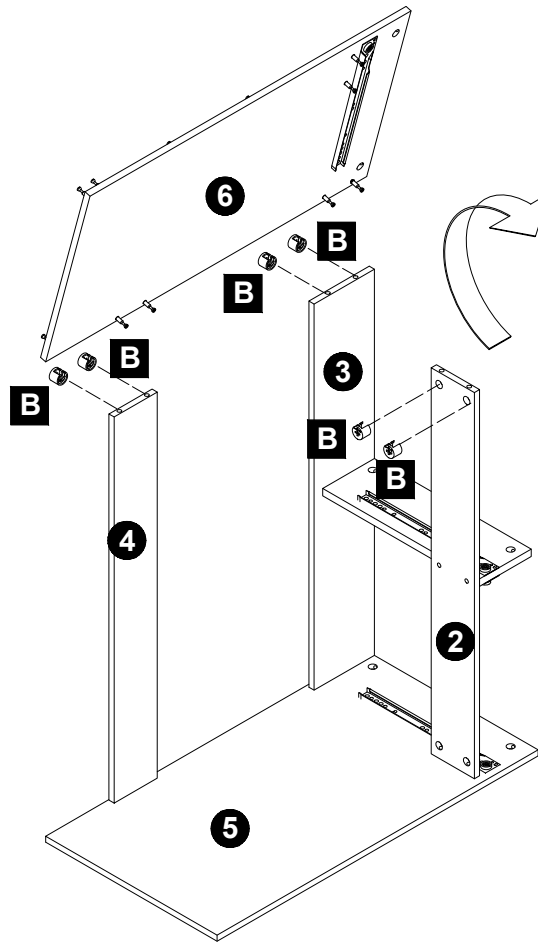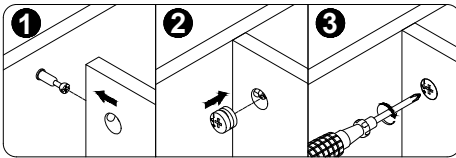



C X10

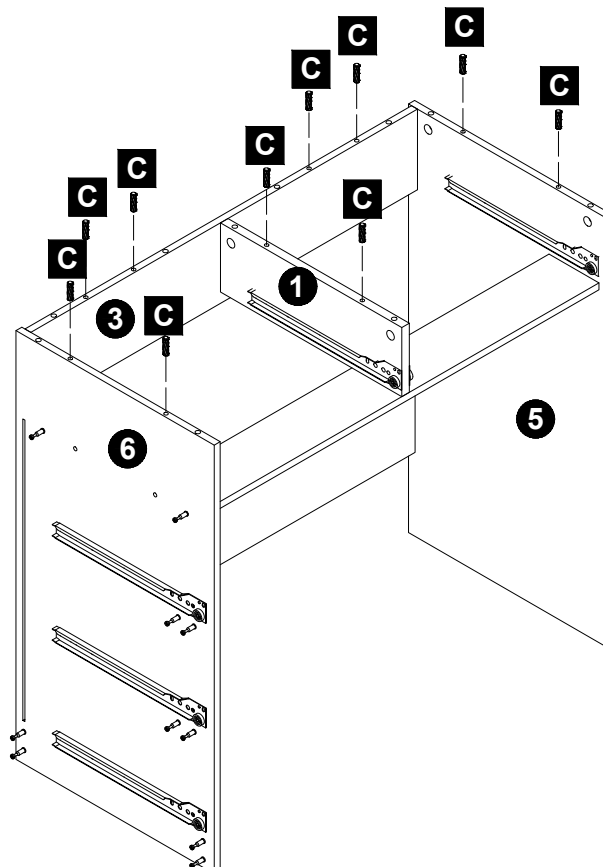

A X10

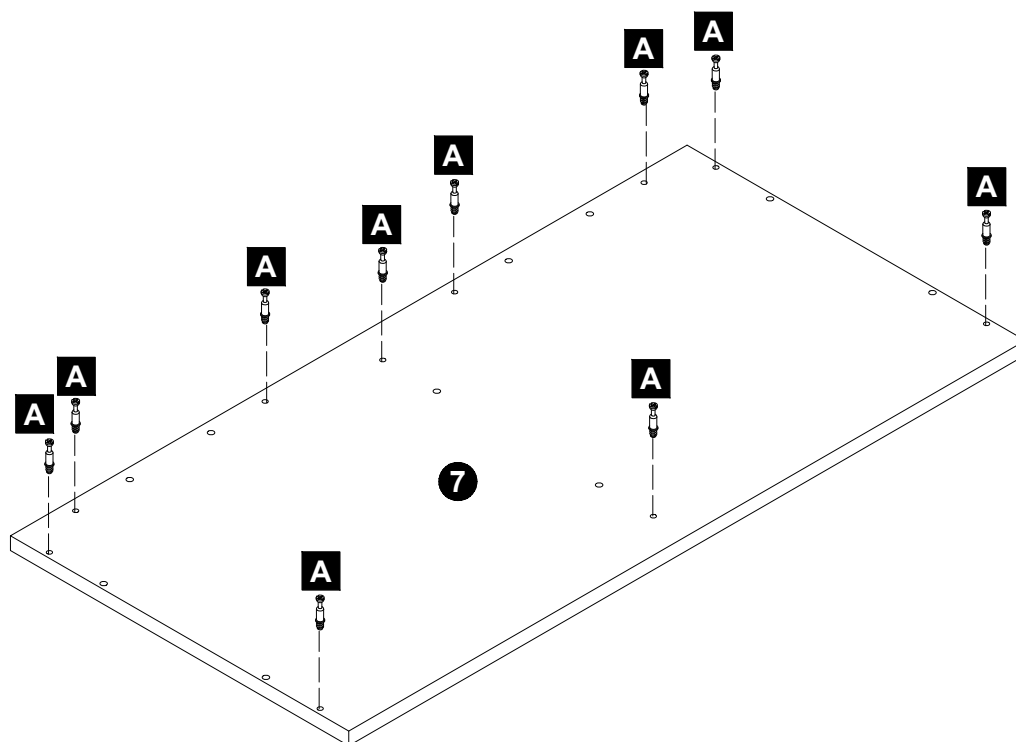


B X10

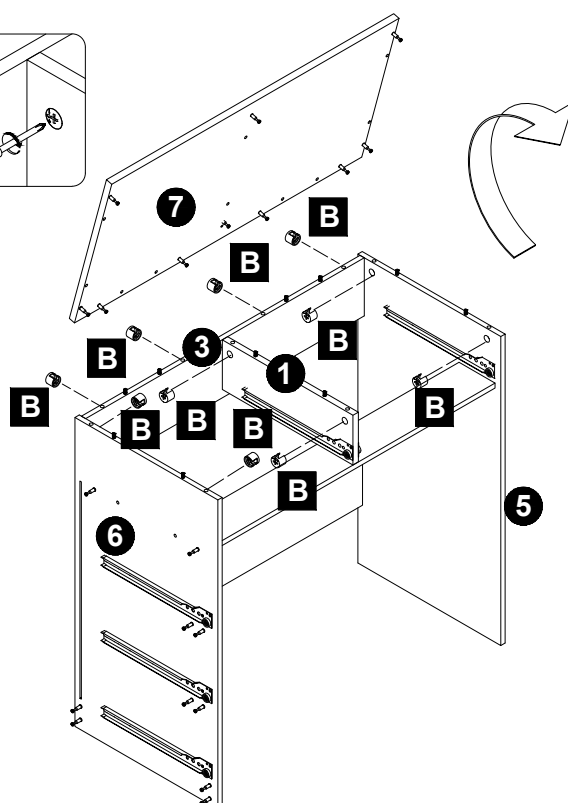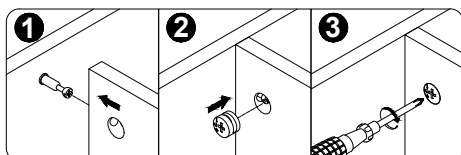

A X6


15

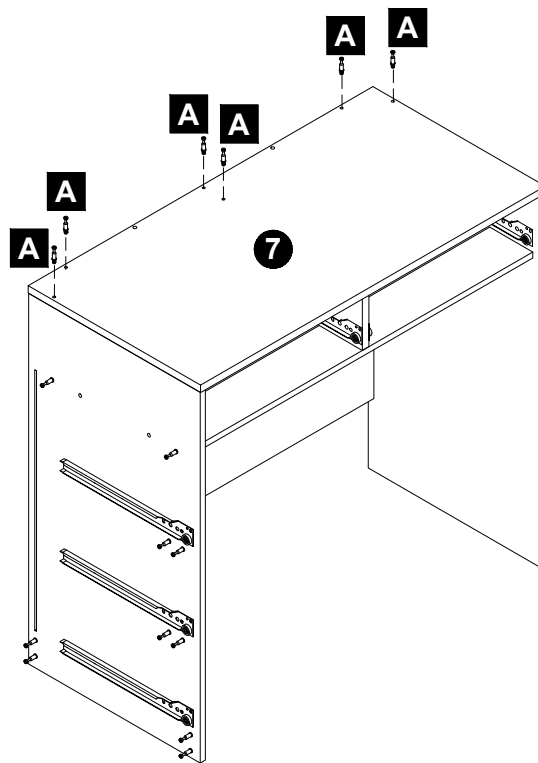

A X6


C X7

16

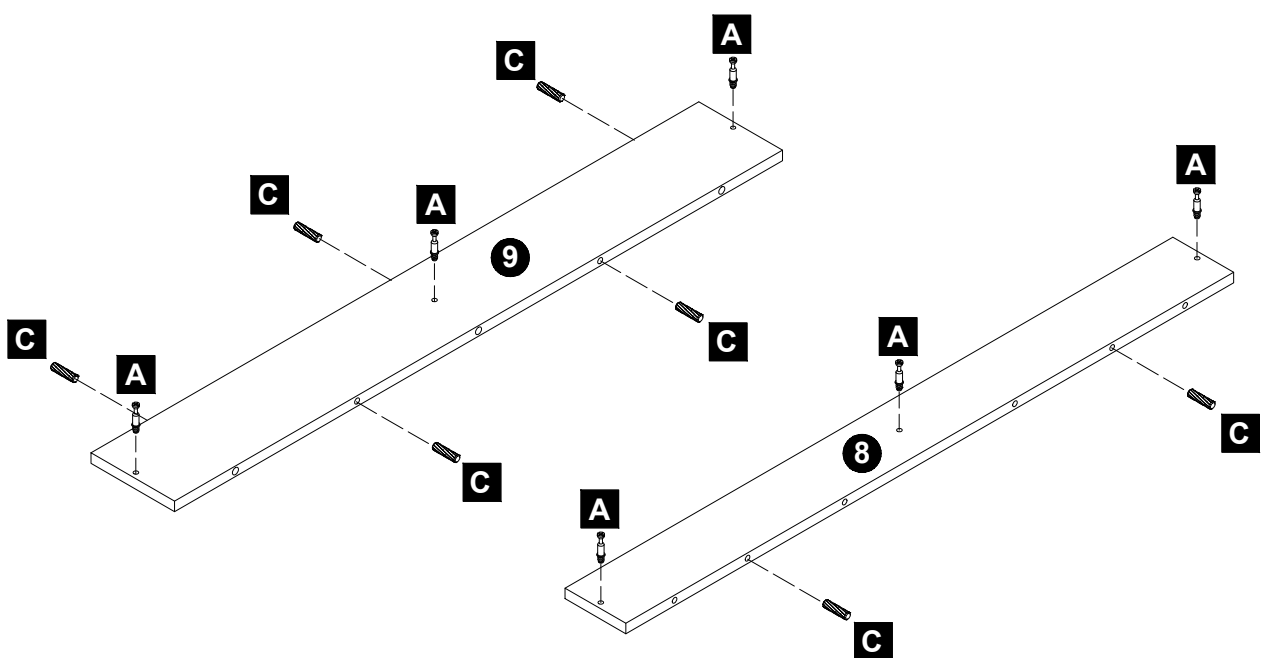


B X3

17


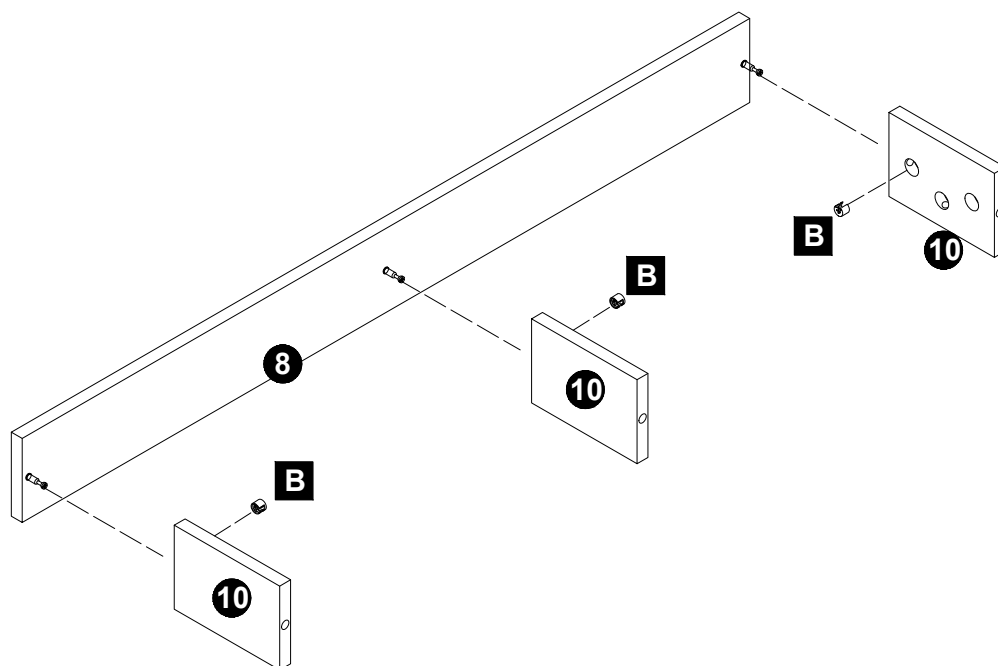


A X6

18

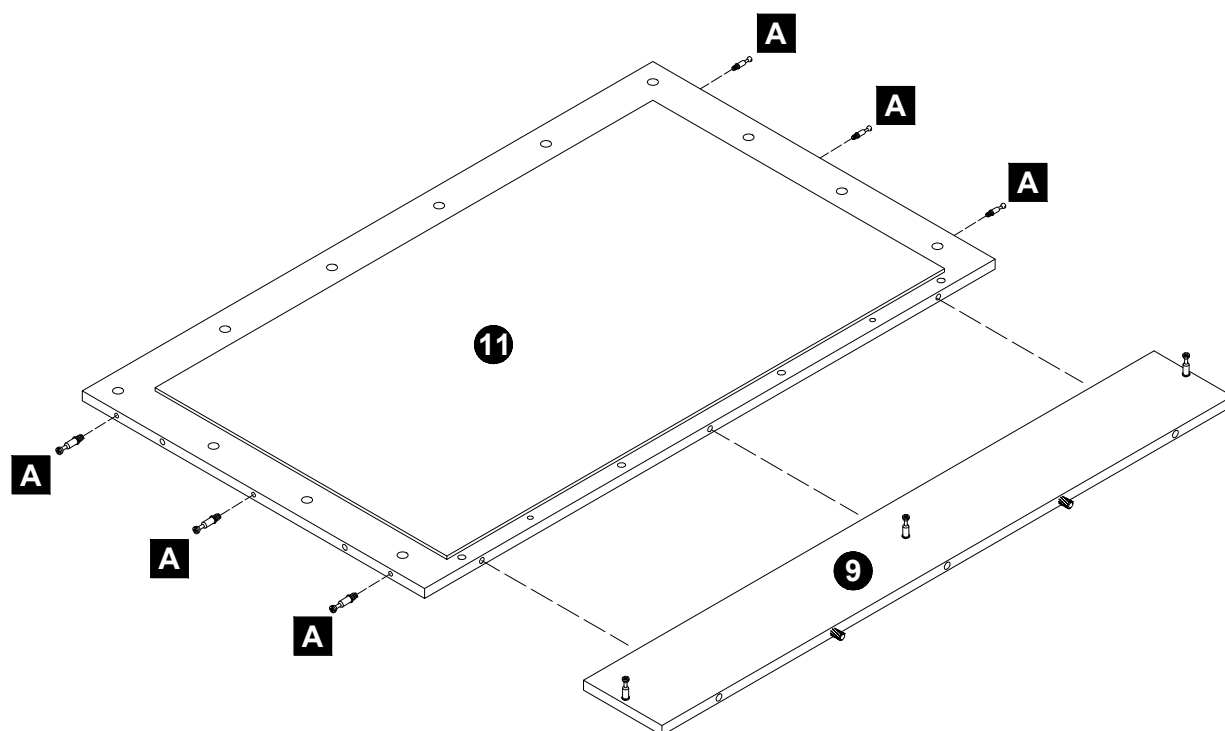


B X3

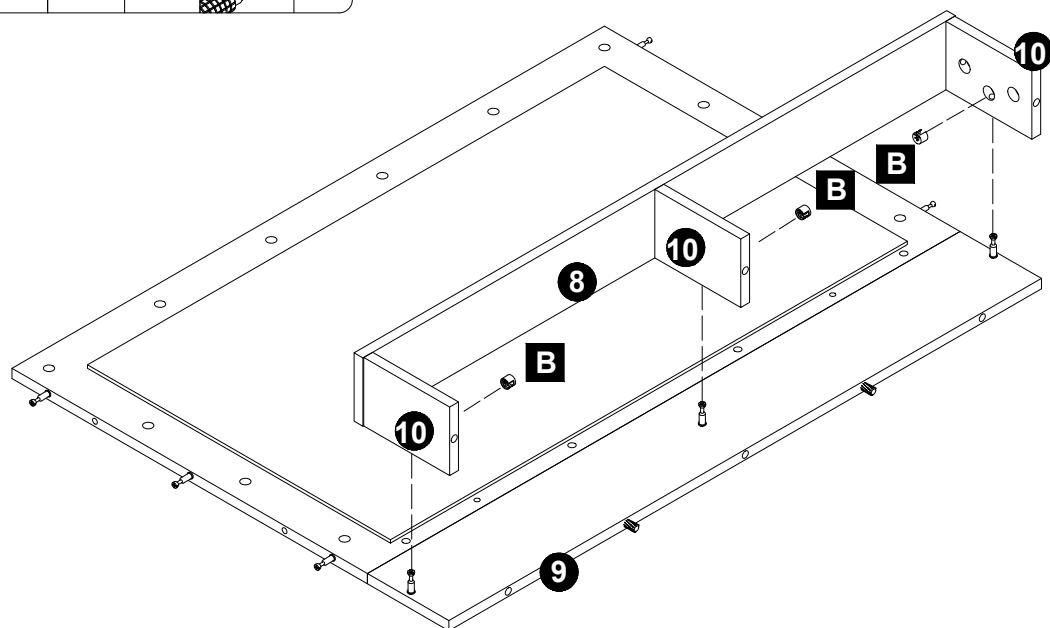
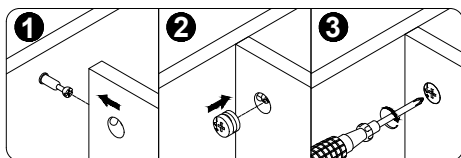


E X4



Note that it requires two people to install

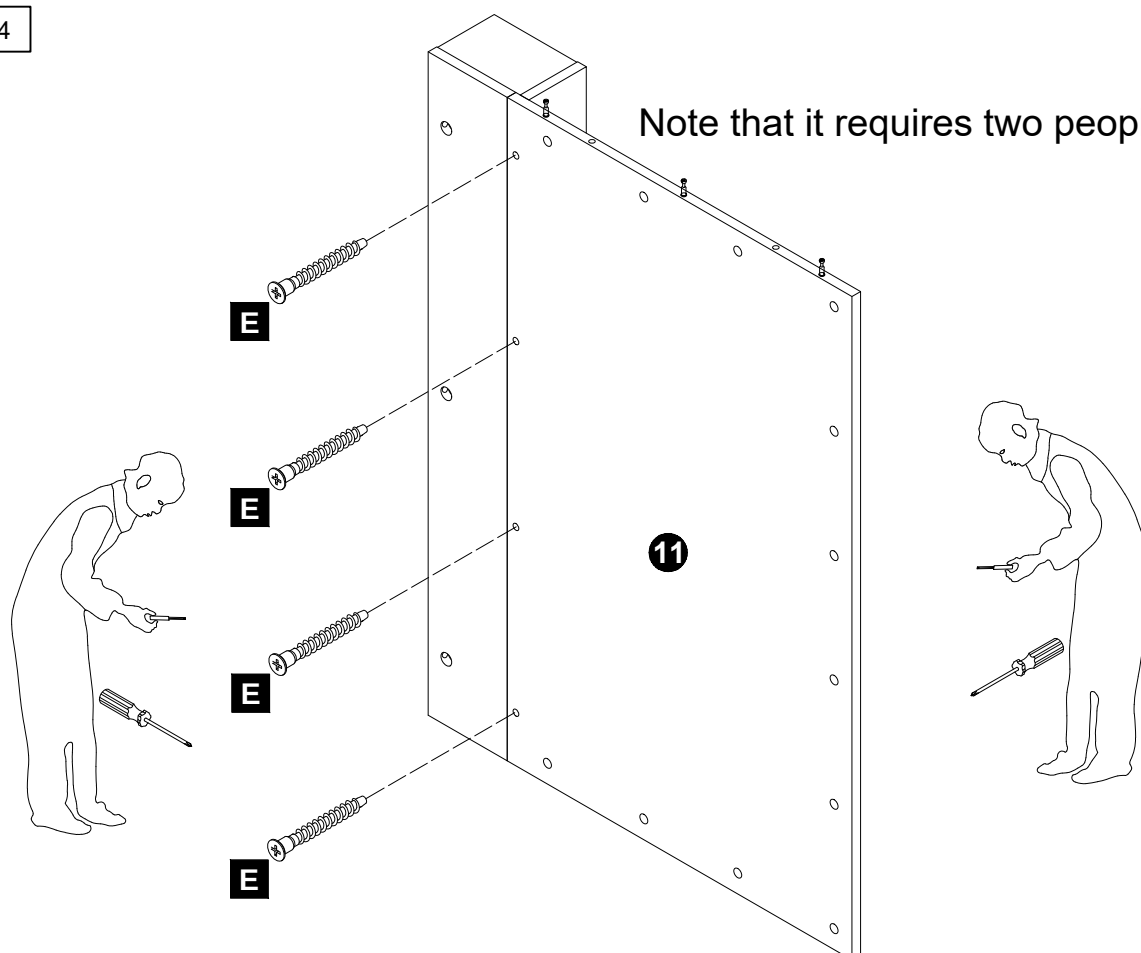


B X3

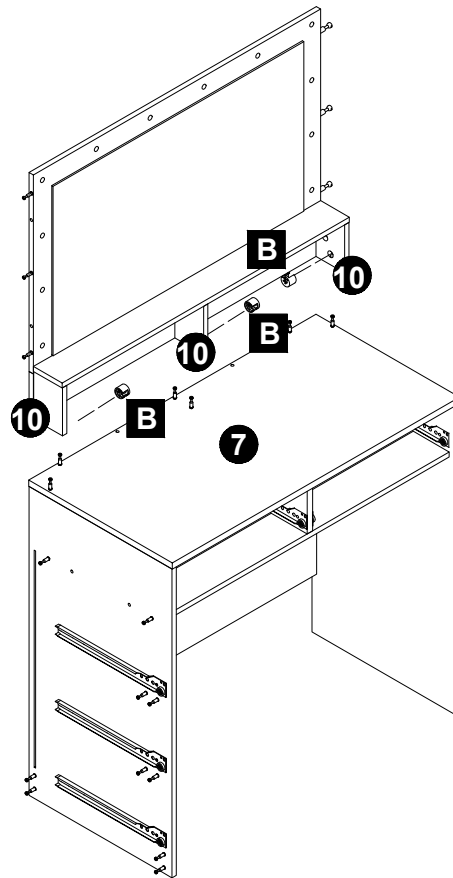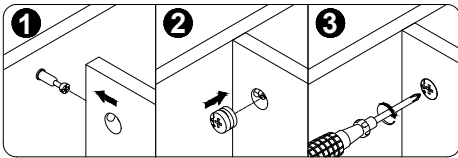

B X3

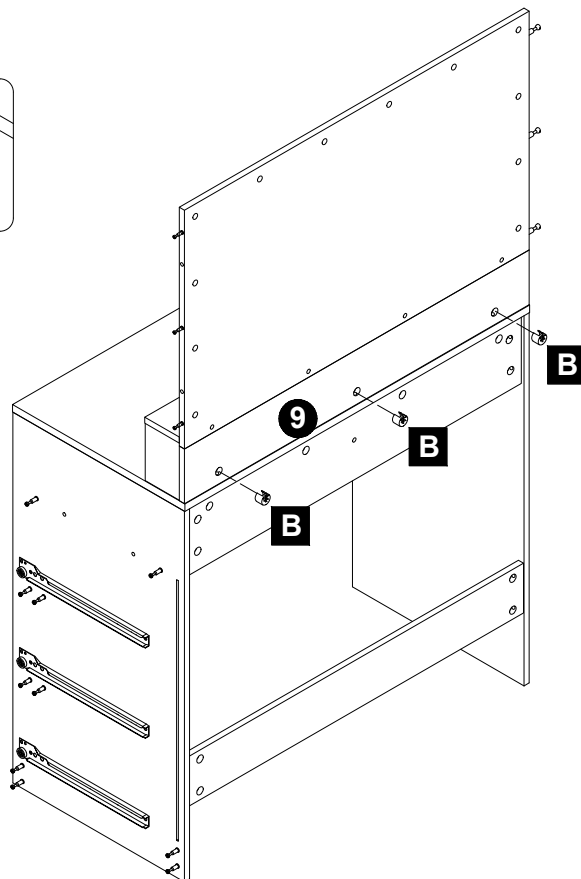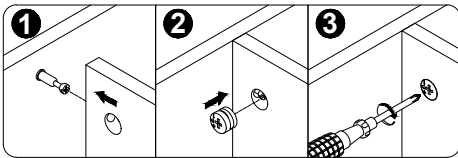



A X8

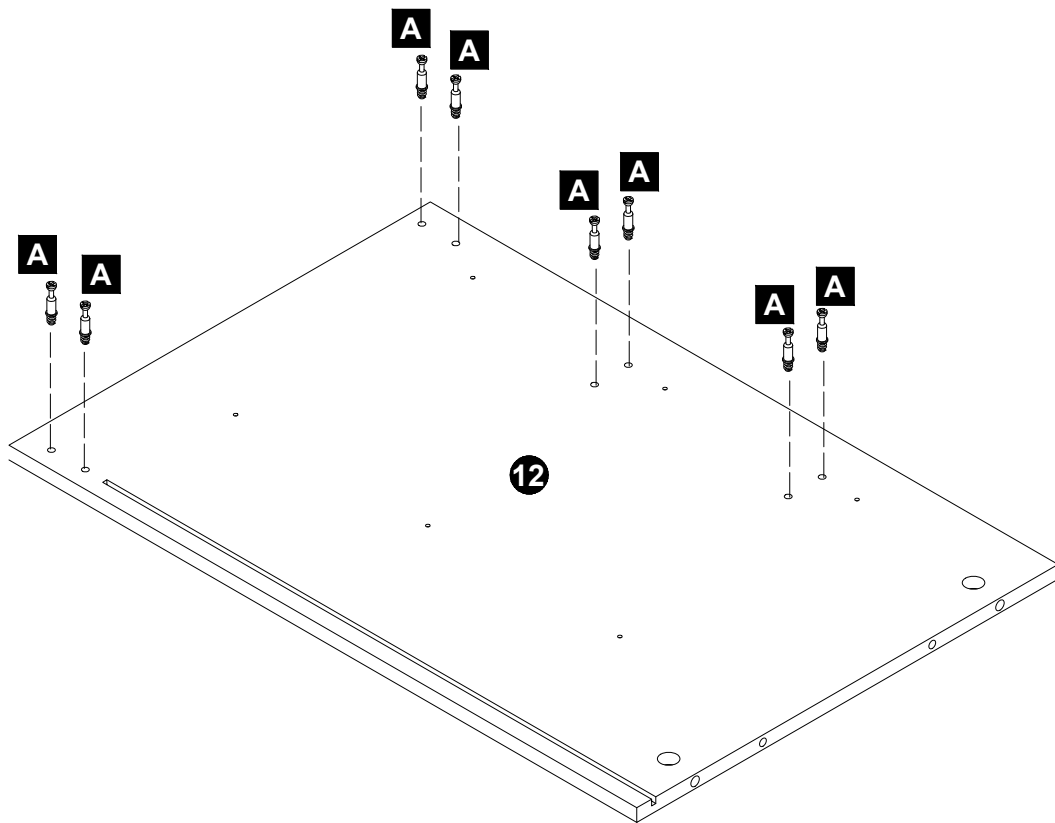



C X2

F X6



DL X3

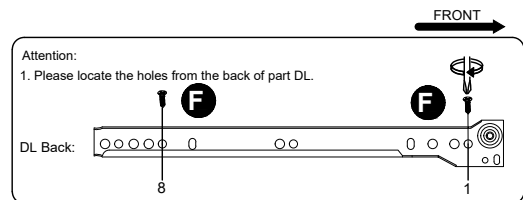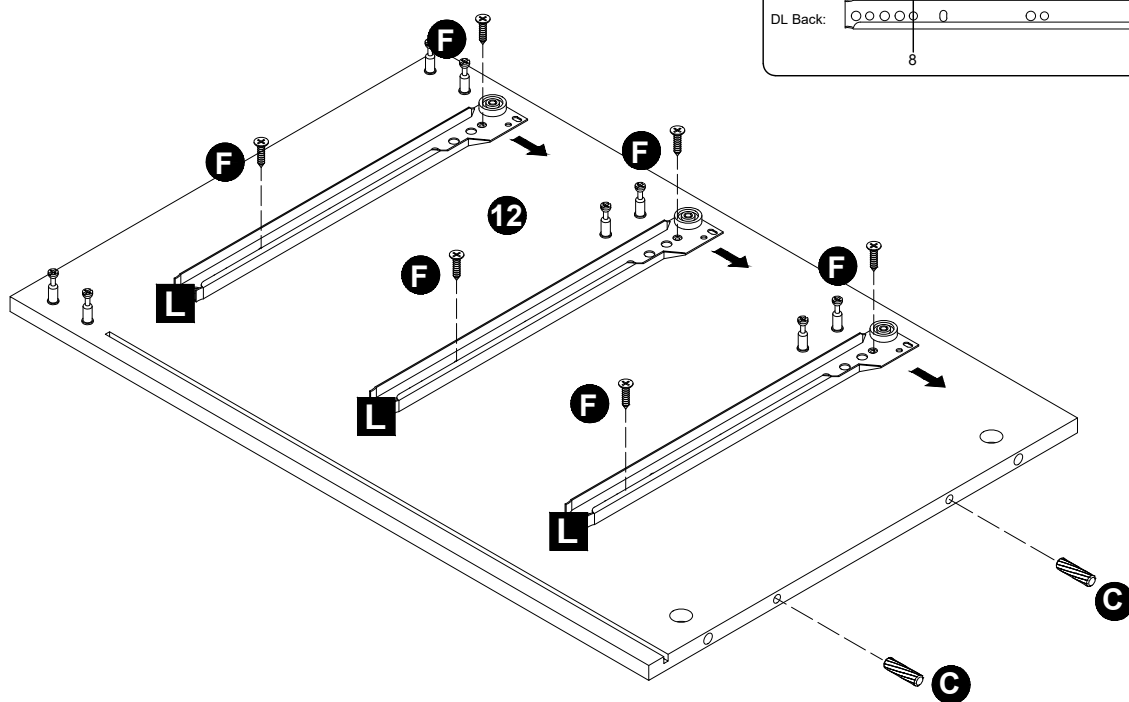

B X2

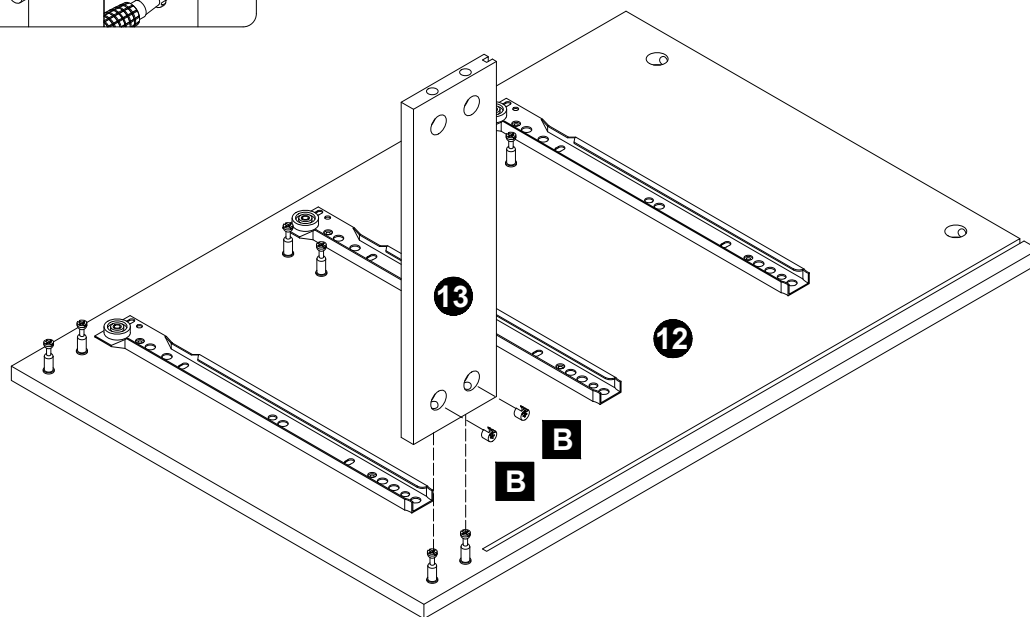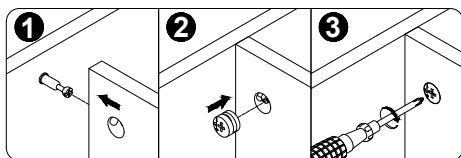


B X6

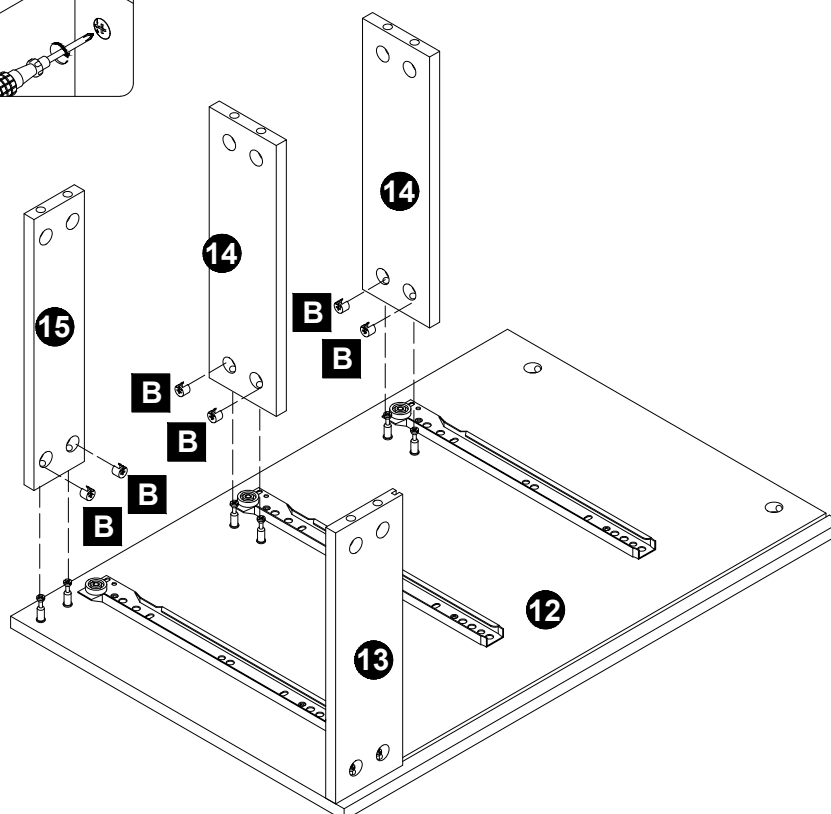
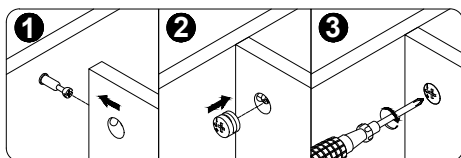


A X6


C X2

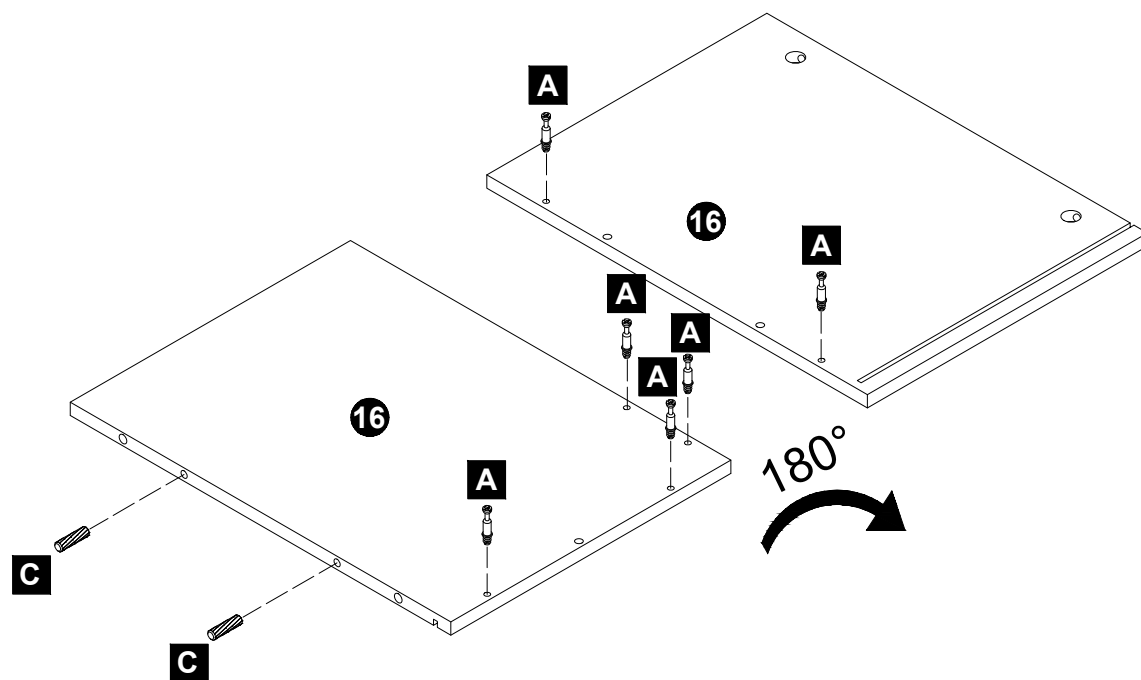



B X2

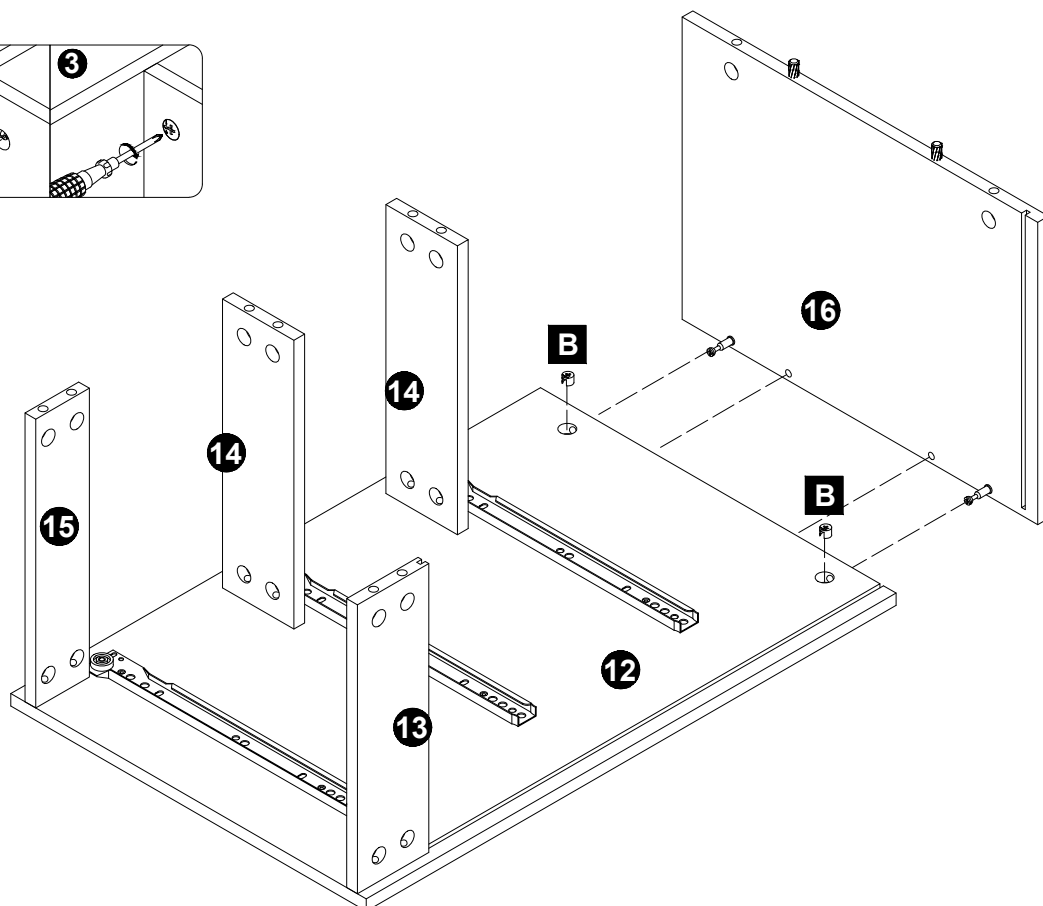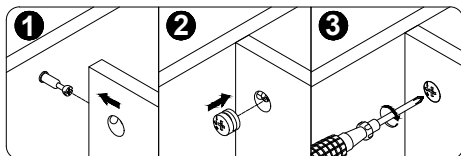



- A X8
- C X6

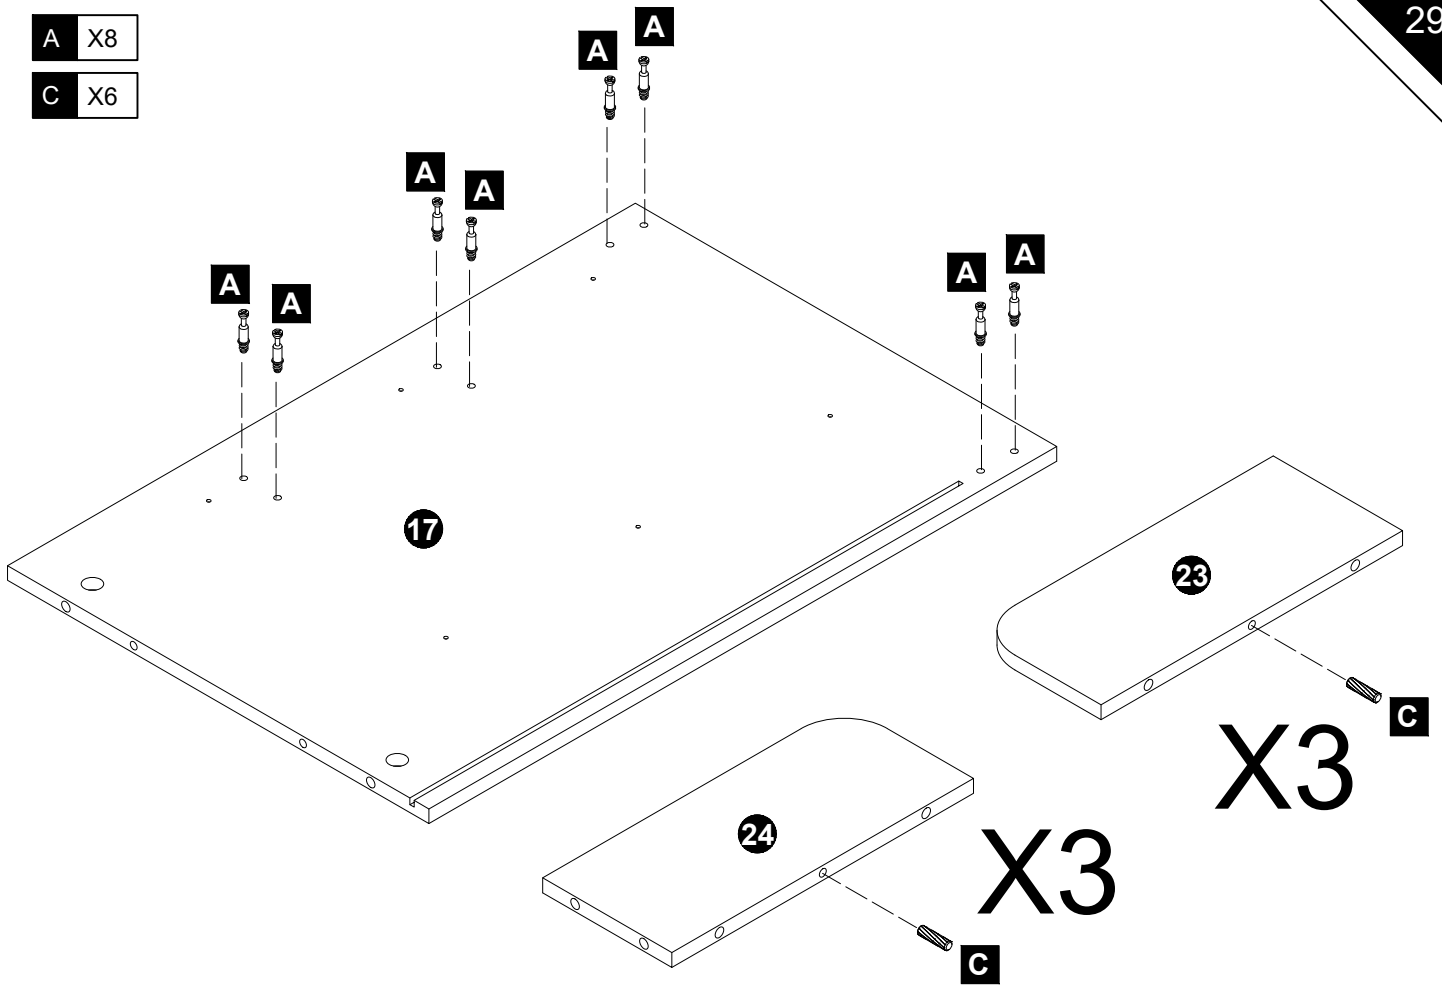



- C X2
- F X6
- DR X3

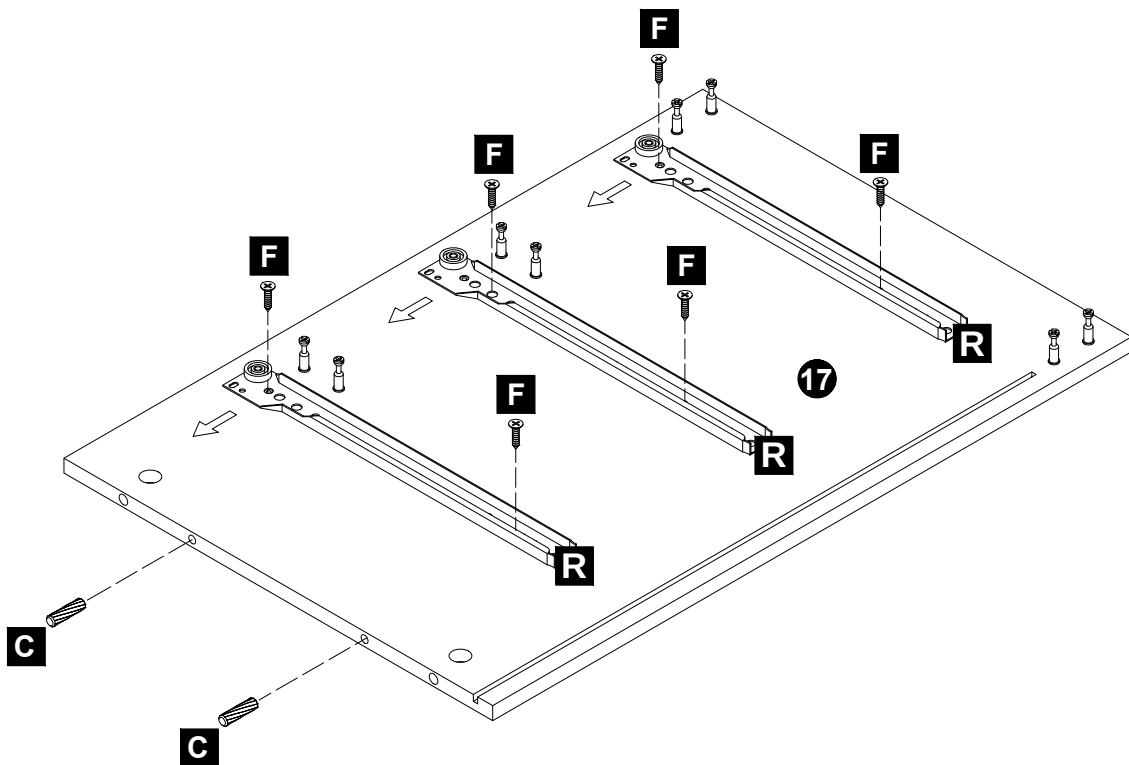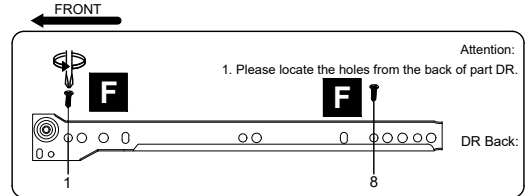

B X2

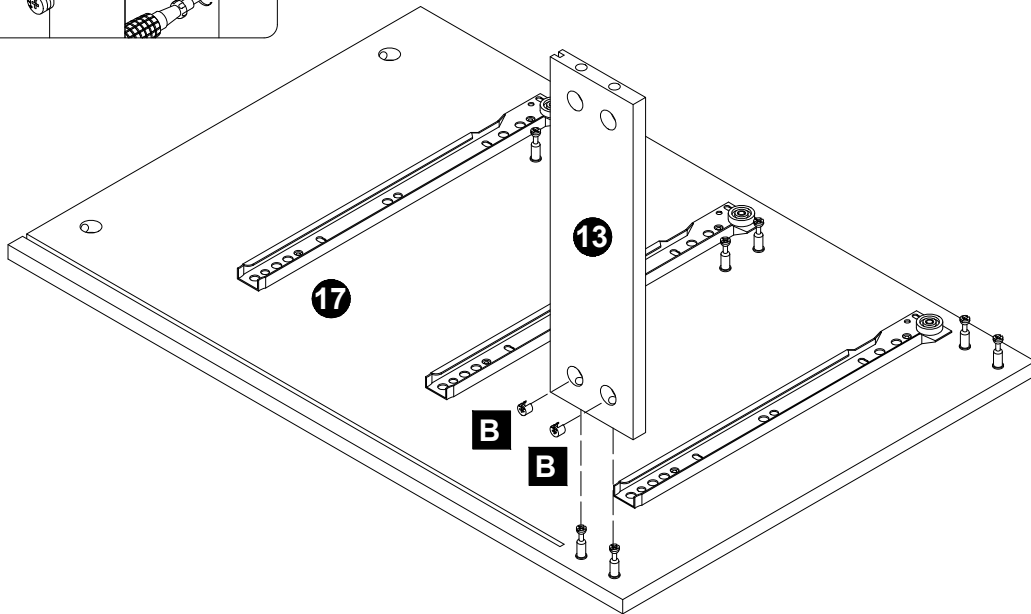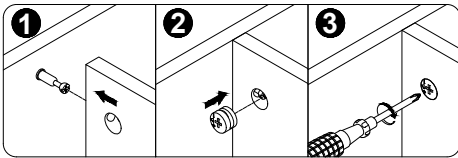


B X6

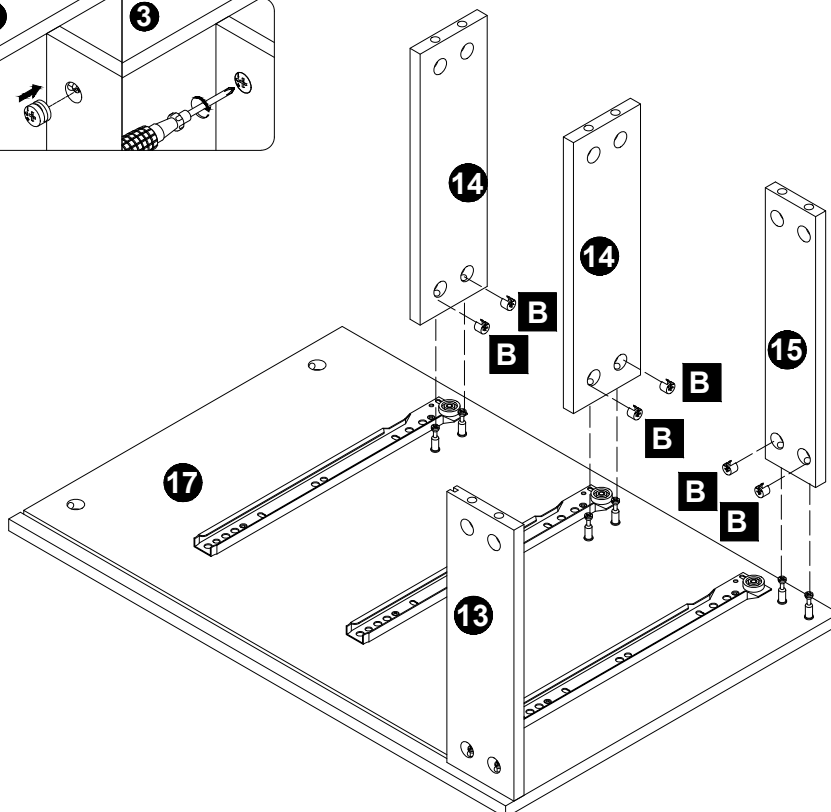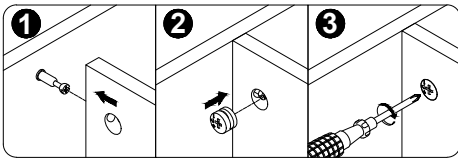


A X6

C X2

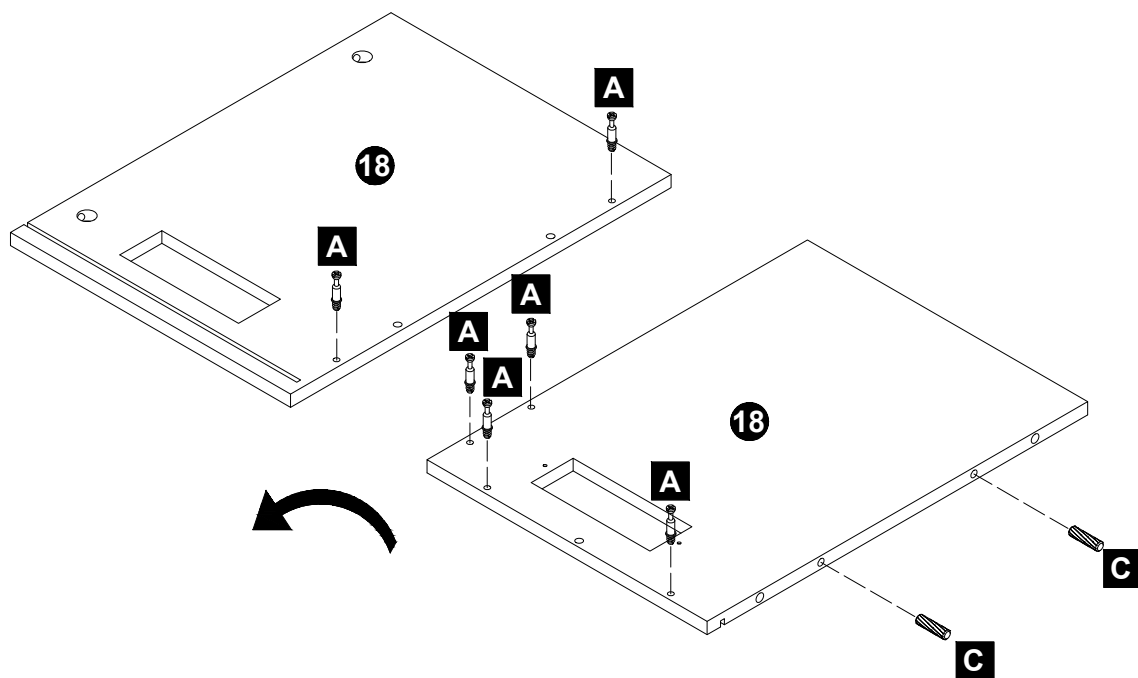


B X2

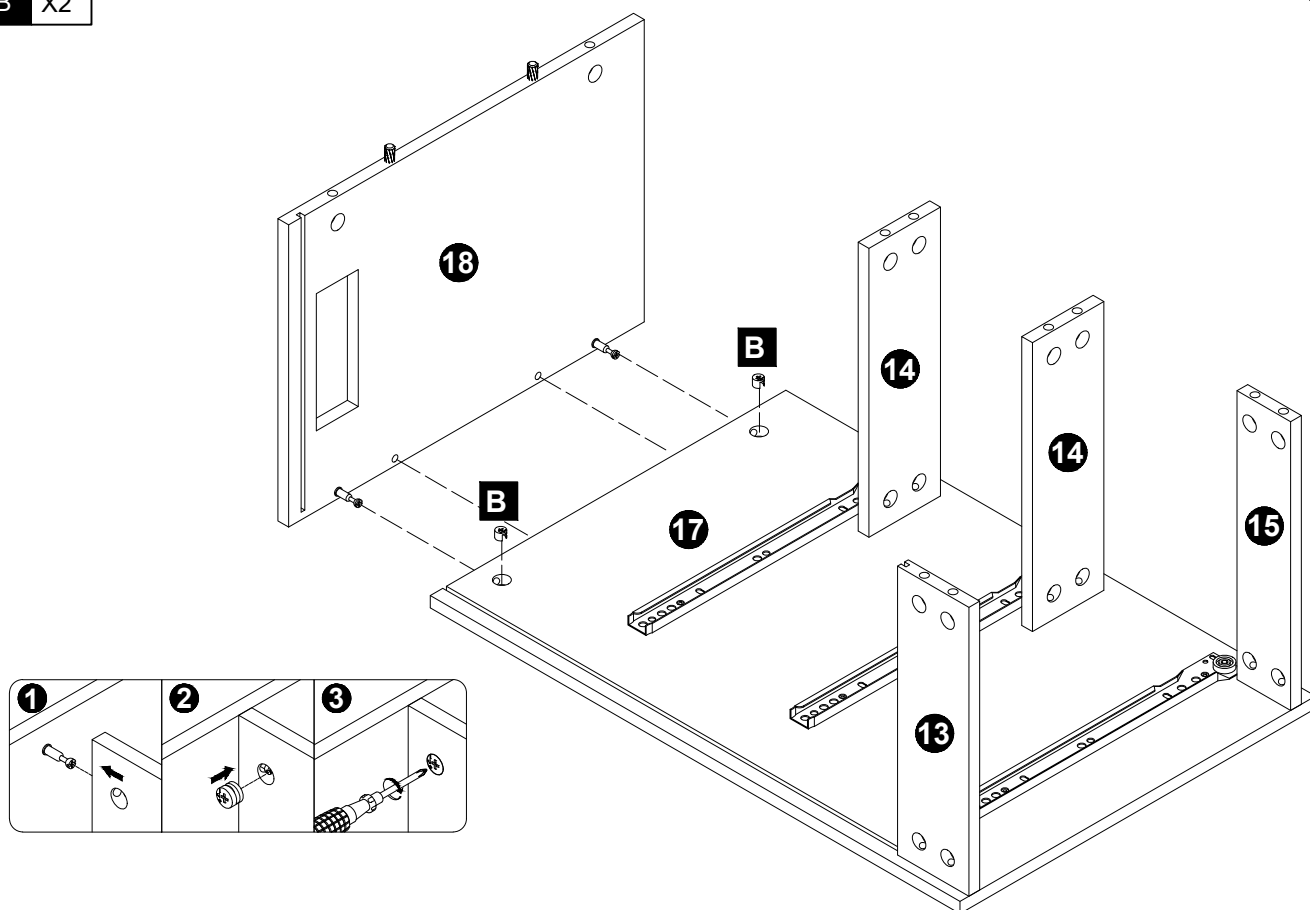

A X18


35

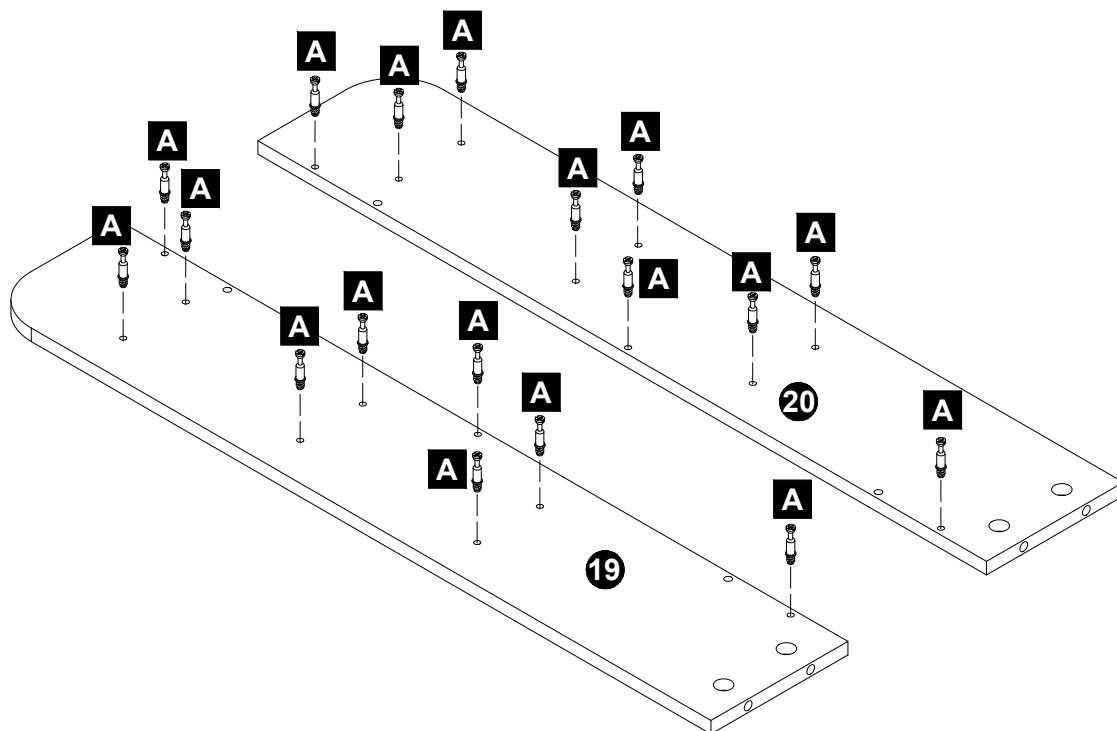



A X12

C X10



36

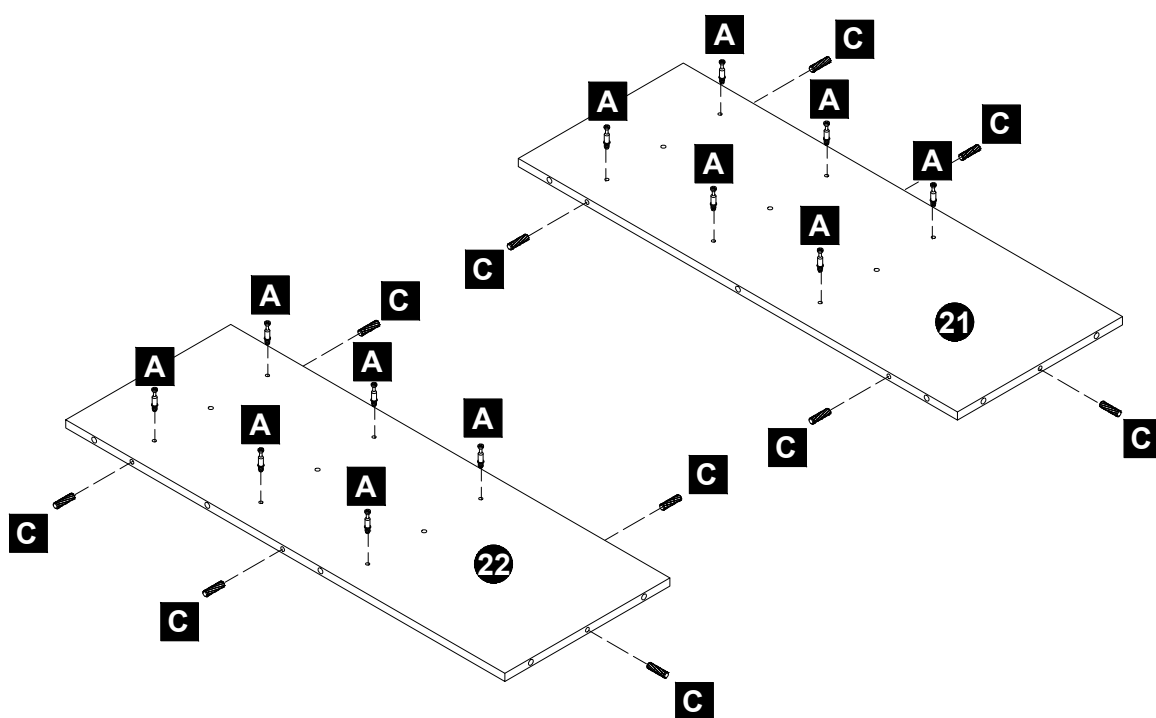



B X6

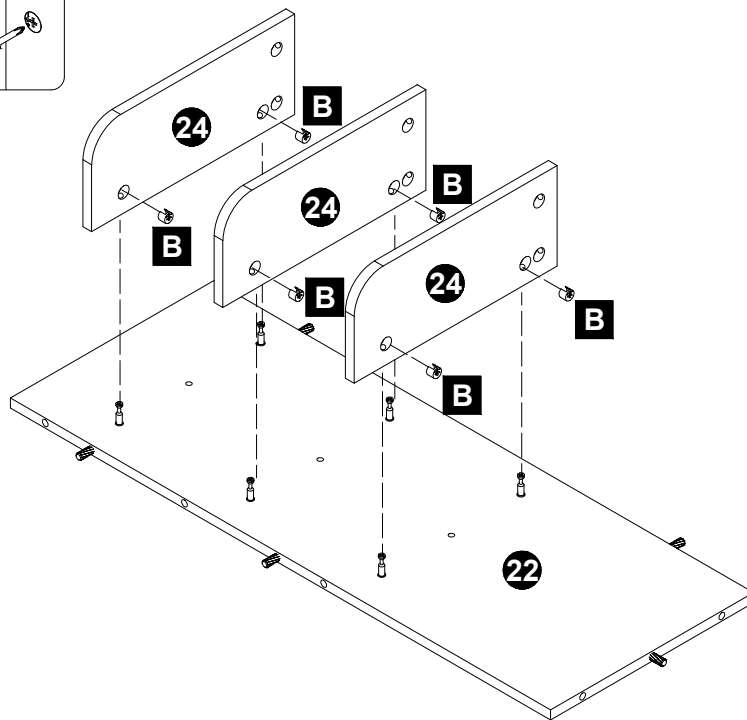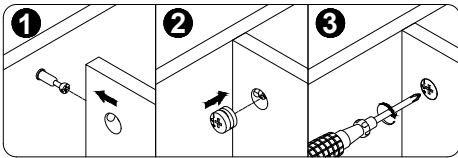



B X6

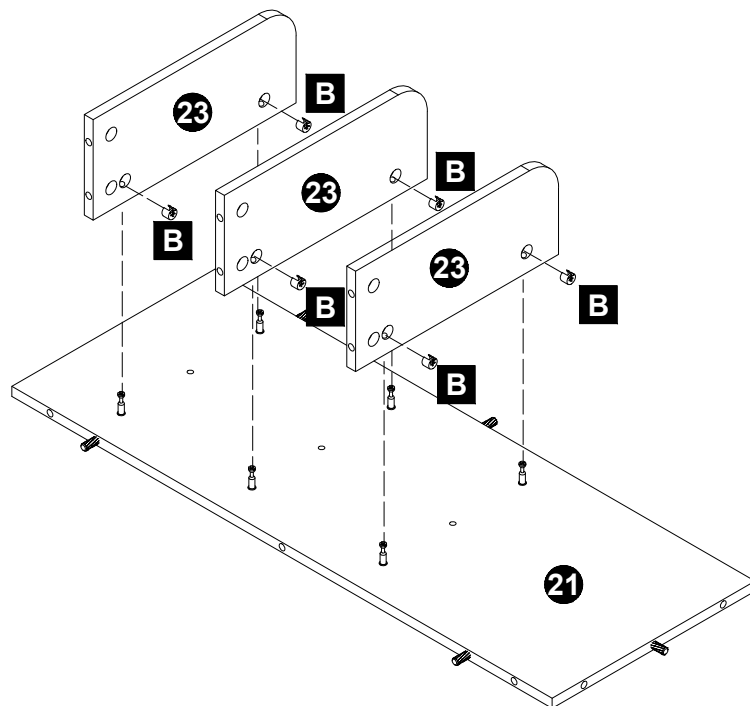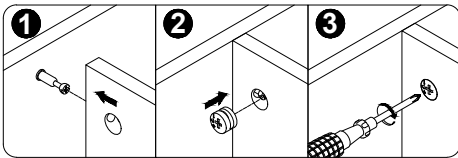



B X6

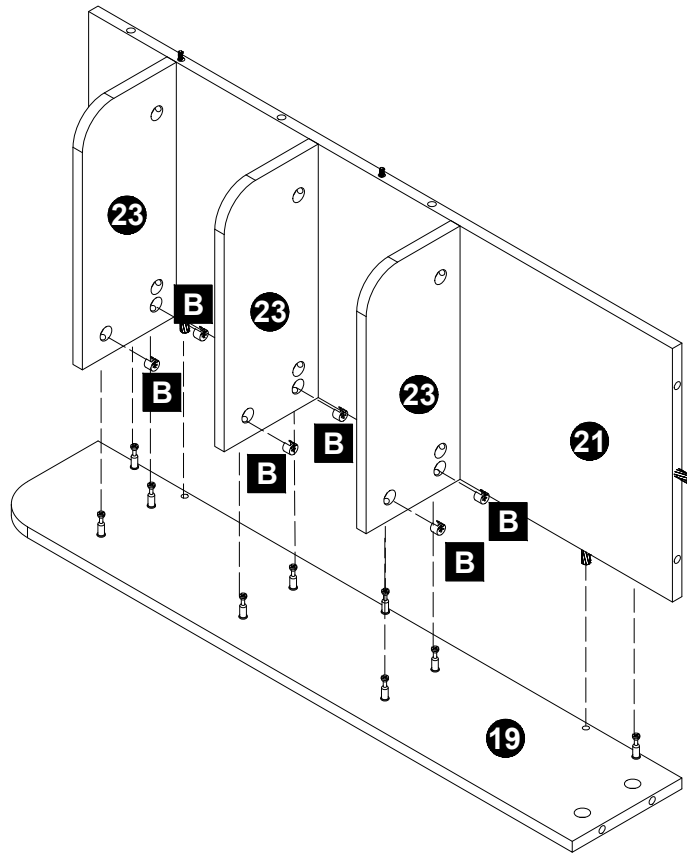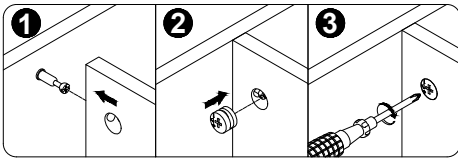



B X3

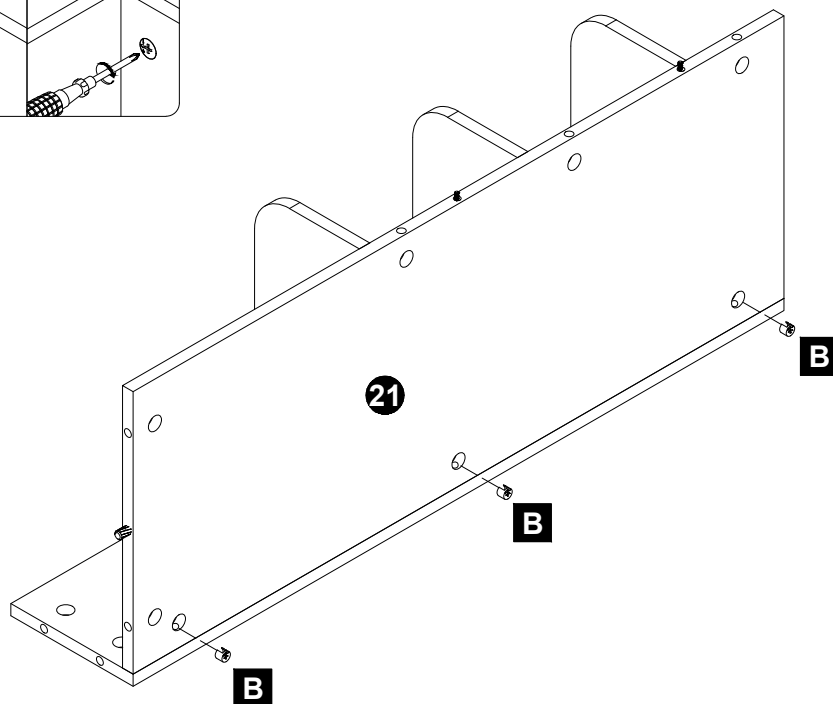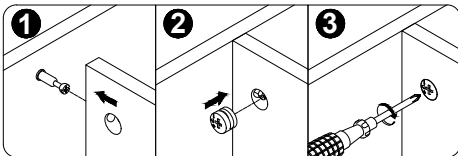




B X6

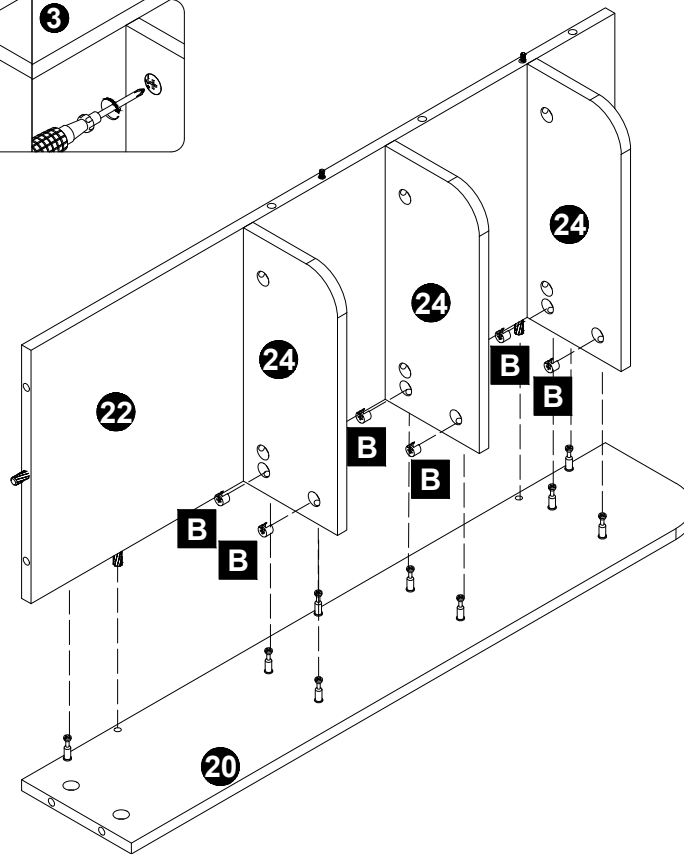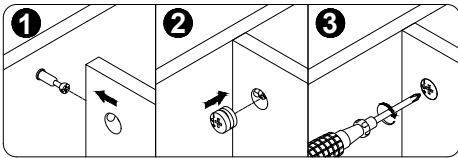




B X3

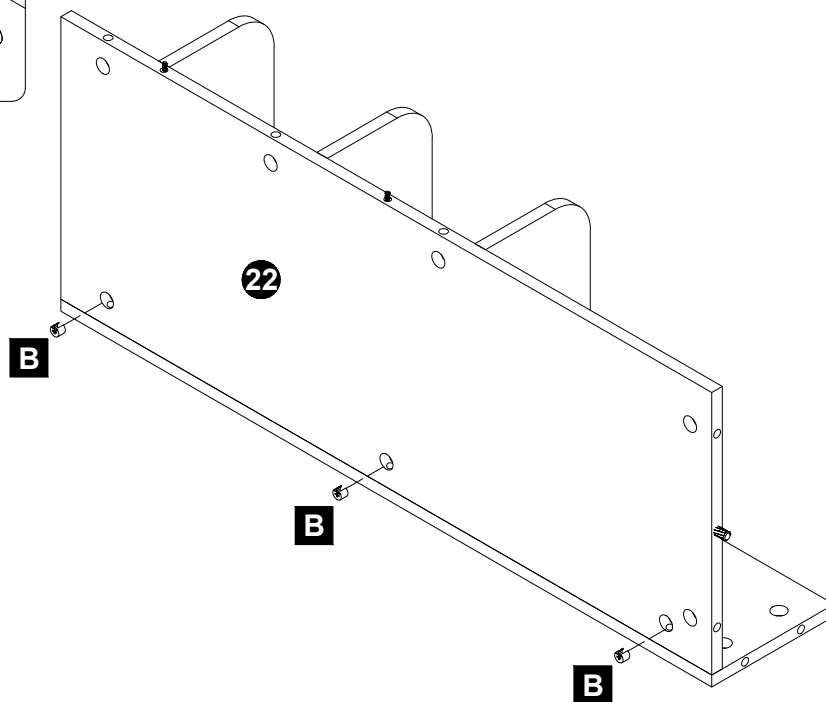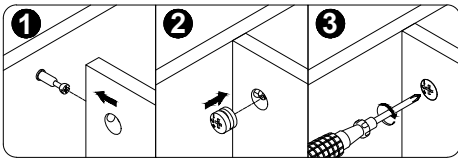





B X4

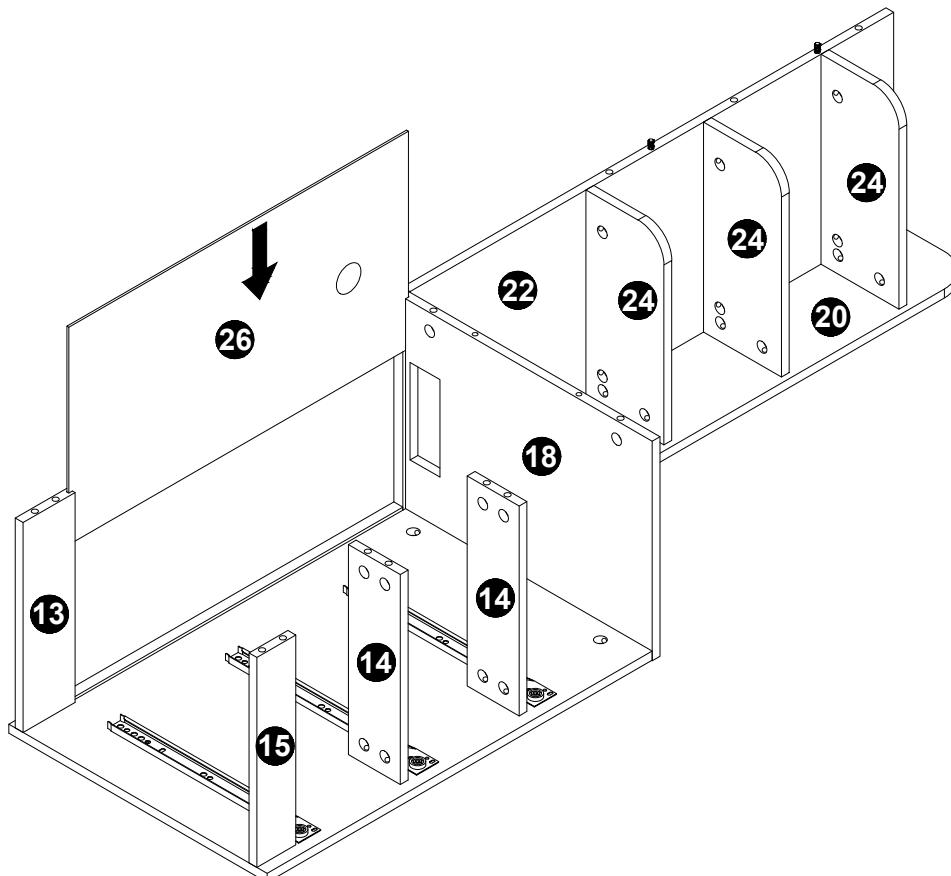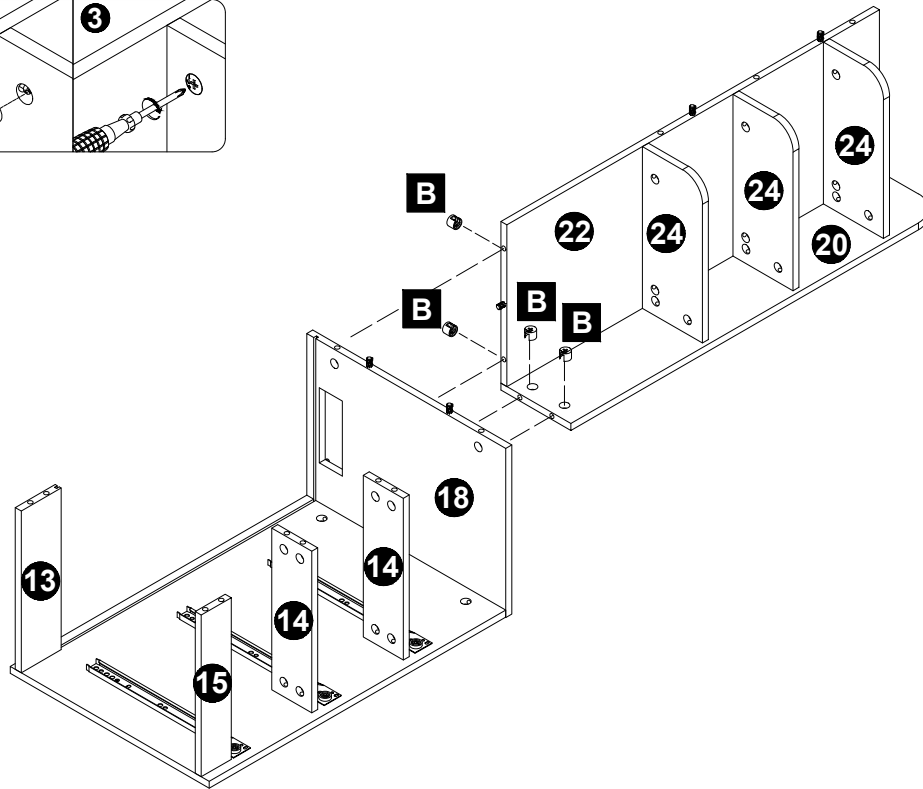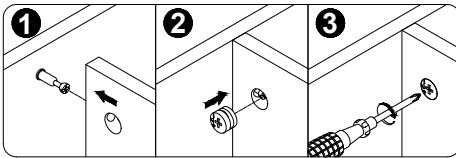

B X4


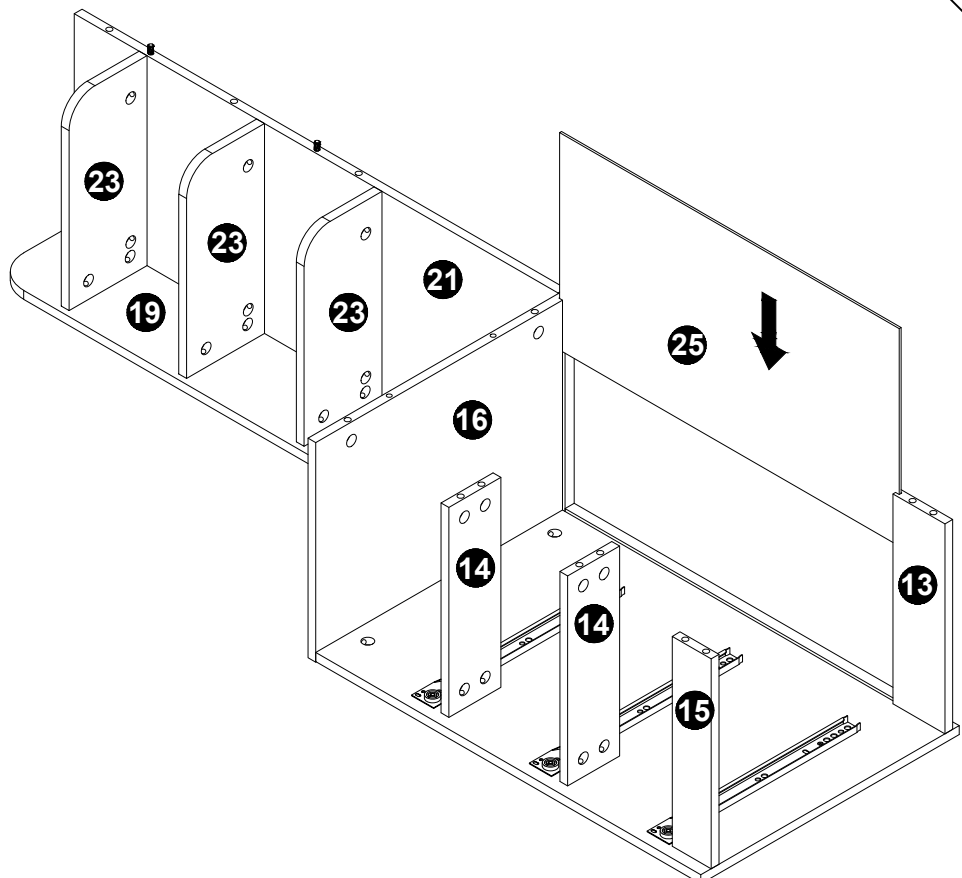
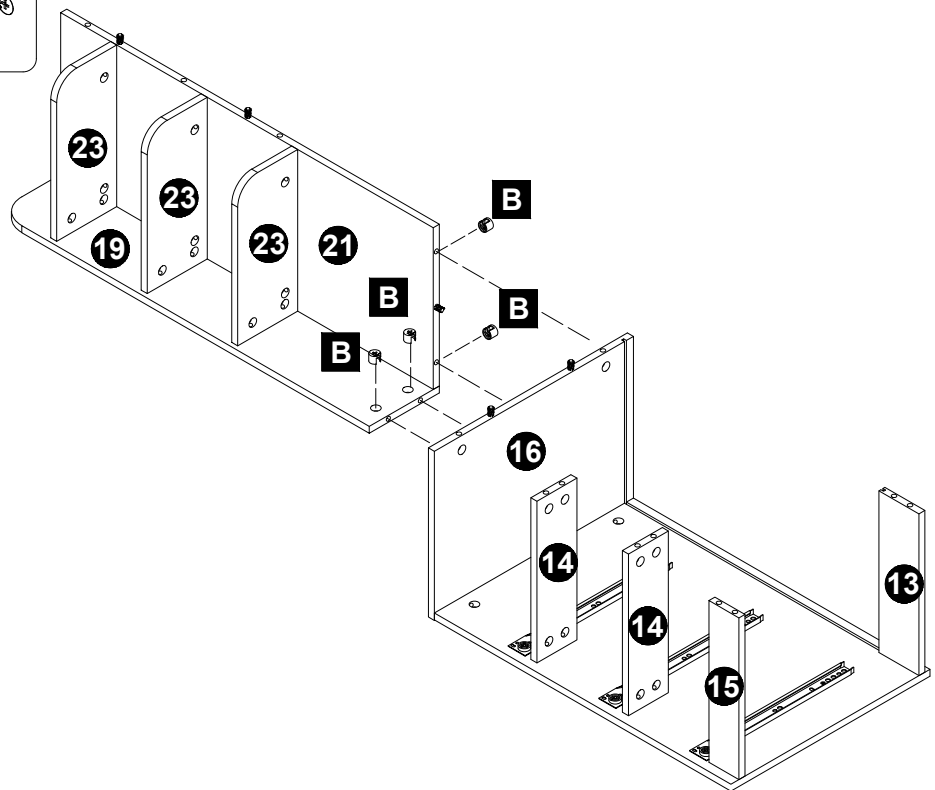
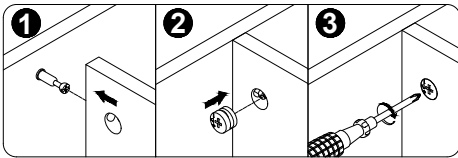


B X13

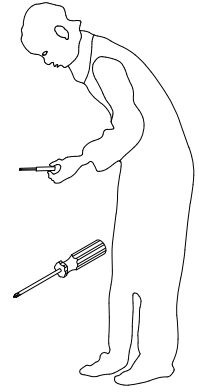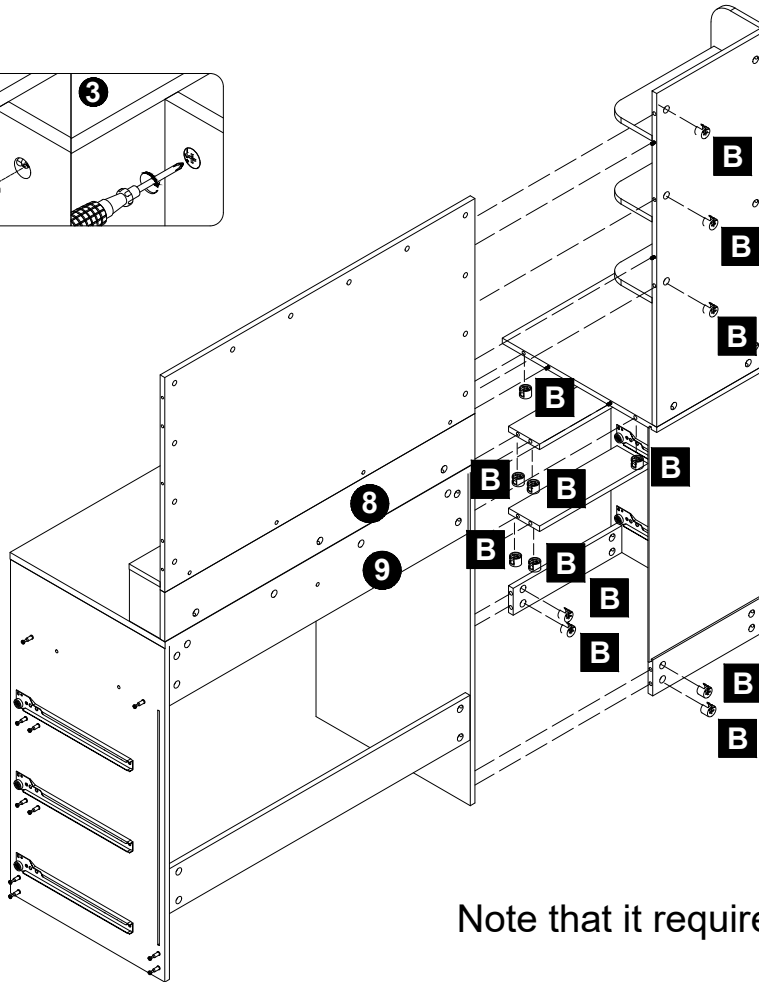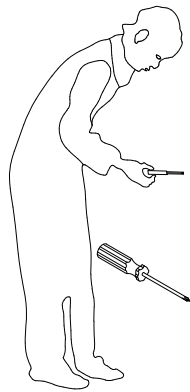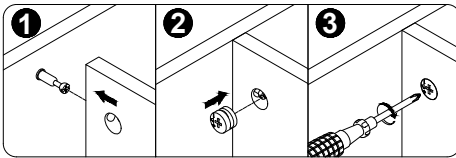

Note that it requires two people to install



B X13

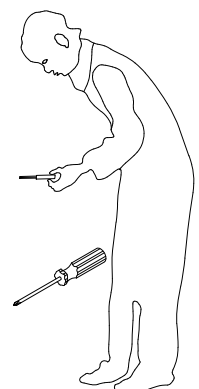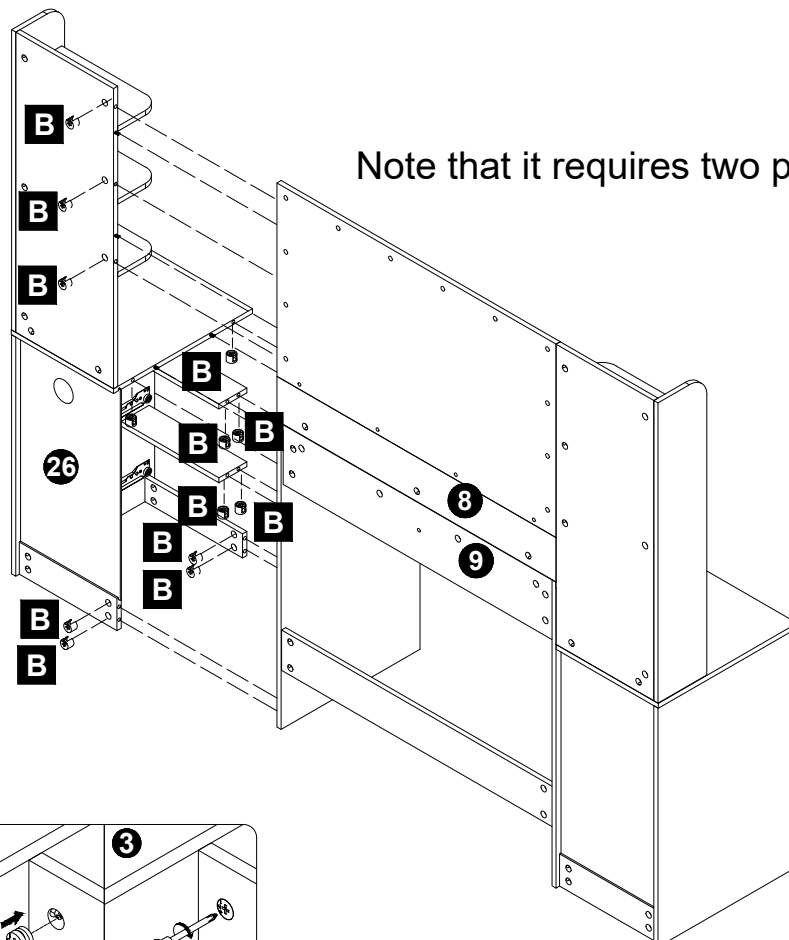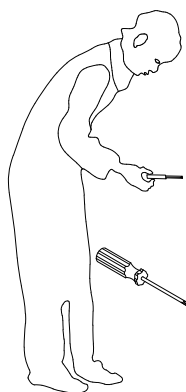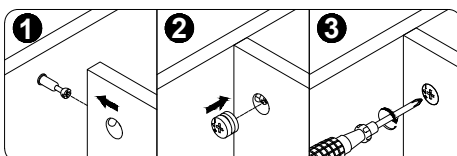

Note that it requires two people to install




F X2

G X1

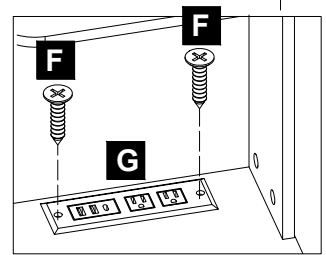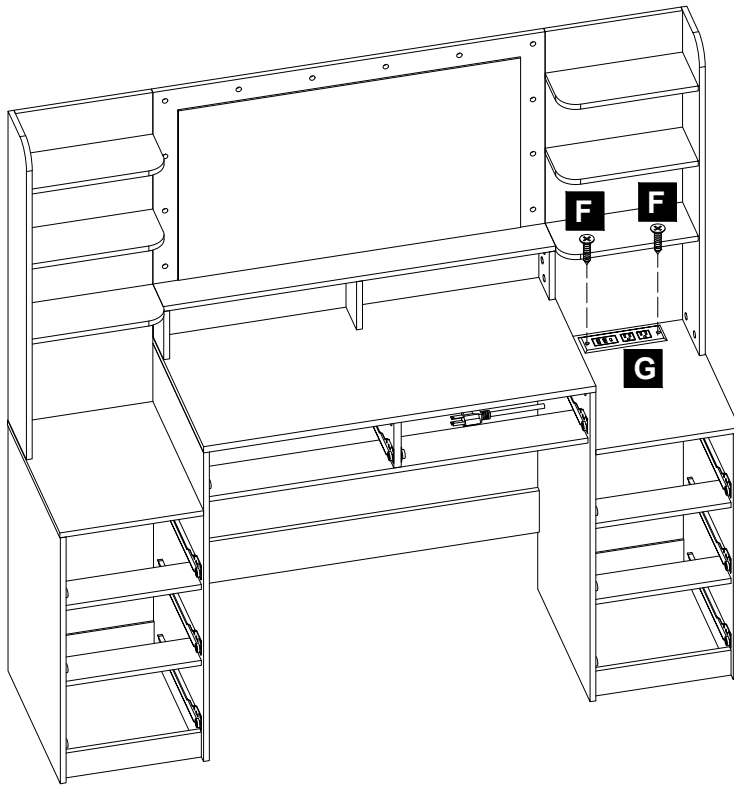


N X50

N X50

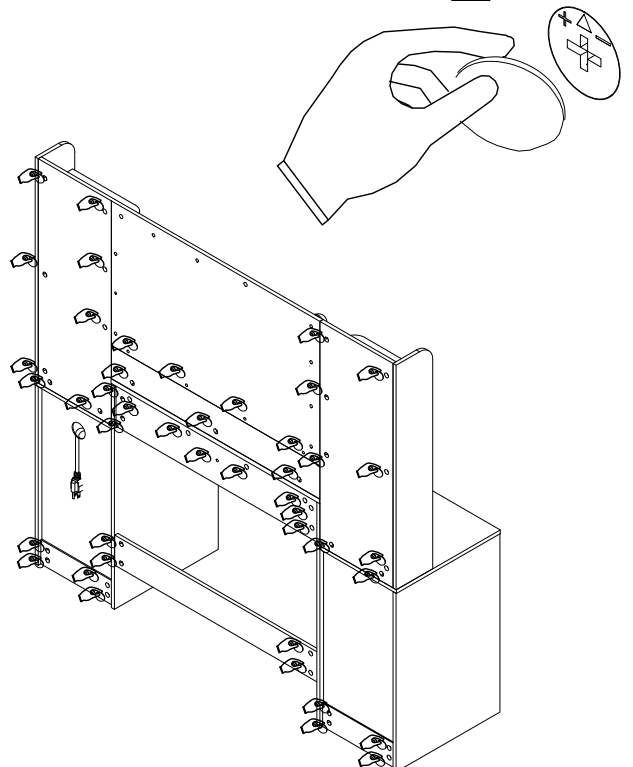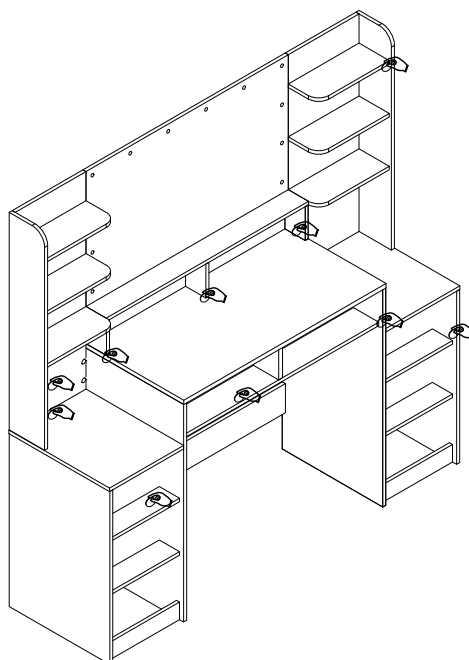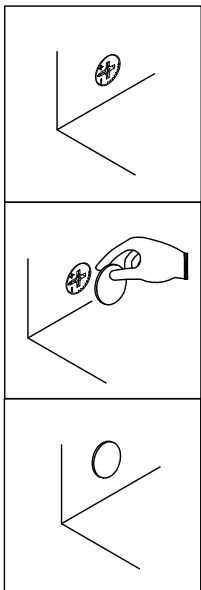


A X24

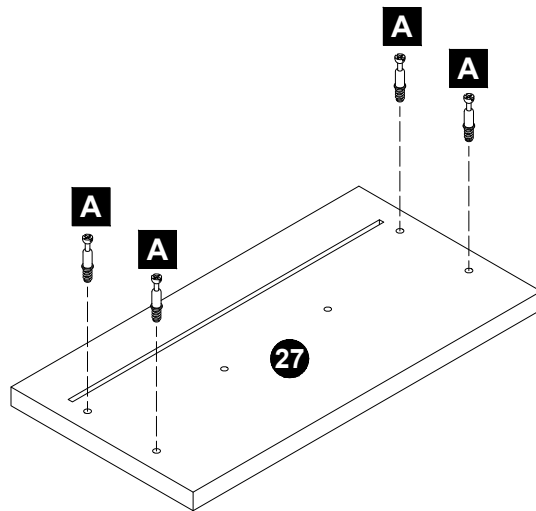


X6

E X24


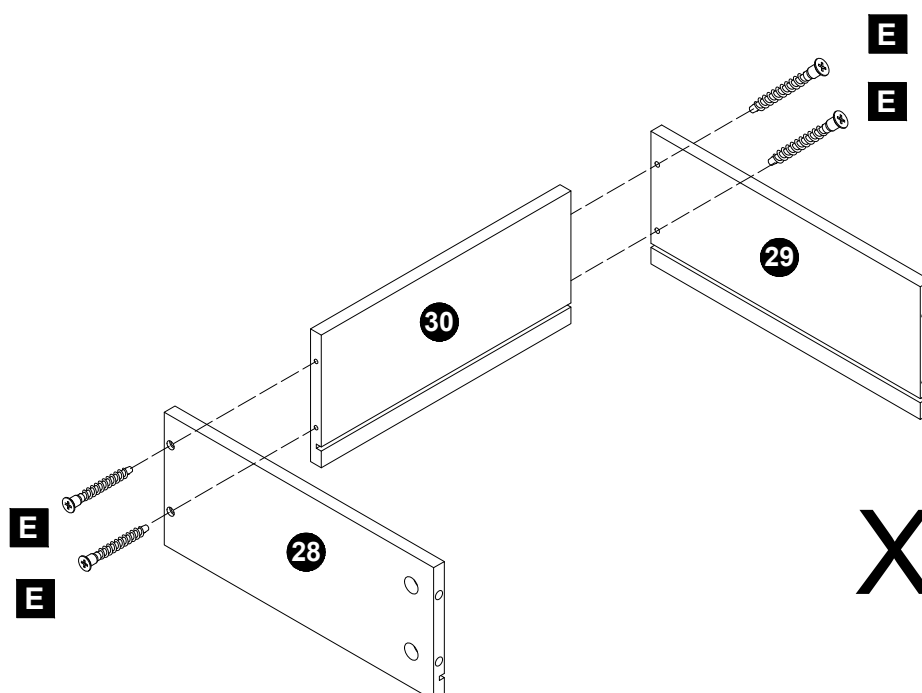


X6

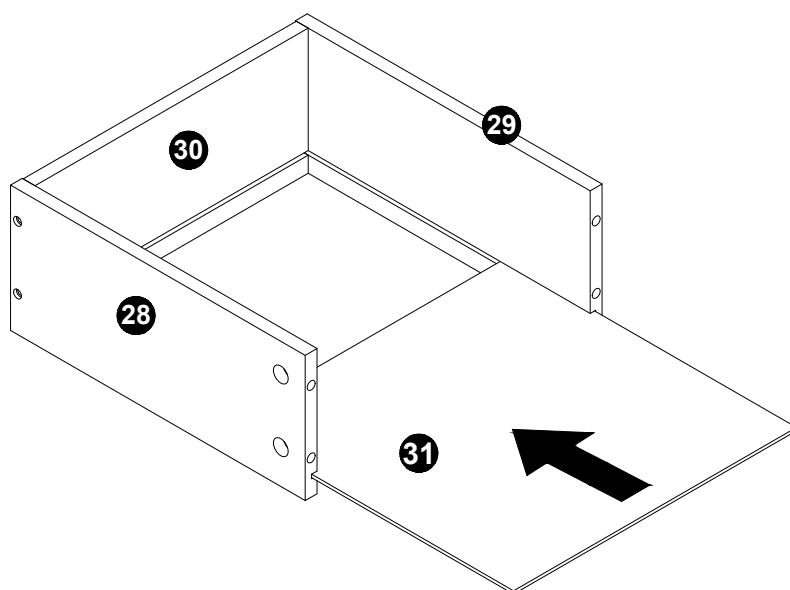

X6


B X24

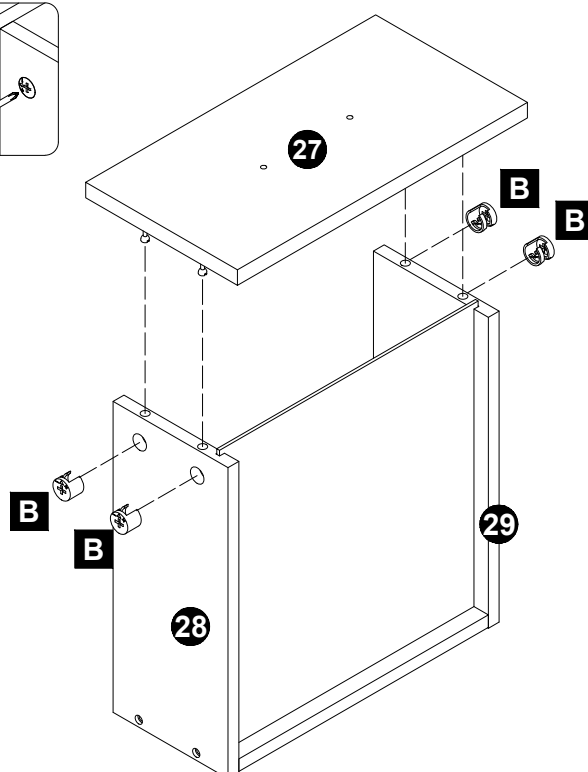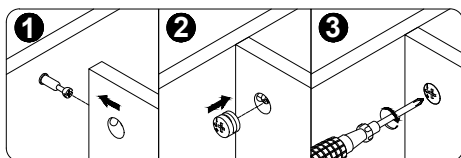

X6

I X 6

N X24


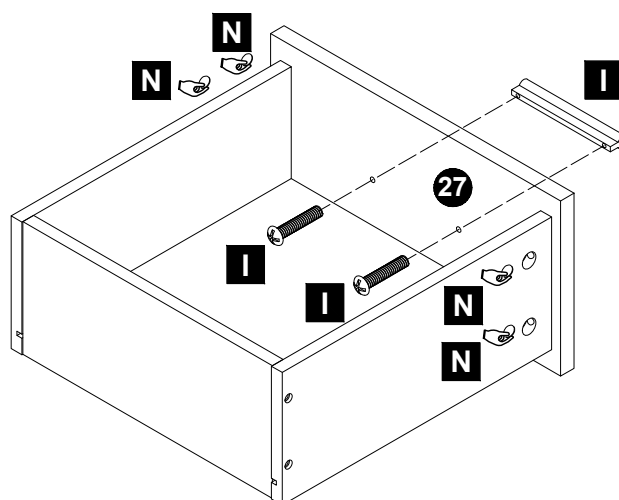


X6

E X24

DL X6


DR X6

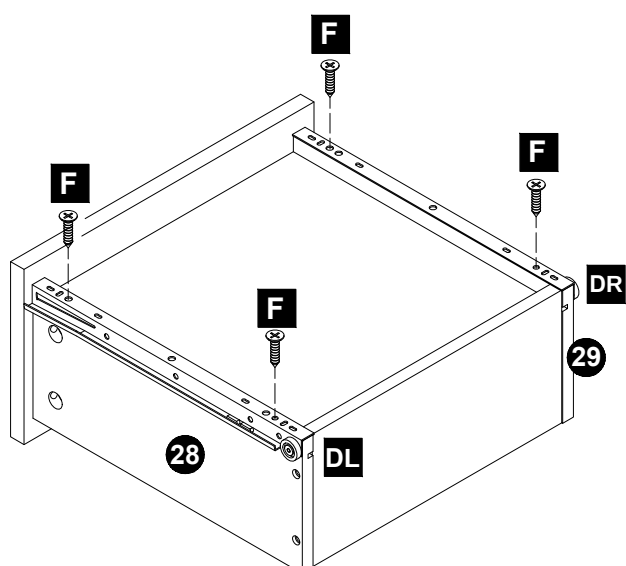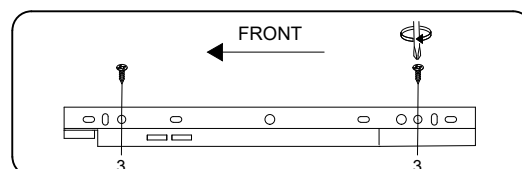

X6


A X 8


57

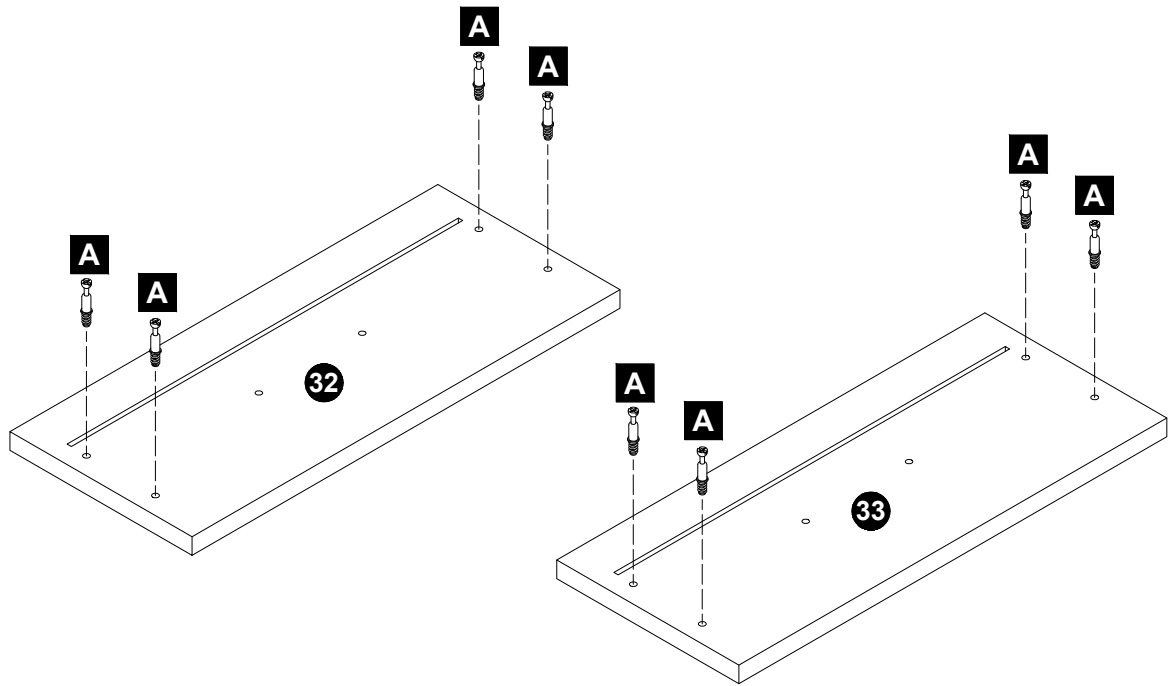



E X8

58

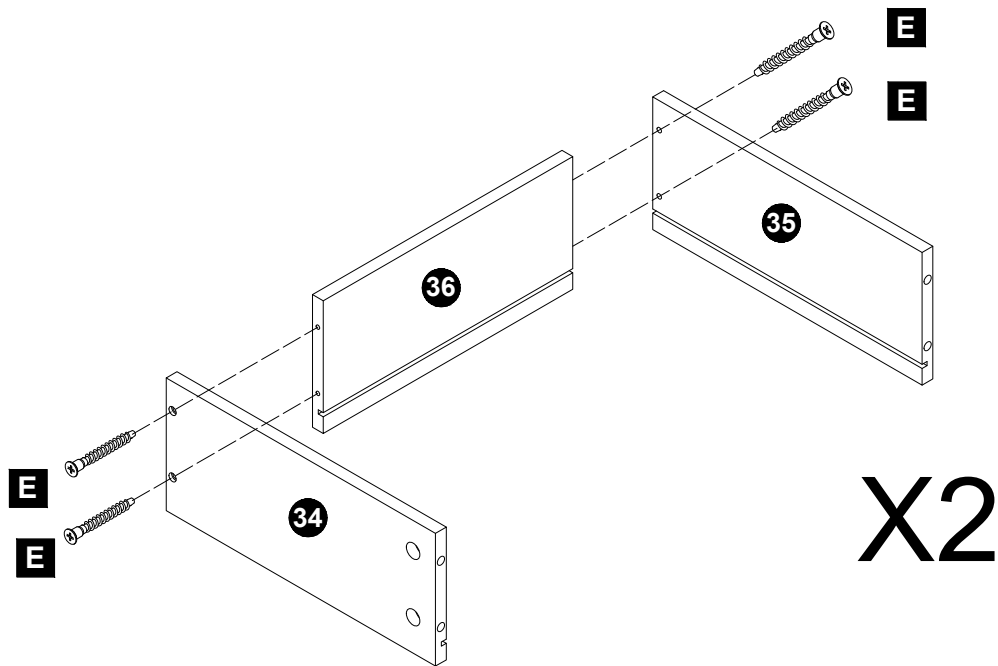


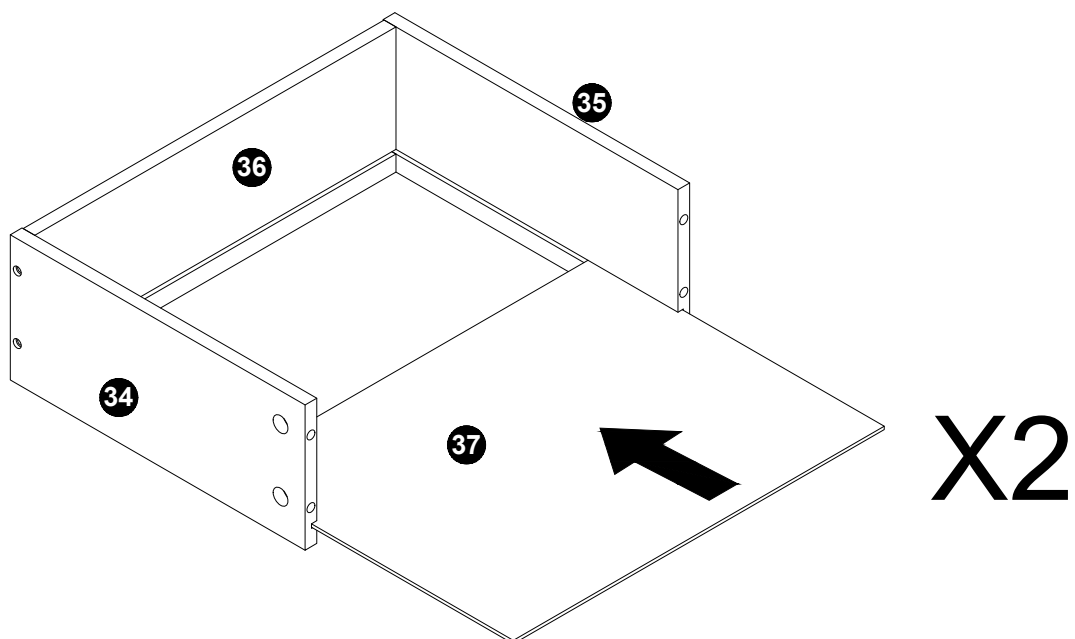


B X8

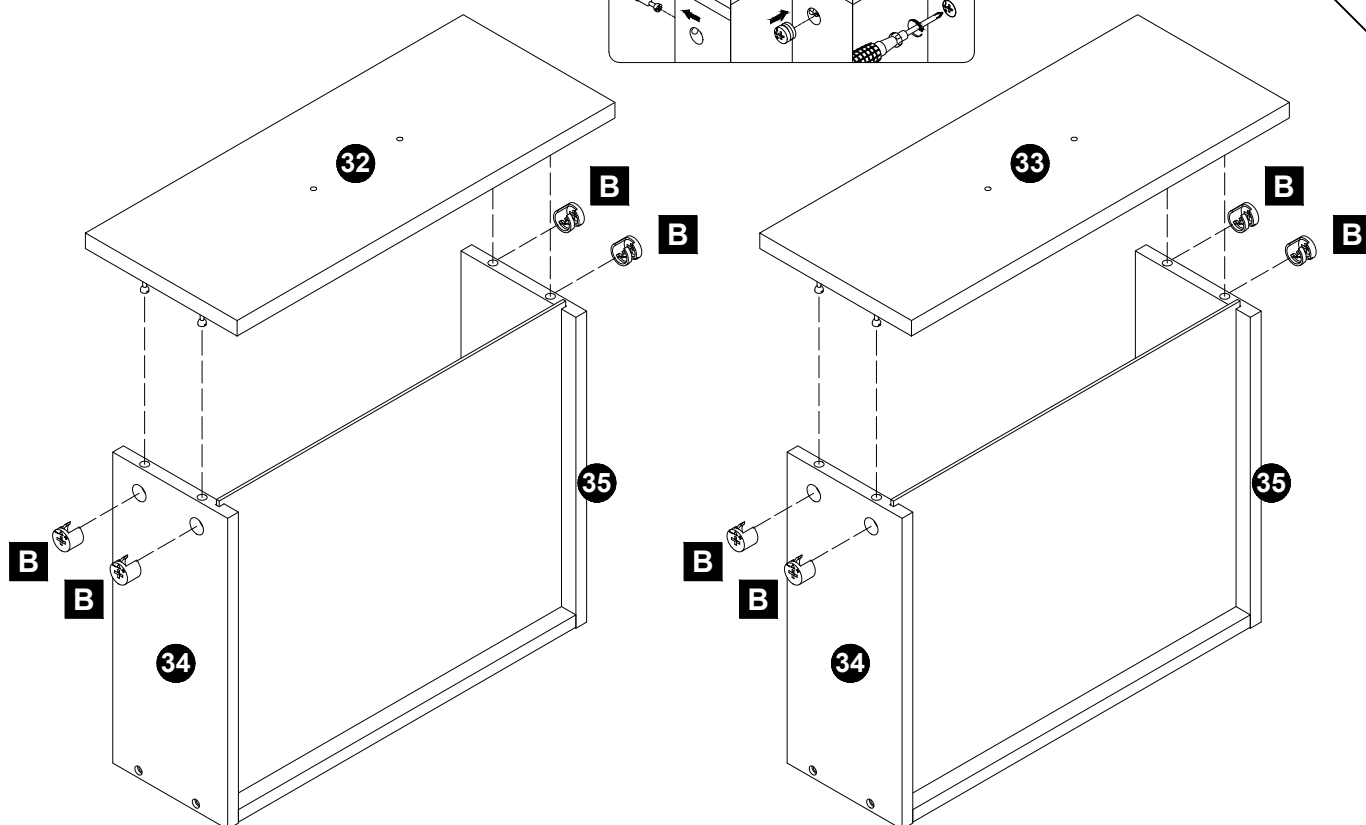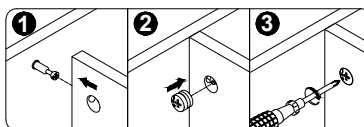

I X 2




N X 8

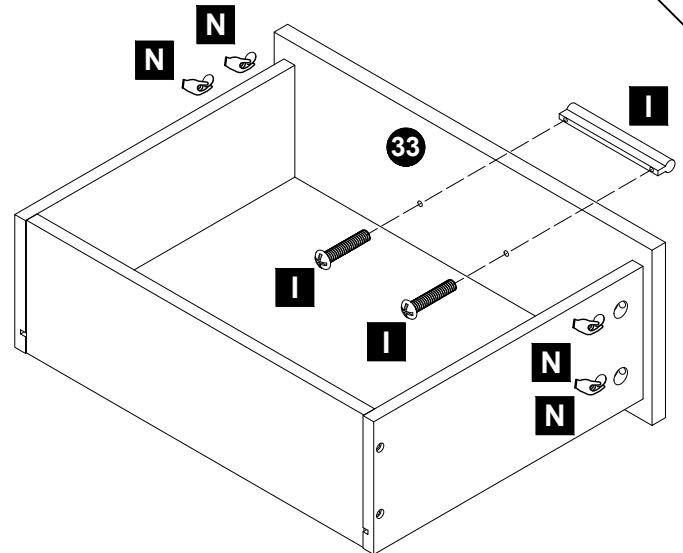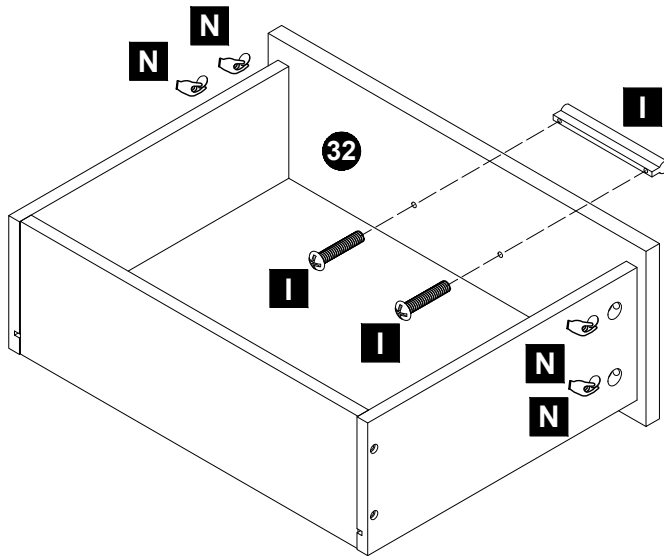


F X 8

DL X 2


DR X 2

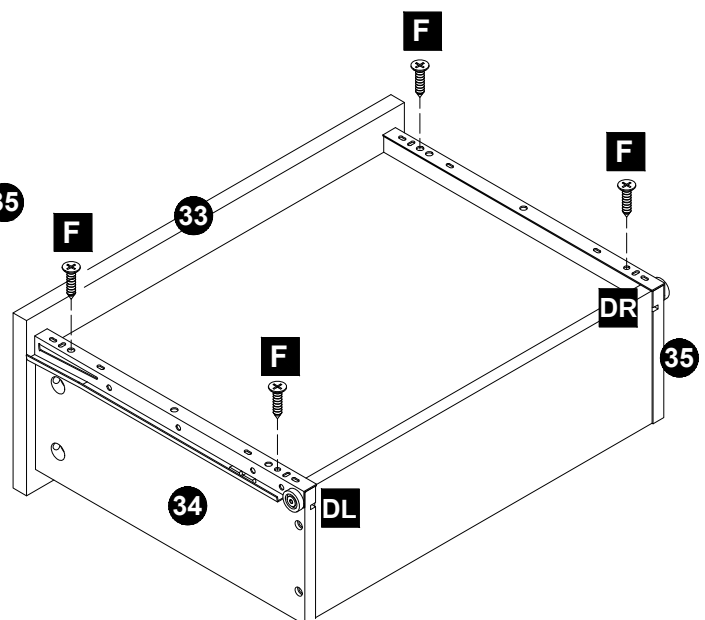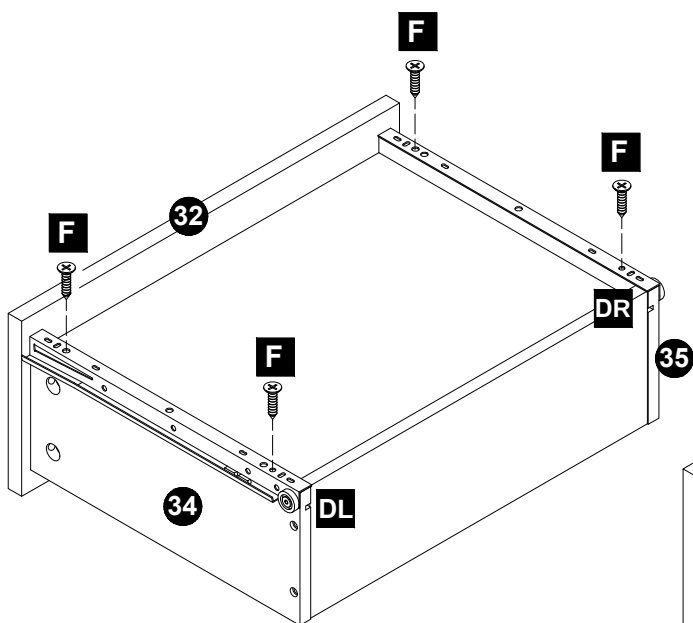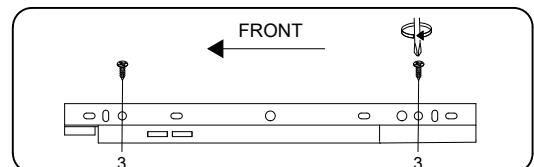



Congratulation! You've made to the last step! But don't be too thrilled yet, put on the drawer can be frustrating if you do it wrong. So, take your time and follow the steps below.

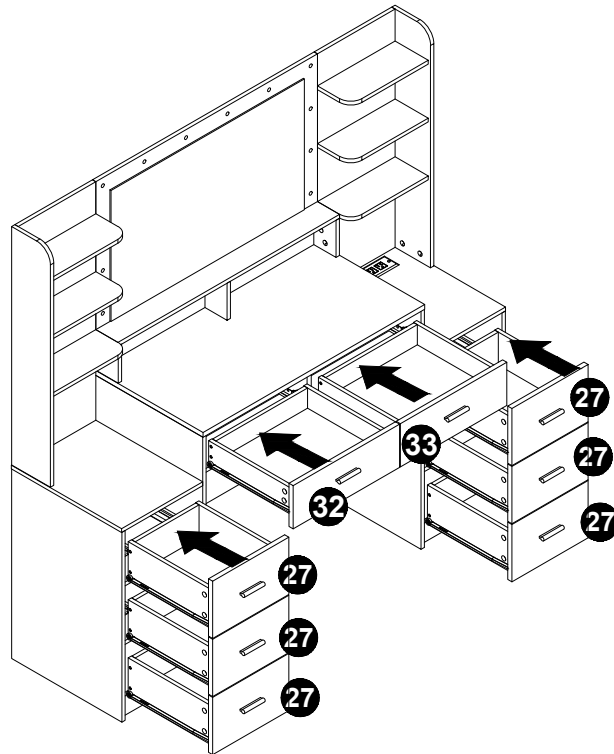


1. Make sure that you have right and left drawers sorted out first, because the drawer panel may cover the side if the right drawer is on the left side, vice versa.

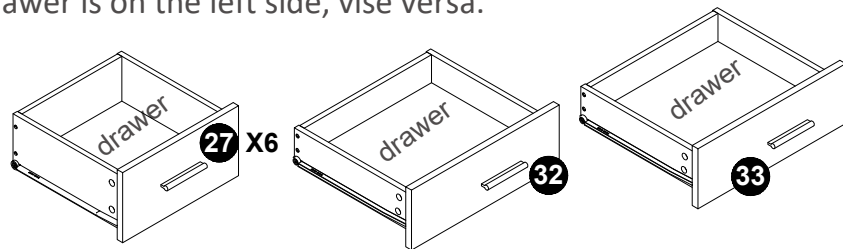


2. Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

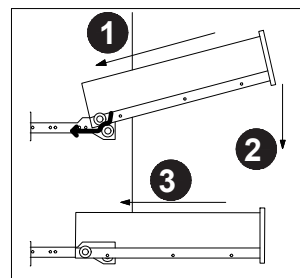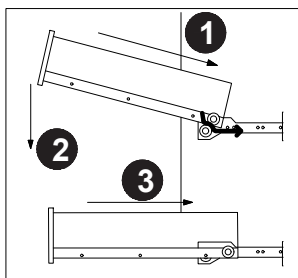


3. If the following occurs, redo the first two steps.

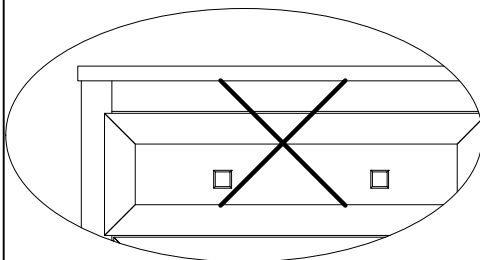

(drawer is on the wrong side)

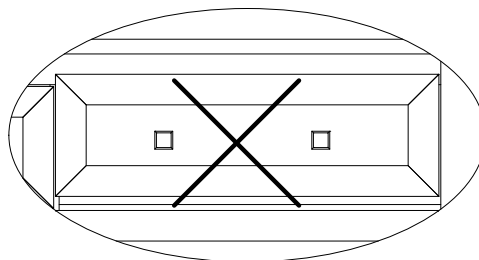




(both wheels are off the rails)

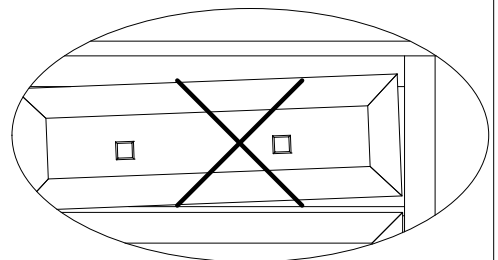





(one wheel is off the rail)

L X12






M X12

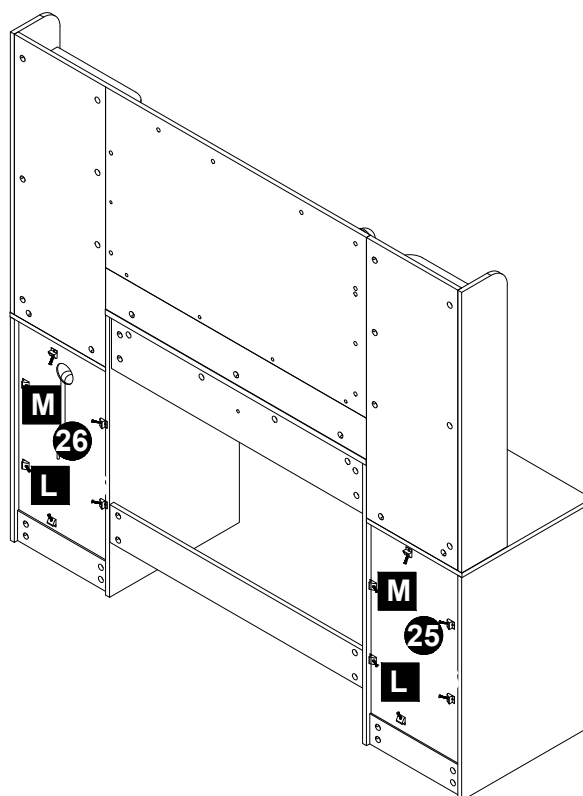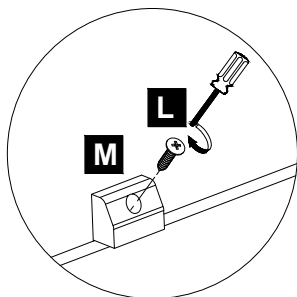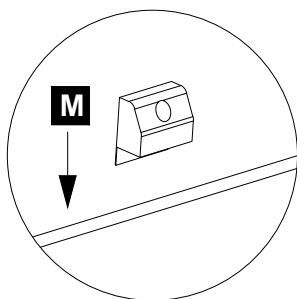

K X12

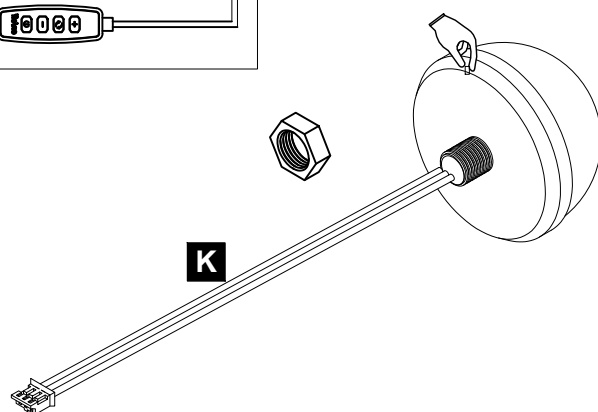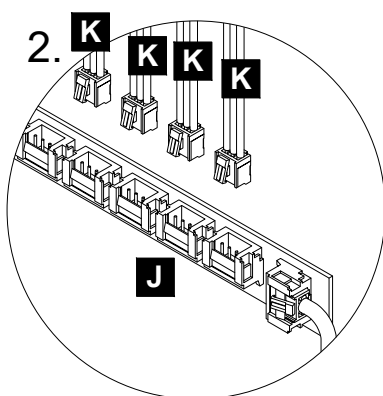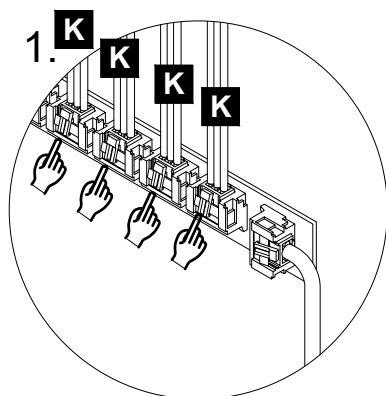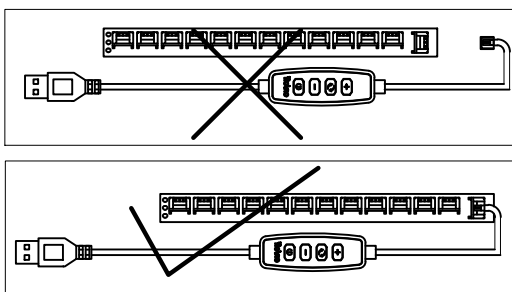


X12

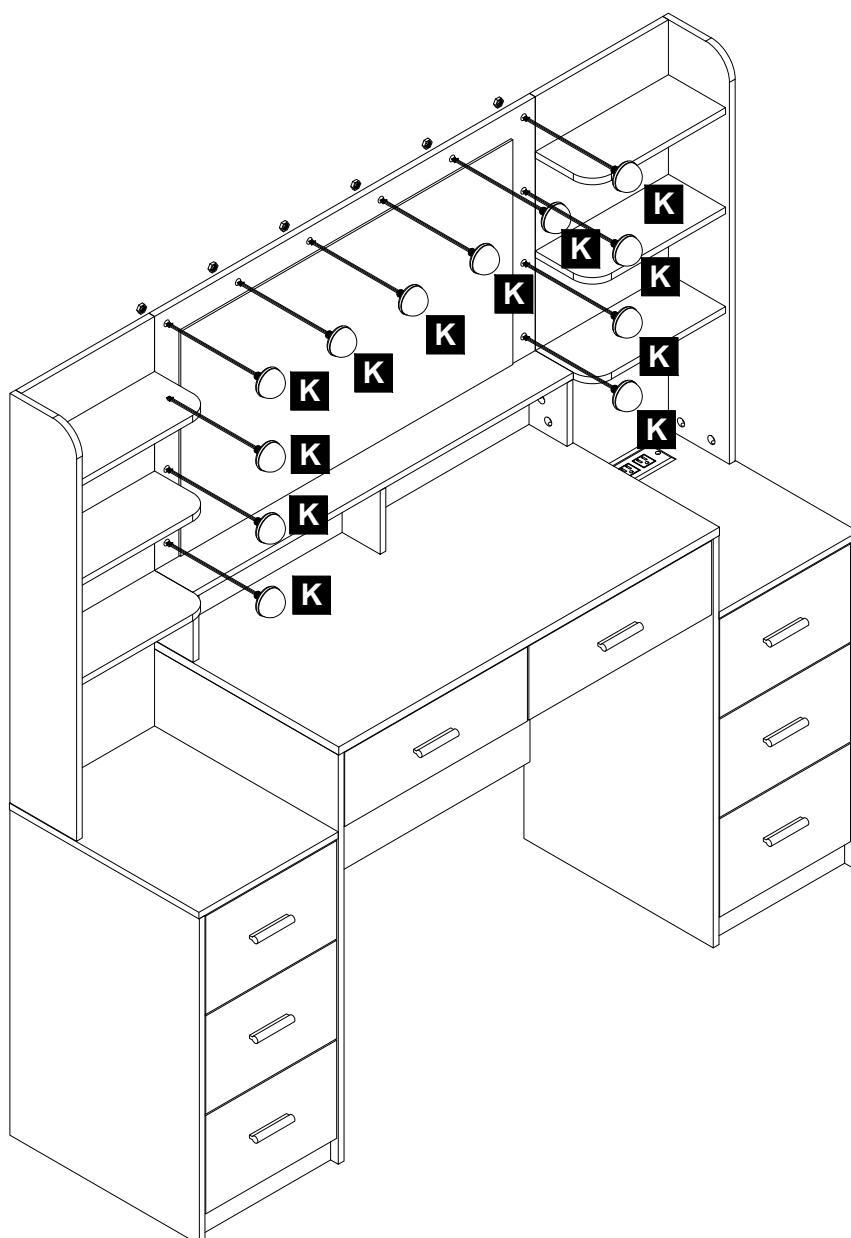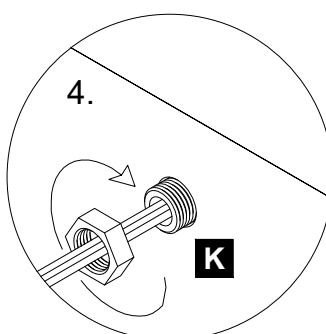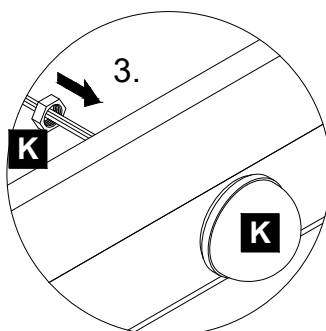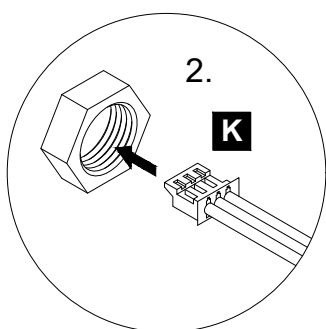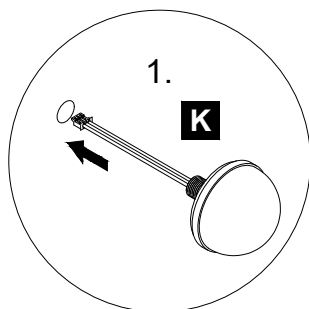


J X1


1.

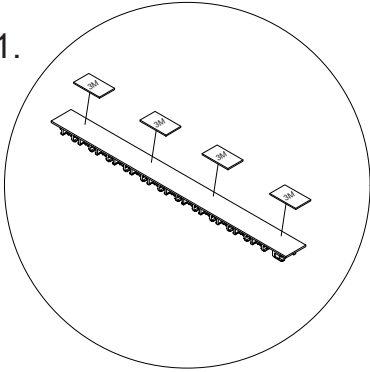


2.

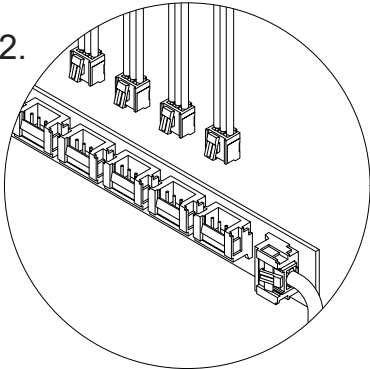



3.

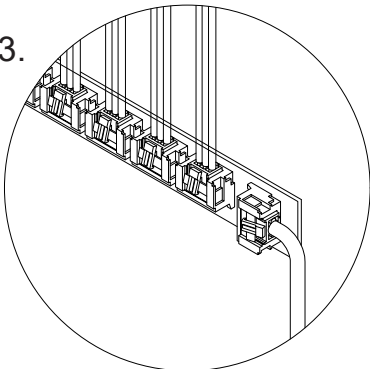

4.

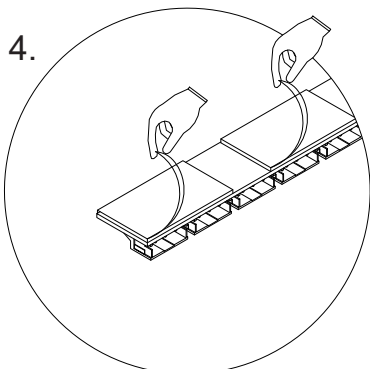

5.

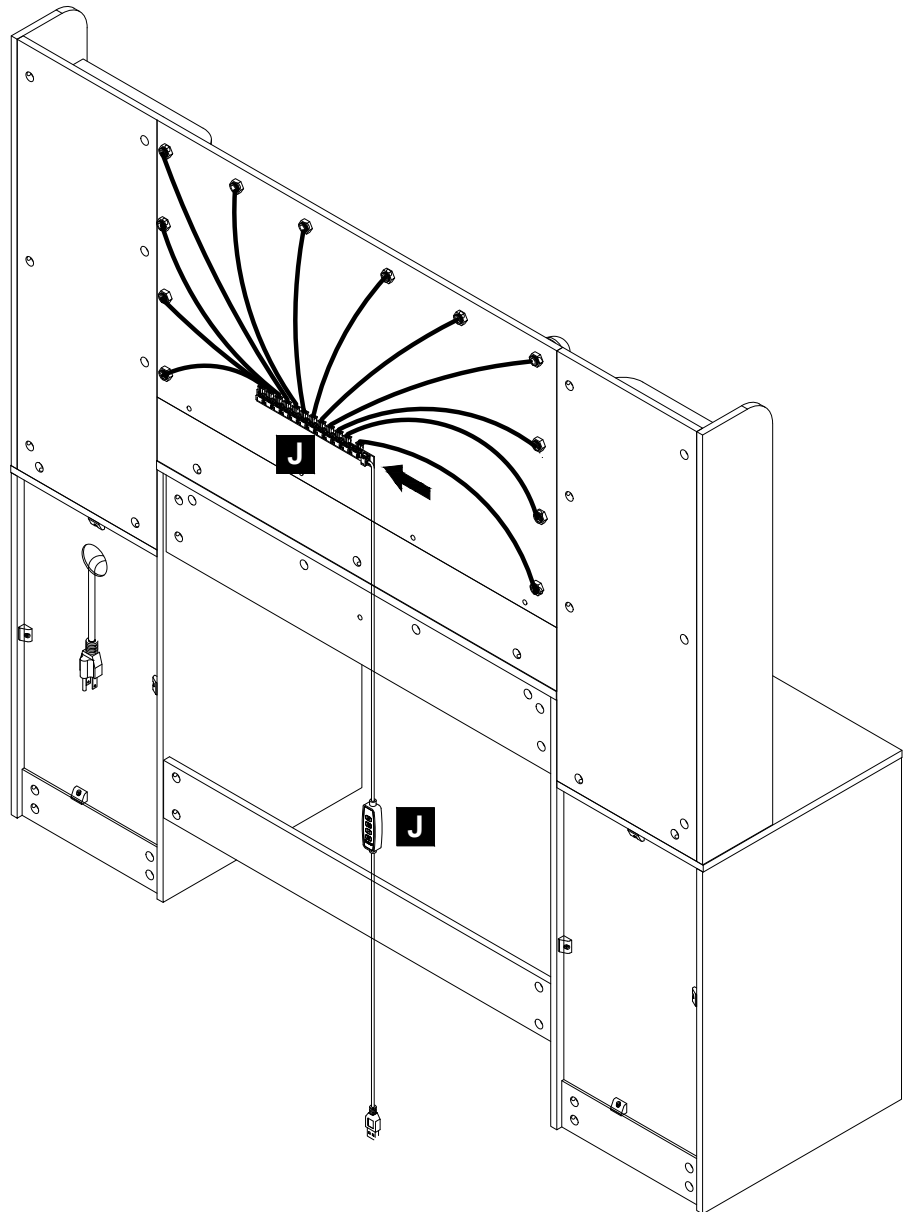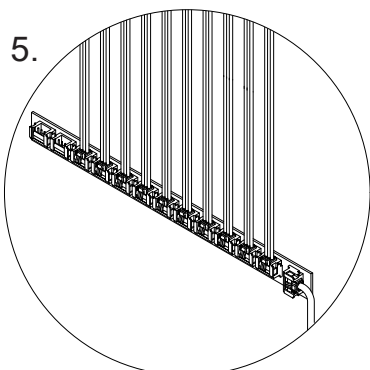

O X2



DANGER - To prevent furniture from toppling attach, mount, bolt or otherwise secure to walls and floors. Do not put heavy items on top shelves. Do not place unstable furniture near where children play. An anchor kit suitable for plaster walls is included with this item, if you require a different kit consult your nearest hardware store.

The unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Move the unit into desired position.
2. Mark the wall with a suitable scribe the position of the fixing holes.




Warning:
Before drilling, check wall for hidden pipes and cables.

3. Drill holes and insert 2 x wall plug

4. Attach 2 x Wall Straps to the top of the unit using 2 x Washers and 2 x Screws


5. Secure the straps to the wall using 2 x Washers and 2 x Screws

Note: To hide the straps behind the unit, drill the holes lower than the top of the unit

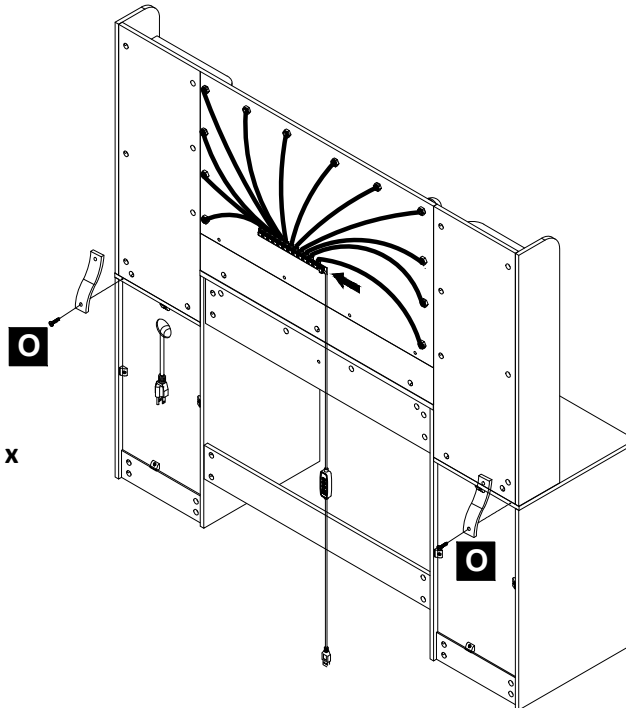

WALL


(1)

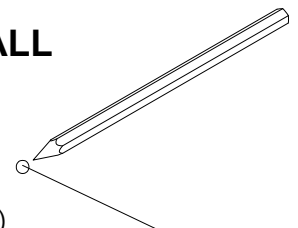

WALL


drilling hole
Ø6x30mm

(2)

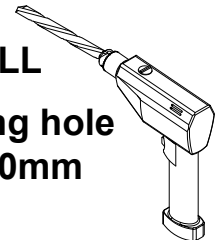


WALL



(3)

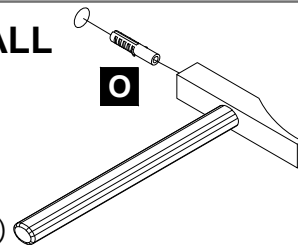

(4)

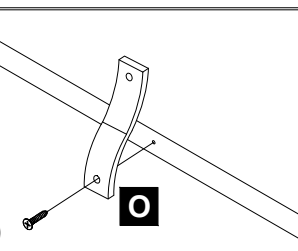

(5)

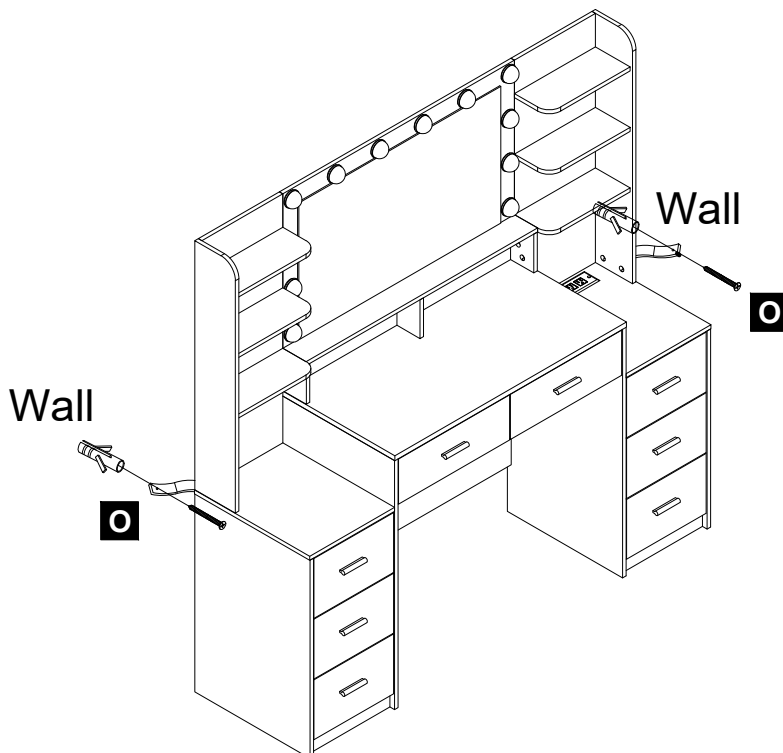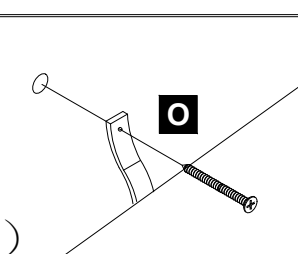

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

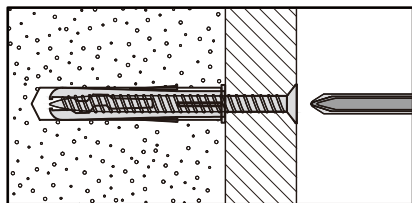


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

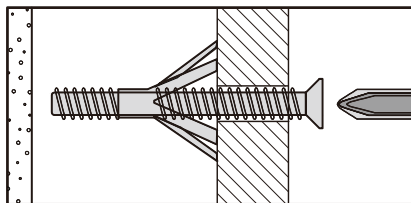


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

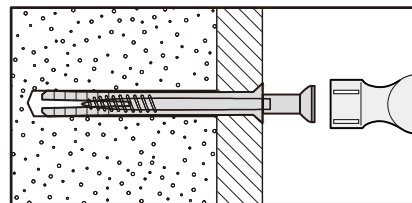


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

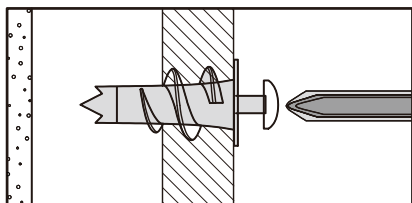


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing - Heavy Duty" wall plug

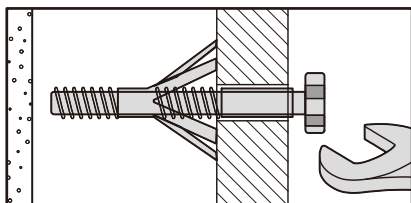

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug - heavy loads

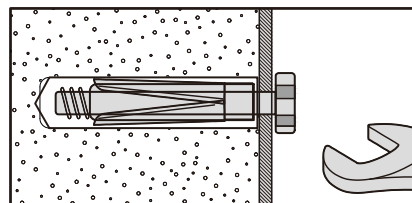

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.