


INSTALLATION INSTRUCTIONS

Model#06

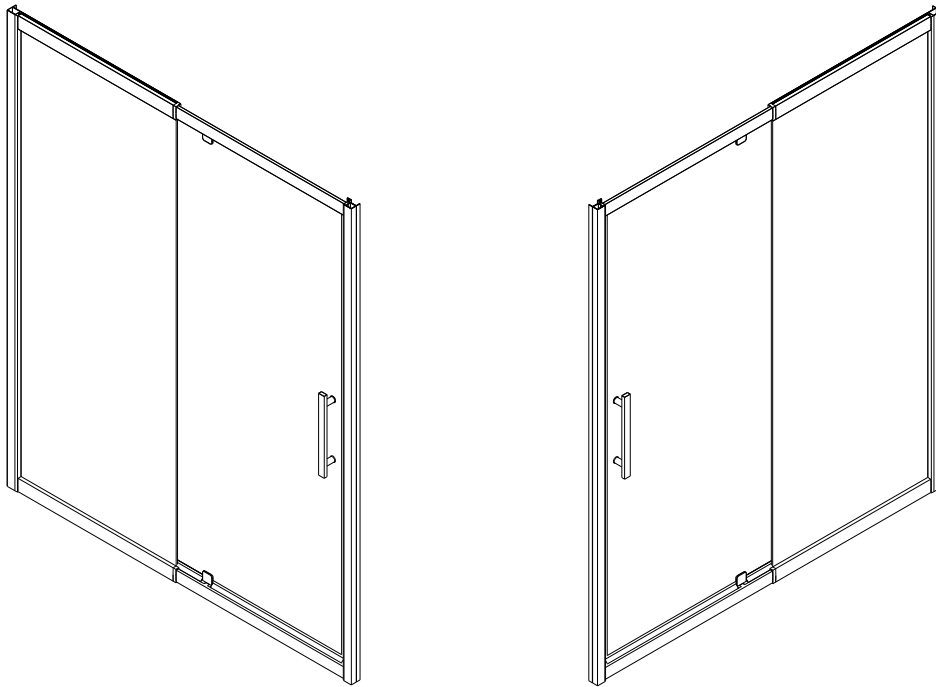

**THANK YOU FOR PURCHASING OUR PRODUCTS.
FOR IMMEDIATE HELP WITH ASSEMBLY OR
PRODUCT INFORMATION EMAIL US:**



SUPPORT@CUSTOMERSERVICEYIBAI.COM

Please offer your order ID and the product model number

Our staff is ready to provide assistance M-F 8:00 AM to 5:00 PM PST

▲ Important Notice Before Installation:

Please prepare Silicone Sealant in advance (not included). It is crucial to use the Silicone Sealant in the final step to prevent the risk of water leakage. Refer to Page 12 for its application location.


◆ General Information

Inspect the product immediately upon receipt for transit damage, missing parts, or manufacturing defects. Claims for damage reported later will not be accepted. Handle the product with care, avoiding impacts or shock loading to the glass edges and surfaces.

◆ Safety Notes

Safety glass cannot be modified or reworked. Read all instructions carefully before installation. Exercise extreme caution when drilling into walls to avoid hidden pipes or electrical wiring.

Note: This product is heavy—two-person installation is recommended.

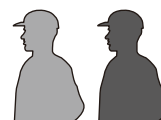

◆ Aftercare instructions

Clean the shower regularly with mild soap and water. This is especially important in hard water areas to prevent lime scale buildup.

Avoid: Gritty or abrasive cleaners.

Chemical use: Strong chemicals may be used with caution. Contact the cleaner manufacturer if unsure. Retain these instructions for future reference.


◆ Adjustments

The aluminum track can be adjusted by up to 4 inches (10 cm) for width modifications. If the adjusted width is smaller, the entrance size will be reduced accordingly.


◆ Installation Tips

Measure the finished opening before installation to confirm the correct model size. The door features reversible installation (it can be installed to open from either the left or right side) by following the same steps.


Tools Required

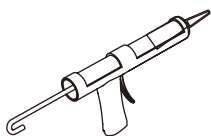

Silicone Sealant

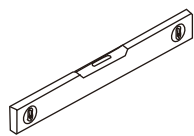


Level

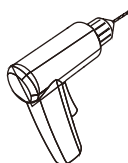


Drill



**Ø1/4"
Drill Bit**




**Screwdriver
(Phillips)**




Hammer



Pencil

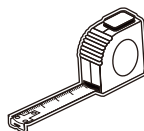

Tape Measurer



**Sealant
Finishing Tool**



**Painters
Tape**




Safety Glasses



Scissors




Work Gloves












Hacksaw



PARTS LIST

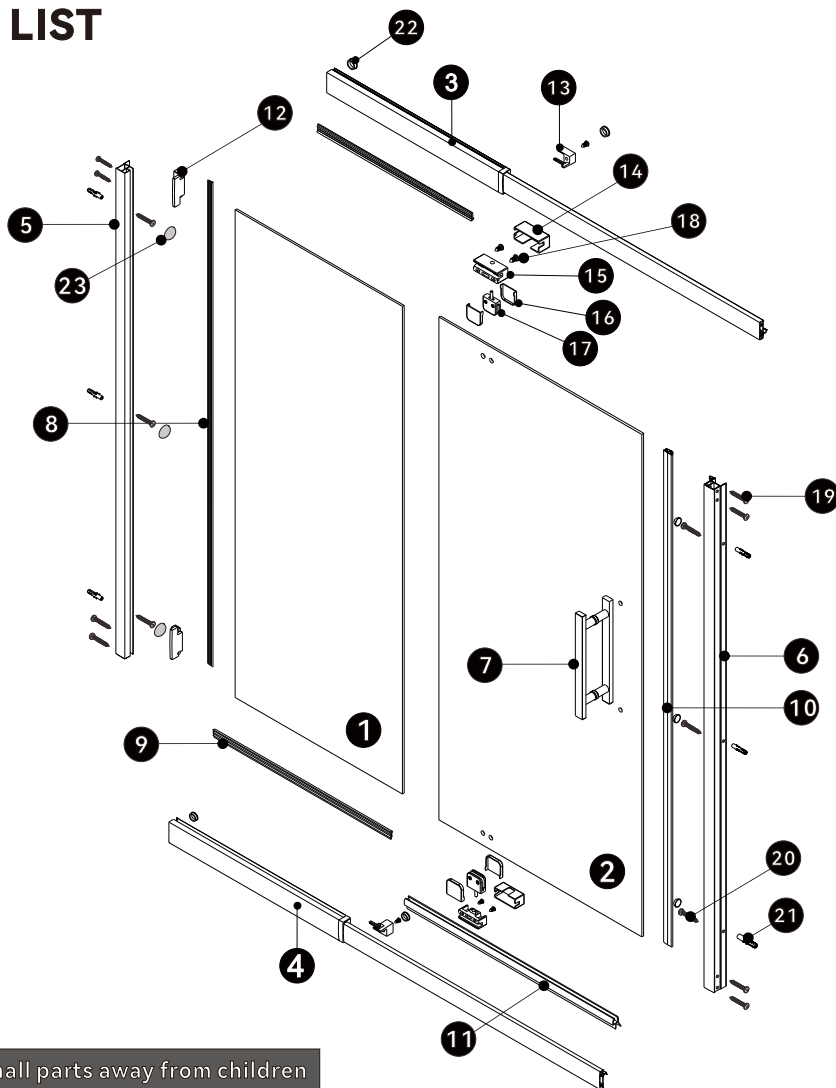

keep small parts away from children

PACKING LIST

Top Rail  3 1 PC	Bottom Rail  4 1 PC	Wall Jamb  5 1 PC	Magnetic Wall Jamb  6 1 PC	Shower Door Handle  7 1 PC	Long Single-lipped Gasket  8 1 PC	Short Single-lipped Gasket  9 2 PCS	Magnetic Seal  10 1 PC
Door Sweep  11 1 PC	Top and Bottom Rail Bracket  12 2 PCS	Telescopic Rail Stop  13 2 PCS	Pivot Base Cover  14 2 PCS	Pivot Base  15 2 PCS	Pivot Cover  16 4 PCS	Pivot Assembly  17 2 PCS	ST4 x 12 Self-Tapping  18 8 PCS
ST3 x 32 Self-Tapping  19 10 PCS	ST4 x 32 Self-Tapping  20 8 PCS	M6 Wall Anchor  21 8 PCS	Screw Cap  22 8 PCS	Wall Jamb Screw Cap  23 8 PCS	Ø 1/8" Twist Drill  24 1 PC	Allen Wrenches  25 1 PC	Support Panel  26 1 PC

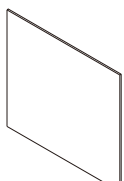
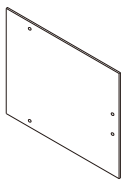
Fix Panel	Pivot Door
	
1 1 PC	2 1 PC

INSTALLATION STEPS

STEP 1-Measurement

Model Dimensions

A Product Height	B Installation width	C Opening Width	D Entrance Height
72"	42"~38"	20"	68"
	48"~44"	22"	
	50"~54"	24"	
	56"~60"	24"	

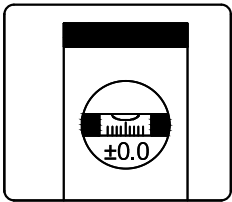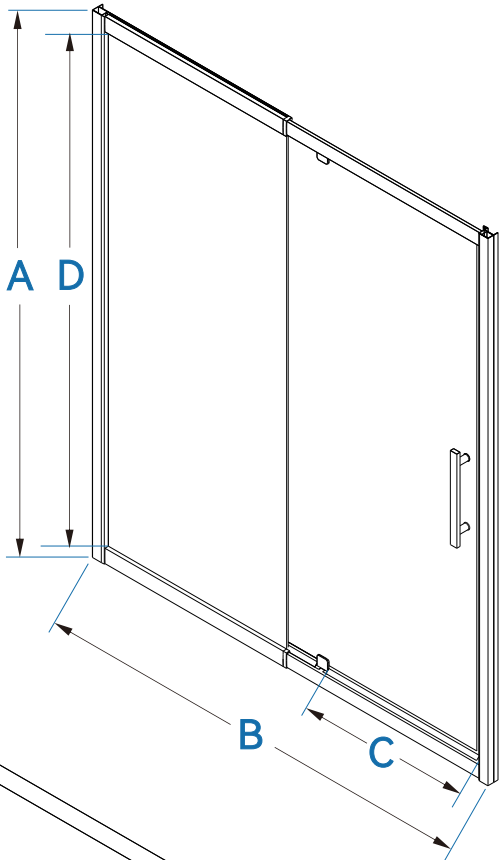



The installation wall must be plumb.

3/8" (10 mm) out-of-plumb adjustment is allowed within the wall profile.


Verify that the threshold and walls are level.

The threshold must be level.

2 3/8" minimum threshold height is required.

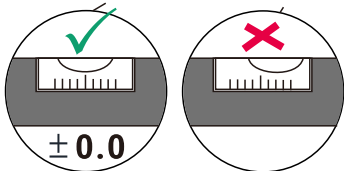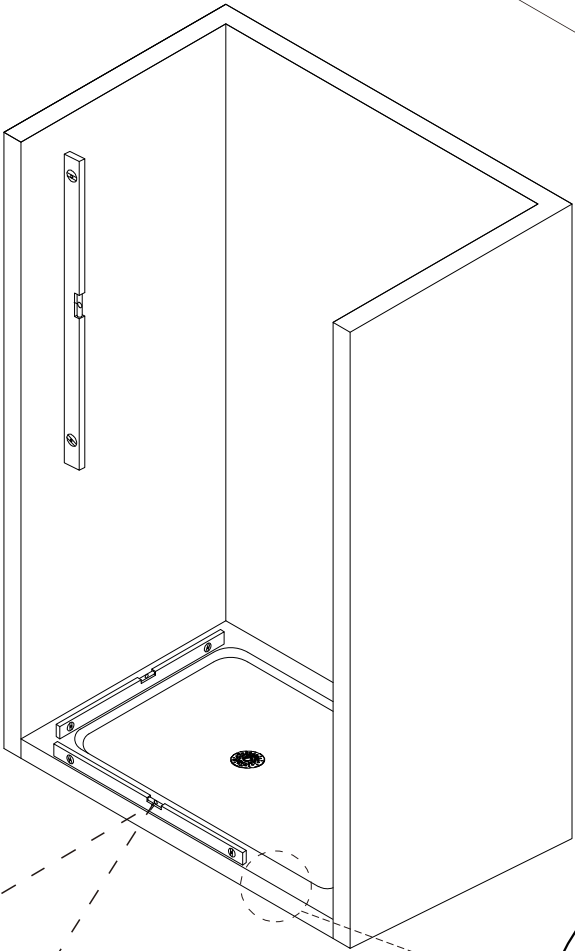

Threshold must be level

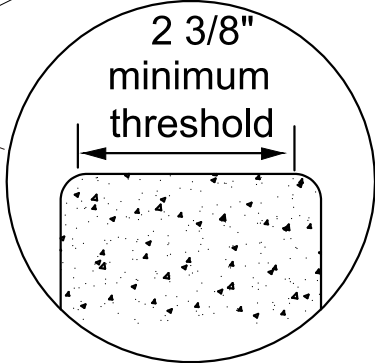


INSTALLATION STEPS

STEP 2-Wall Jamb and Magnetic Wall Jamb Installation

1. Use a level to ensure the wall jamb and magnetic wall jamb are perfectly plumb. Mark the drilling points through the mounting holes.

Parts Required:

Part No.	Description	Qty
5	Wall Jamb	1
6	Magnetic Wall Jamb	2
21	M6 Wall Anchor	6

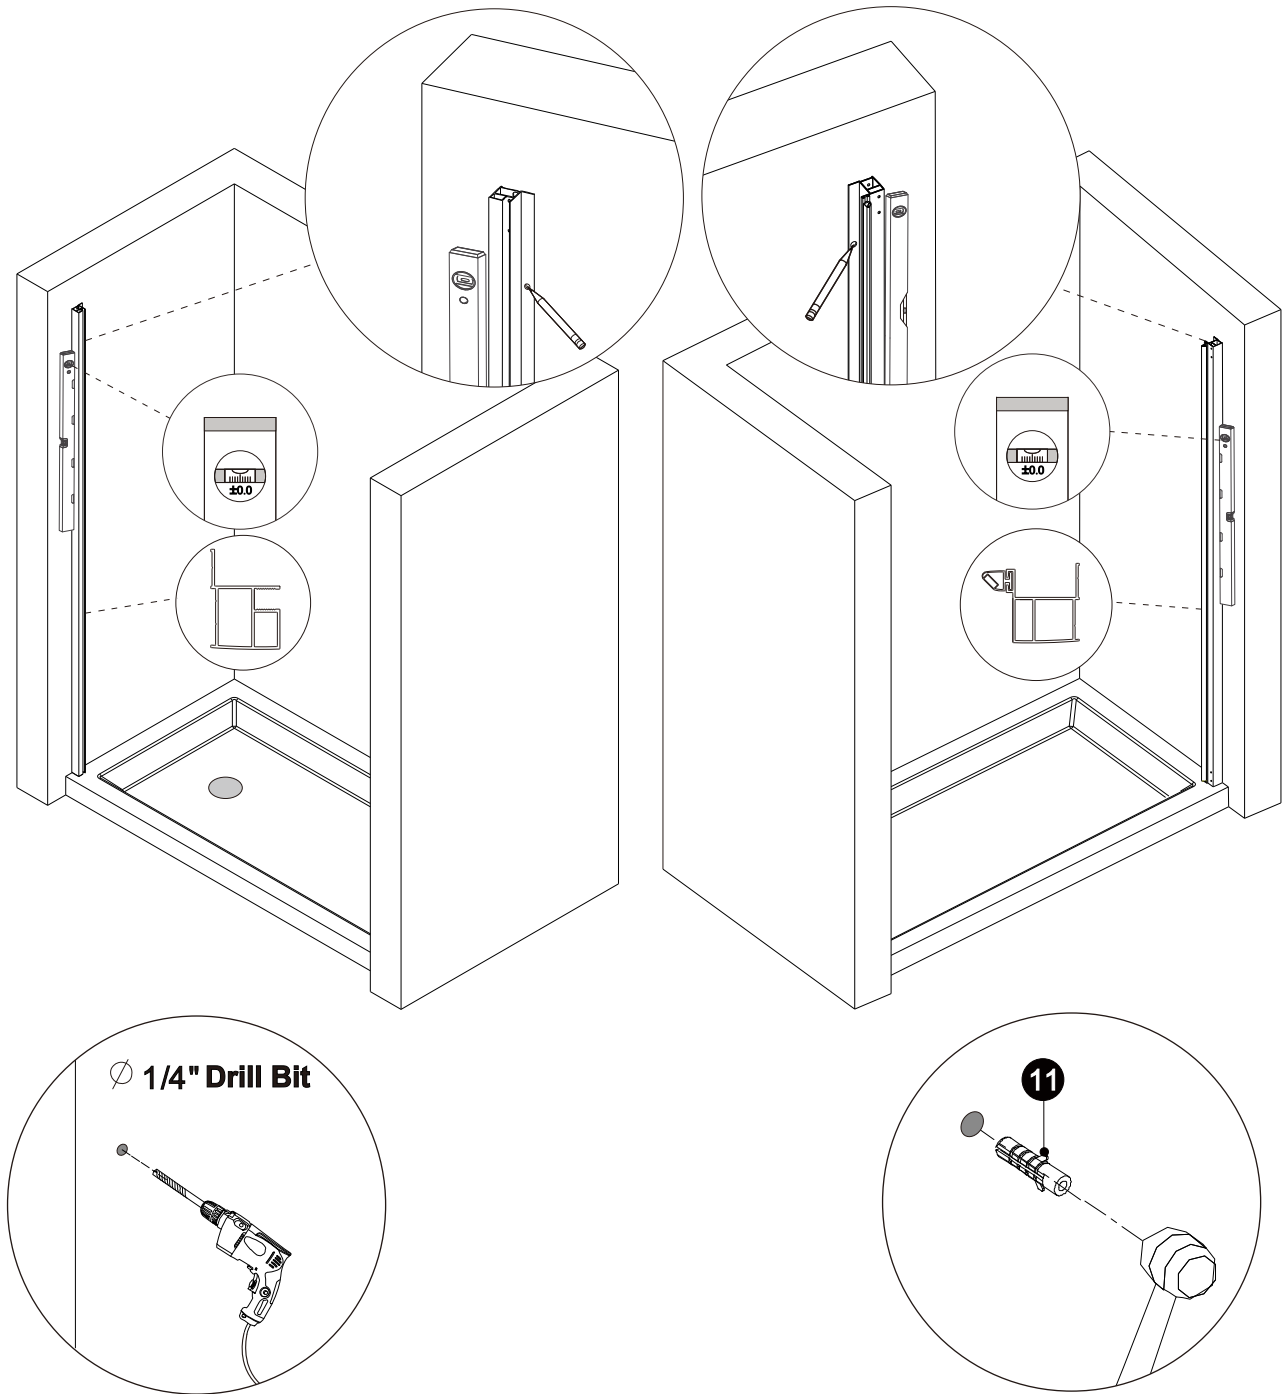


2. Using a power drill, drill holes at the marked locations.


3. Gently tap the M6 wall anchors (#21) into the drilled holes until they are flush with the wall surface.

INSTALLATION STEPS

STEP 3-Shower Enclosure Frame Assembly

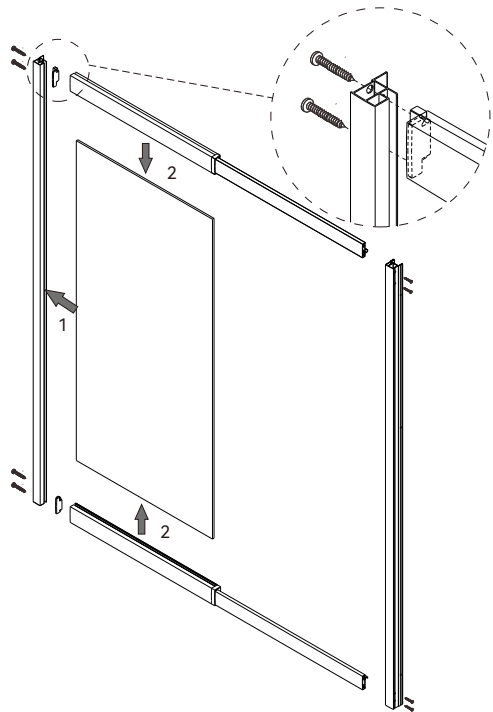


1.Insert the fixed glass panel (#1) into the wall jamb (#5). Connect the top and bottom rails to the wall using the top and bottom rail brackets (#12). Then, secure the entire frame with ST3x32 self-tapping screws (#19).

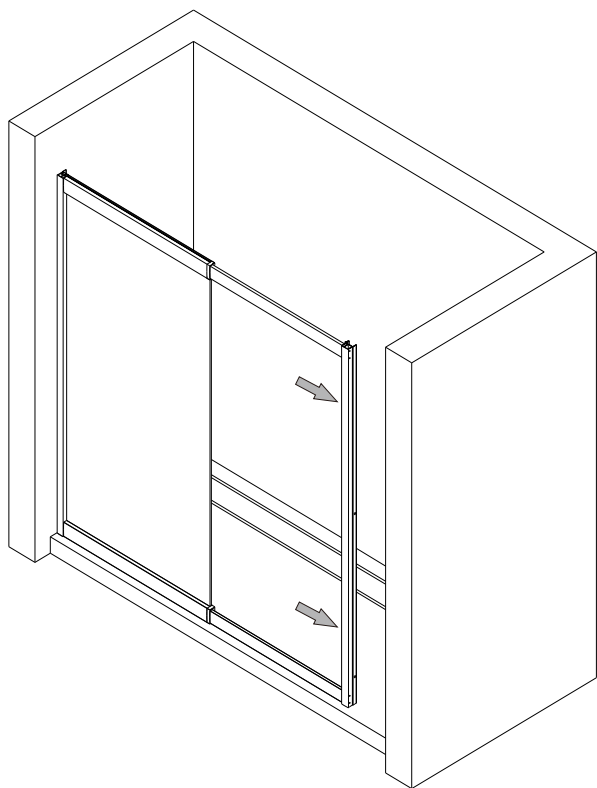


3.Position the frame into the opening. Push one side profile firmly against the wall.

Parts Required:

Part No.	Description	Qty
19	ST3 × 32 self-tapping	4
12	Top & Bottom Rail Bracket	1
5	Wall Jamb	1
6	Magnetic Wall Jamb	2
25	Allen Wrench	1
19	ST4 × 32 Self-Tapping	6

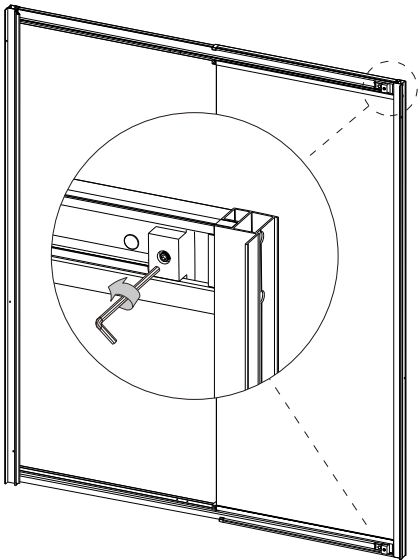

2.Use an allen wrench (#25) to loosen the telescopic adjustment set screws. (Do not remove them completely).

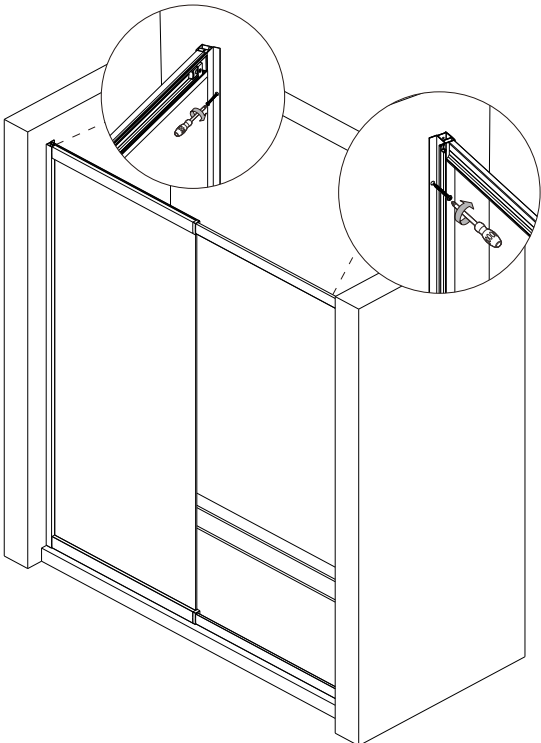




4.Secure the wall jambs (#5, #6) to the wall using a Phillips screwdriver and ST4x32 elf-tapping screws (#20).

INSTALLATION STEPS


STEP 4-Secure the Shower Frame

Parts Required:

Part No.	Description	Qty
25	Allen Wrench	1
22	Screw Cap	2
13	Telescopic Rail Stop	2
18	ST4 × 12 Self-Tapping	2

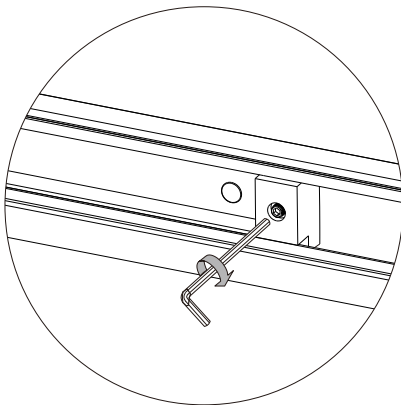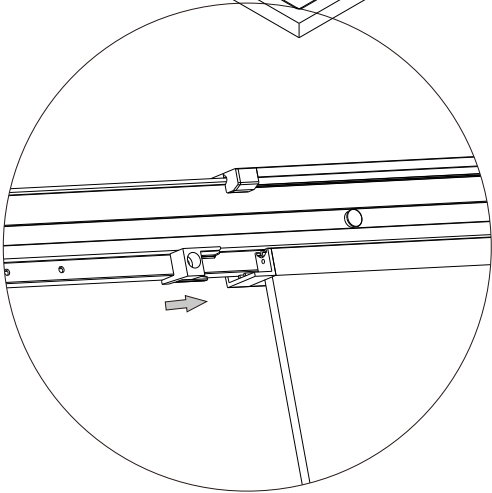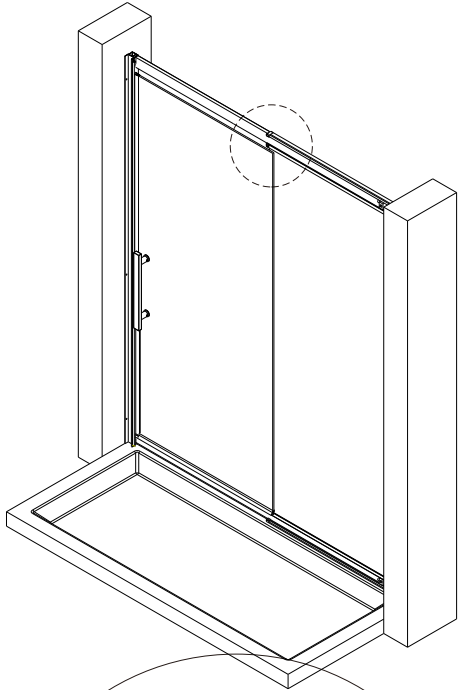

1. Use the Allen wrench (#25) to tighten the telescopic adjustment set screws on the rail.

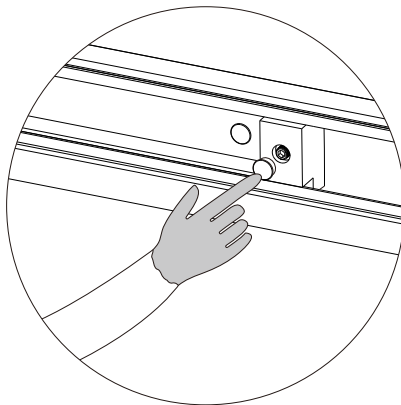


2. Install the screw caps (#22).

3. Insert the telescopic rail stops (#13).



4. Using a 1/8" (3 mm) drill bit, drill a pilot hole through the mounting hole of the telescopic rail stop.

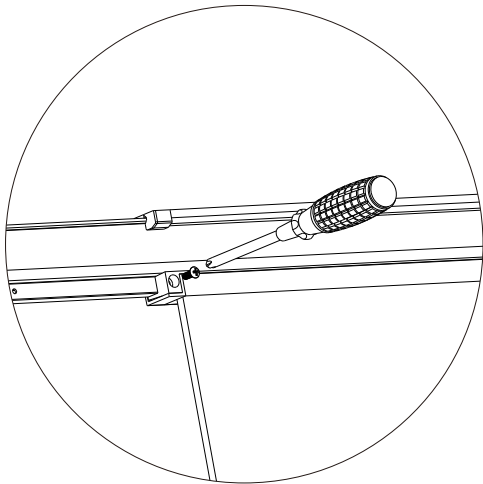



5. Secure the telescopic rail stops with a Phillips screwdriver and an St4x12 self-tapping screw (#18).

INSTALLATION STEPS


STEP 5-Pivot Assembly Installation

Parts Required:



Part No.	Description	Qty
17	Pivot Assembly	1
18	ST4 × 12 Self-Tapping	2
15	Pivot Base	1

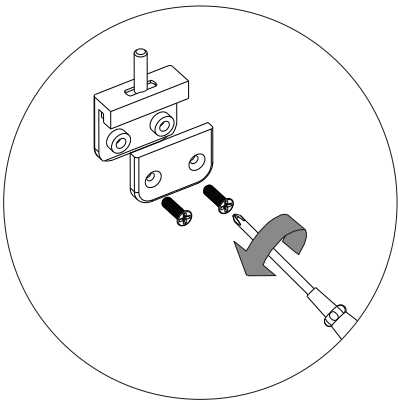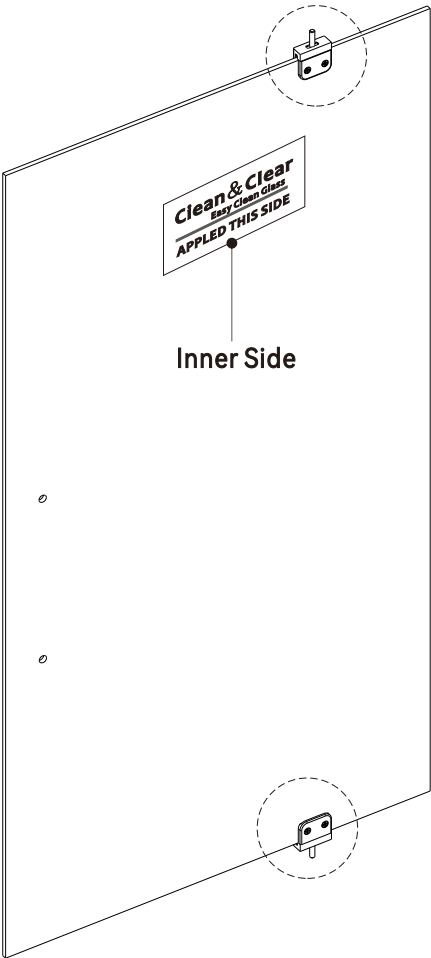

1. Use a Phillips screwdriver to remove the screws from the pivot assembly (#17) and detach the clamp plate.

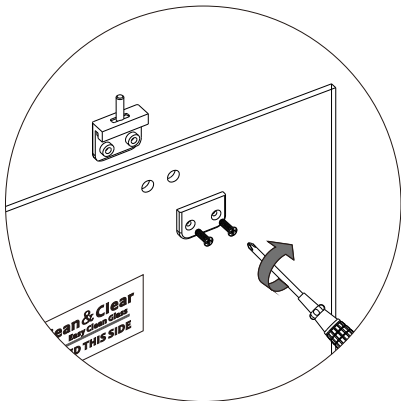

2. Install the pivot assembly onto the top and bottom of the glass door.

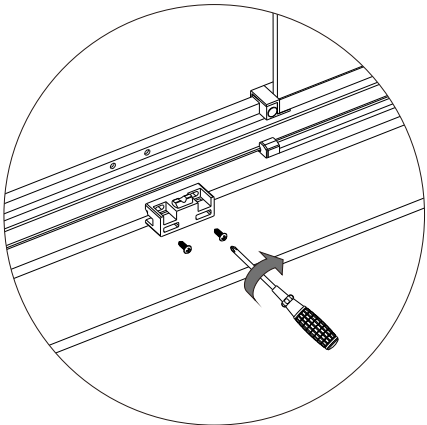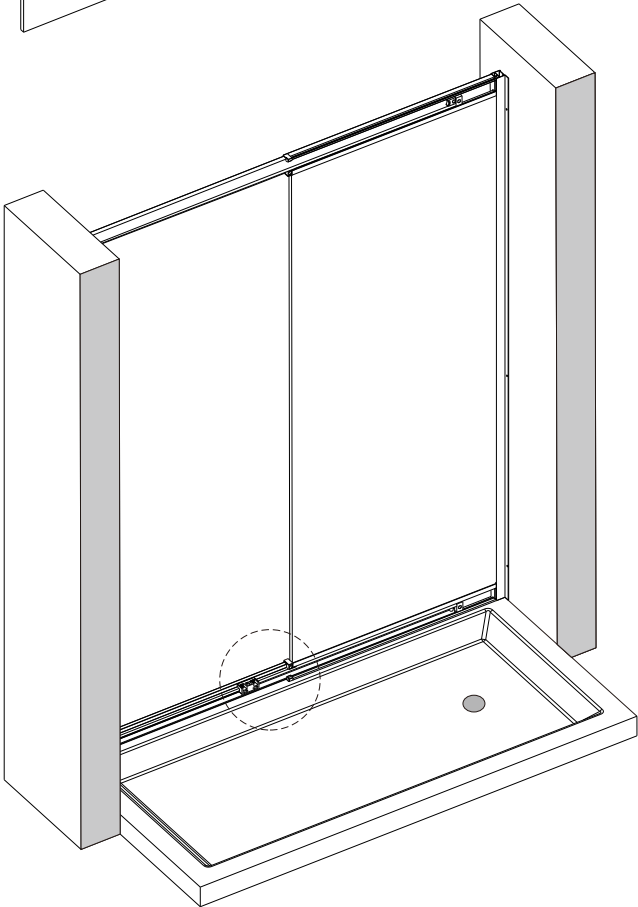


3. Secure the pivot base (#15) to the bottom rail using the ST4x12 self-tapping screws (#18).

INSTALLATION STEPS


STEP 6-Pivot Door Installation

Parts Required:


Part No.	Description	Qty
15	Pivot Base	1
18	ST4 x 12 Self-Tapping	2

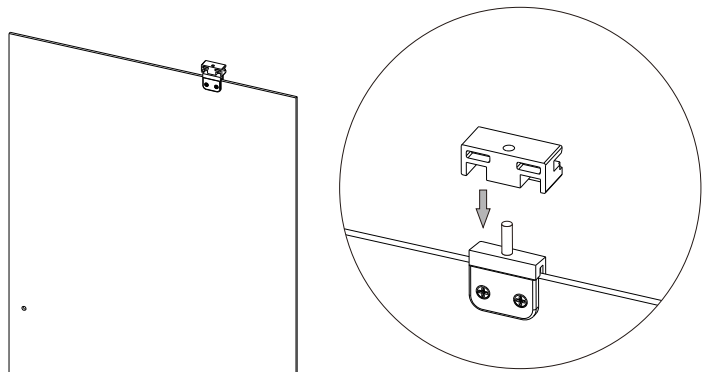



1.Position the pivot base (#15) over the top pivot assembly (#17) that is already attached to the door.

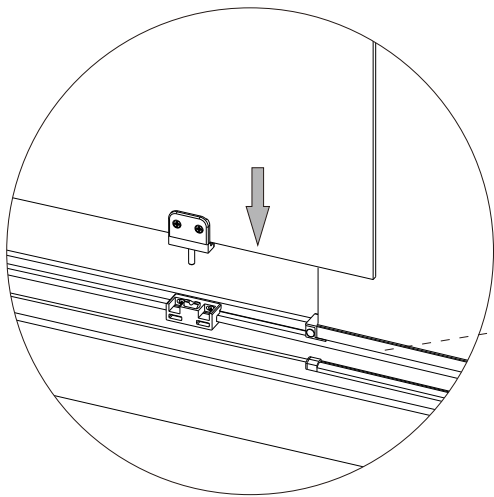

2.Insert the bottom pivot assembly (#17) of the door panel into the pivot base (#15).

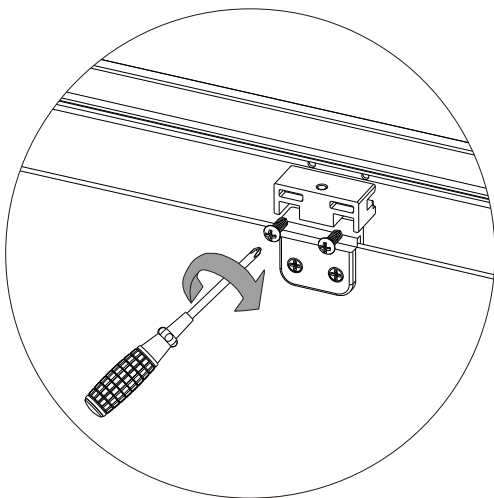

3.Align the pivot base with the pre-drilled hole in the top rail. Secure it using an ST4x12 self-tapping screw (#18).

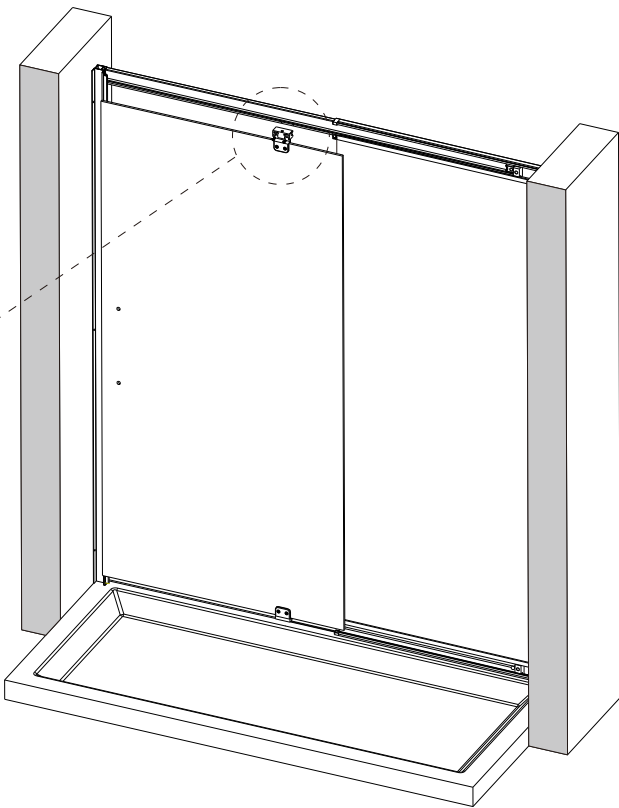
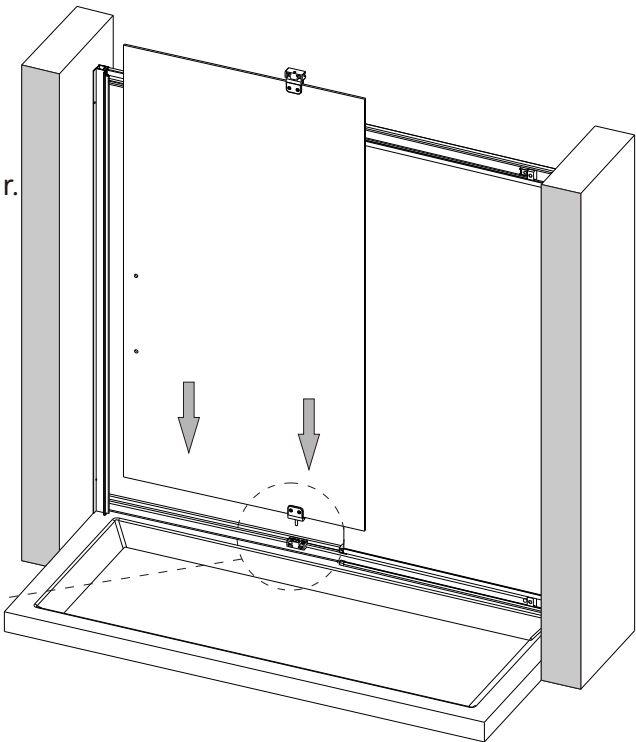


INSTALLATION STEPS


STEP 7-Magnetic Seal and Door Sweep Installation

Parts Required:


Part No.	Description	Qty
10	Magnetic Seal	1
11	Door Sweep	1

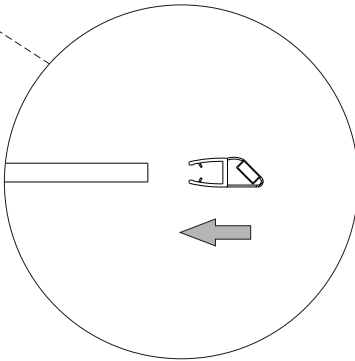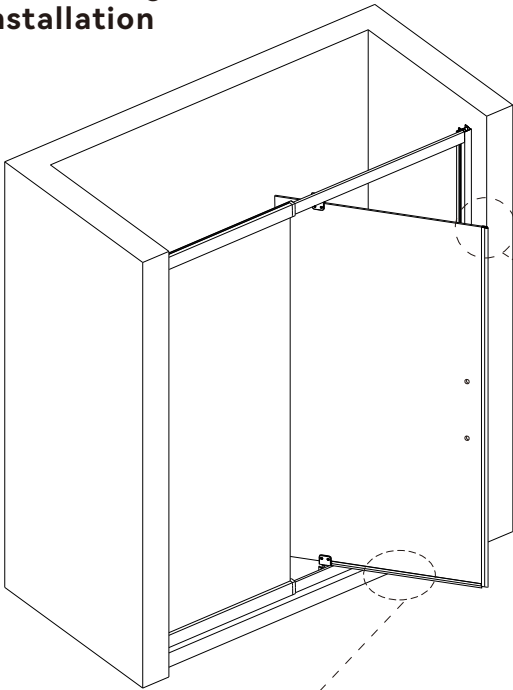



1.Install the magnetic seal (#10) on the pivot door.

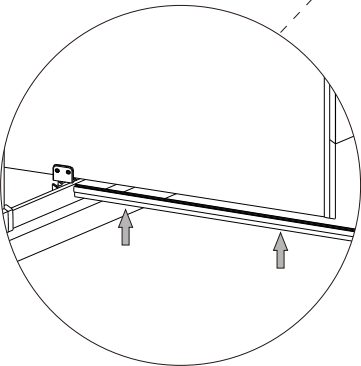


2. Attach the door sweep (#11) to the bottom edge of the door panel.

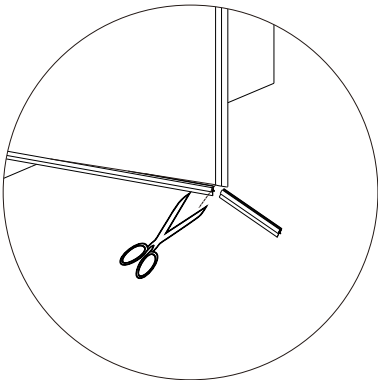

3.Trim the excess length of the door sweep flush with the edge of the magnetic seal.

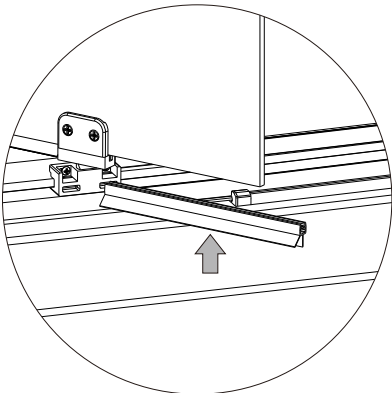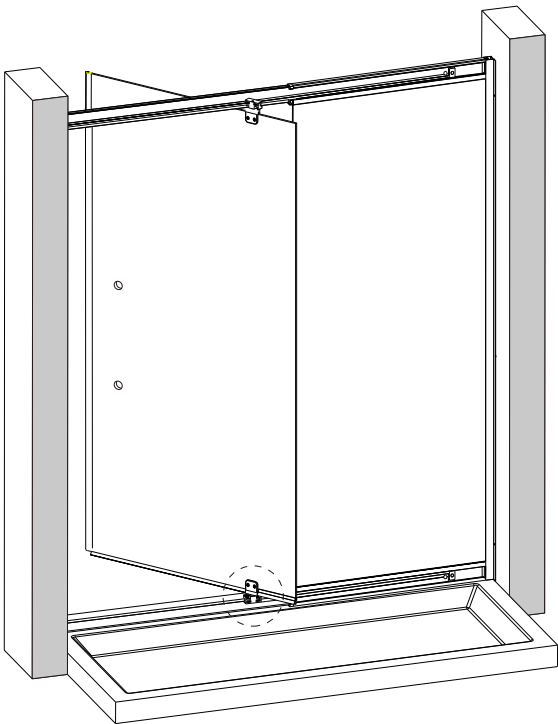

4.Install the remaining piece of the door sweep on the opposite side of the door bottom.

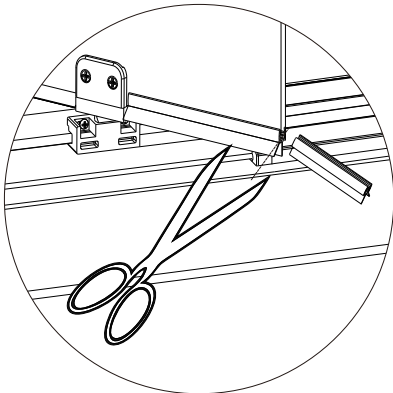



5.Trim off any excess material.

INSTALLATION STEPS



STEP 8-Single-lipped Gasket and Handle Installation

Parts Required:

Part No.	Description	Qty
8	Long Single-lipped Gasket	1
9	Short Single-lipped Gasket	2
26	Support Panel	1
7	Shower Door Handle	1

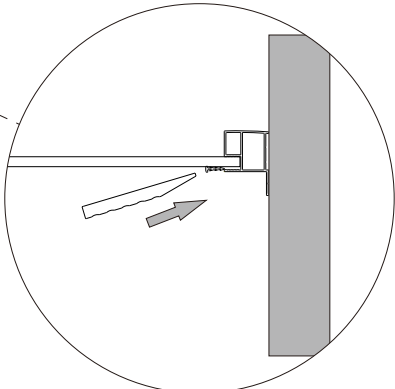
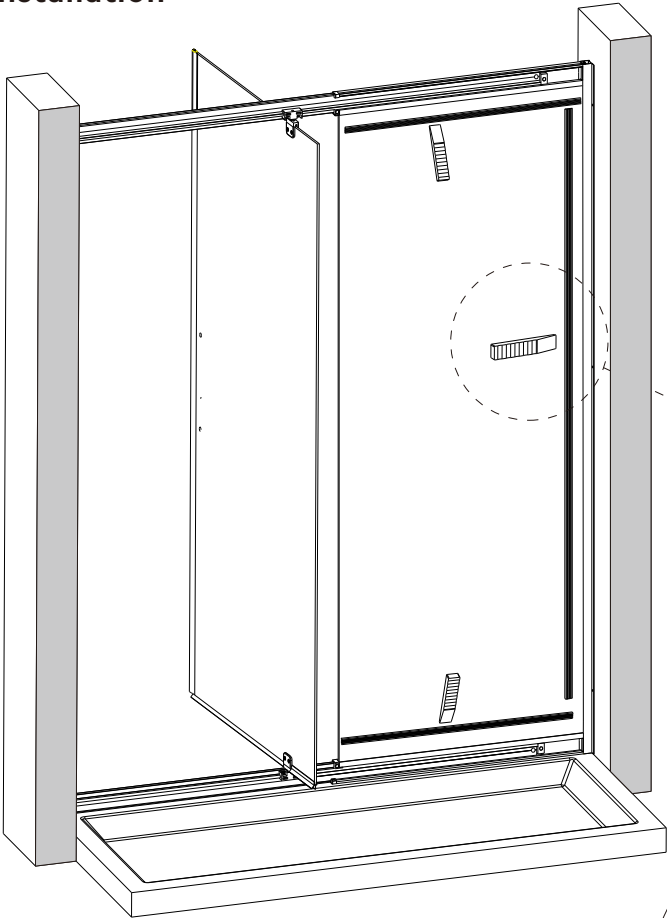


1.Using the support panel (#26) as a tool, tap the single-lipped gaskets (#8, #9) into the gaps around the glass to create a seal.

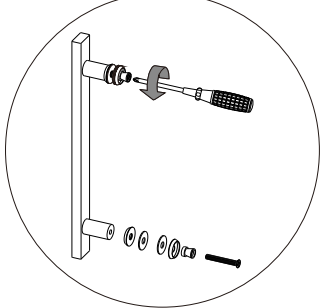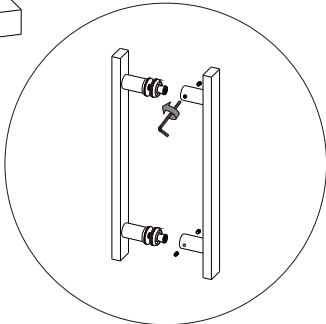

2.Use an Allen wrench to loosen and remove the set screws from the handle.

3.Use a Phillips screwdriver to remove the screws and detach the handle brackets from the handle.

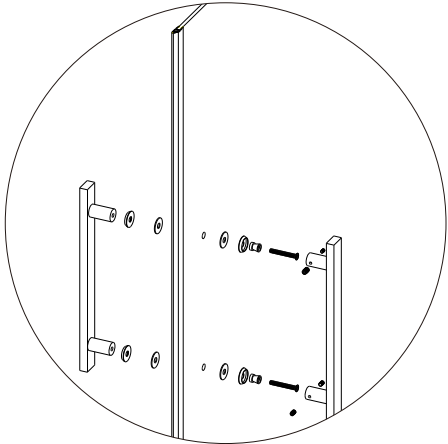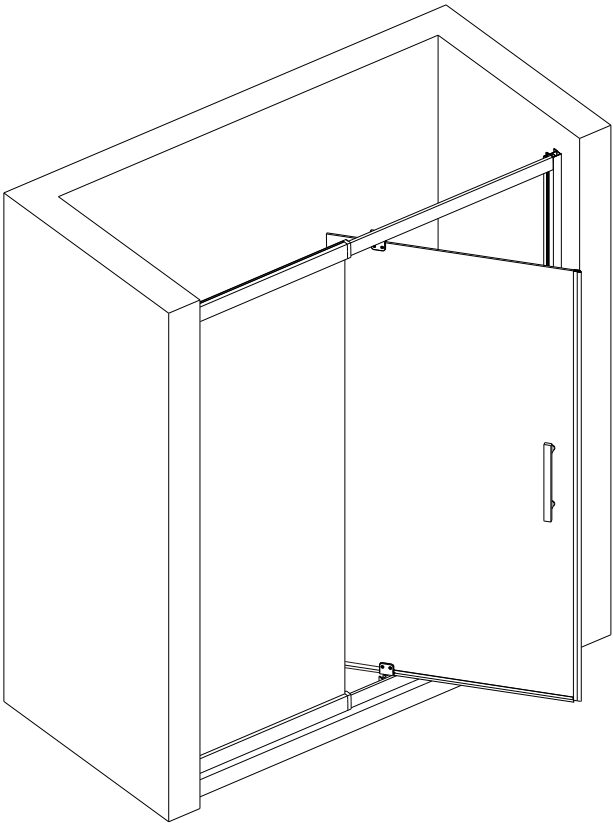



4. Position the handle (#7) on the door panel and secure it by tightening the screws into the pre-drilled holes.

INSTALLATION STEPS



STEP 9-Covers and Caps Installation

Parts Required:


Part No.	Description	Qty
16	Pivot Cover	4
23	Wall Jamb Screw Cap	6
14	Pivot Base Cover	2

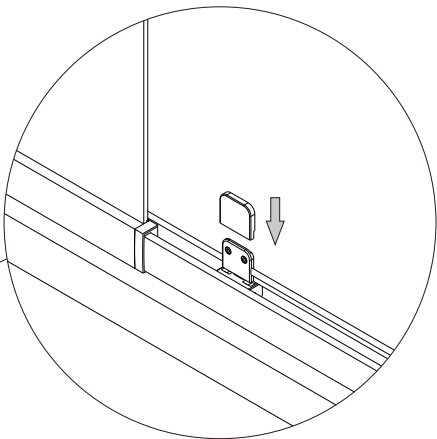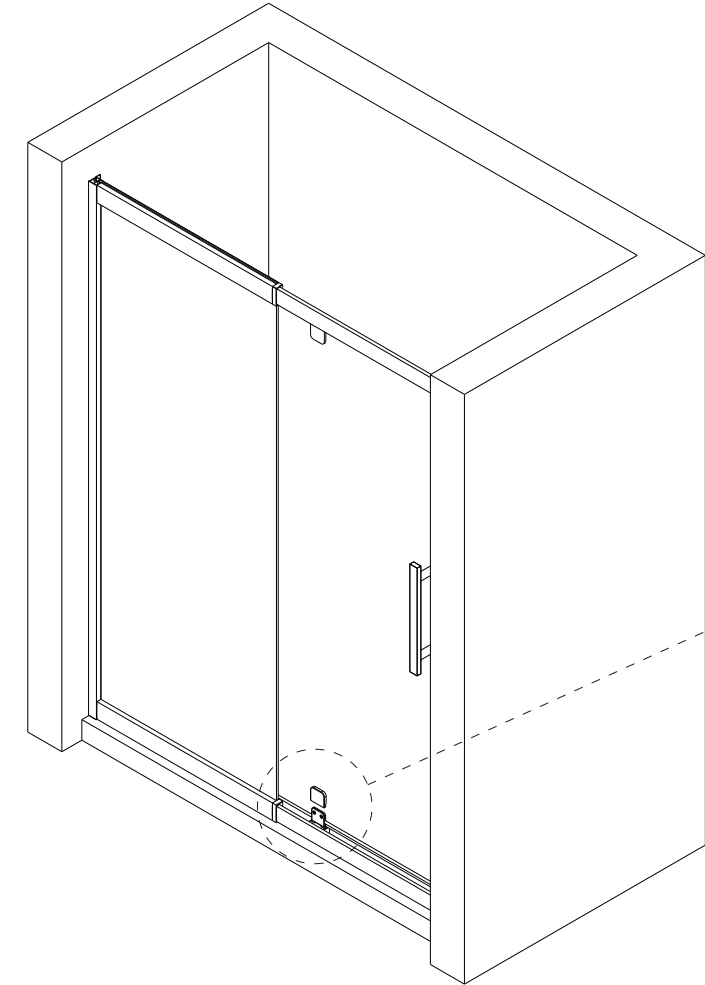

1.Snap the pivot covers (#16) onto the pivot assemblies.

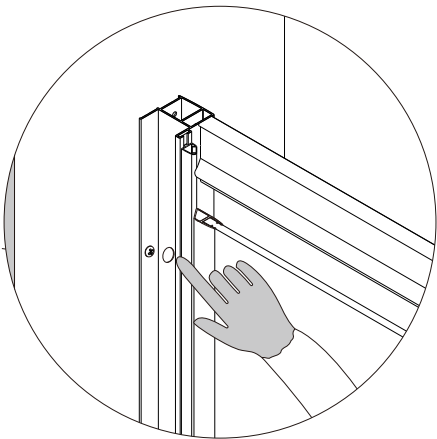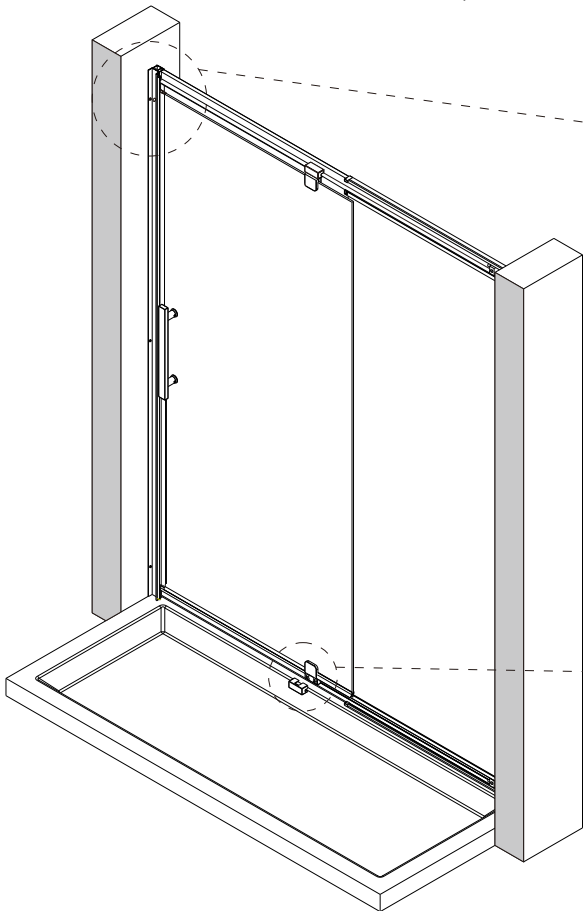


2.Press the wall jamb screw caps (#23) onto the ends of the screws.

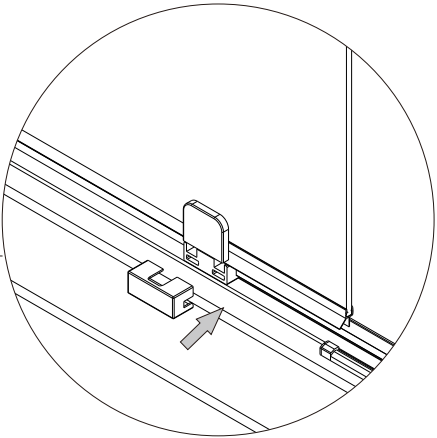

3.Install the pivot base covers (#14).

INSTALLATION STEPS

STEP 10 - Sealing (Before First Use)

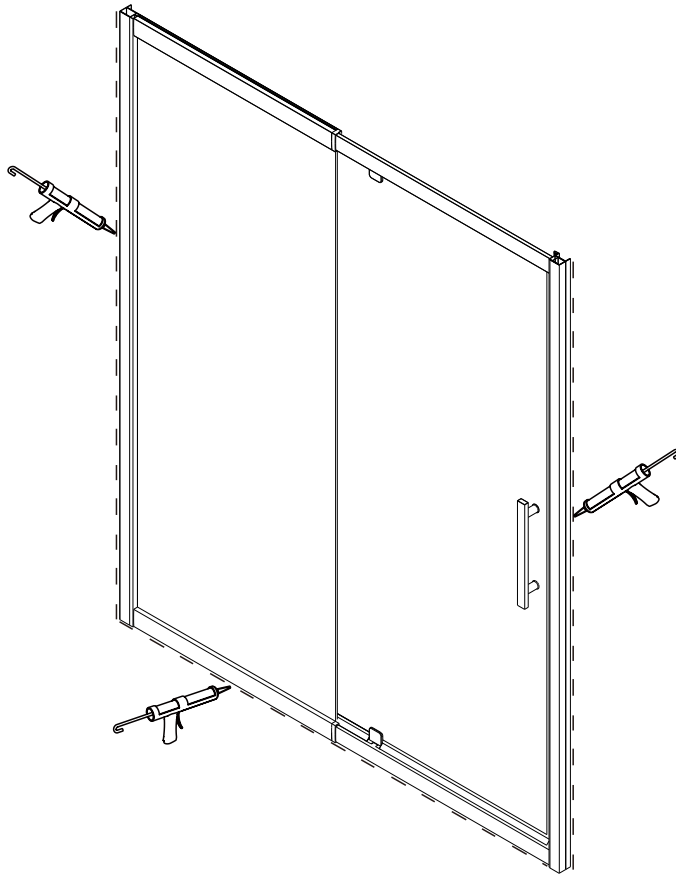

24 HOURS

Application:

Apply a continuous bead of clear, waterproof silicone sealant to:

All wall joints

The interior and exterior edges of the shower threshold

Curing:

Allow the sealant to cure for 24 hours before using the shower.

Avoid all water contact with the sealed areas for the first 48 hours.

Do not clean or touch the sealing during the curing period.

Sealant Specification:

Use 100% silicone, bathroom-grade sealant only.