



① canopy 1pcs ② cap nut 2pcs ③ screw 1pcs	④ lock nut & teeth lock washer 3pcs ⑤ bended metal profile 3pcs ⑥ screw 3pcs	⑦ metal ring 1pcs	⑧ hanging tube 1pcs	⑨ threaded rod light fixture 1pcs
⑩ glass lampshade 1pcs	⑪ hanging tube 1pcs ⑫ lock nut 1pcs ⑬ metal cover 1pcs ⑭ end cap 1pcs	X 1PCS X 1PCS	X 3PCS X 3PCS	X 3PCS X 3PCS

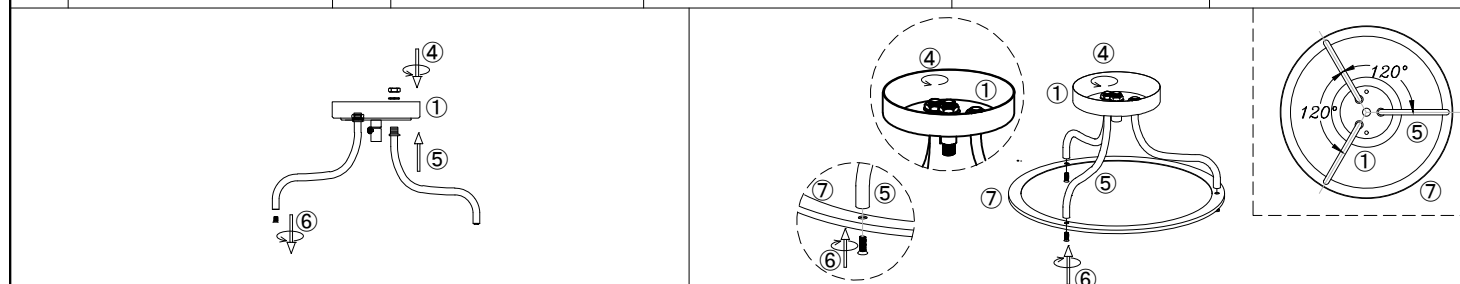


1. Install the profile ⑤ to the canopy ① with lock nut & teeth lock washer ④, and remove out the screw ⑥ from profile ⑤.(don't tighten the lock nut ④ at this step)

2. Install the metal ring ⑦ to the profile ⑤ with screw ⑥, please don't tighten the screw ⑥ until all of the screws ⑥ are ready in the holes of the ring ⑦, rotate to fasten the screws ⑥ and lock nuts ④ at last.

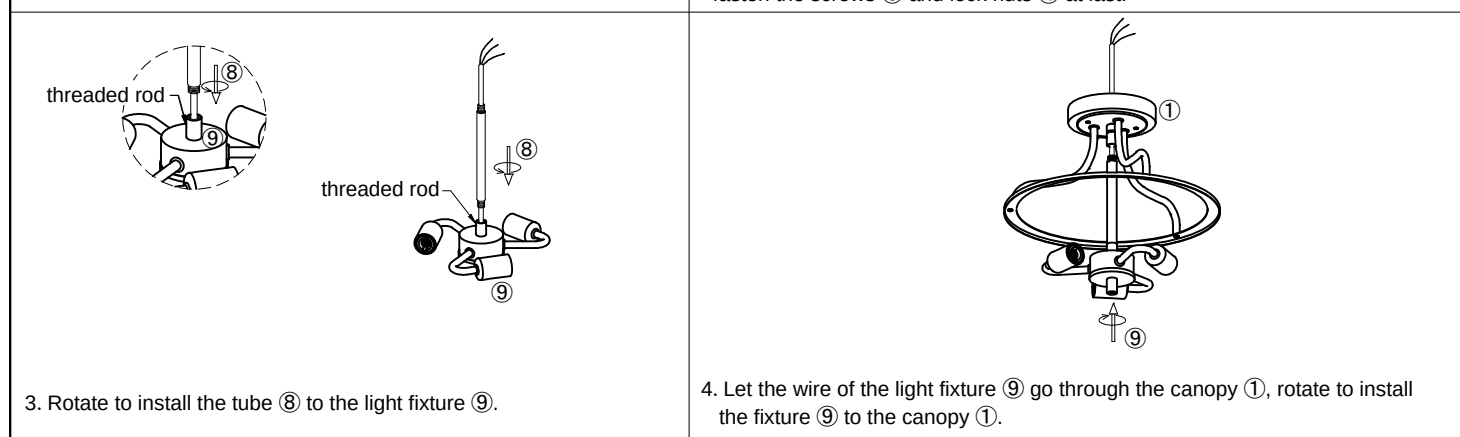

3. Rotate to install the tube ⑧ to the light fixture ⑨.

4. Let the wire of the light fixture ⑨ go through the canopy ①, rotate to install the fixture ⑨ to the canopy ①.

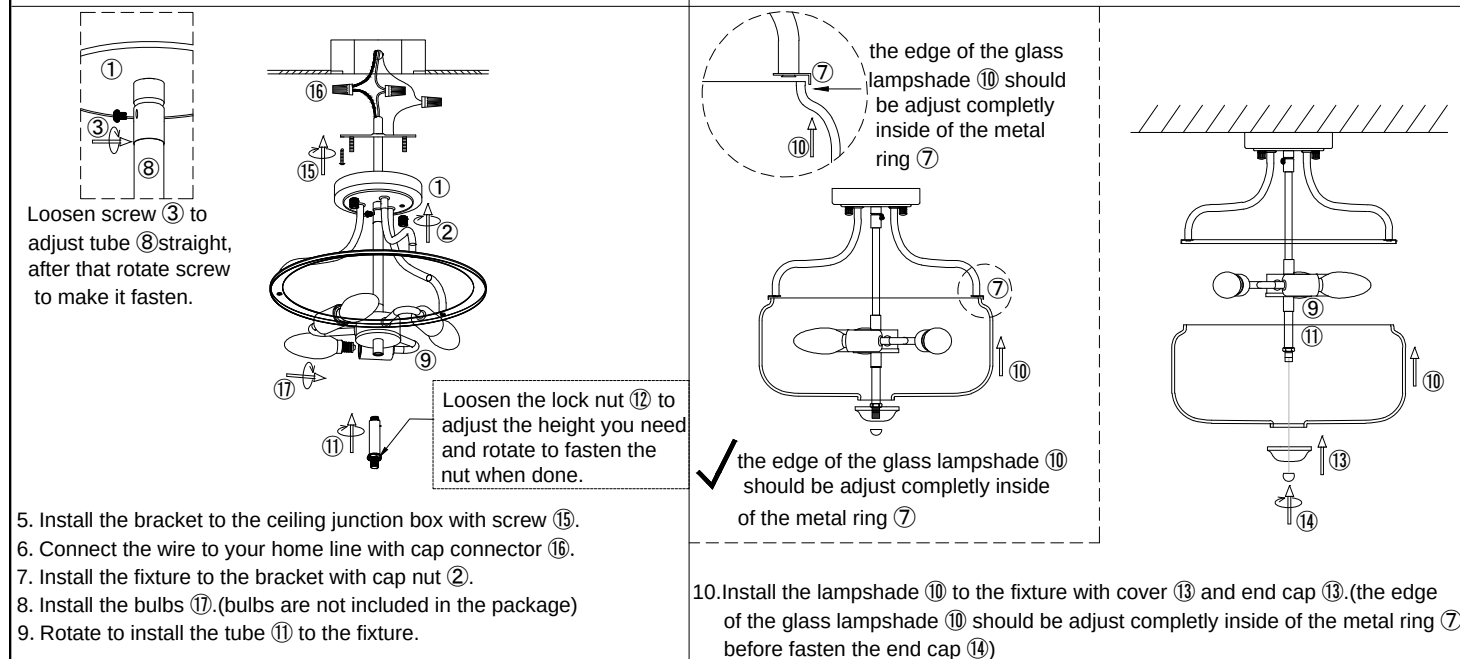

Loosen screw ③ to adjust tube ⑧ straight, after that rotate screw to make it fasten.

Loosen the lock nut ⑫ to adjust the height you need and rotate to fasten the nut when done.

the edge of the glass lampshade ⑩ should be adjust completely inside of the metal ring ⑦

10. Install the lampshade ⑩ to the fixture with cover ⑬ and end cap ⑭.(the edge of the glass lampshade ⑩ should be adjust completely inside of the metal ring ⑦ before fasten the end cap ⑭)

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !