


Pantry


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

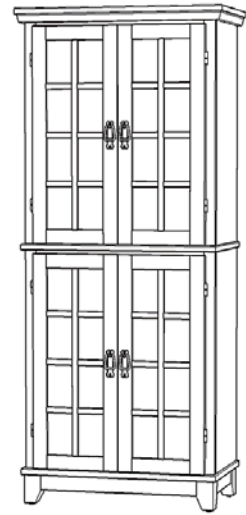

Part List

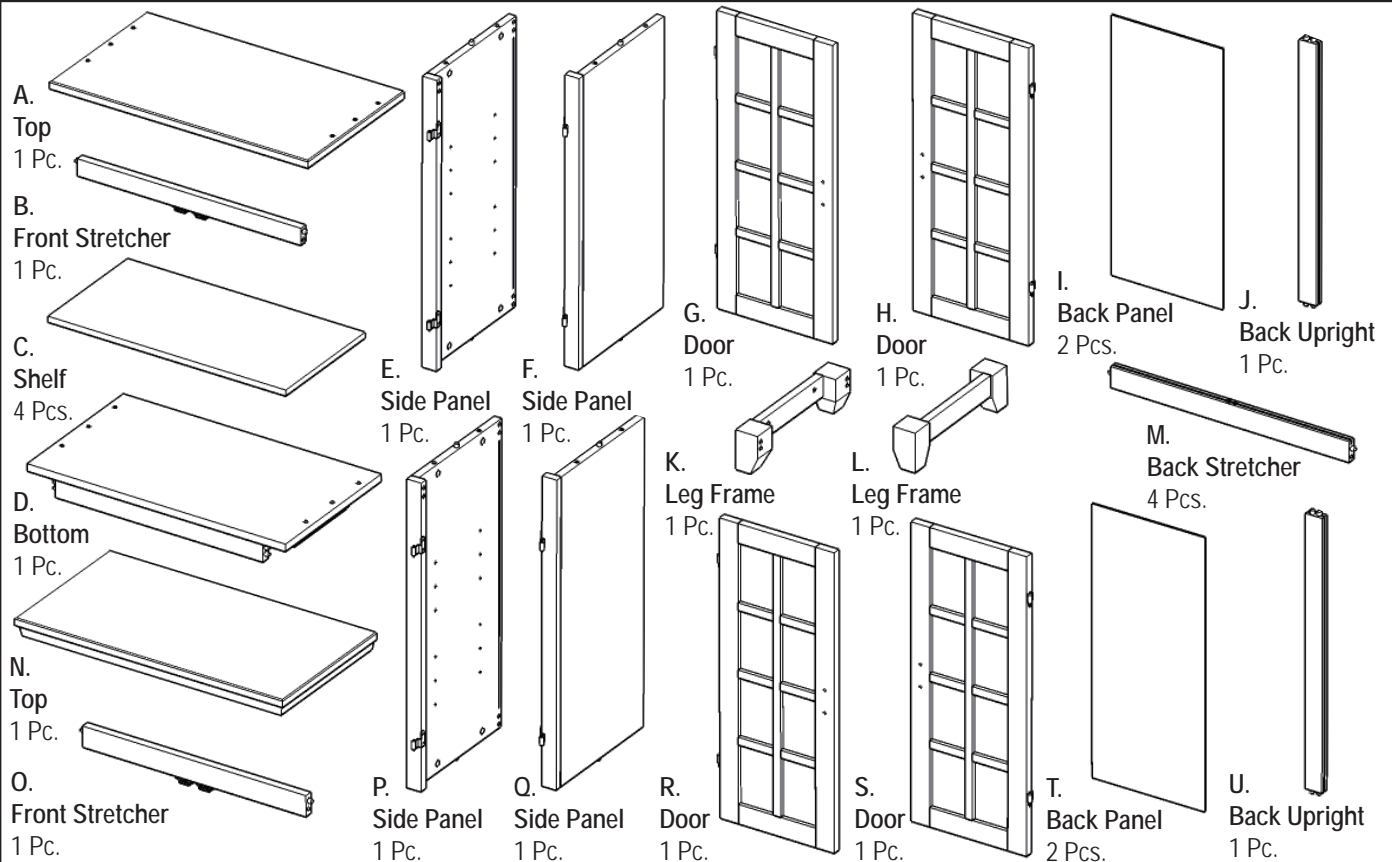

Hardware List

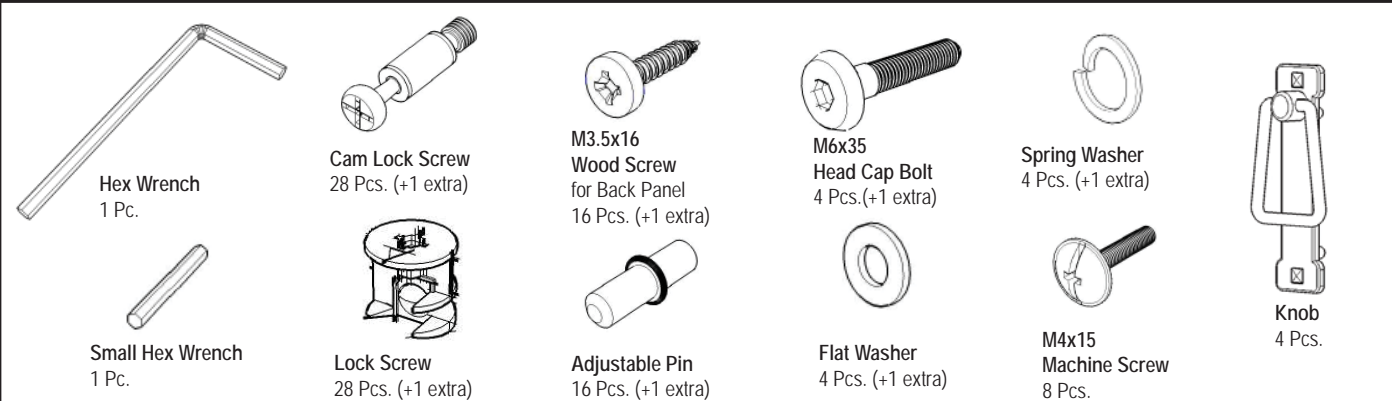

Tools required for assembly : Phillips screwdriver

Tools recommended for assembly : Level

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the head cap bolts and screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly item must be level to work properly. Use the included adjustable levelers to level.



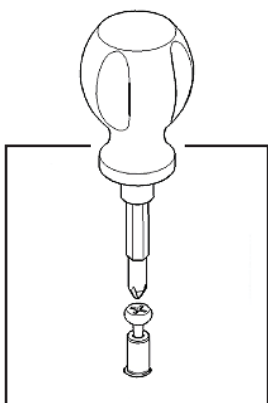


Figure 1

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), (N), Bottom (D) and Side Panel (E), (F), (P), (Q).
(See Figure 1)

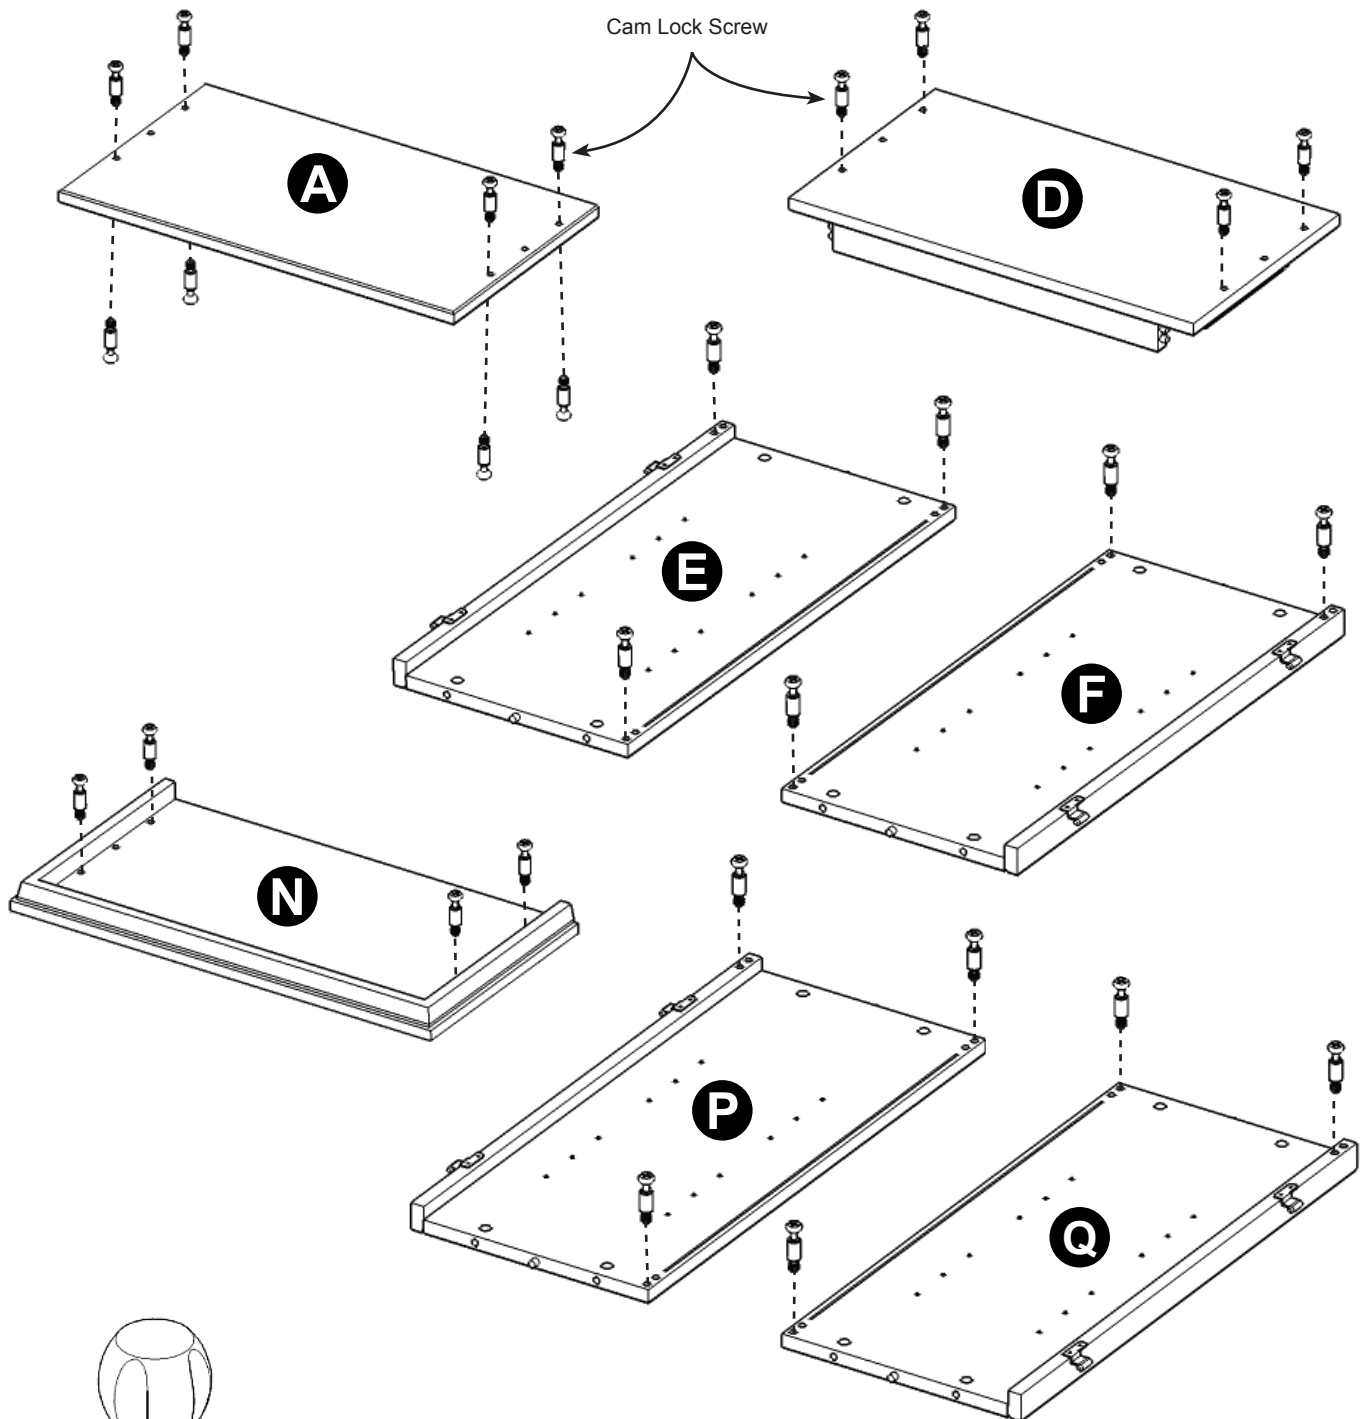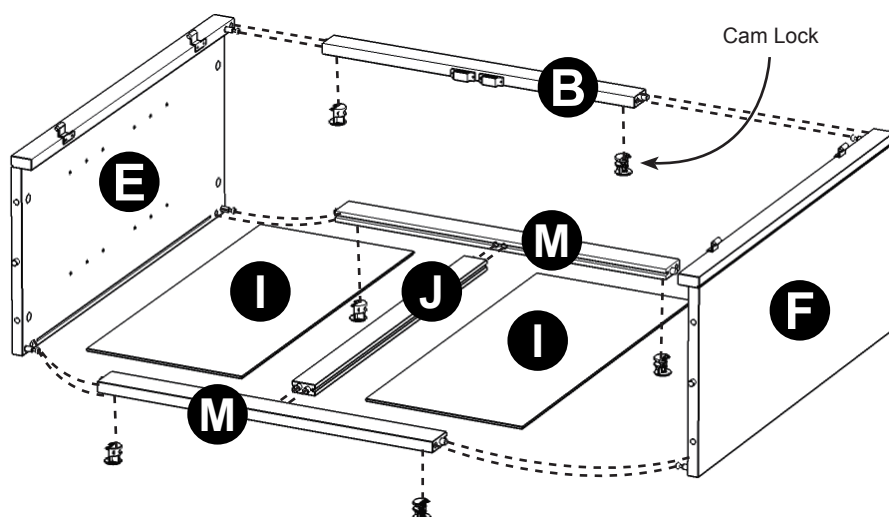

STEP 2

Attach Back Stretcher (M) to Side Panel (F) with Cam Lock.


Attach Back Upright (J) to Back Stretcher (M).

Slide Back Panels (I) to the unit.

Attach Back Stretcher (M) to unit with Cam Lock.

Attach Front Stretcher (B) to unit with Cam Lock.

Attach Side Panel (E) to the unit with Cam Locks.
(See Figure 2)

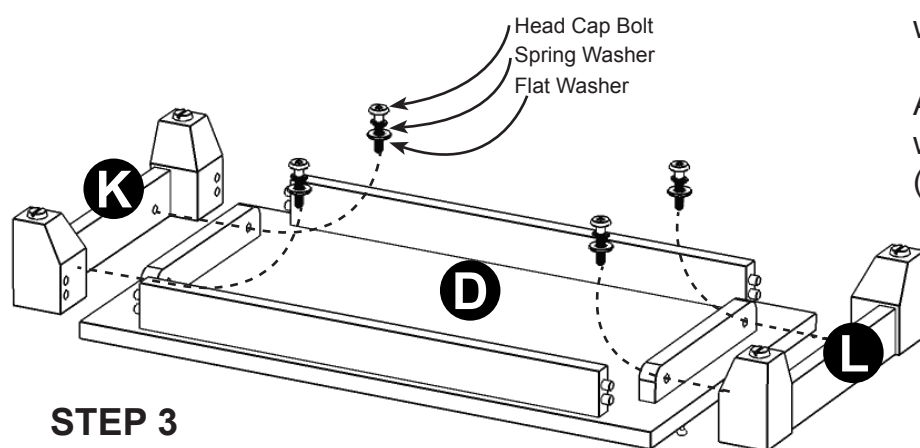

STEP 3

Attach Leg Frames (K), (L) to the Bottom (D) with Flat Washers, Spring Washers and Head Cap Bolts. (See Figure 3)

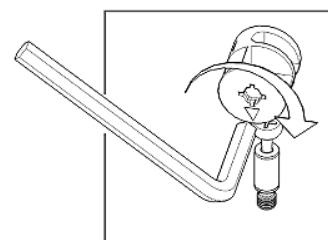


Figure 2


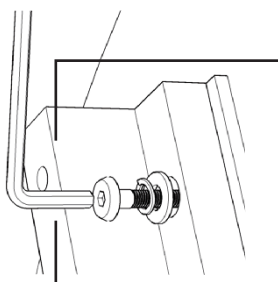



Figure 3

STEP 4

Attach unit from Step 2 to unit from Step 3 with Cam Locks.


Place Top (A) onto unit with Cam Locks.

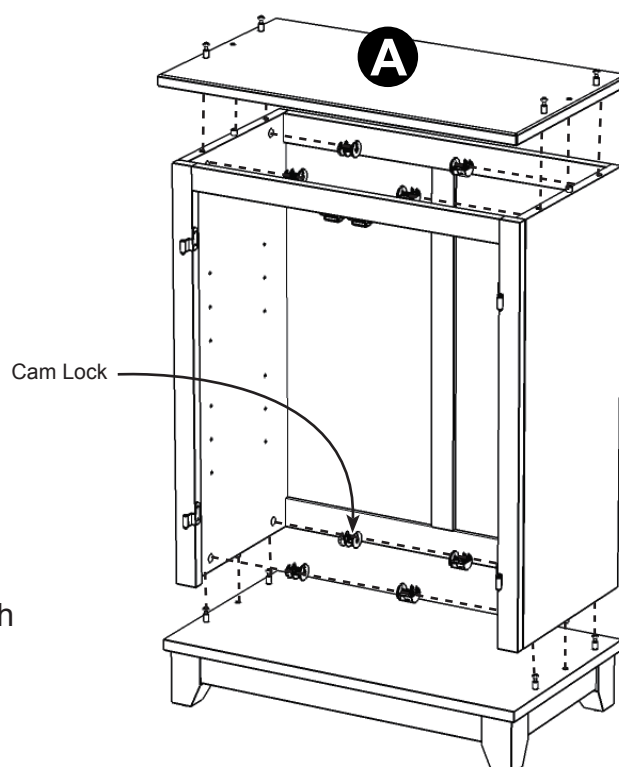

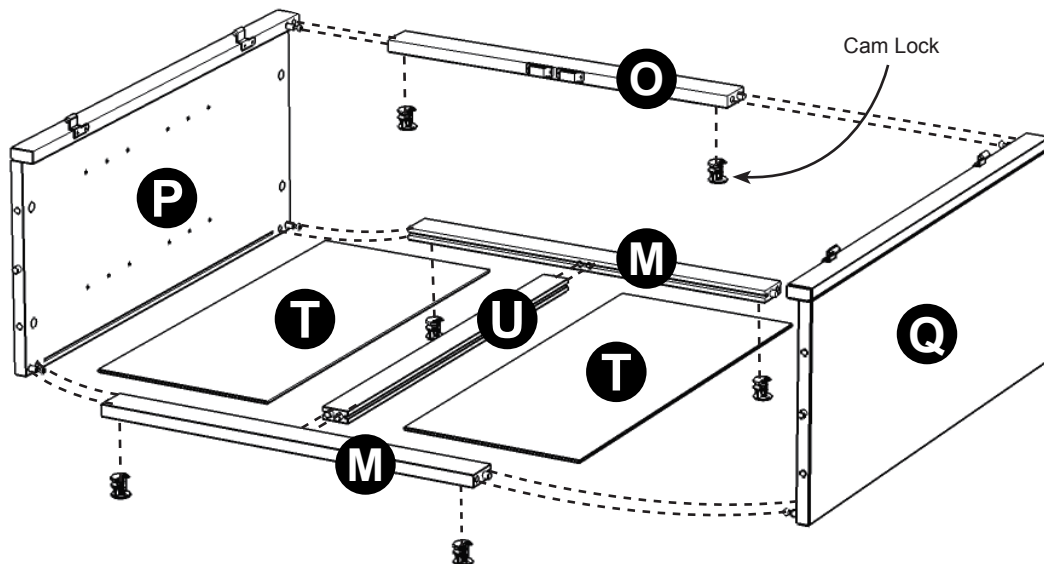

STEP 5

Attach Back Stretcher (M) to Side Panel (Q) with Cam Lock. Attach Back Upright (U) to Back Stretcher (M). Slide Back Panels (T) to the unit. Attach Back Stretcher (M) to unit with Cam Lock. Attach Front Stretcher (O) to unit with Cam Lock. Attach Side Panel (P) to the unit with Cam Locks.

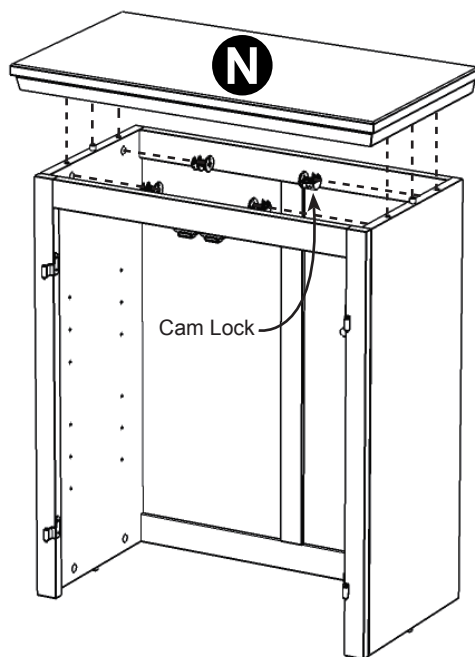


STEP 6

Place Top (N) onto the unit with Cam Locks.

STEP 7

Attach unit from Step 6 to unit from Step 4 with Cam Locks.

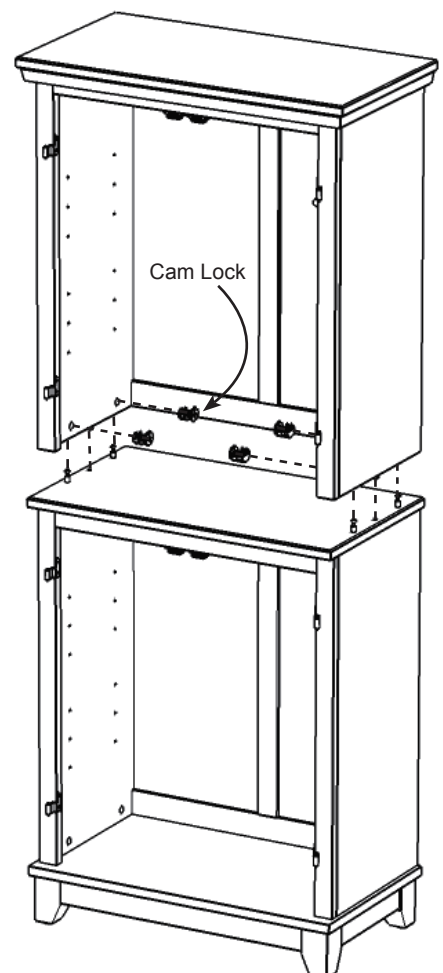

STEP 8

Insert Adjustable Pins into side panels at desired location.
Place Shelves (C) into position.

Attach Doors (G), (H), (R) and (S) to the side panels by sliding the door lift hinges into the side panel lift hinges.
(See Figure 4)

Attach Pull Handles to Door (G), (H), (R) and (S) with Machine Screws.
(See Figure 5)

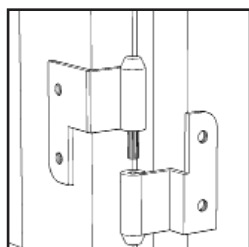
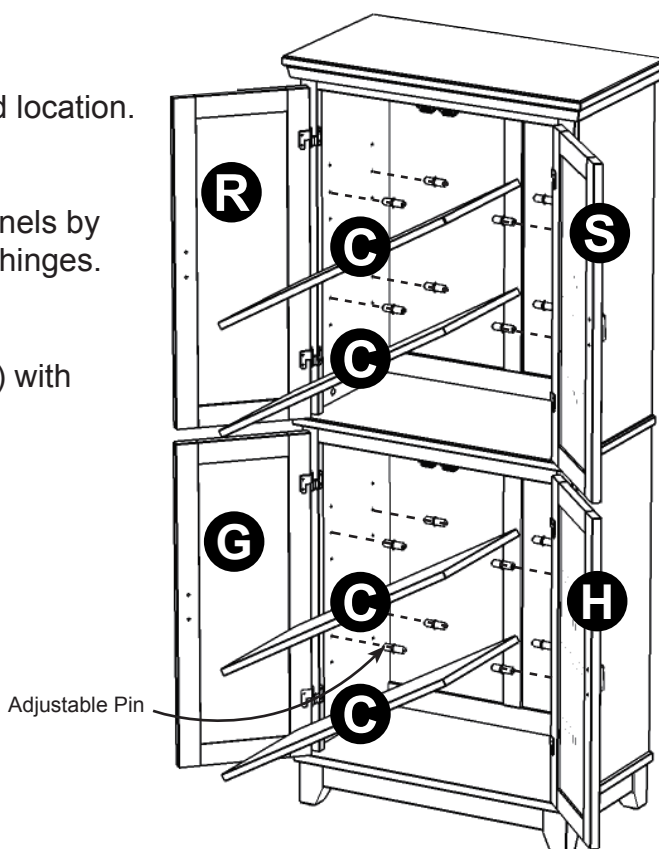


Figure 4

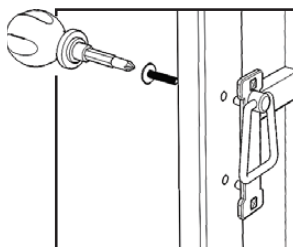


Figure 5


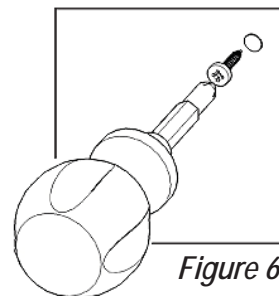


Figure 6

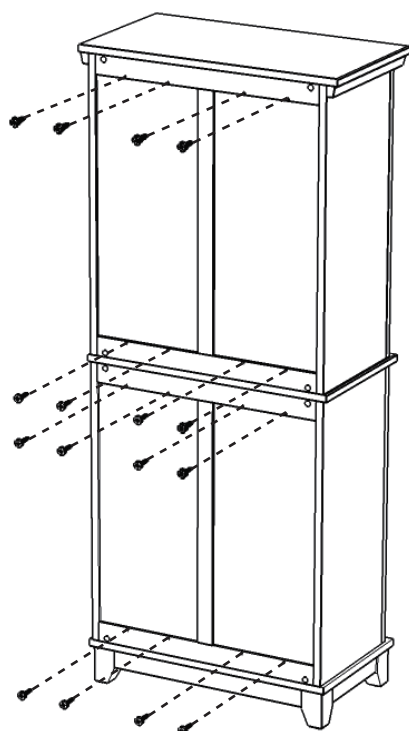

STEP 9

Level the unit by adjusting the adjustable levelers on the bottom of unit. (See Figure 7)

Insert Wood Screws for Back Panel into the pre-drilled holes in the back panel.

Note : Please make sure unit is level before tightening these screws.

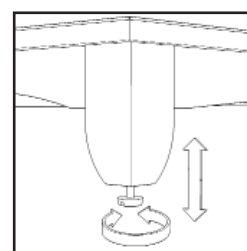


Figure 7