



# ***Corner Closet System***

## **Assembly Instructions**


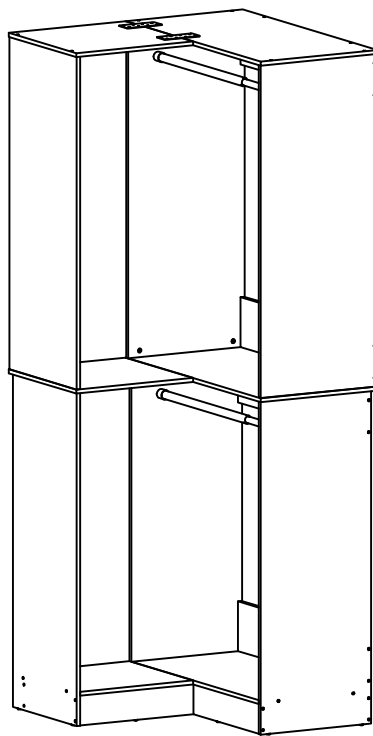









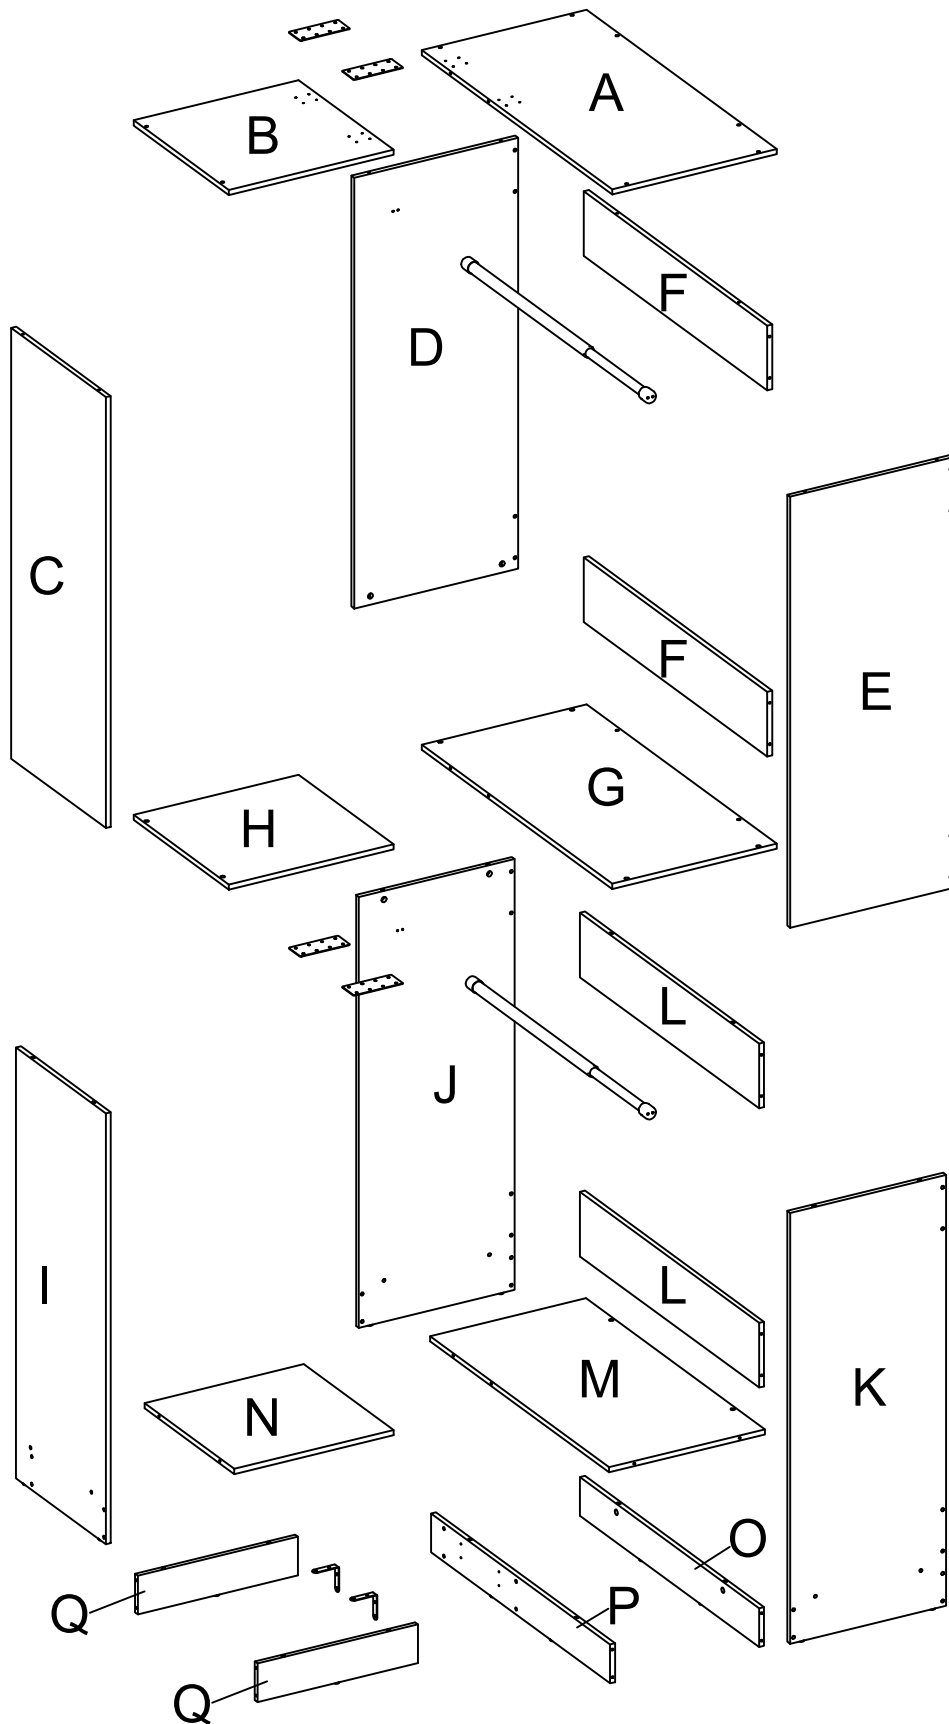







**Attention:** Please ensure you have all parts before commencing assembly.  
Please read all the instructions before commencing.

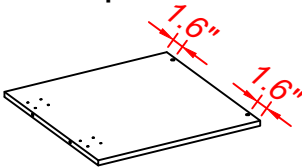



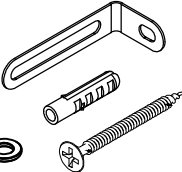





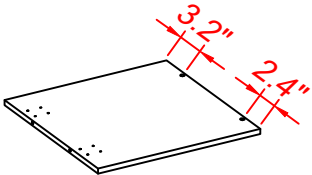



# PART LIST



# PART LIST

<b>A x 1pc</b> 	<b>B x 1pc</b> 	<b>C x 1pc</b> 	<b>D x 1pc</b> 
<b>E x 1pc</b> 	<b>F x 2pcs</b> 	<b>G x 1pc</b> 	<b>H x 1pc</b> 
<b>I x 1pc</b> 	<b>J x 1pc</b> 	<b>K x 1pc</b> 	<b>L x 2pcs</b> 
<b>M x 1pc</b> 	<b>N x 1pc</b> 	<b>O x 1pc</b> 	<b>P x 1pc</b> 
<b>Q x 2pcs</b> 			

## HARDWARE LIST

<p>①</p>  <p>M6x28      24 pcs</p>	<p>②</p>  <p>Ø12      24 pcs</p>	<p>③</p>  <p>M6x40      48 pcs</p>	<p>④</p>  <p>M6x30      6 pcs</p>
<p>⑤</p>  <p>M4x40      3 pcs</p>	<p>⑥</p>  <p>2 pcs</p>	<p>⑦</p>  <p>4 pcs</p>	<p>⑧</p>  <p>M3.5x12      40 pcs</p>
<p>⑨</p>  <p>56-101cm      2 pcs</p>	<p>⑩</p>  <p>2 pcs</p>	<p>⑪</p>  <p>2 pcs</p>	<p>⑫</p>  <p>M4x12      8 pcs</p>
<p>⑬</p>  <p>1 pc</p>	<p>⑭</p>  <p>M4      1 pc</p>		


\*Please count and verify all parts before assembly .\*

# How to install Camlocks

Connect the male camlock as directed in the assembly instructions with a screwdriver.


1

DO NOT OVER TIGHTEN

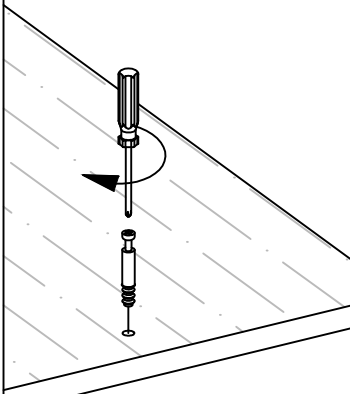

Put the male camlock into the entry hole.


2

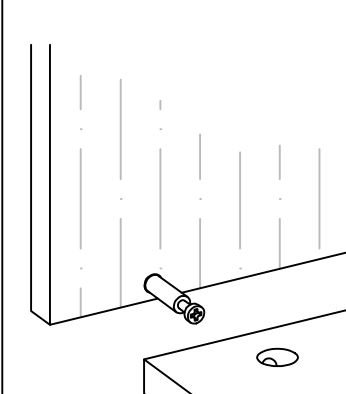

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

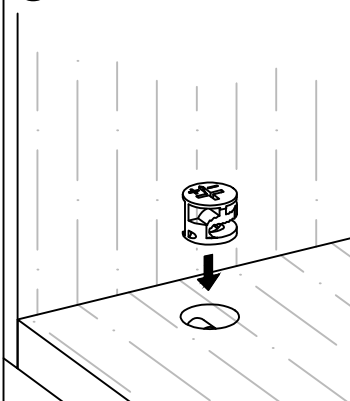


Screw the female camlock clockwise with a screwdriver.



You will feel a click when the camlock is locked in place.

The camlock is now completed.



4

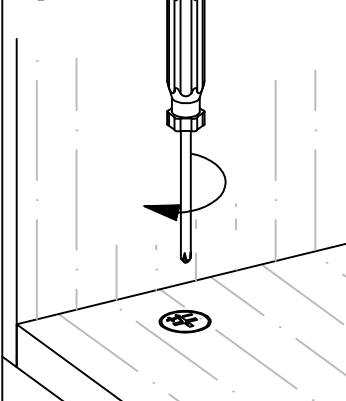

## STEP 1

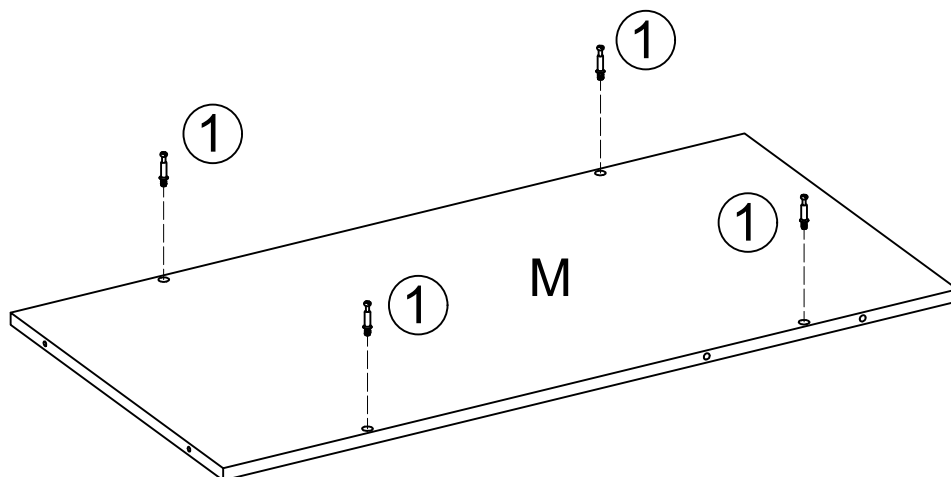



## STEP 2

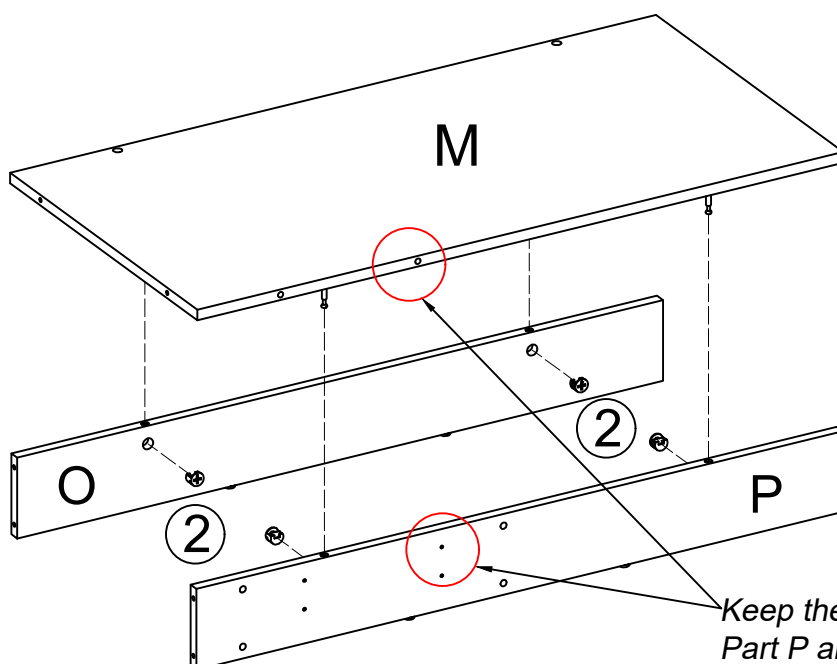



Keep the holes of the  
Part P and Part M toward  
this direction as shown


### STEP 3

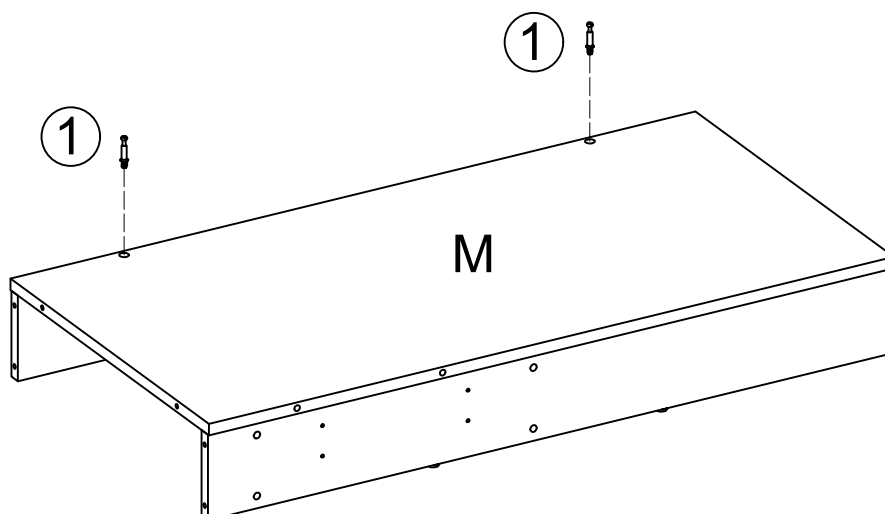


### STEP 4

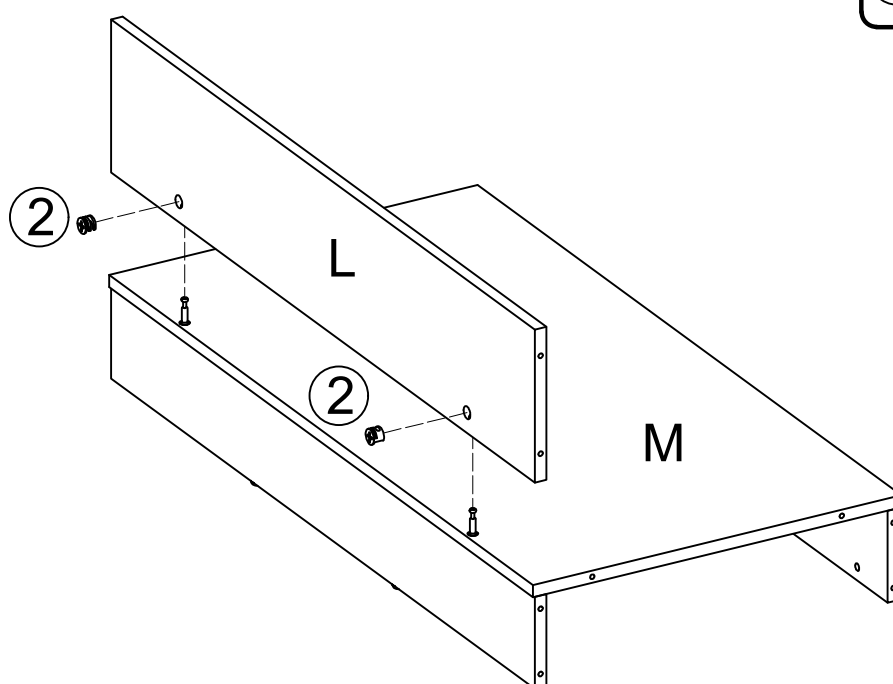



## STEP 5

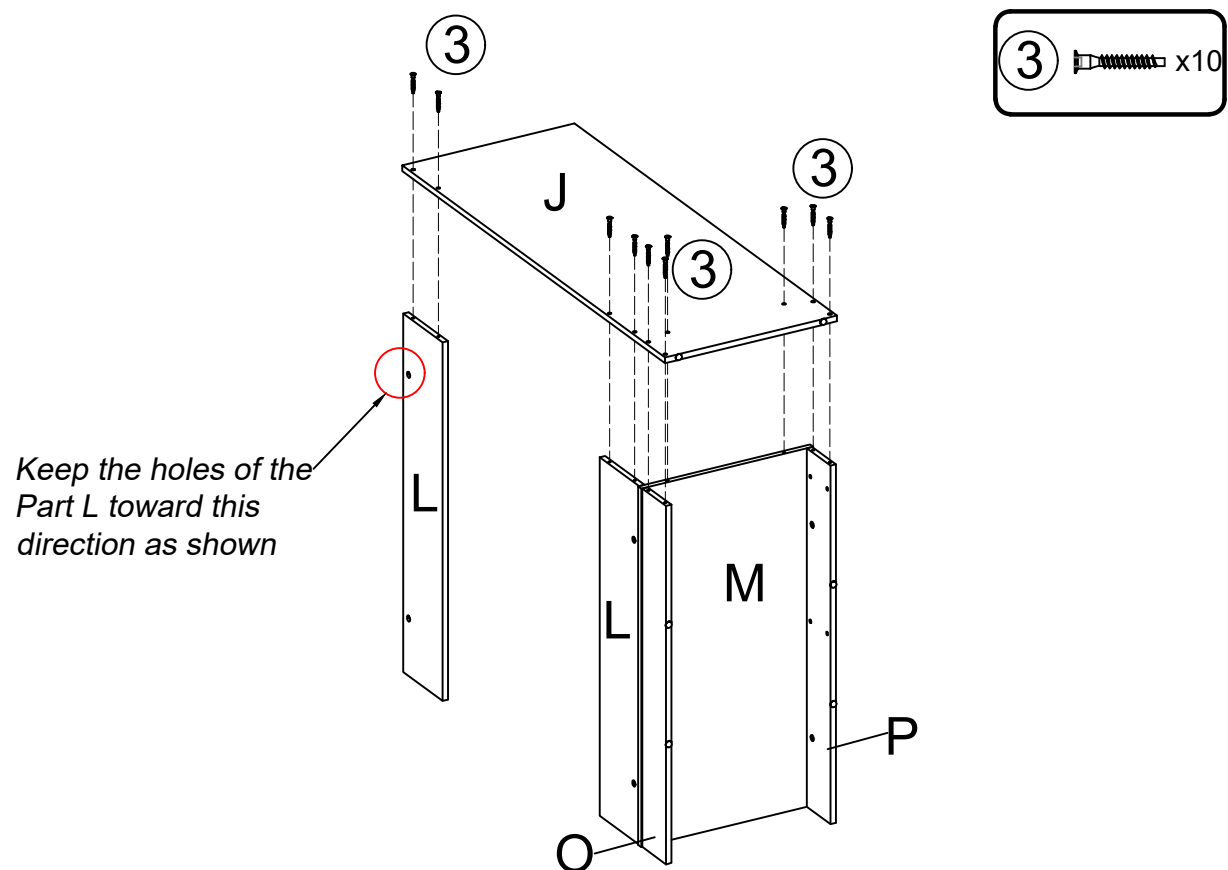



## STEP 6

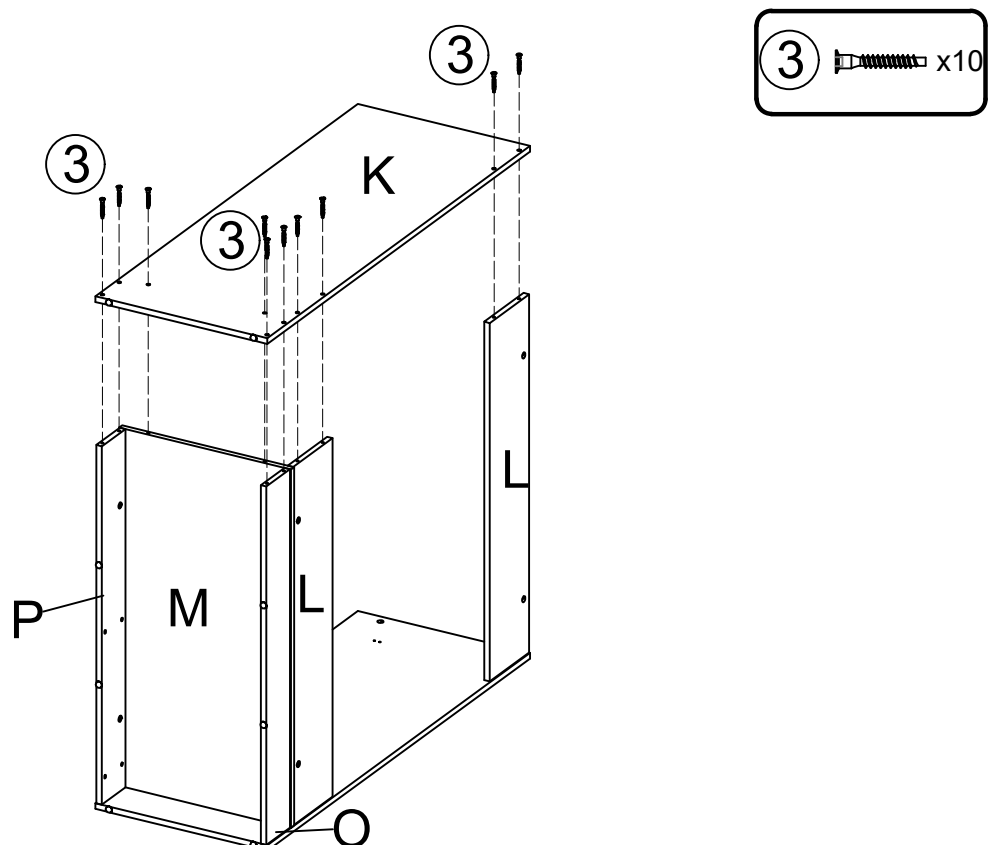




## STEP 7

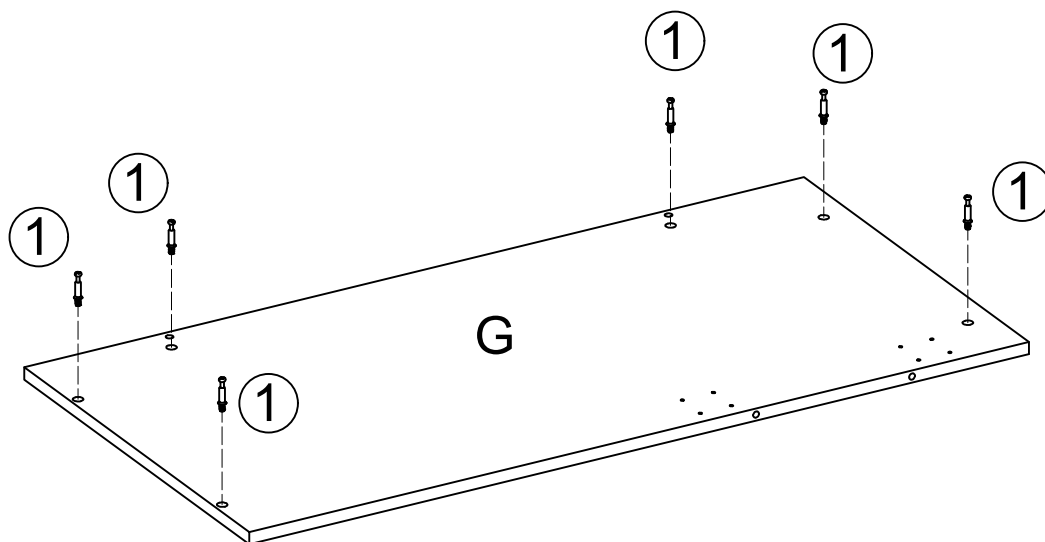



## STEP 8

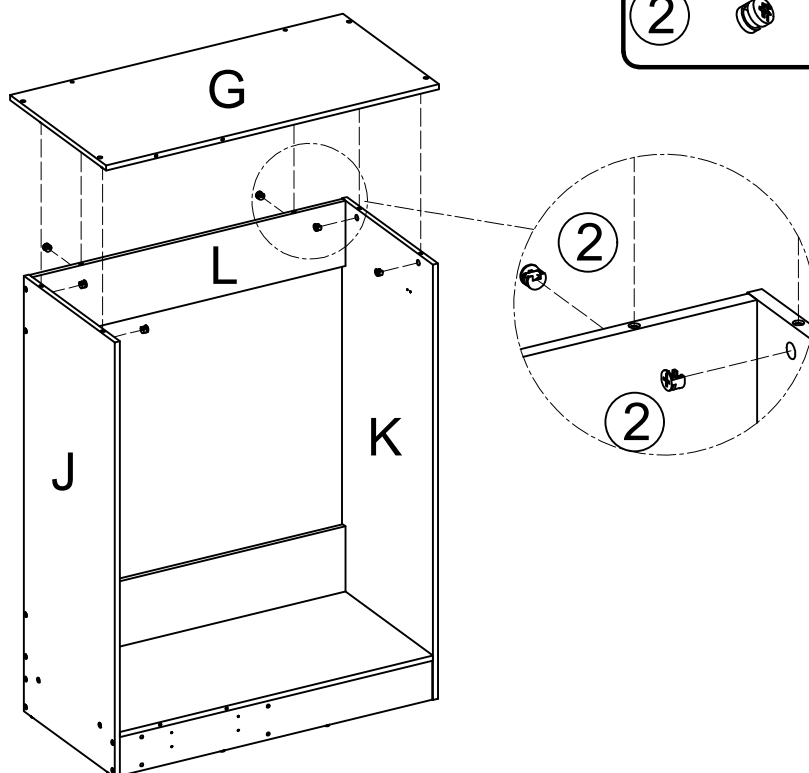

## STEP 9

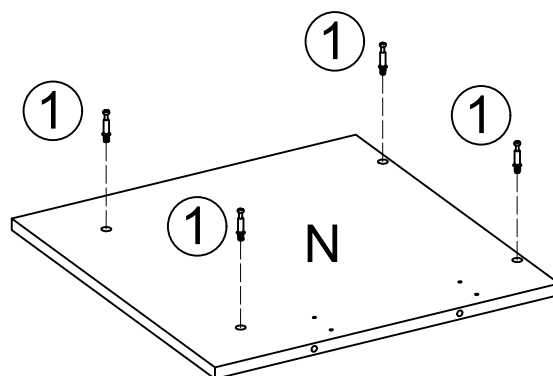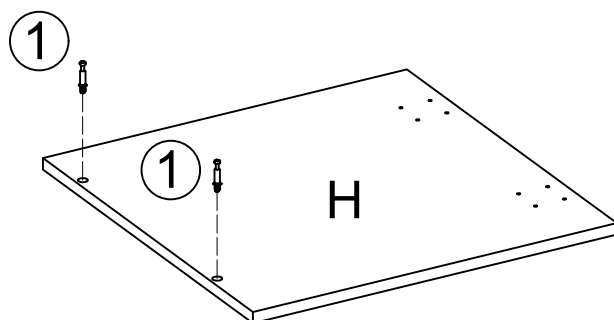


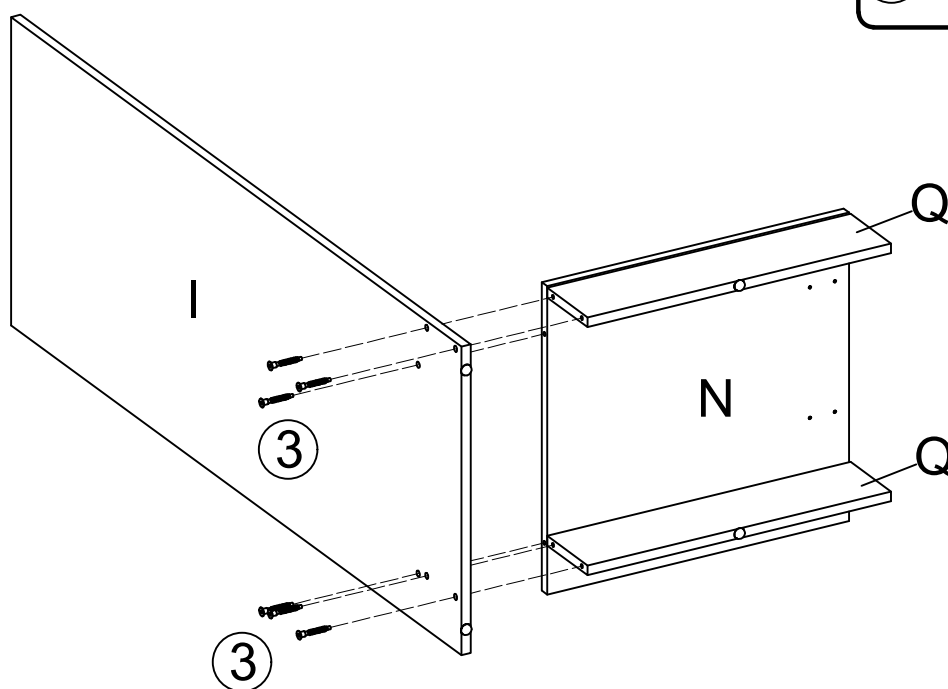
## STEP 10

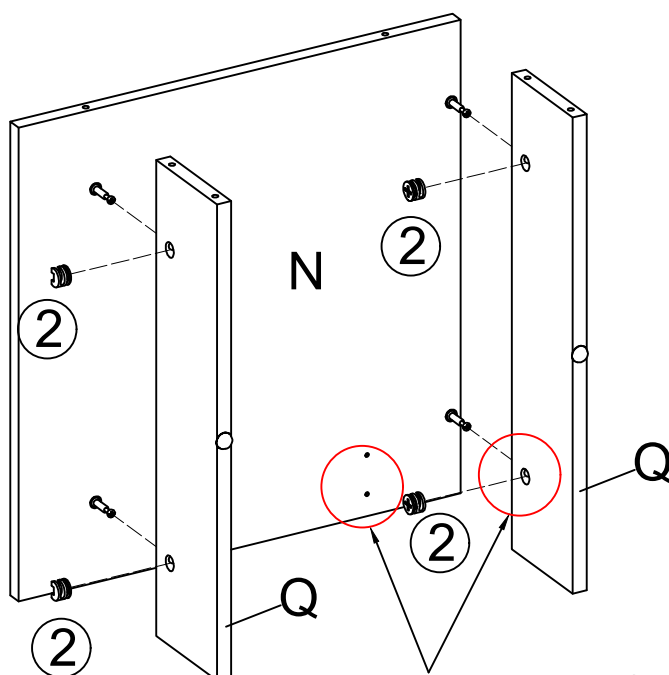


Keep the holes of the  
Part N and Part Q toward  
this direction as shown


## STEP 11

③  x6




## STEP 12


②  x2

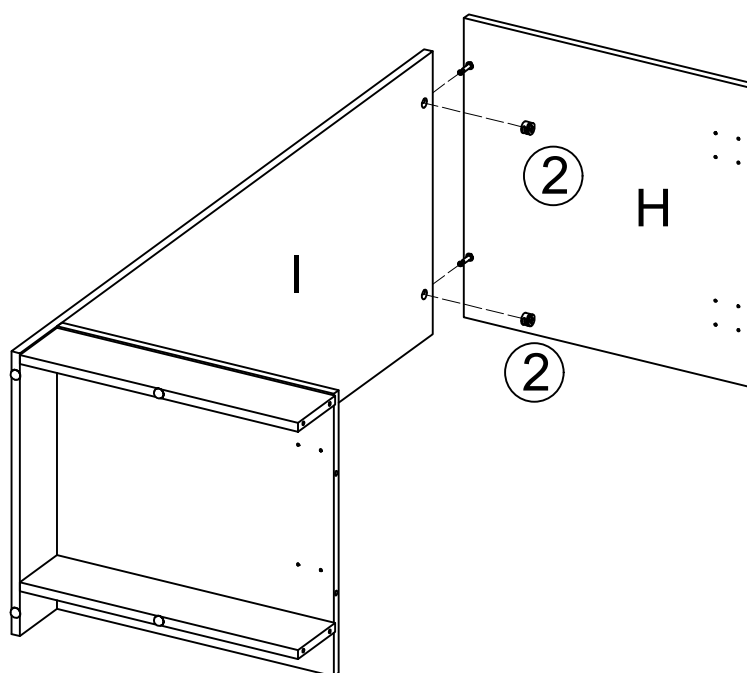


## STEP 13

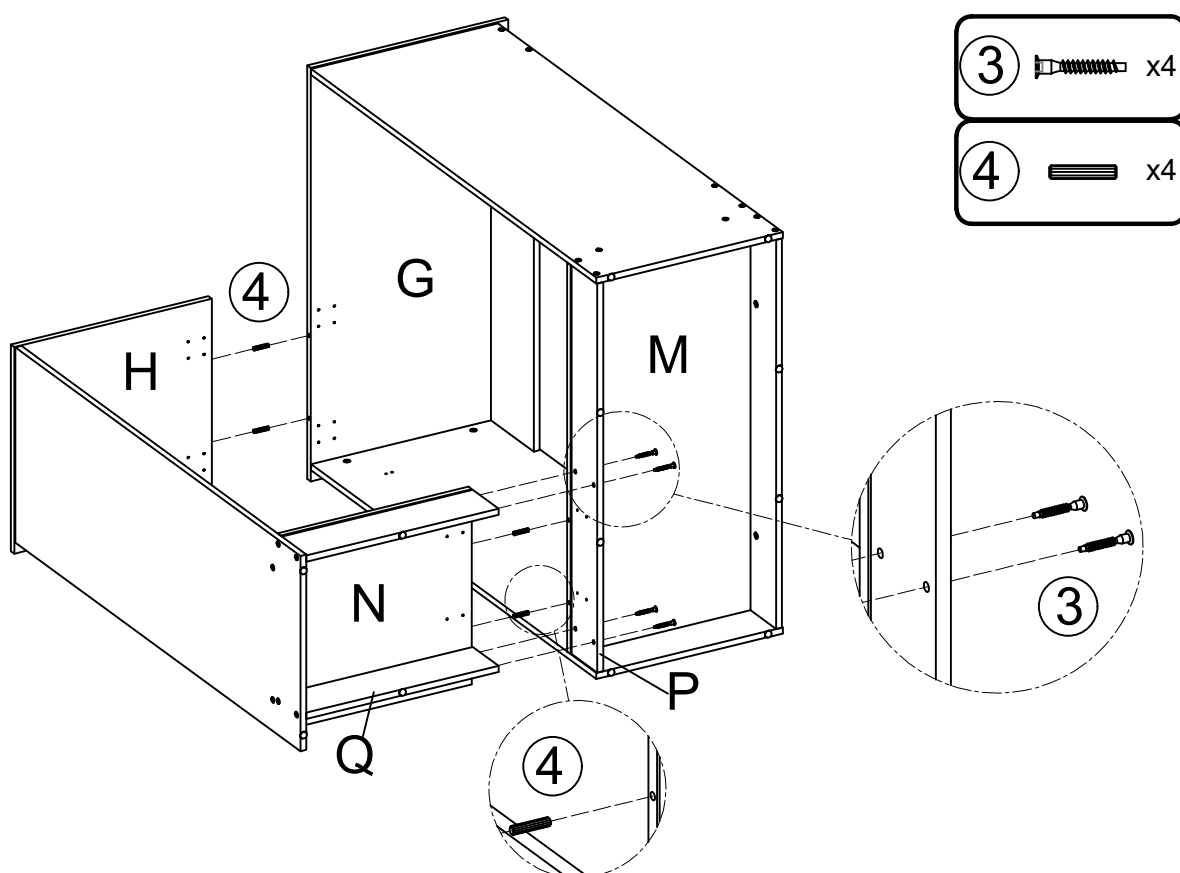


## STEP 14

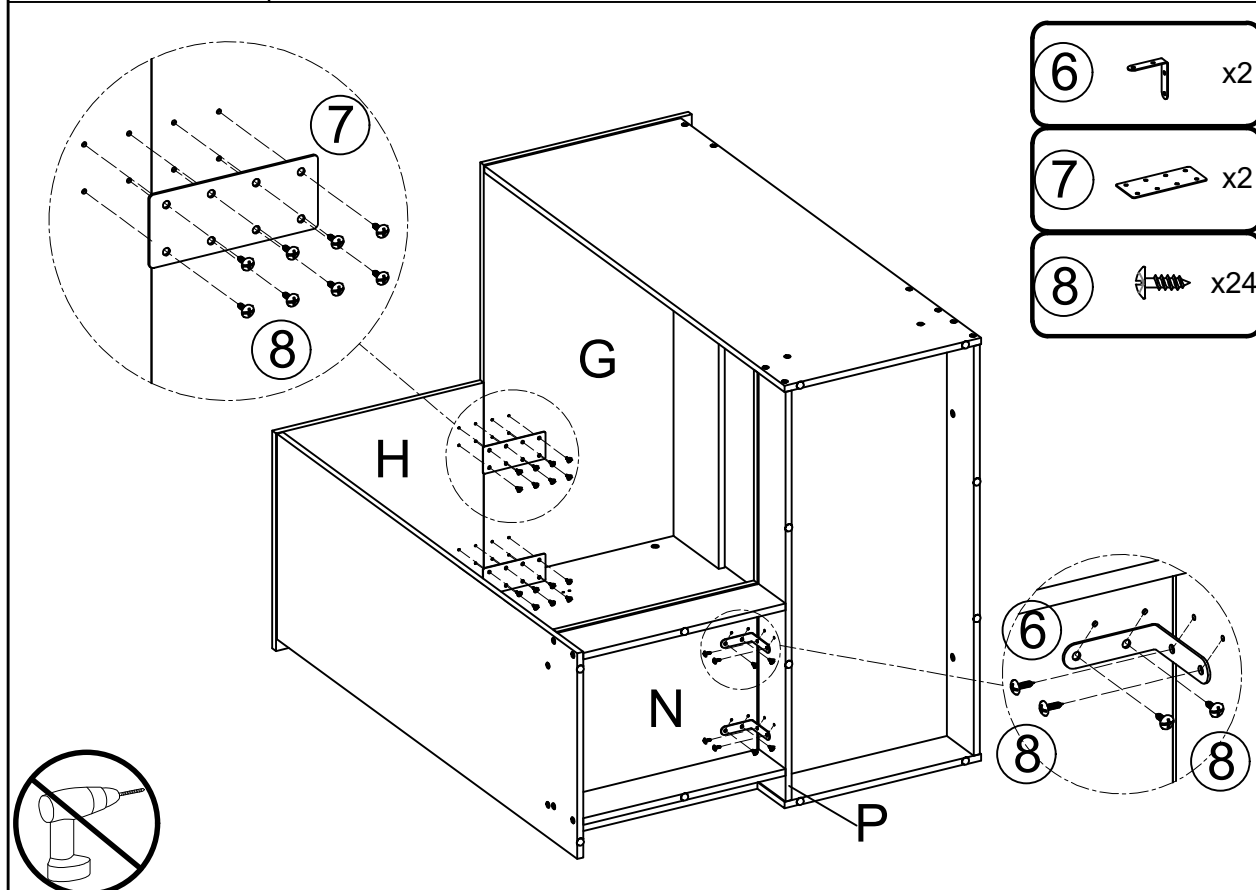



## STEP 15

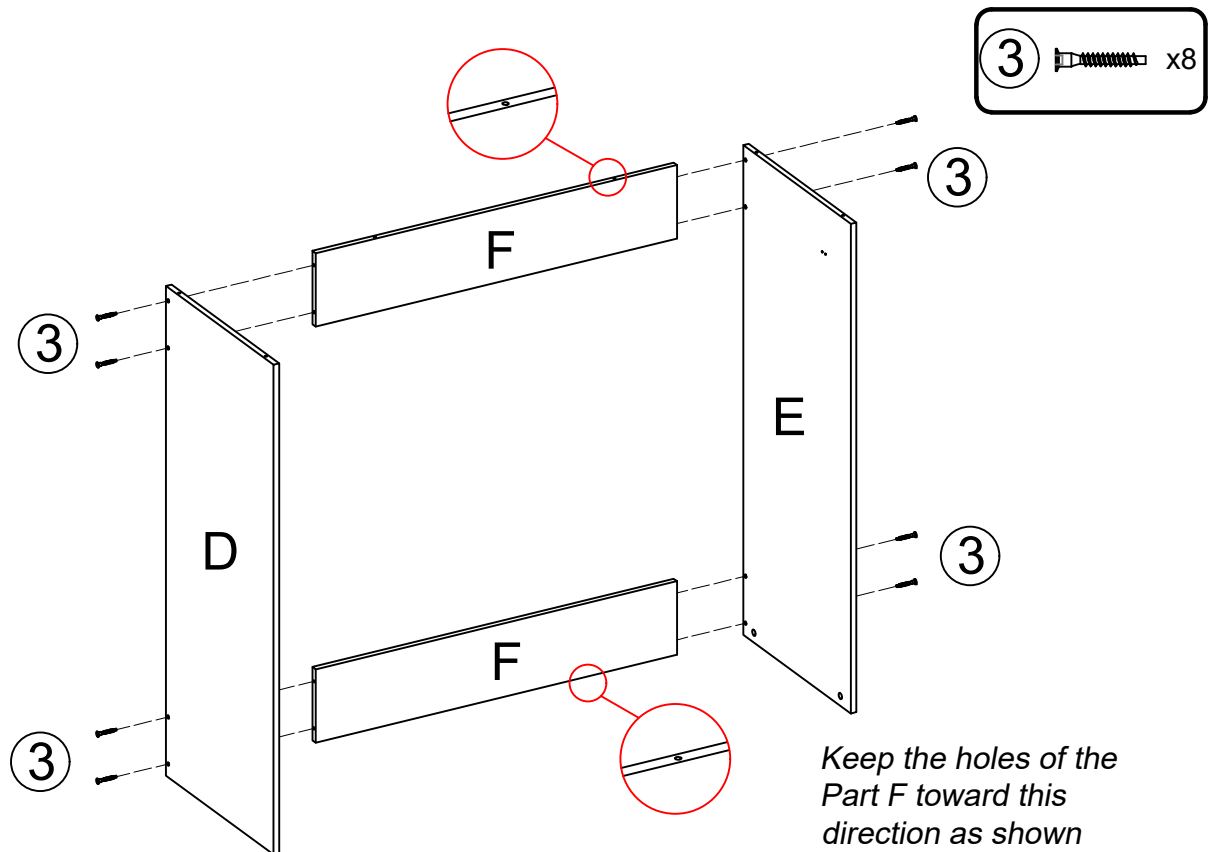




## STEP 16

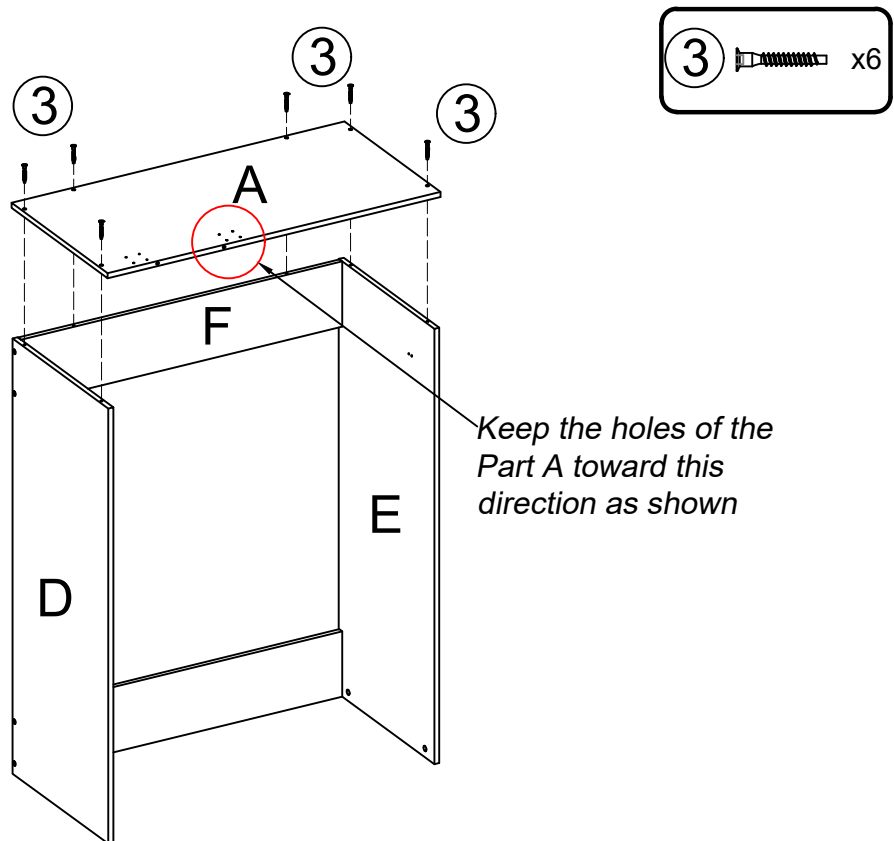



## STEP 17

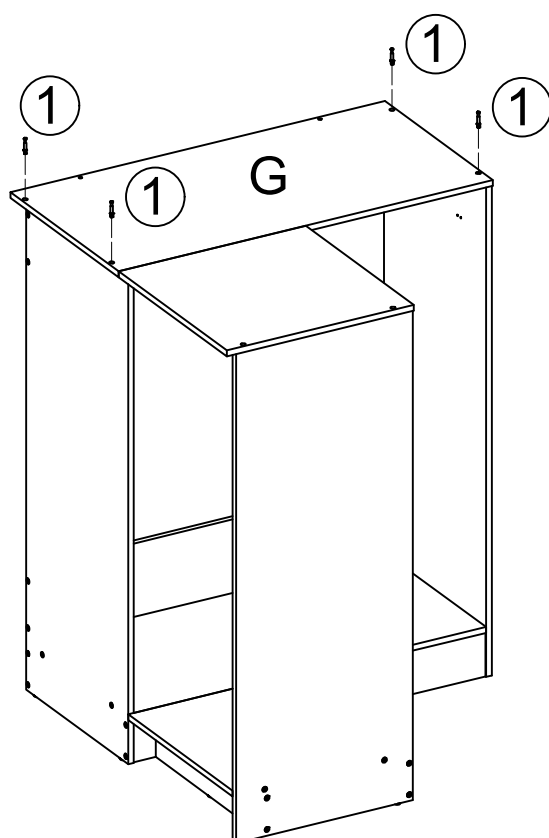



## STEP 18

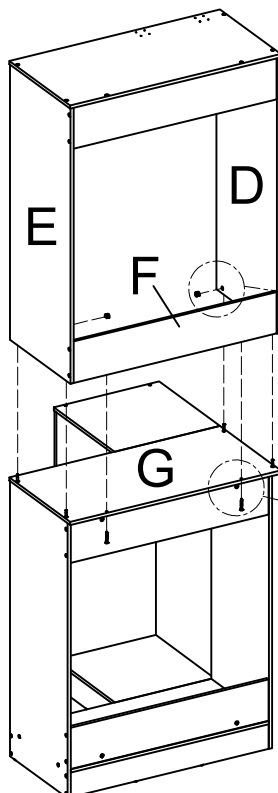


## STEP 19

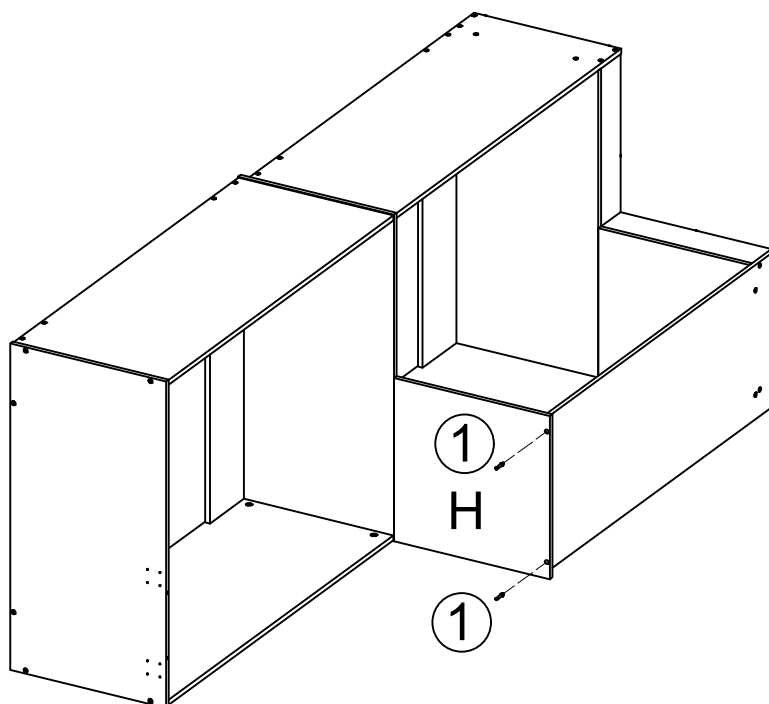


## STEP 20

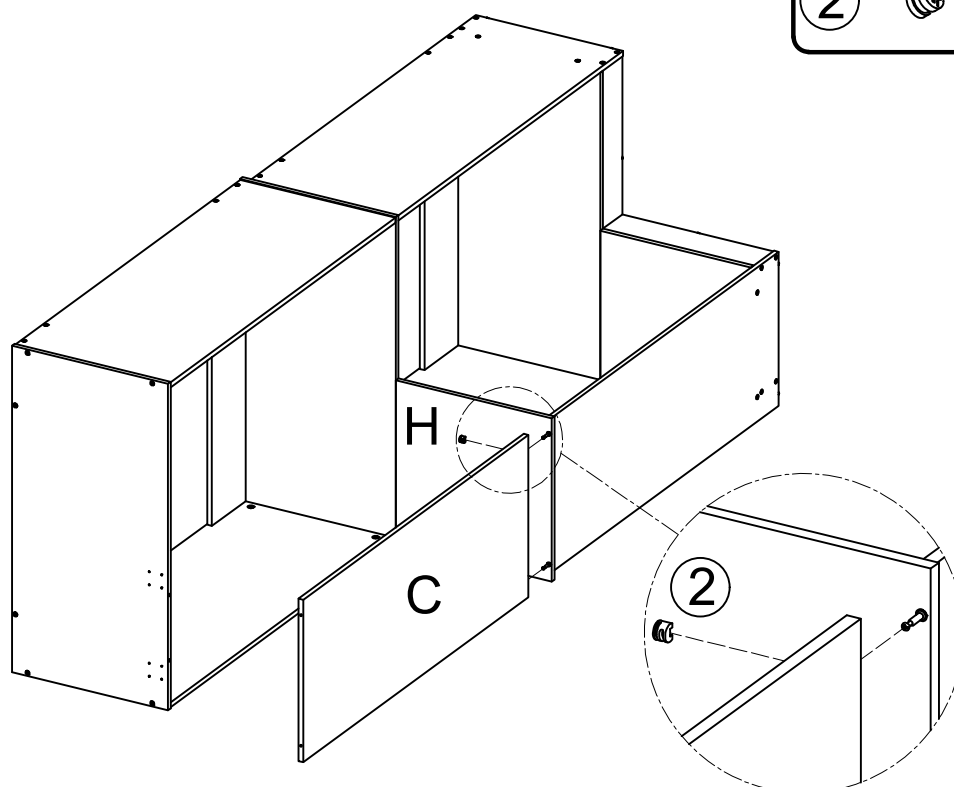

## STEP 21

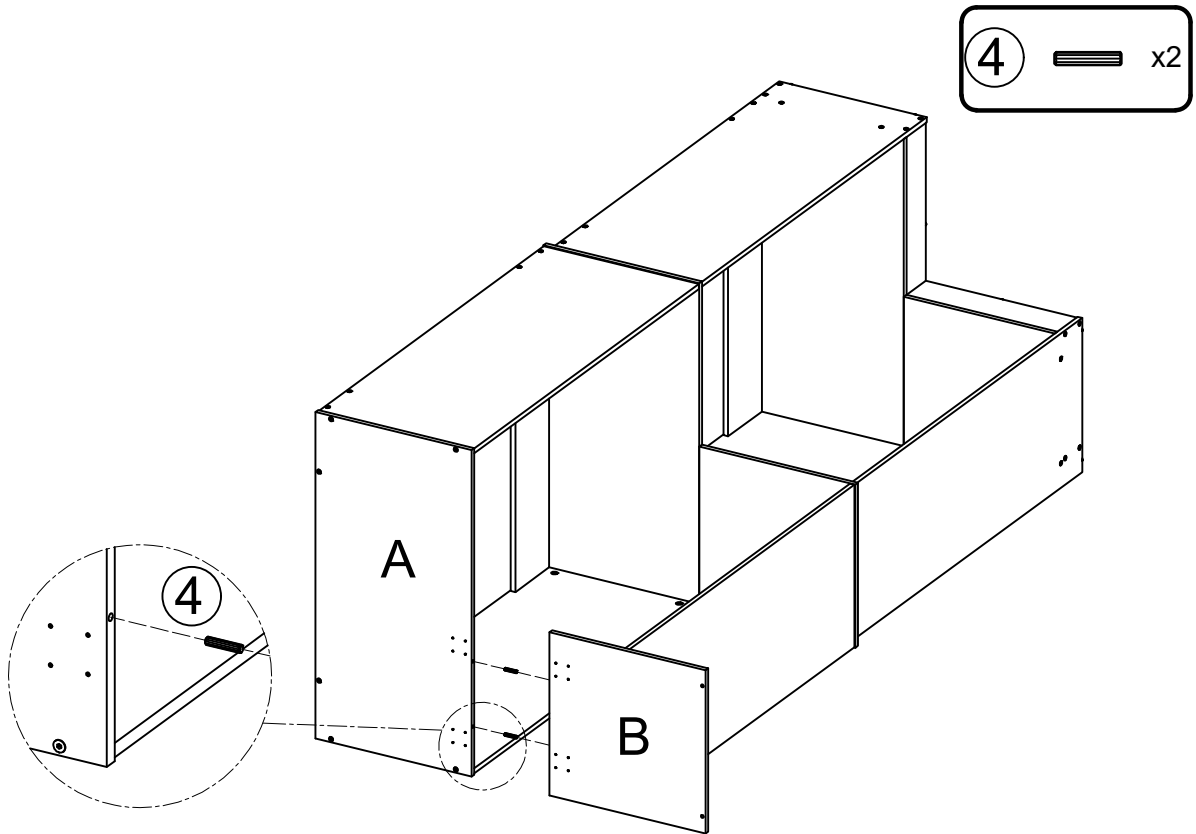


## STEP 22

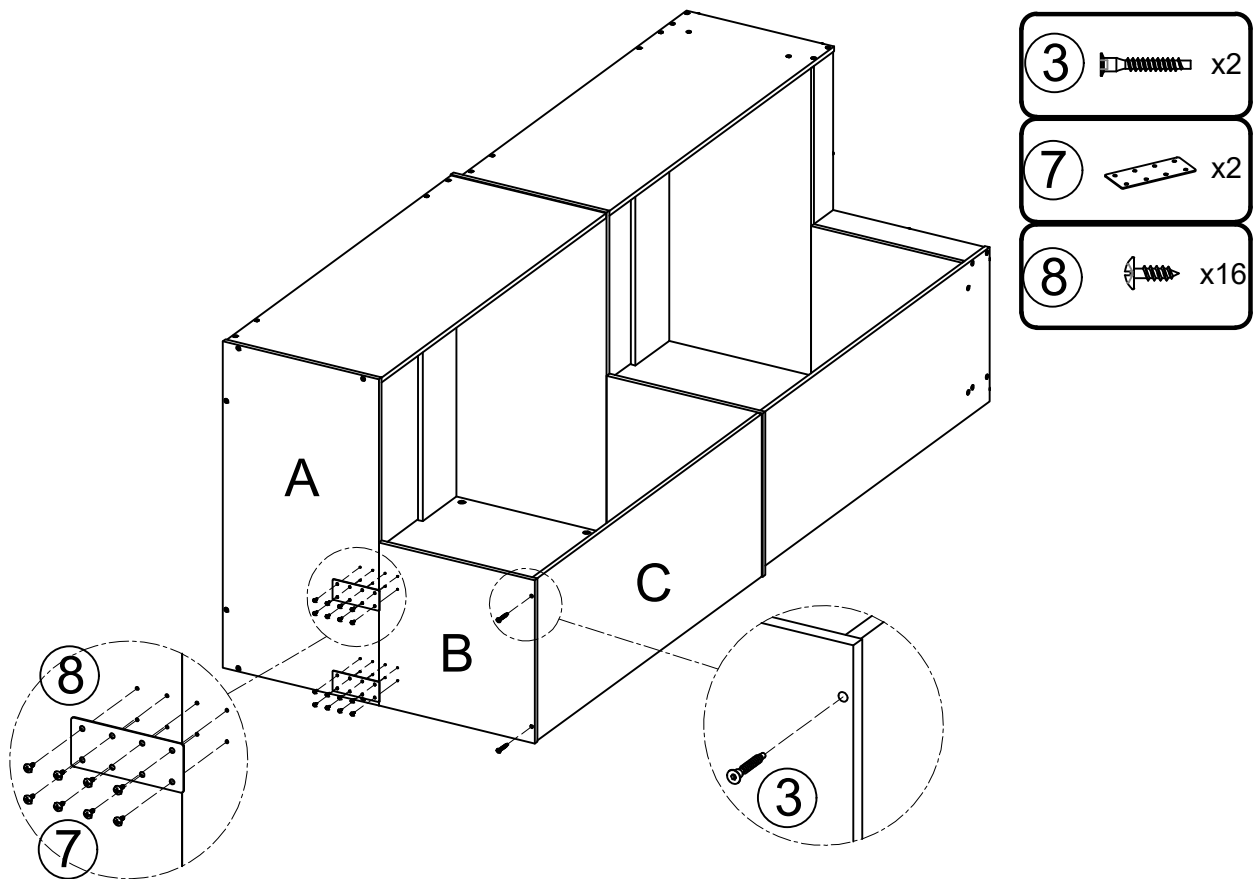


## STEP 23

### Pole Installation

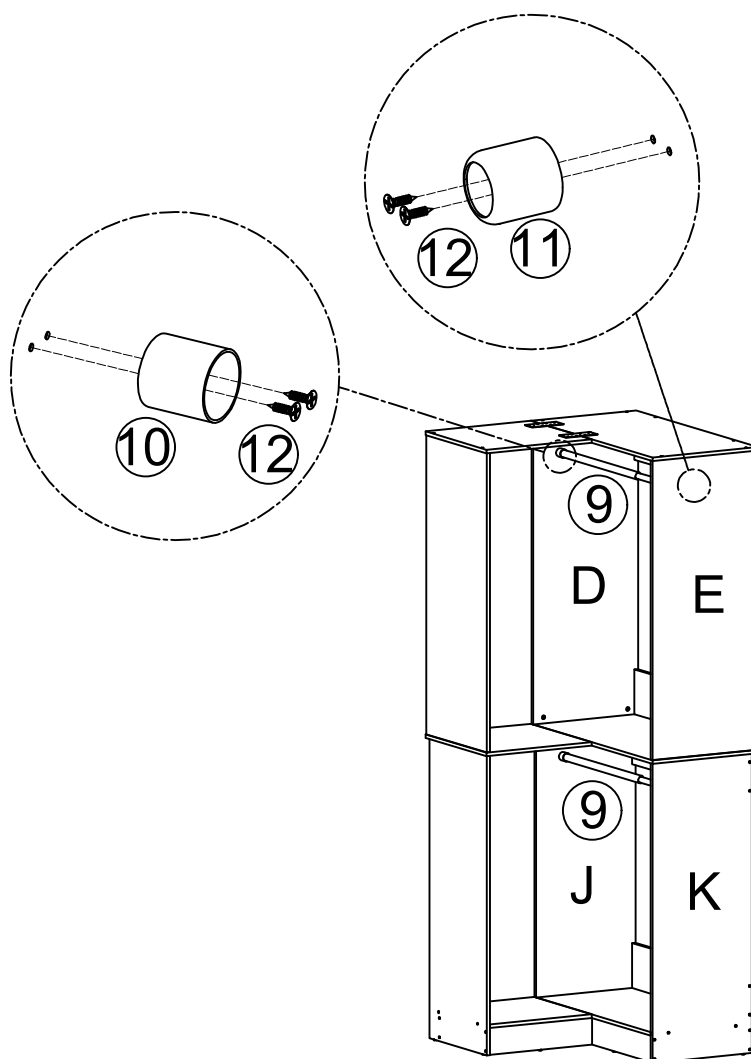


9		x2
10		x2
11		x2
12		x8

**Note:** Twist the expandable pole clockwise to tighten. anticlockwise to loosen.

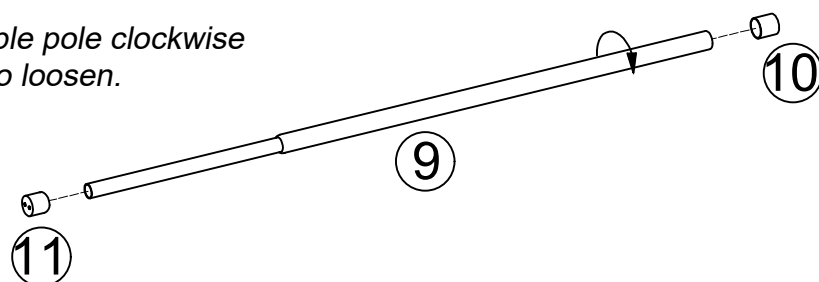



## STEP 24

### TIPPING RESTRAINT HARDWARE



**Note:** We have included three Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

**Note:** You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

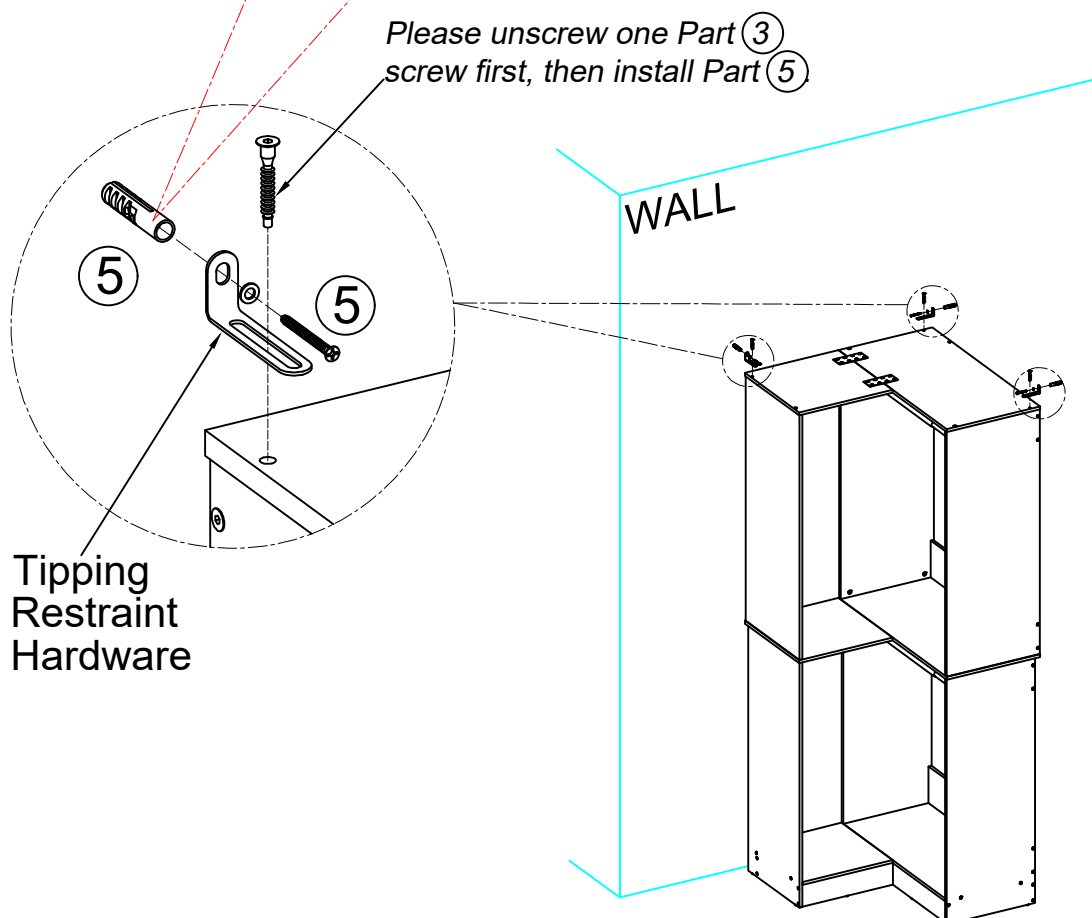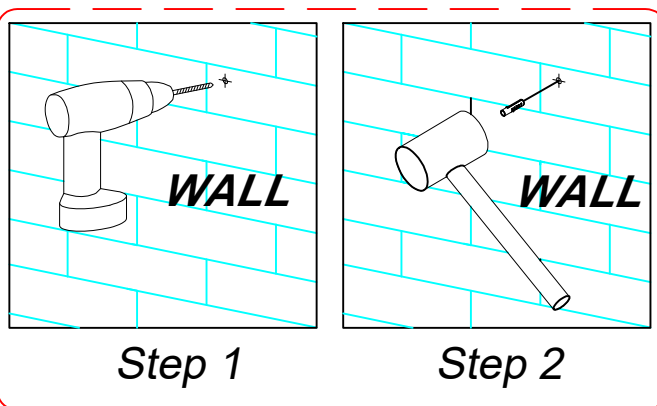

Tipping  
Restraint  
Hardware