

Assembly Instructions for Side Rails and Slats


Step 1

Insert the metal hook on the end of the side rails into the headboard opening and secure on the metal pins.

Repeat this process for the other side rail and then attach the same way to the footboard.

Apply downward pressure to the side rails on both ends to lock into position.


Headboard

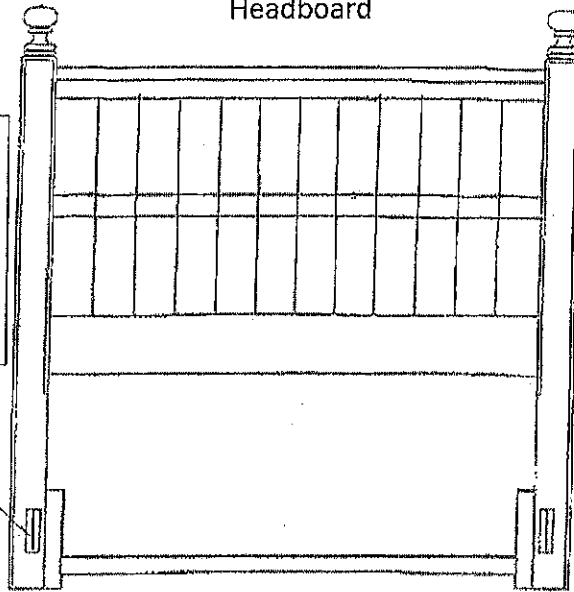

Step 2

Center the middle slat with the leg support between the headboard and footboard. Then evenly space the remaining (2) slats.

Secure slats into place with wood screws on each end.

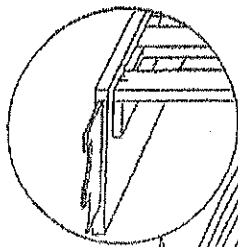


Side Rails


Center Support

Bed Slats

Footboard

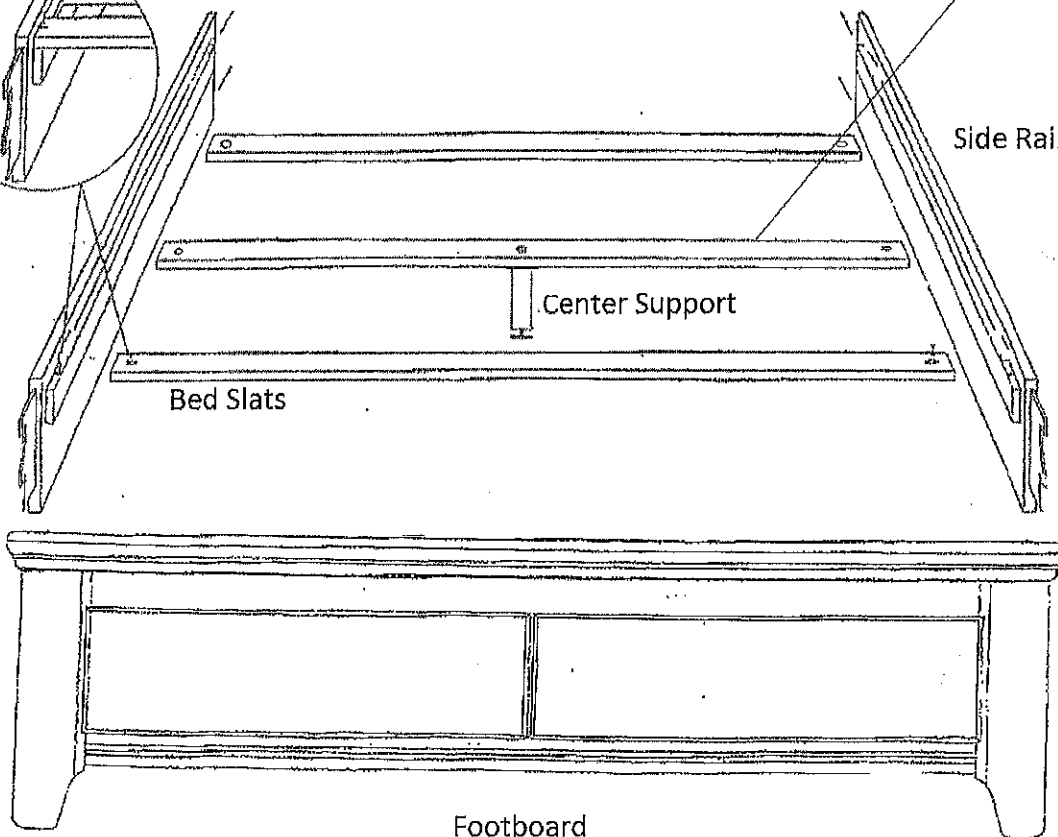

INSTRUCTION SHEET FOR BEDRAIL ASSEMBLY

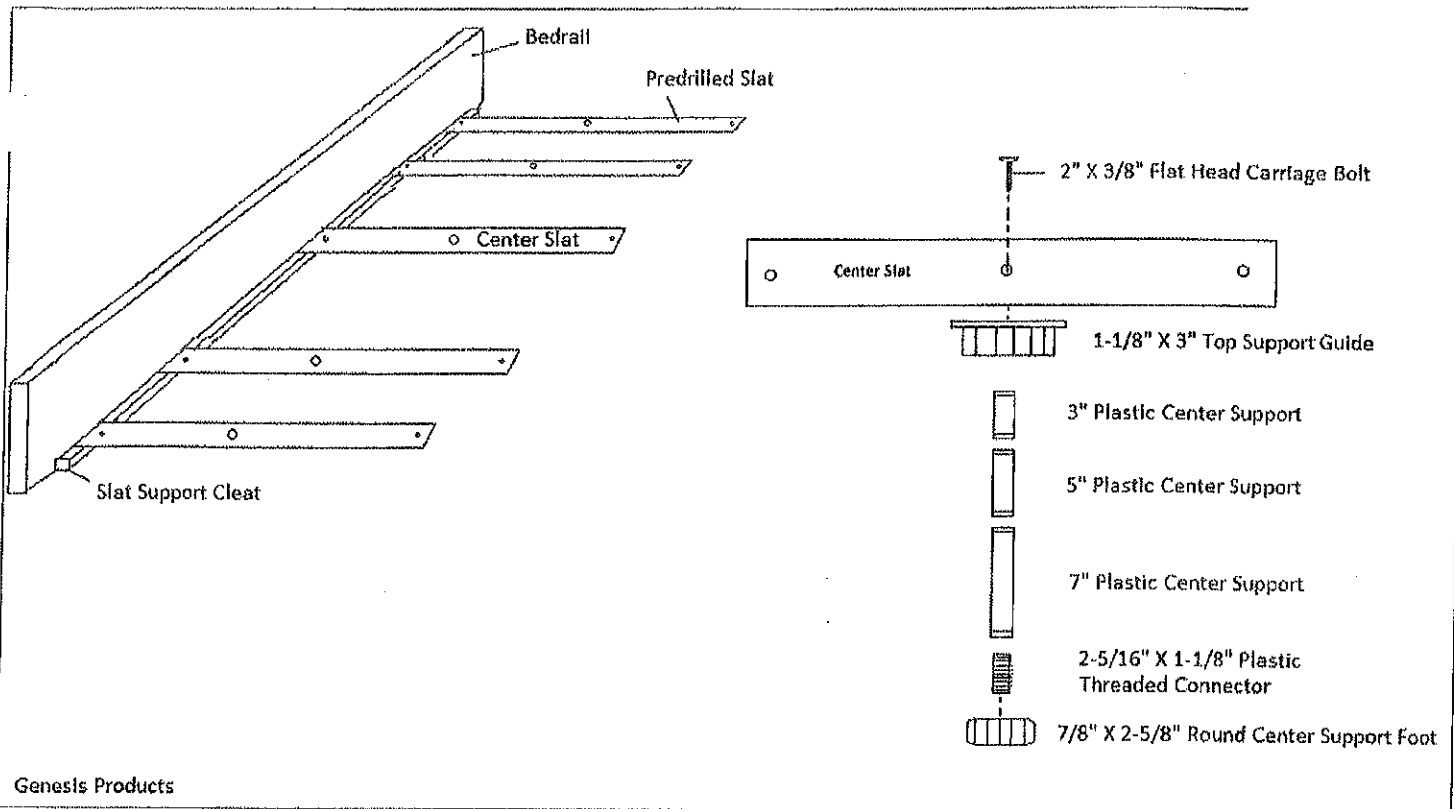

Contents:

2 Side Rails

5 Wood Slats Pre-drilled With 3 Holes Each

1 - Flat Head Carriage Bolt 2" X 3/8"

1 - Plastic Top Support Guide 1-1/8" X 3"

1 - Plastic Center Support 3" Long

1 - Plastic Center Support 5" Long

1 - Plastic Center Support 7" Long

1 - Plastic Threaded Connector 2-5/16" X 1-1/8"

1 - 7/8" X 2-5/8" Plastic Round Center Support Foot

14 - wood screws 1-1/2" long X 3/8"

1. Install the adjustable (black plastic) center support by inserting the 2" x 3/8 inch flat head carriage bolt through the center hole of 1 slat and install the top support guide and secure with 4 - 1 1/2" x 3/8" screws.

2. Place the slat with top support guide in the center of the bedrail cleat with the top support guide facing towards the floor with remaining 4 slats as shown.

3. Prior to securing the 5 slats complete assembly of center post. Locate the 2 5/16" x 1 1/8 threaded connector and insert it completely into the 2 5/8 x 7/8 round center support foot. Measure the distance from the bottom of top support guide and locate the appropriate center support post. Install the support footing into the threaded side of the support post. Install the flanged end of support post into the top support guide and adjust the threaded support footing as needed.

4. Locate pre-drilled holes on bedrail cleat using 10 1 1/2" x 3/8" screws.

Attach each end of bed slats to the slat support on the bed rail with the 1-1/2" X 3/8" screws provided