

**Please don't tighten the screws completely
and go back later for a final tightening of all the
screws after pieces are aligned with each other.**


1 x 2	2 x 1	3 x 1	4 x 1	5 x 1	6 x 1
7 x 1	8 x 2	9 x 4	10 x 2	11 x 4	12 x 1
13 x 4	14 x 8	15 x 1	16 x 1	17 x 1	18 x 1

A




M6 x 12 mm x10

B




M6 x 15 mm x8

C




M6 x 25 mm x8

D



M6 x 35 mm x22

E




M6 x 50 mm x8

F



M8 x 35 mm x4

G




Ø3x10mm x2

H




4 # x1

I

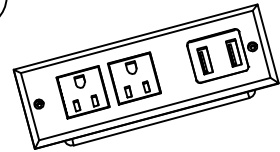


x 1

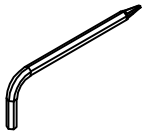

J

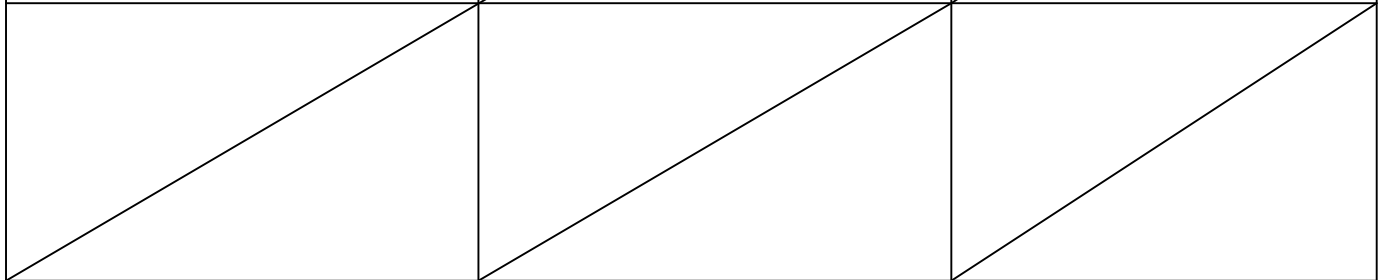


4 # x1







Step 1

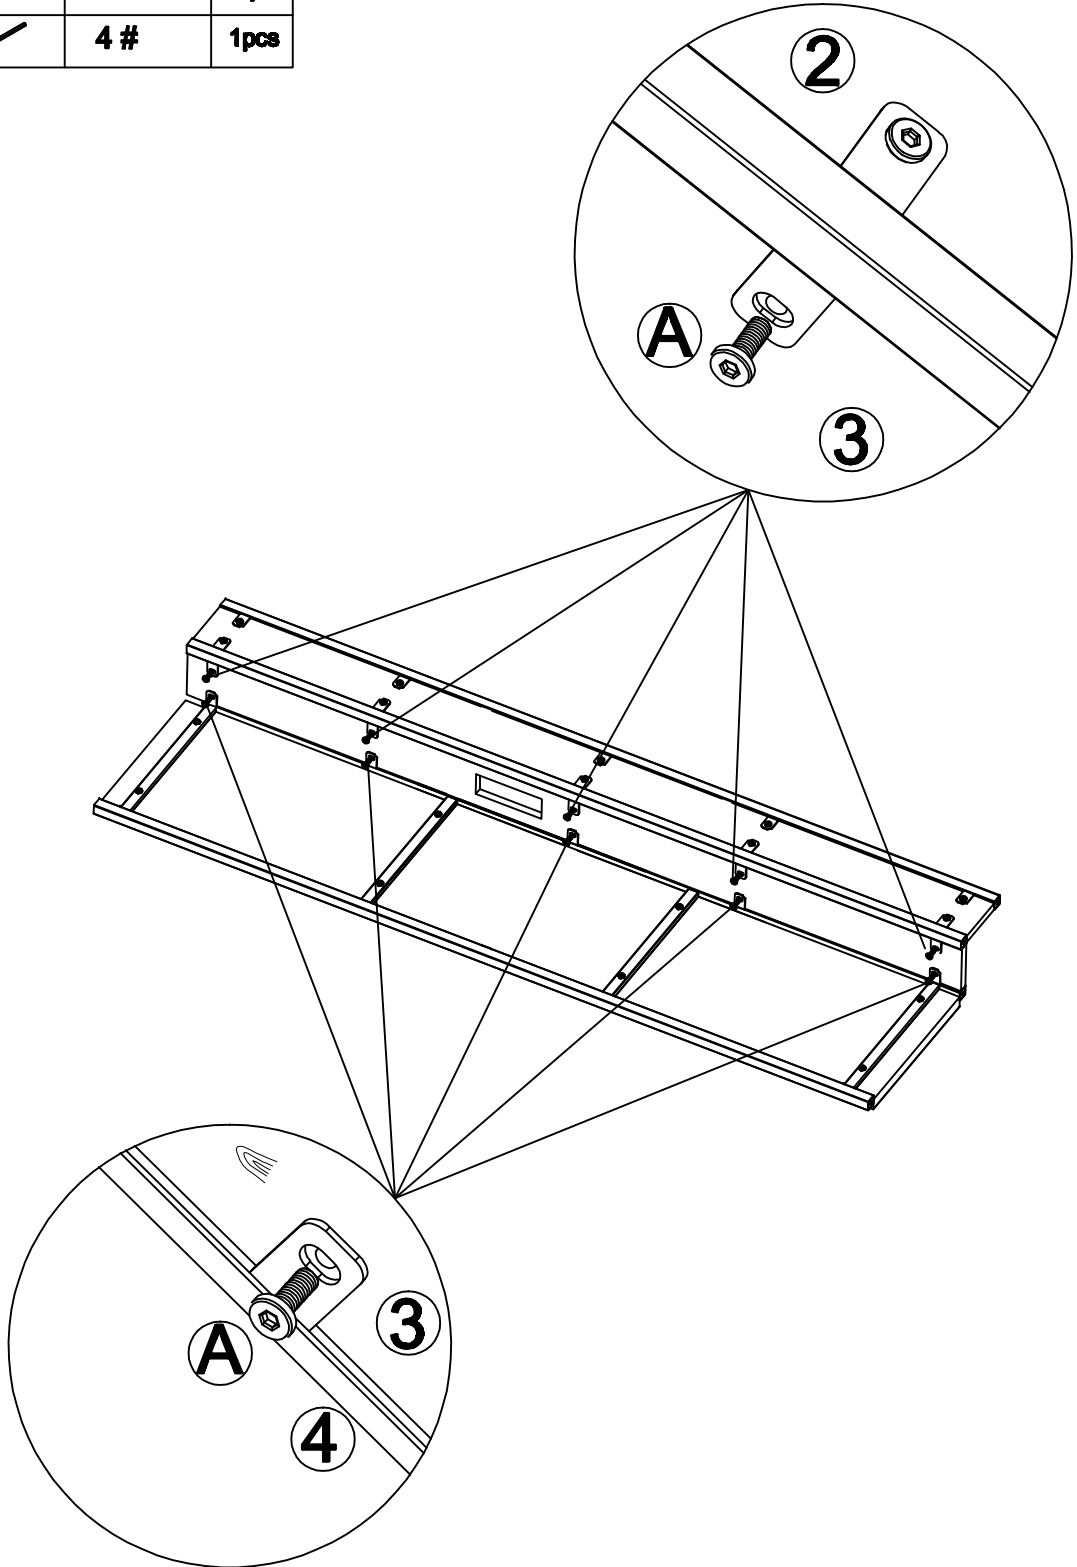A		M6 x 12	10 pcs
H		4 #	1 pcs







Step 2

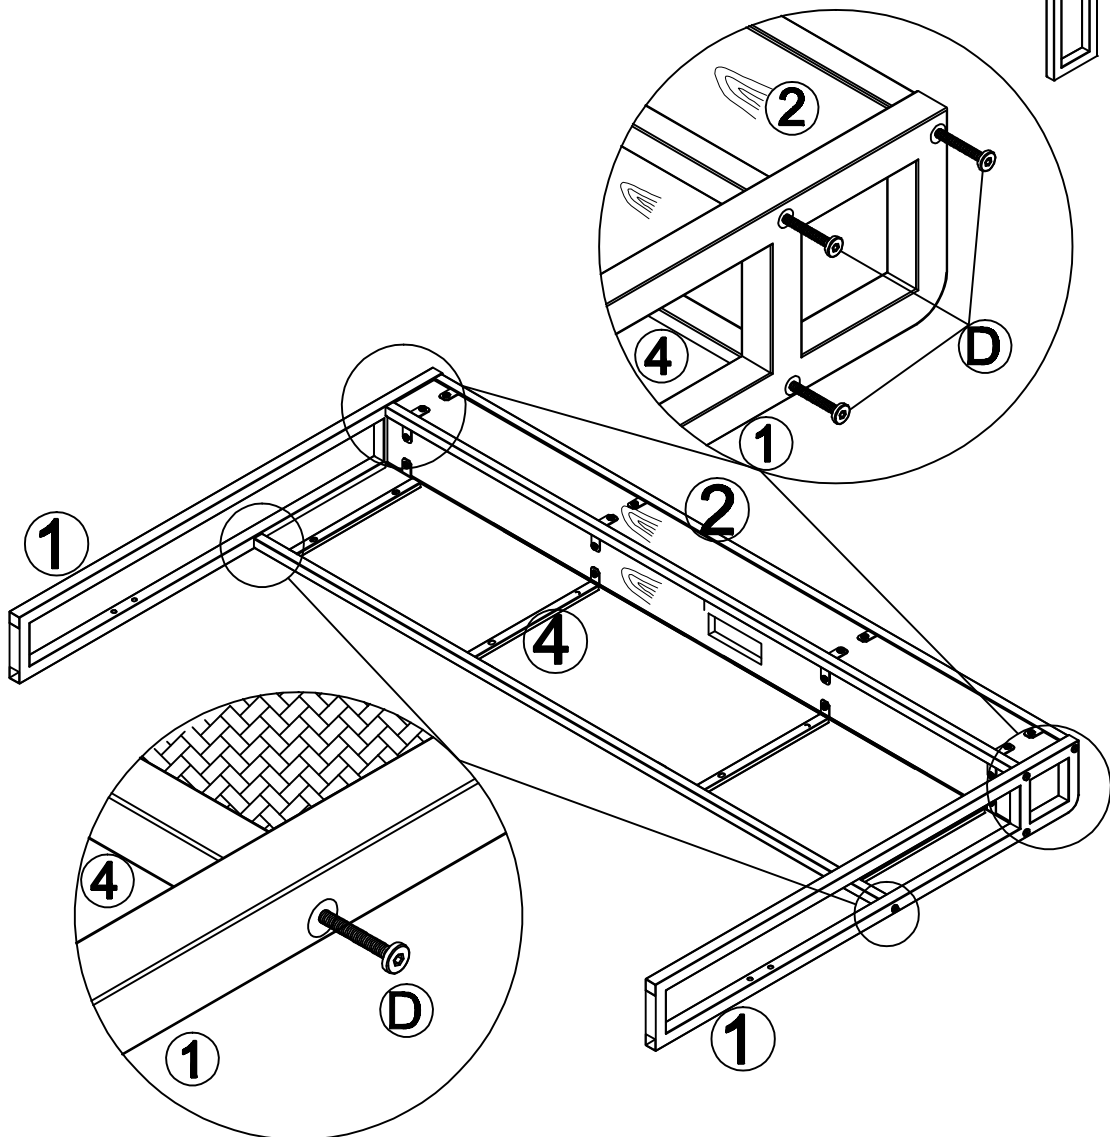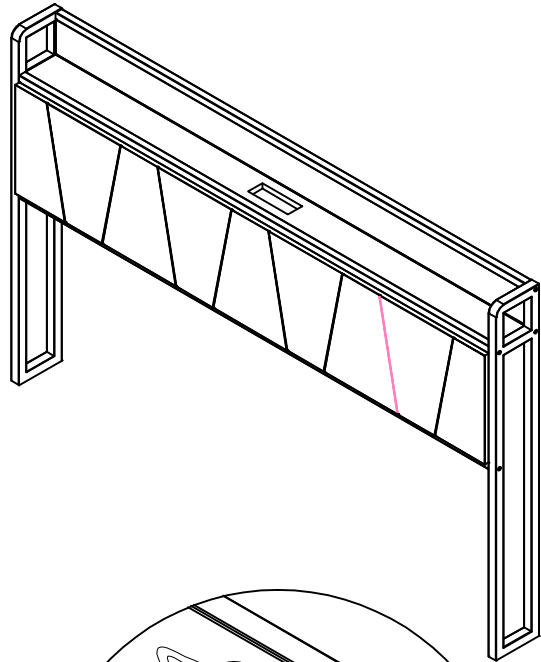D		M6 x 35	8pcs
H		4 #	1pcs






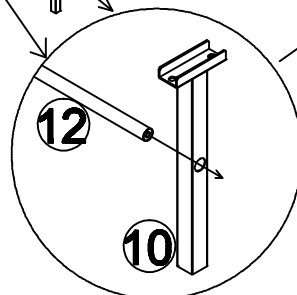
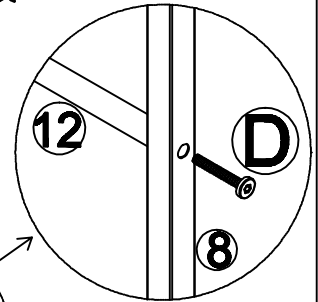
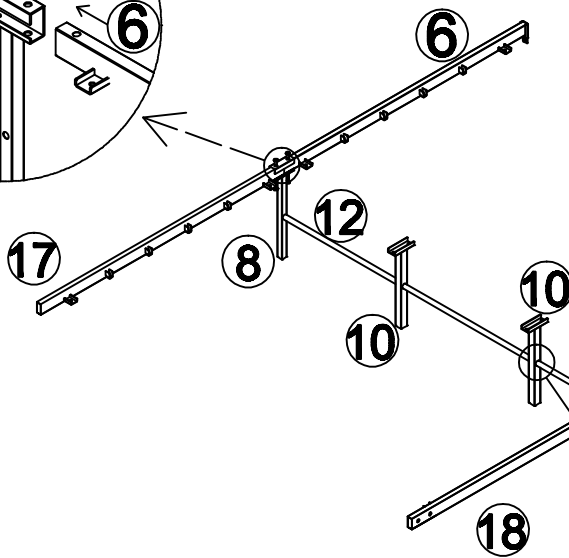
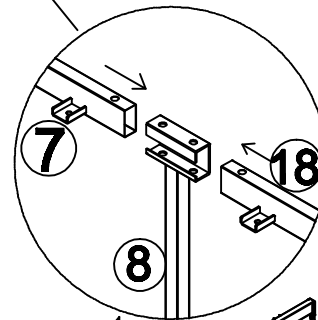
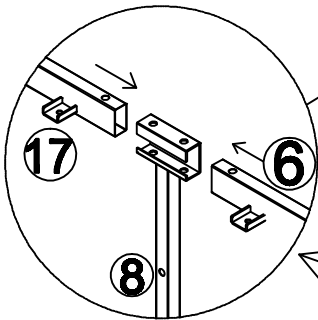
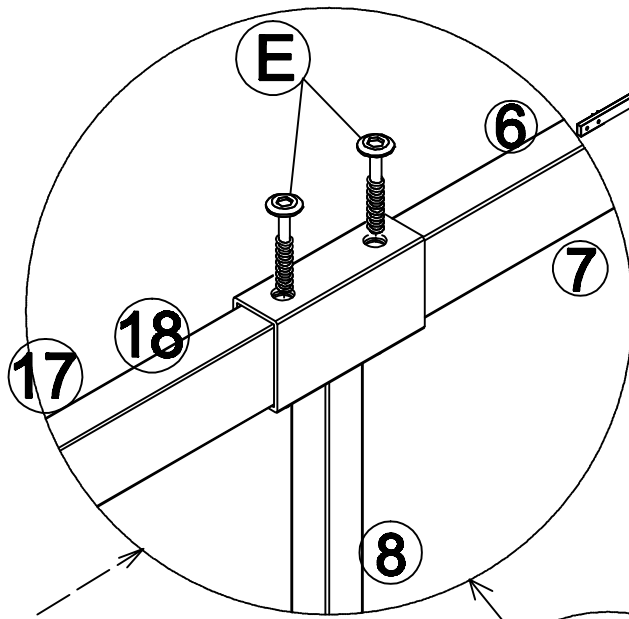
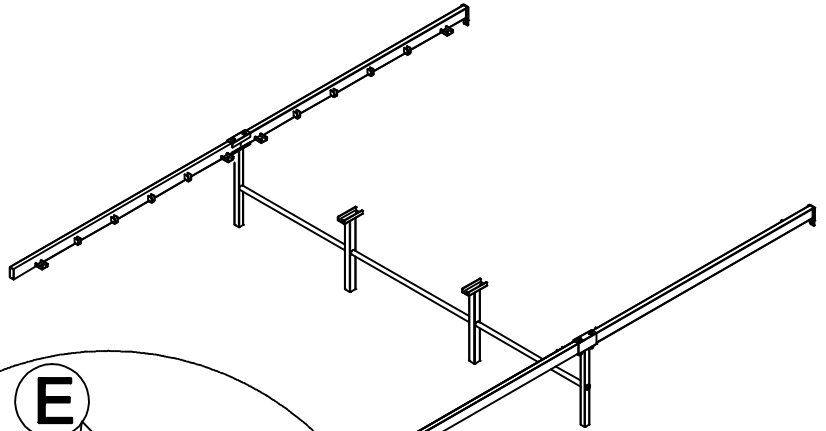
Step 3

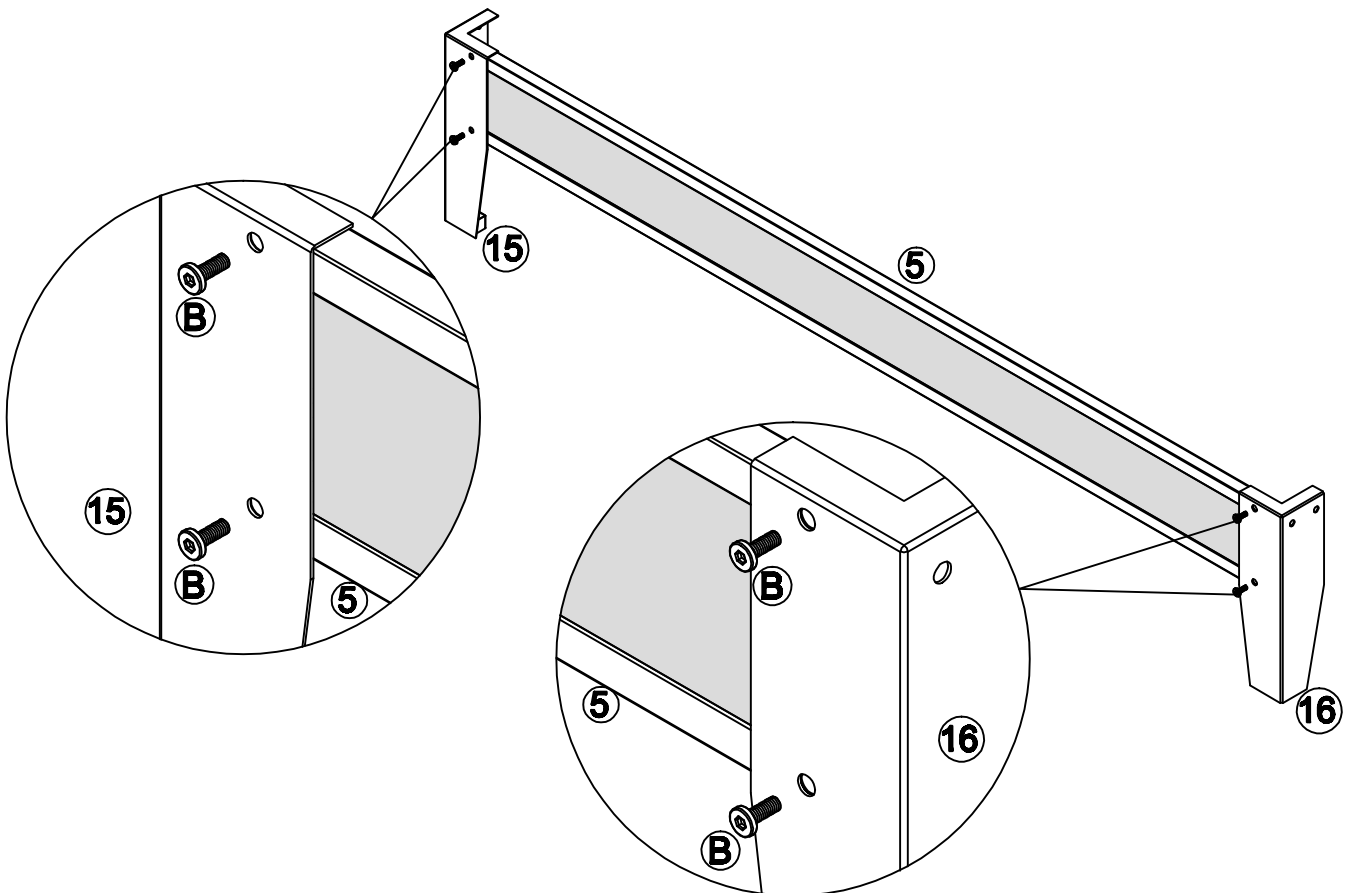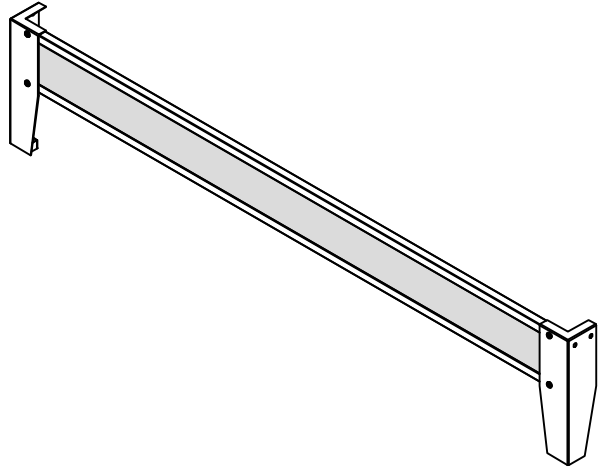B		M6 x 15	4pcs
H		4 #	1pcs






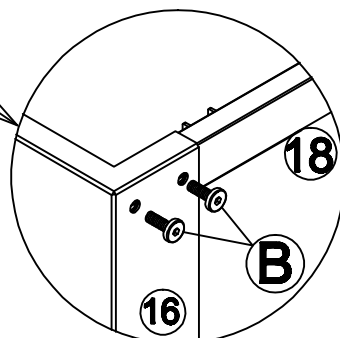
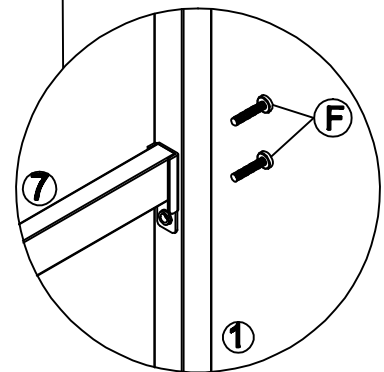
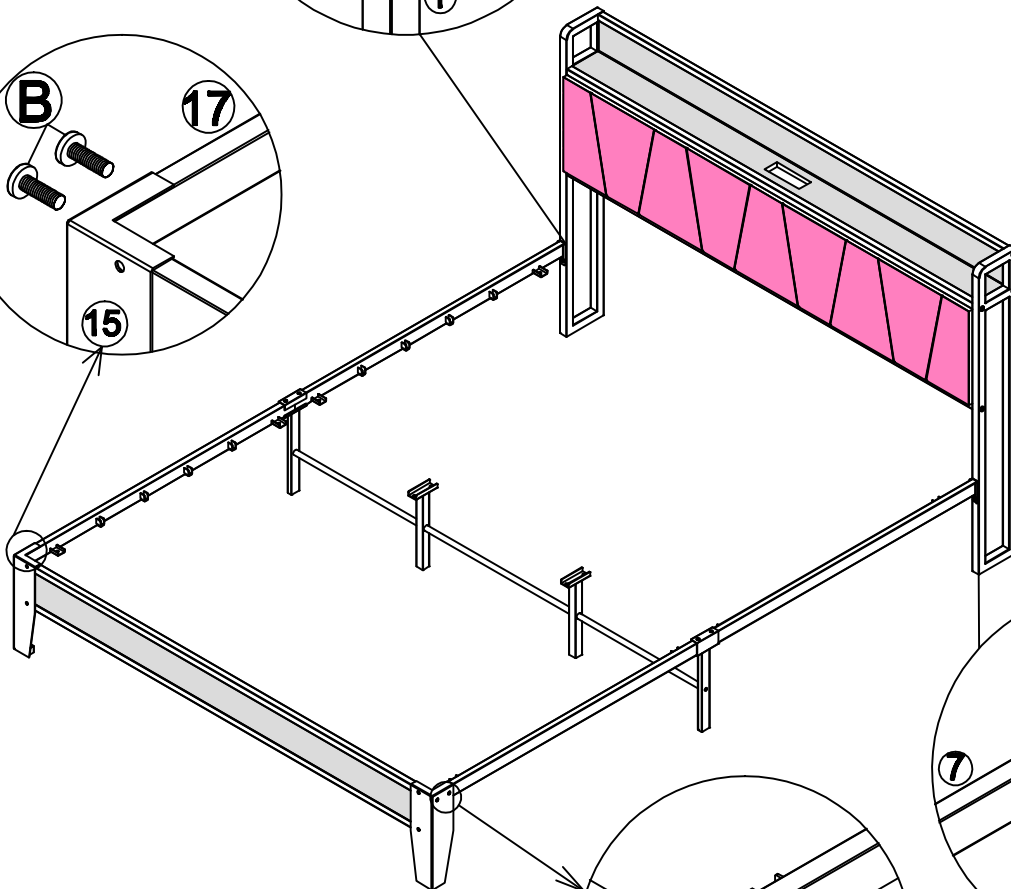
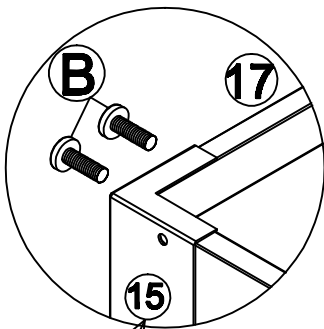
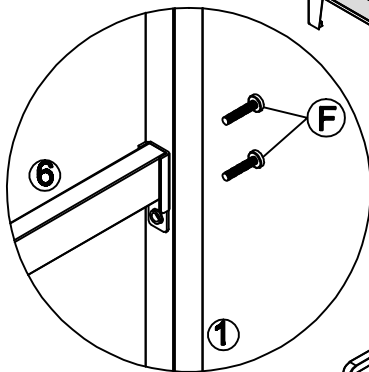
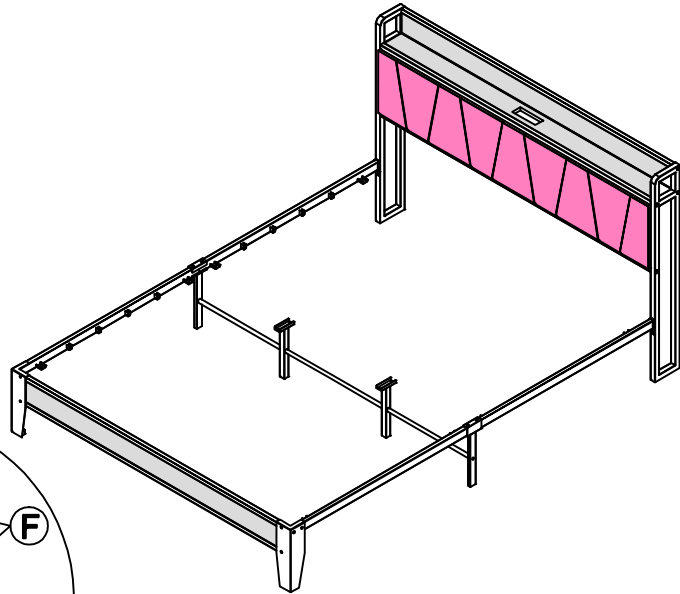
Step 4

D		M6 x 35	2pcs
E		M6 x 50	4pcs
H		4 #	1pcs









Step 5

B		M6 x 15	4pcs
F		M8 x 35	4pcs
H		4 #	1pcs







Step 6

C		M6 x 25	8pcs
H		4 #	1pcs

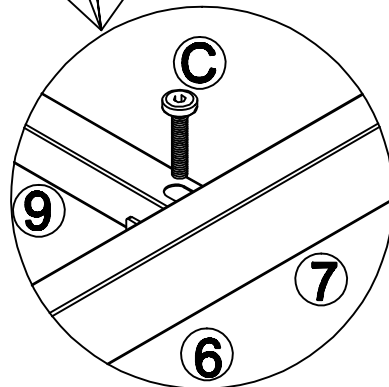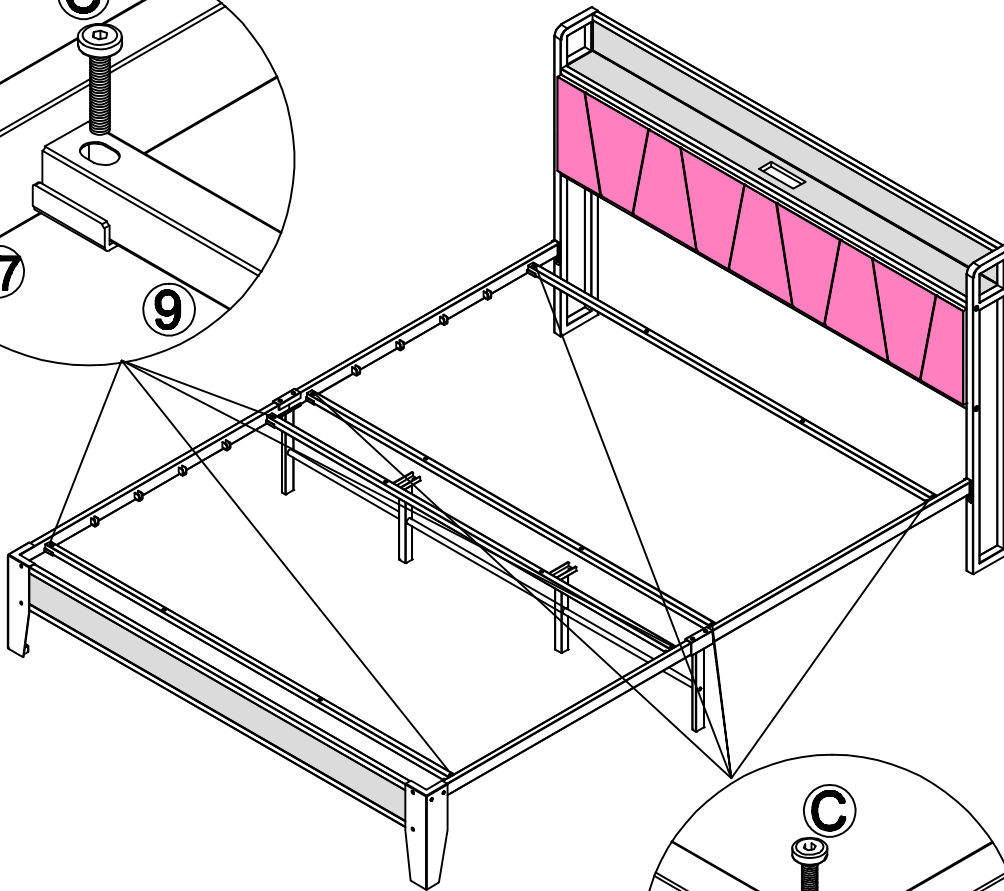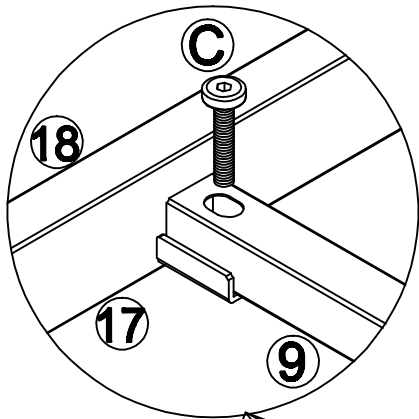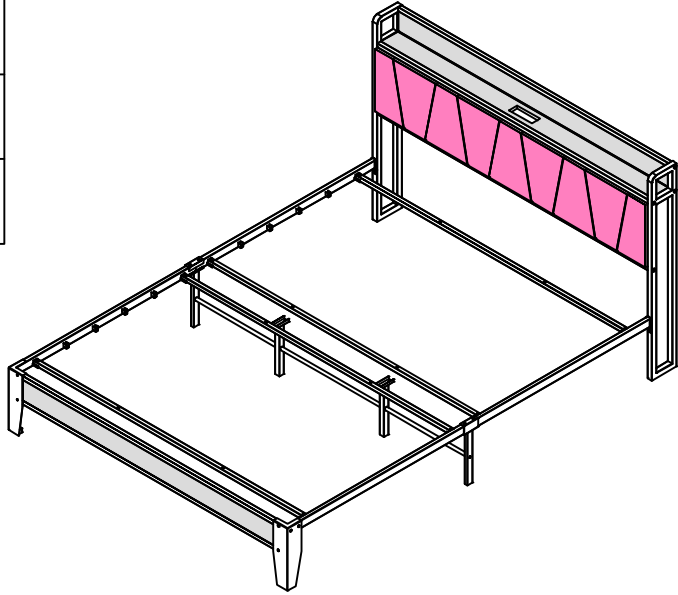

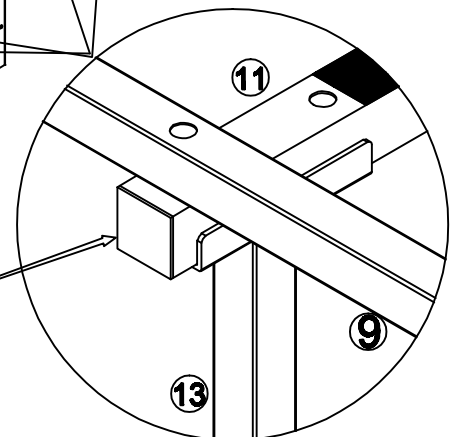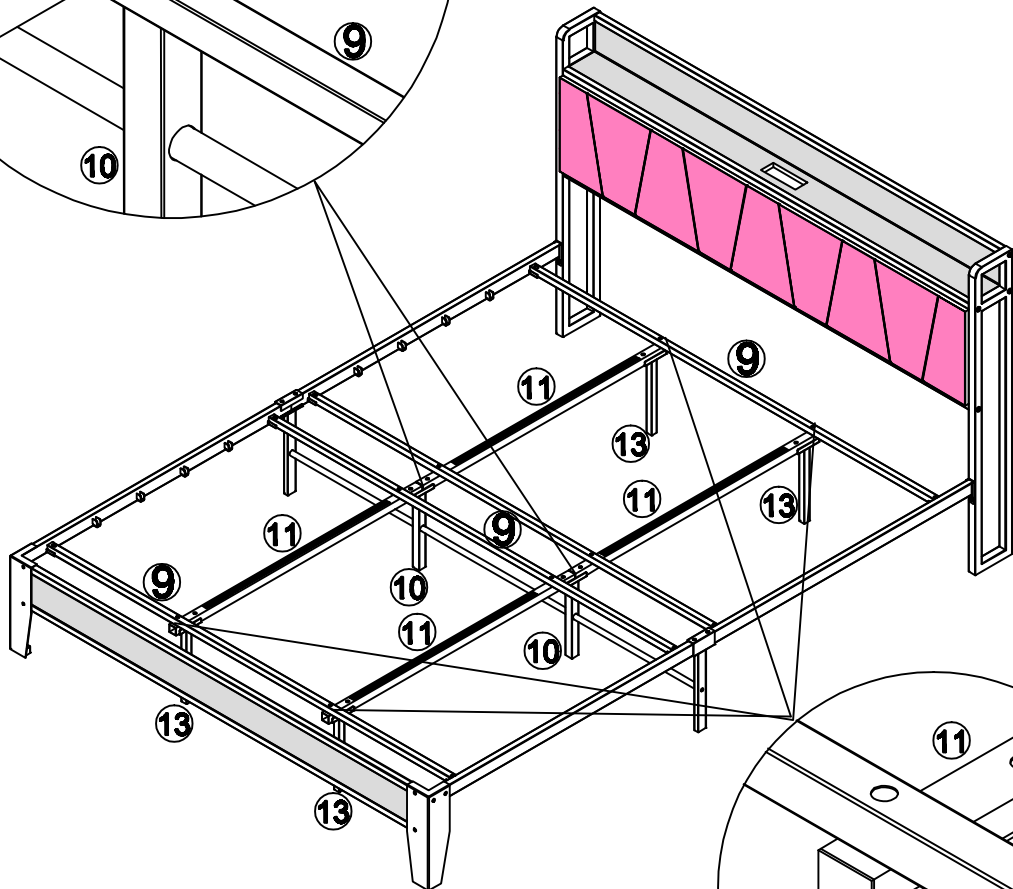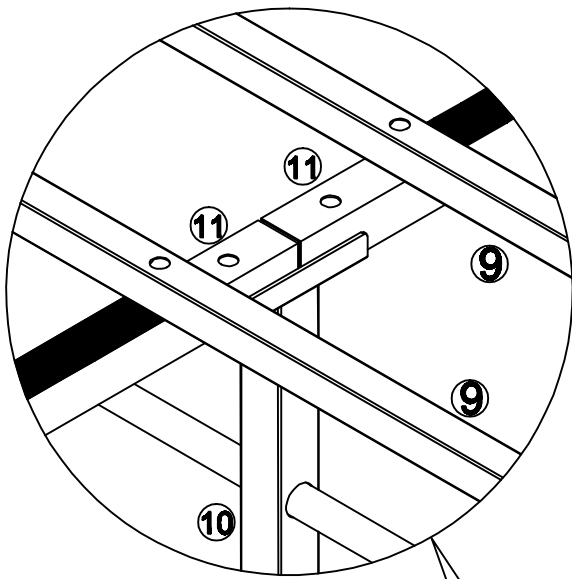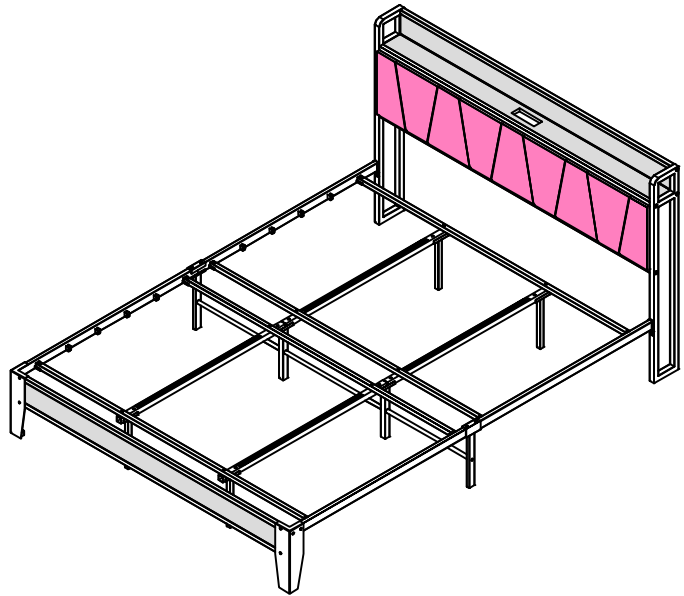


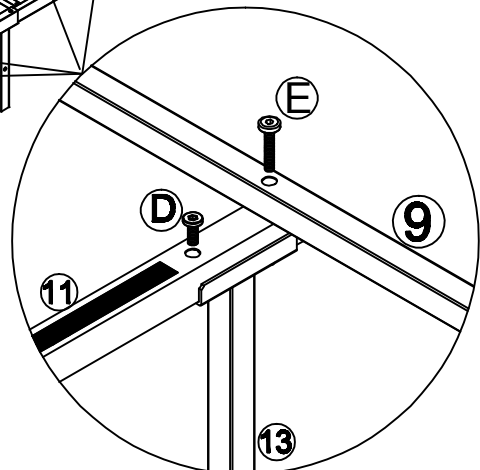
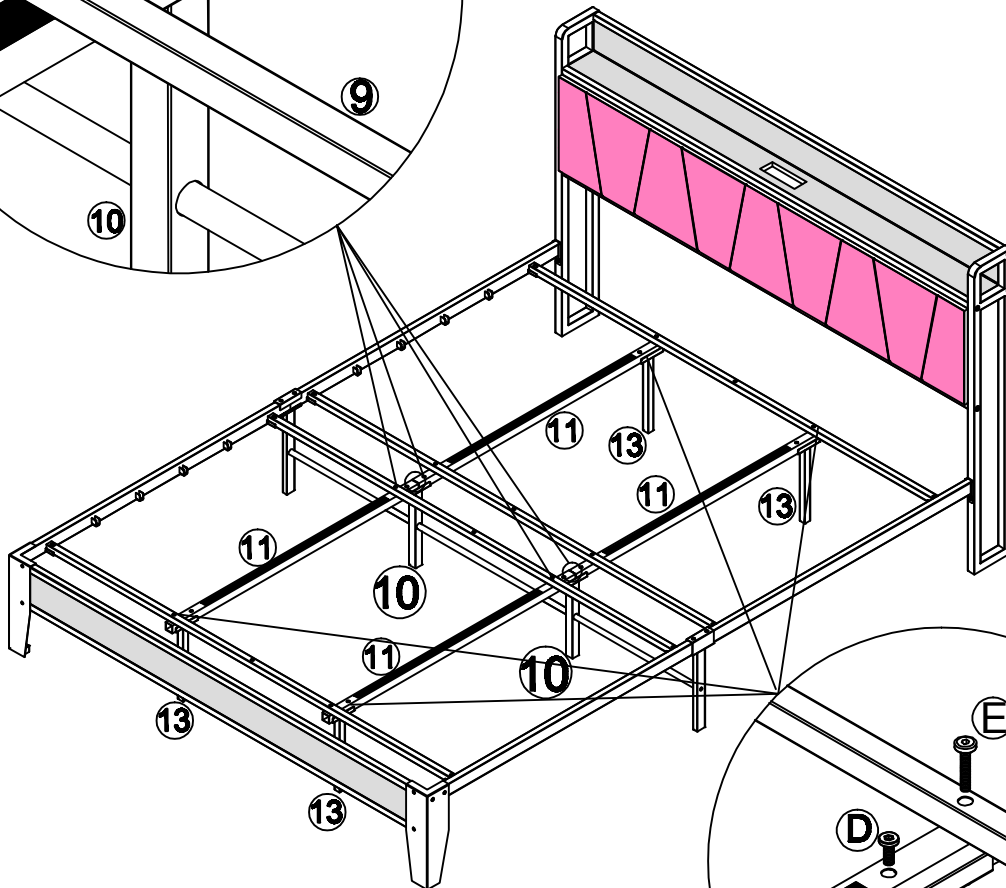
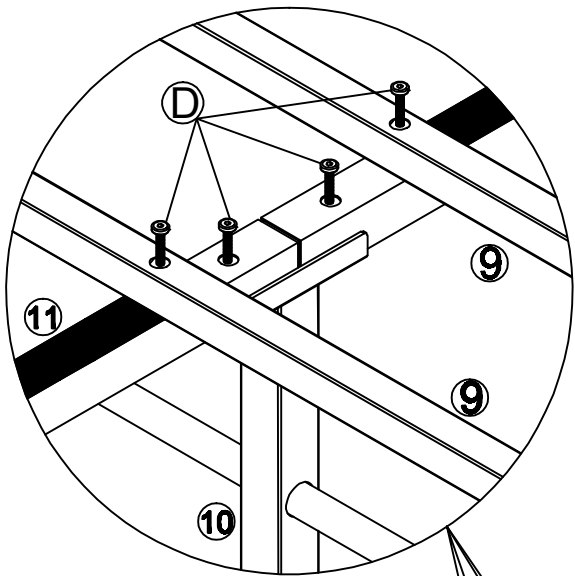
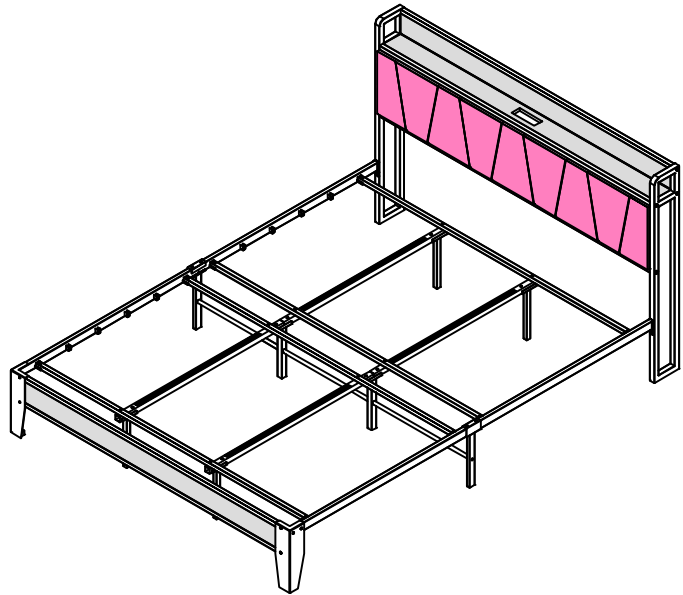
Step 7







With Plastic Rectangle Ribbed Tube.

Step 8




D		M6 x 35	12pcs
E		M6 x 50	4pcs
H		4 #	1pcs

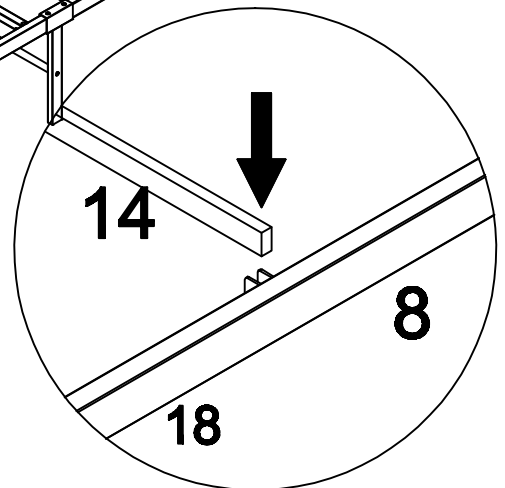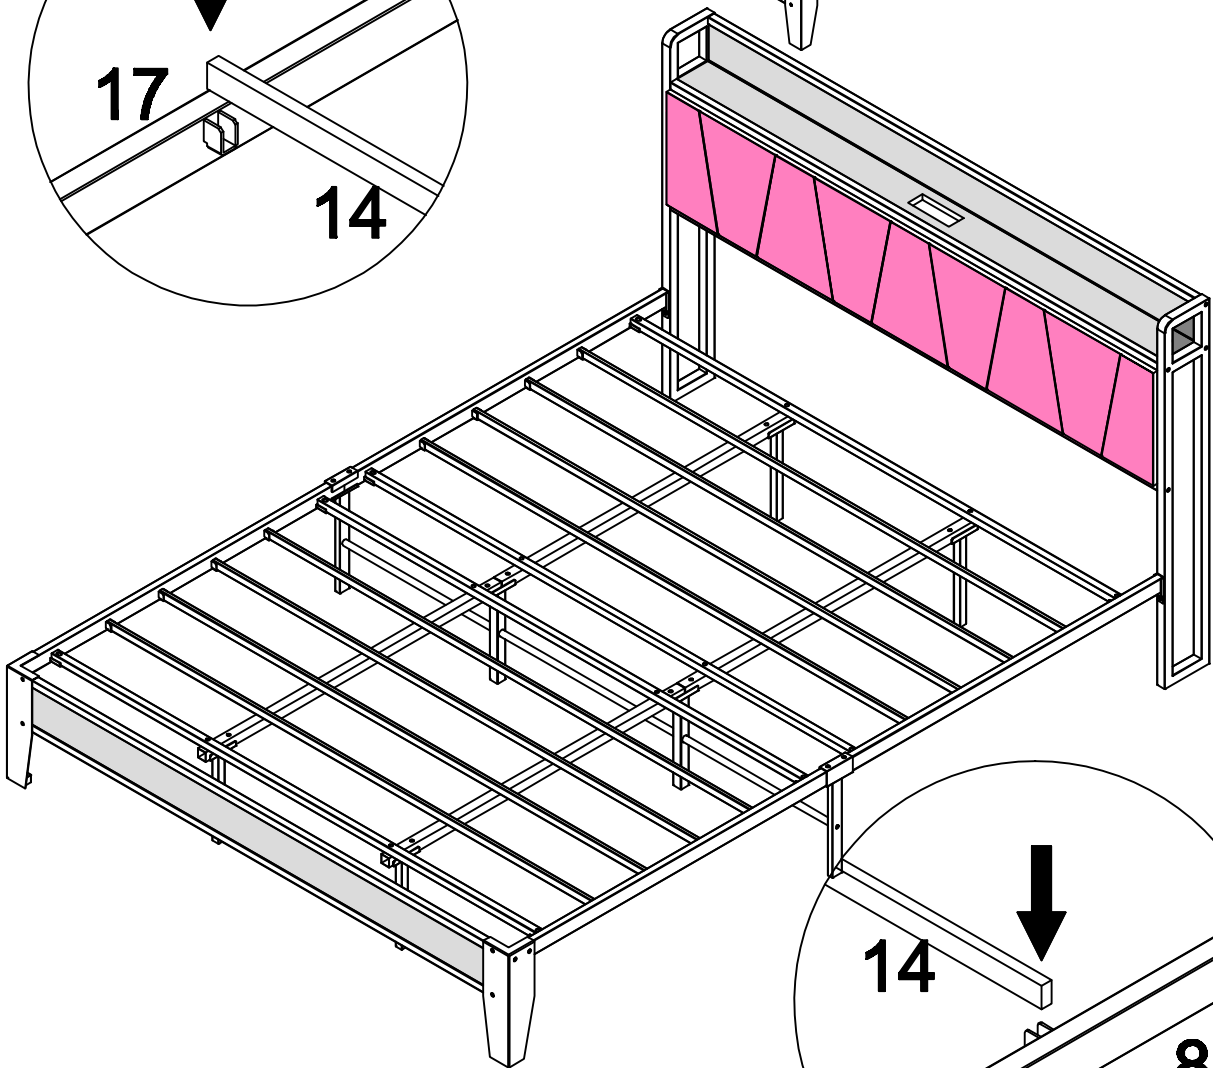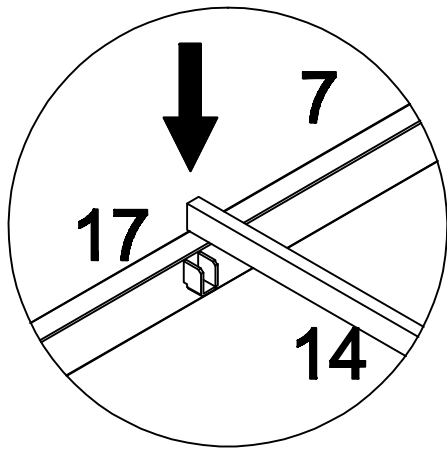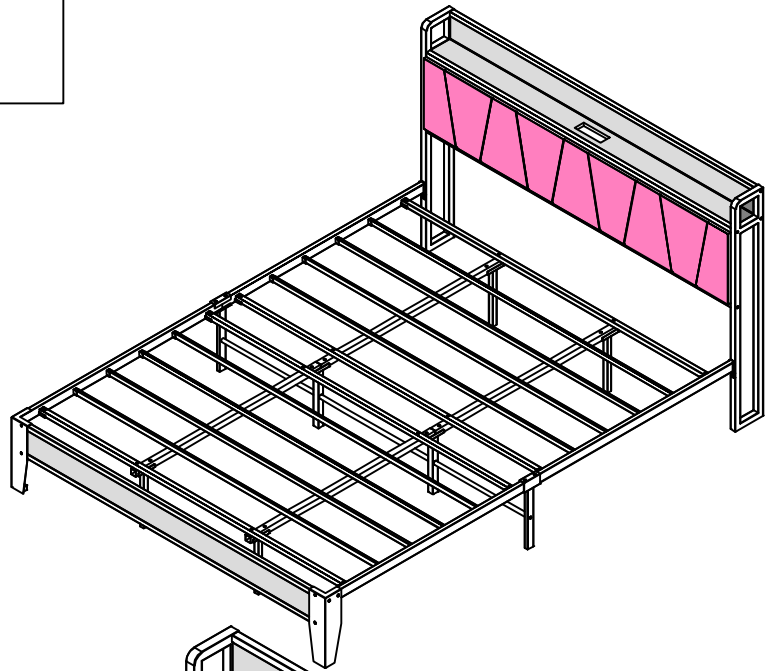

Step 9



Step 10

G		Ø3 x 10	2pcs
I			1pcs
J		4 #	1pcs

