

Instruction Manual




















Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

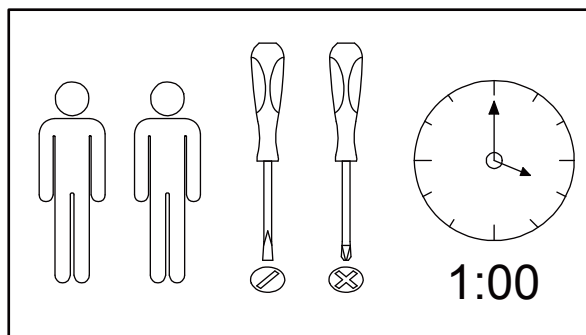
Thank you for purchasing this product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:

①×20	②×20	③×12	④×2	⑤×2	⑥×1
					
⑦×4	⑧×2	⑨×8	⑩×2	⑪×2	⑫×2
					
⑬×2	⑭×1	⑮×4	⑯×4	⑰×1	⑱×2
					
⑲×1					
					

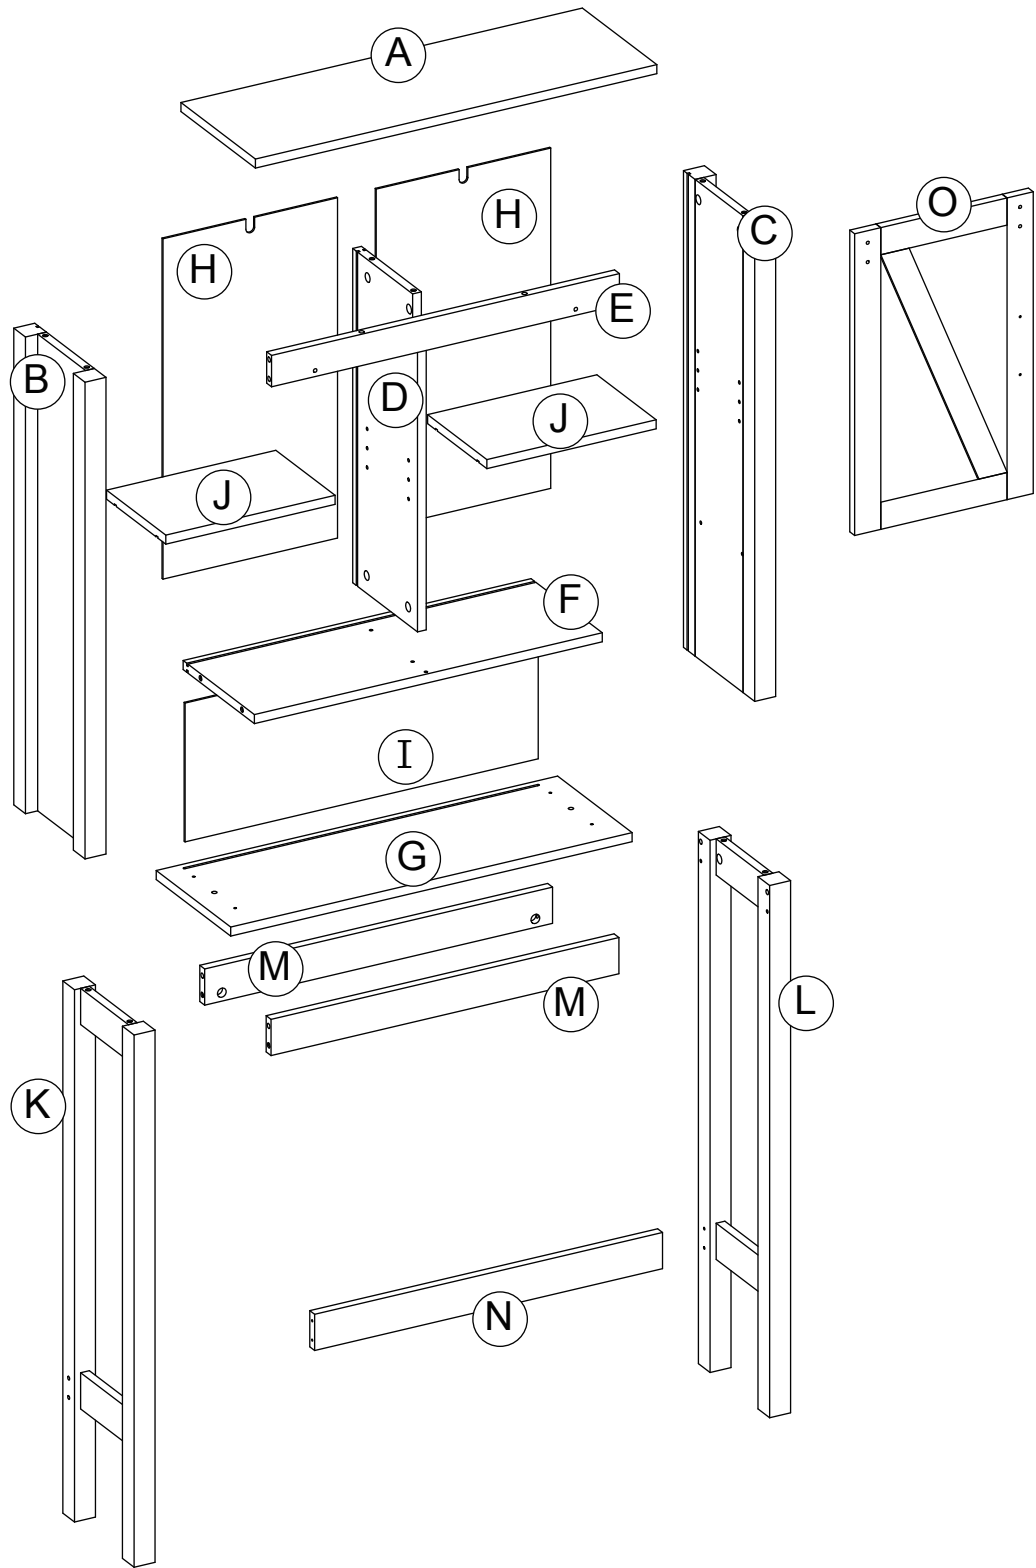


Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
---------------	-------------------------------------

Panels:

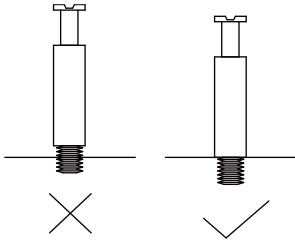


Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 1

Make sure the pins are installed correctly as shown with the “check mark” below:



Below shows how the pins are used to assemble the panels together.

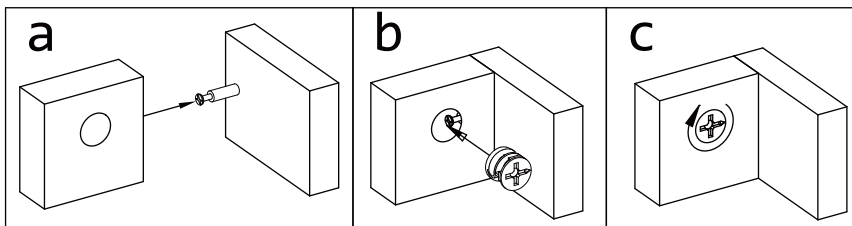


FIGURE A

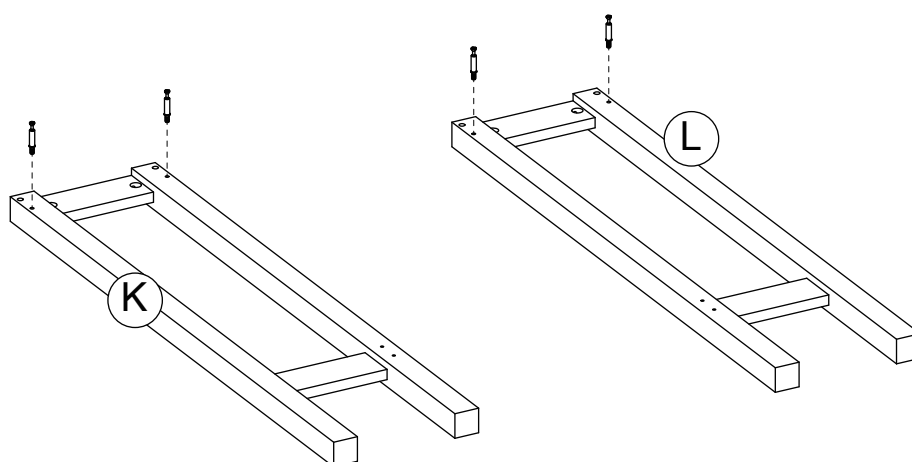
Instruction Manual




Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

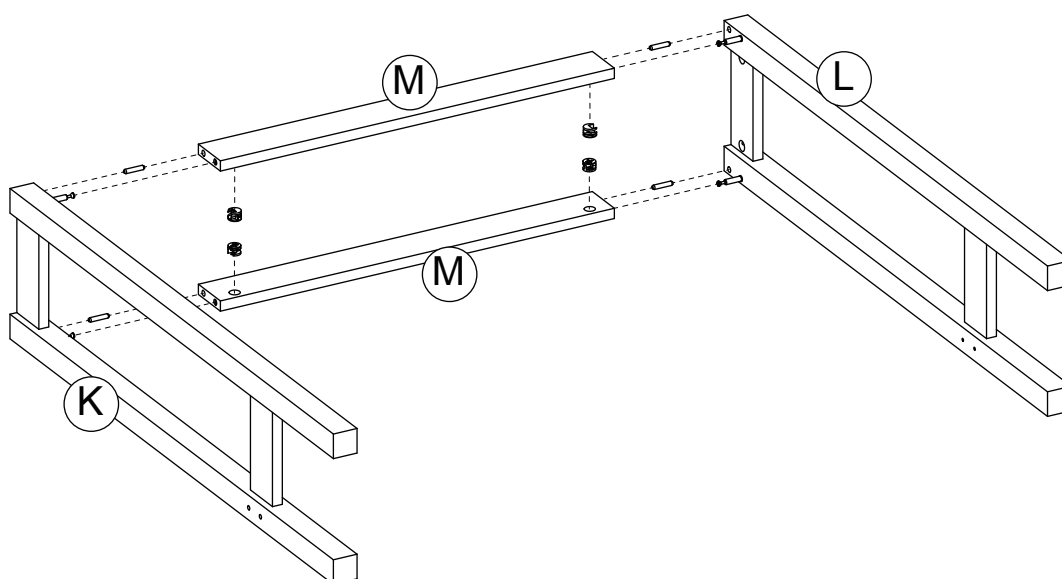
Step 2

Screw cam bolt (1) onto legs (K)&(L).

Insert wooden dowel (3) onto (M) and attached to (K)&(L),
tighten the cam lock (2) clockwise to secure.



①×4

②×4

③×4




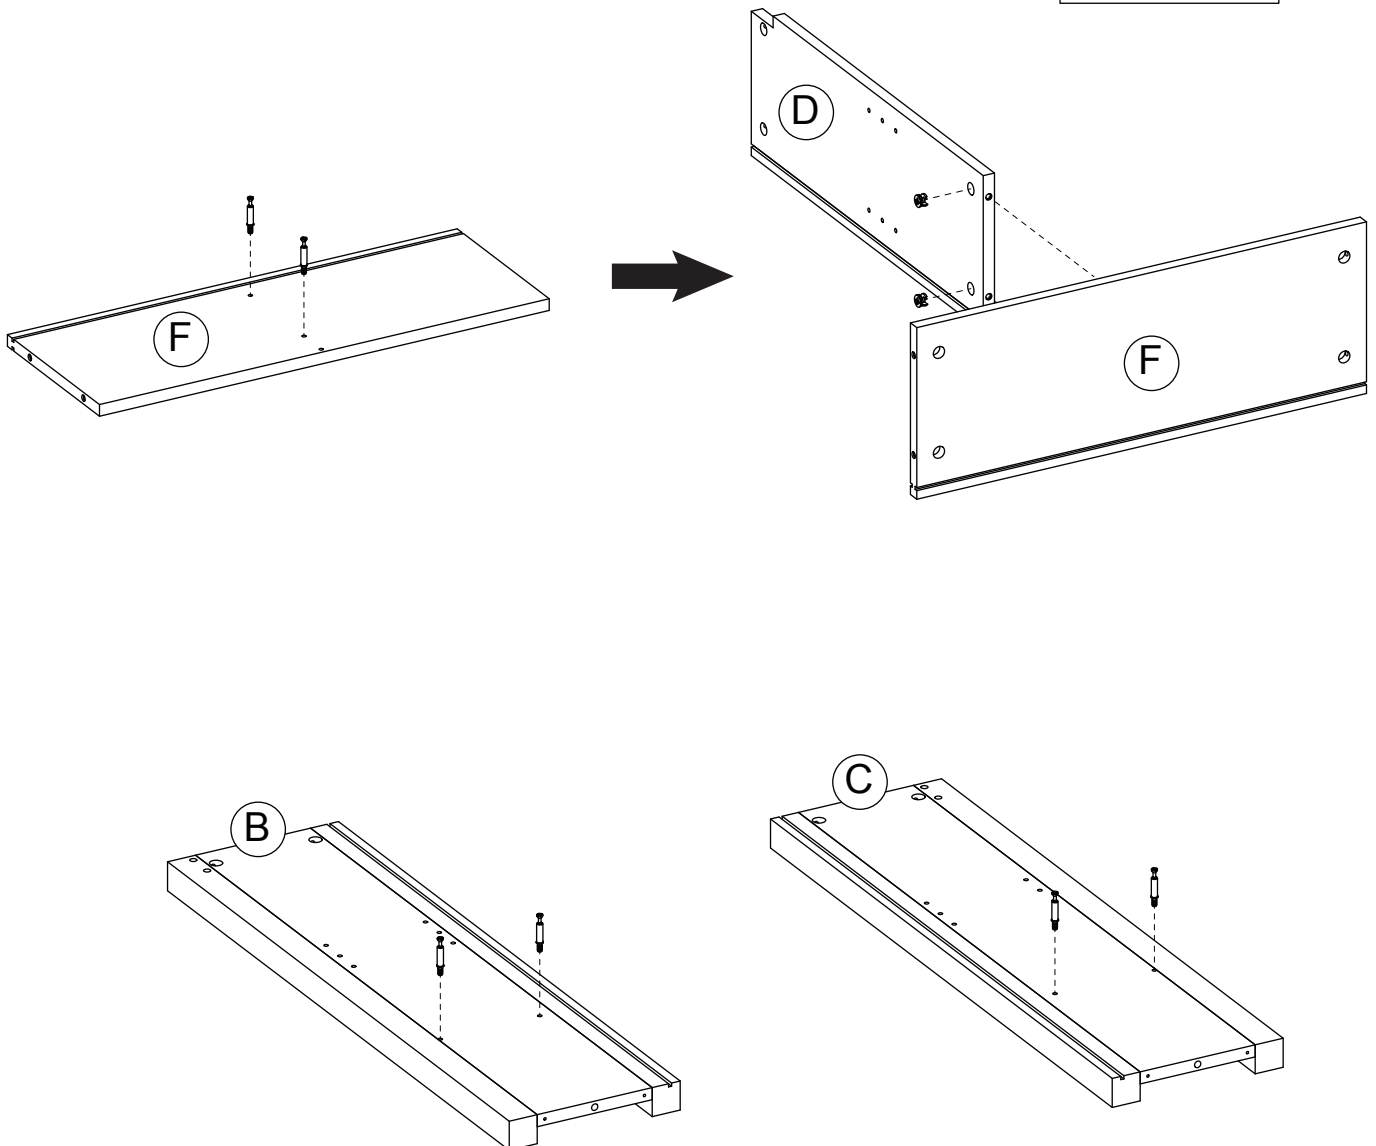
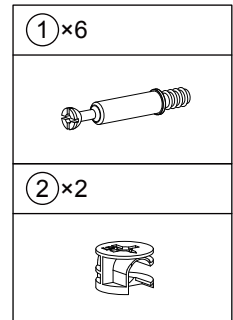
Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 3

Screw cam bolt (1) onto (F), attach panel (D) as shown, tighten the cam lock (2) clockwise to secure.

Screw cam bolt (1) onto (B) & (C).

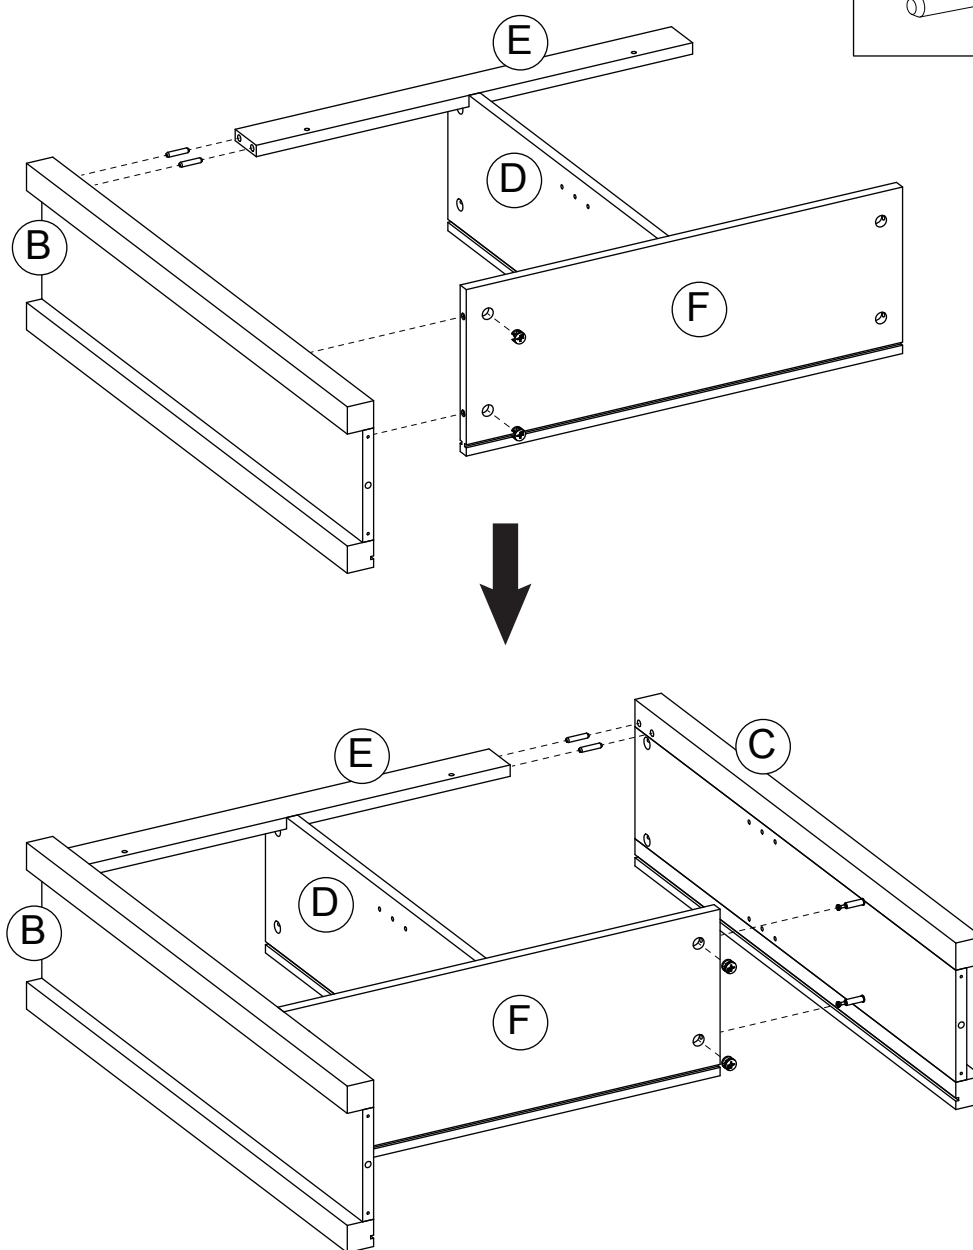
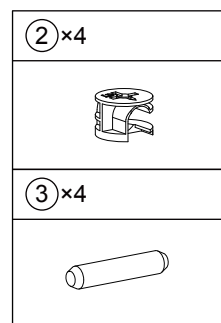


Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 4

Insert wooden dowel (3) onto (E) and attach (B) and (C) to unit as shown.
tighten the cam lock (2) clockwise to secure.






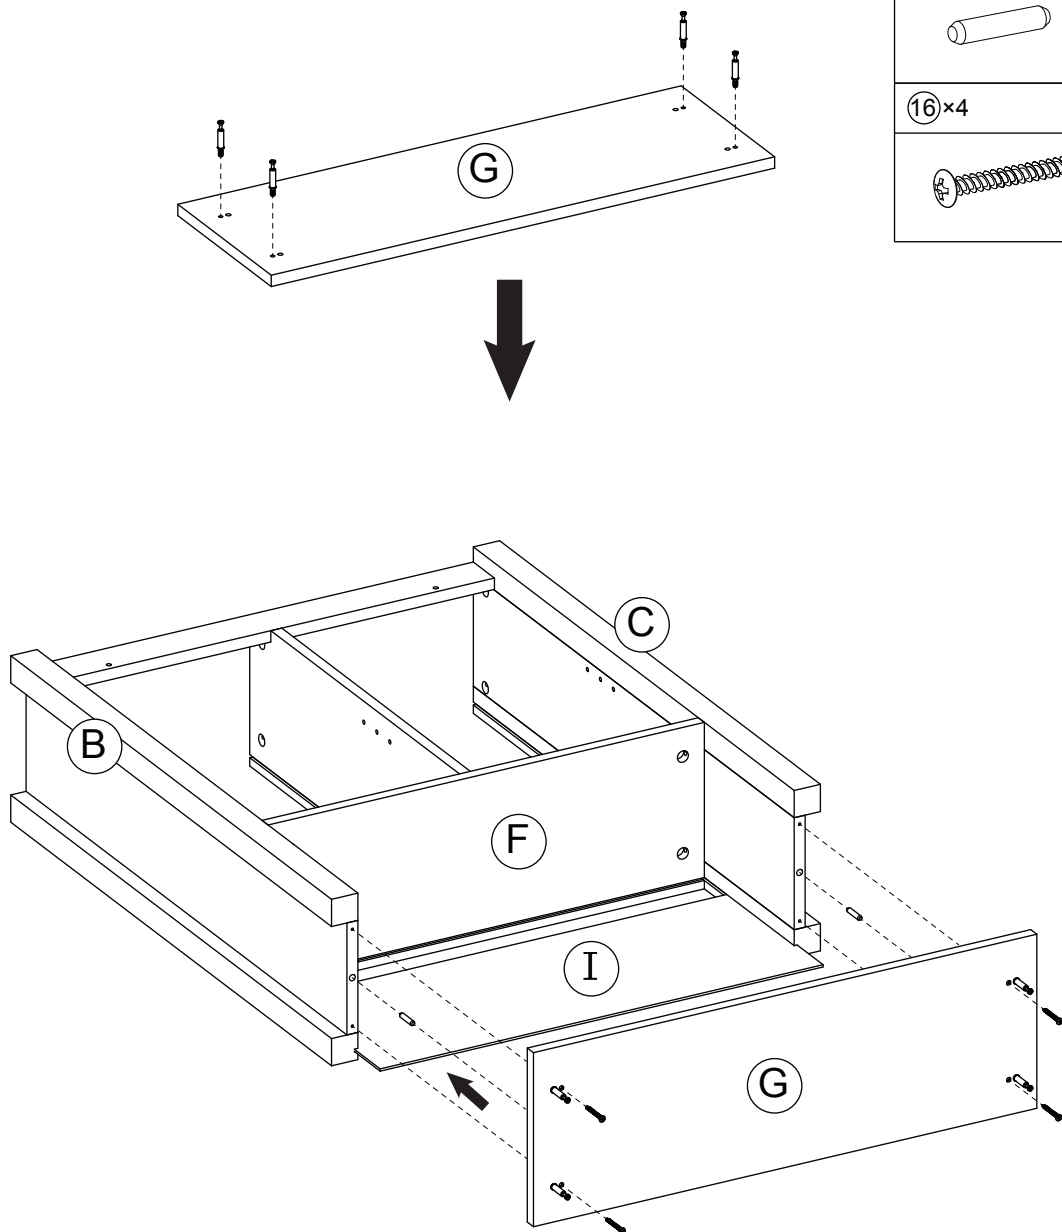
Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
---------------	-------------------------------------

Step 5

Screw cam bolt (1) onto (G), Insert middle back panel (I) as shown.
Fix (G) onto unit with screw (16).

①×4

③×2

①⑥×4


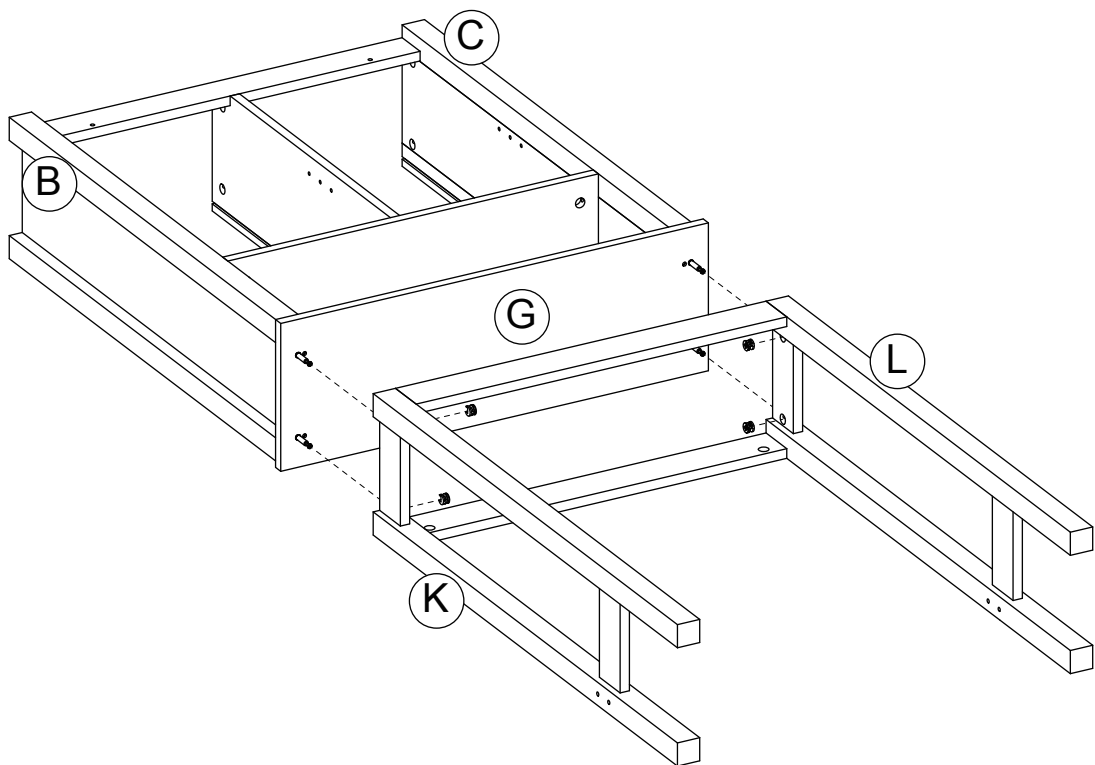
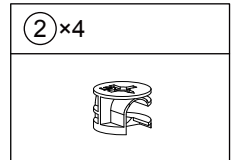


Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 6

Attach assembled upper unit onto the lower unit as shown, tighten the cam lock (2) clockwise to secure.



Instruction Manual






Product Name:	Over-the-Toilet Space Saver Cabinet
---------------	-------------------------------------

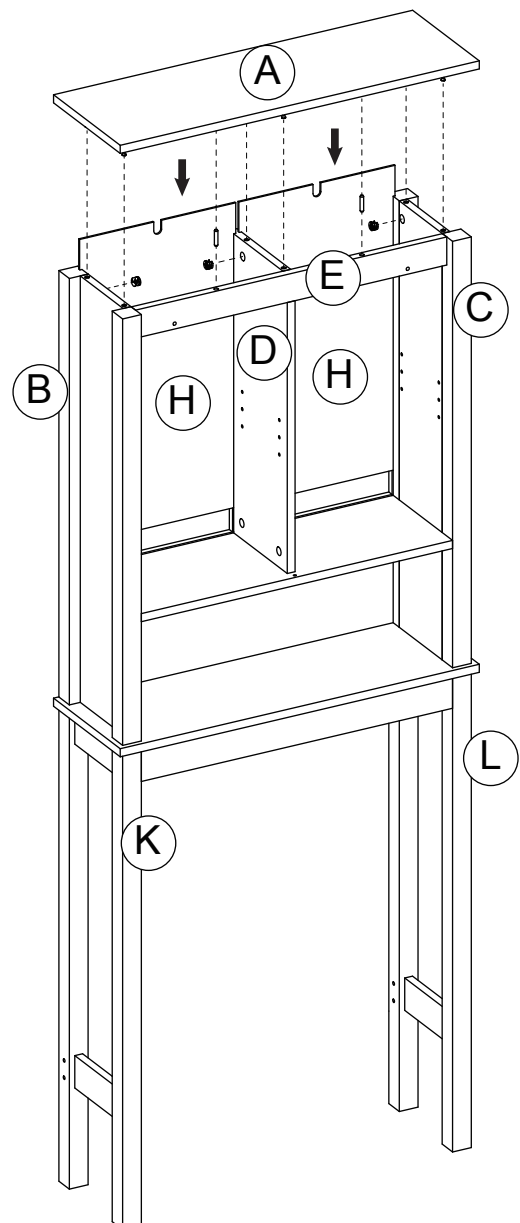
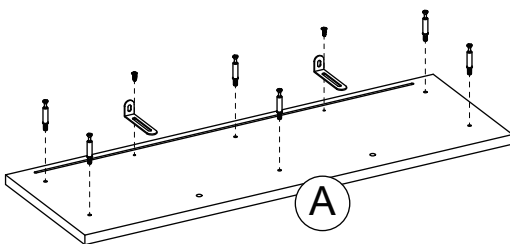
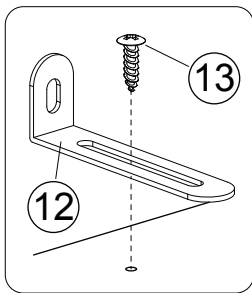
Step 7

Screw cam bolt (1) onto top panel (A),
Screw the metal bracket (12) onto top panel (A)
with screw (13).

Insert back panel (H) onto unit

Insert wooden dowel (3) onto (E), attach (A)
to unit as shown,
tighten the cam lock (2) clockwise to secure.

①×6	②×6	③×2
		
⑫×2	⑬×2	
		








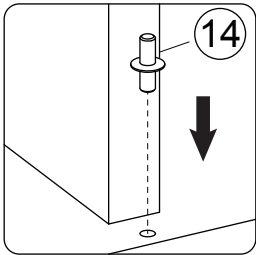
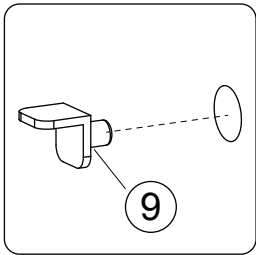
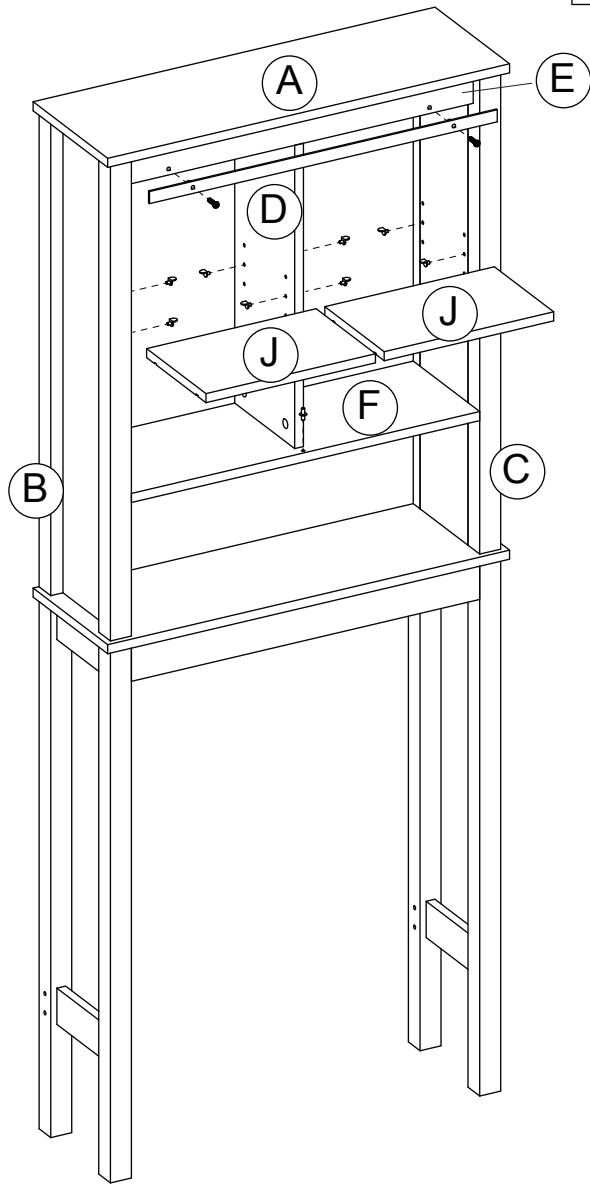
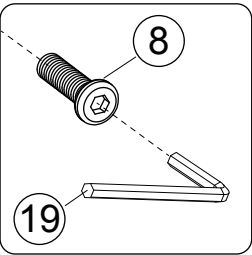
Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
---------------	-------------------------------------

Step 8

Attach metal runner(17) onto unit with bolt (8) as shown with tool (19).
Insert layer supports (9) into unit, then put on the adjustable shelves.
Insert bolt (14) onto panel (F) as shown.

⑧×2	⑨×8
	
⑭×1	⑰×1
	
	⑲×1
	

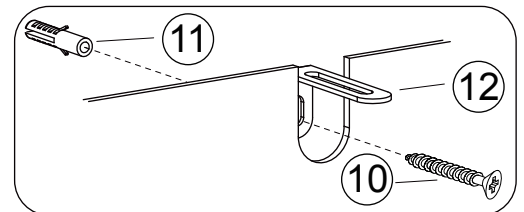
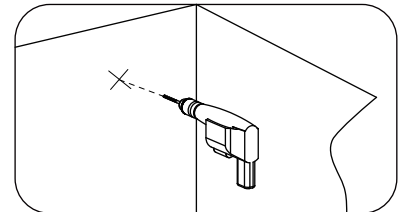
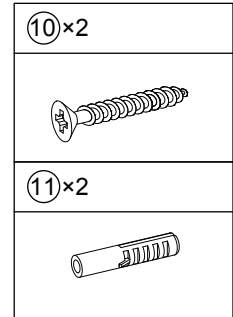
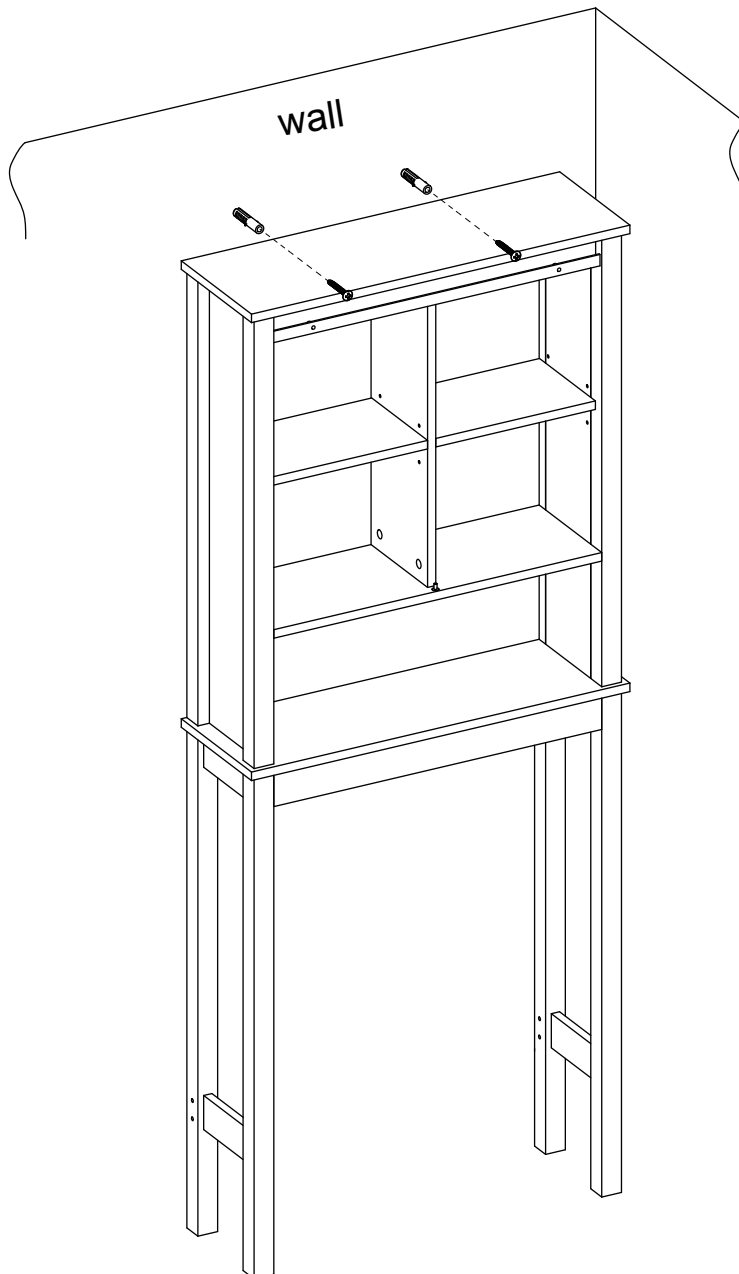


Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
---------------	-------------------------------------

Step 9

Drill holes on the wall to input Wall plug (11).
Fix the unit to the wall with Screw (10) and through (12) as shown.







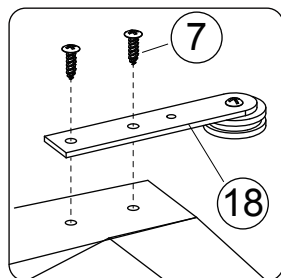
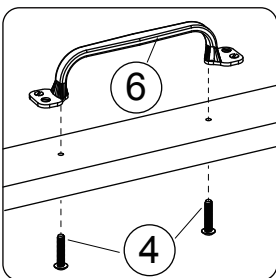
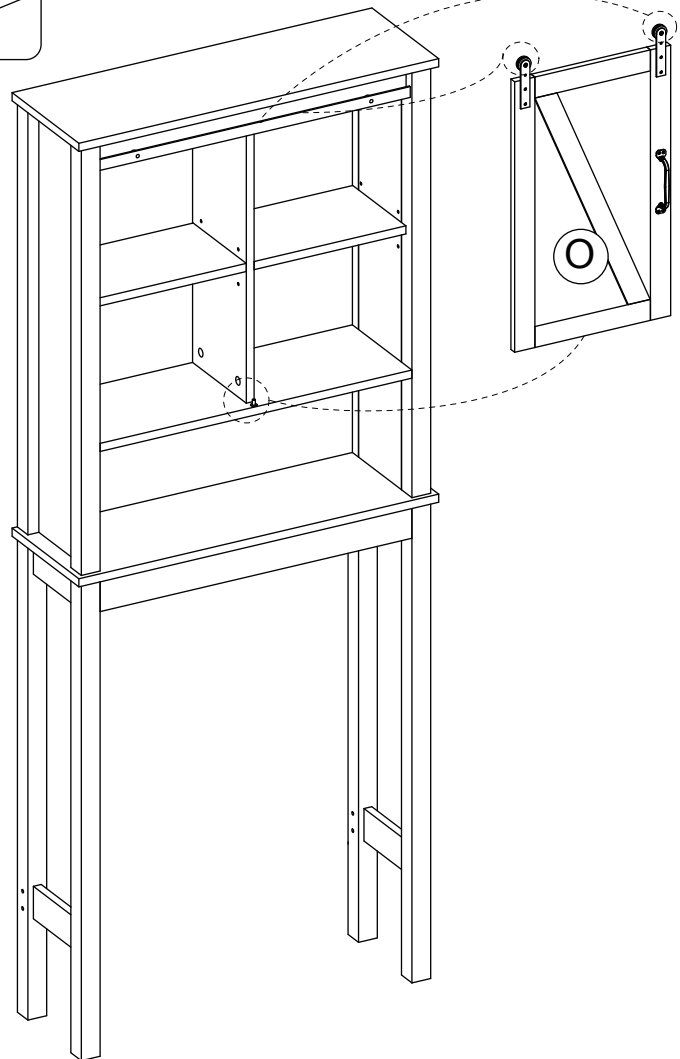
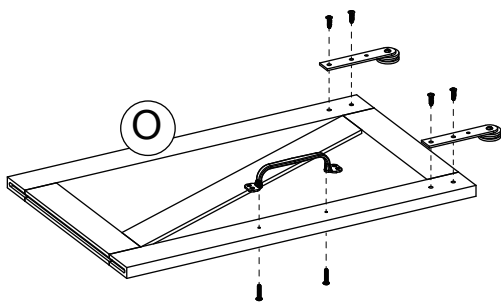
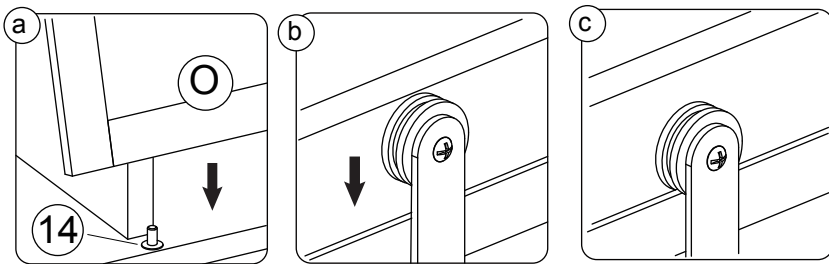
Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 10

Fix the (18) on to door (O).
Insert the door (O) into the bolt (14),
pull up the door a little to hang the wheels (18)
onto the metal runner (17).

④×2	⑥×1
	
⑦×4	⑱×2
	

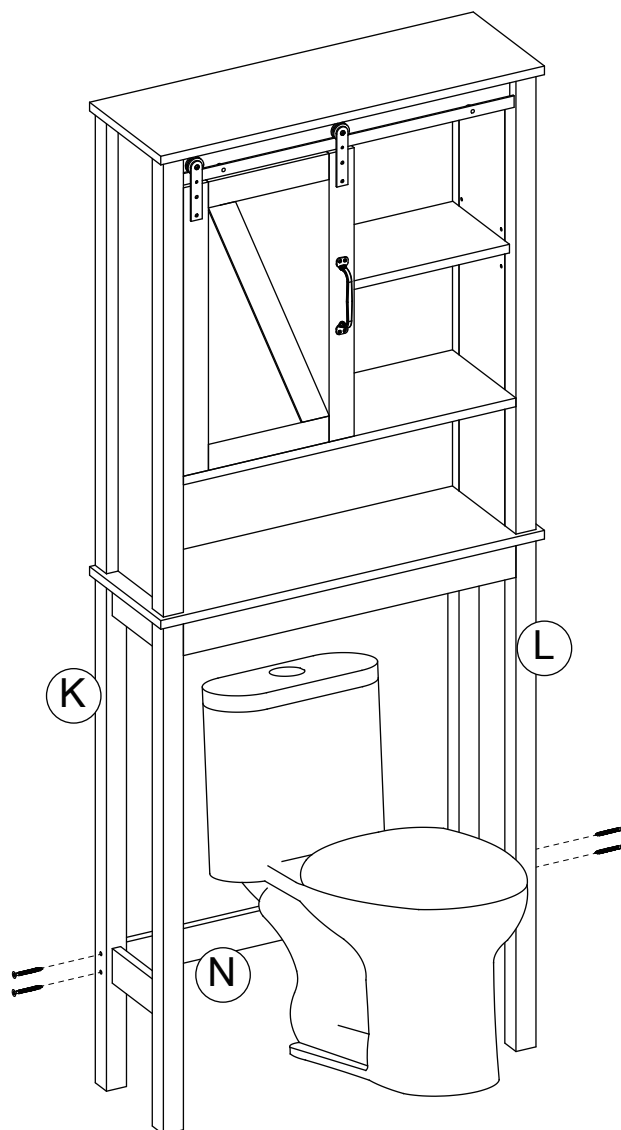
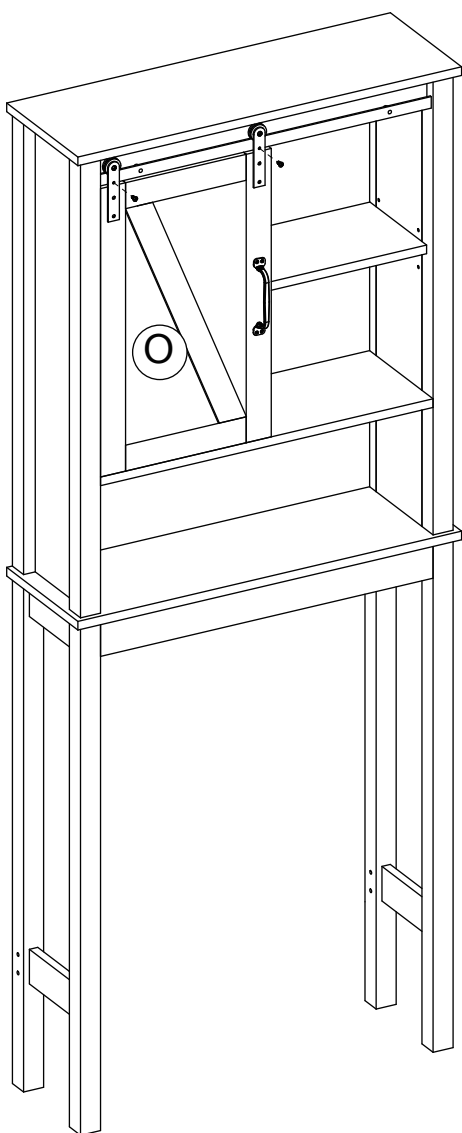
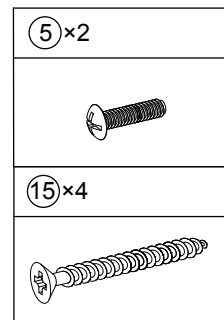
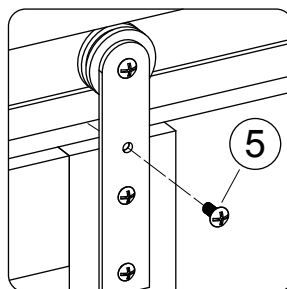


Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 11

Screw bolts (5) into the wheels's hole as shown.
Fix the (N) onto unit with screw (15).



Instruction Manual

Product Name:	Over-the-Toilet Space Saver Cabinet
----------------------	-------------------------------------

Step 12

