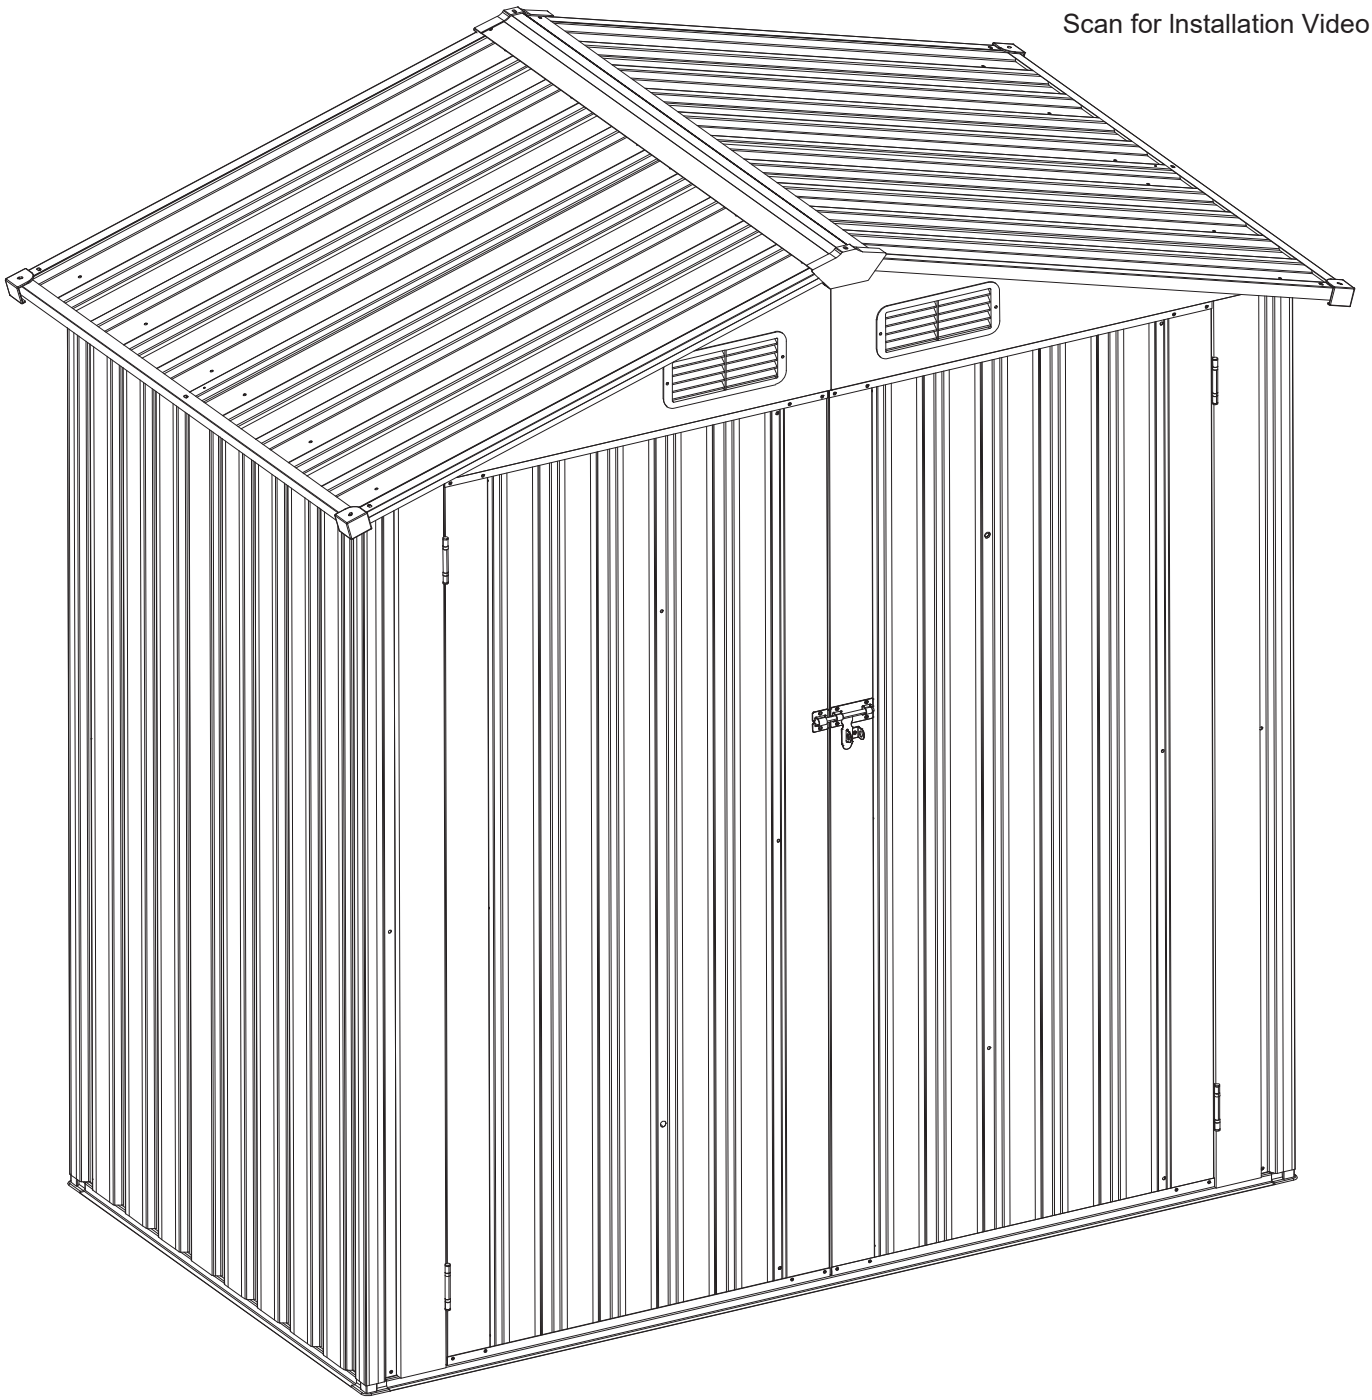
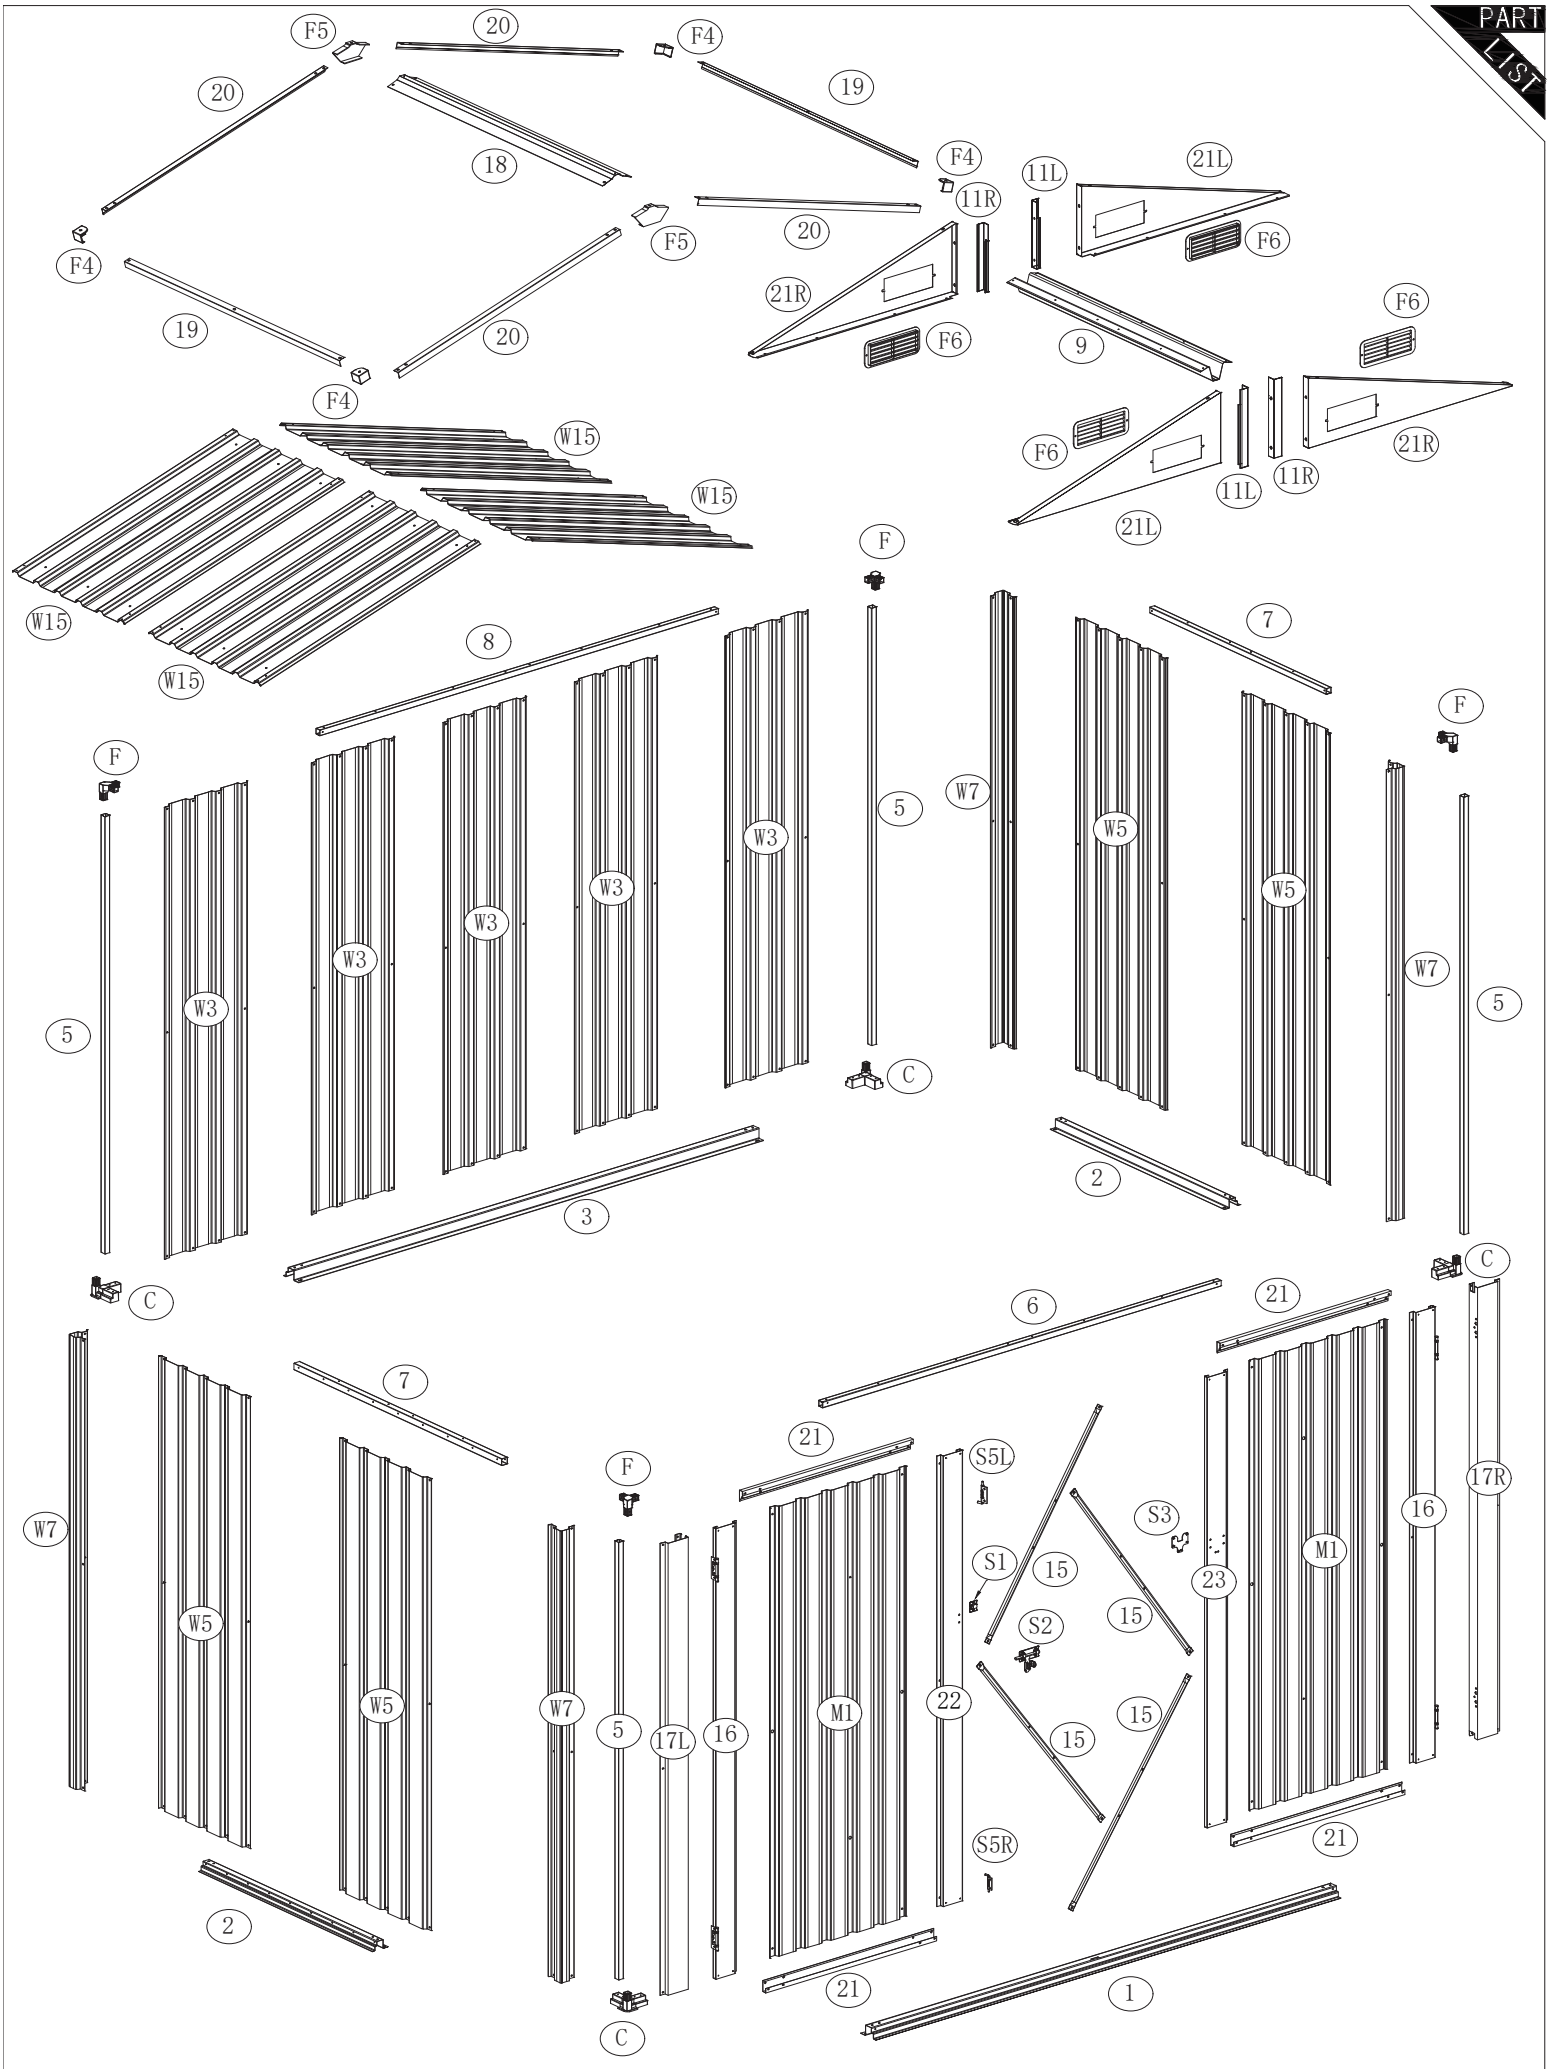
6x4 FT Outdoor Storage Shed

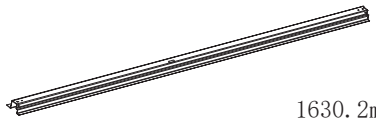

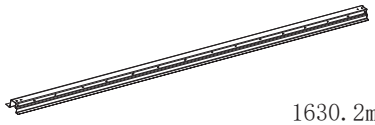
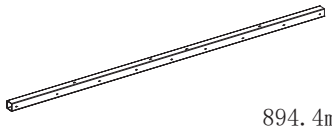

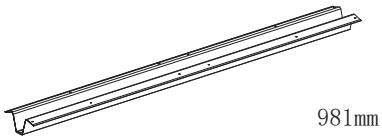


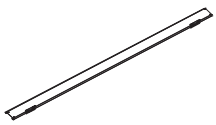
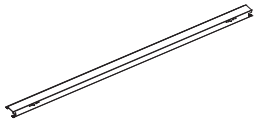
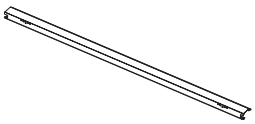
Scan for Installation Video


















behoo_aftersales@outlook.com





PART LIST


F5
20
F4
19
18
F4
11L
21L
11R
F6
F4
F5
20
21R
F6
19
20
9
F6
F4
F6
21R
W15
W15
11L
11R
W15
21L
F
8
7
W15
W15
F
F
W7
5
W3
W5
W3
W3
W3
W3
W5
W7
5
5
C
C
2
3
C
6
21
7
21
F
S5L
S3
S1
15
15
S2
15
15
W7
W5
W5
5
17L
16
M1
22
M1
16
17R
23
W7
S5R
2
21
21
1
C

NO.	PART.	Qty.
1	 1630.2mm	1
2	 881.2mm	2
3	 1630.2mm	1
5	 1510mm	4
6	 1643.6mm	1
7	 894.4mm	2
8	 1643.6mm	1
9	 981mm	1
11L	 230mm	2
11R	 230mm	2
15	 940.9mm	4
16	 1555mm	2
17L	 1560mm	1
17R	 1560mm	1

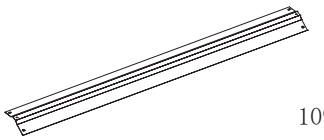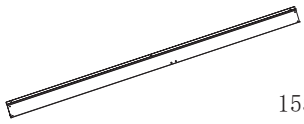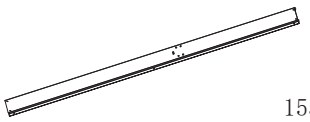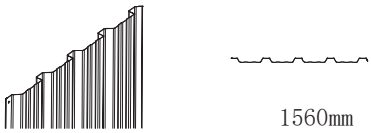NO.	PART.	Qty.
18	 1090mm	1
19	 1090mm	2
20	 951mm	4
21	 705mm	4
21L		2
21R		2
22	 1555mm	1
23	 1555mm	1
W3	 1560mm	5
W7	 1560mm	4
W5	 1560mm	4
W15	 943mm	4
M1	 1553mm	2
C		4

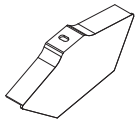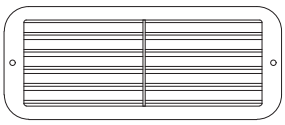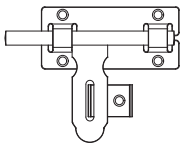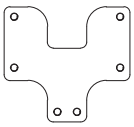NO.	PART.	Qty.
F		4
F4		4
F5		2
F6		4
F7		50
F8		24
F9		2
S1		1
S2		1
S3		1
S4		184
S5L		1
S5R		1
S6		56

NO.	PART.	Qty.
S6A		10
S7		60
S8		4
S9		4
S12		1
S15		1

Before You Start

* Preparation: Assembly requires 2 people and takes about 2–3 hours. Please check all parts against the list before starting.

* Site Requirements: Install on a flat, hard surface. Leave at least 60cm (2 ft) of clearance around the shed for easy access.

* Safety First: Wear gloves throughout the process—metal edges are sharp. Ensure ladders are stable when working at heights.


* Pro Tip: During frame assembly, tighten screws to about 80% first. Fully tighten them only after the entire frame is squared up to prevent misaligned holes.

Step 1: Build the Base Frame

NO.	PART.	Qty.
1	 1630.2mm	1
2	 881.2mm	2
3	 1630.2mm	1
C		4
S4		16

NO.	PART.	Qty.
5	 1510mm	4


Step 2: Install Posts & Top Frame

NO.	PART.	Qty.
6	 1643.6mm	1
7	 894.4mm	2
8	 1643.6mm	1
F		4
S4		8


Step 3: Install the Side & Back Wall Panels

NO.	PART.	Qty.
W7	1560mm	2
W5	1560mm	2
S4		18
S6		3
S7		3

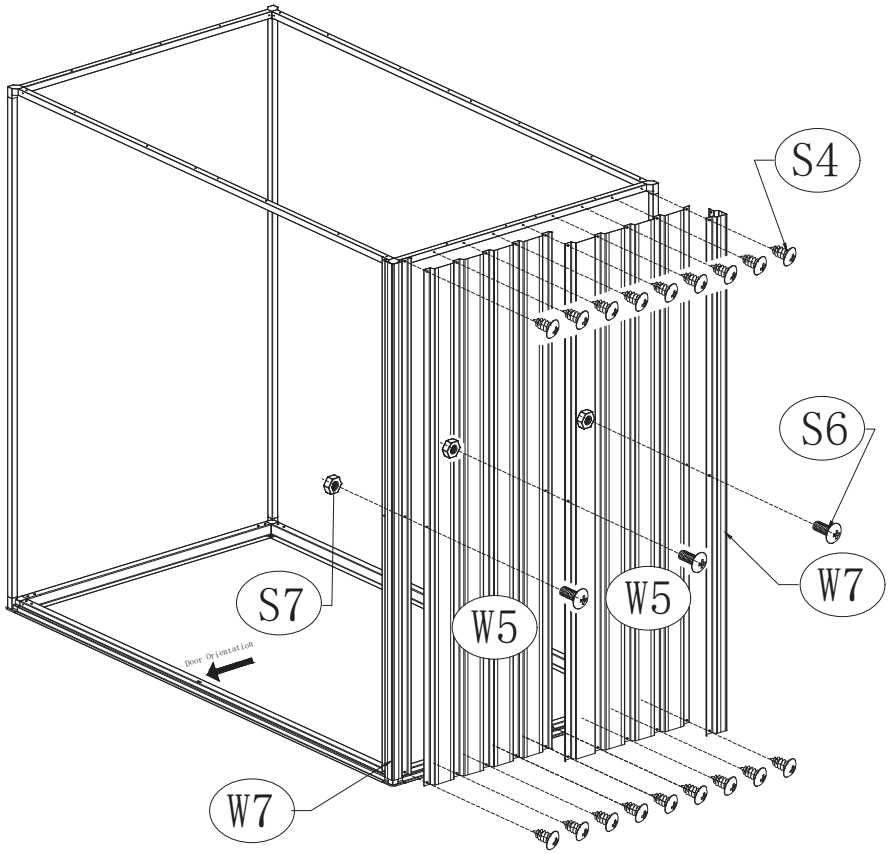Use S6 screws and S7 nuts for the middle, and S4 screws for the top and bottom.




NO.	PART.	Qty.
W7	1560mm	1
W3	1560mm	5
S4		32
S6		6
S7		6

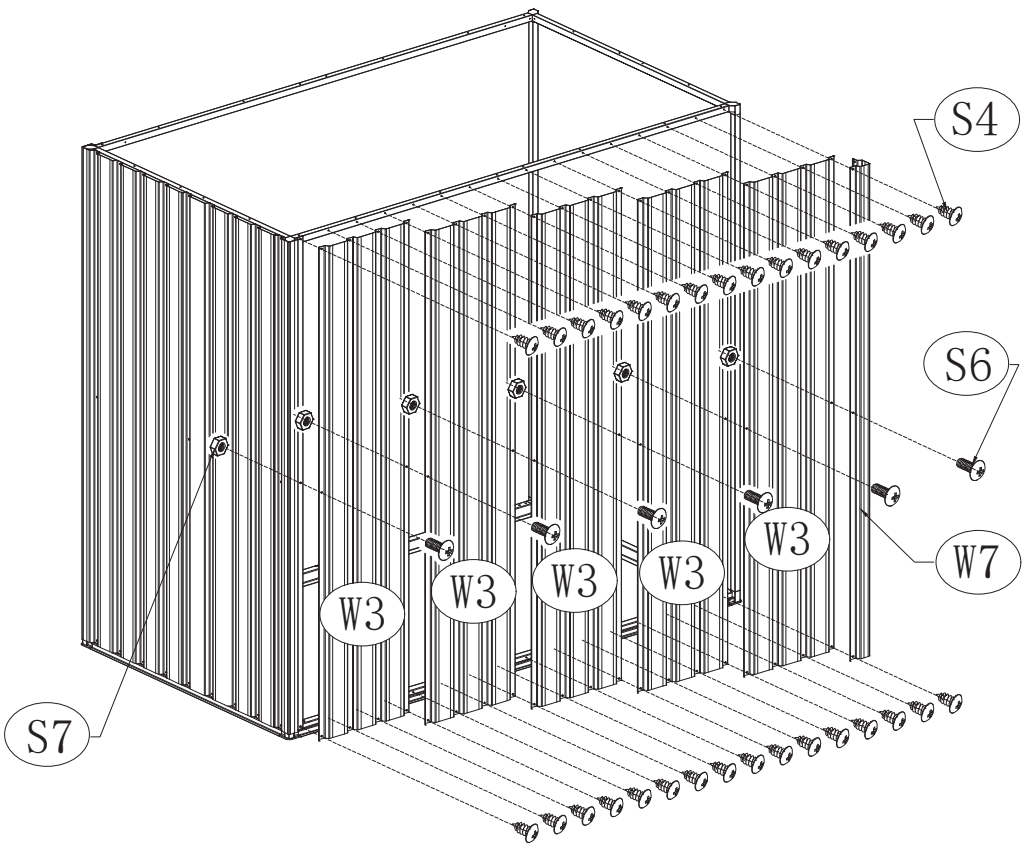


Step 3: Install the Side & Back Wall Panels




NO.	PART.	Qty.
W5		2
W7		1
S4		18
S6		3
S7		3

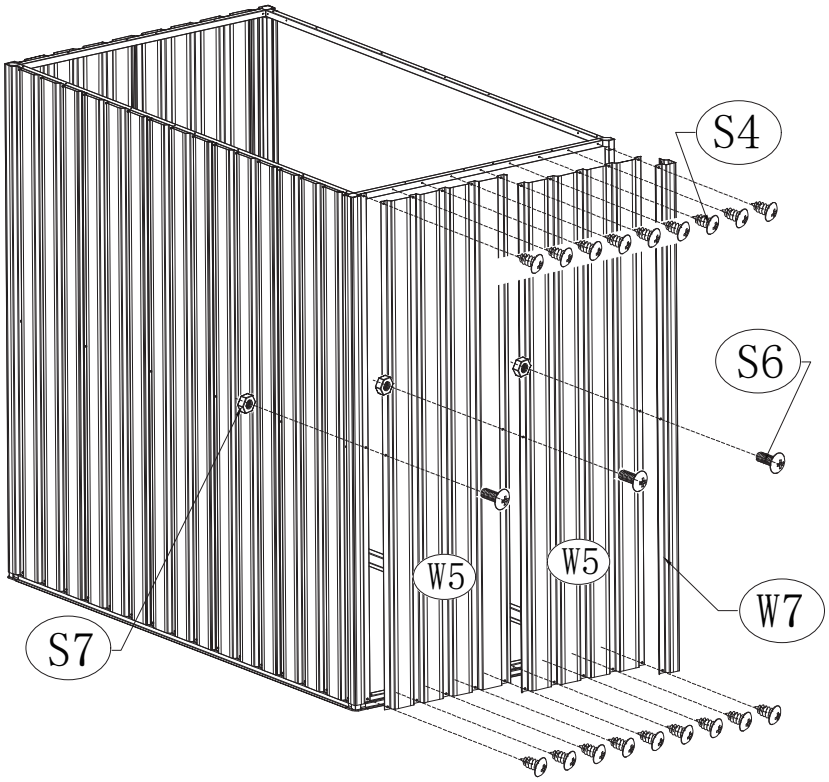Use S6 screws and S7 nuts for the middle, and S4 screws for the top and bottom.




NO.	PART.	Qty.
17L		1
17R		1
S4		8
S6		2
S7		2

Step 4: Lay the Roof Panels

NO.	PART.	Qty.
11L		2
11R		2
21L		2
21R		2
F6		4
S6		12
S7		12

S6 with S7 for horizontal mounting.

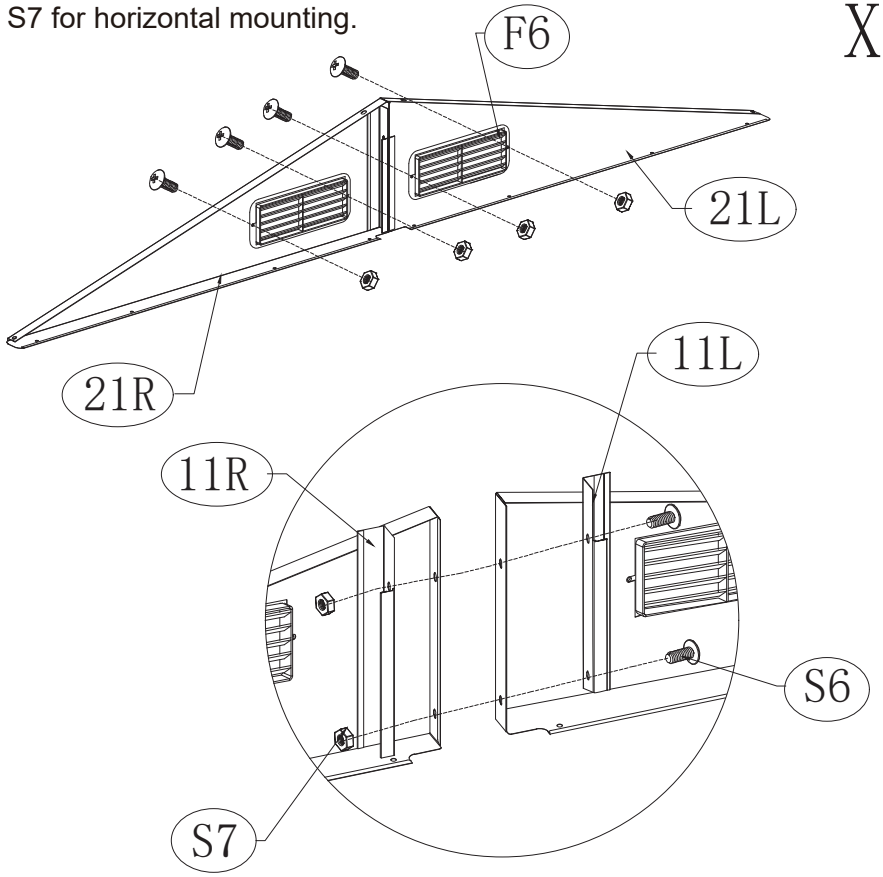X2




NO.	PART.	Qty.
S4		16

Use S4 for downward installation.

Step 4: Lay the Roof Panels

NO.	PART.	Qty.
9		1

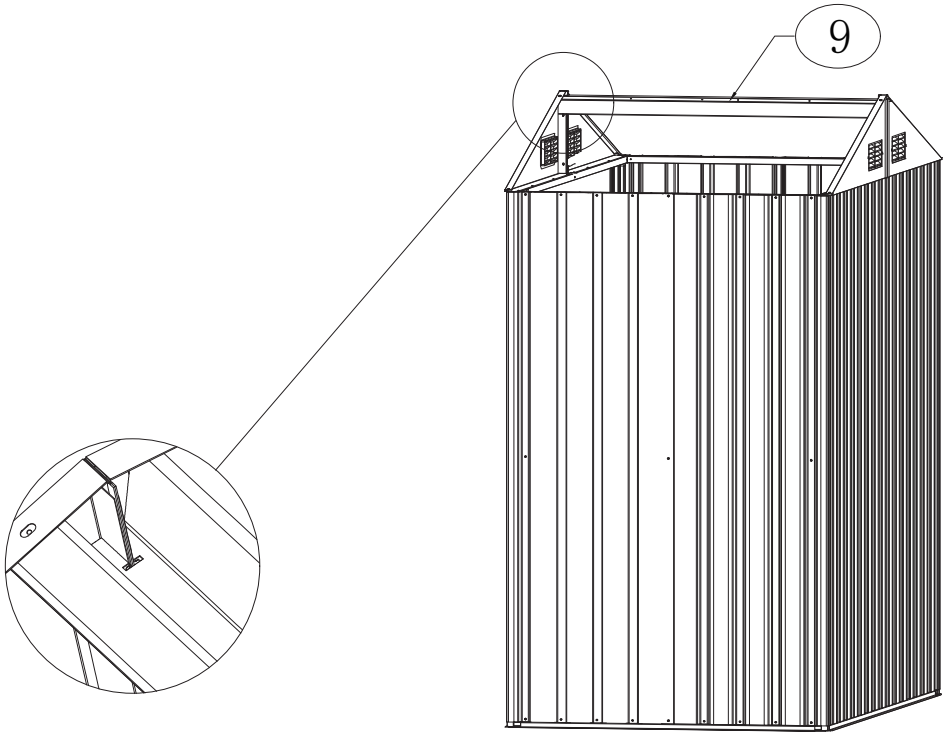


NO.	PART.	Qty.
W15		4
S4		30
F7		30

Tips:
1. Place the side with small distance between holes and edges on the top.
2. Install with S4 and F7 at corresponding positions.


Step 4: Lay the Roof Panels

NO.	PART.	Qty.
20	 951mm	4
S4		8
F7		8

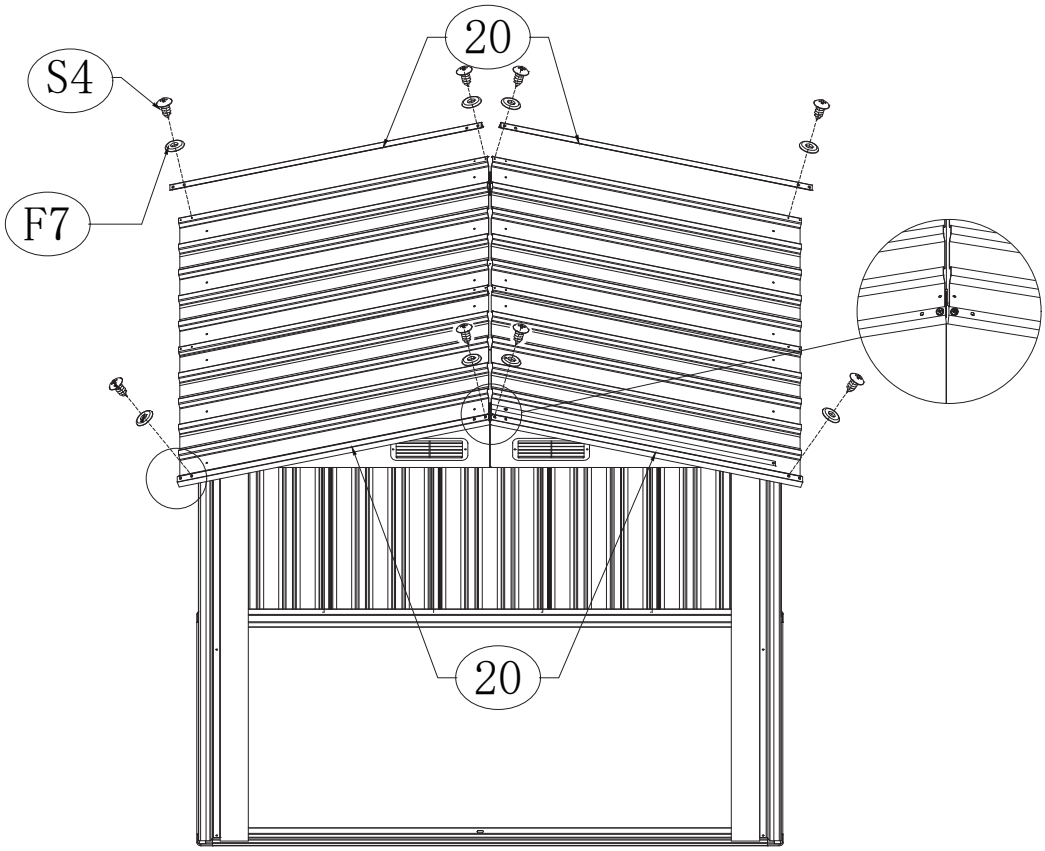

NO.	PART.	Qty.
19	 1090mm	2
S4		2
S8		4
F4		4
F7		6

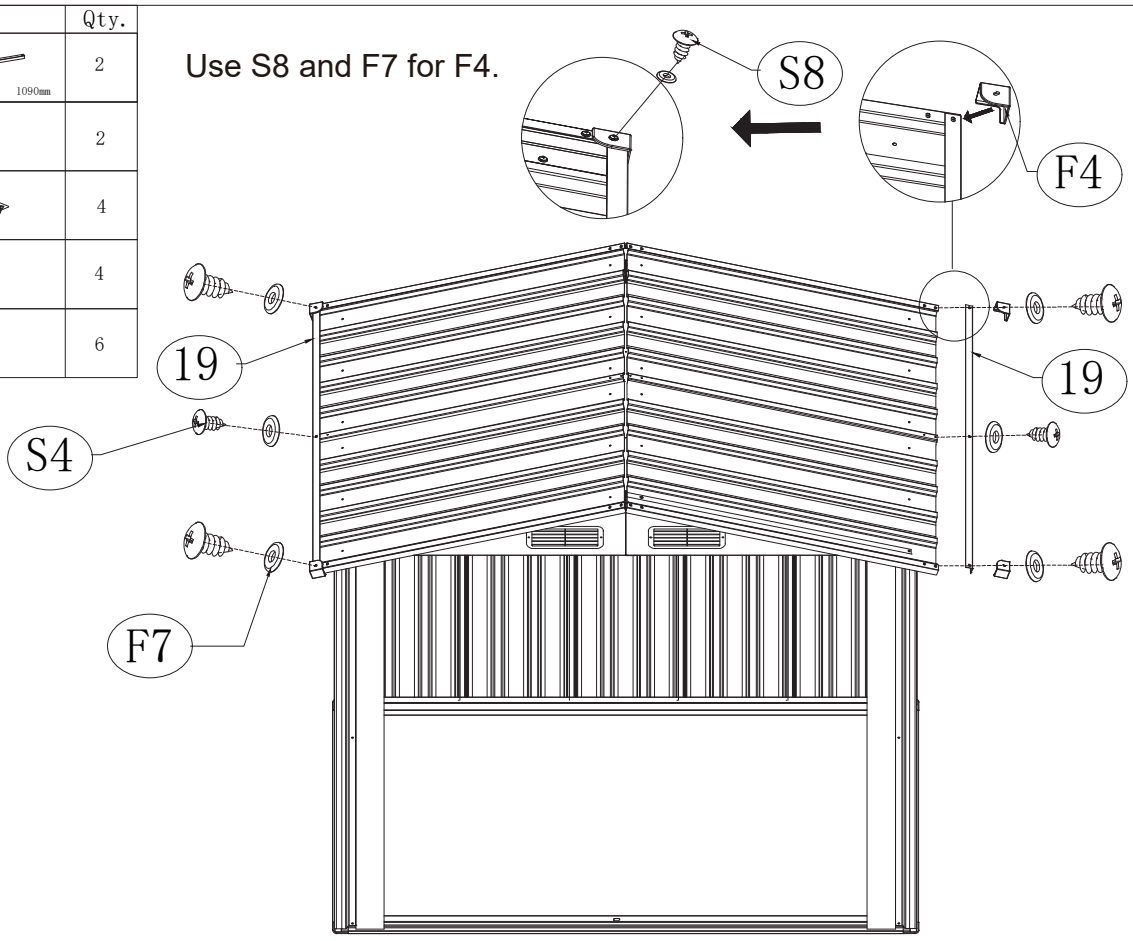
Use S8 and F7 for F4.





Step 4: Lay the Roof Panels

NO.	PART.	Qty.
F8		24

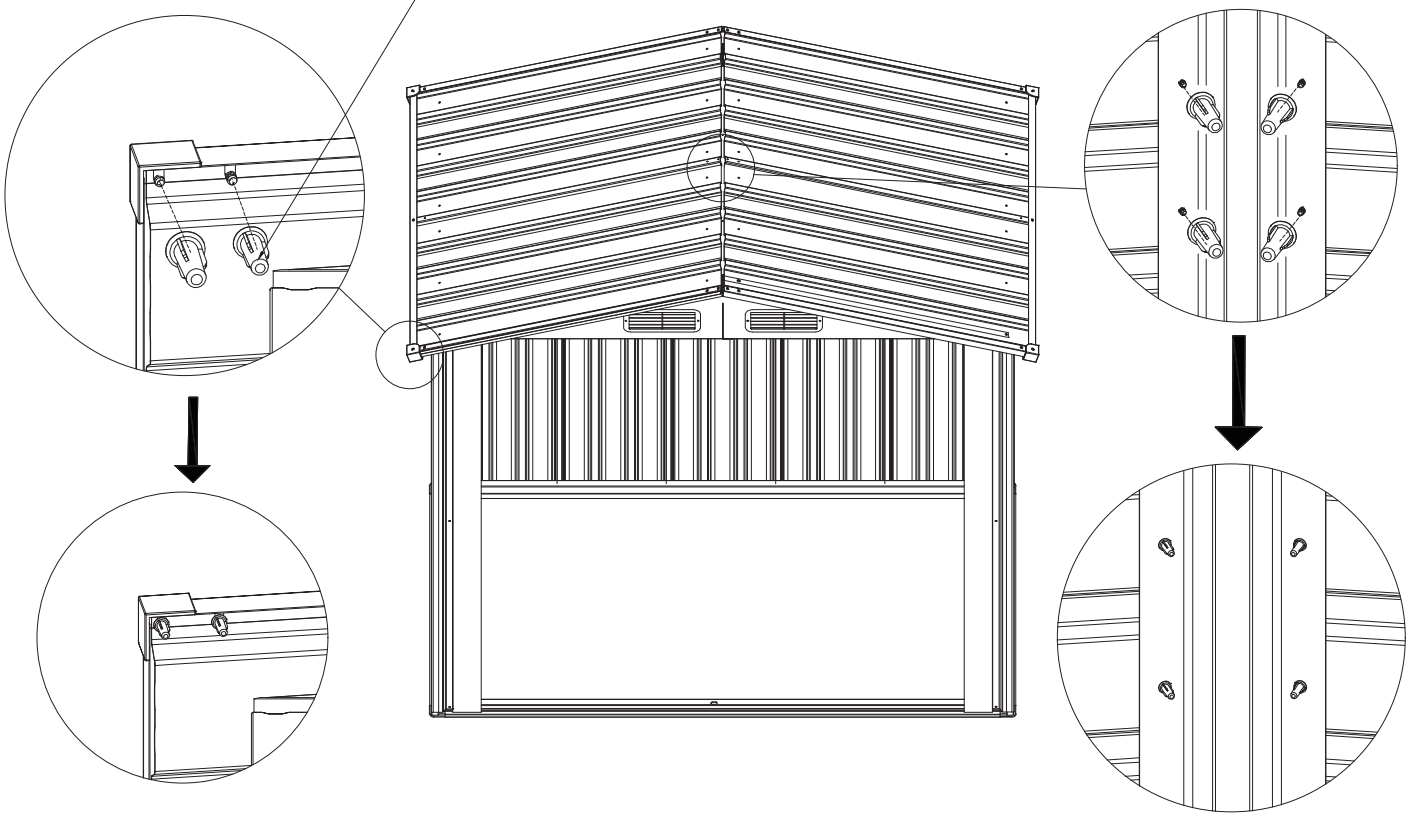
Mount F8 at the bottom of all visible screws under the eaves.




NO.	PART.	Qty.
18		1
F5		2
S4		6
F7		6


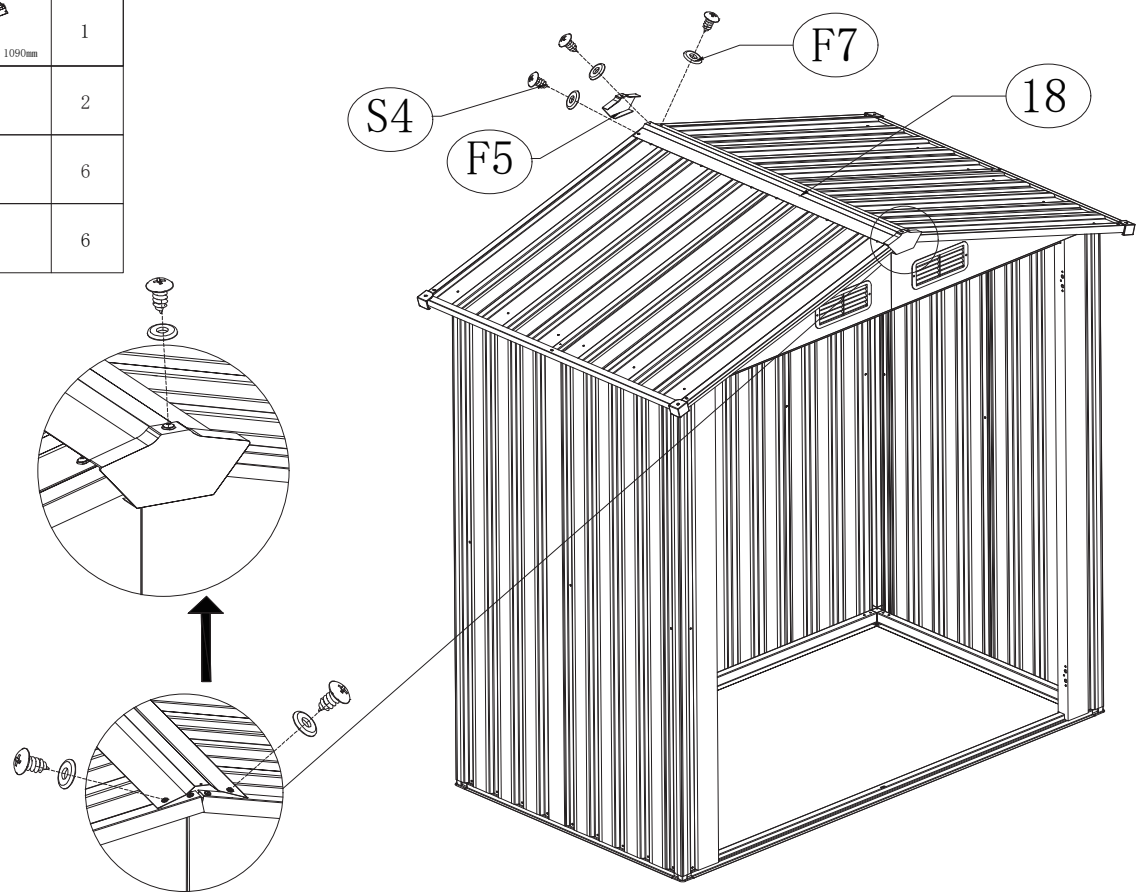


Step 5: Assemble the Door

NO.	PART.	Qty.
16	 1555mm	1
21	 705mm	2
22	 1555mm	1
M1	 1553mm	1

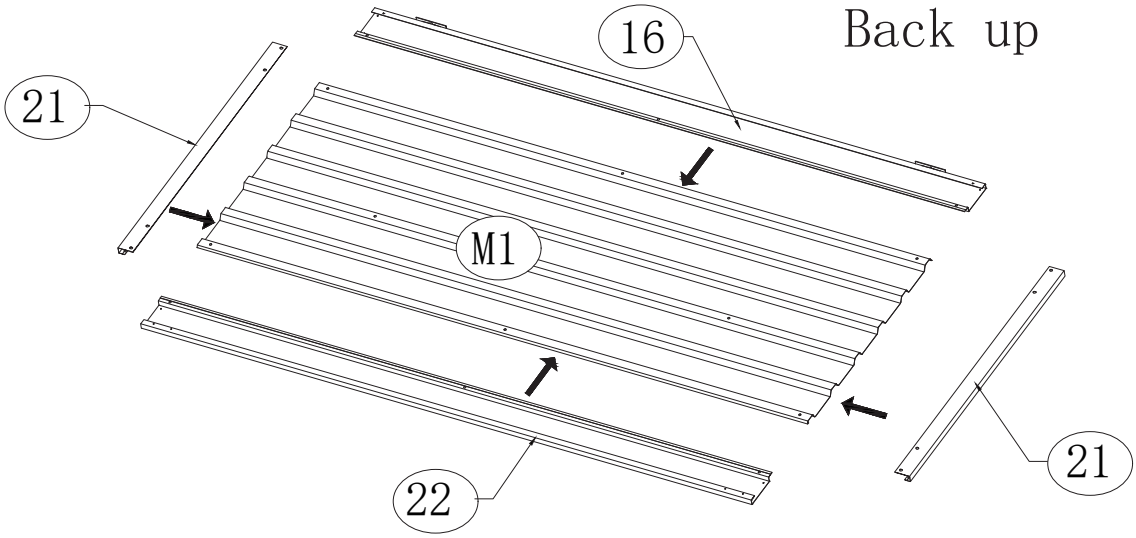
Put 16 on the side farther from the hole in the center of the tile and 22 on the side nearer.




NO.	PART.	Qty.
S5L		1
S5R		1
S4		2
S6		4
S7		4

Step 5: Assemble the Door


NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

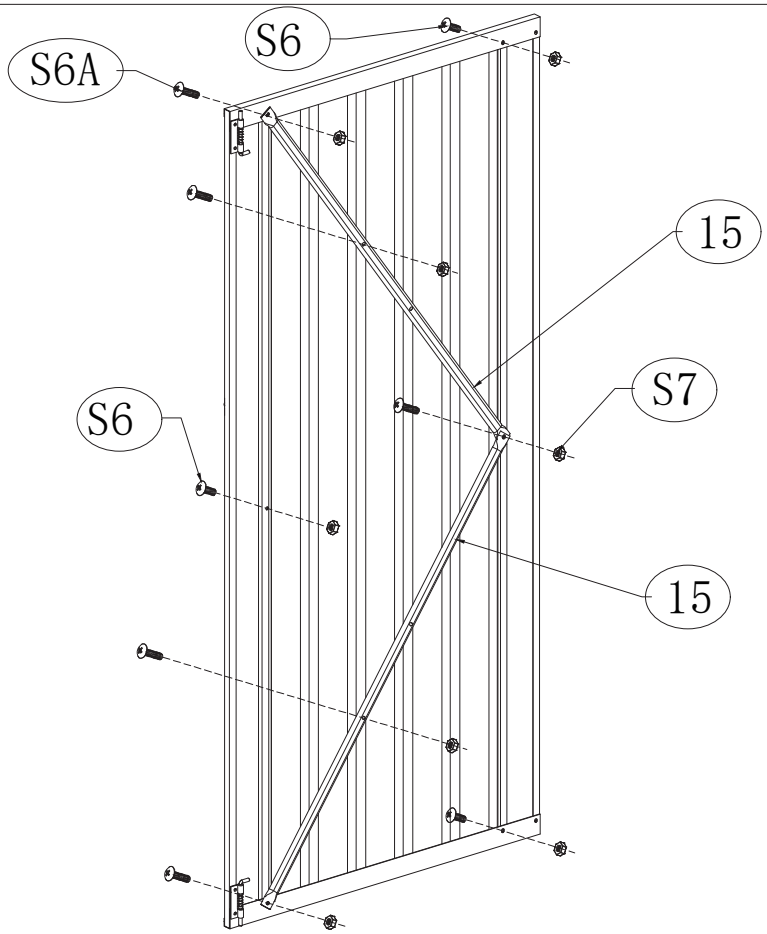


NO.	PART.	Qty.
S1		1
S4		8
S6		2
S7		2

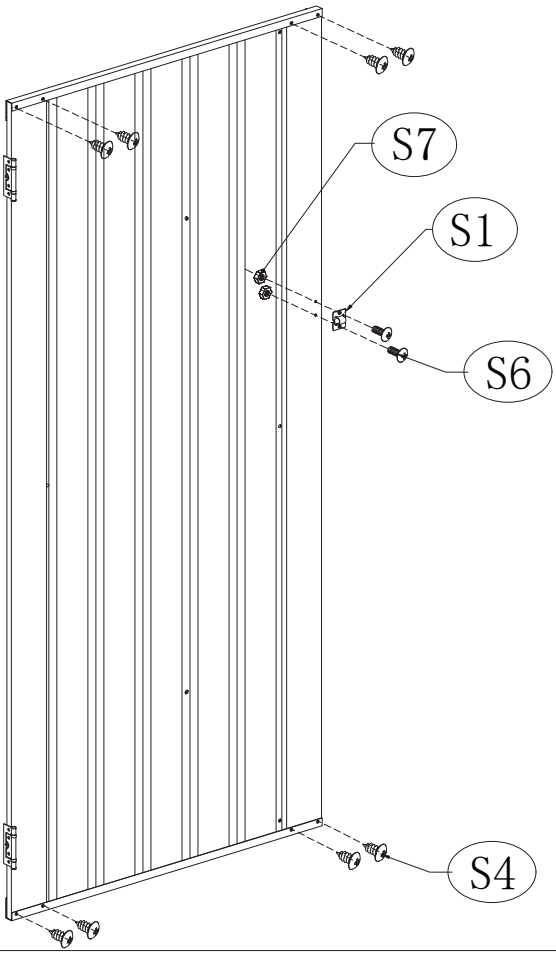


Step 5: Assemble the Door

NO.	PART.	Qty.
16	 1555mm	1
21	 705mm	2
23	 1555mm	1
M1	 1553mm	1

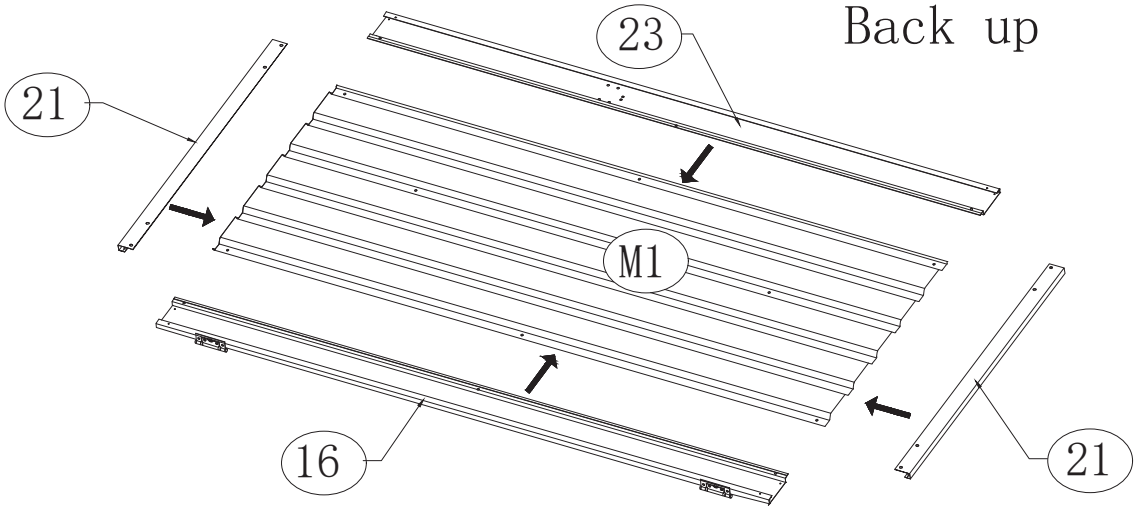Put 16 on the side farther from the hole in the center of the tile and 23 on the side nearer.




NO.	PART.	Qty.
S4		4

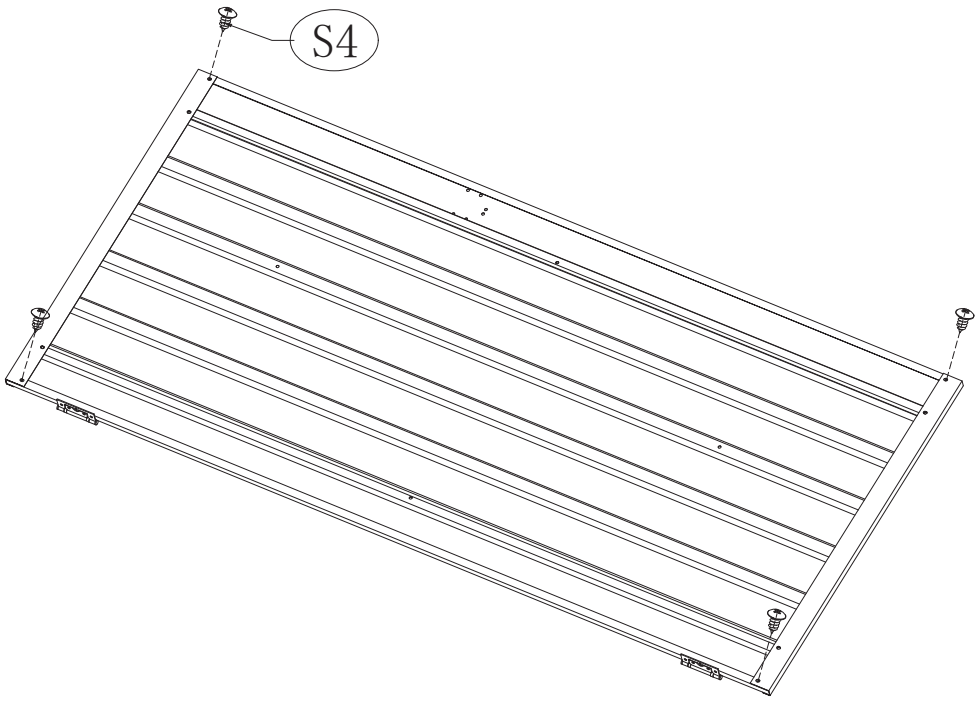


Step 5: Assemble the Door

NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

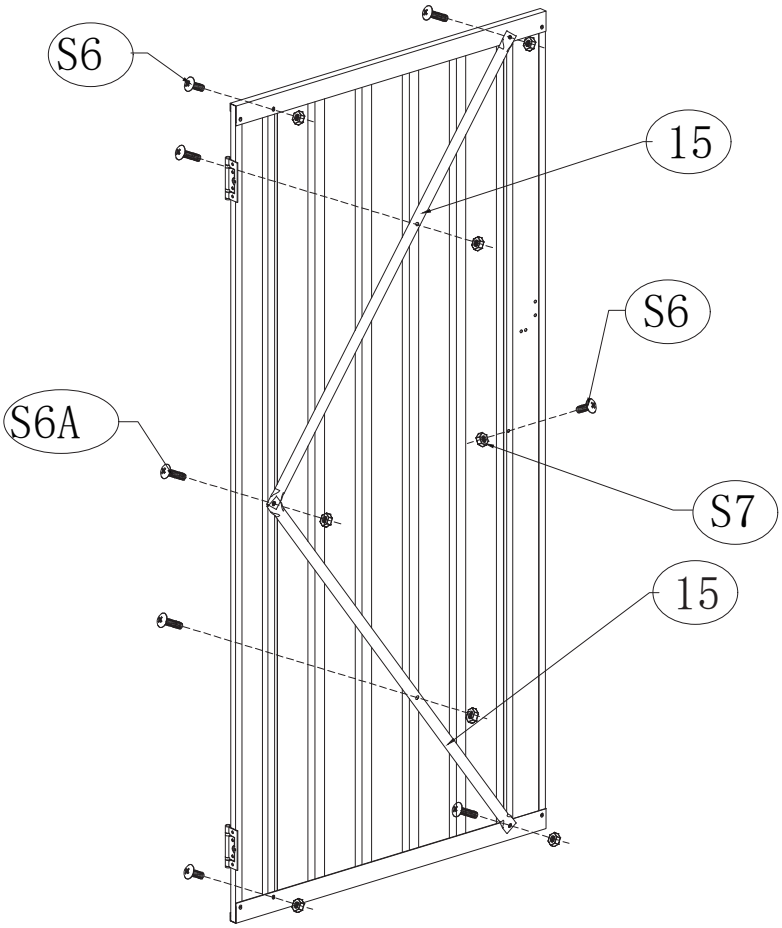



NO.	PART.	Qty.
S2		1
S3		1
S4		8
S6		6

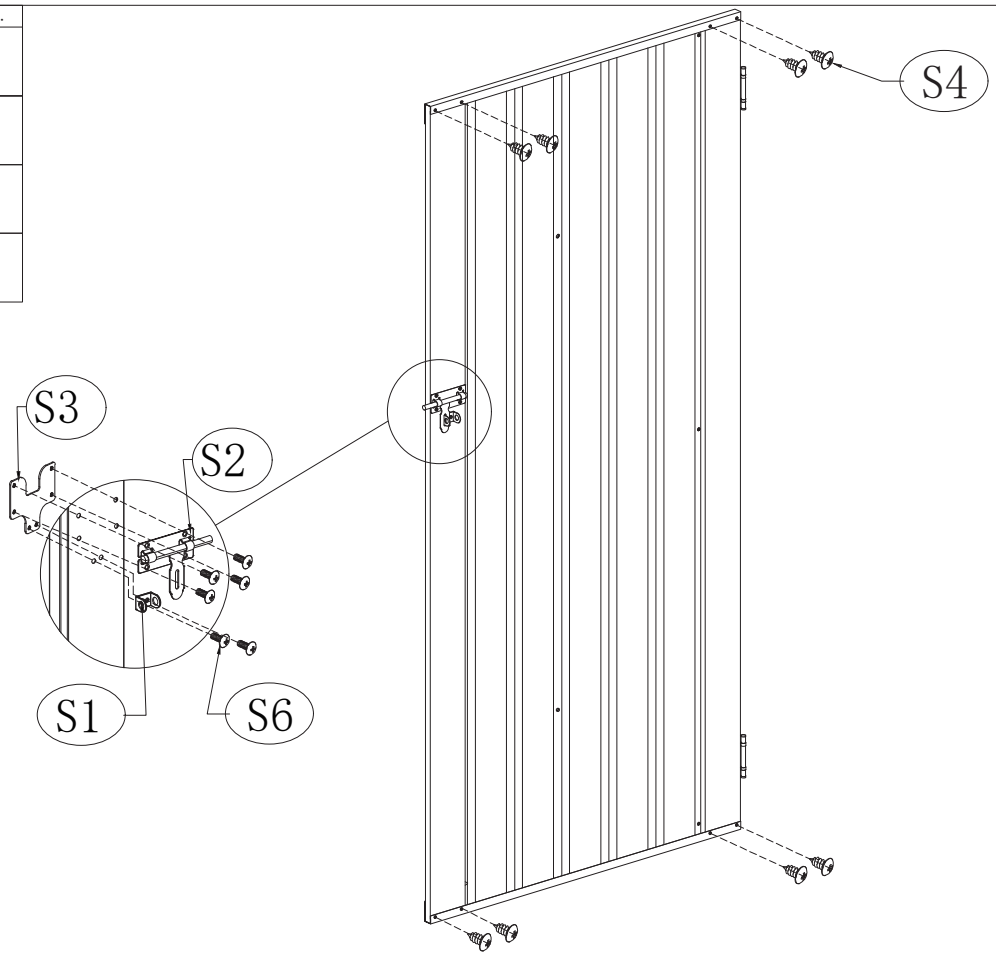

Step 6: Hang the Door


NO.	PART.	Qty.
S6		12
S7		12

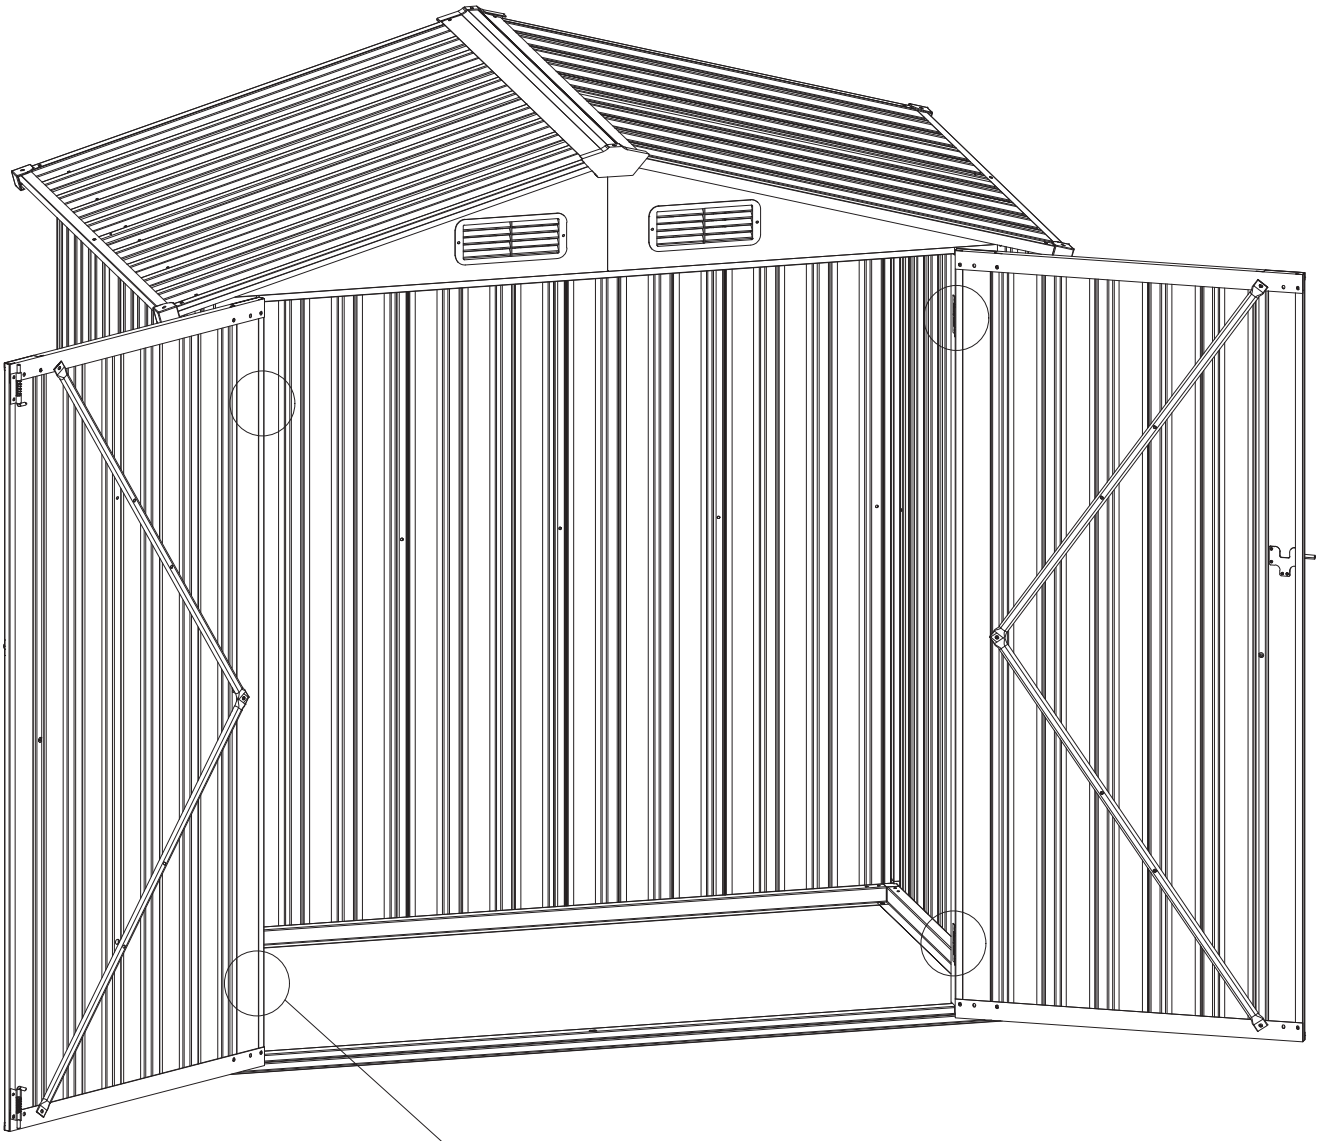


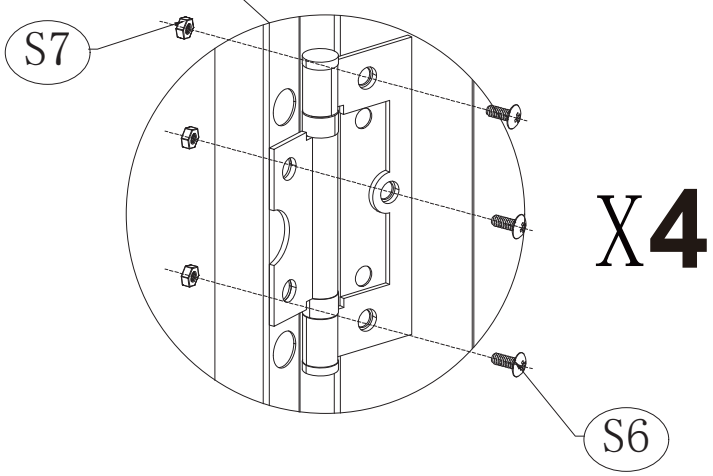

X4

NO.	PART.	Qty.
S9		4

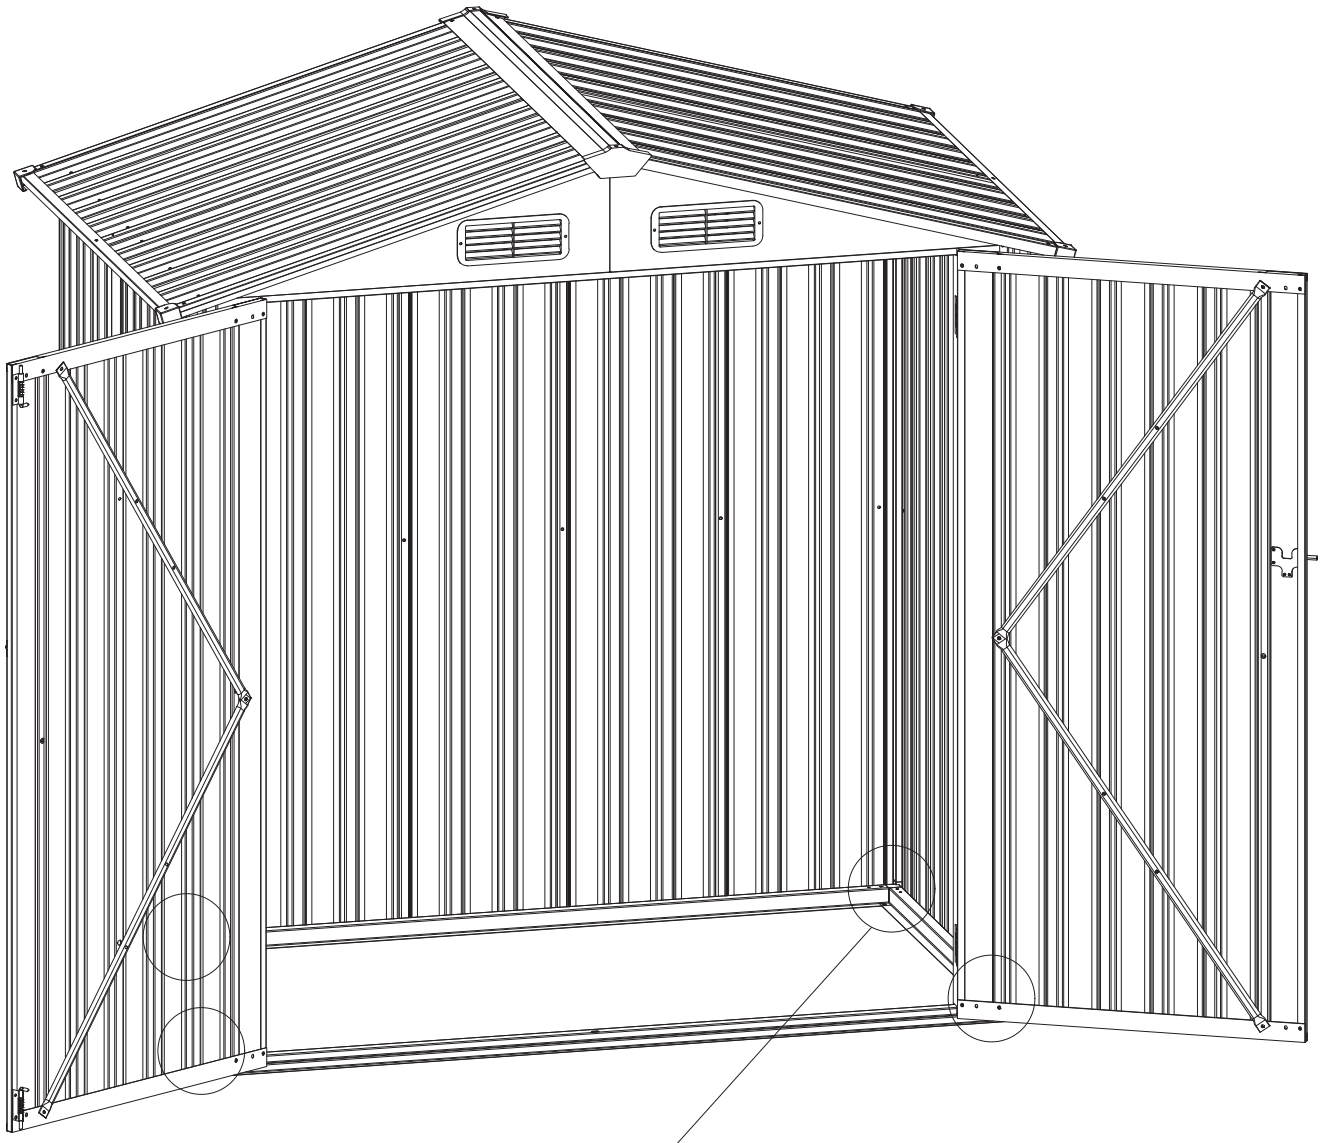

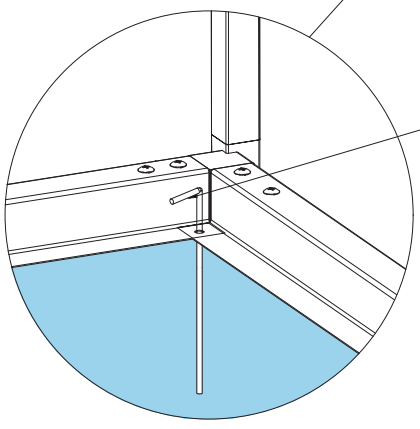

X4