QUEEN & FULL UNIVERSAL SIZE HEADBOARD ONLY

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start to of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning!

- 1. Don't attempt to repair modify parts that are broken or defective . Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

Z HARDWARE PACKAGE

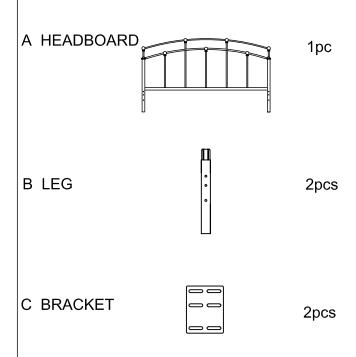

NO	DESCRIPTION	FIGURE	Q`TY
1	BOLT 1/4"x2"	(1) NAMES AND ADDRESS OF THE PARTY OF THE PA	4pcs
2	BOLT 1/4"x7/8 _"	0)	4pcs
3	SMALL WASHER	0	12pcs
4	LARGE WASHER	(8pcs
5	BOLT		8pcs
6	CAP		2pcs
7	ALLEN WRENCH		1pc
8	OPEN WRENCH	4	1pc

STEP1: Insert the leg (B) into the headboard(A), using bolt(1,5),washer(4,3). through the pre-drilled holes to attach the baseframe to headboard.

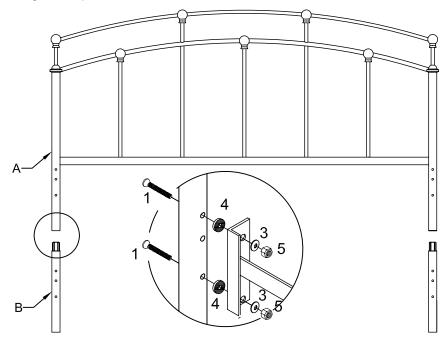

STEP2-1: And then locate the bracket(C) and leg(B),using bolt(1,5),washer(4,3) to attach it to the headboard,and it can be adjusted to be 54" bed.

STEP2-2: Using bolt(2,5),washer(3,4) through the pre-drilled holes to attach the baseframe to headboard.

