





A		1PC	
B		1PC	
C		1PC	
D		1PC	
E		1PC	
F		1PC	
G	 M6*18	4PCS	
H	 M6*30	4PCS	
I	 Ø6*Ø12*1	4PCS	
J	 Ø15*Ø8.5*1.5	4PCS	
K		8PCS	
L		1PC	


①

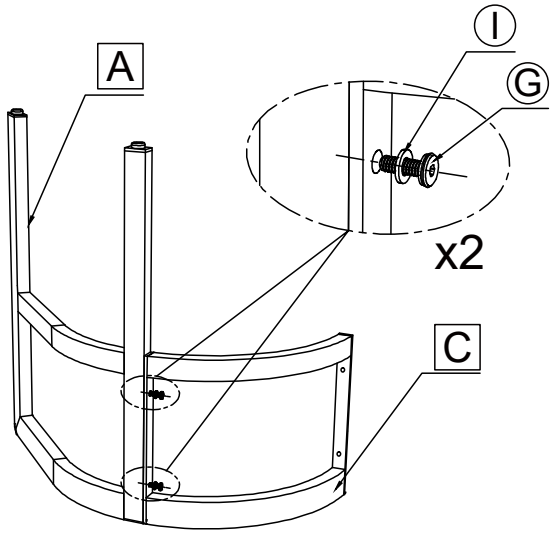

②

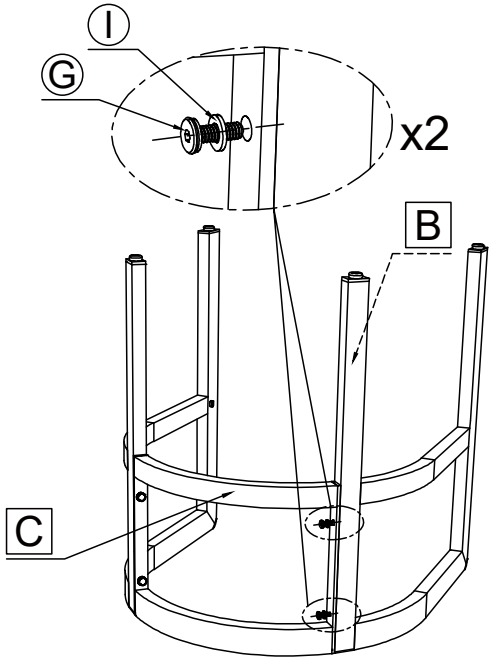


③

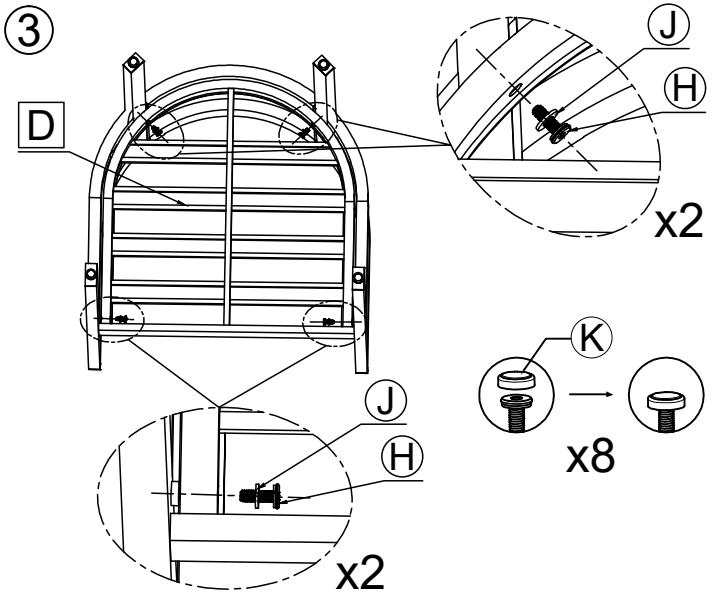

Tighten all 8 screws into place with Allen Key (L) and
Install the Caps (K) for protecting and concealing the screws.

④

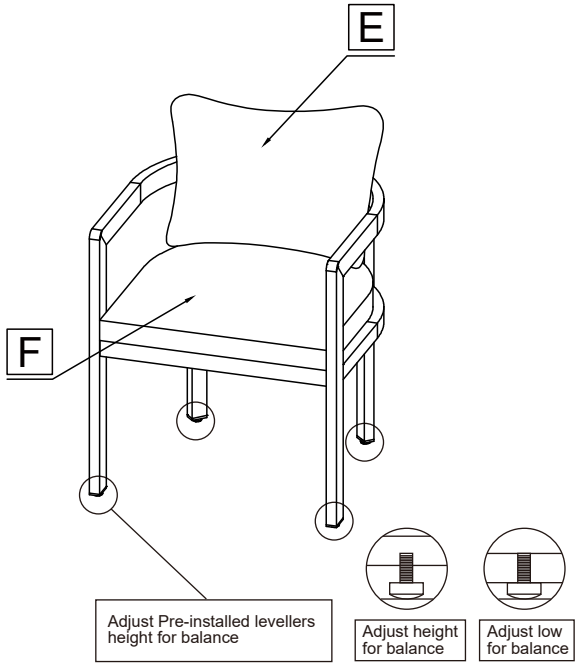

⚠ Tip: We recommend flattening the boxes to use as a protective work surface, or setting up your new furniture on a soft floor like a carpet.