
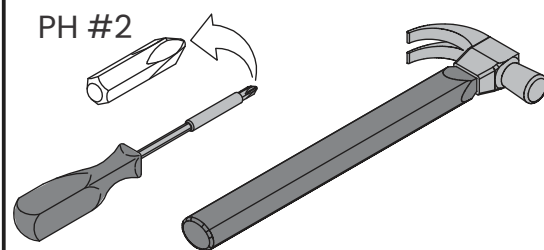
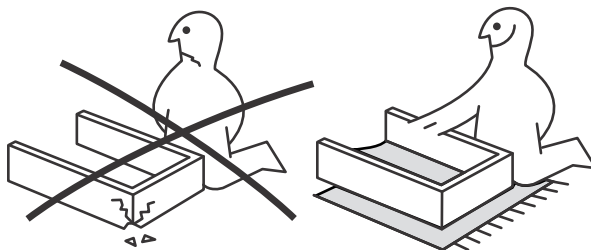
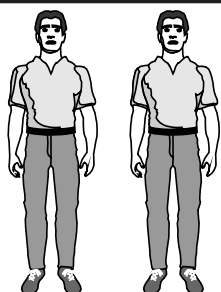


ASSEMBLY GUIDE

6-DRAWER DOUBLE DRESSER

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

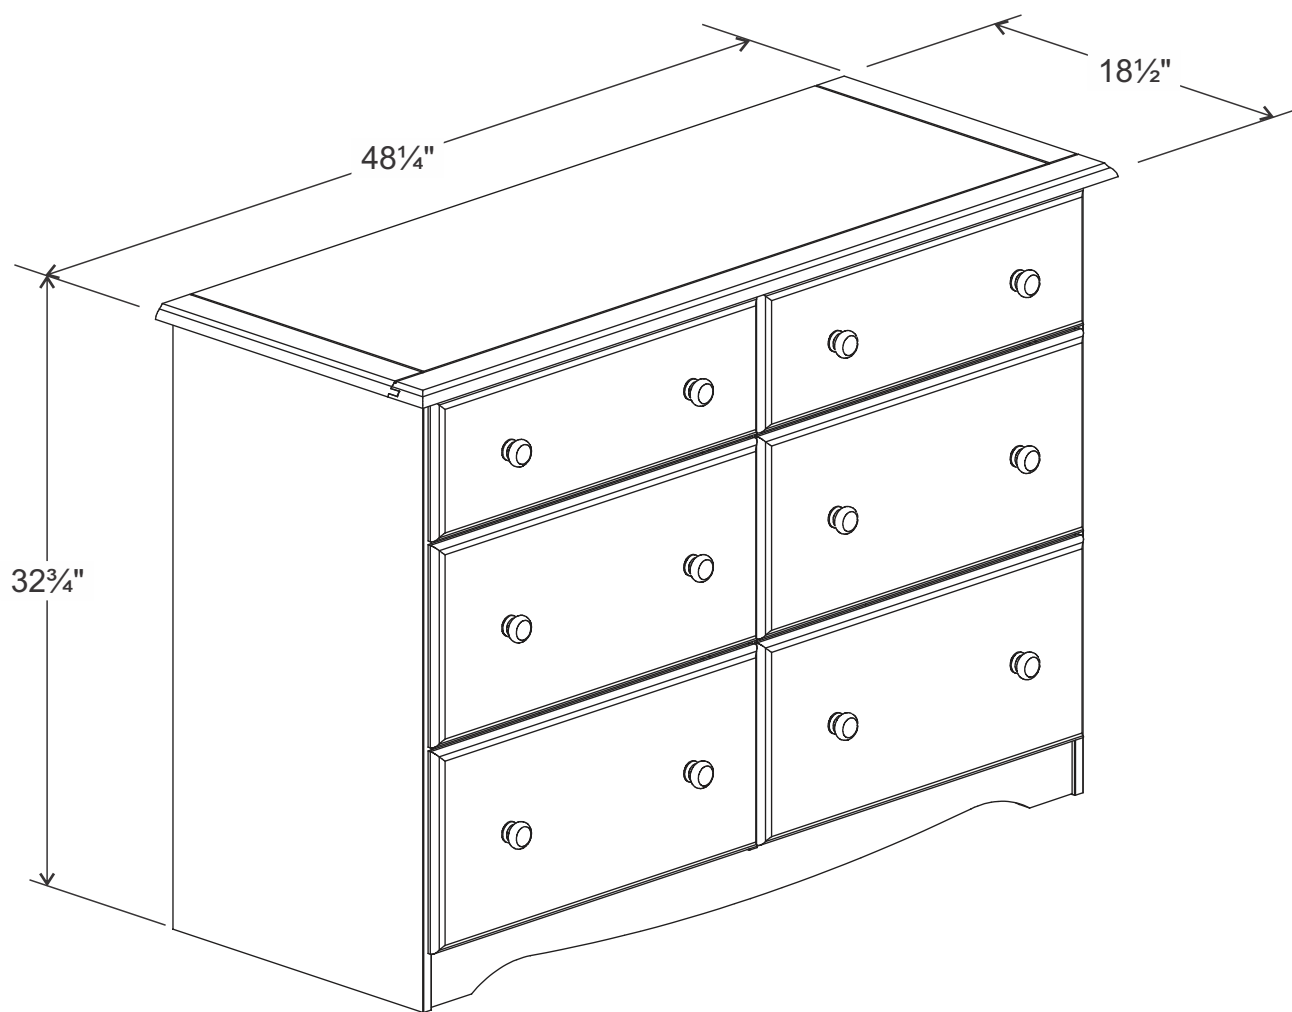

REV - 06/2025


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us for assistance.





Assembly Tips

- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

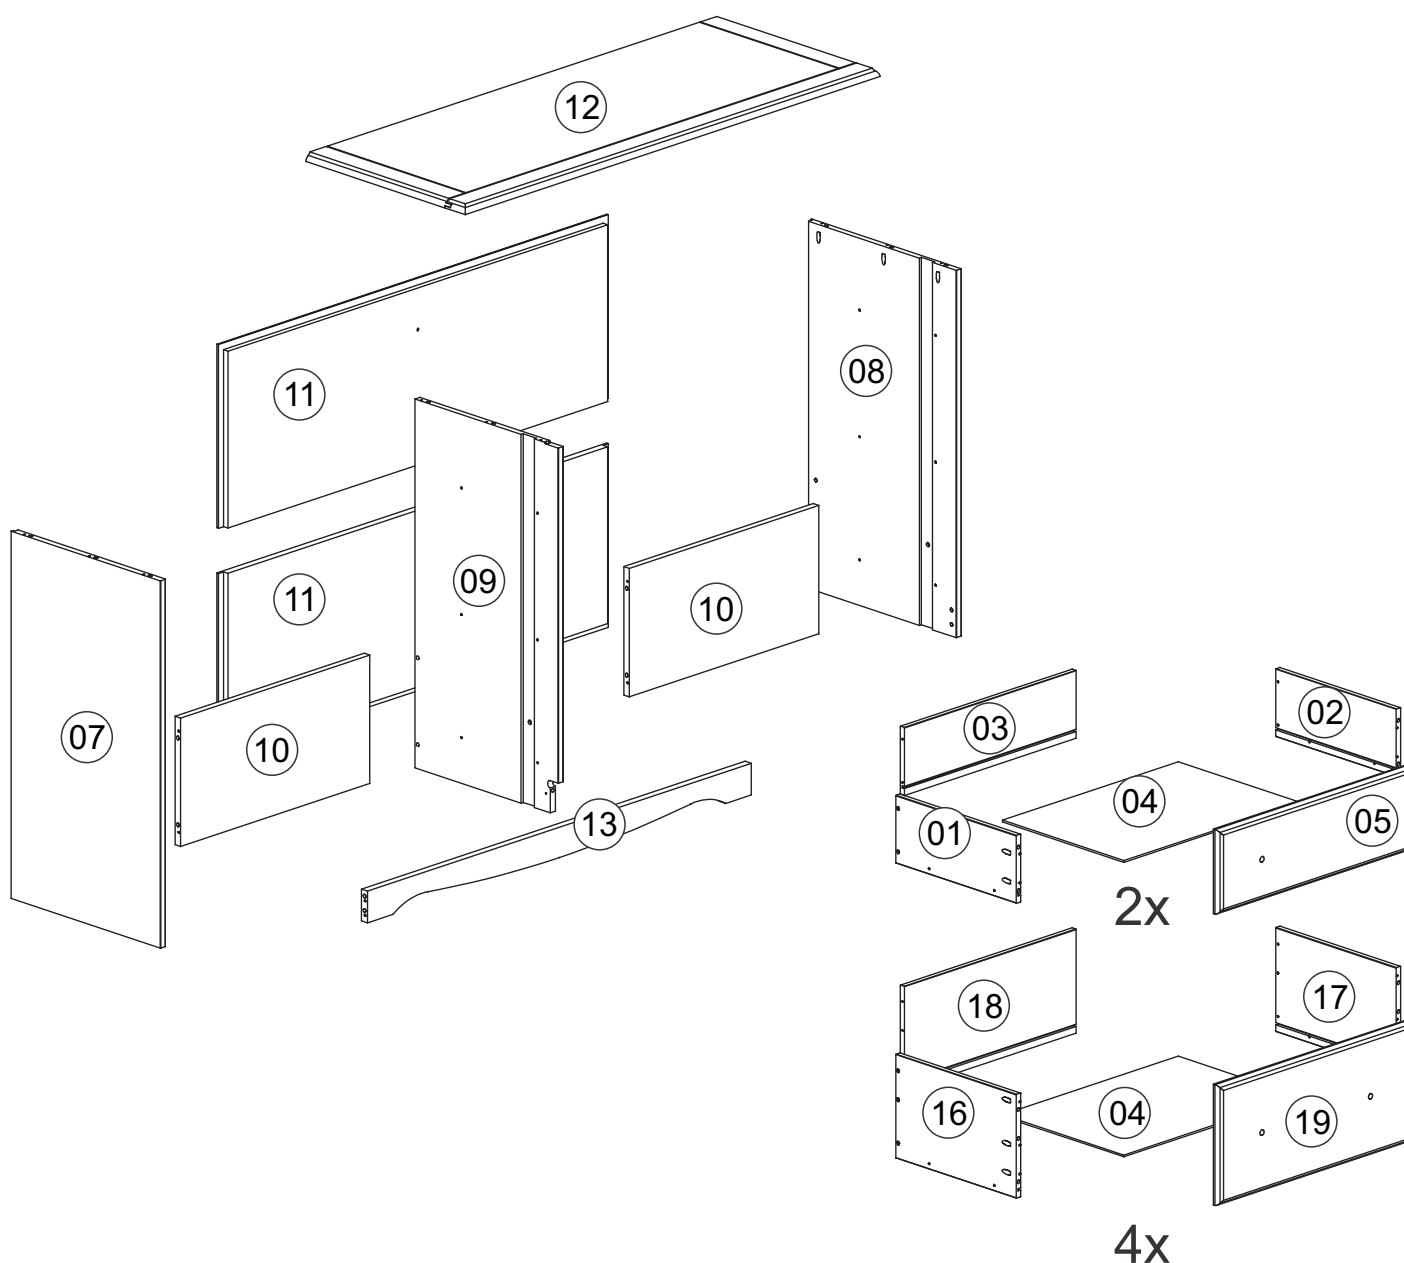

Screws Are Illustrated at Actual Size for Accurate Reference

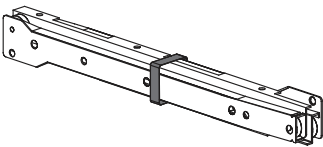A1	 4,0x30	89+5
A4	 3,5x14	20+1
A9	 3,5x16	20+1
A41	 4,0x30	12+1
B31	 6,0x10	48+3
C2	 8,0x25	54+3
D16	 17x17x13	01
E13	 330mm - 13"	06
E14		06
E27	 205mm - 8"	06
G1	 10x10	21
H1		12
I7	 628mm - 24 3/4"	02

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



**WARNING:
CHOKING HAZARD**

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.




WARNING:




Important Safety Notice:

This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.

01)



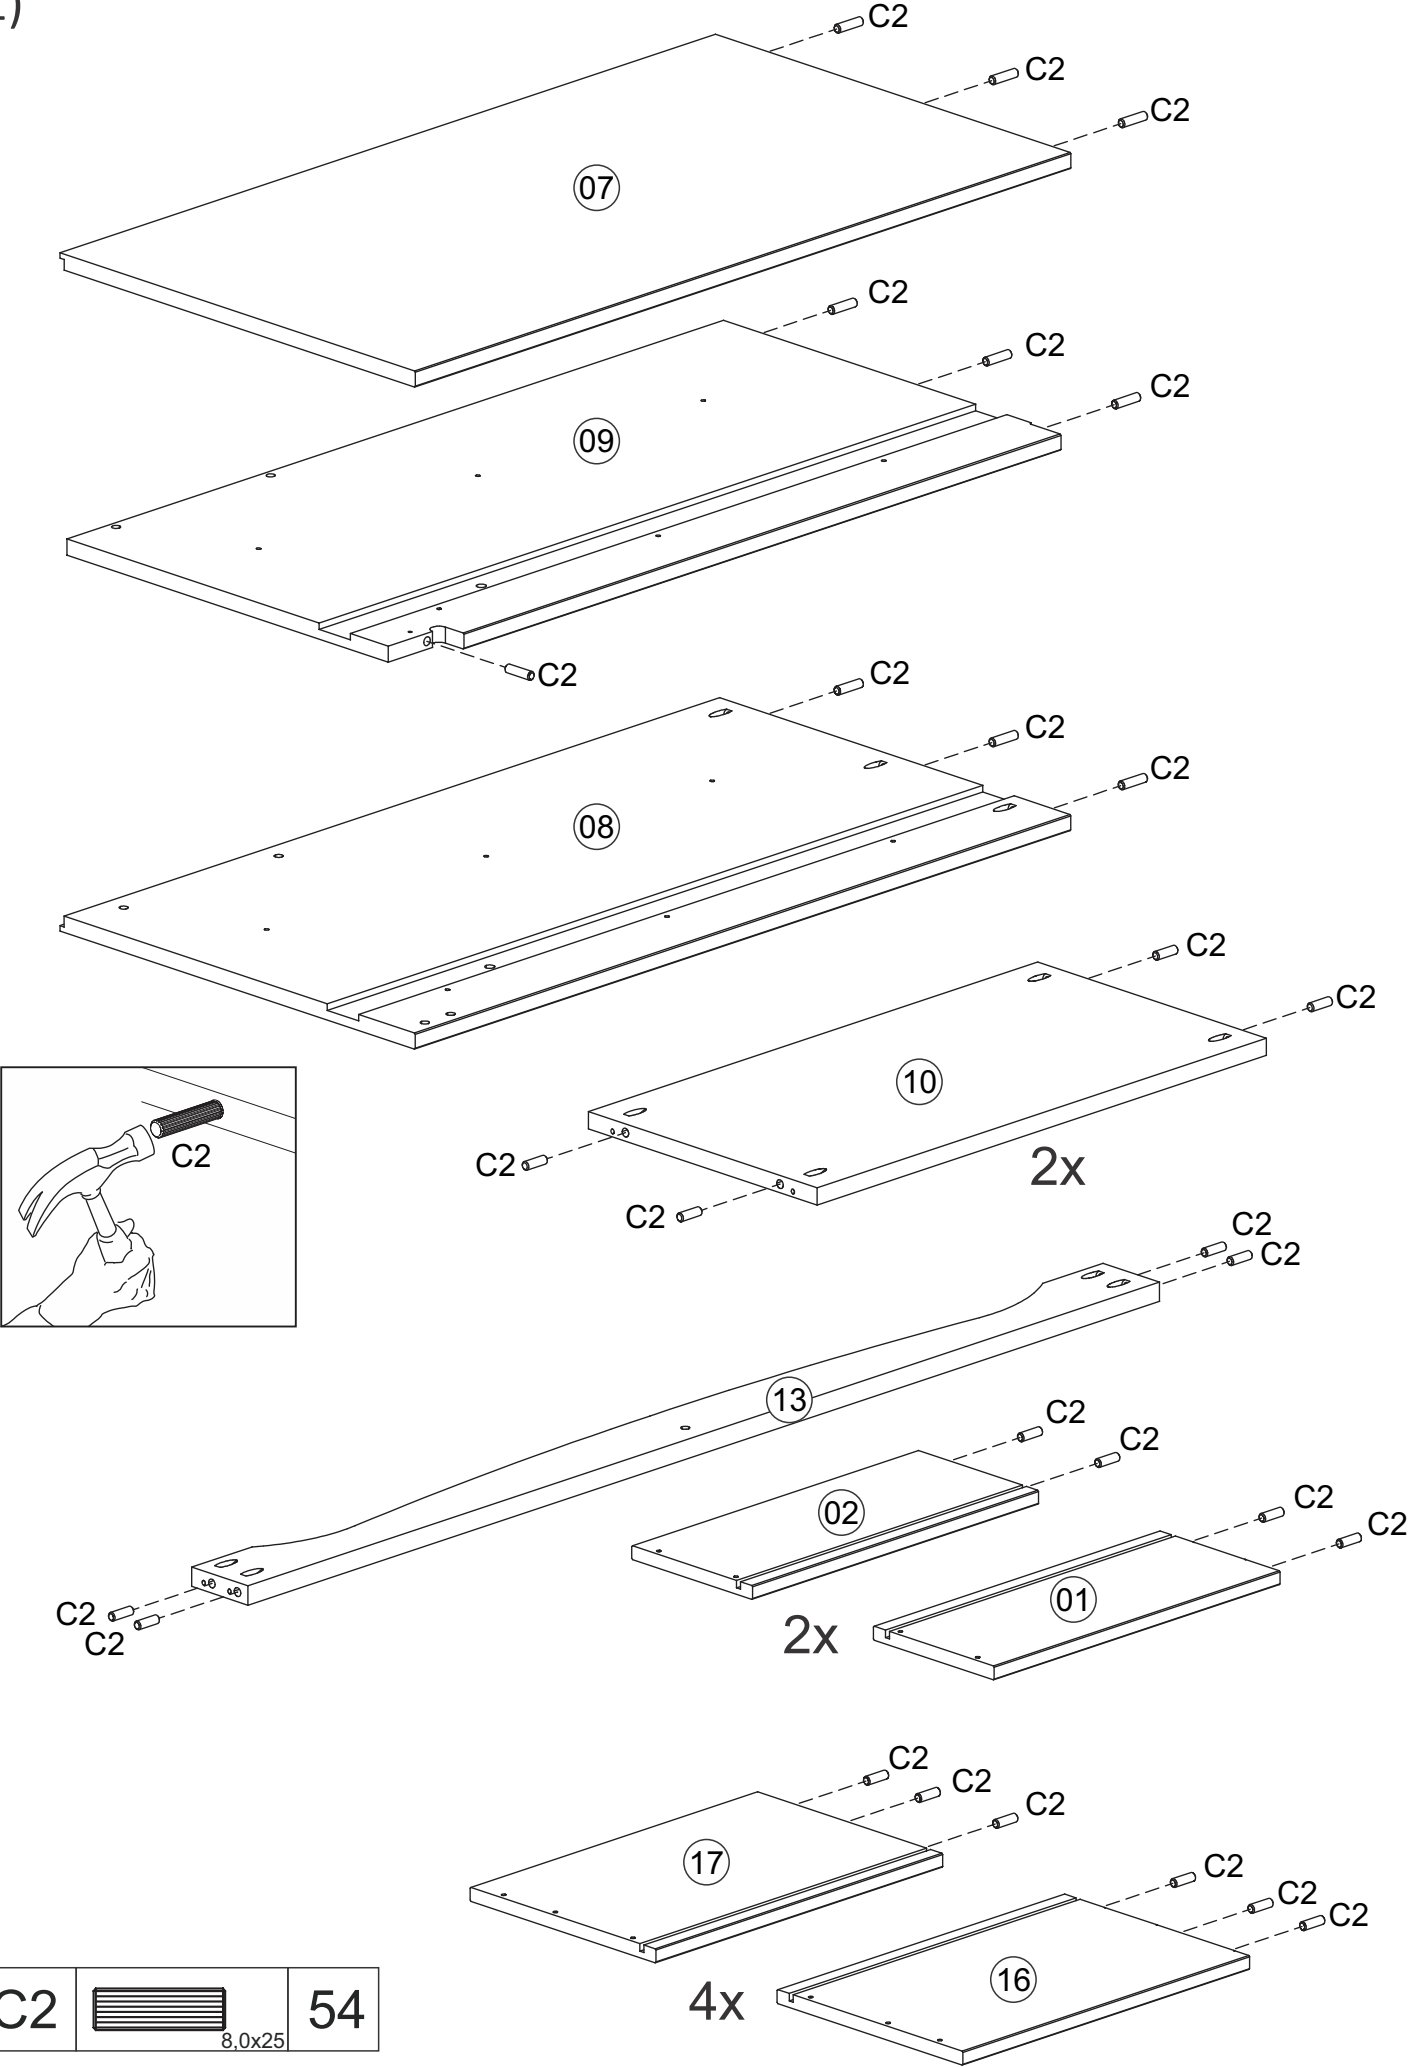


02)

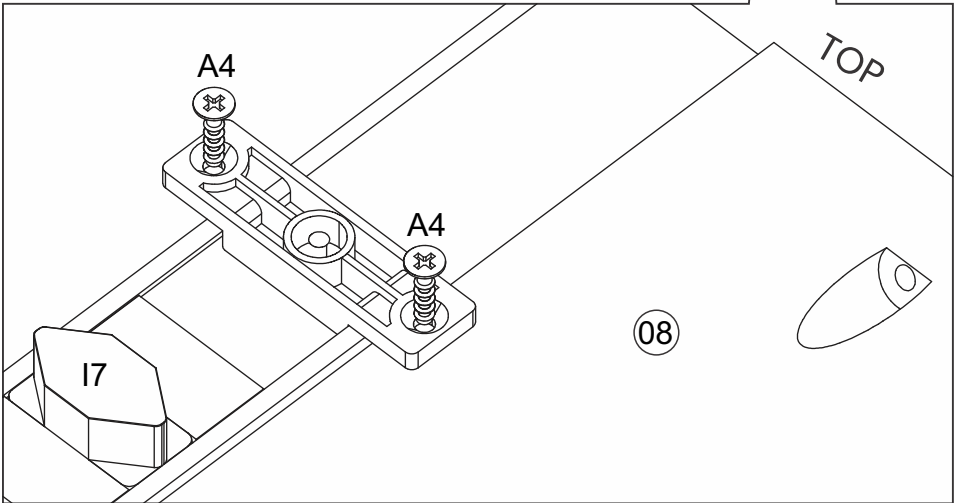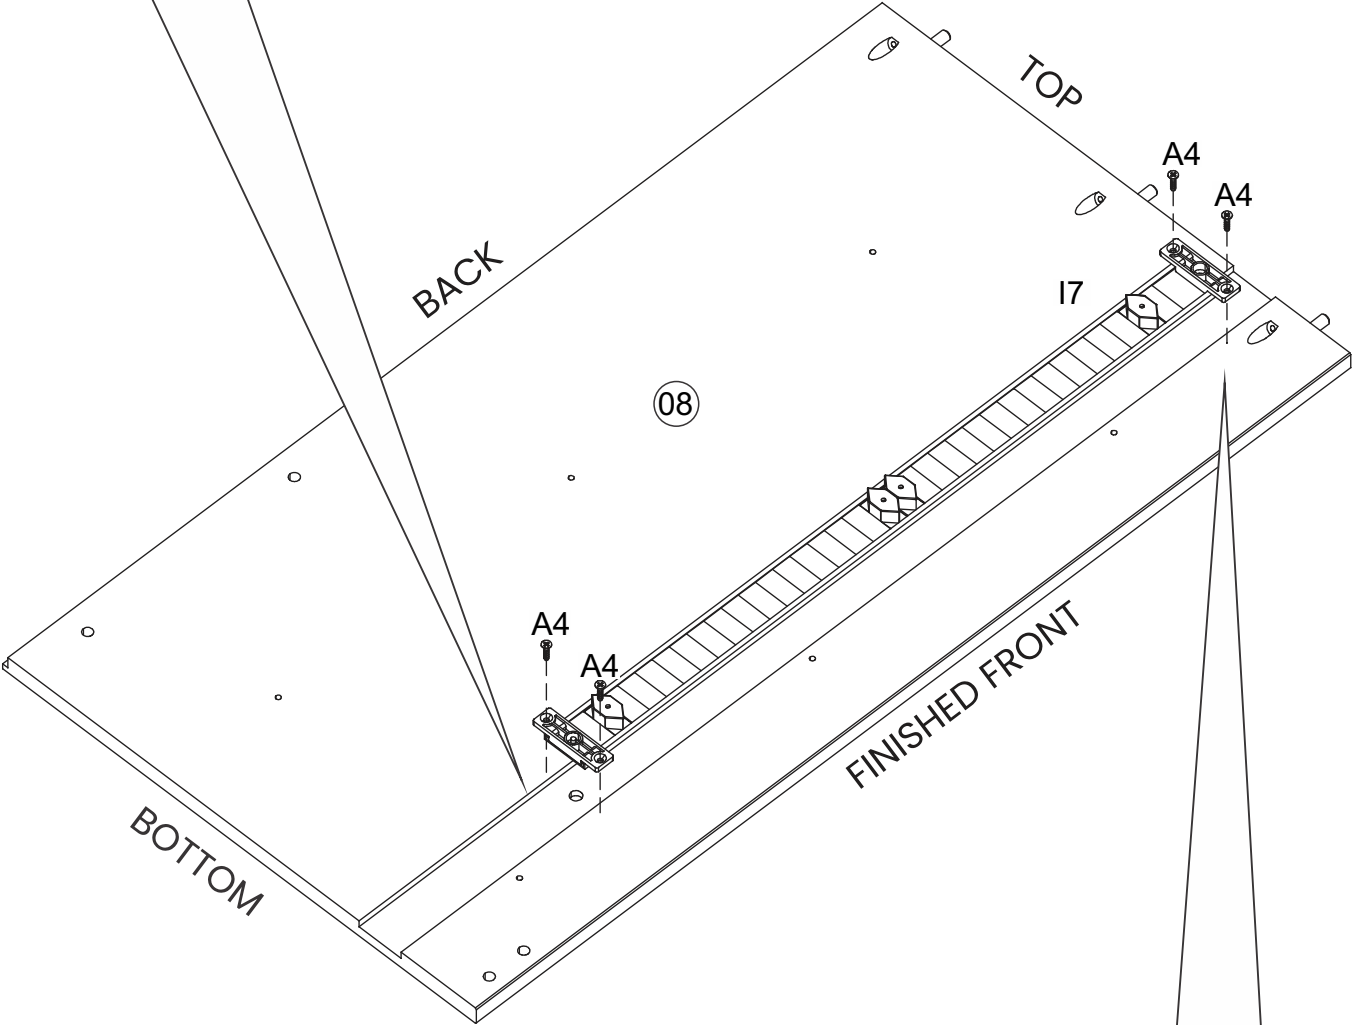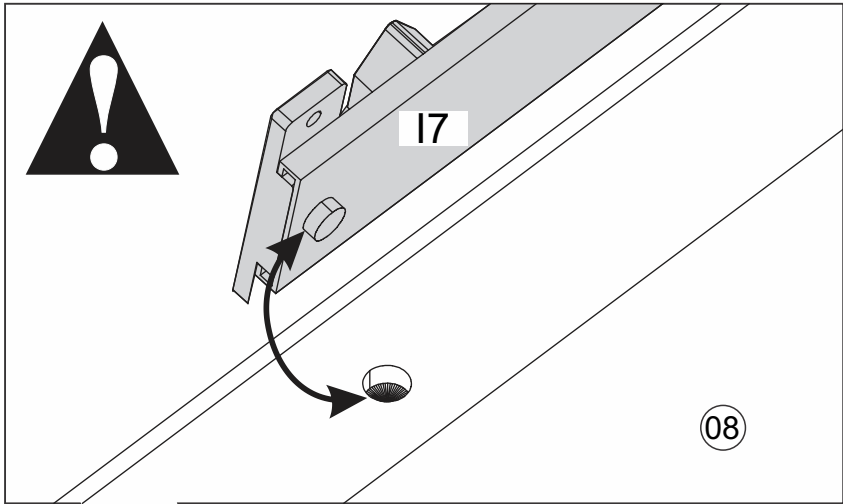




A4	 3,5x14	04
I7		01


03)

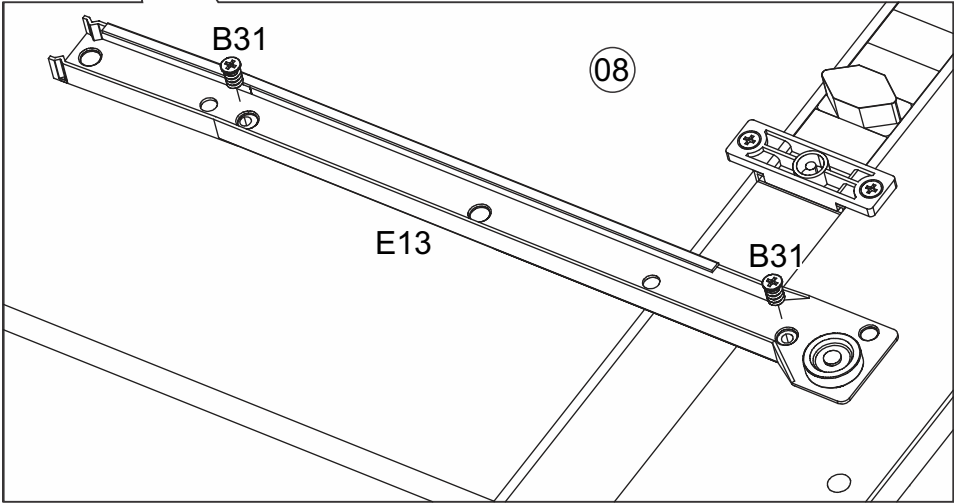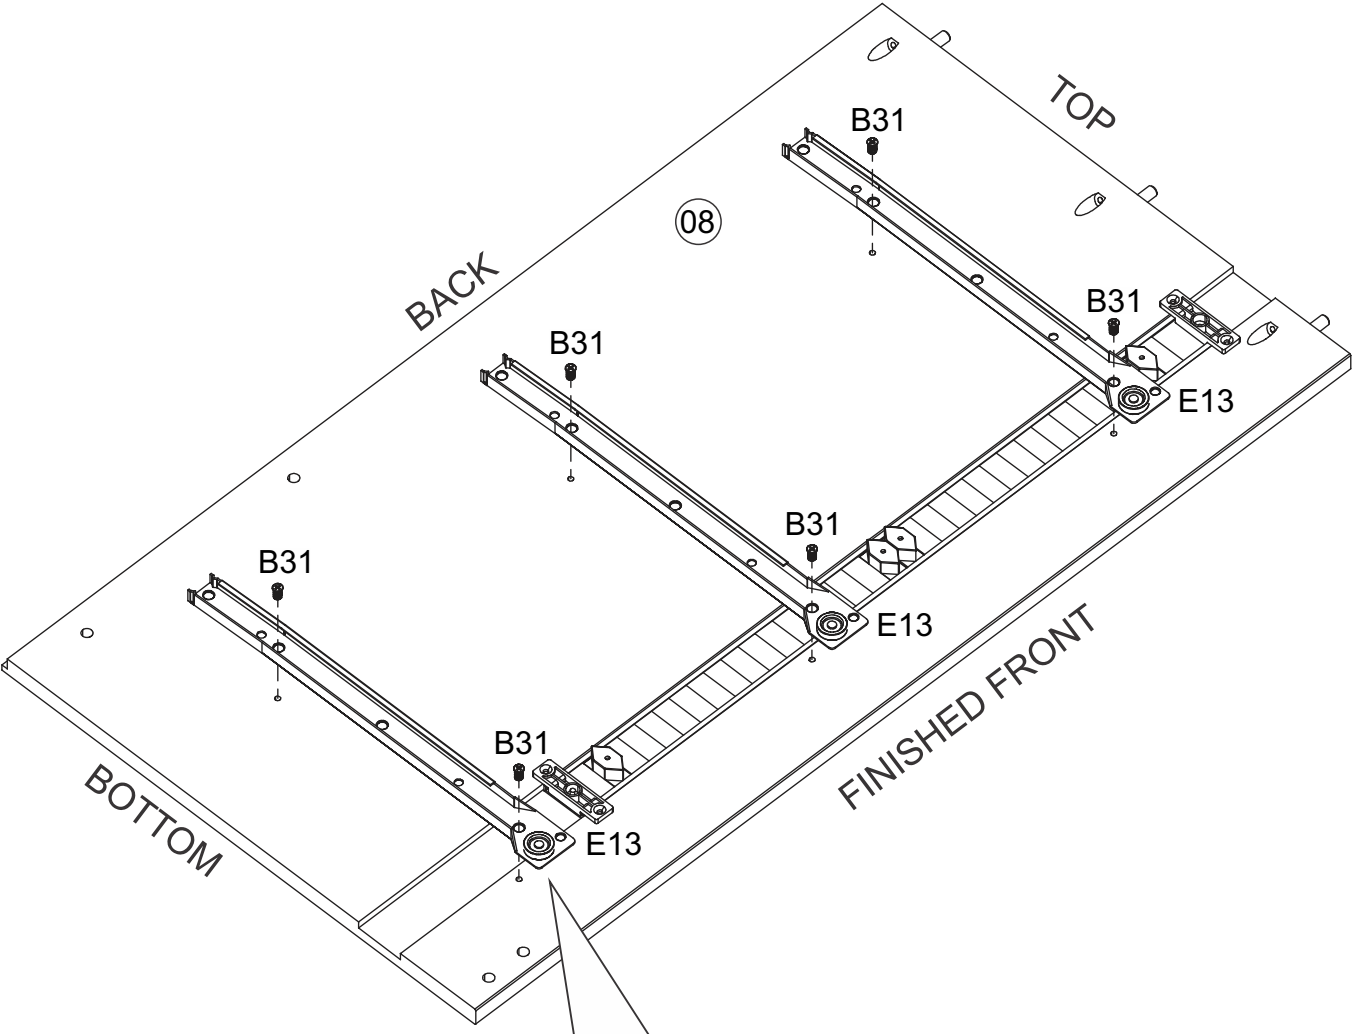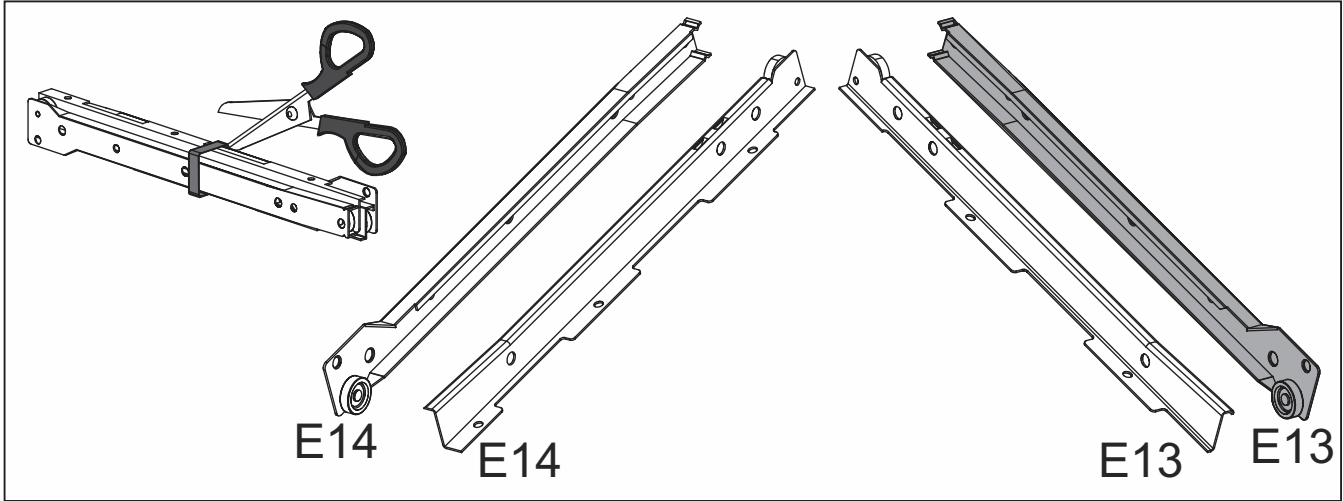


B31	 6,0x10	06
E13	 RIGHT Side	03

04)

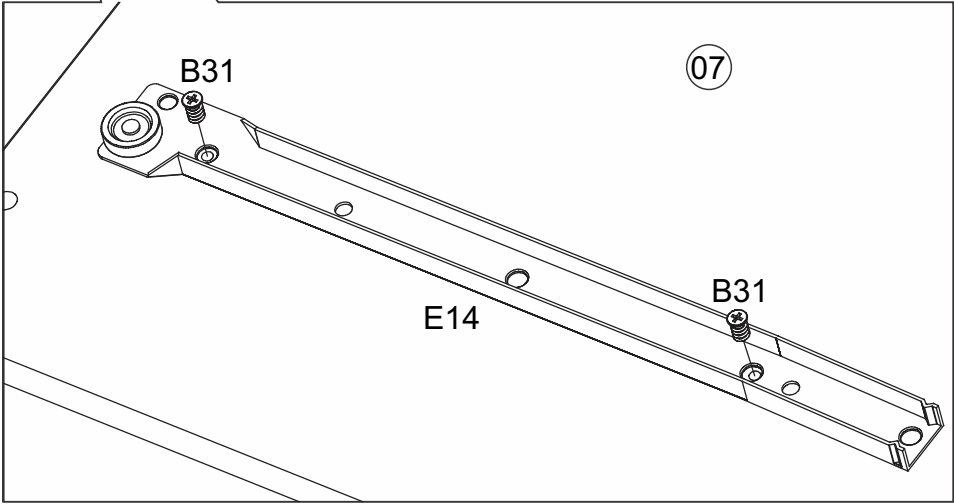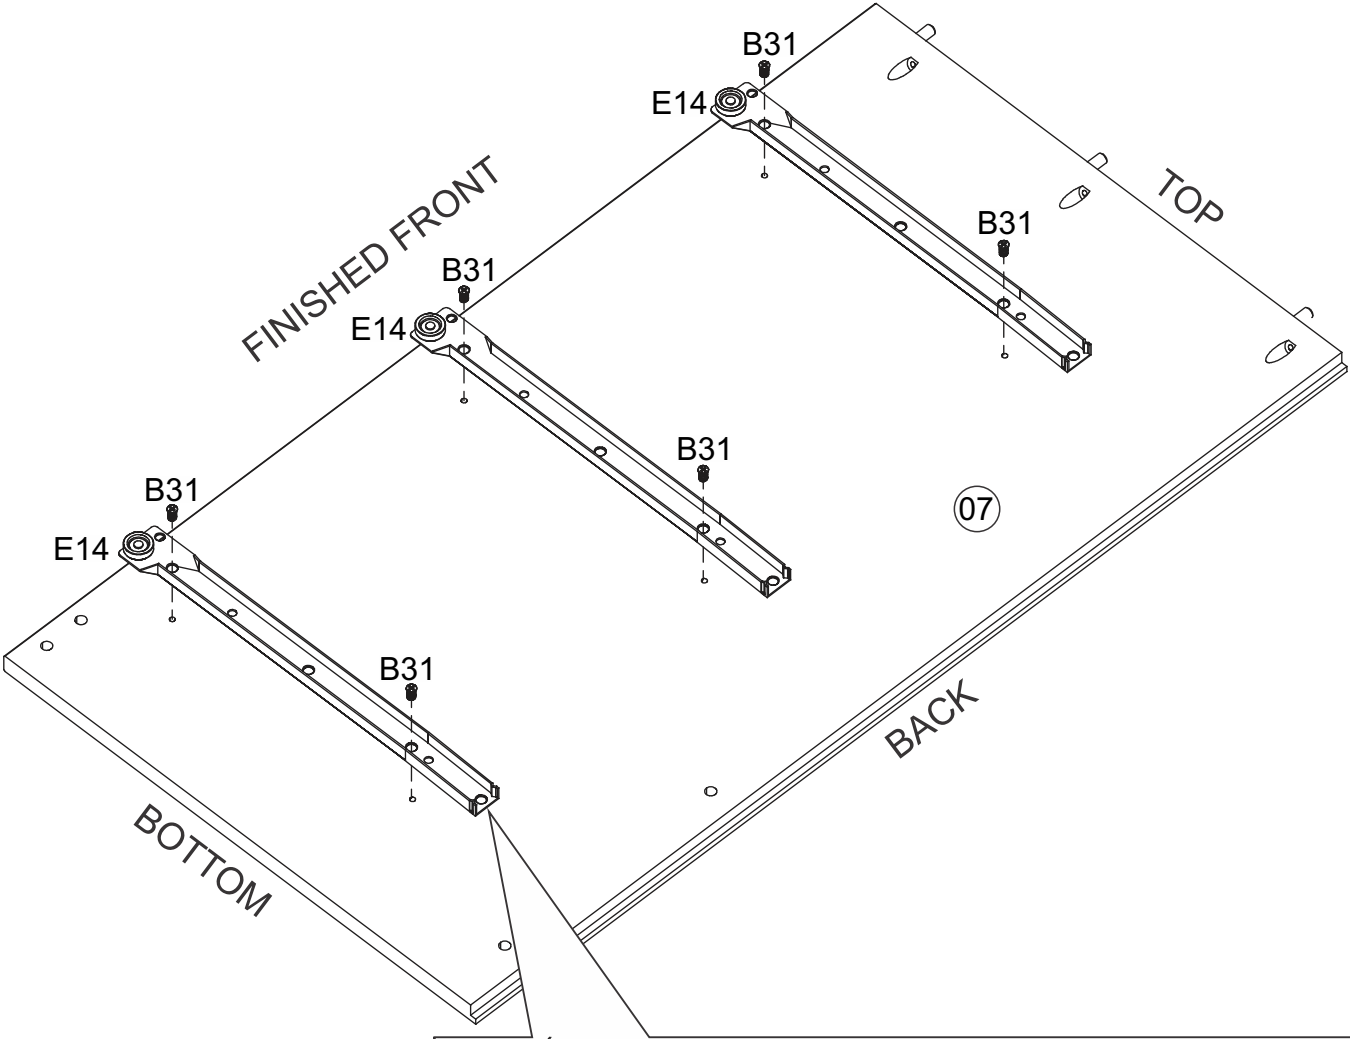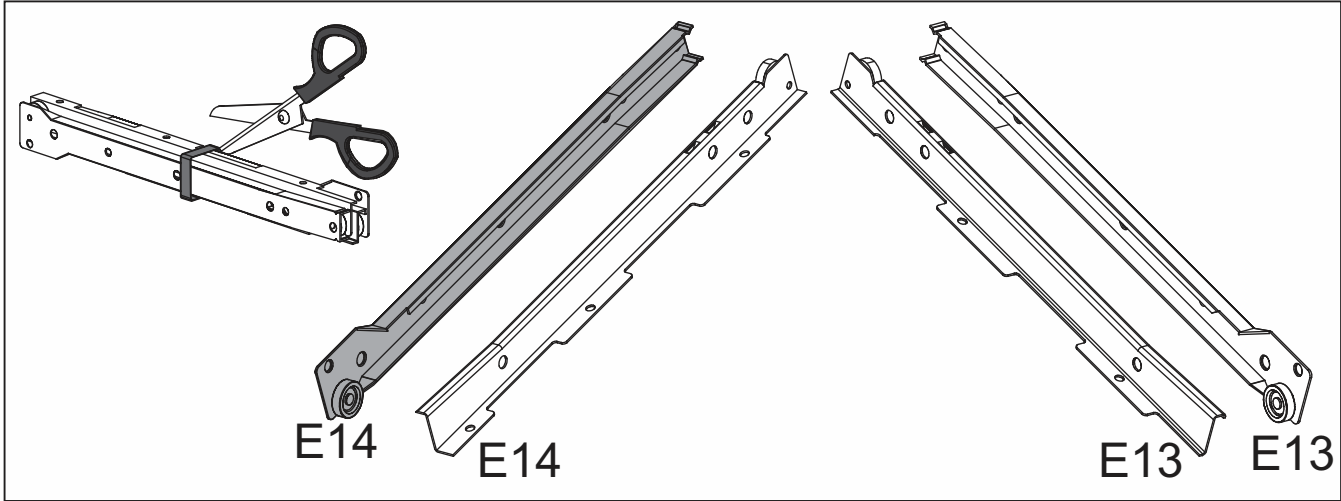




B31	 6,0x10	06
E14	 LEFT Side	03

05)

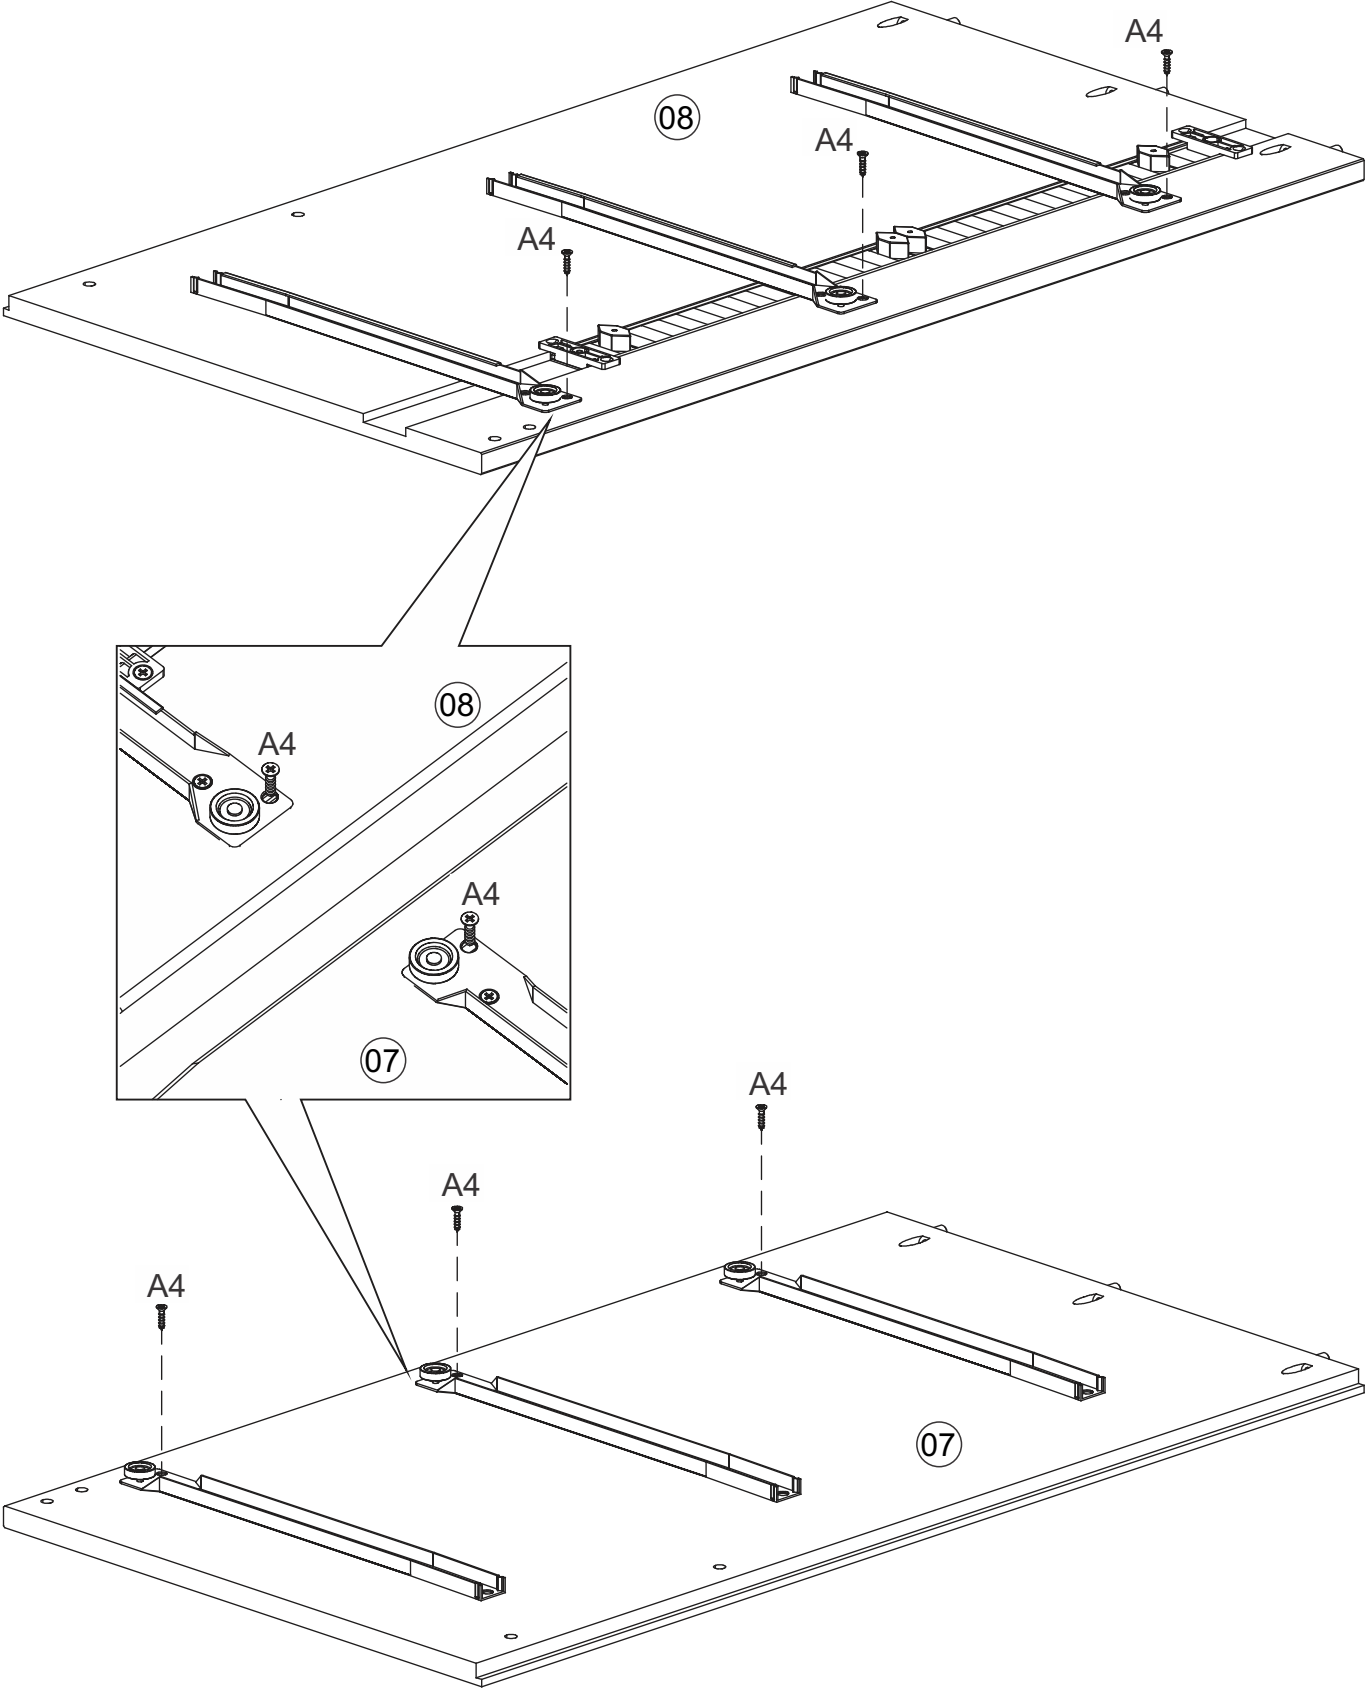




A4	 3,5x14	06
----	---	----


06)

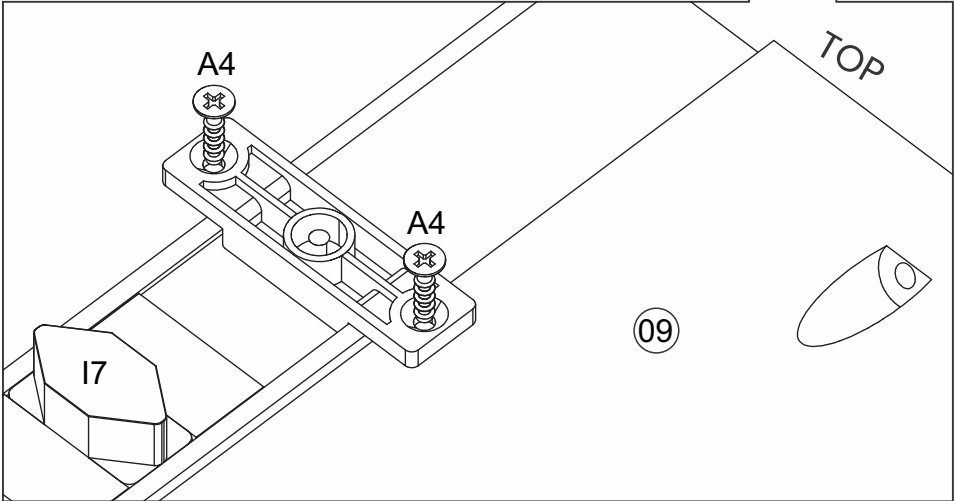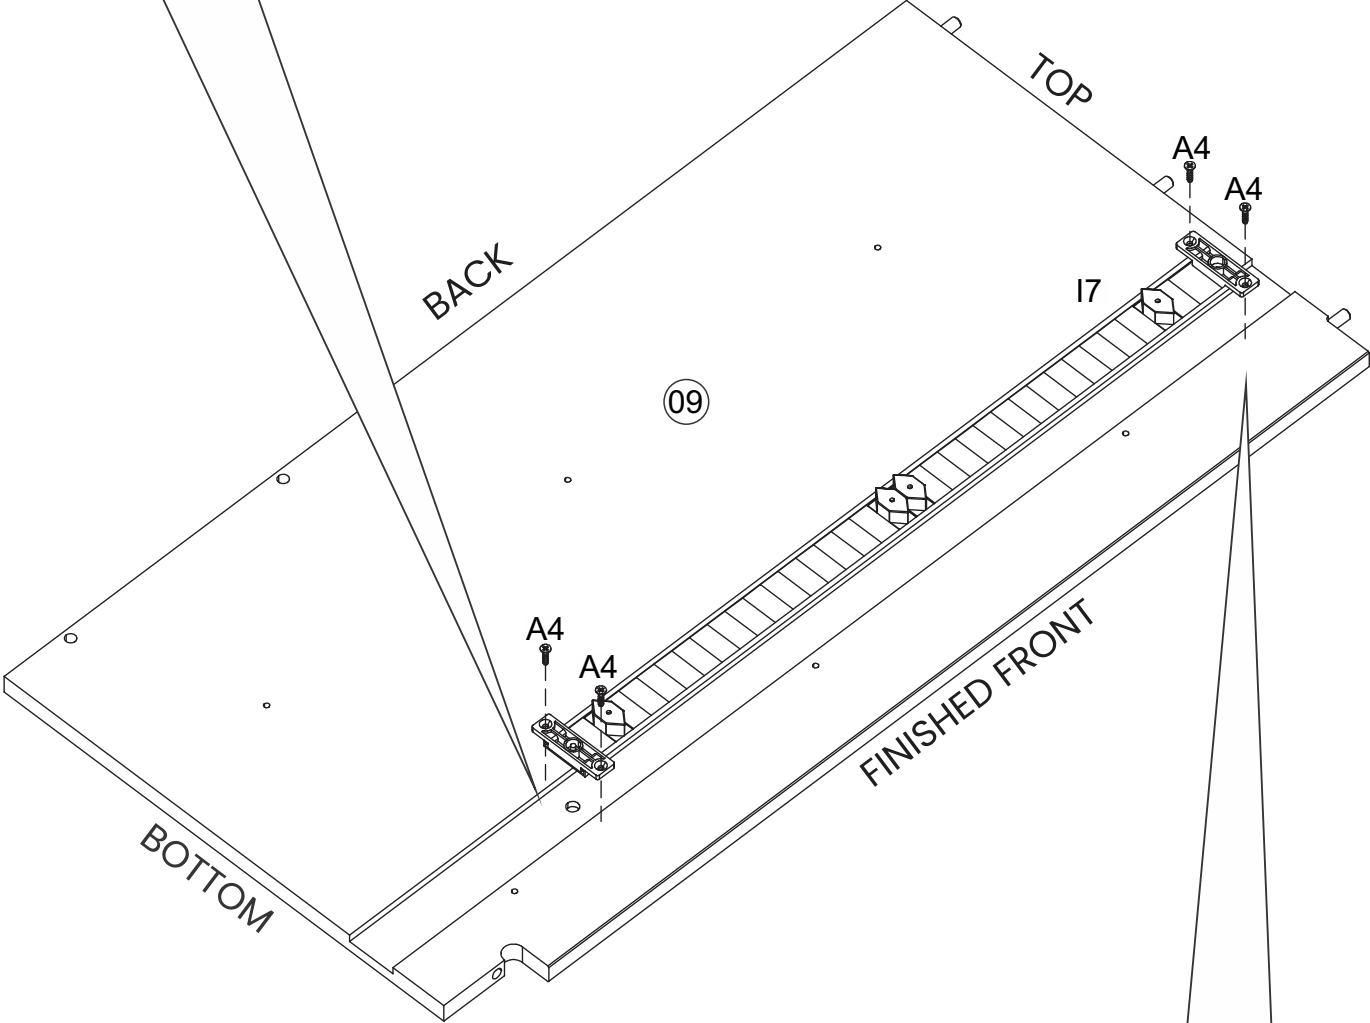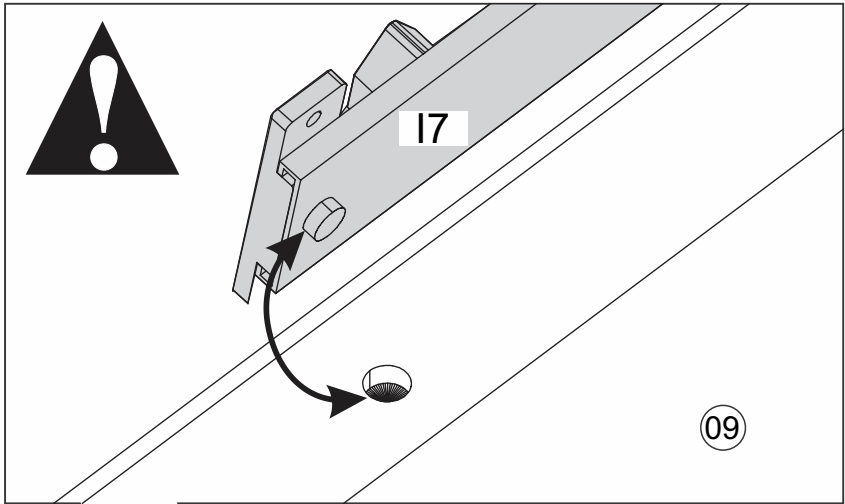




A4	 3,5x14	04
I7		01


07)

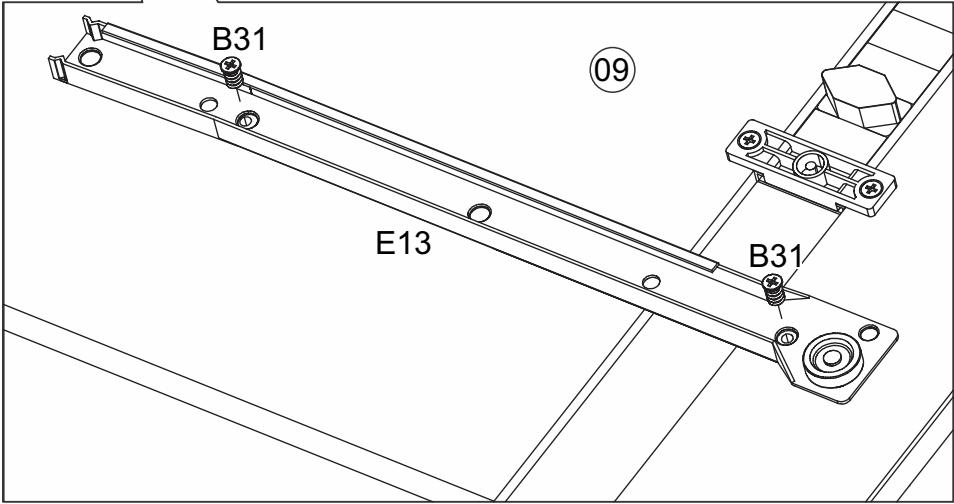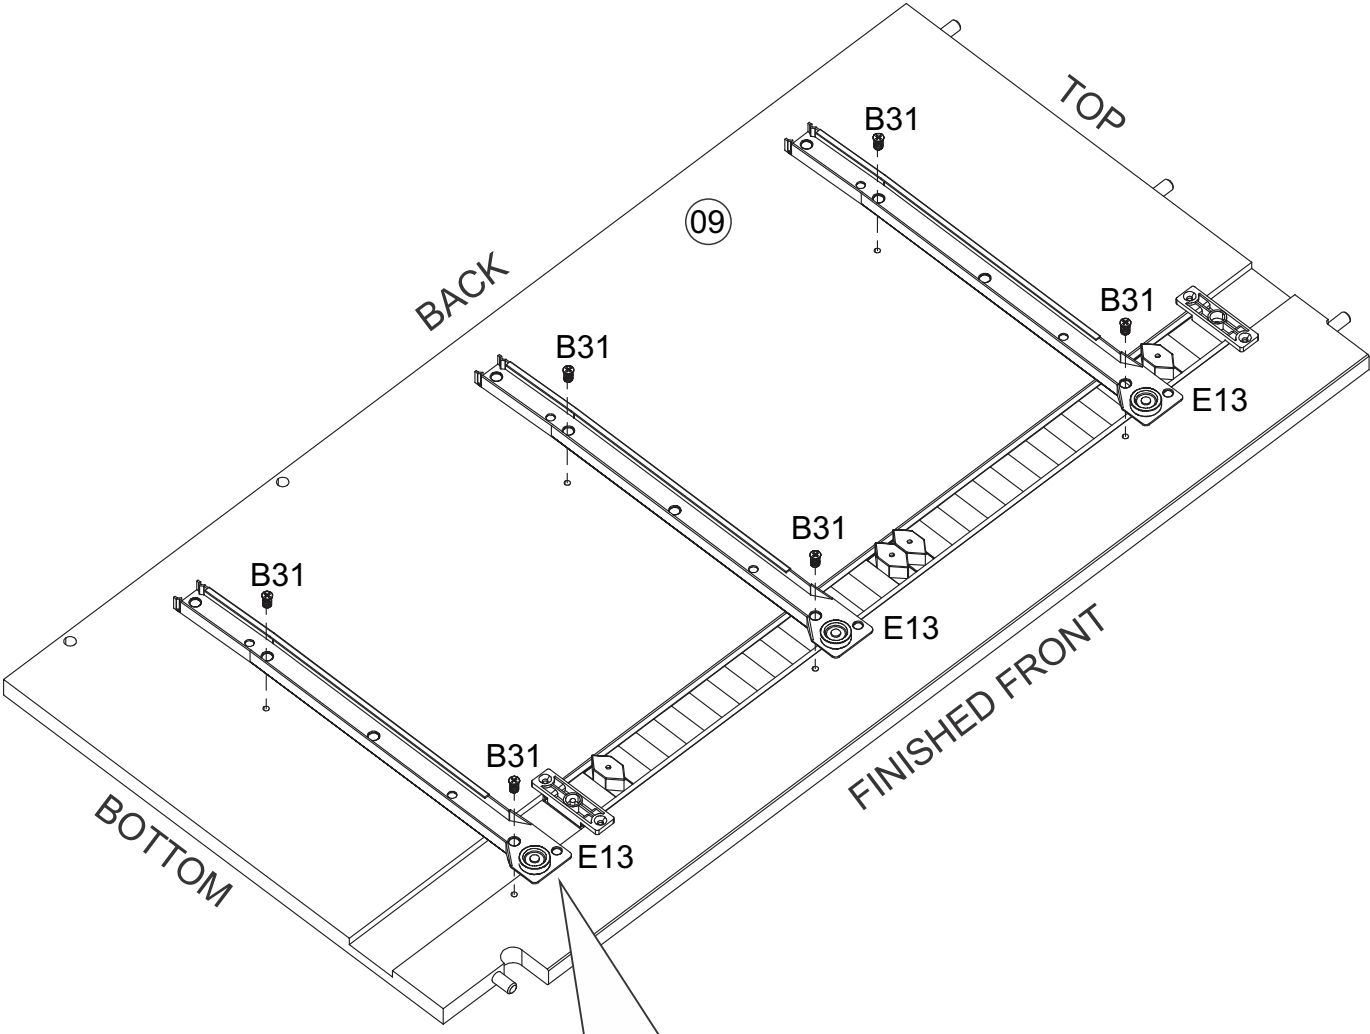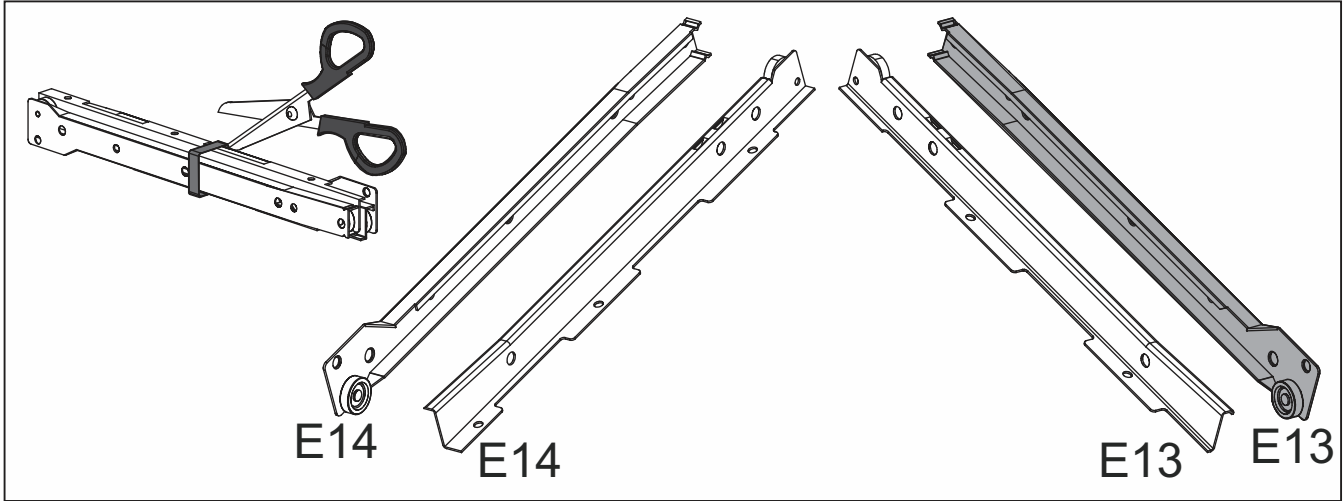


B31	 6,0x10	06
E13	 RIGHT Side	03

08)

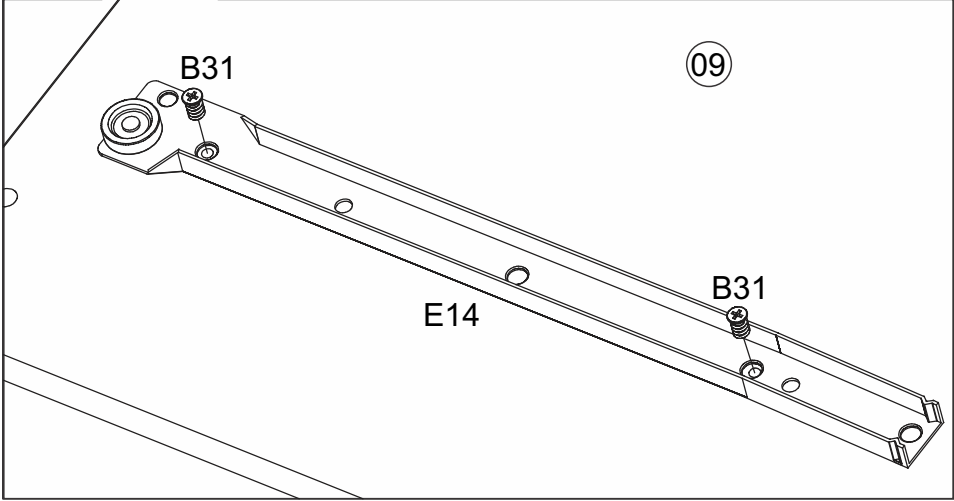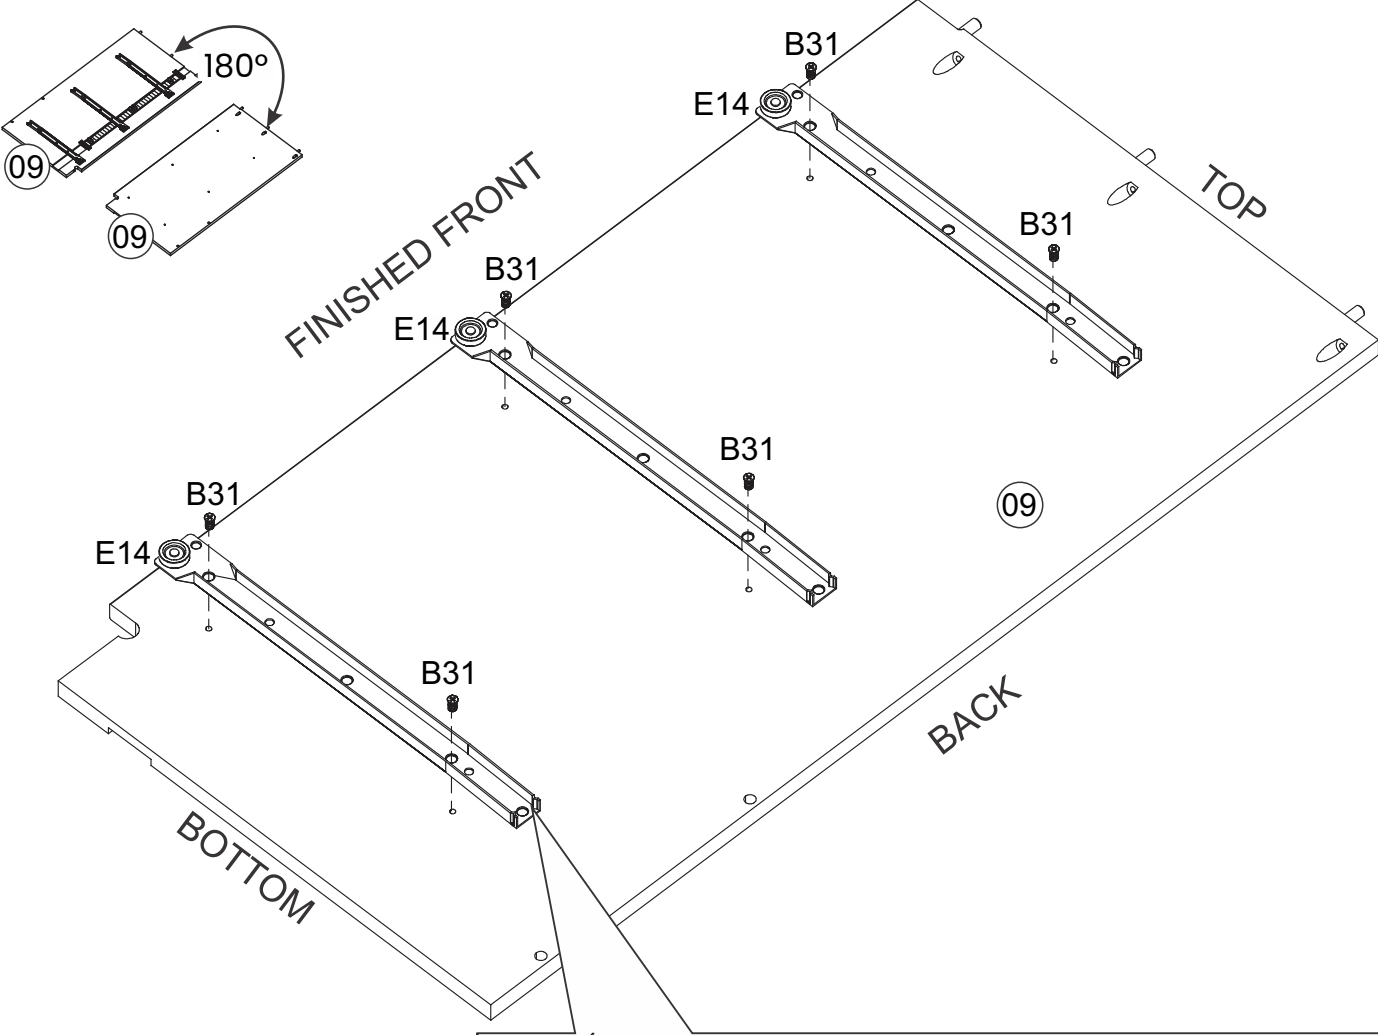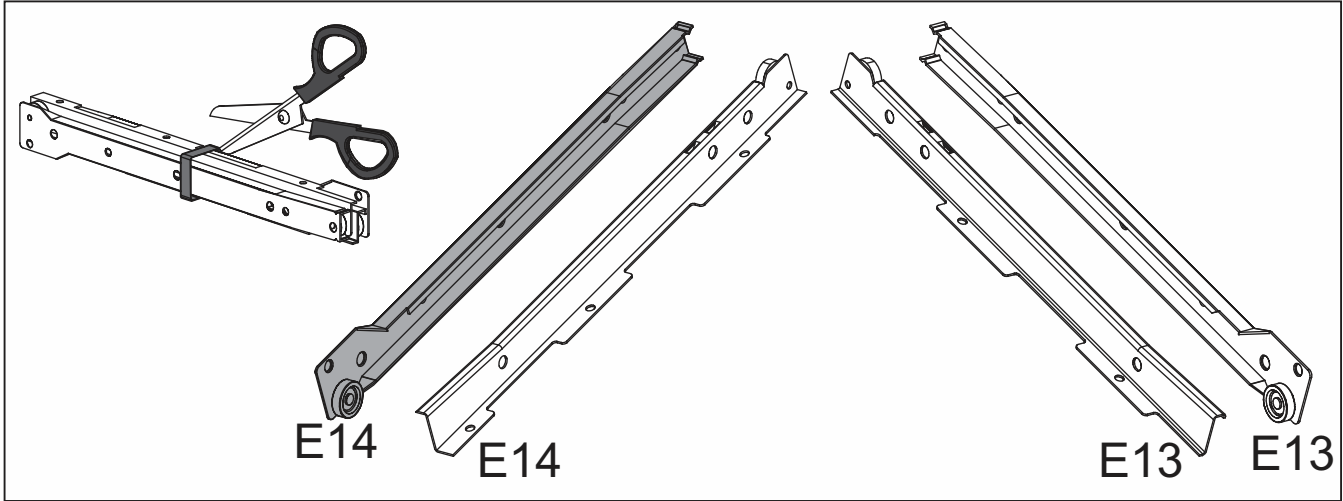



B31	 6,0x10	06
E14	LEFT Side 	03

09)

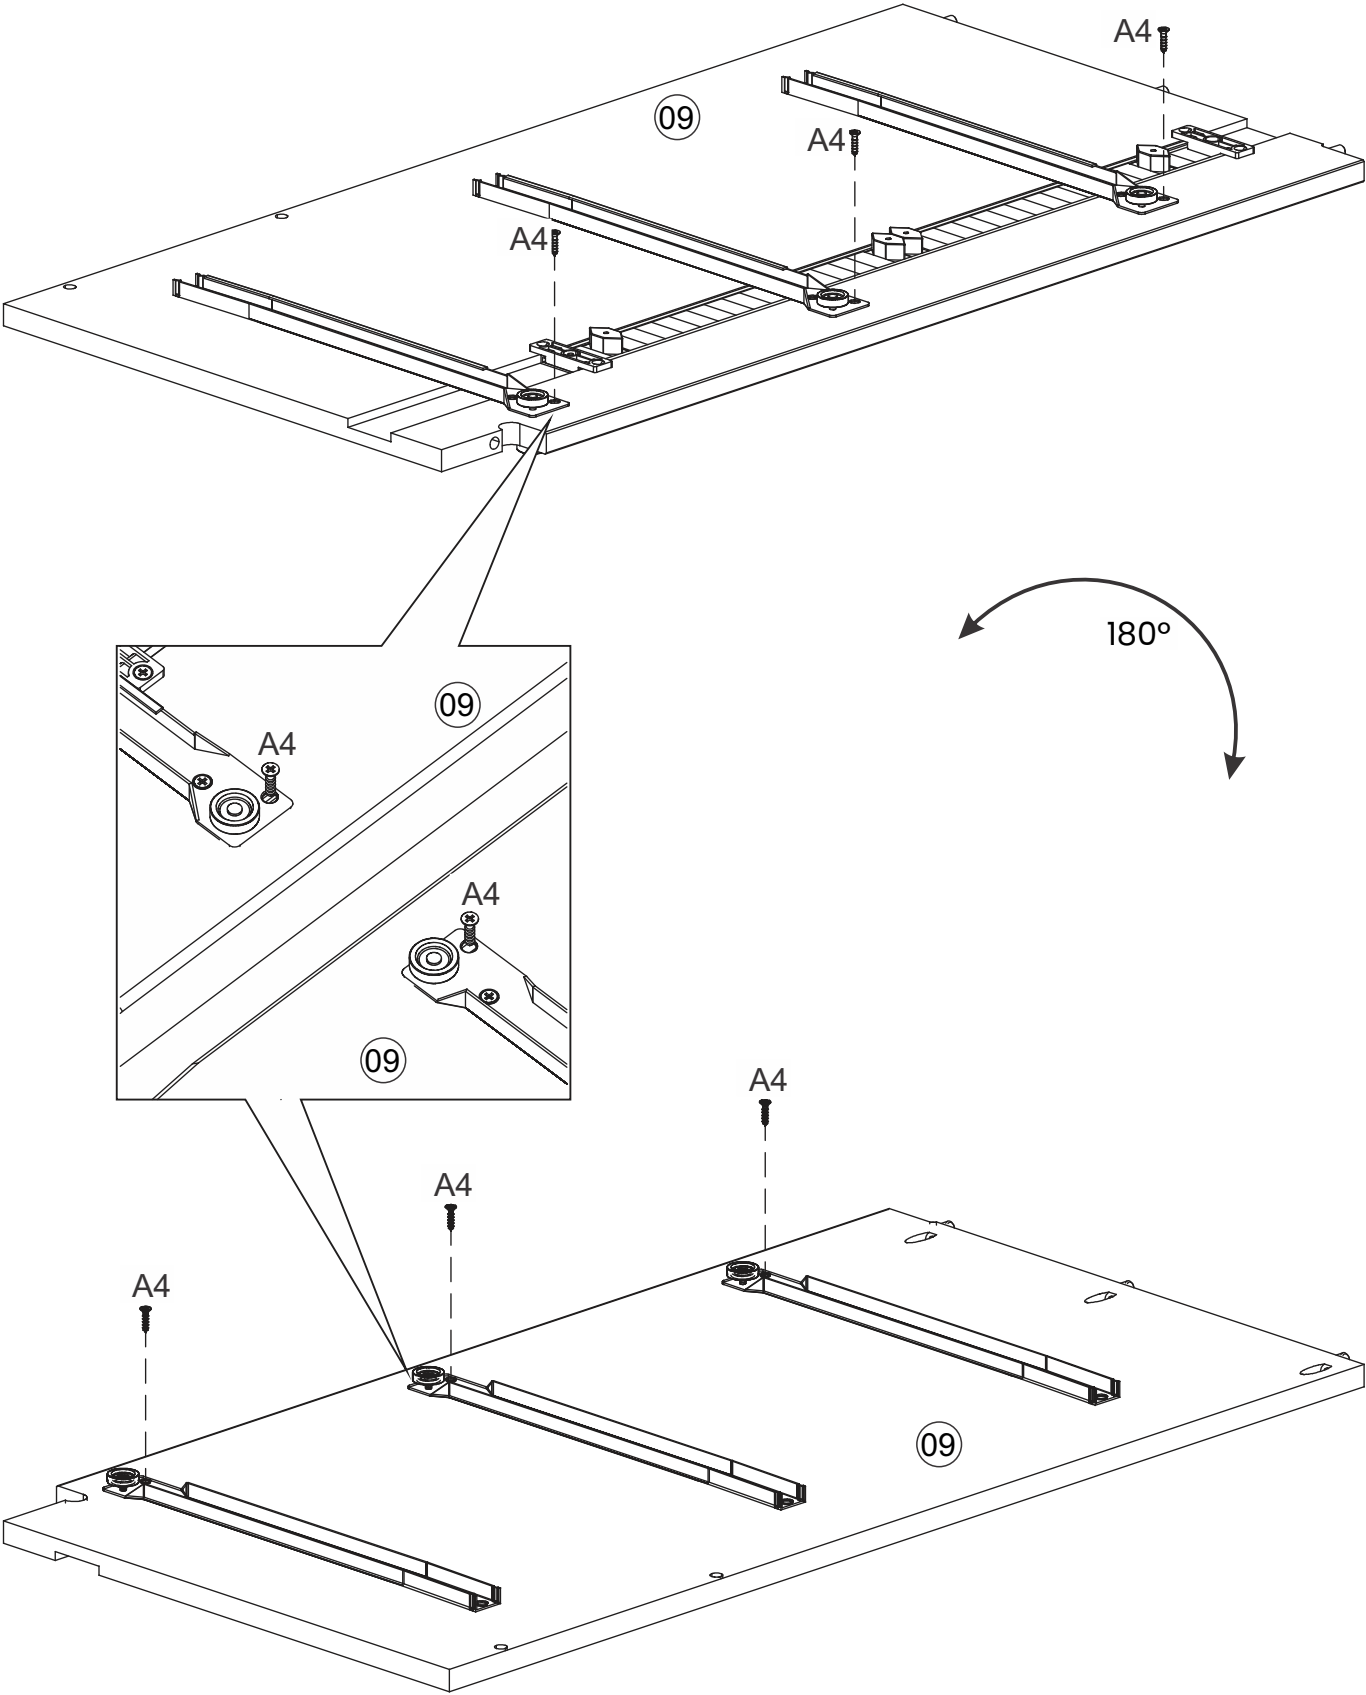



A4	 3,5x14	06
----	---	----


10)

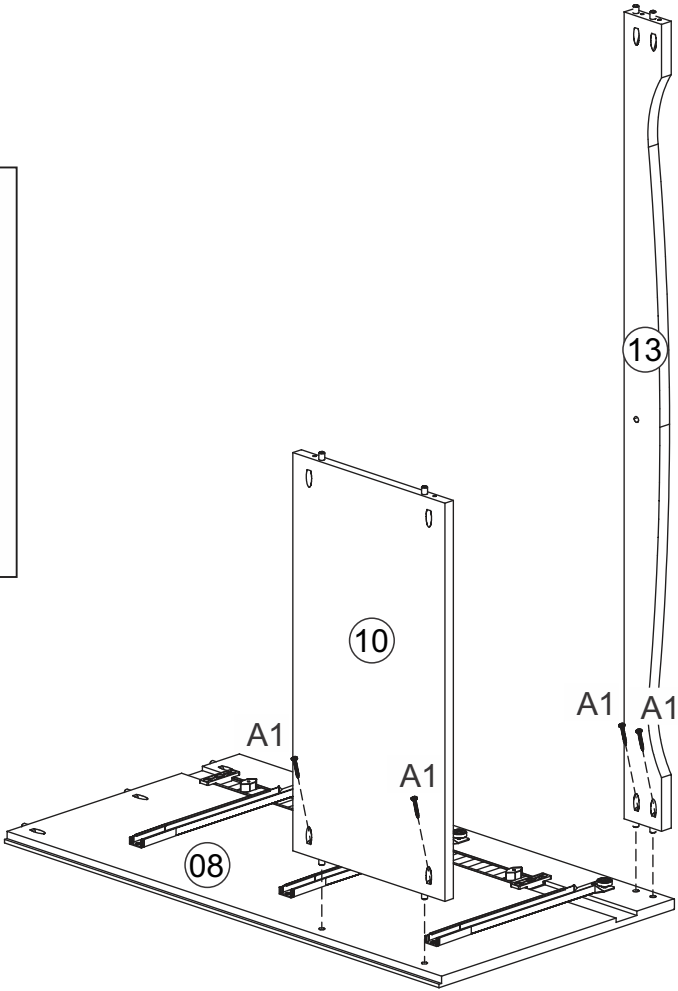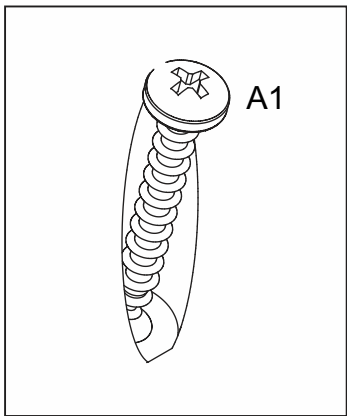


A1		04
4,0x30		


11)

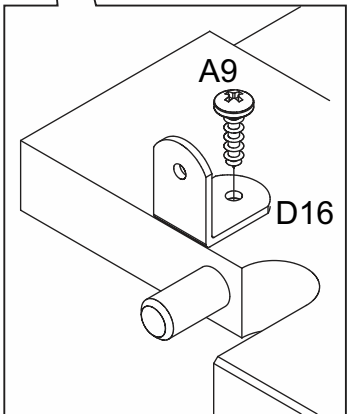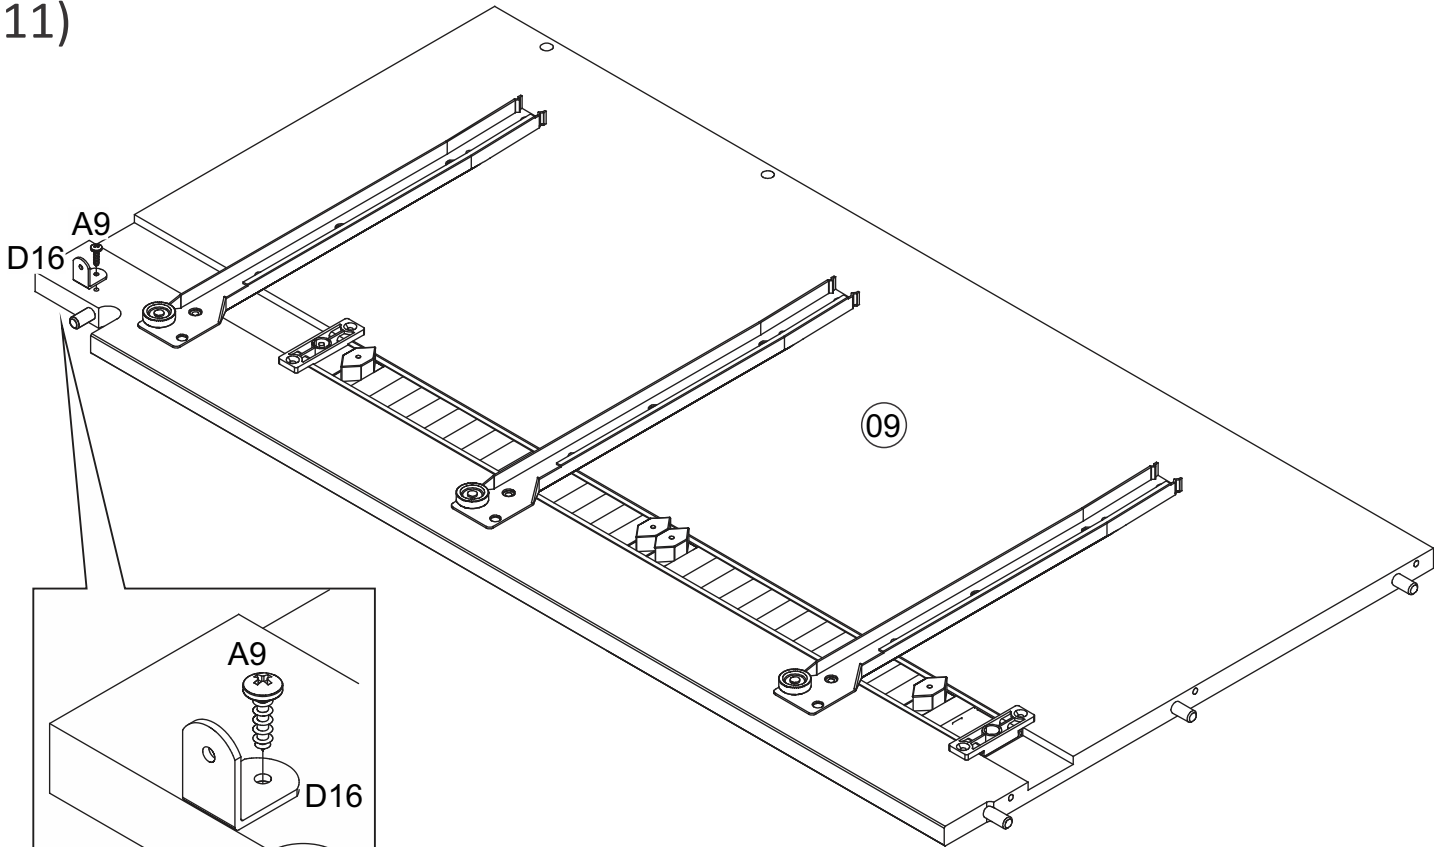


A9		01	D16		01
			3,5x16		


12)

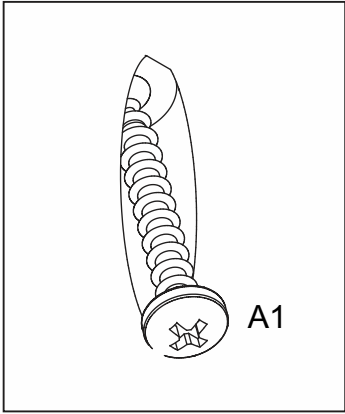


A1	 4,0x30	02
A9	 3,5x16	01

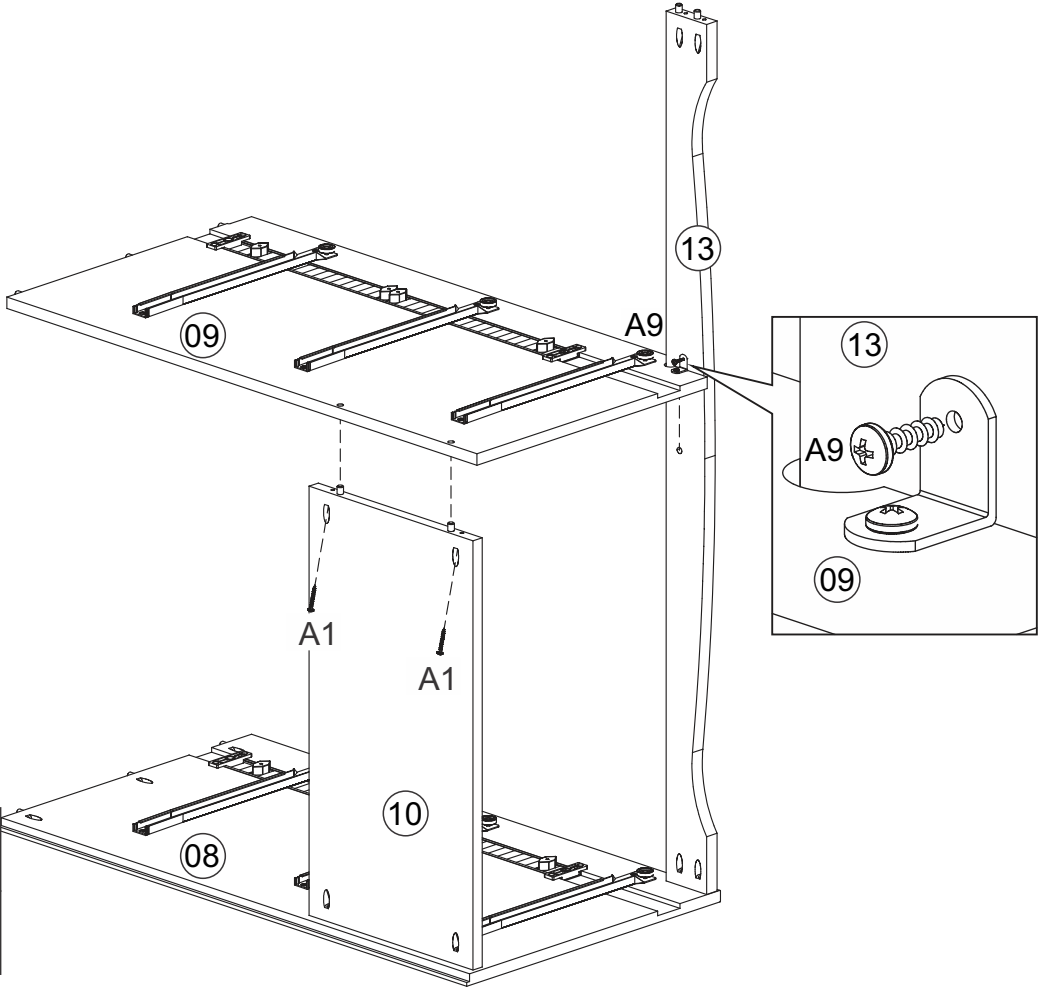



13)

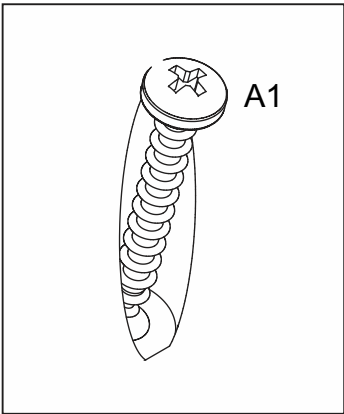

A1	 4,0x30	02
----	---	----


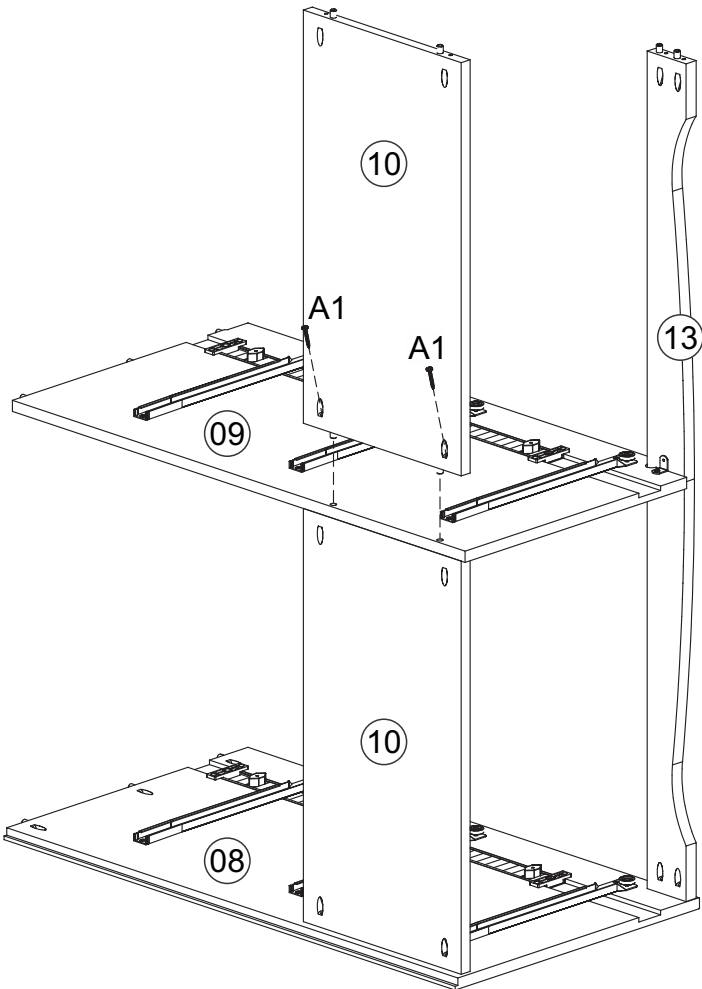



14)

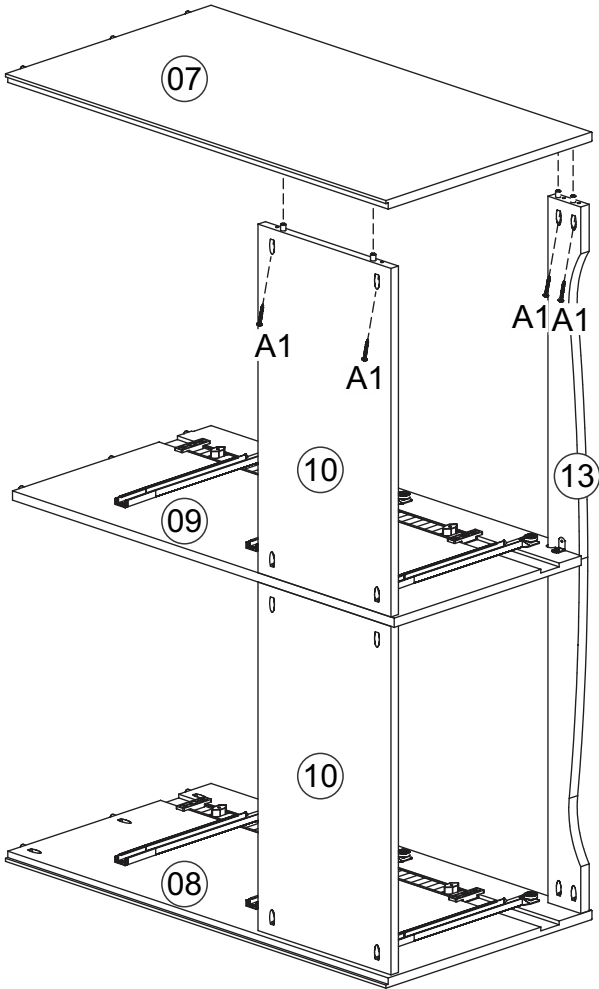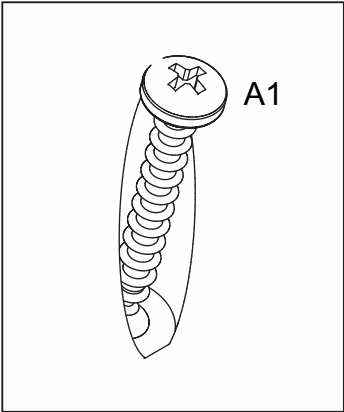




A1		04
4,0x30		

15)

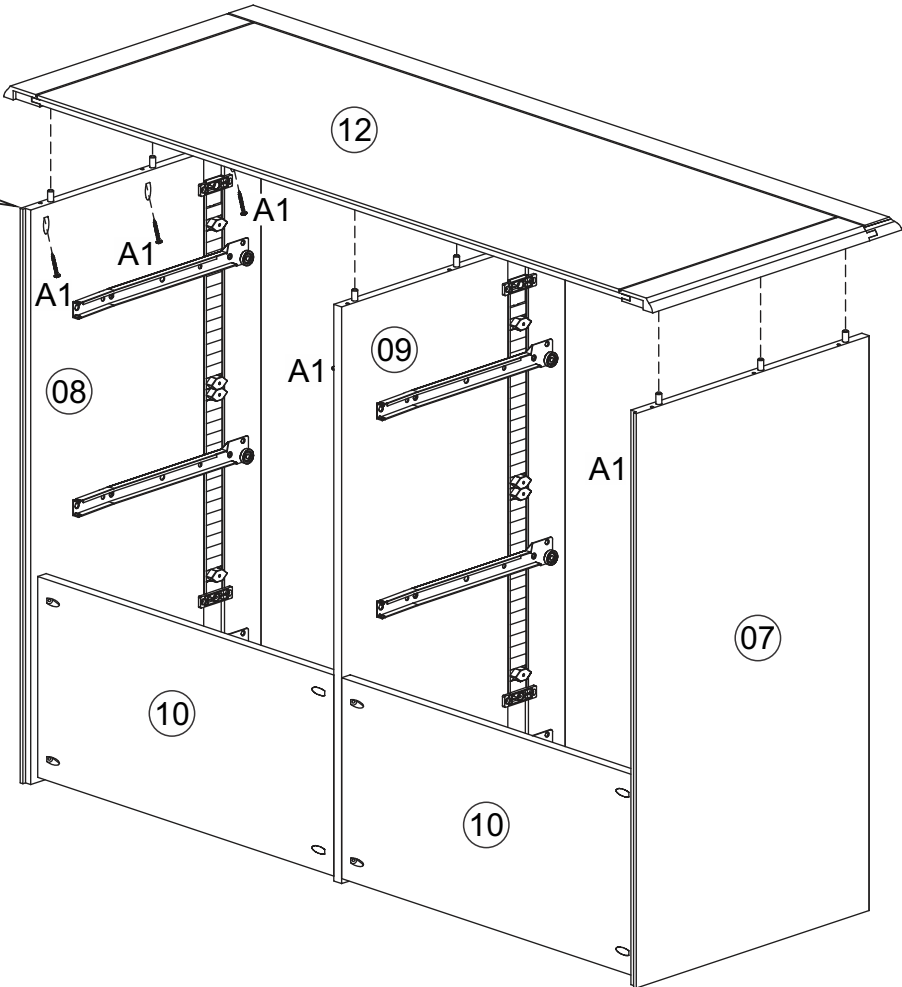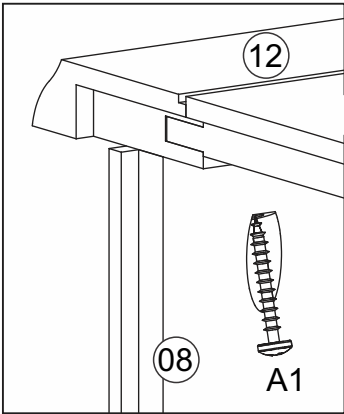






A1		09
4,0x30		

16)

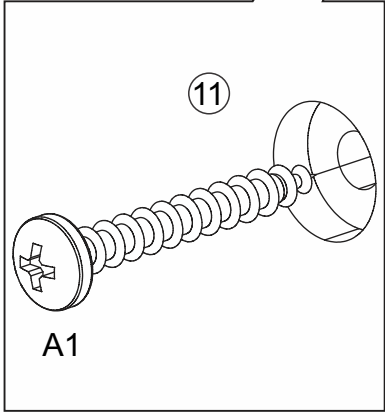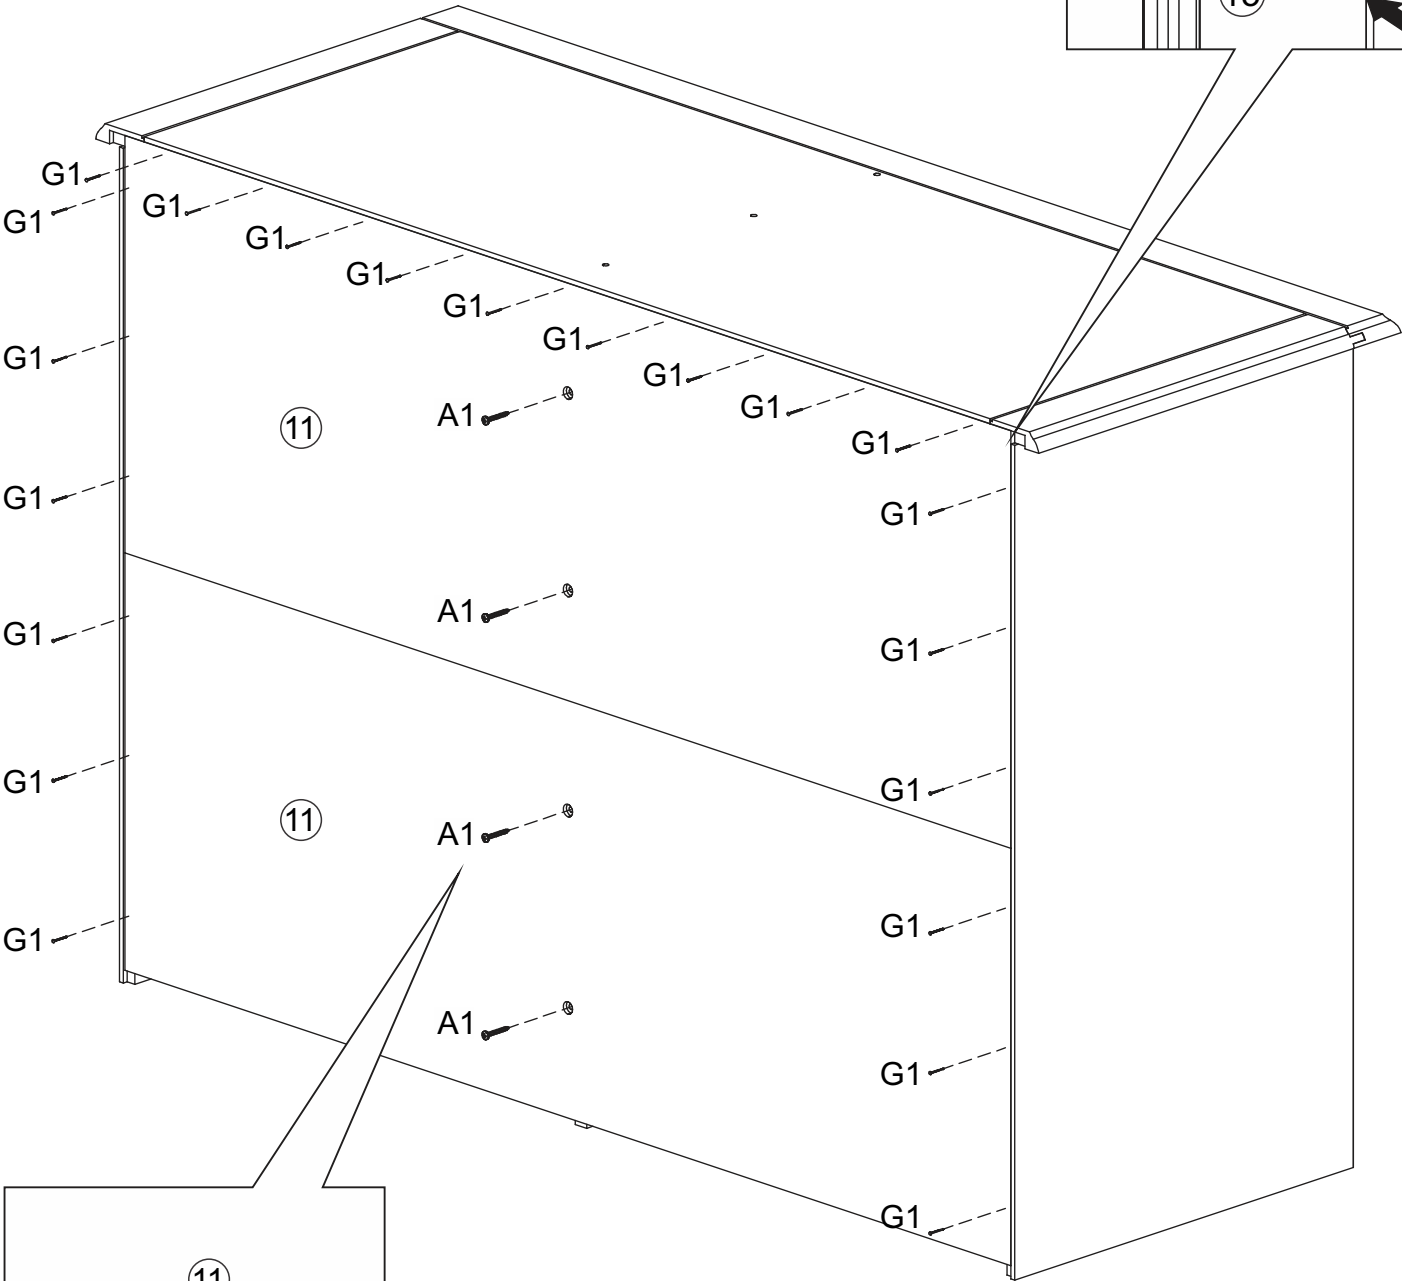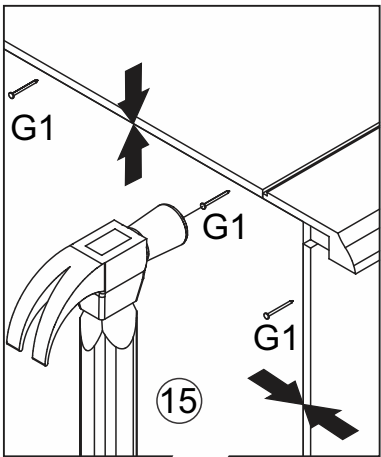


A1	 4,0x30	04
G1	 10x10	21




17) 2x

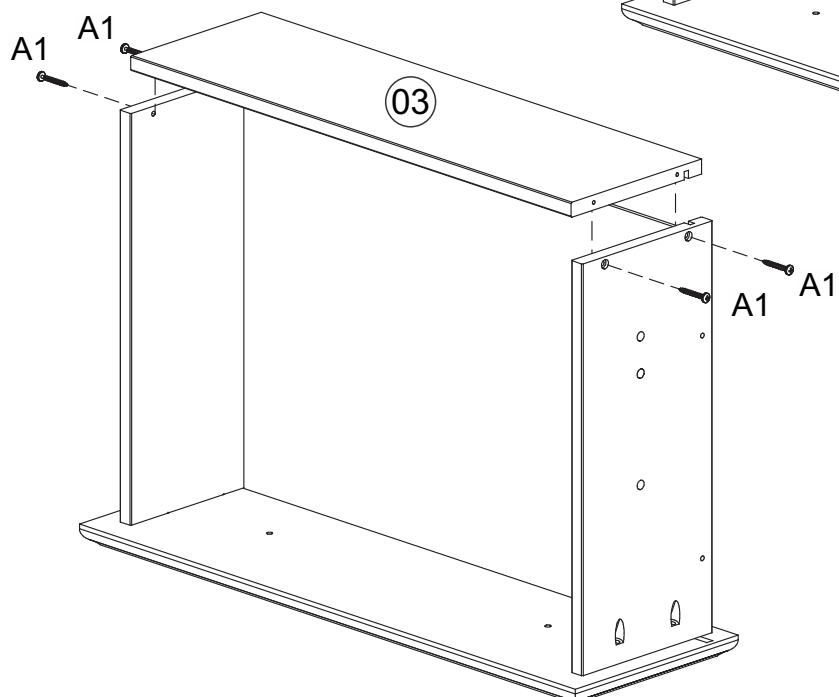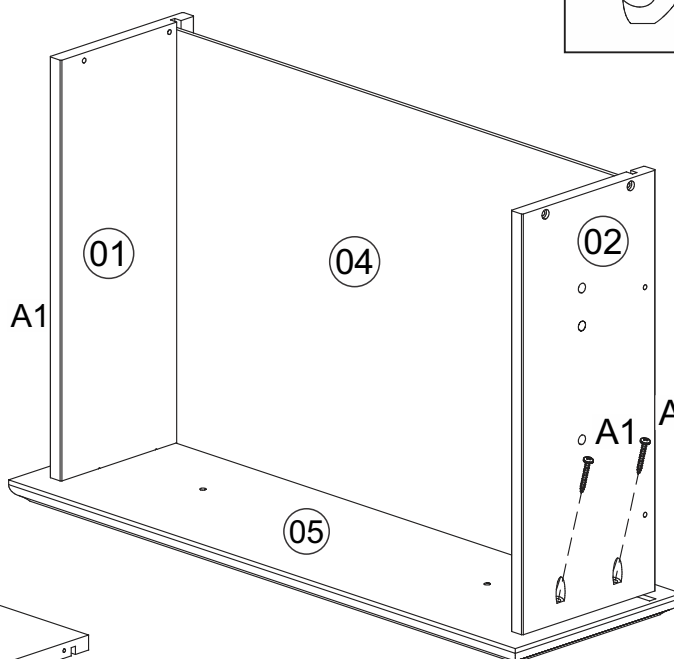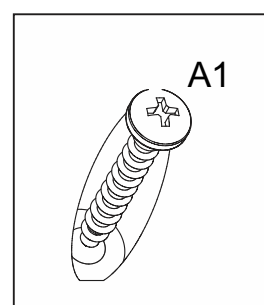
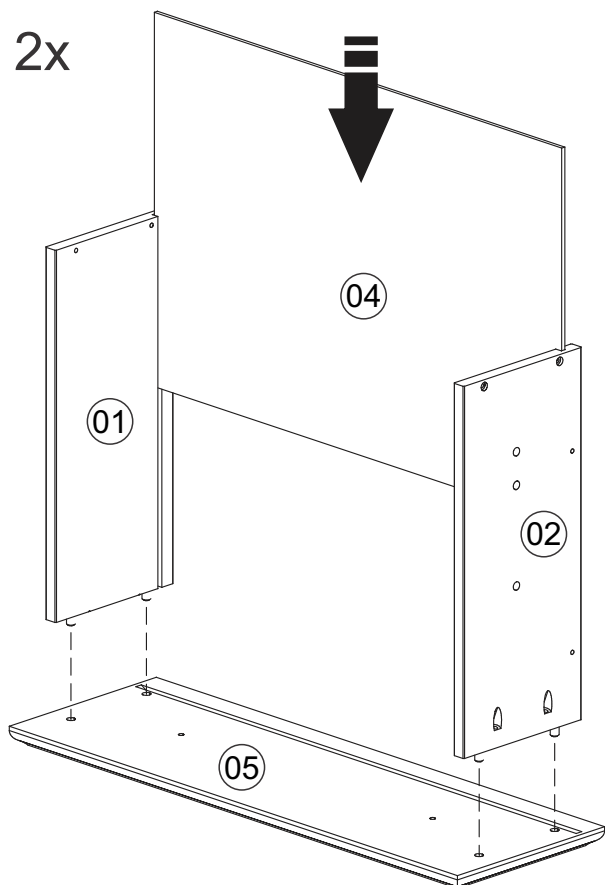


18)

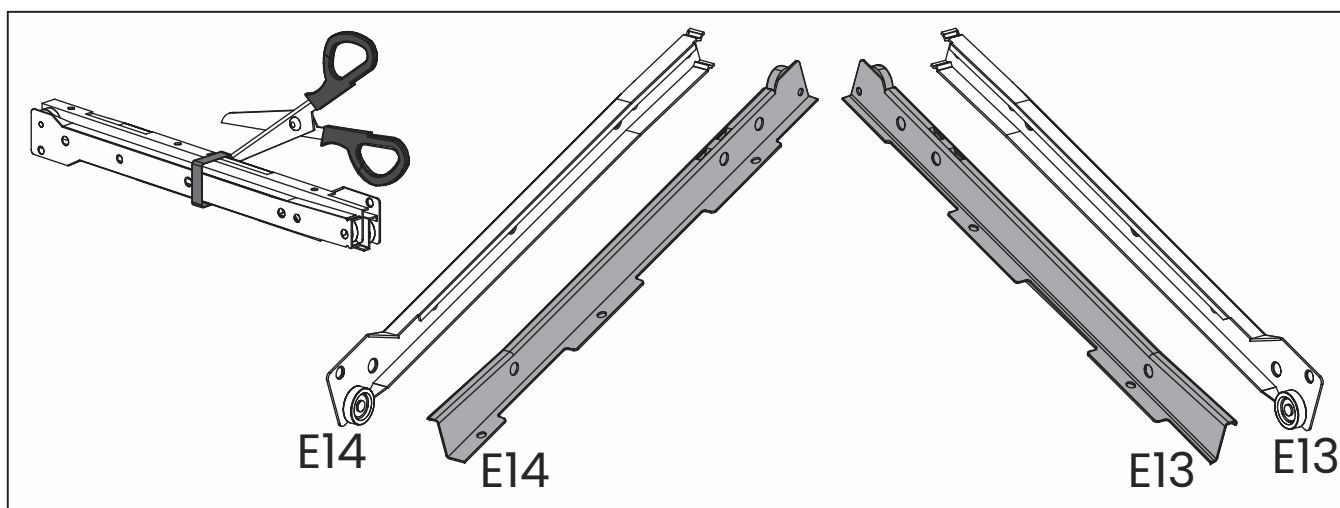


Flip the assembled drawer upside down to install glides.

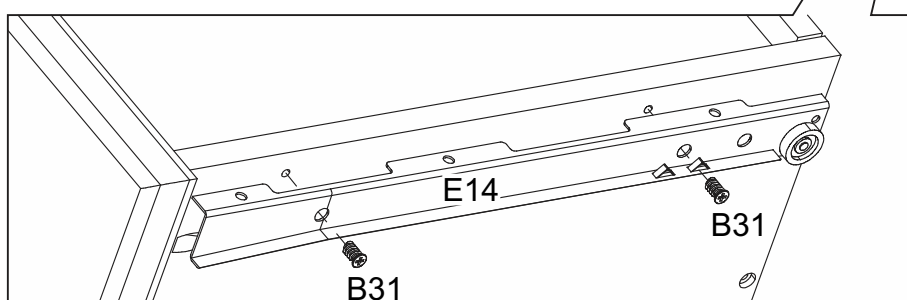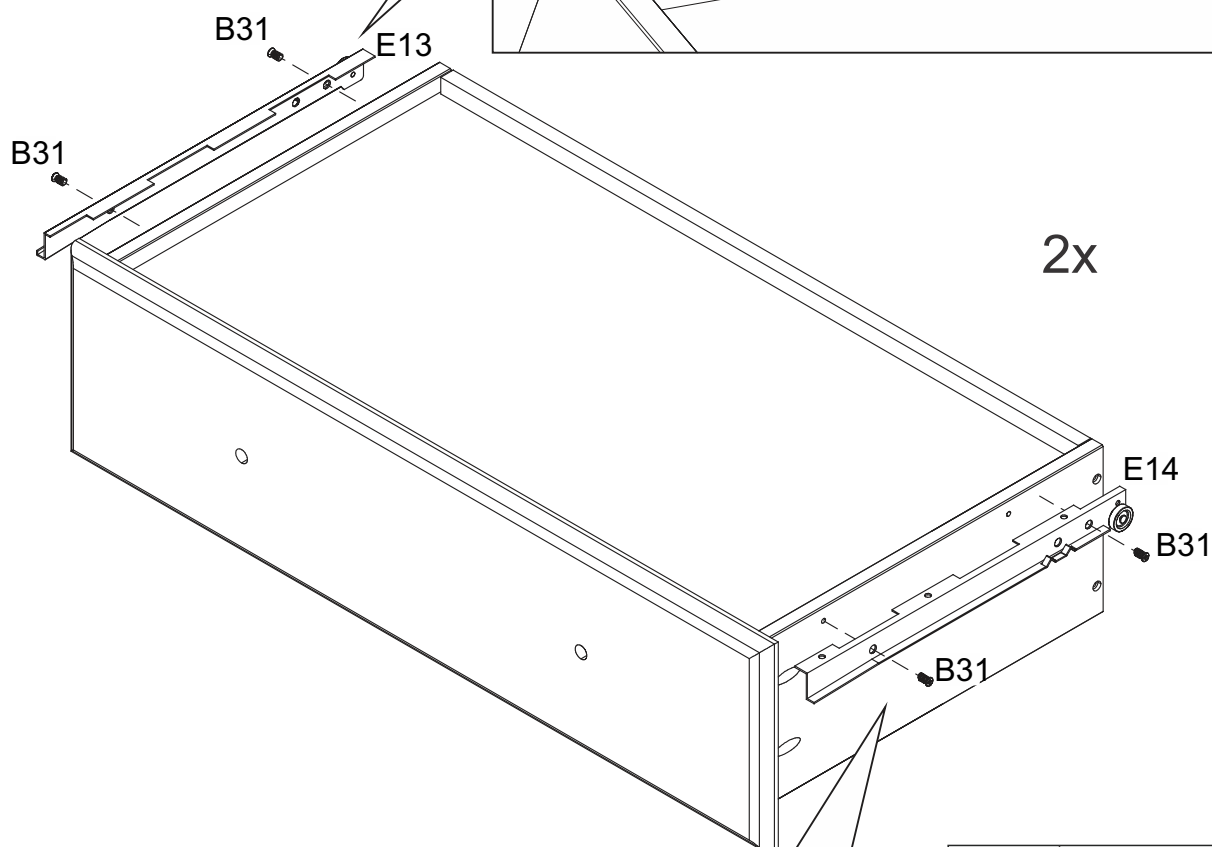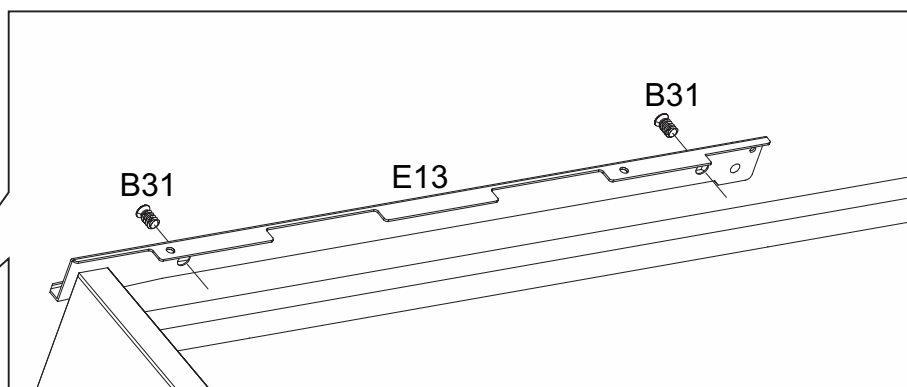


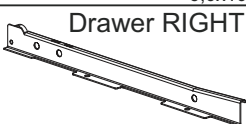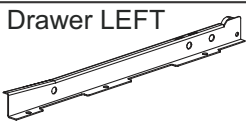B31	 6,0x10	08
E13	Drawer RIGHT 	02
E14	Drawer LEFT 	02


19) 2x

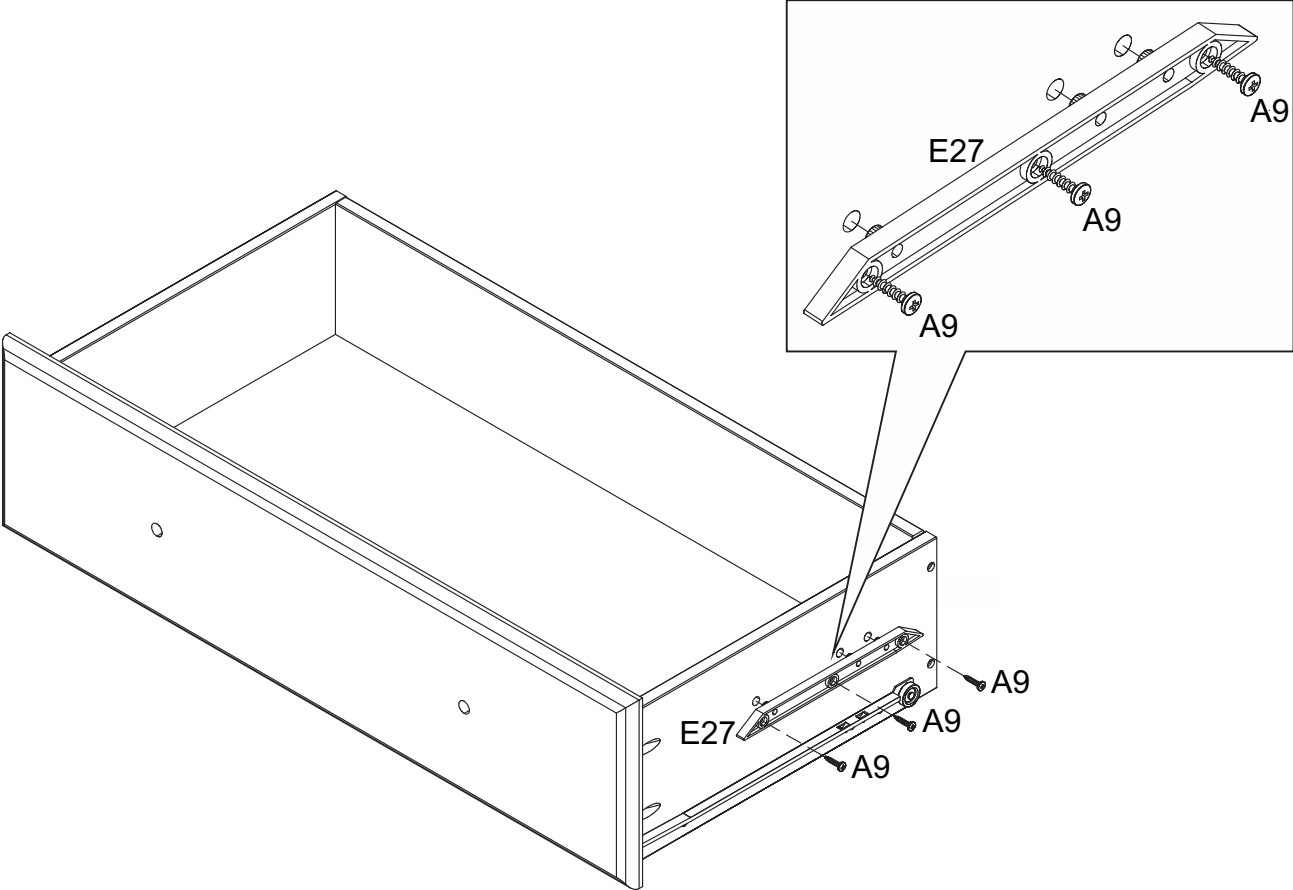


A9		06
3,5x16		





E27		02
-----	---	----

20) 2x

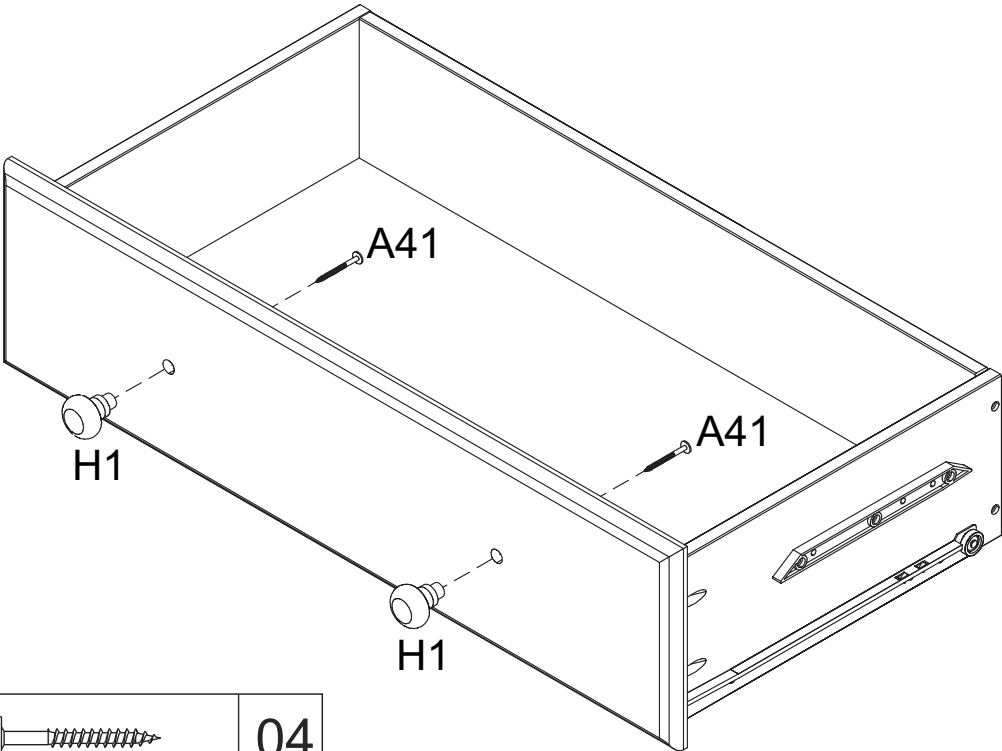


A41		04
4,0x30		
H1		04

21) 4x

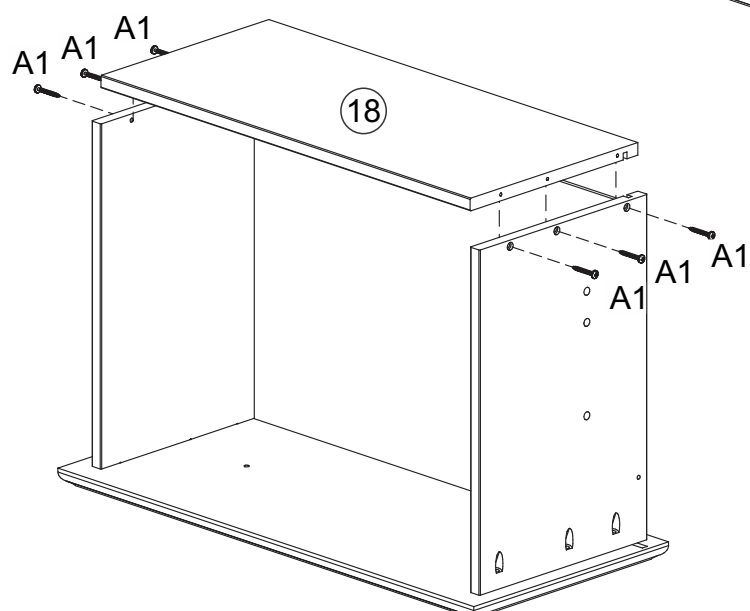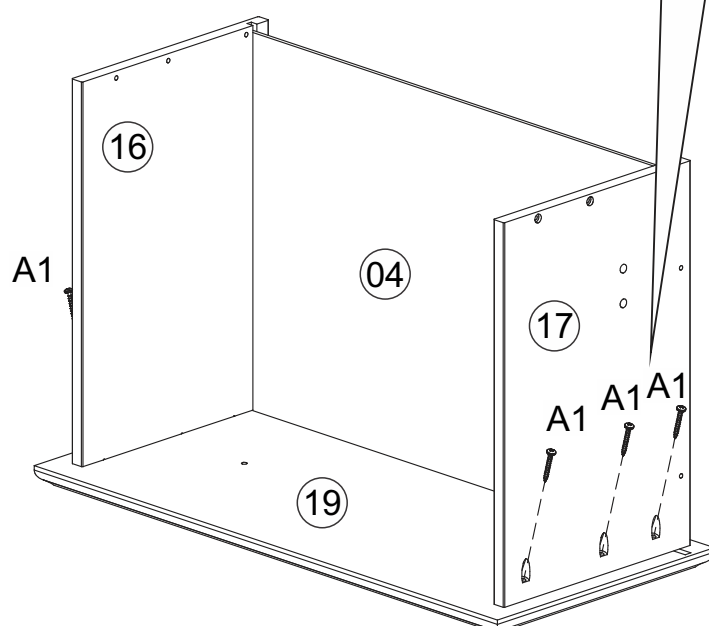
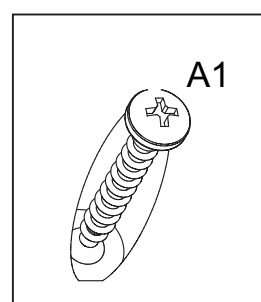
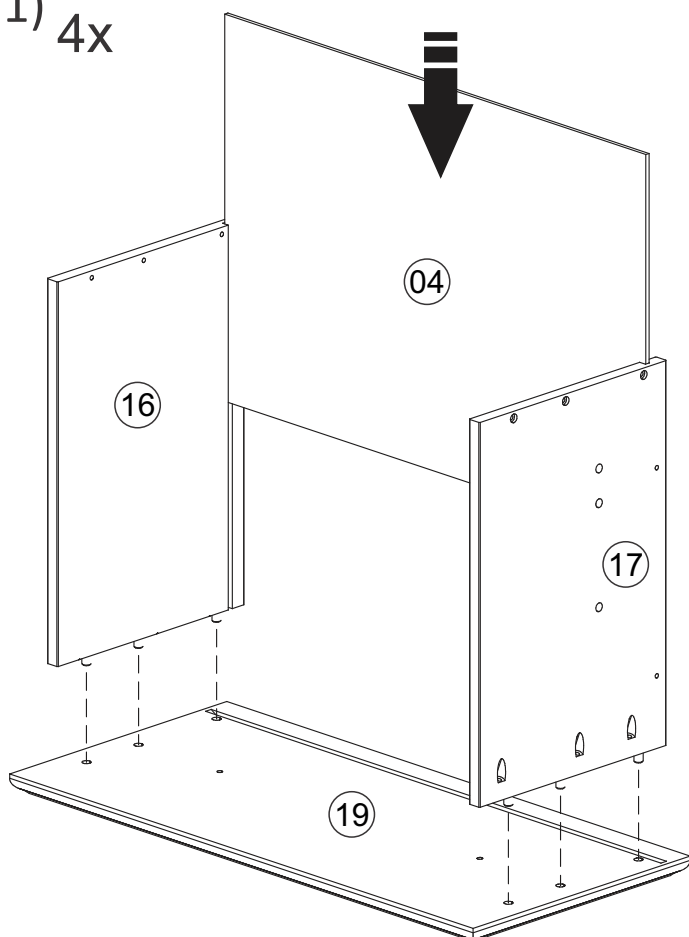




A1		48
	4,0x30	

22)

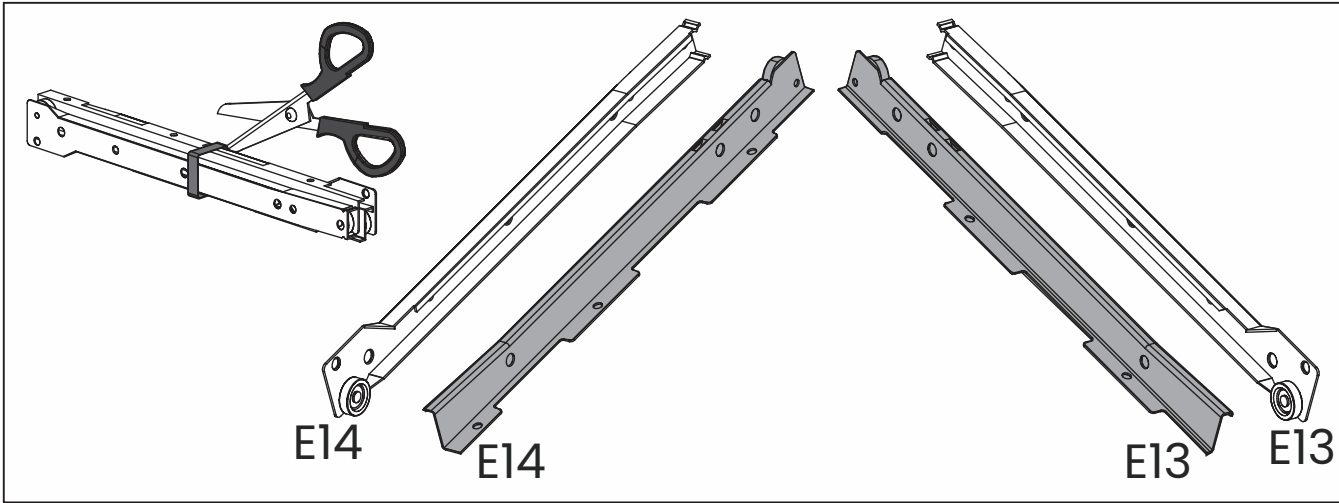


Flip the assembled drawer
upside down to install glides.

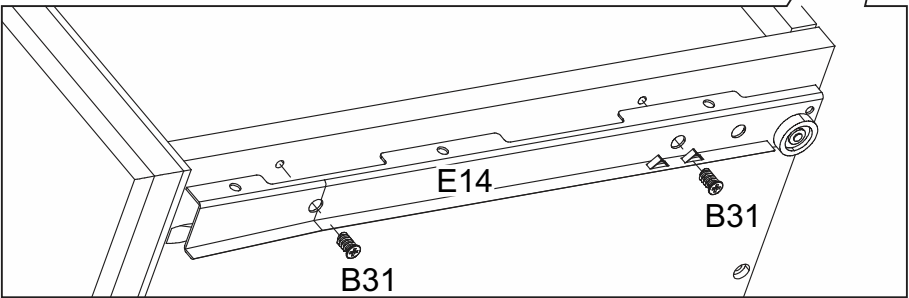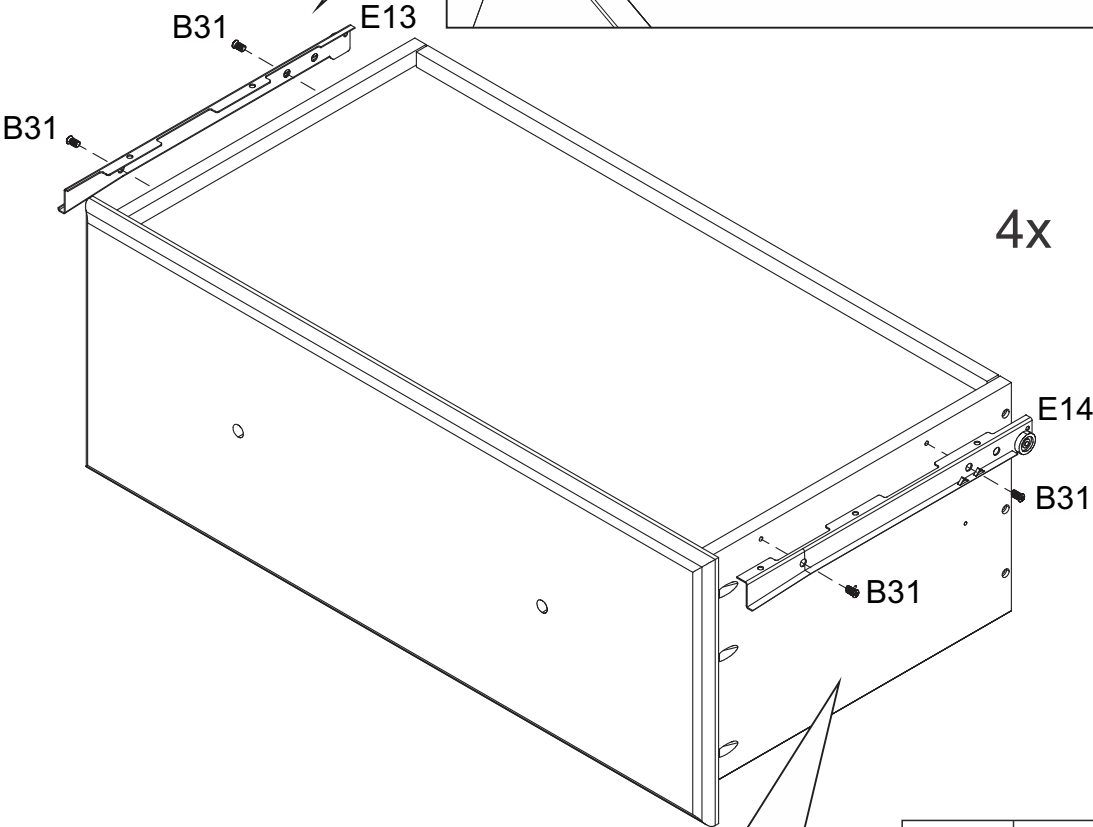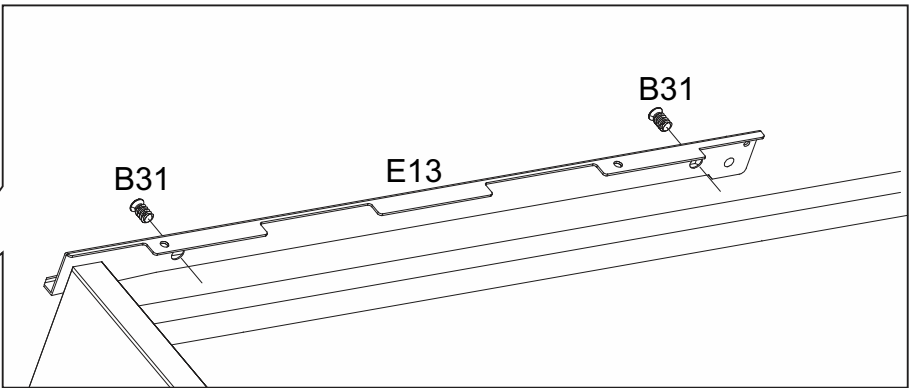


B31	 6,0x10	16
E13	 Drawer RIGHT	04
E14	 Drawer LEFT	04


23) 4x

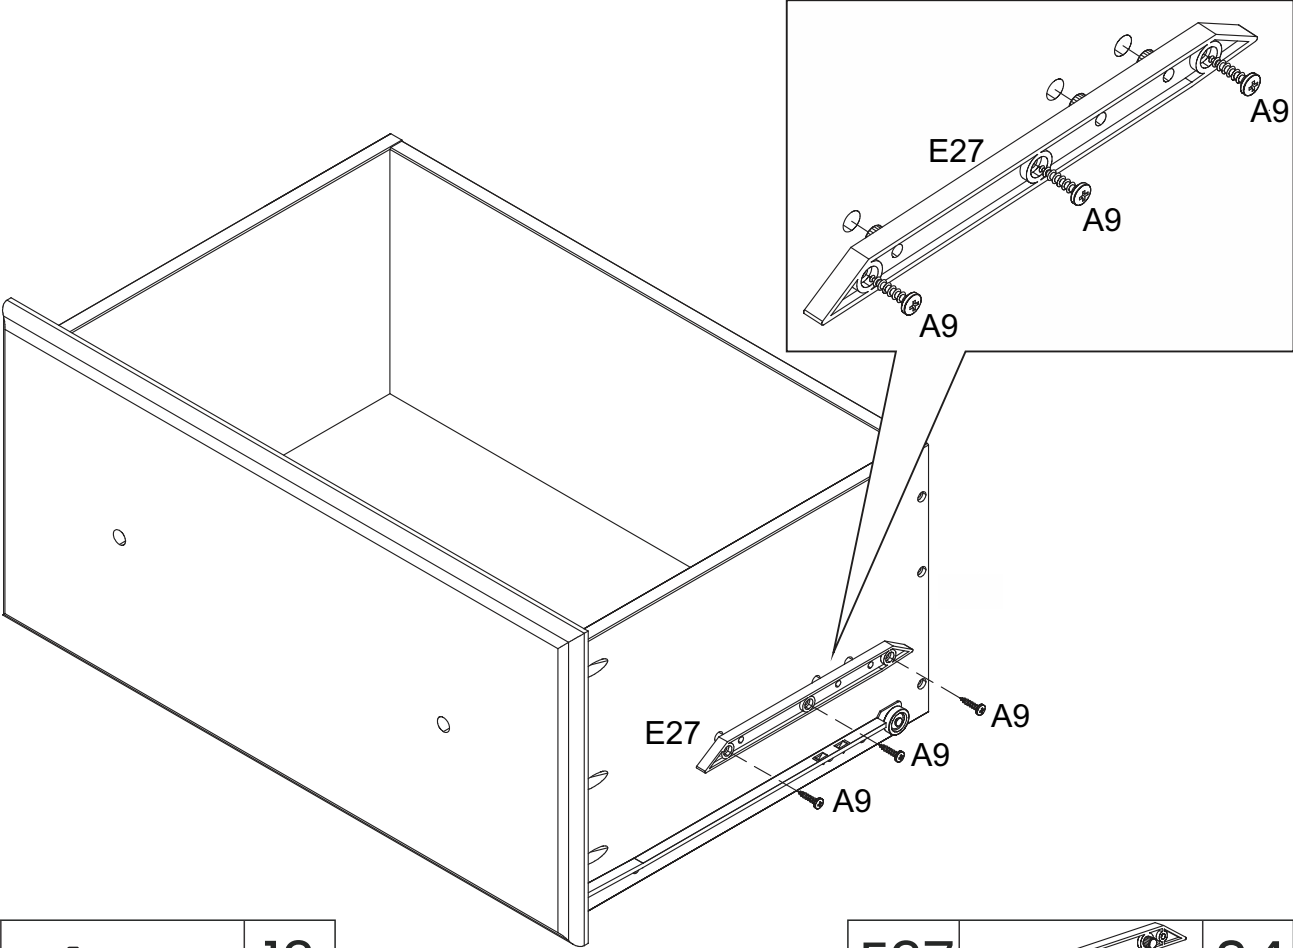


A9		12
3,5x16		

E27		04
-----	---	----


24) 4x

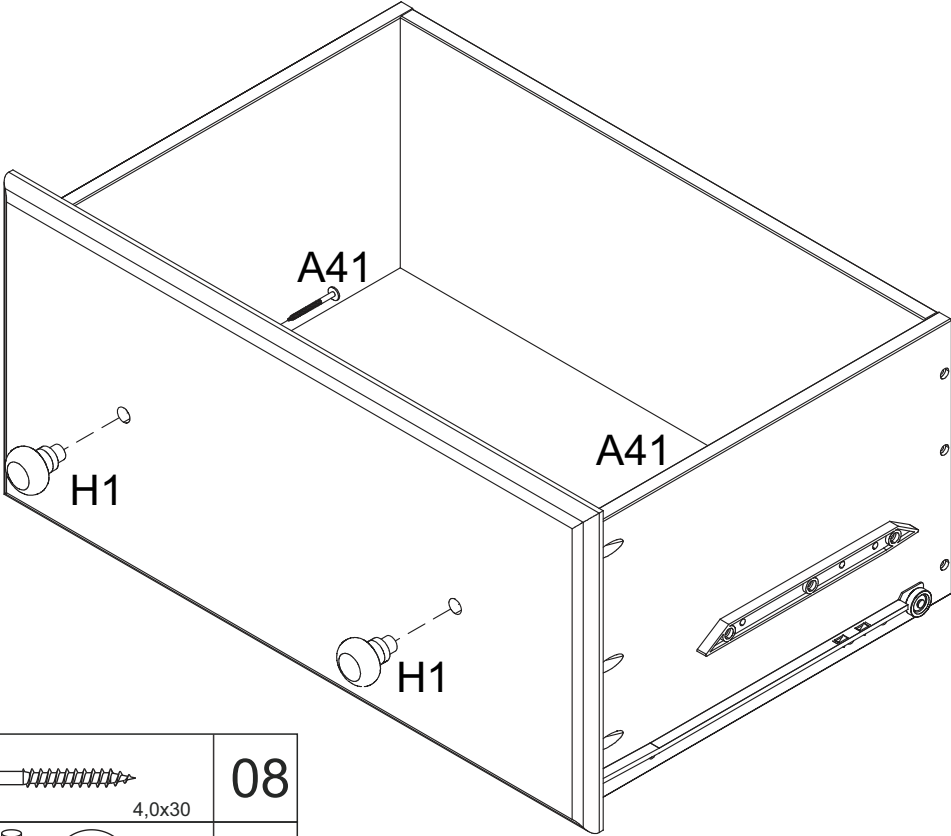








A41		08
4,0x30		
H1		08

25)

Place labeled drawer in the top position





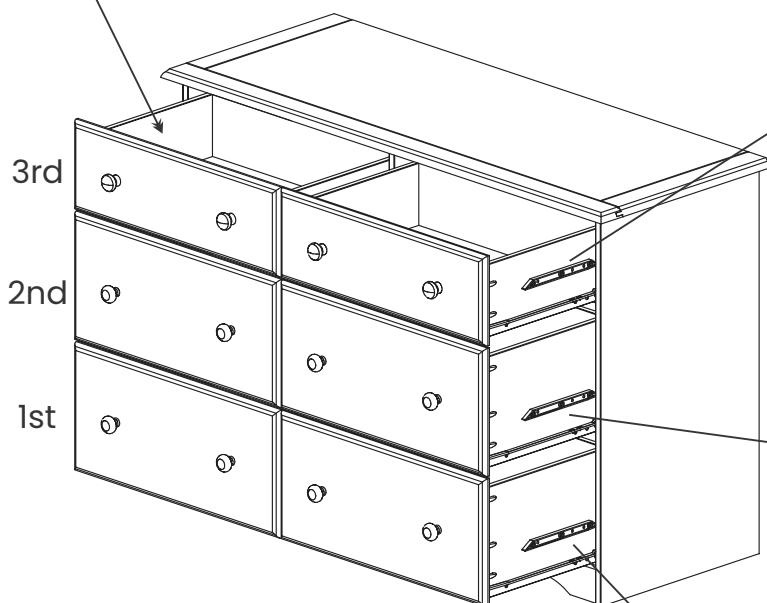


Install the drawers from bottom to top

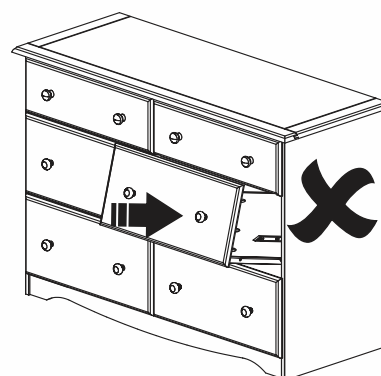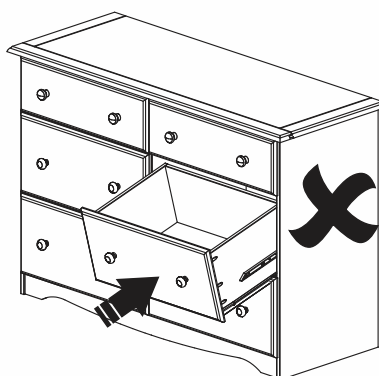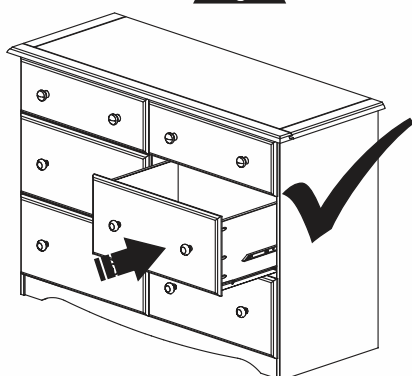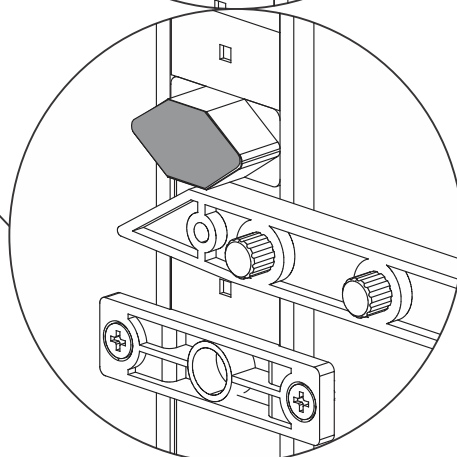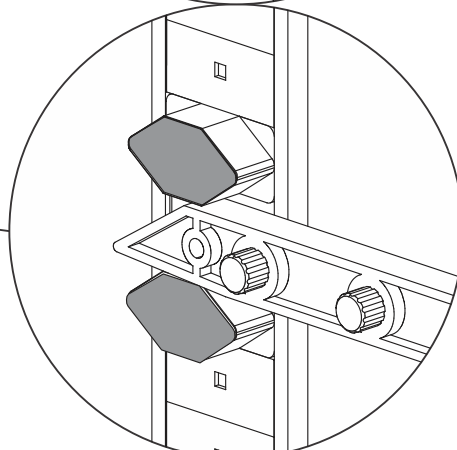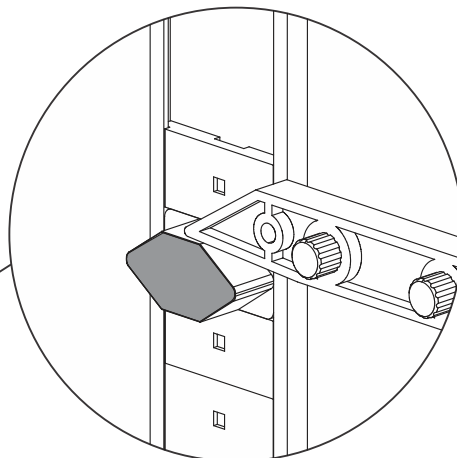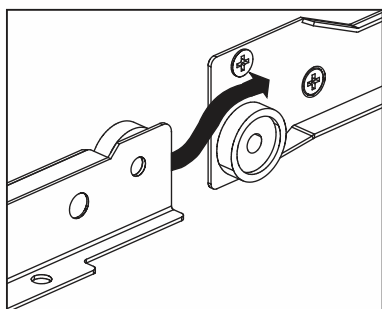

Ensure that the drawers are inserted into the chest in a horizontal orientation

26) Tip-over Restraint Kit Installation

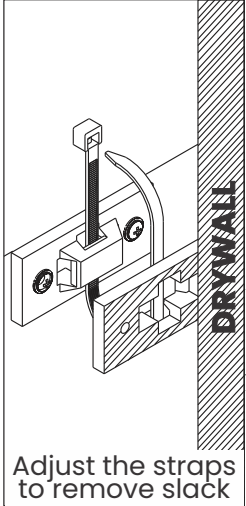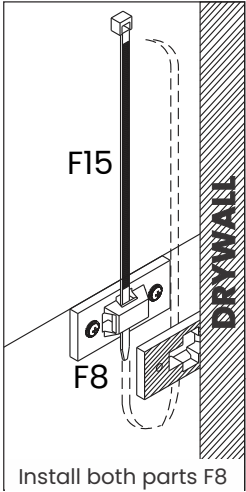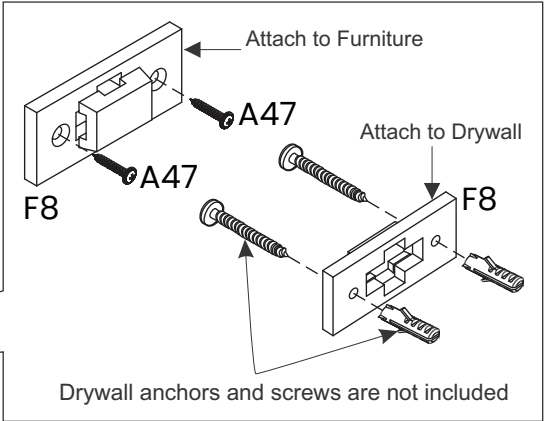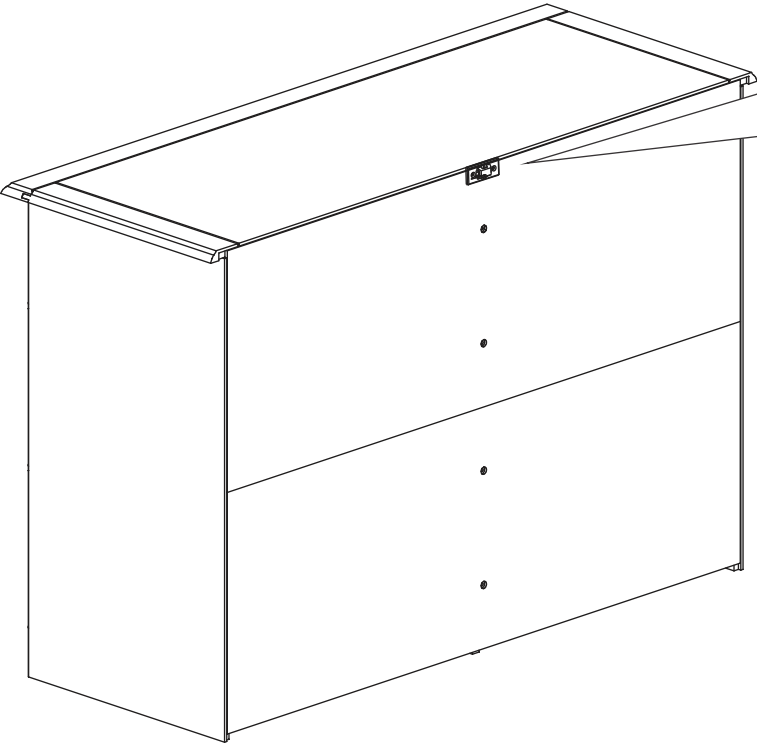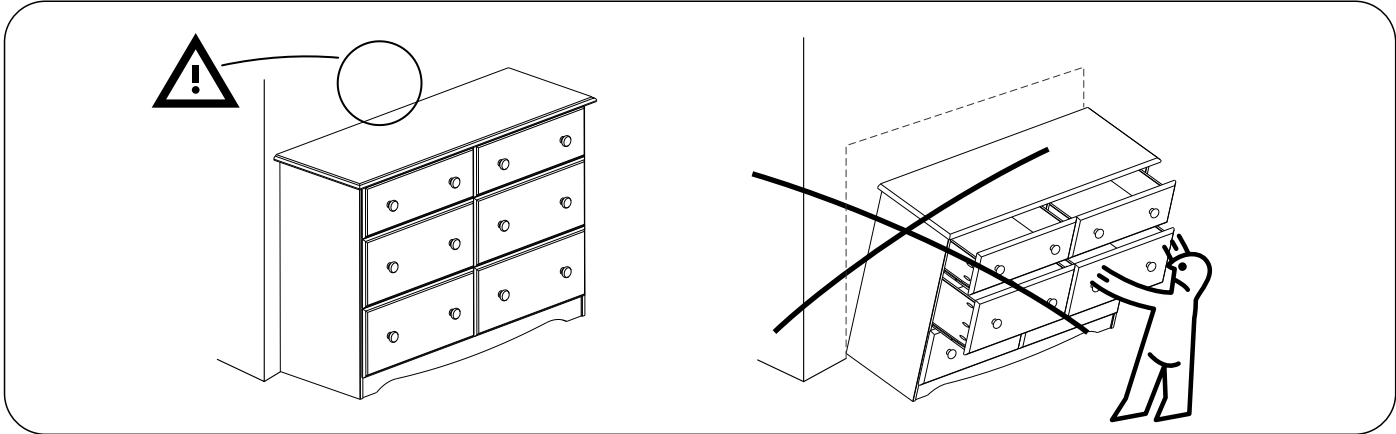

A47	 3,0x20	2
F8		2
F15		1