

SOFA TABLE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









Warning !!

- 1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

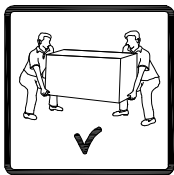





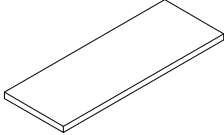











ASSEMBLY TIME PER UNIT: 30 MINUTES


PARTS IDENTIFICATION

(A) TOP		1 PC	(D) FRONT RIGHT LEG/ REAR LEFT LEG		2 PCS
(B) MIDDLE SHELF		1 PC	(E) FRONT LEFT LEG/ REAR RIGHT LEG		2 PCS
(C) BOTTOM PANEL		1 PC	(F) BOTTOM SUPPORT		2 PCS

ASSEMBLY INSTRUCTION


Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	DOWEL Ø8x25mm		8pcs
2	CAMBOLT L29mm		20pcs
3	CAMLOCK Ø15mm		20pcs
4	SMALL STICKER Ø20mm		8pcs
5	FULL THREADED ROD M8x70mm		4pcs
6	JAM WASHER M8mm		4pcs
7	WASHER Ø8xØ16x2mm		4pcs
8	NUT M8mm		4pcs
9	LARGE STICKER Ø45mm(BK)		4pcs
10	WRENCH M13mm		1pc
11	SMALL STICKER Ø20mm(BK)		4pcs
12	ANTI-TIP STRIP		1pc
13	SCREW Ø4x25mm		1pc
14	WALL SCREW Ø5x40mm		1pc
15	PLASTIC ANCHOR Ø8x40mm		1pc
16	GLUE		1pc

ASSEMBLY INSTRUCTION

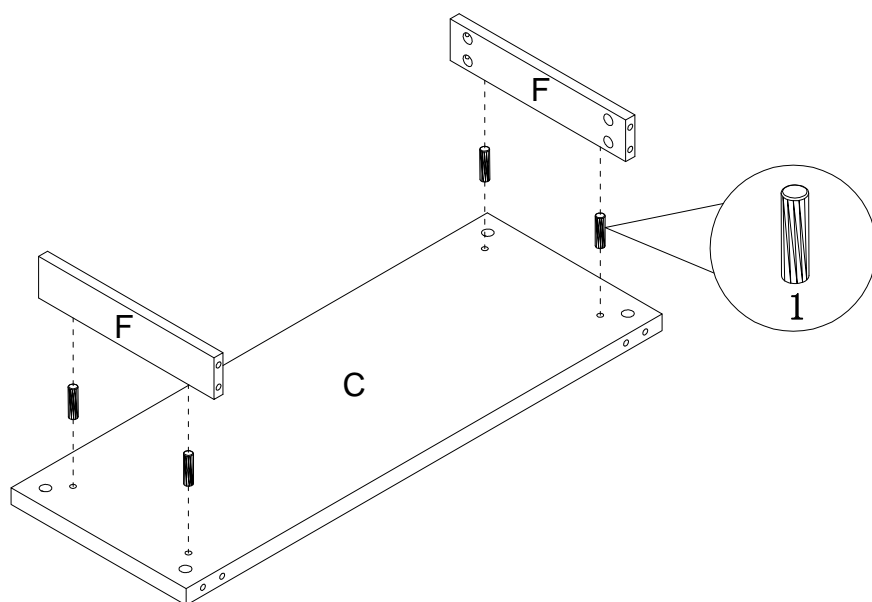


STEP1

STEP2

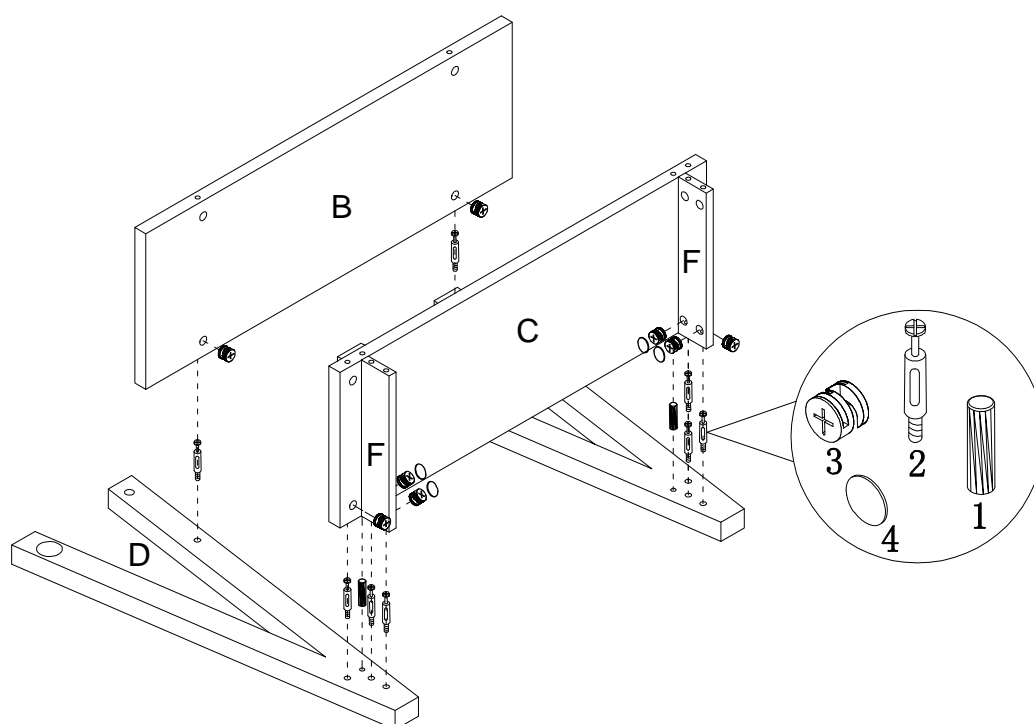


ASSEMBLY INSTRUCTION

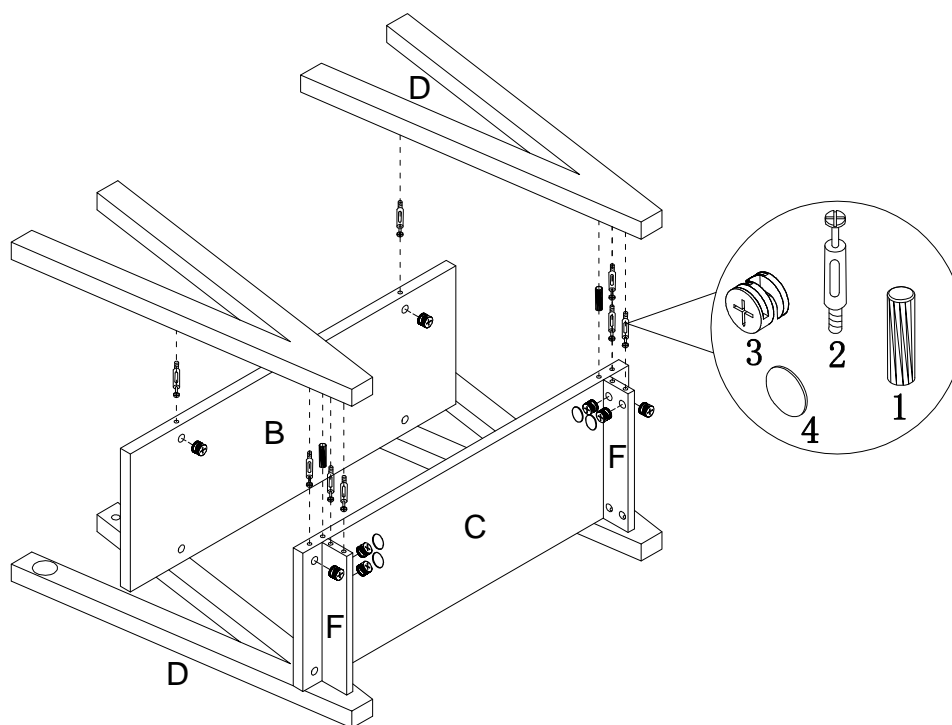


STEP3

STEP4

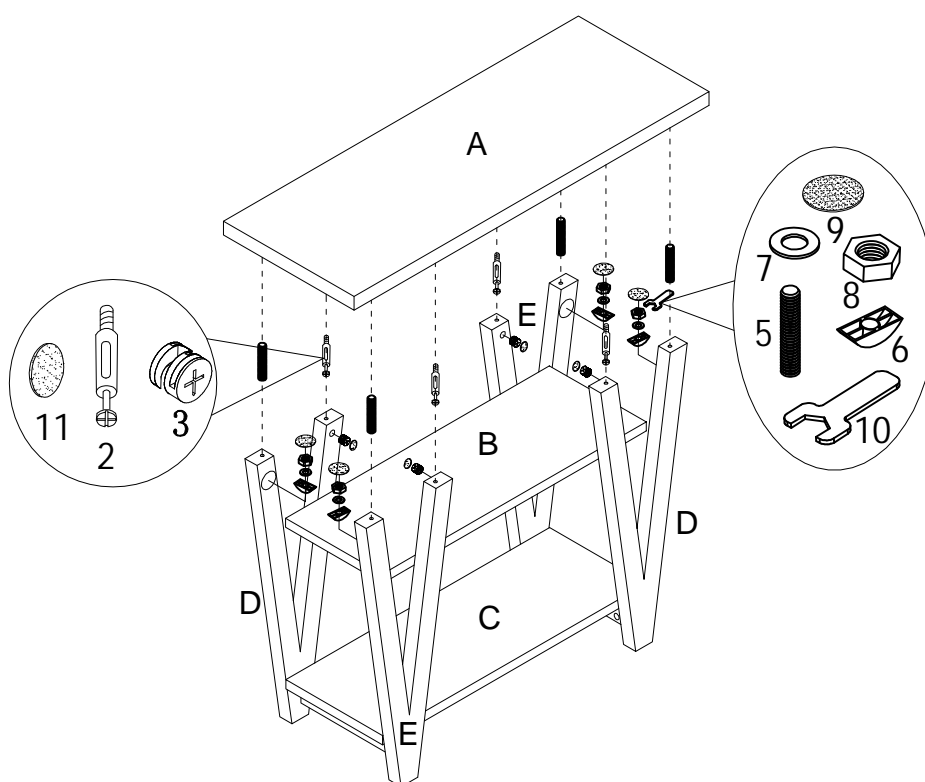

ASSEMBLY INSTRUCTION

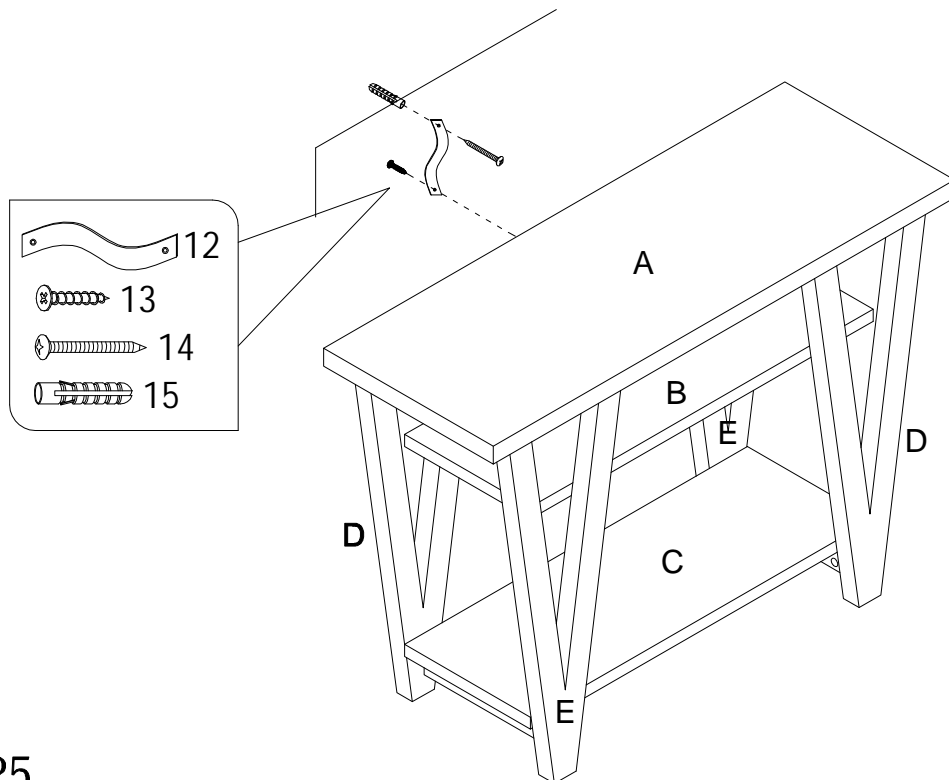

STEP5

STEP6

