




# SIDE CHAIR

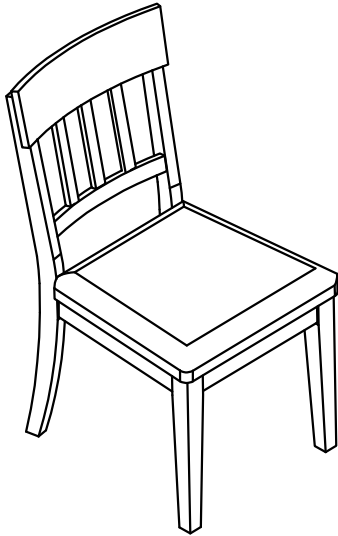










## ASSEMBLY INSTRUCTIONS

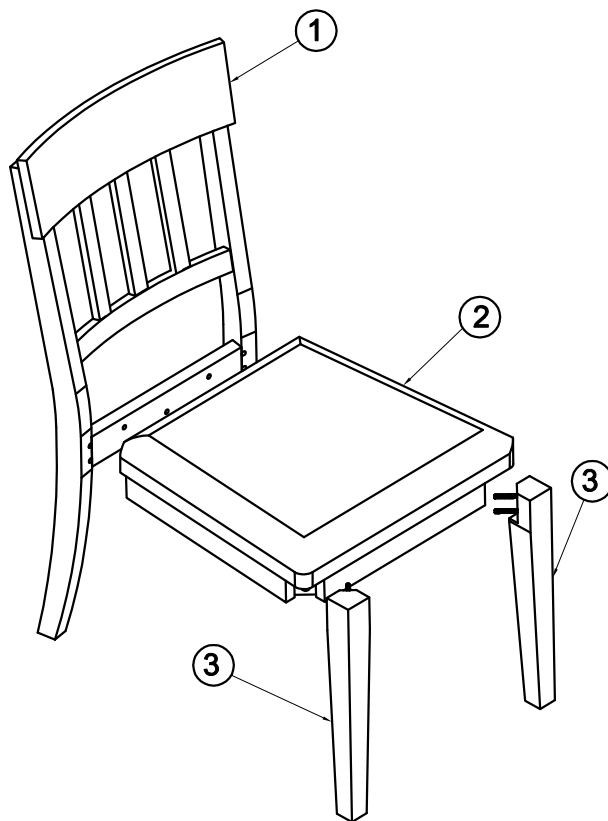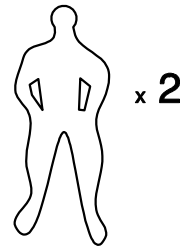


20 MIN







## HARDWARES LIST


<p><b>A</b></p>  <p>4 pcs Ø13 x M6 x 80 mm</p>	<p><b>B</b></p>  <p>7 pcs 1.2 x M6 x Ø11 mm</p>	<p><b>C</b></p>  <p>7 pcs 2 x M6 x Ø19 mm</p>	<p><b>D</b></p>  <p>3 pcs Ø13 x M6 x 40 mm</p>	<p><b>E</b></p>  <p>4 pcs M8 x 115 mm</p>	<p><b>F</b></p>  <p>4 pcs 1.2 x M8 x Ø12 mm</p>	<p><b>G</b></p>  <p>4 pcs 2 x M8 x Ø19 mm</p>
<p><b>H</b></p>  <p>1 pc 12 mm</p>	<p><b>I</b></p>  <p>1 pc M4 x 60 mm</p>					

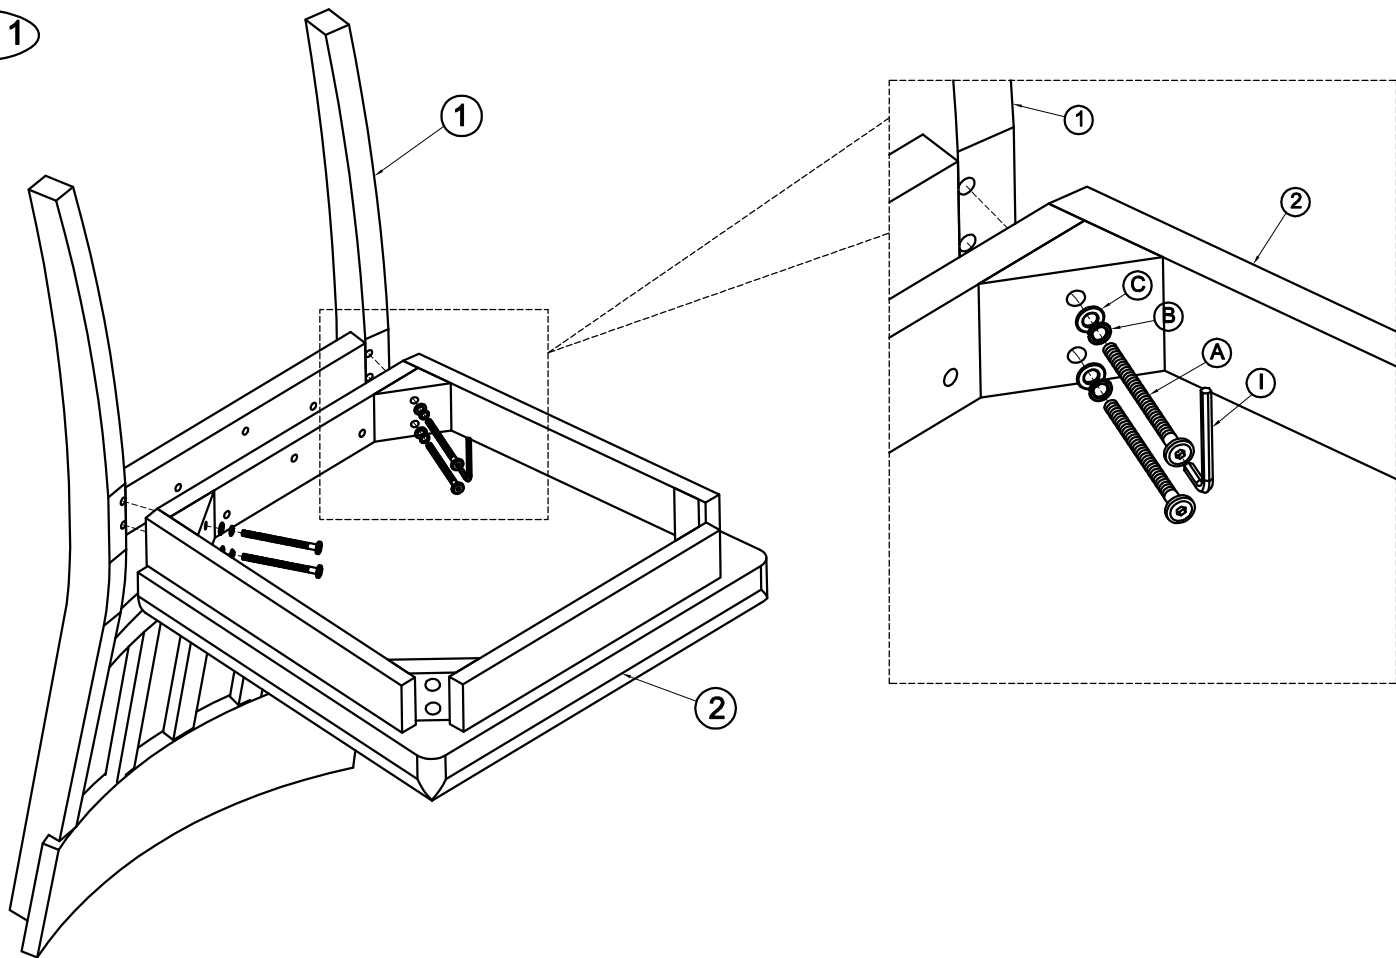



**Step 1**




<p><b>A</b></p>  <p>4 pcs Ø13 x M6 x 80 mm</p>	<p><b>B</b></p>  <p>4 pcs 1.2 x M6 x Ø11 mm</p>	<p><b>C</b></p>  <p>4 pcs 2 x M6 x Ø19 mm</p>	<p><b>I</b></p>  <p>1 pc M4 x 60 mm</p>
---	--	--	--

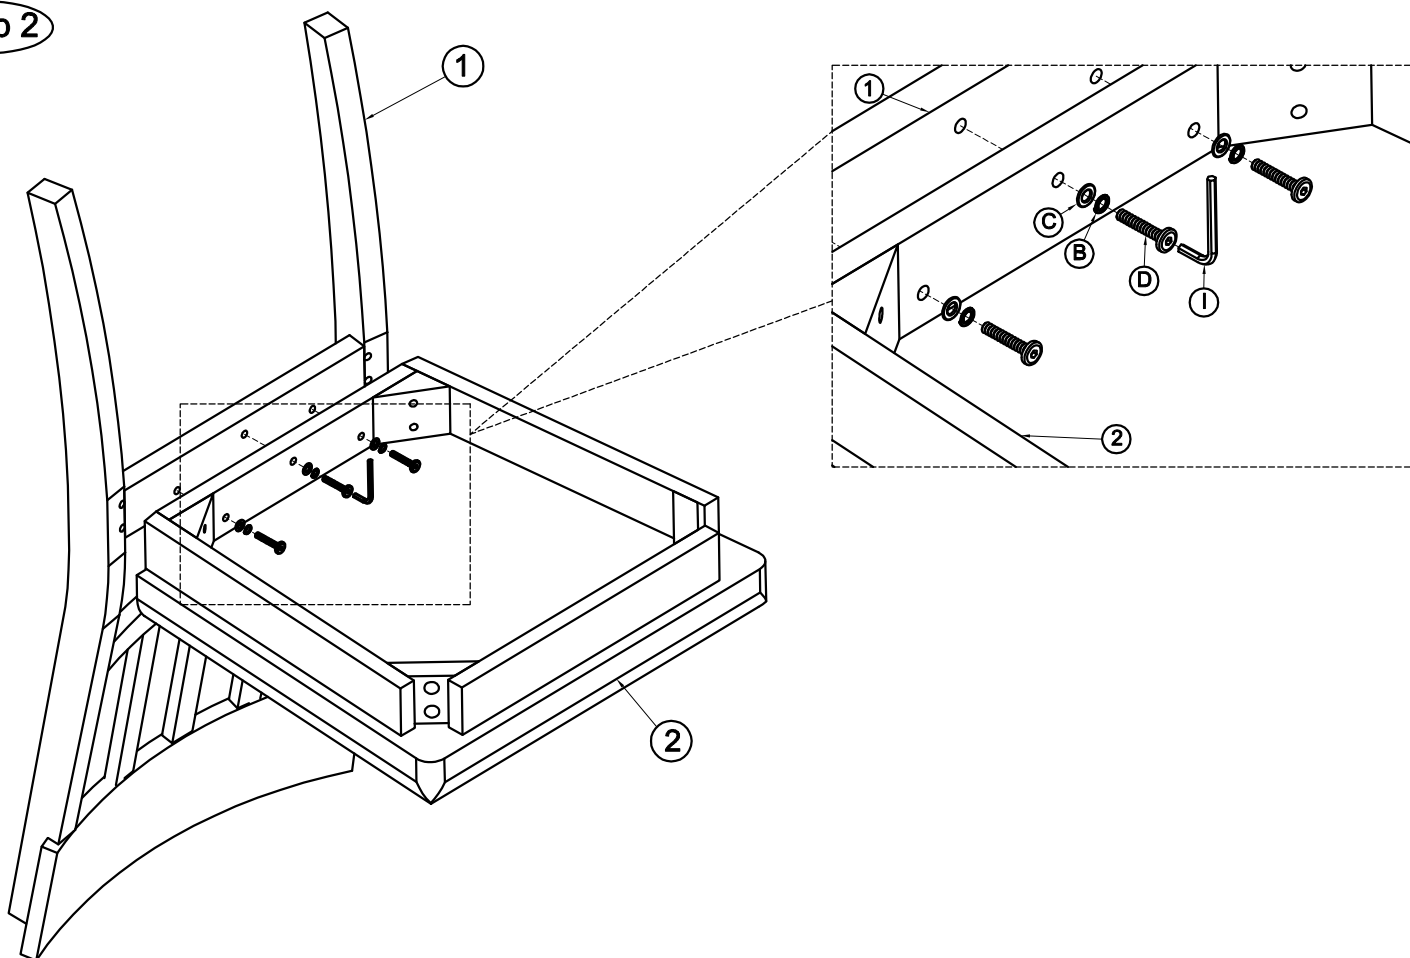



**Step 2**

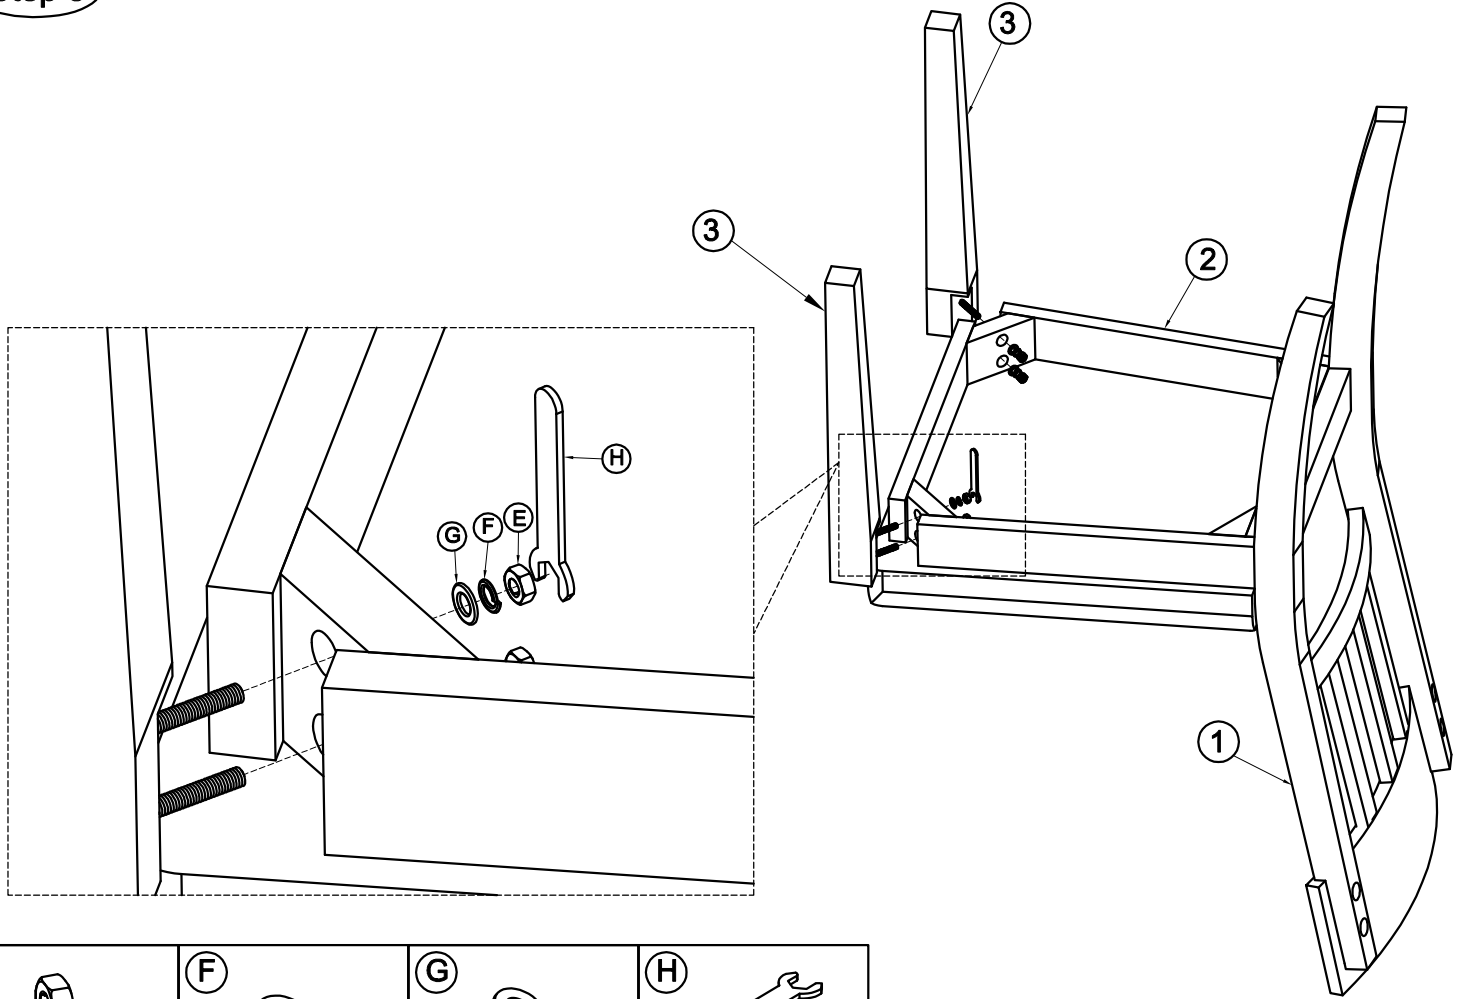

<p><b>D</b></p>  <p>3 pcs Ø13 x M6 x 40 mm</p>	<p><b>B</b></p>  <p>3 pcs 1.2 x M6 x Ø11 mm</p>	<p><b>C</b></p>  <p>3 pcs 2 x M6 x Ø19 mm</p>	<p><b>I</b></p>  <p>1 pc M4 x 60 mm</p>
---	--	--	--

Step 3



<b>E</b>  4 pcs M8 x 115 mm	<b>F</b>  4 pcs 1.2 x M8 x Ø12 mm	<b>G</b>  4 pcs 2 x M8 x Ø19 mm	<b>H</b>  1 pc 12 mm
---	---	---	--

COMPLETE

