



ASSEMBLYINSTRUCTIONS




















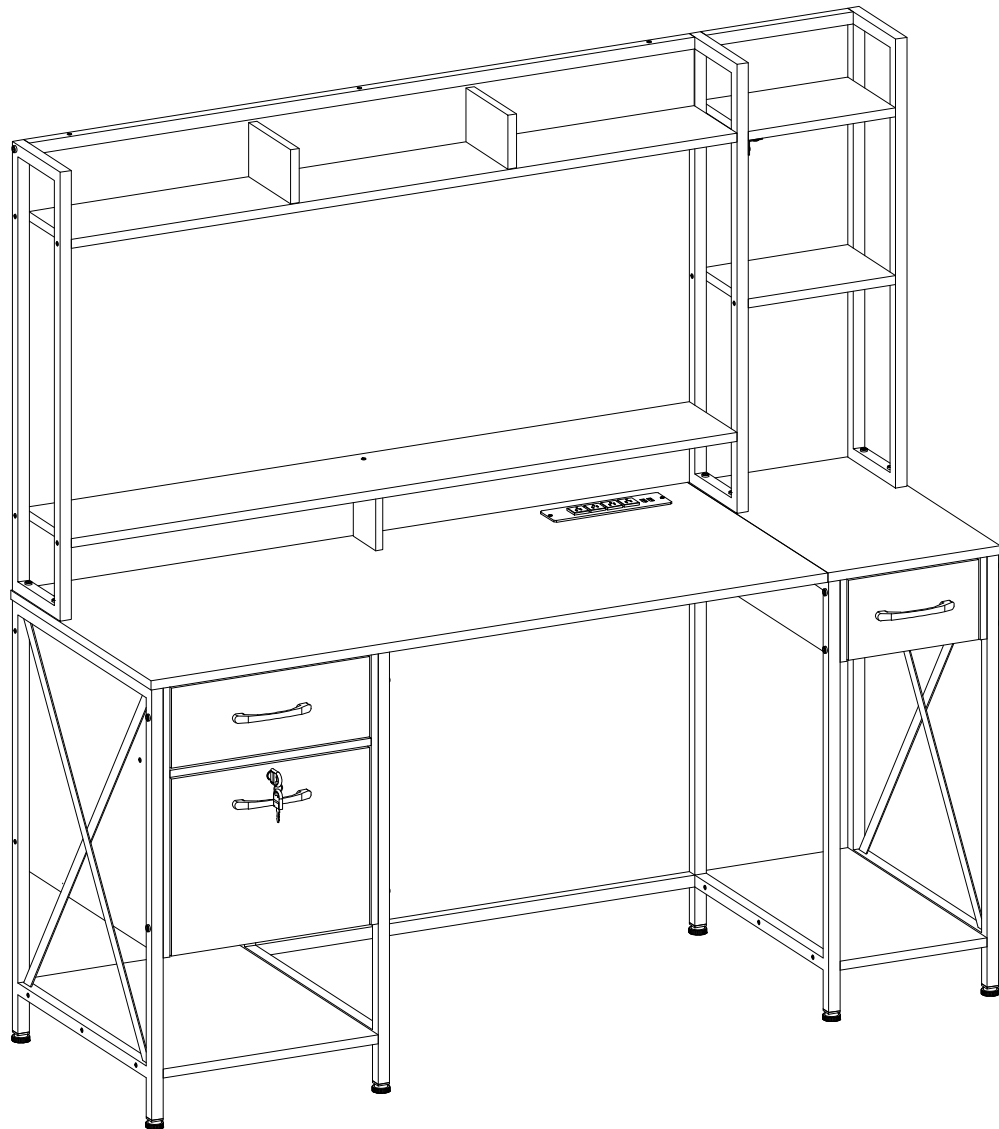






















OFFICE DECK












Notice:

1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only after all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

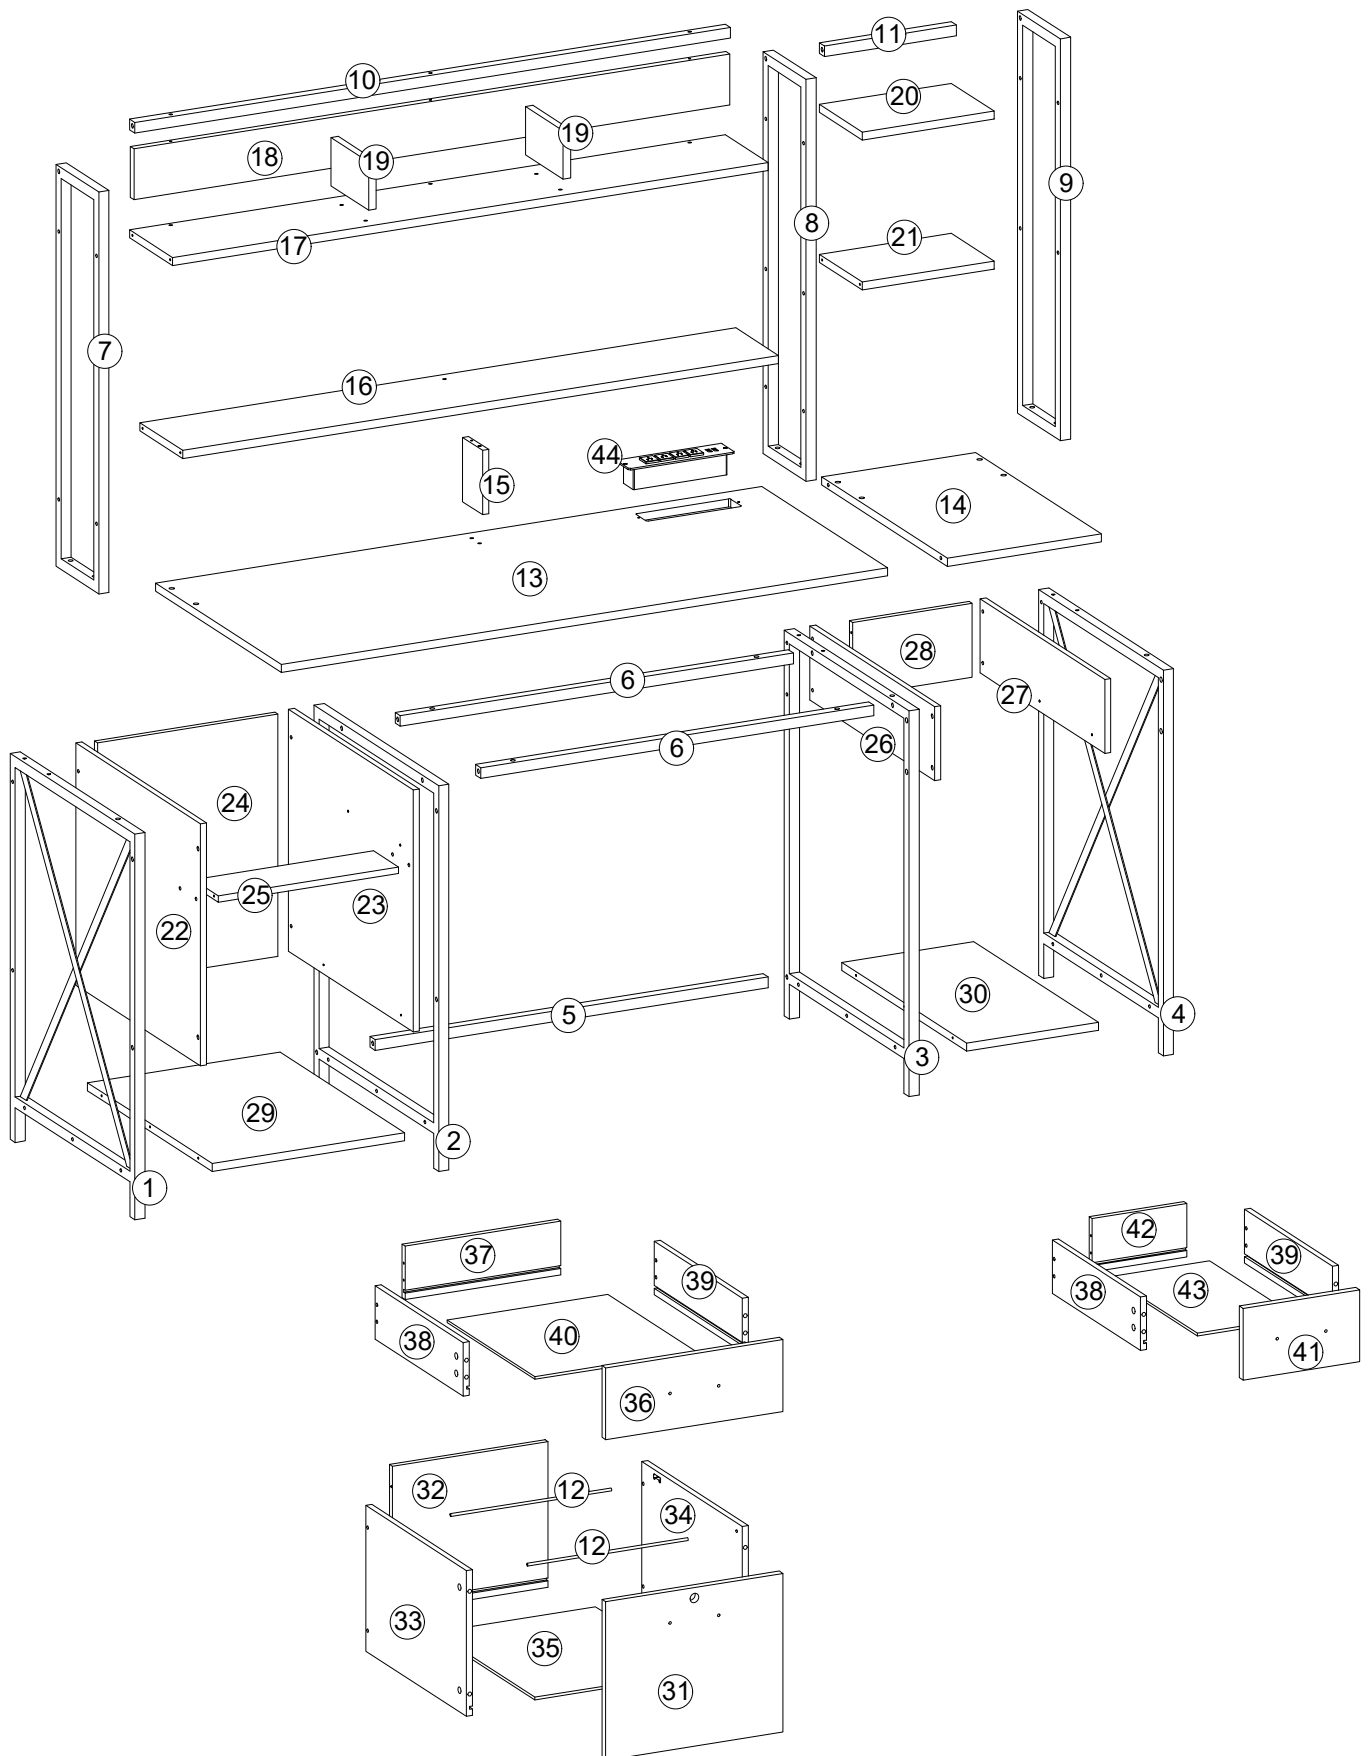


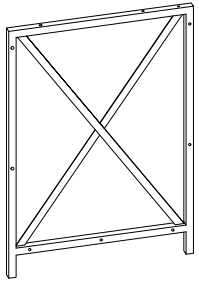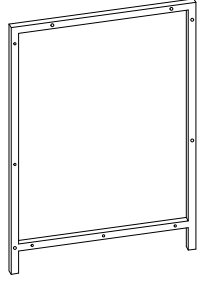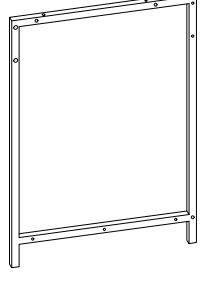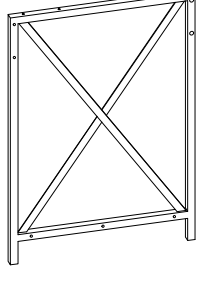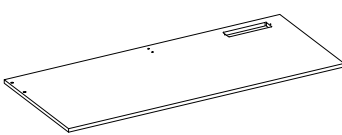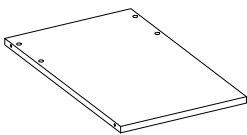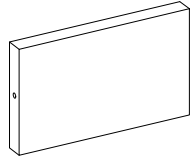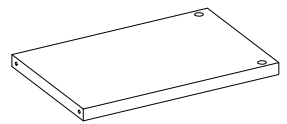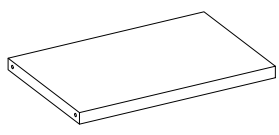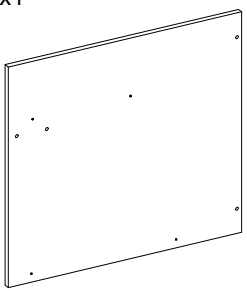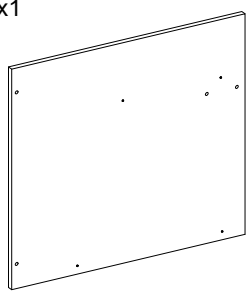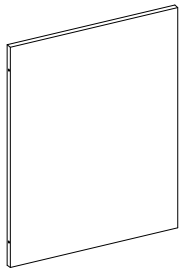① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x2 	⑦ x1 	⑧ x1 
⑨ x1 	⑩ x1 	⑪ x1 	⑫ x2 
⑬ x1 	⑭ x1 	⑮ x1 	⑯ x1 
⑰ x1 	⑱ x1 	⑲ x2 	⑳ x1 
㉑ x1 	㉒ x1 	㉓ x1 	㉔ x1 

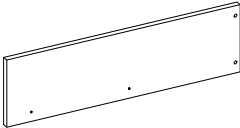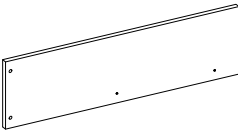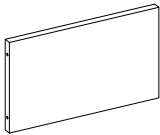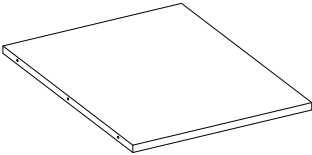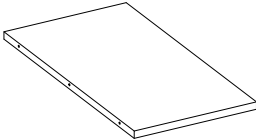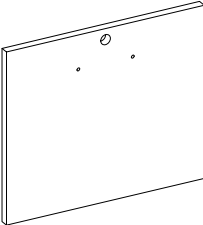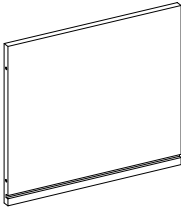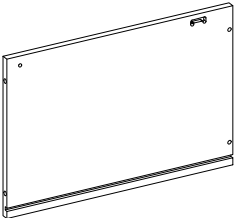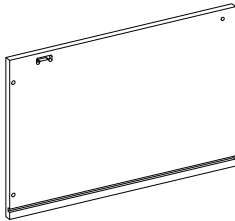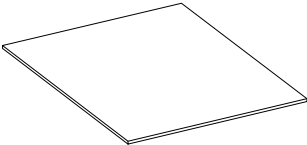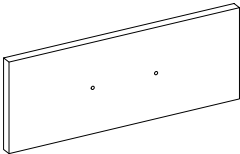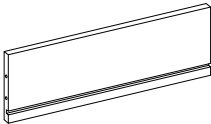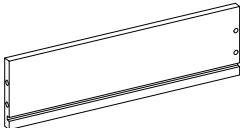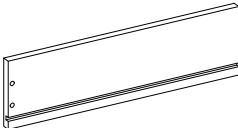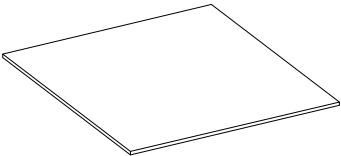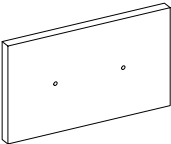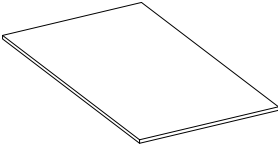25 x1 	26 x1 	27 x1 	28 x1 
29 x1 	30 x1 	31 x1 	32 x1 
33 x1 	34 x1 	35 x1 	36 x1 
37 x1 	38 x2 	39 x2 	40 x1 
41 x1 	42 x1 	43 x1 	44 x1 

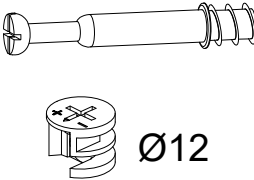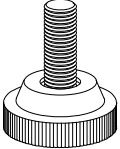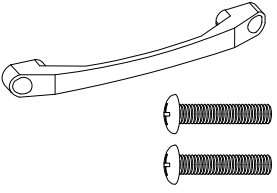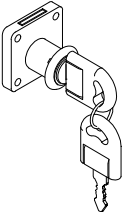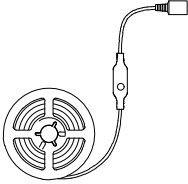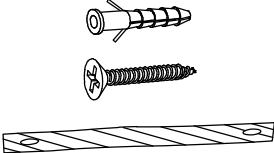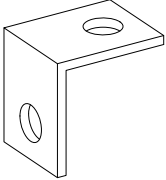
A x 8+1  M6x45	B x 15+1  M6x28	C x 4+1  M6x12	D x 6+1  M6x40
E x 8+1  Ø5x50	F x 56+5  Ø5x40	G x 12+1  Ø12	H x 8  M6*15
I x 1  M6*40+20	J x 4+1  Ø8x30	K x 30+3  3.5x12	L x 3  M4x18
M x 2  M4x10	N x 1 	O x 4+1  3.5x16	P x 1 
Q x 1  400mm	R x 2  350mm	S x 2 	T x 2 

TOOL

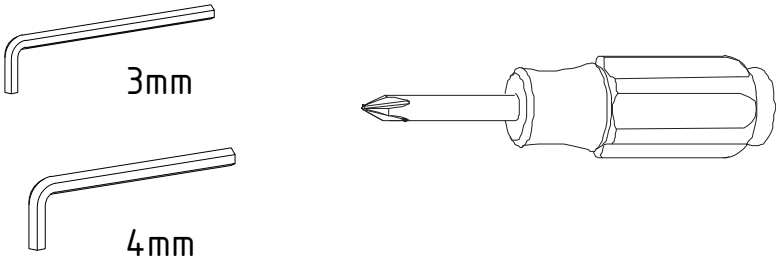


Don't confuse left and right hardware.

Q x 1

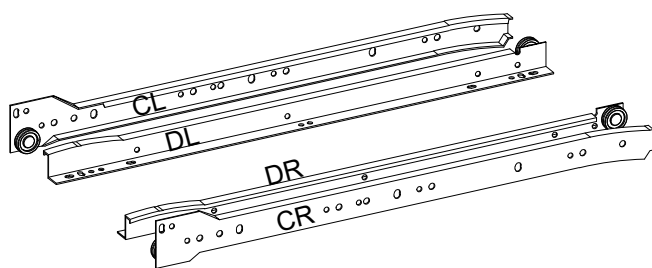


400mm

R x 2

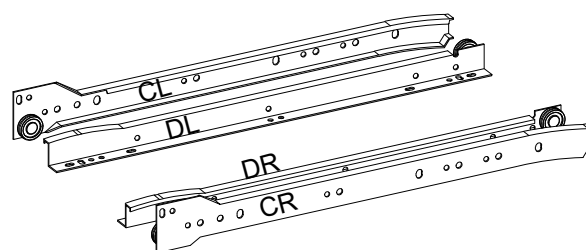


350mm

Attention

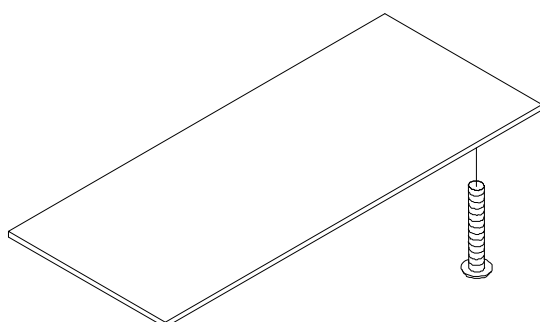


example

Be sure to use the proper screws to avoid damaging the parts

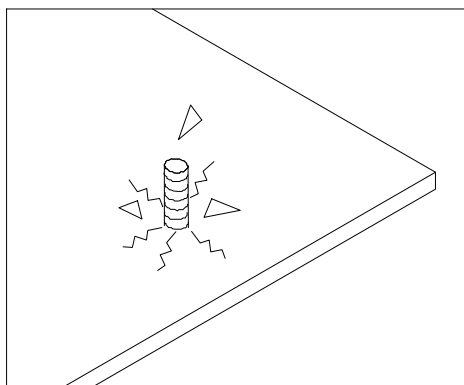

✗


Wrong screws can cause the plank to crack

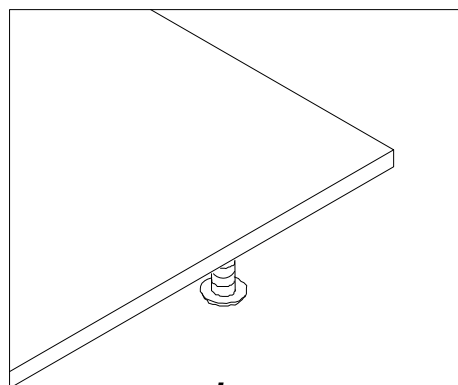

✓


The right screw is the right size


STEP 1

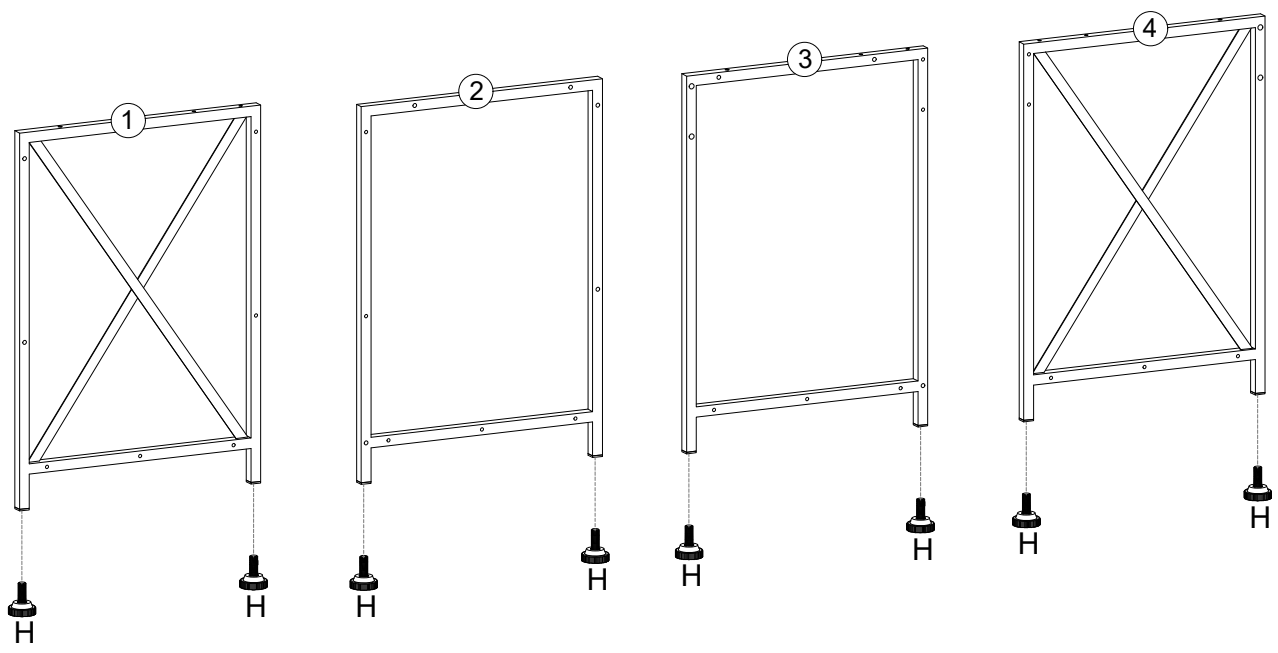

H  x8

STEP 2

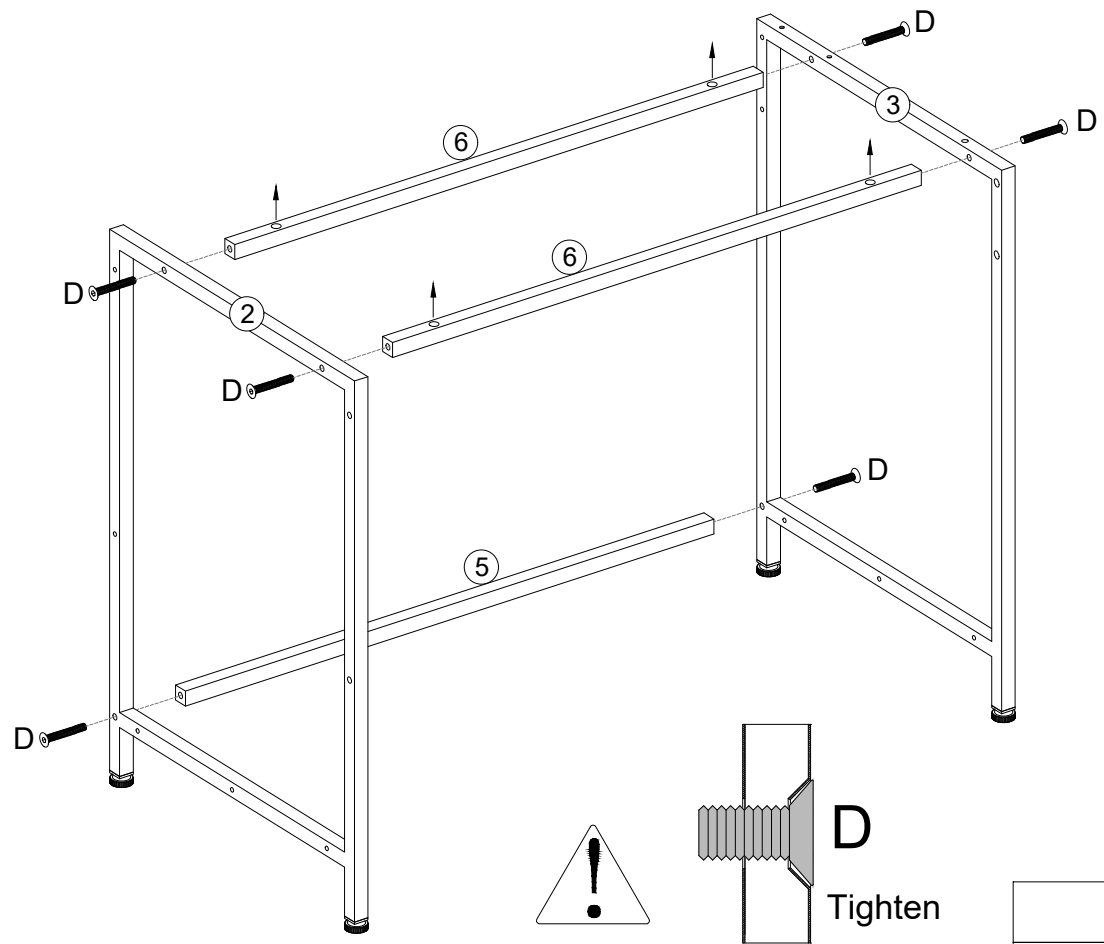


 4mm
D  x6

STEP 3





Pay attention to direction

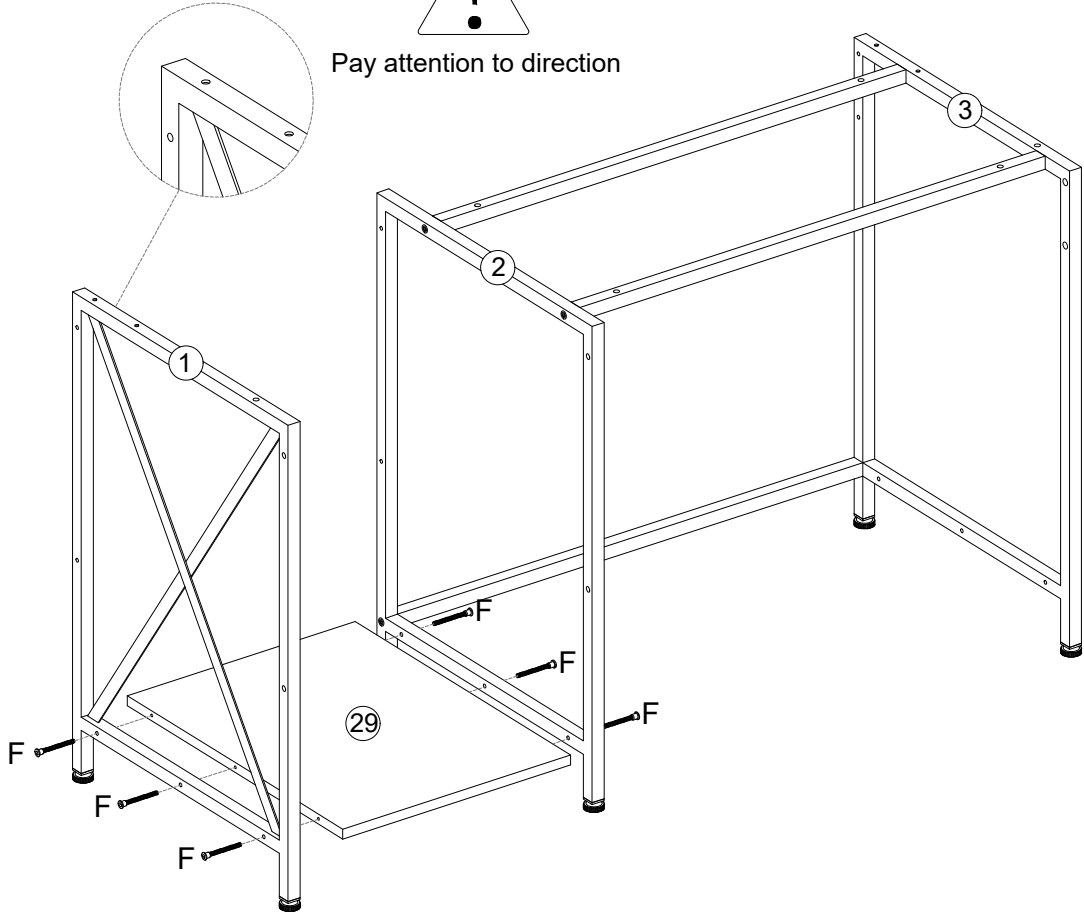


	3mm
F	x6

STEP 4

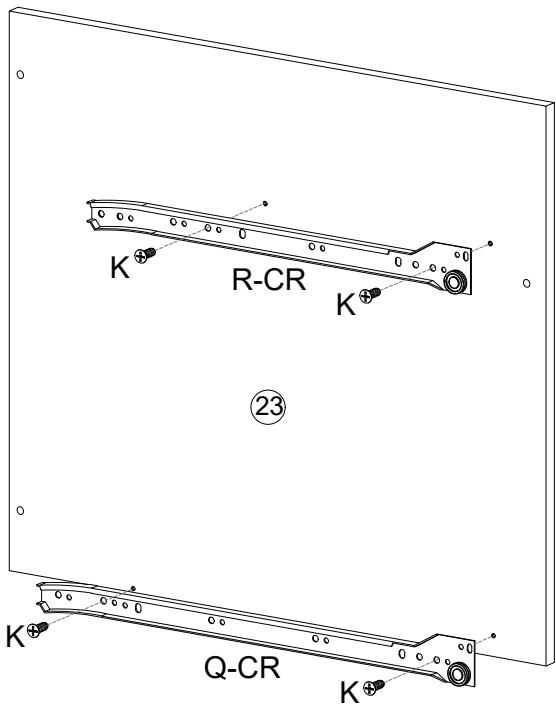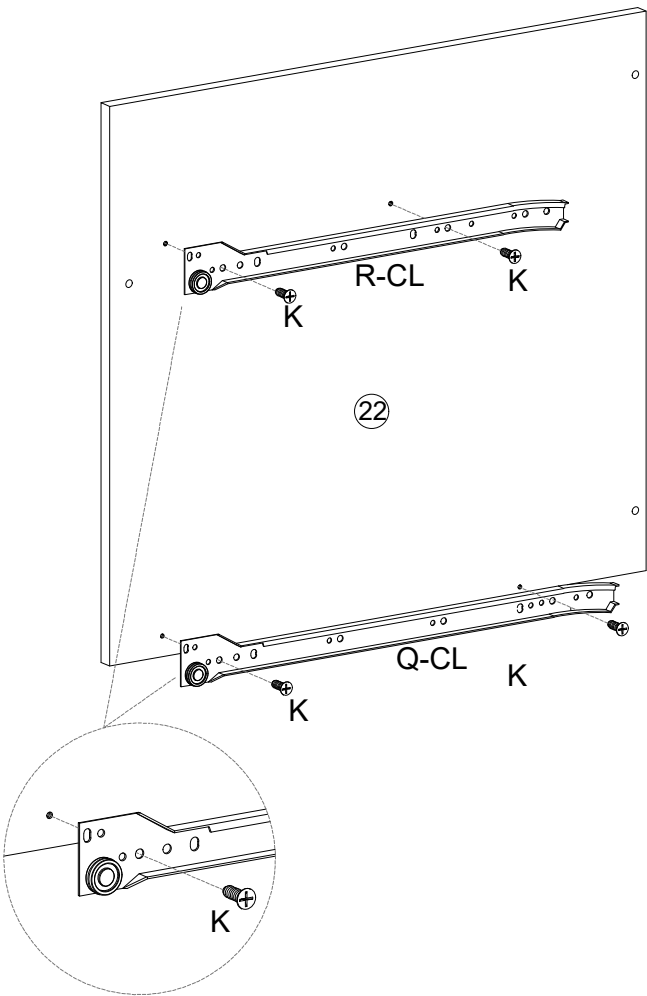


K		x8
Q		x1
R		x1

STEP 5


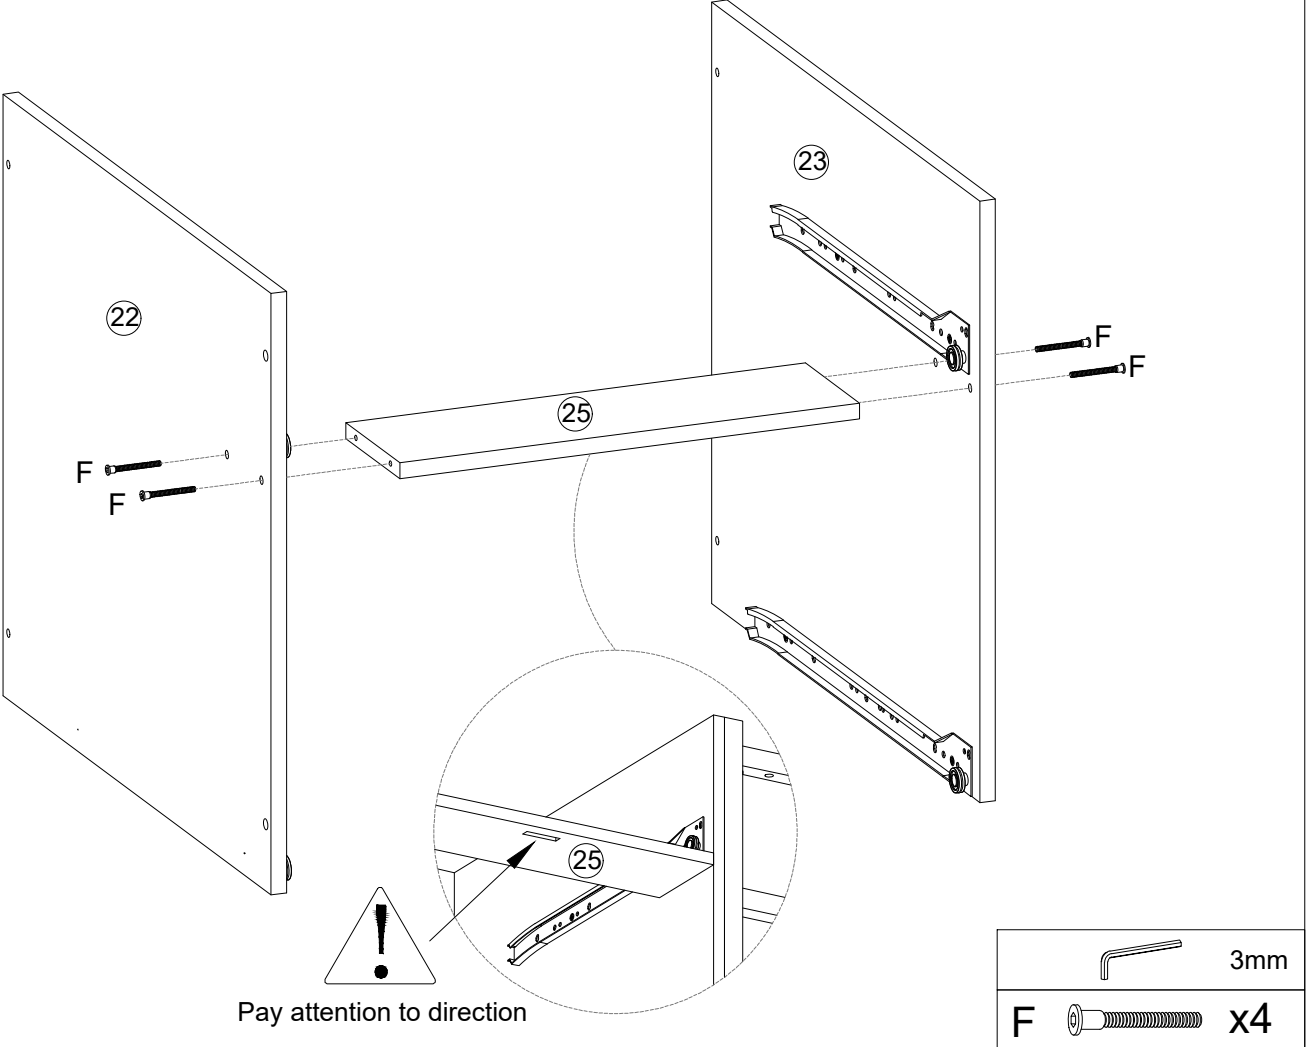


STEP 6

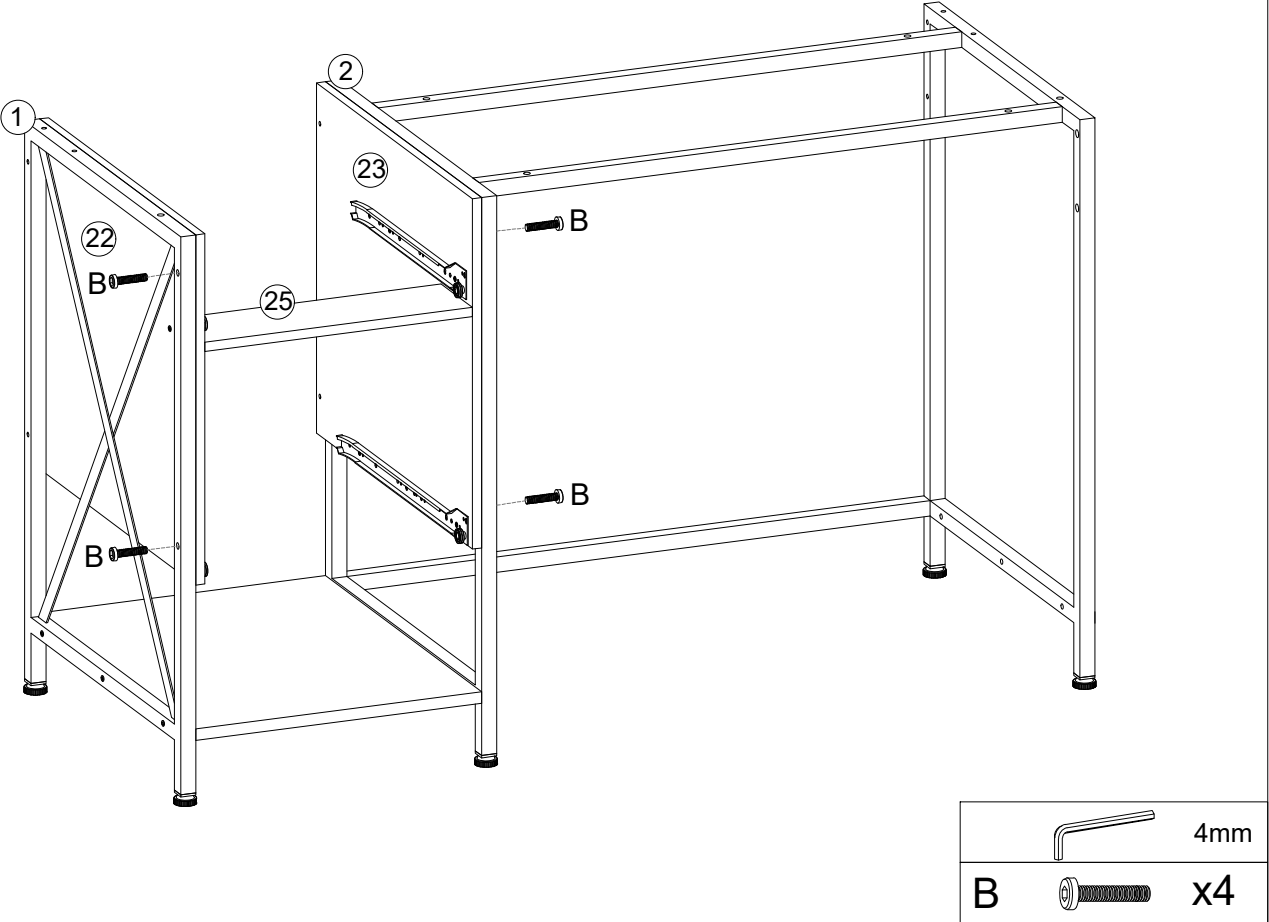


STEP 7



If you encounter "state 2" during the installation process, please loosen the corresponding screws of each part in time, adjust slowly, and then slowly tighten all the screws after the adjustment is completed.

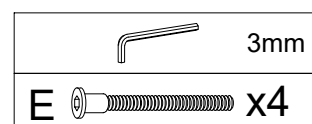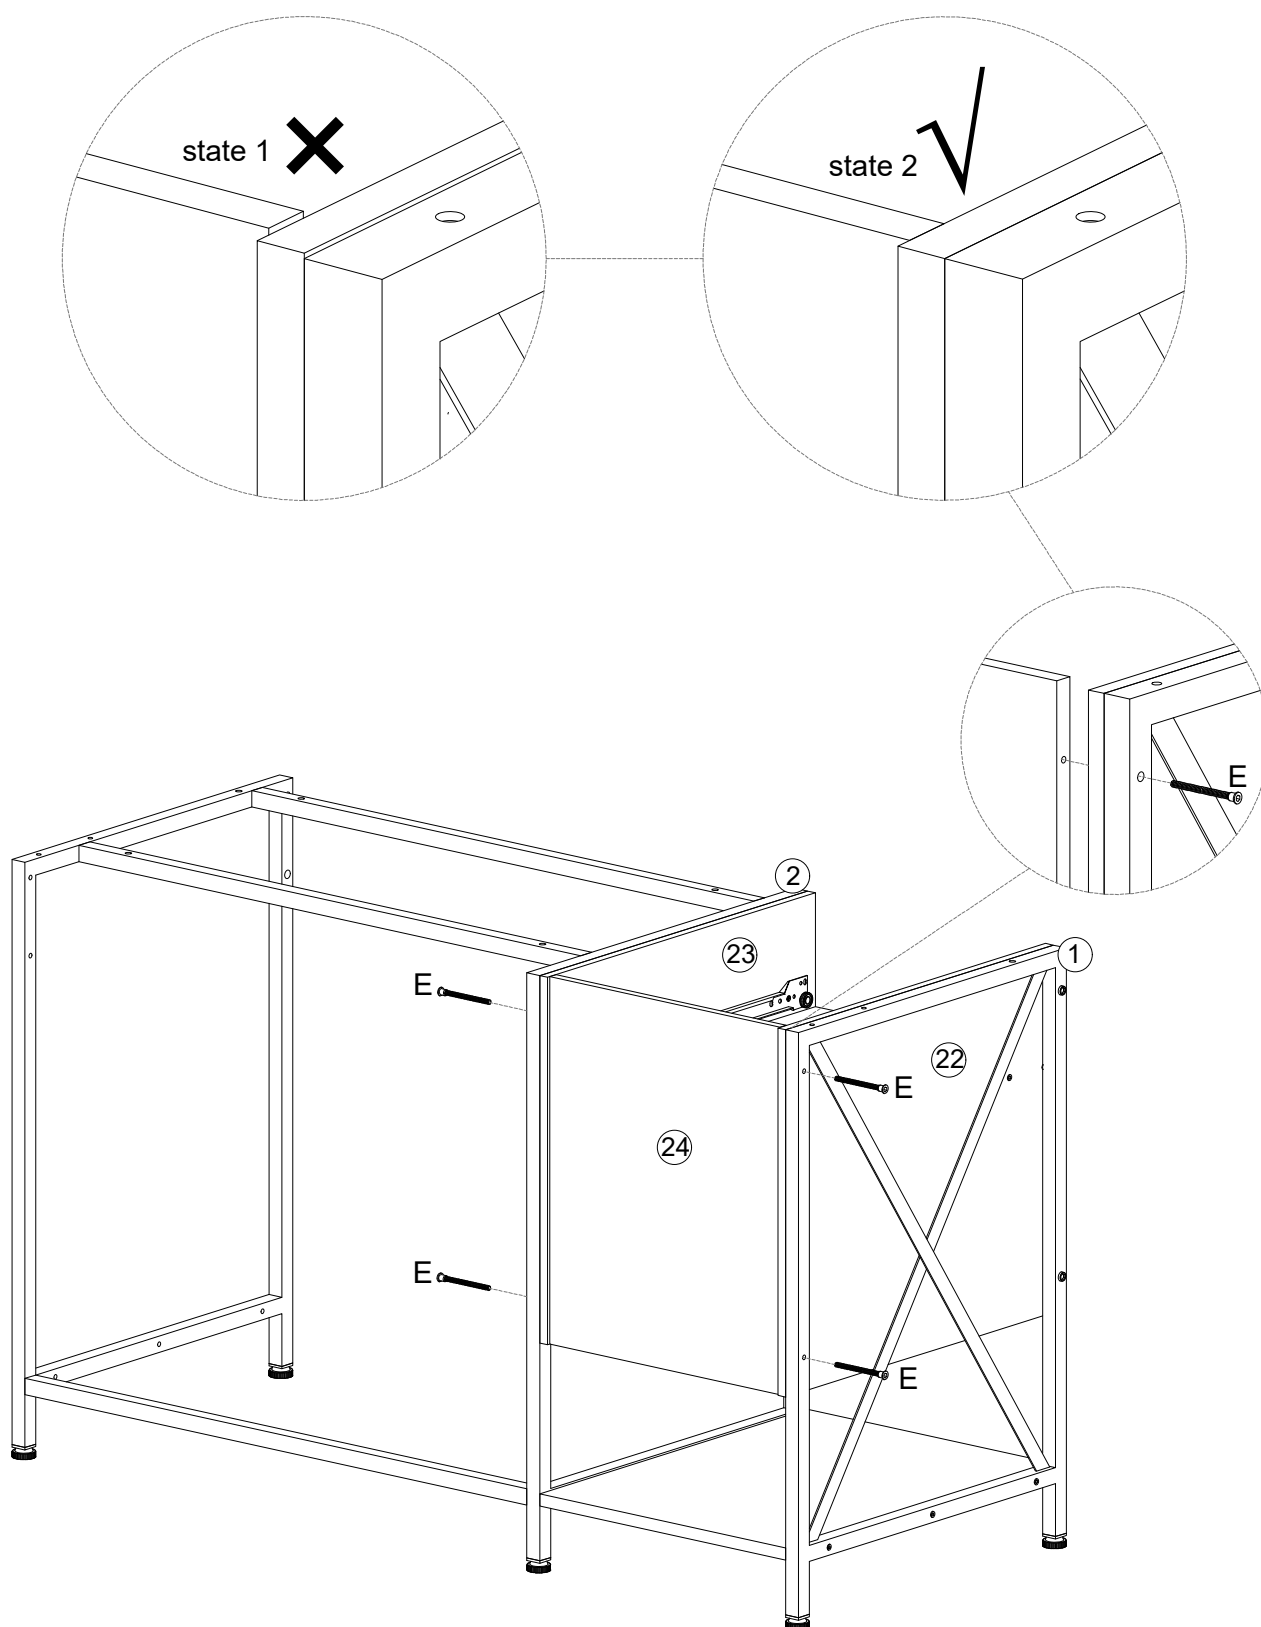

STEP 8







Pay attention to direction

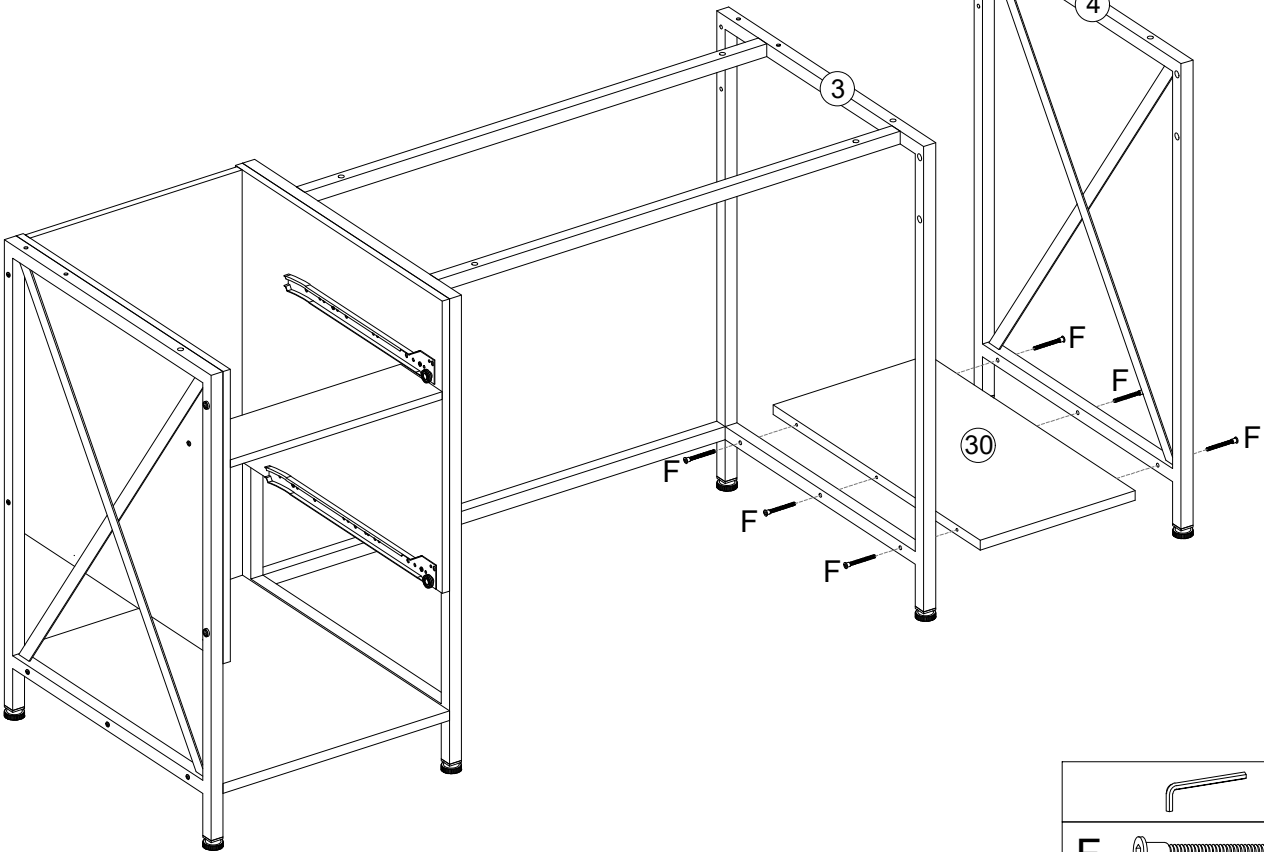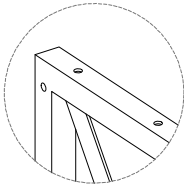


	3mm
F	x6

STEP 9

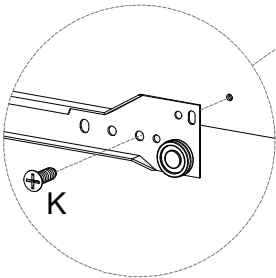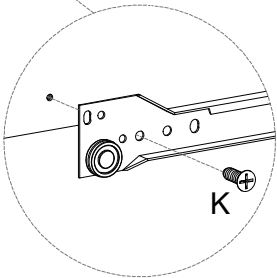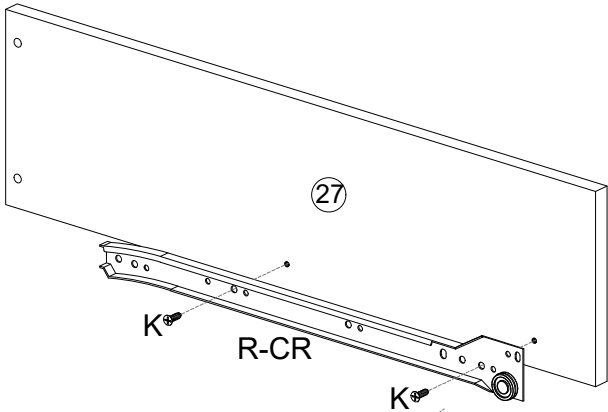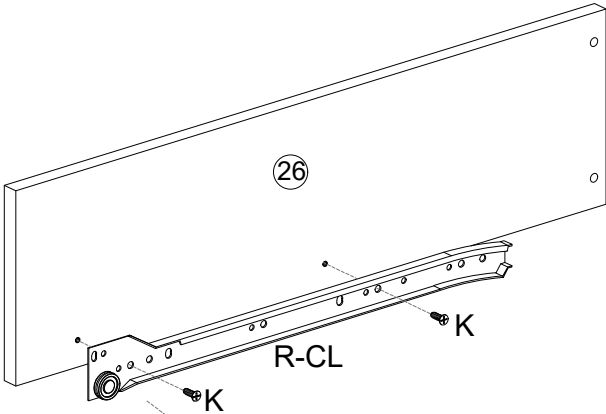


K		x4
R		x1

STEP 10

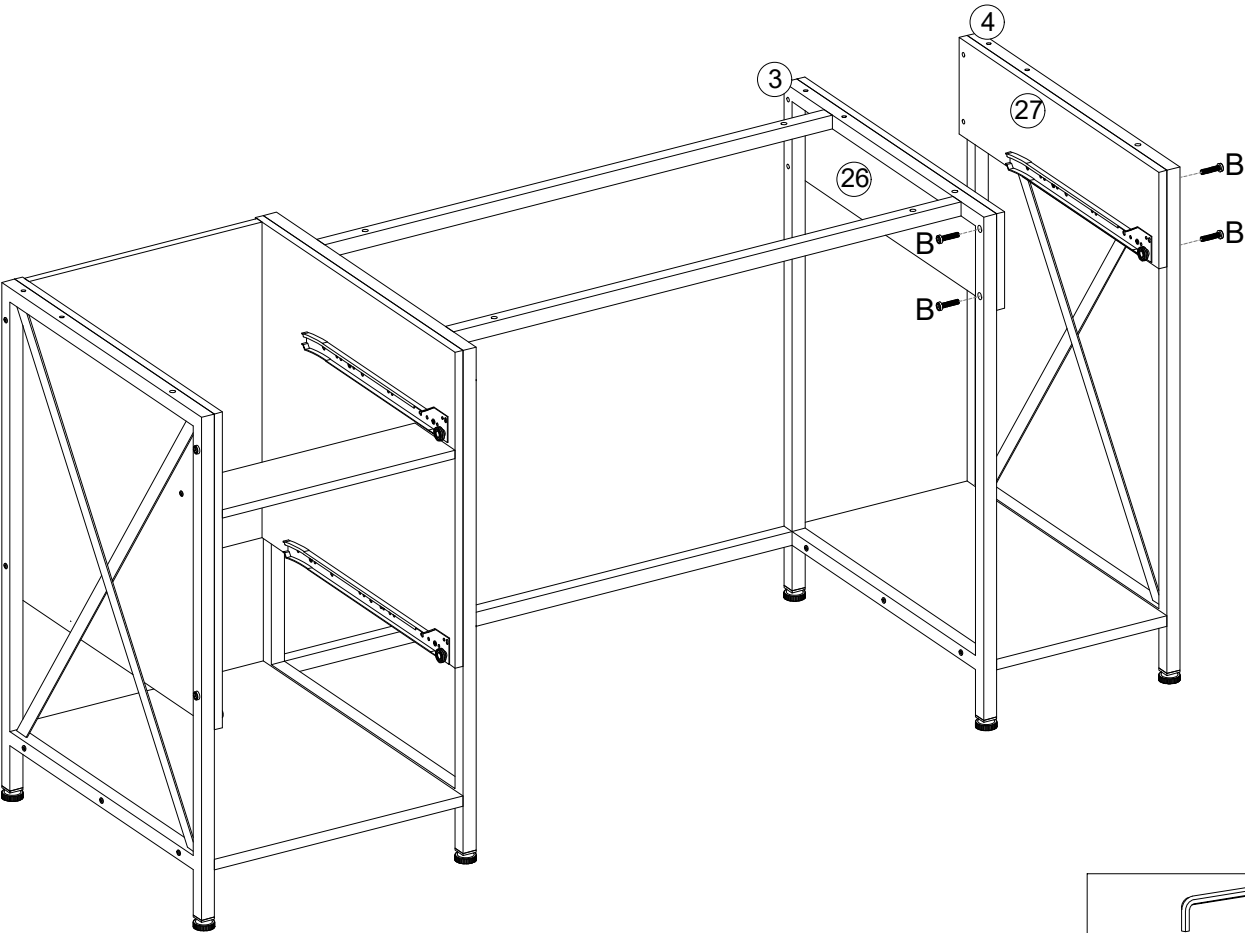


	4mm
B 	x4

STEP 11

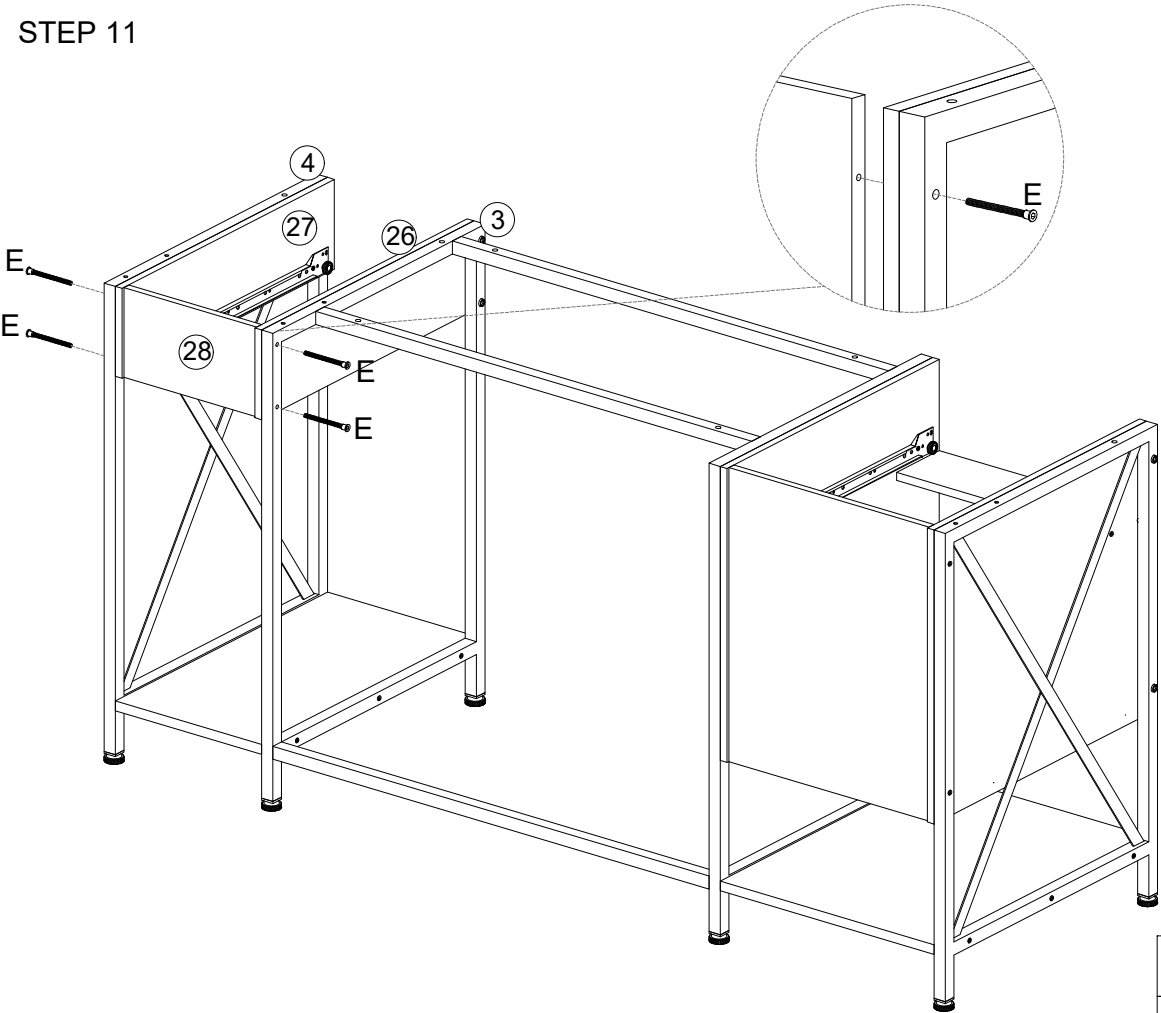


	3mm
E 	x4


STEP 12

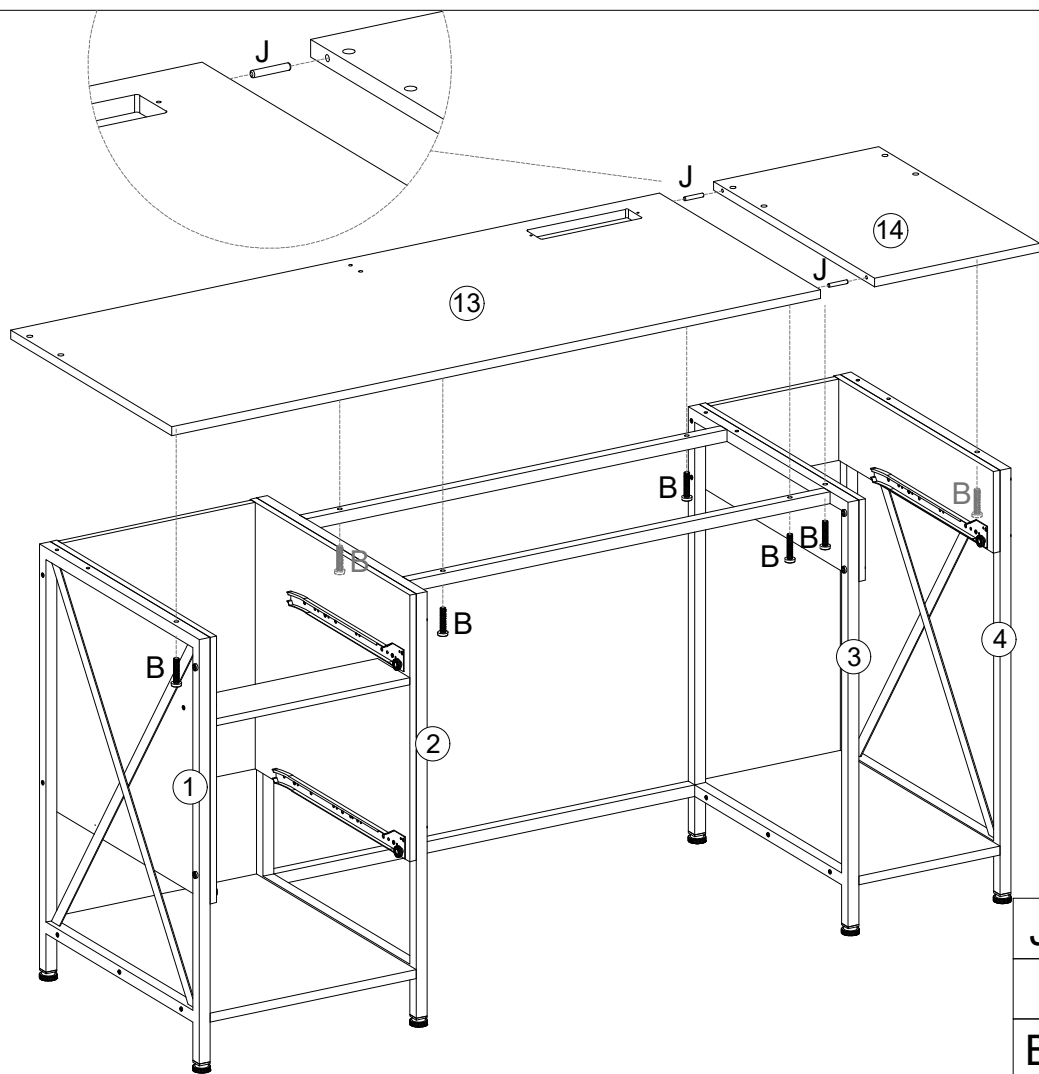


STEP 13

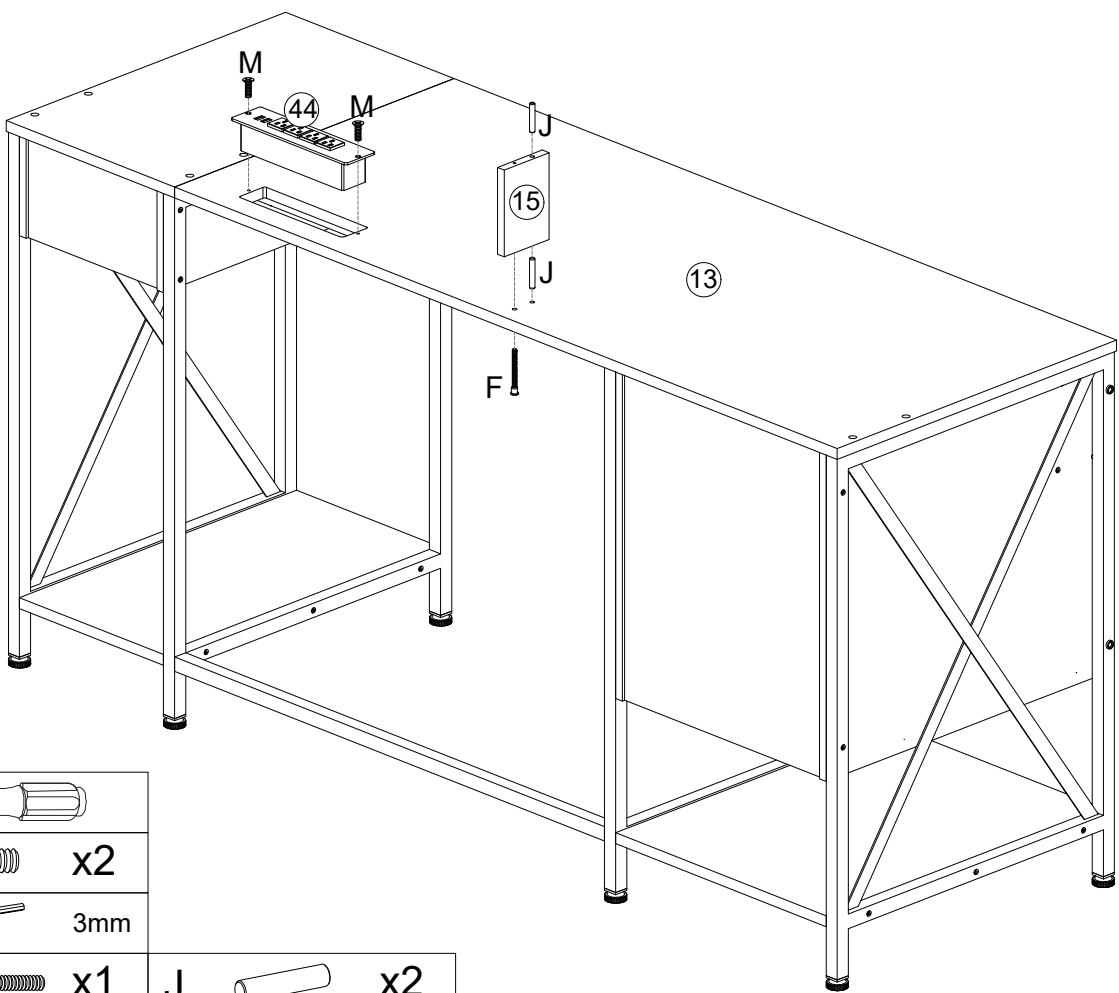


STEP 14

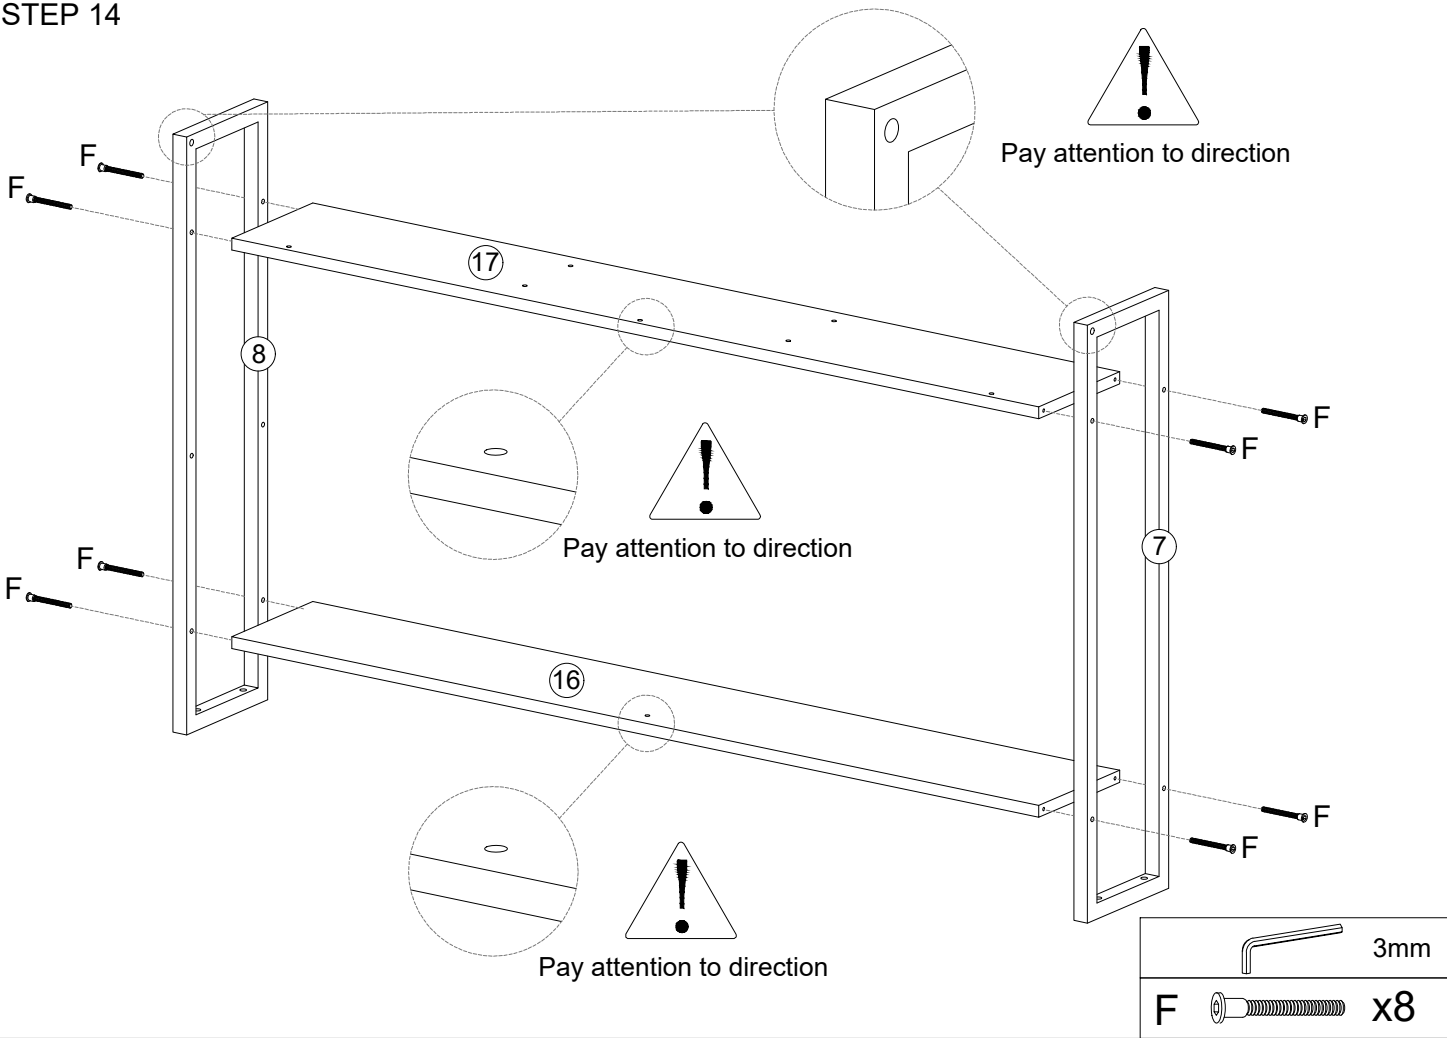

STEP 15

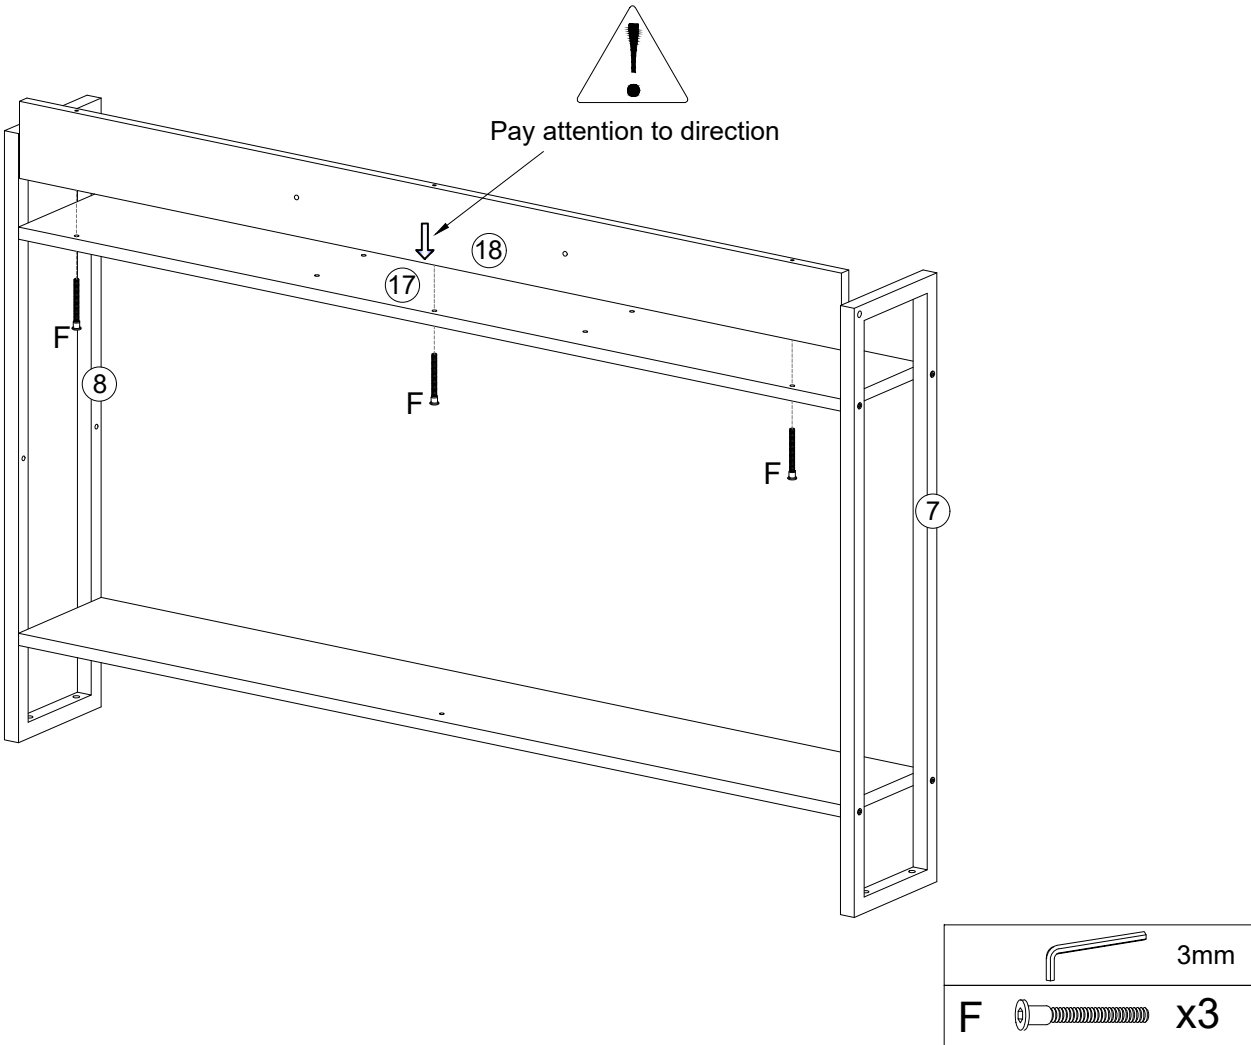


STEP 16

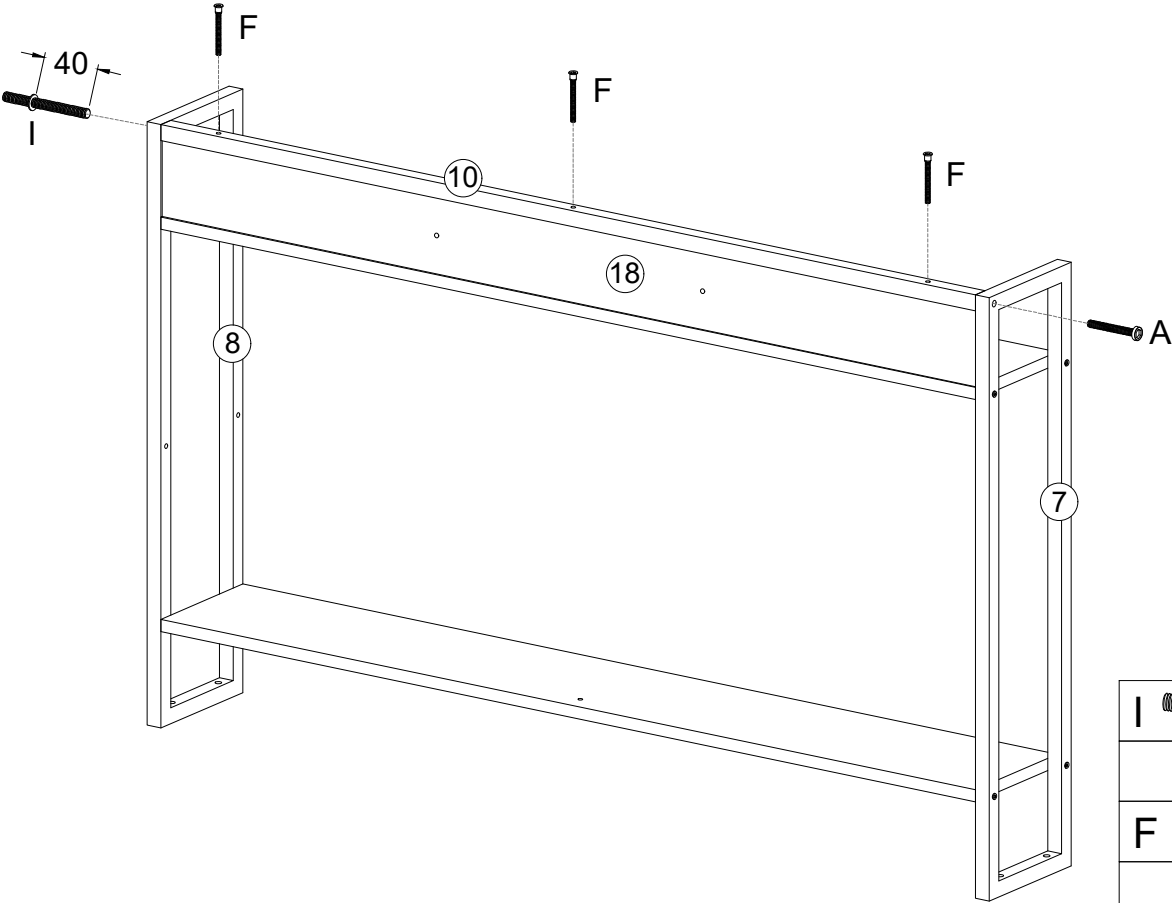


I		x1
		3mm
F		x3
		4mm
A		x1

STEP 17

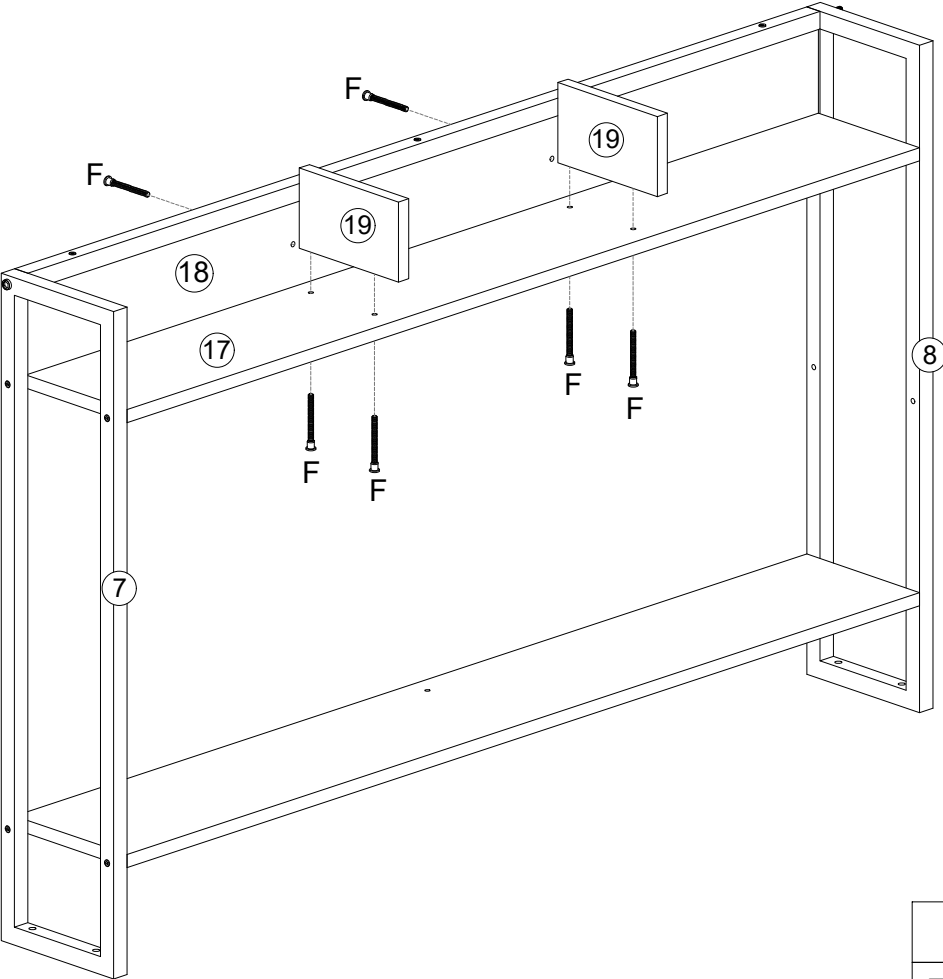



		3mm
F		x6

STEP 18

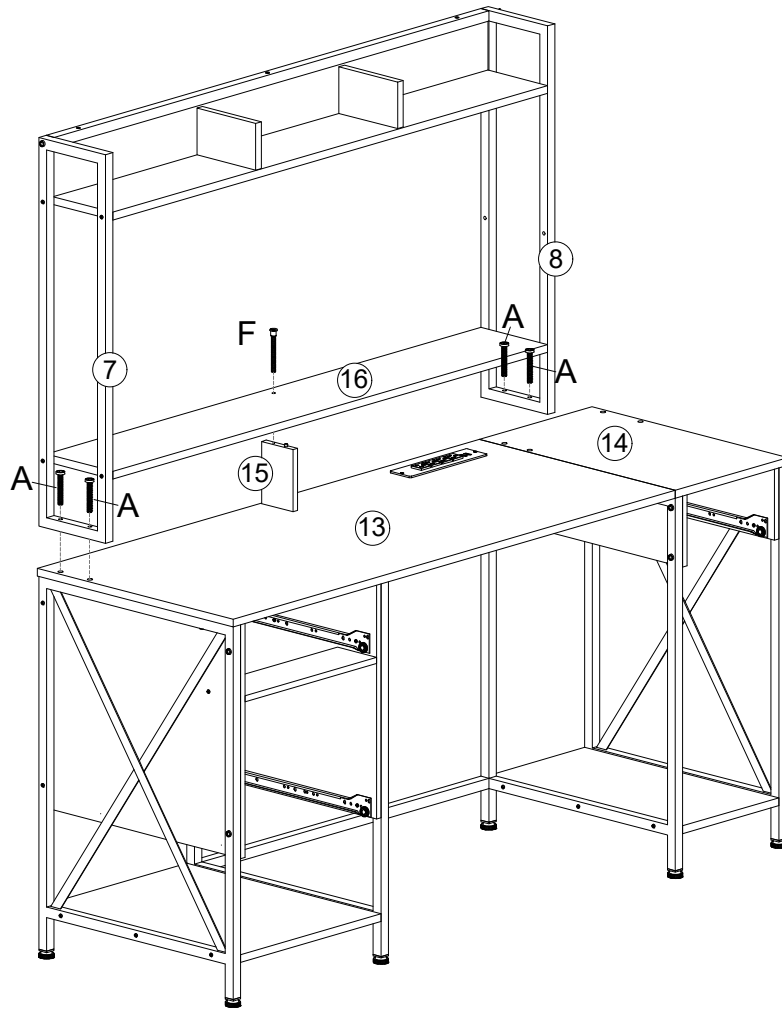


		3mm
F		x1
		4mm
A		x4

STEP 19

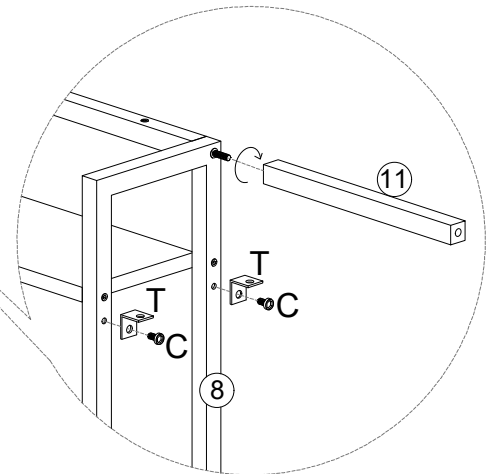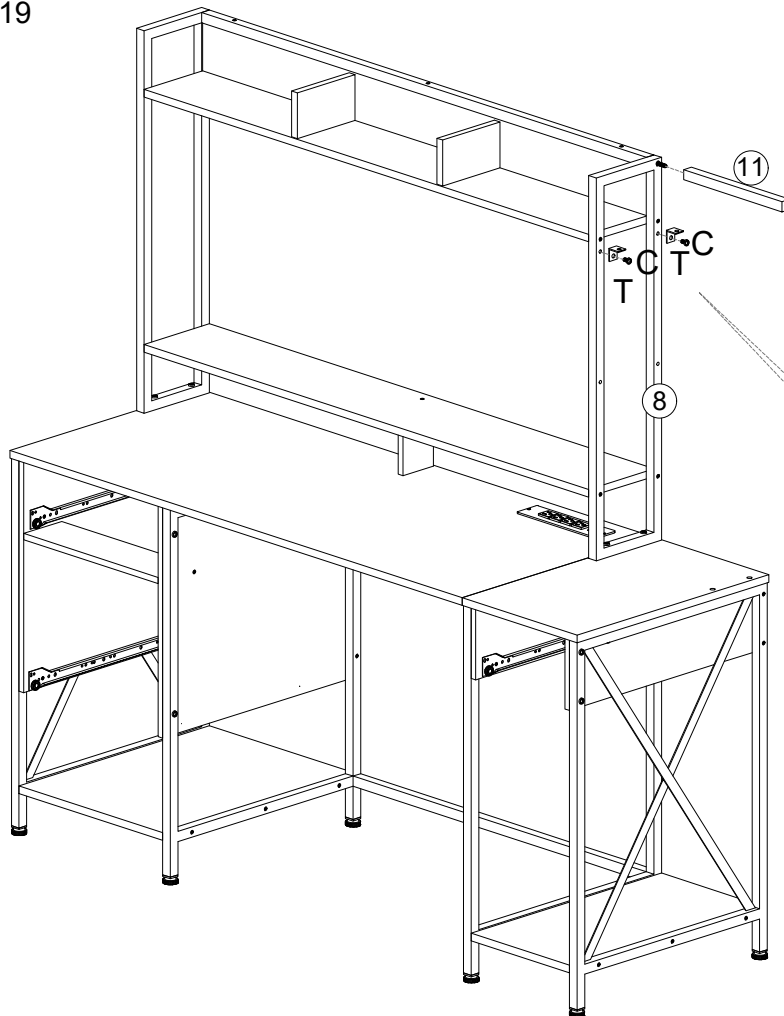


		4mm
C		x2
T		x2

STEP 20

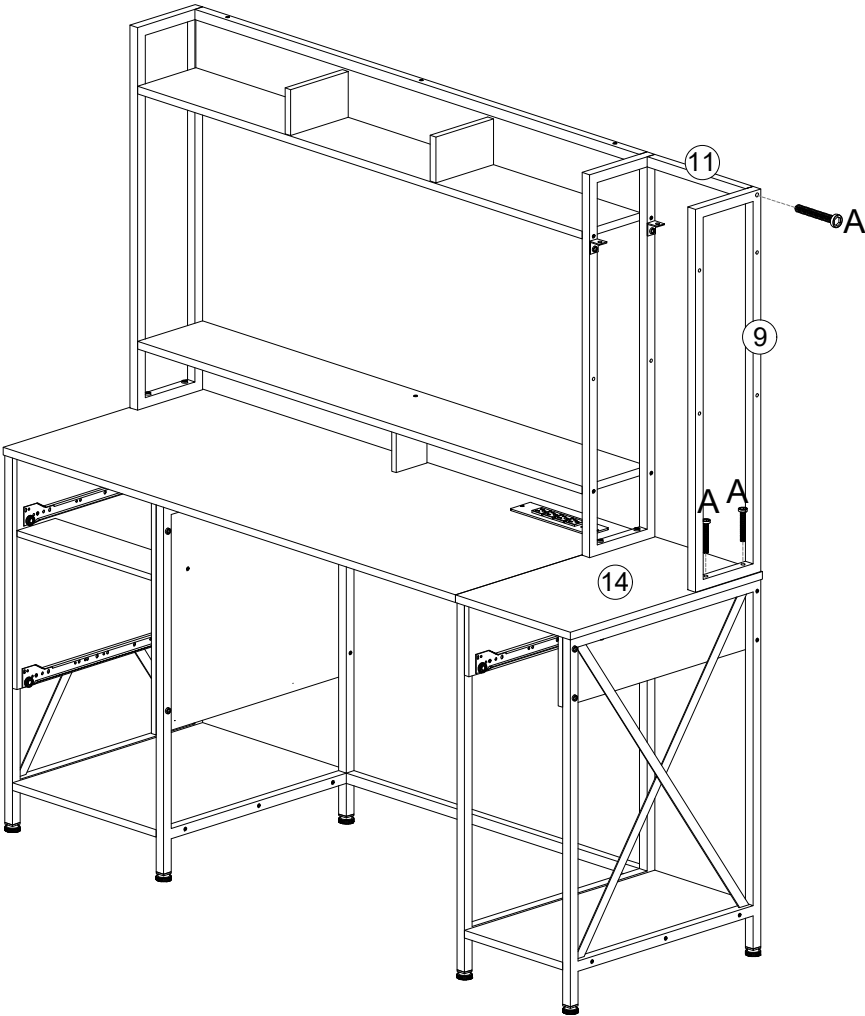


	4mm
A	 x3

STEP 21

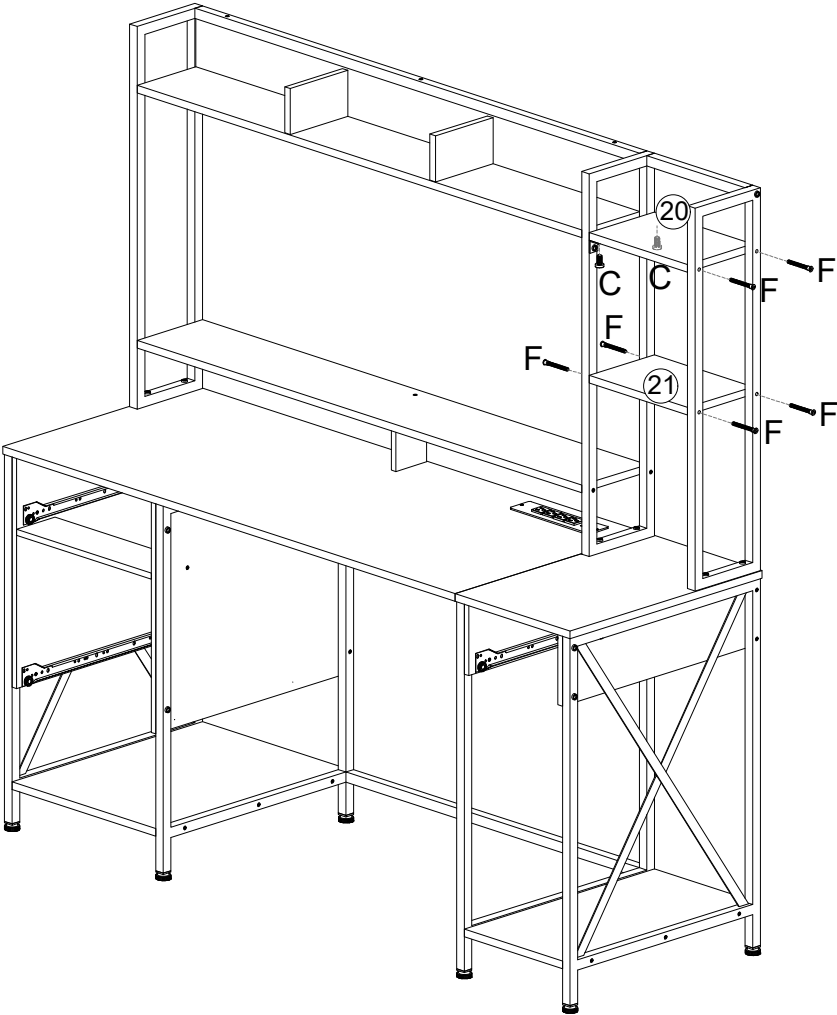


	3mm
F	 x6
	4mm
C	 x2


STEP 22

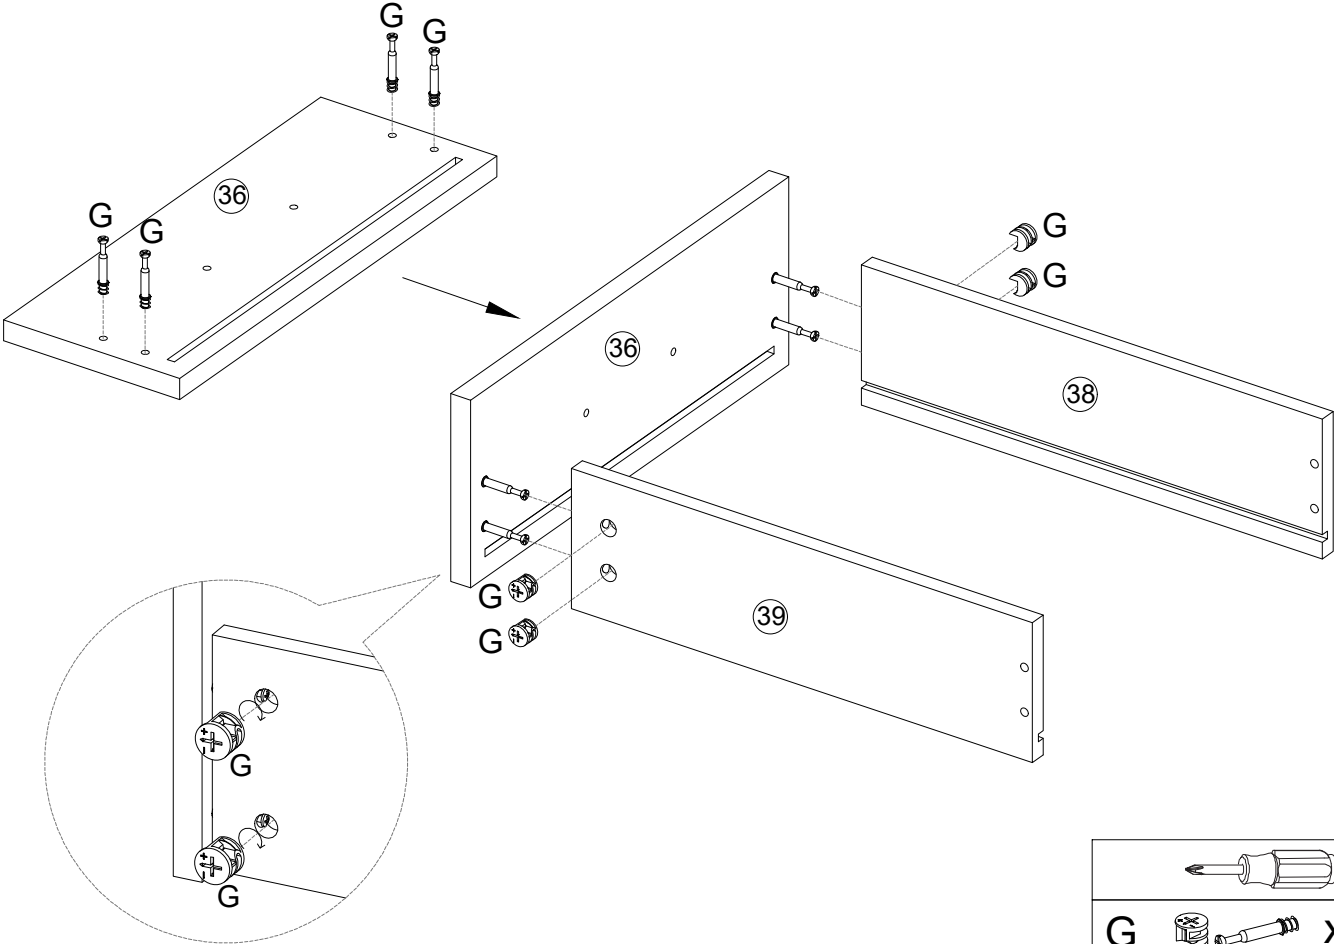


STEP 23

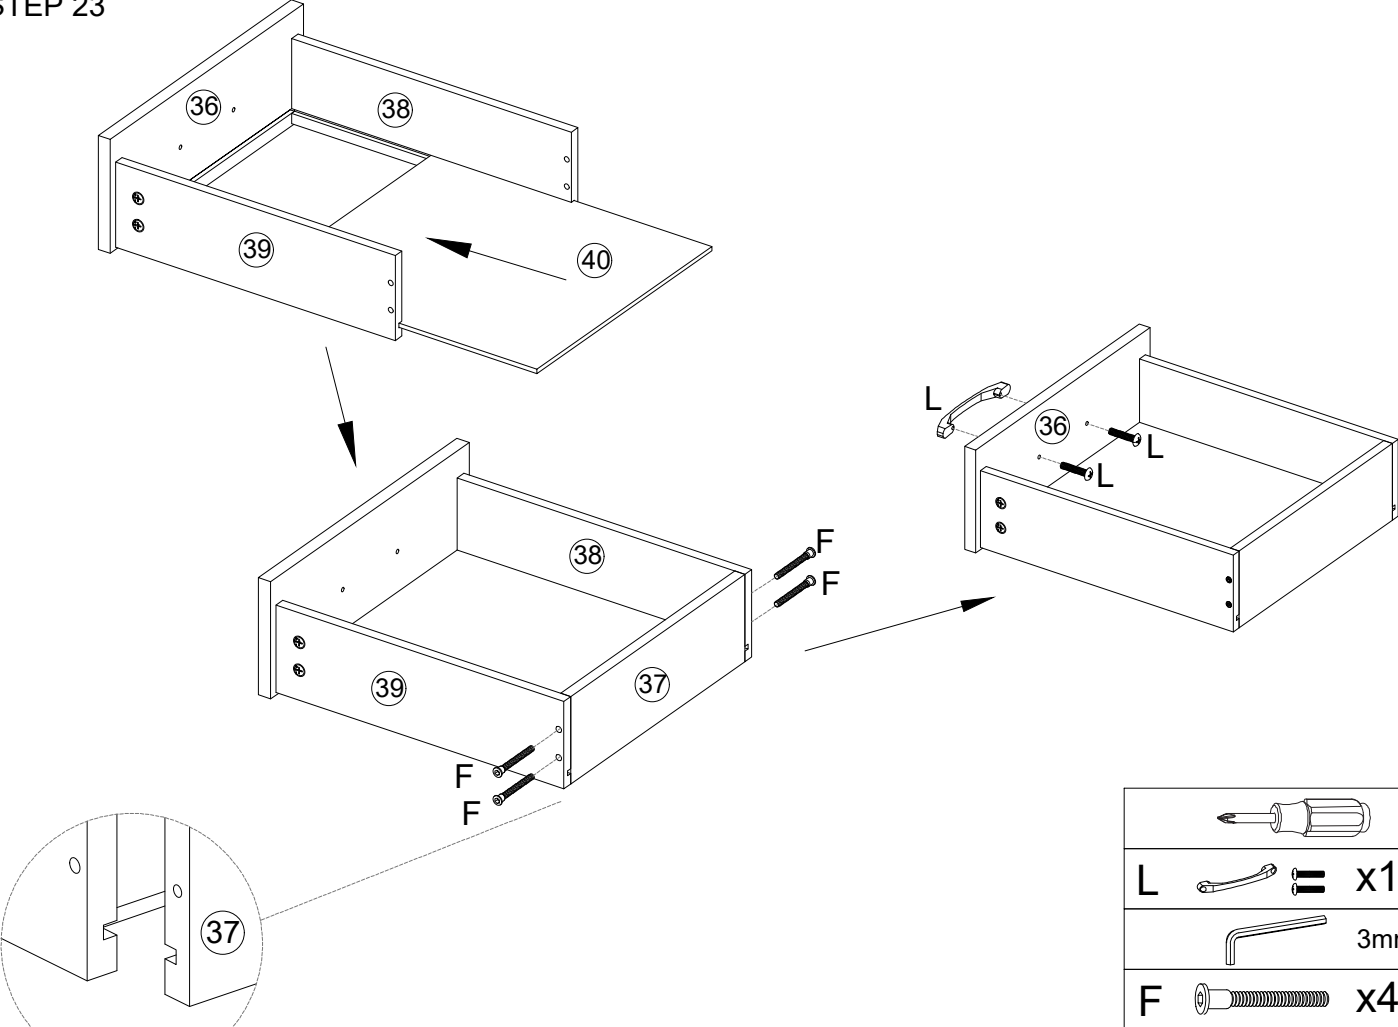


STEP 24

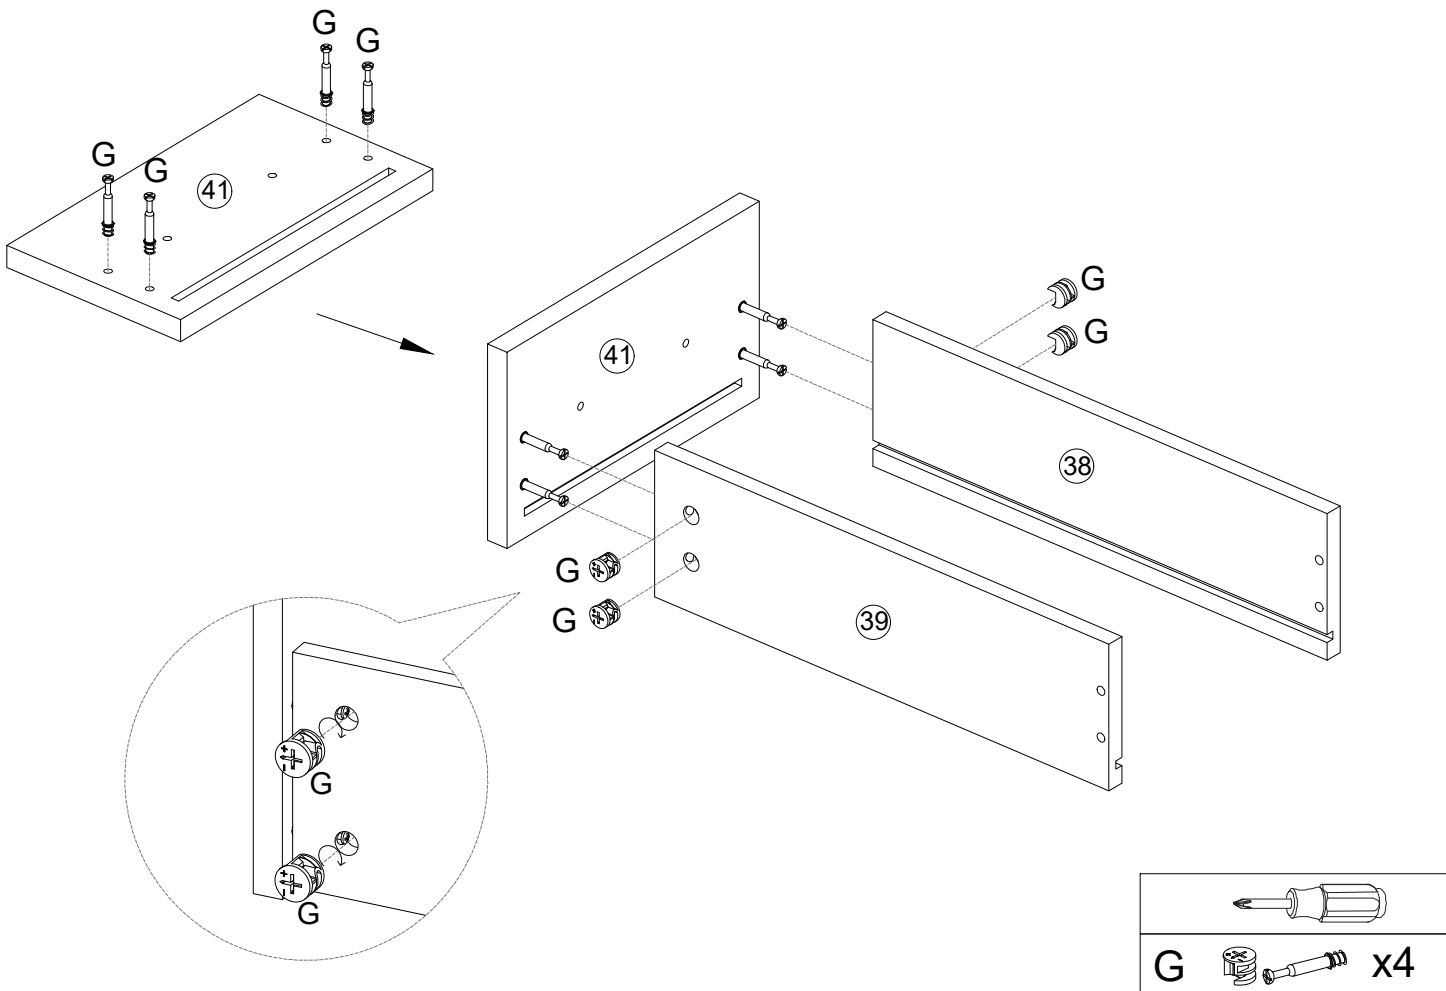

STEP 25

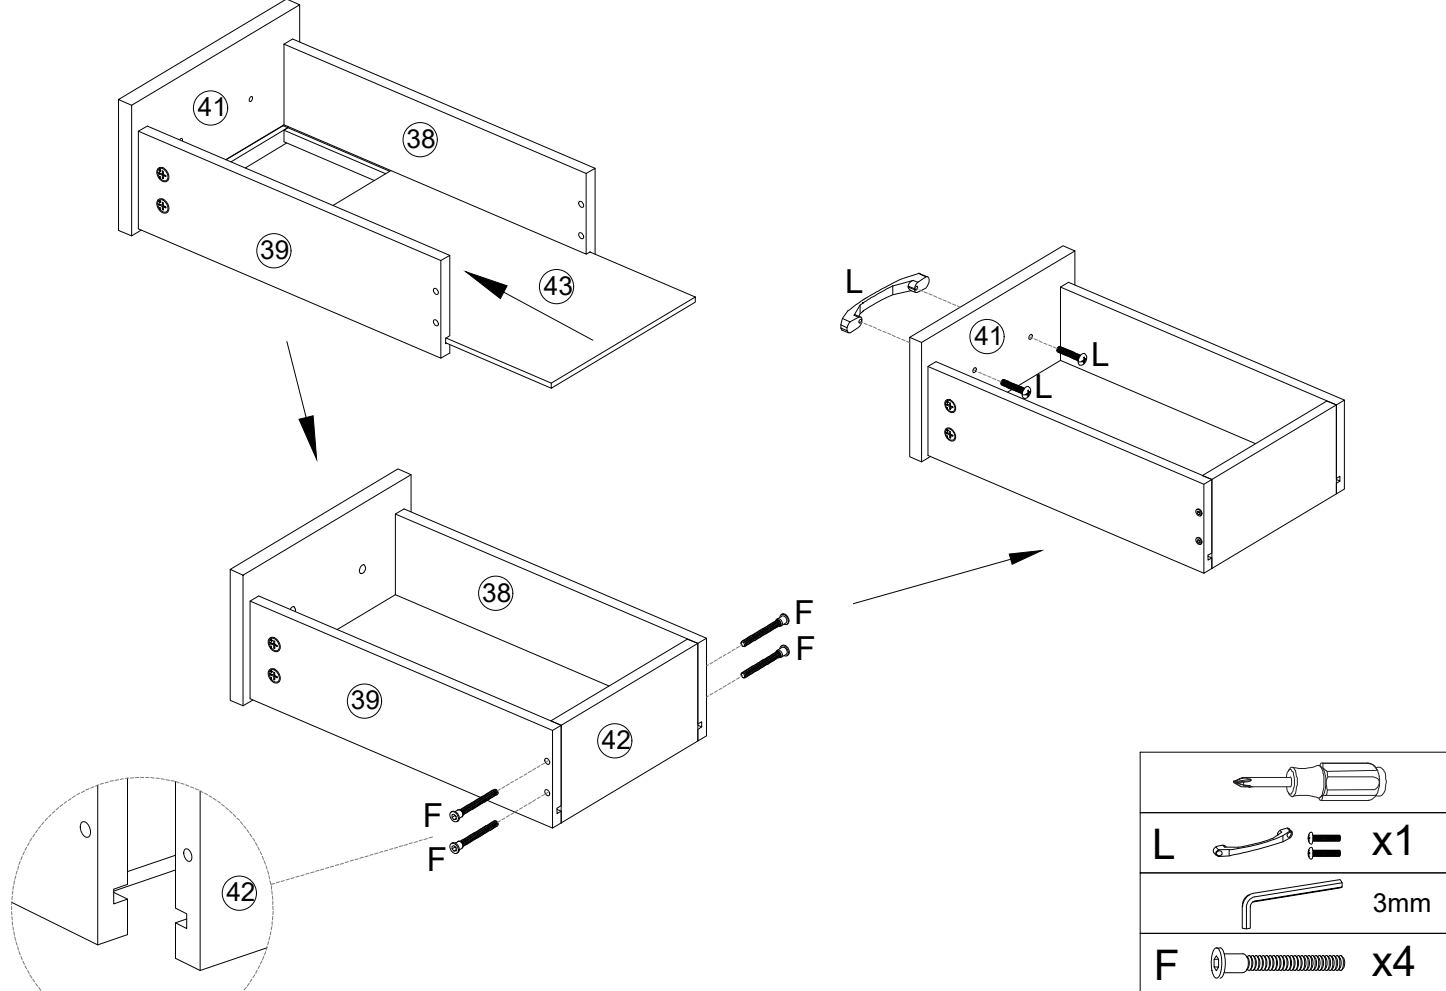


STEP 26

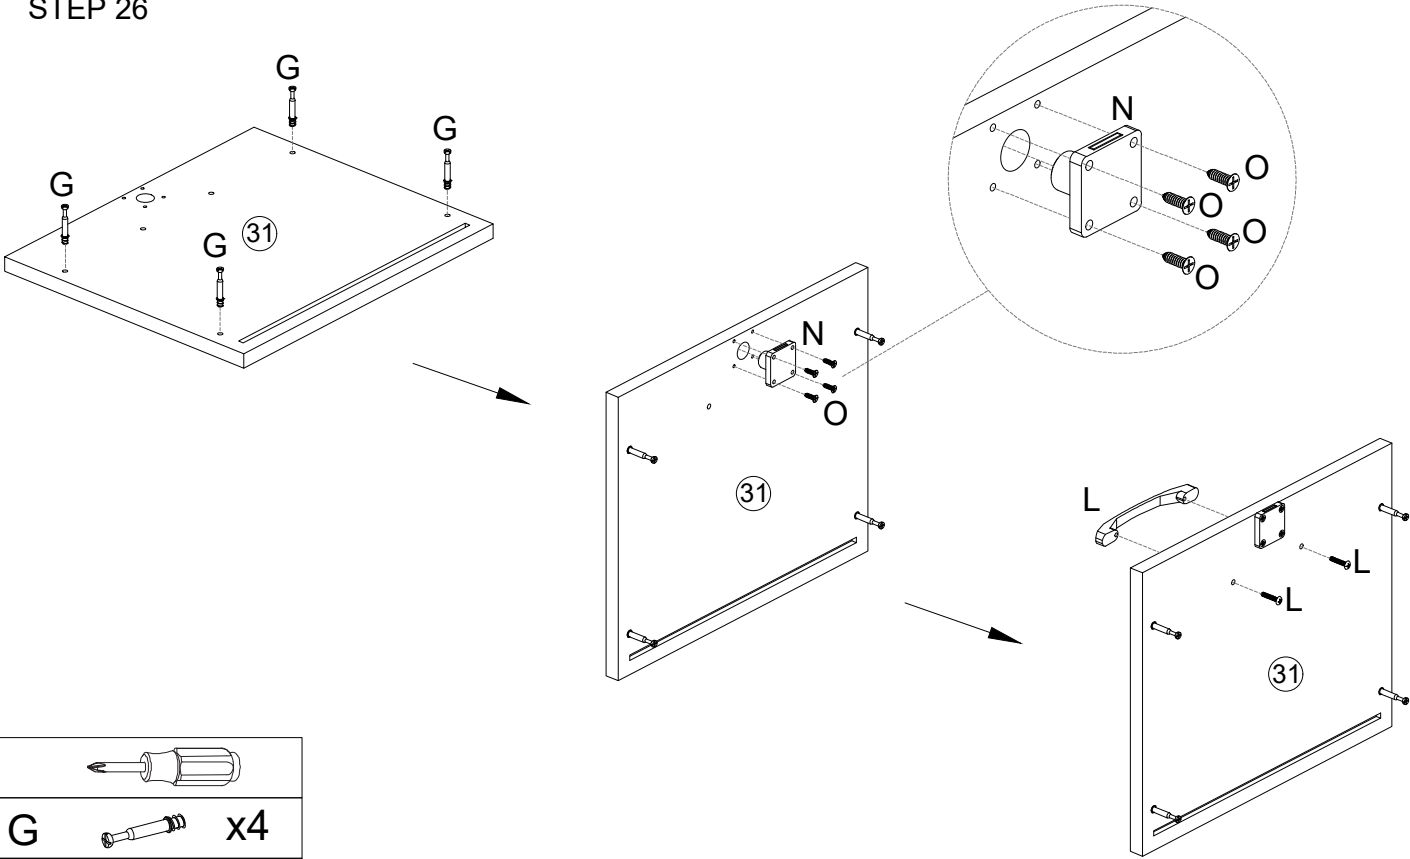




G		x4
L		x1
N		x1
O		x4

STEP 27

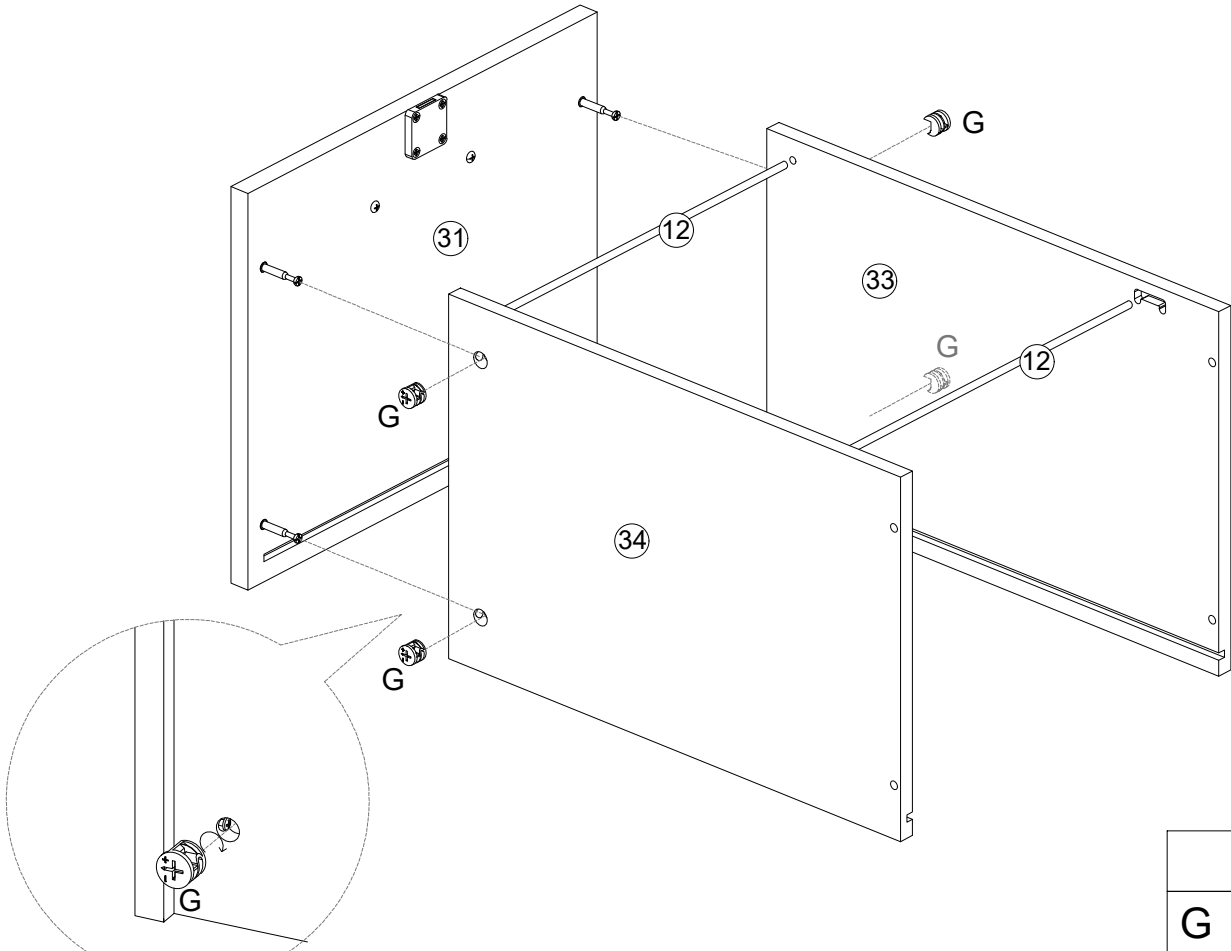


G		x4

STEP 28

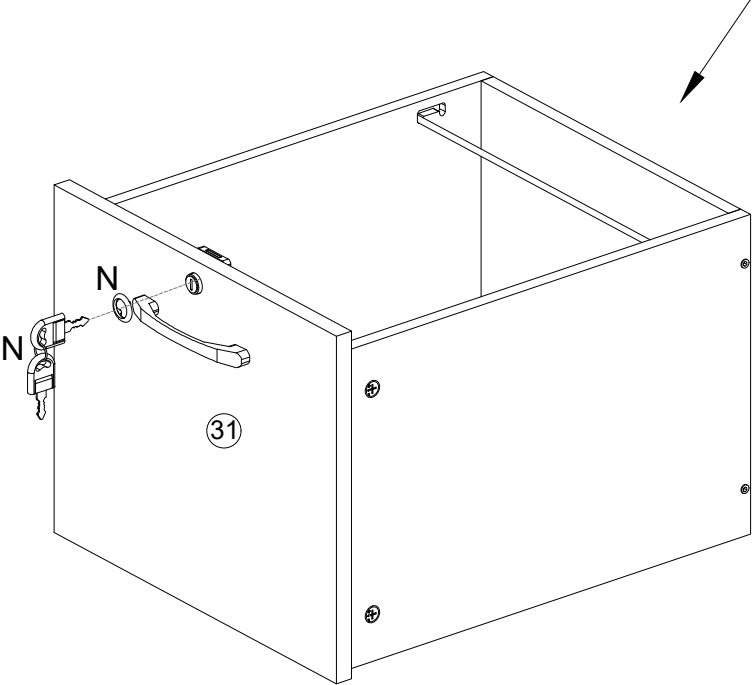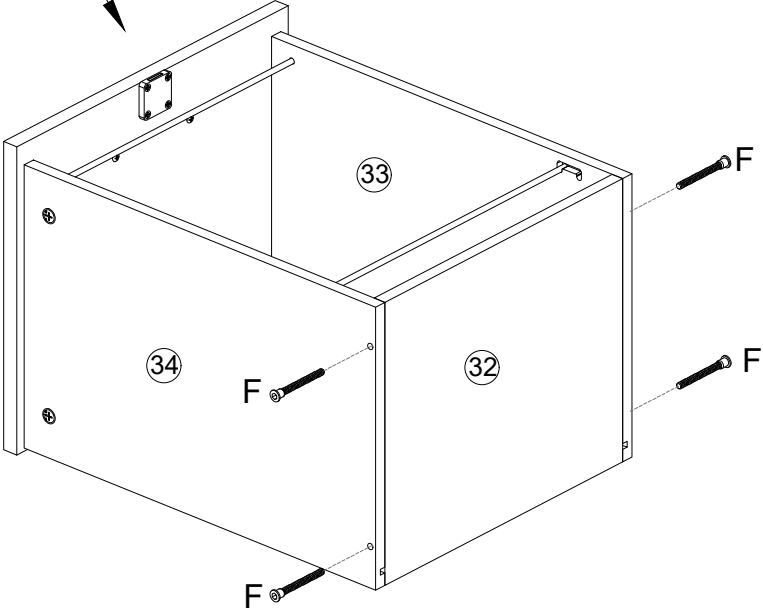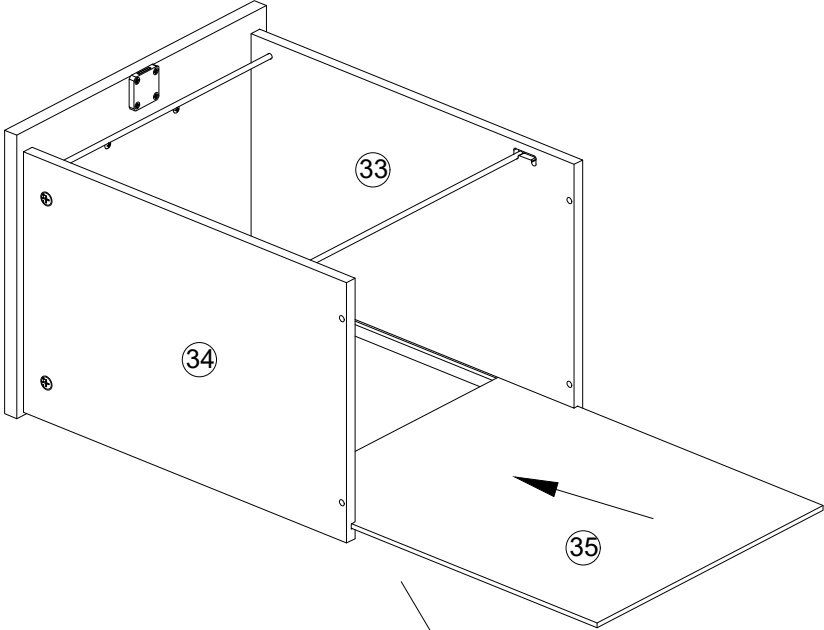



N		x1
		3mm
F		x4

STEP 29

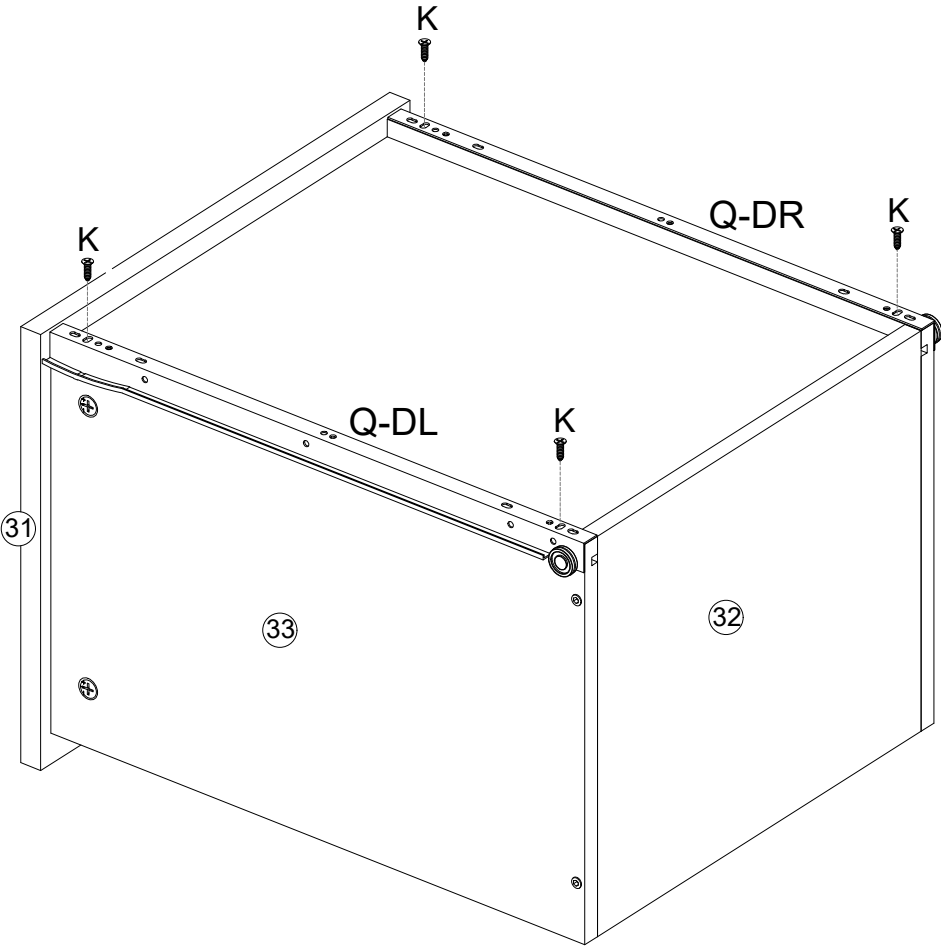

		
K		x4
Q		x1



STEP 30

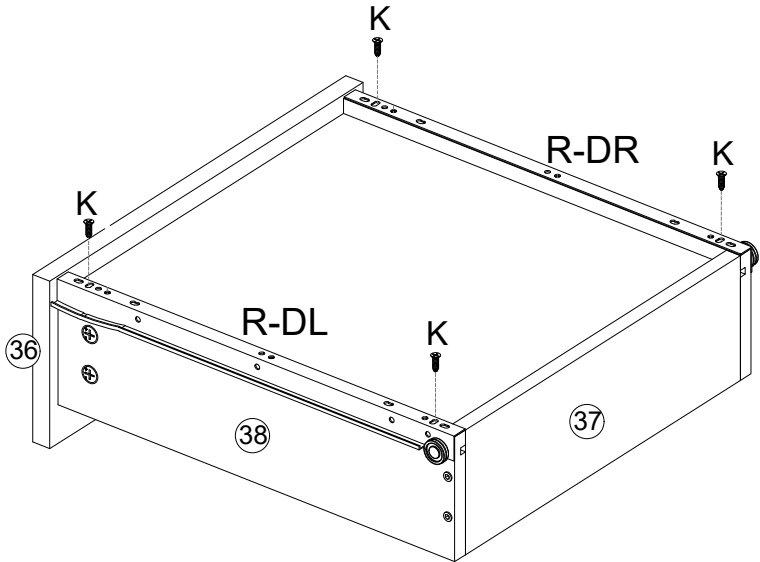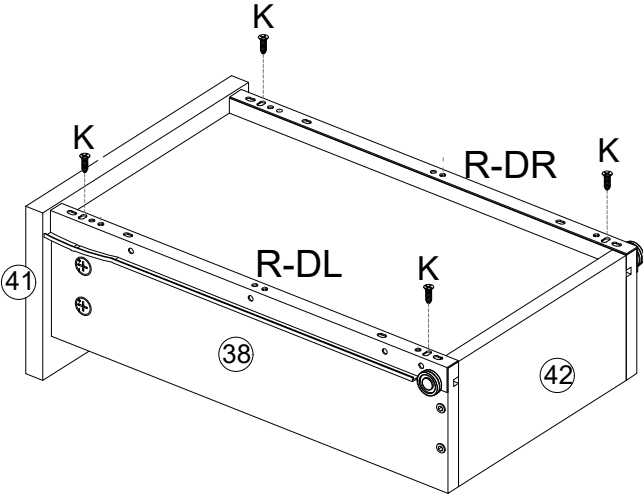

		
K		x8
R		x2

STEP 31



Tear off the tape and apply it to the bottom plate,
then press it firmly with your hand

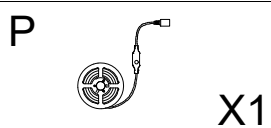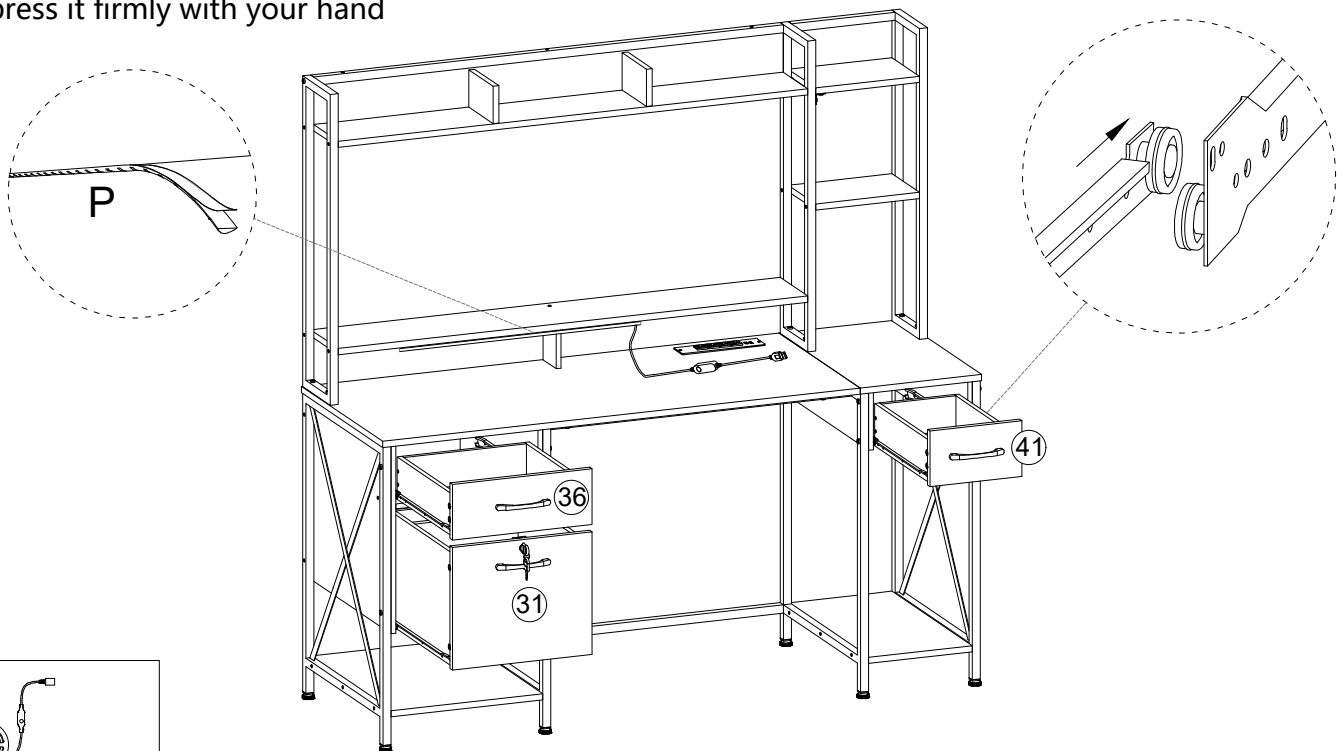

STEP 32



Attention: For safety and stability, we suggest you
have to secure the anti-tip accessories to the wall to
prevent tipping, injury, and property damage.

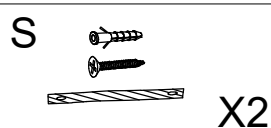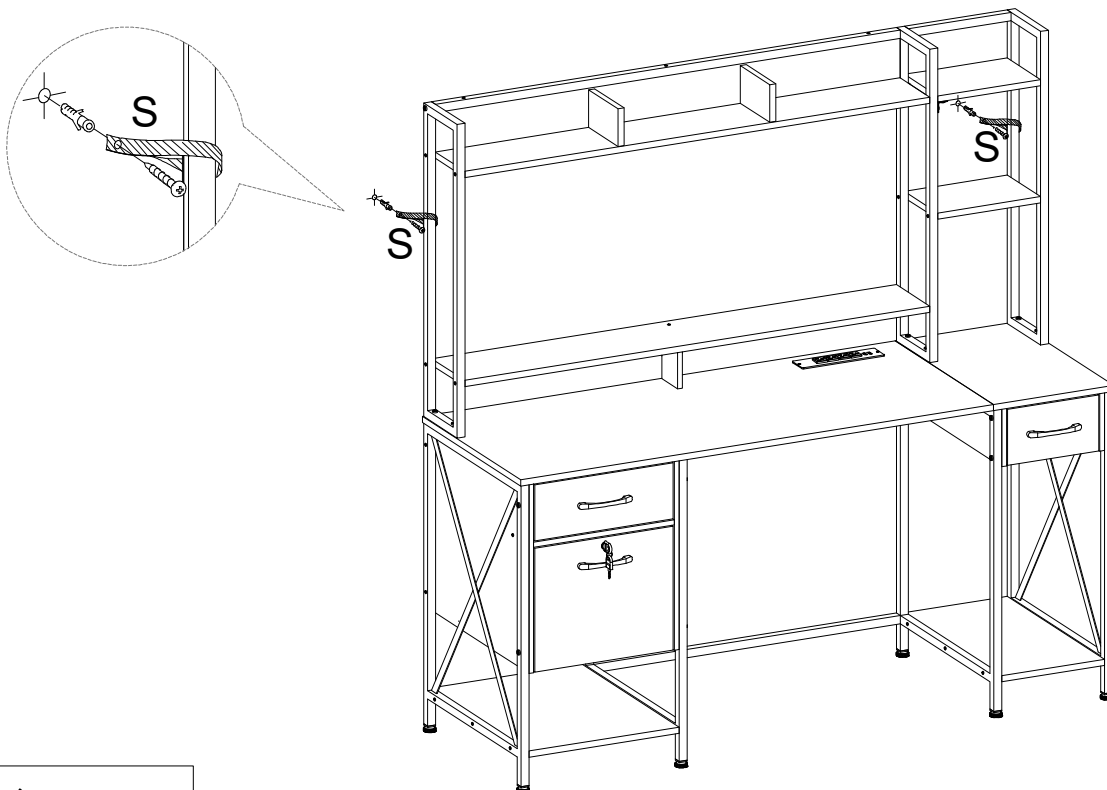

Installation Completed