








ASSEMBLY INSTRUCTIONS
MODEL #034 E: SOFA SIDE TABLE

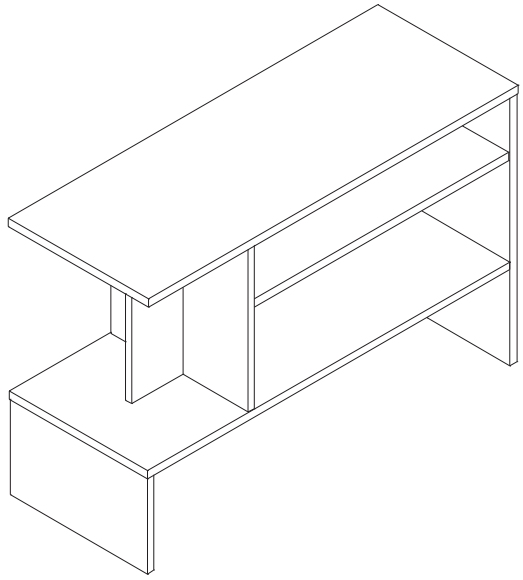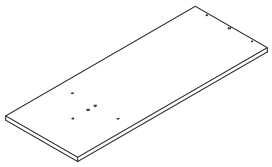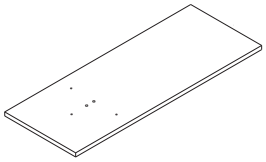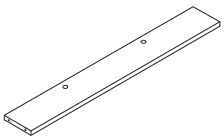



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


PARTS IDENTIFICATION

P1 Quantity: 1  Top Panel	**P2** Quantity: 1  Side Panel	**P3** Quantity: 1  Bottom Panel	**P4** Quantity: 1  Shelve Panel	**P5** Quantity: 1  Vertical Panel-Large
P6 Quantity: 1  Leg Panel	**P7** Quantity: 1  Support Panel	**P8** Quantity: 1  Vertical Panel- Small	**Tools required:** MALLET  HOUSEHOLD SCREWDRIVER 	


HARDWARE LIST

H1 Wooden Dowel M8 x 25  Quantity: 16 pcs	**H2** Connecting Bolts  Quantity: 9 pcs	**H3** Cam Lock 15 x 12.5mm for H2  Quantity: 9 pcs	**H4** Screw #9 x 1 1/2"  Quantity: 12 pcs	**H5** Leg Stud  Quantity: 4 pcs
H6 Sticker  Quantity: 8 pcs				


PARTS IDENTIFICATION

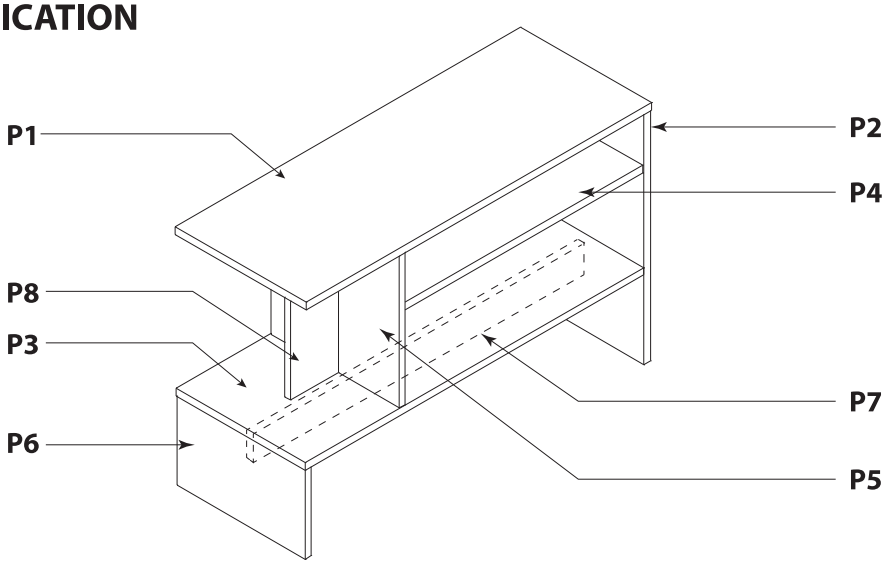


STEP 1 *Insert wooden dowels (H1) into the following parts,*

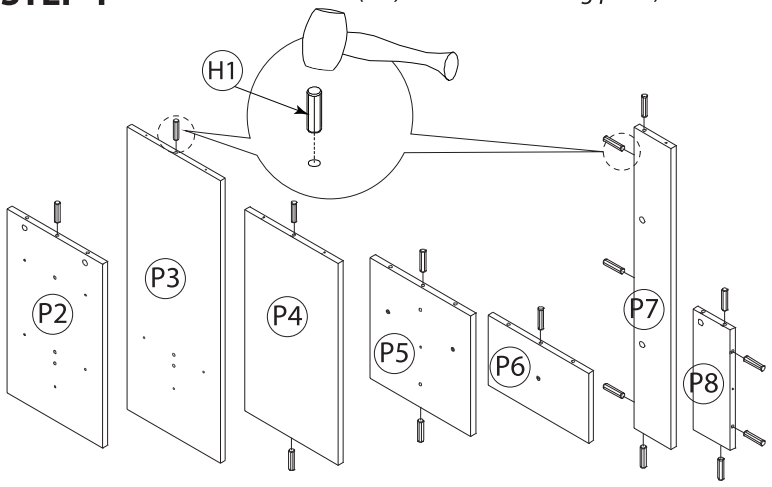


STEP 2

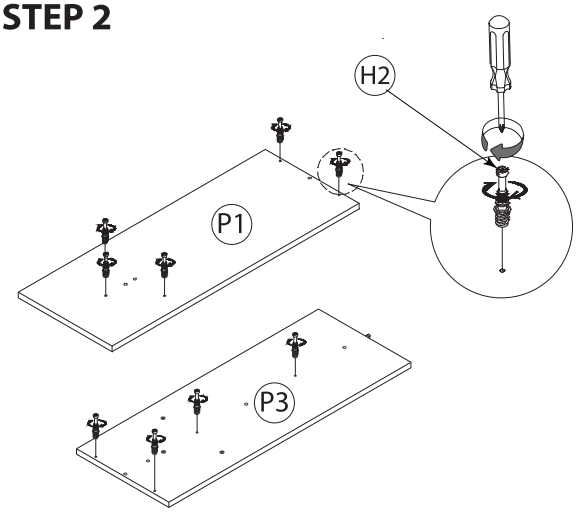


STEP 3

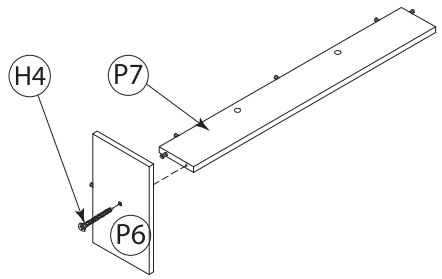


STEP 4

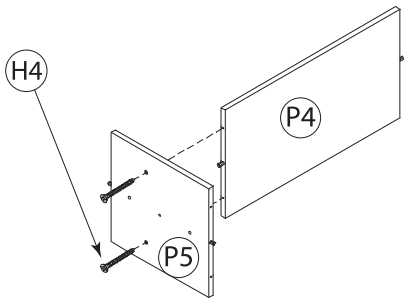


STEP 5

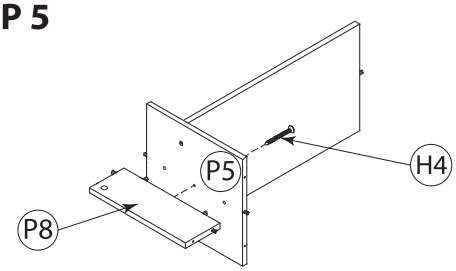

STEP 6

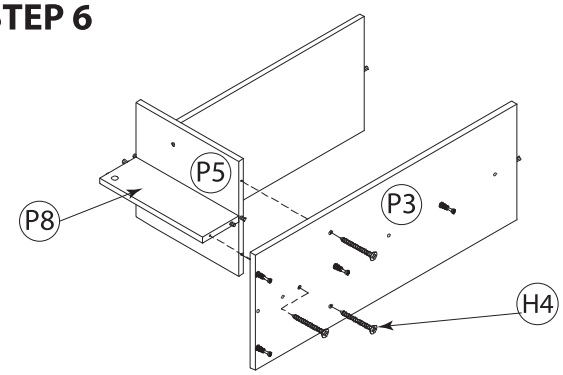


STEP 7

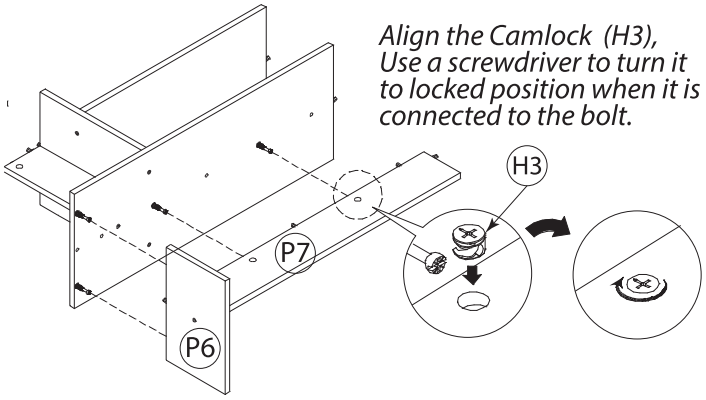


Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.

STEP 8

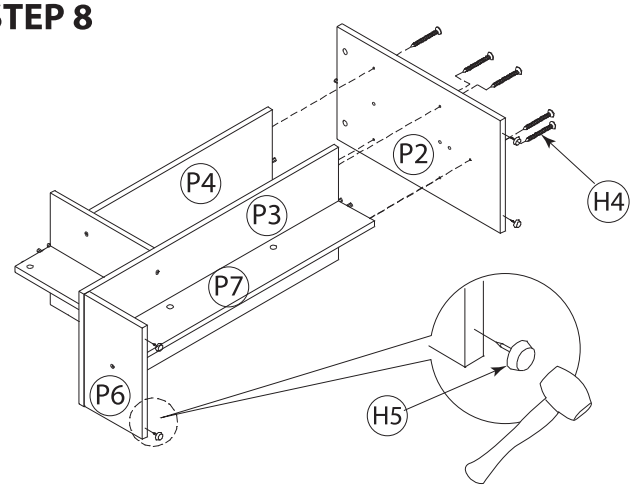

STEP 9

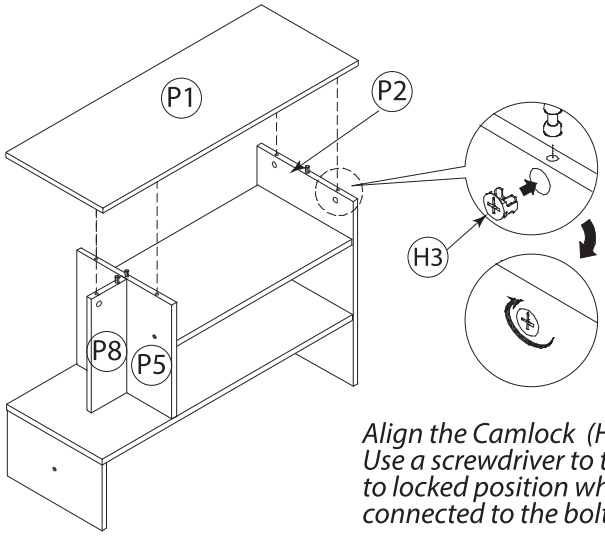

Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.

STEP 10

