
Assembly Instructions

Caution: You must read this before you proceed

TV CABINET

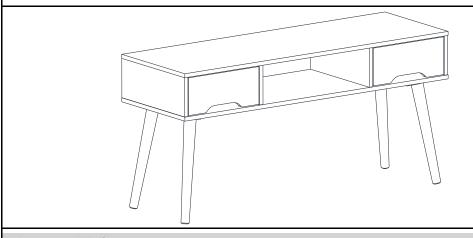


Parts List

	The state of the s		
Label	Picture	Description	QTY
AL	© · · · · · · · · · · · · · · · · · · ·	Drawer Left Side Rail	2
AR		Drawer Right Side Rail	2
BL	© ••••••	Drawer Left Bottom Rail	2
BR	· · · • • • • • • • • • • • • • • • • •	Drawer Right Bottom Rail	2
С		Top Panel	1
D		Left Side Panel	1
Е		Right Side Panel	1

F		Left Center Panel	1		
G		Right Center Panel	1		
Н		Bottom Panel	1		
I	• • • •	Back Panel	1		
J		Drawer Front Panel	2		
К		Drawer Side Panel	4		
L		Drawer Back Panel	2		
M		Drawer Bottom Panel	2		
N		Leg Support	4		
0		Leg (with pre-fixed PVC Foot)	4		
Hardware					
Label	Picture	Description	QTY		
1		Cam Lock	15		
2		Cam Bolt	15		
3		Cam Cap	15		

4		Positioning Dowel (8*30mm)	21		
(5)		Cap Wood Screw (6*50mm)	11		
6		Screw (3.5*16mm)	25		
7		Screw (4*20mm)	17		
8		Screw (4*38mm)	17		
9		Nail	21		
100		Allen Key	1		
(11)		Screwdriver (not provided)	1		
12)		Hammer (not provided)	1		
Assembly Preparation					
Poforo					

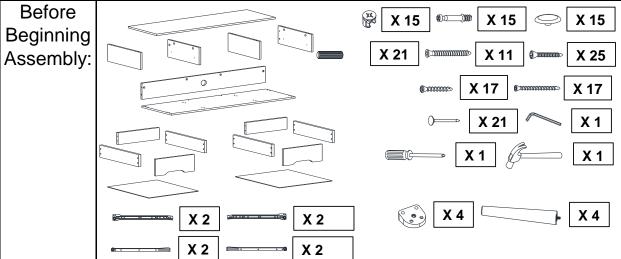

Assemble on a clean non-marring surface (packing foam)-



Read instructions, cover to cover-



Have 2 adults on hand for assembly-




Do not assemble on flooring or carpet-




Save all packaging until finished-

Assembly Steps Overview Left Side Panel (D) Right Center Panel (G) Right Side Panel (E) Bottom Panel (H) Leg (O) Left Center Panel (F) Drawer Front Panel (J) FRONT FACING


This TV Cabinet has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the TV Cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

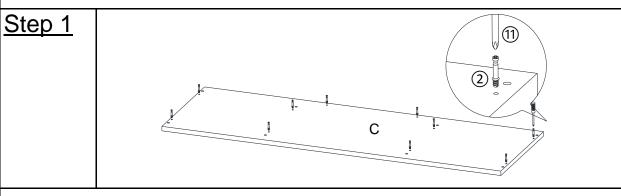

Unpack and place all parts on a clean, non-marring surface. Attach Cam Bolts(2) to mounting positions on Top Panel(C) with Screwdriver(11).

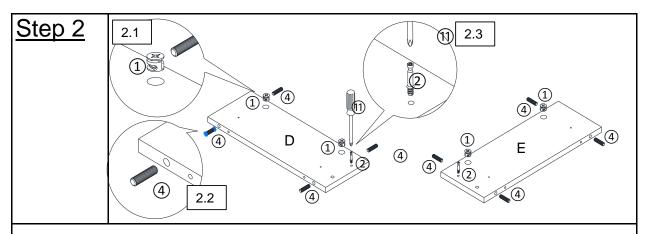

- **2.1)** Insert Cam Locks(①) into mounting positions on Left Side Panel(D) by hand.
- **2.2)** Insert Positioning Dowels(④) into mounting positions on Left Side Panel(D) by hand.
- **2.3)** Attach Cam Bolts(②) to mounting positions on Left Side Panel(D) with Screwdriver(11).
- 2.4) Repeat the same process with Right Side Panel(E).

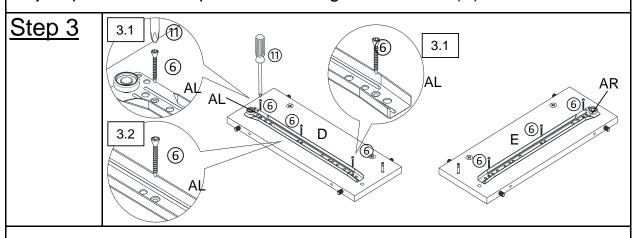


- **3.1)** Attach Drawer Left Side Rail(AL) to Left Side Panel(D) using Screws(6) with Screwdriver(11) where indicated.
- **3.2)** Attach Drawer Left Side Rail(AL) to Left Side Panel(D) using Screw(6) with Screwdriver(11) where indicated.

Note: There are pre-existing mounting positions on the Left Side Panel(D) to attach the Drawer Left Side Rail(AL).

Tighten the Screws fully in a sequential manner.


3.3) Repeat the same process to attach Drawer Right Side Rail(AR) on Right Side Panel(E).

Step 4

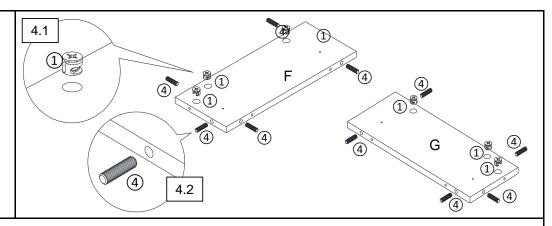

- **4.1)** Insert Cam Locks(①) into mounting positions on Left Center Panel(F) by hand.
- **4.2)** Insert Positioning Dowels(4) into mounting positions on Left Center Panel(F) by hand.
- **4.3)** Repeat the same process with Right Center Panel(G).

Step 5

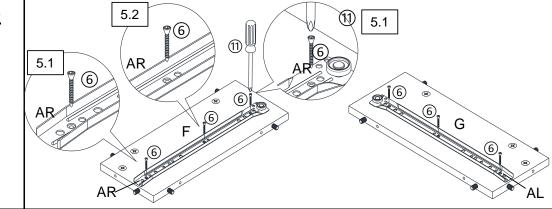


- **5.1)** Attach Drawer Right Side Rail(AR) to Left Center Panel(F) using Screws(6) with Screwdriver(11) where indicated.
- **5.2)** Attach Drawer Right Side Rail(AR) to Left Center Panel(F) using Screw(⑥) with Screwdriver(⑴) where indicated.

Note: There are pre-existing mounting positions on the Left Center Panel(F) to attach the Drawer Right Side Rail(AR).

Tighten the Screws fully in a sequential manner.


5.3) Repeat the same process with Drawer Left Side Rail(AL) on Right Center Panel(G).

Step 6

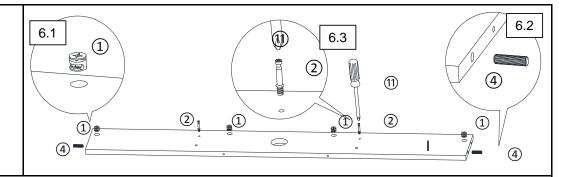

- **6.1)** Insert Cam Locks (①) into mounting positions on Back Panel(I) by hand.
- **6.2)** Insert Positioning Dowels(4) into mounting positions on Back Panel(I) by hand.
- **6.3)** Attach Cam Bolts(②) to mounting positions on Back Panel(I) with Screwdriver(①).

Step 7

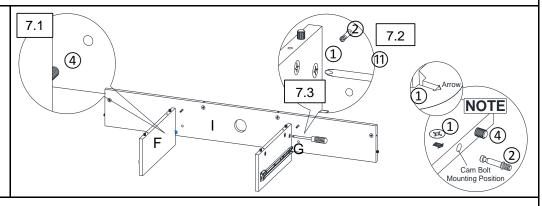

7.1) Insert Positioning Dowels(④) from Left Center Panel(F) and Right Center Panel(G) into mounting positions on Back Panel(I).

Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.


- **7.2)** Insert Cam Bolts(②) on Back Panel(I) into the mounting positions on Left Center Panel(F) and Right Center Panel(G).
- **7.3)** Turn the Cam Locks(①) clockwise with the Screwdriver(①) until they all lock into place.

Step 8 8.2 10 8.3 8.1 8.1 Arrow Cam Bolt Mounting Position

8.1) Insert Positioning Dowels(4) from Back Panel(I) into mounting positions on Left Side Panel(D) and Right Side Panel(E).

Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.

- **8.2)** Insert Cam Bolts(②) on Left Side Panel(D) and Right Side Panel(E) into mounting positions on sides of Back Panel(I).
- **8.3)** Turn the Cam Locks(1) clockwise with the Screwdriver(1) until they all lock into place.

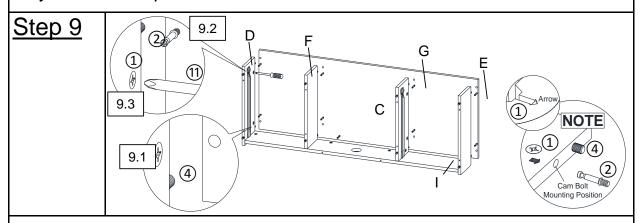


9.1) Insert Positioning Dowels(④) from Left Side Panel(D), Right Side Panel(E), Left Center Panel(F) and Right Center Panel(G) into mounting positions on Top Panel(C).

Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.

- **9.2)**Insert the Cam Bolts(②) on Top Panel(C) into mounting positions on sides of Left Side Panel(D), Right Side Panel(E), Left Center Panel(F) and Right Center Panel(G).
- **9.3)** Turn the Cam Locks(①) with the Screwdriver(①) until they all lock into place.

<u>Step 10</u>

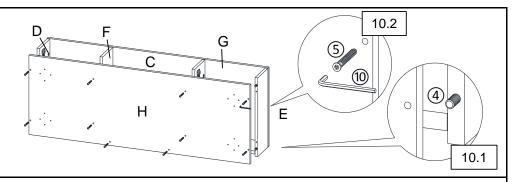


10.1) Insert Positioning Dowels(④) from Left Side Panel(D), Right Side Panel(E), Left Center Panel(F) and Right Center Panel(G) into mounting positions on Bottom Panel(H).

10.2) Attach Bottom Panel(H) to Cabinet Assembly using Cap Wood Screws(⑤) with Allen Key(⑩).

Tighten Cap Wood Screws fully in a sequential manner.

<u>Step 11</u>

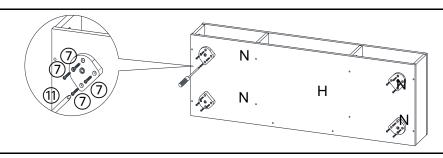


Attach Leg Supports(N) to Bottom Panel(H) using Screws(⑦) with Screwdriver(⑴).

Tighten the Screws fully in a sequential manner.

Caution: The thinner sides of Leg Supports(N) should be facing outwards. Misassembly and reassembly may cause damage and instability to the product.


Note: There are pre-existing mounting positions on the Bottom Panel(H) to attach the Leg Supports(N).

Step 12

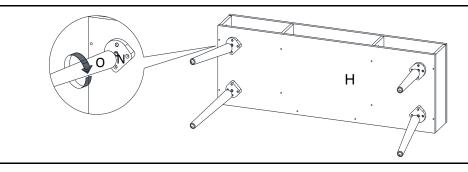

Attach Legs(O) to Leg Supports(N) by rotating the Legs clockwise by hand.


Step 13

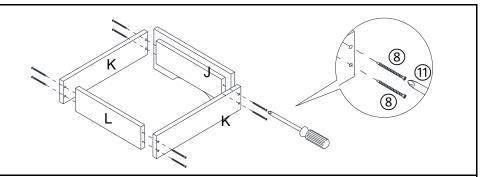

Attach Drawer Side Panels(K) to Drawer Front Panel(J) and Drawer Back Panel(L) using Screws(®) with Screwdriver(11).

Tighten the Screws fully in a sequential manner.

<u>Step 14</u>

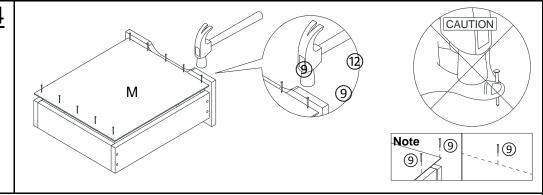


Attach Drawer Bottom Panel(M) to Drawer Assembly using Nails(9) with Hammer((12)).

Caution: Please be extra careful when using a Hammer to avoid injury.

Note: Hit Nails along two edges (slightly inwards from sides) on the lines drawn on the Drawer Bottom Panel.


Step 15

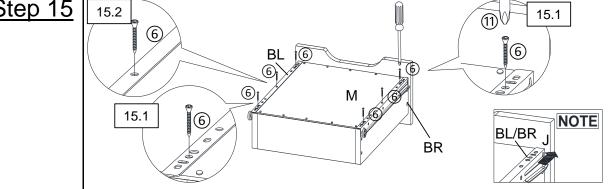

15.1) Attach Drawer Left Bottom Rail(BL) and Drawer Right Bottom Rail(BR) to Drawer Bottom Panel(M) using Screws(6) with Screwdriver(11) where indicated.

15.2) Attach Drawer Left Bottom Rail(BL) and Drawer Right Bottom Rail(BR) to Drawer Bottom Panel(M) using Screws(6) with Screwdriver(11) where indicated.

Tighten the Screws fully in a sequential manner.

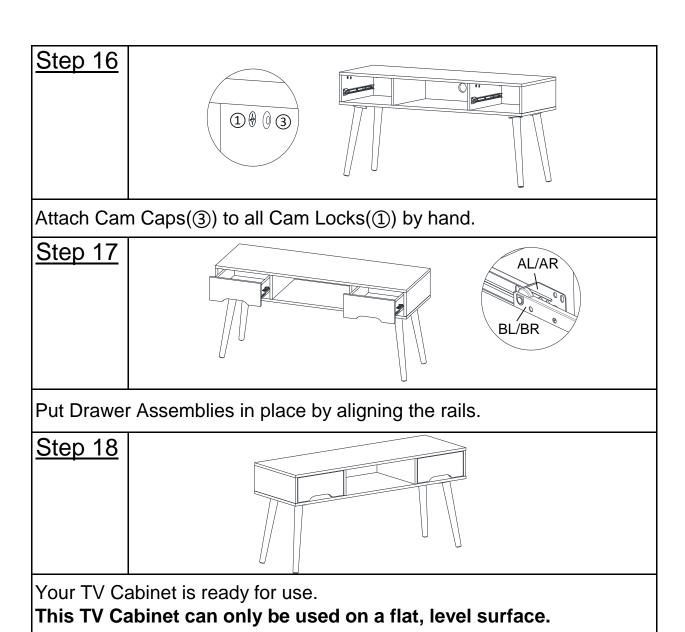

Care & Maintenance



Do not put hot items directly on furniture surface



Do not clean furniture with harsh cleansers or polish.



 To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



Do not write on furniture without a padded barrier to protect the surface.



 To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



Not for commercial use. For residential use only.



Stains may be removed with mild soap solution and damp cloth.



Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Questions & Answers about Proposition 65

What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

· What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.