


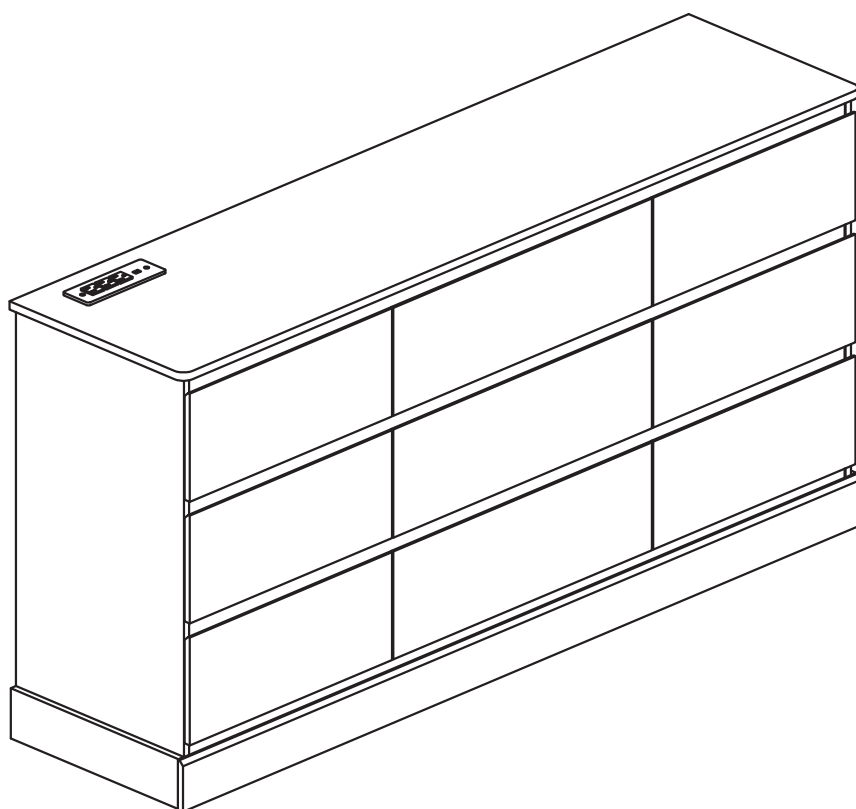
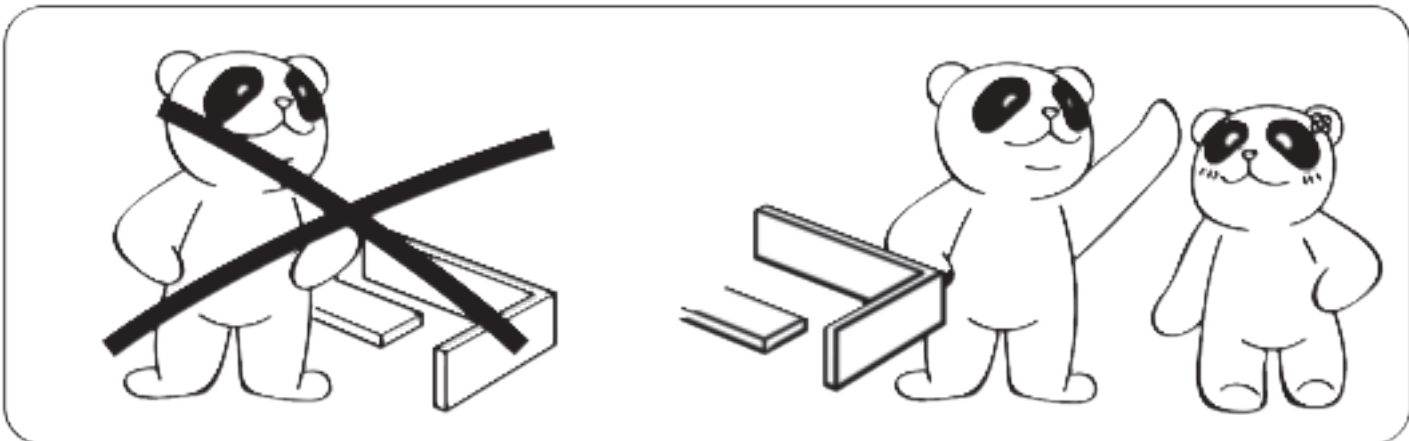


Assembly instructions

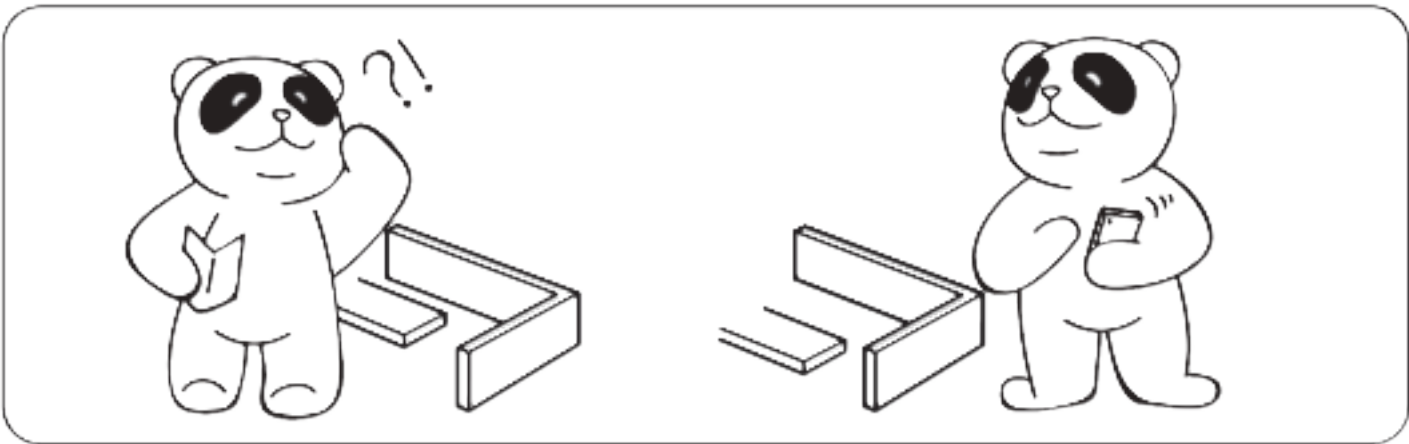

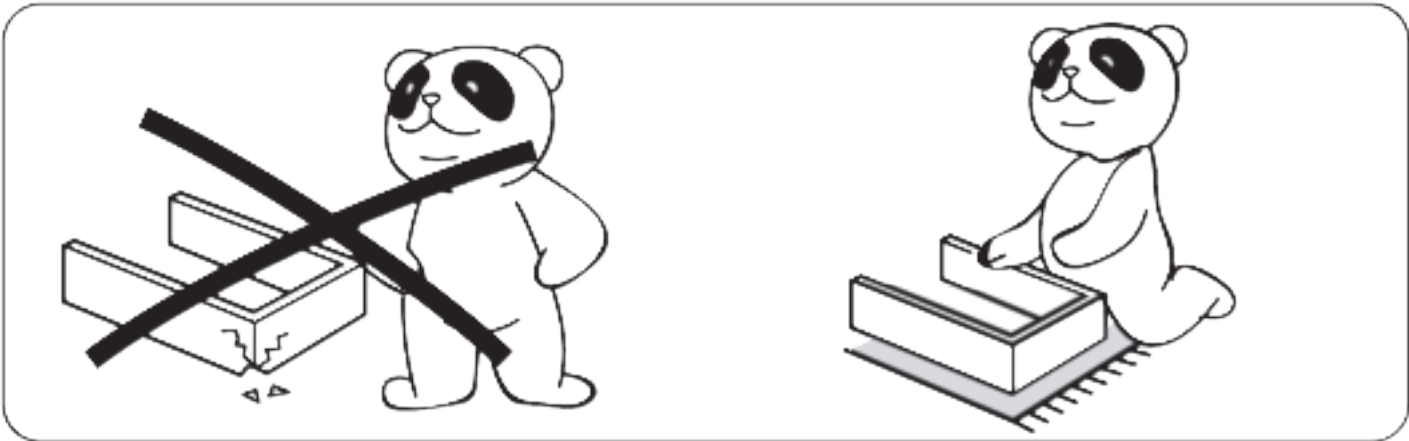

Mounting Frame

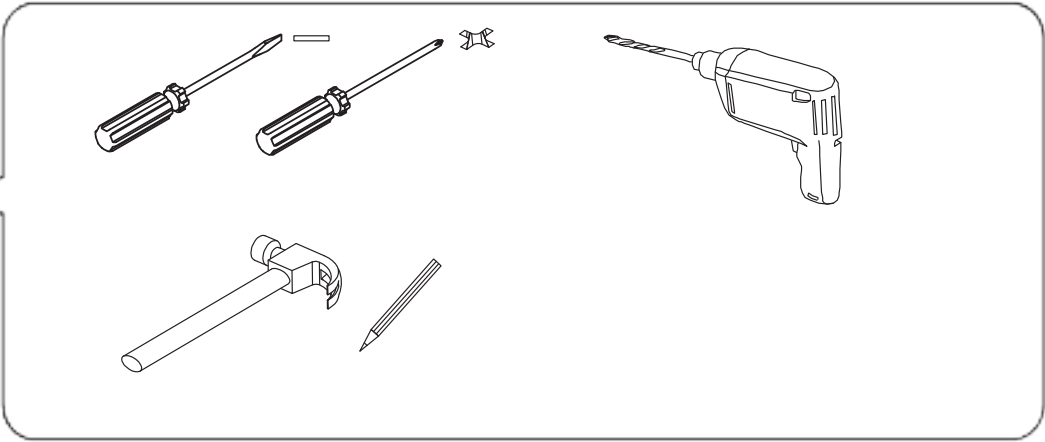

Ø6x28mm
A x 78



Ø15x9mm
B x 78



Ø6x30mm
C x 27



Ø3.5x12mm
D x 102




Ø5x40mm
E x 36



F x 14



Ø3.5x18mm
G x 8

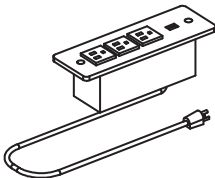


H x 1



I x 14



J x 2



Ø3.5x14mm




CR x 9



CL x 9




DR x 9




DL x 9


Mounting Frame

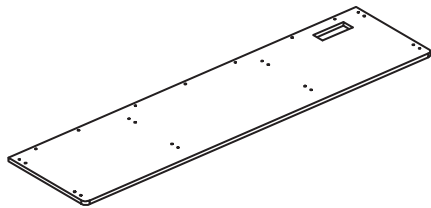


① x 1

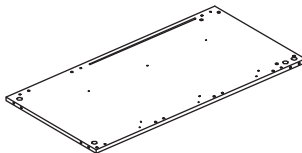


② x 1

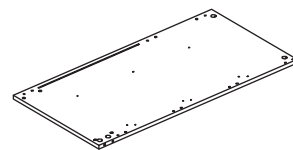


③ x 1

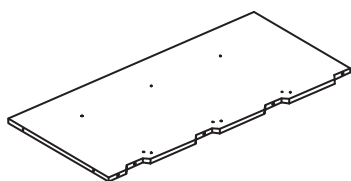


④ x 1

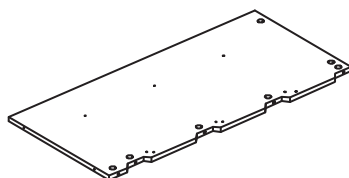


⑤ x 1

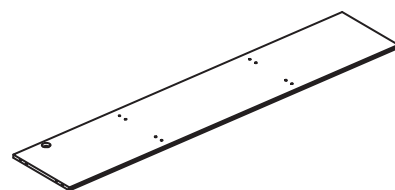


⑥ x 1

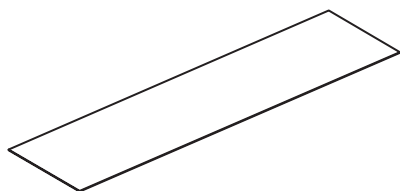


⑦ x 1

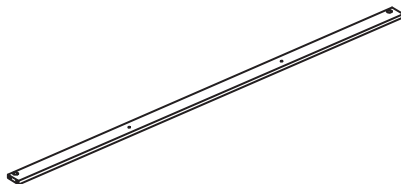

⑧ x 4

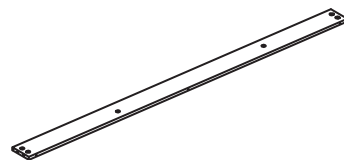


⑨ x 1

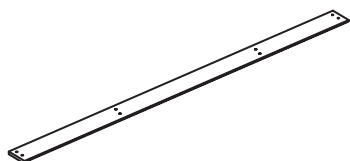


⑩ x 1




⑪ x 2

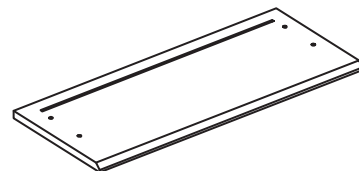

⑫ x 3

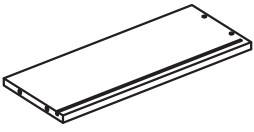


⑬ x 9

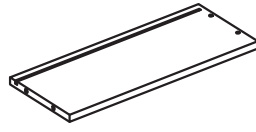


⑭ x 9




⑮ x 6

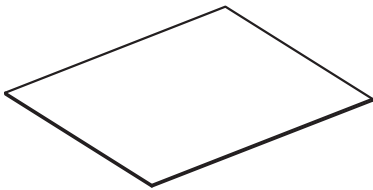


⑯ x 6

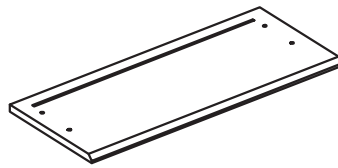


⑰ x 3

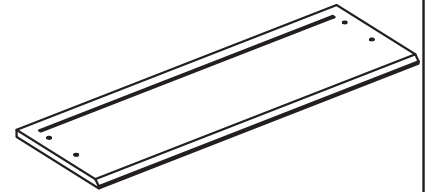


⑱ x 3

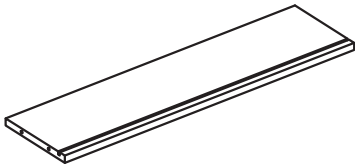


⑲ x 3

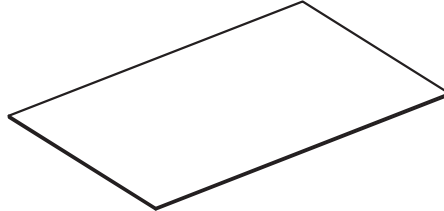


⑳ x 3

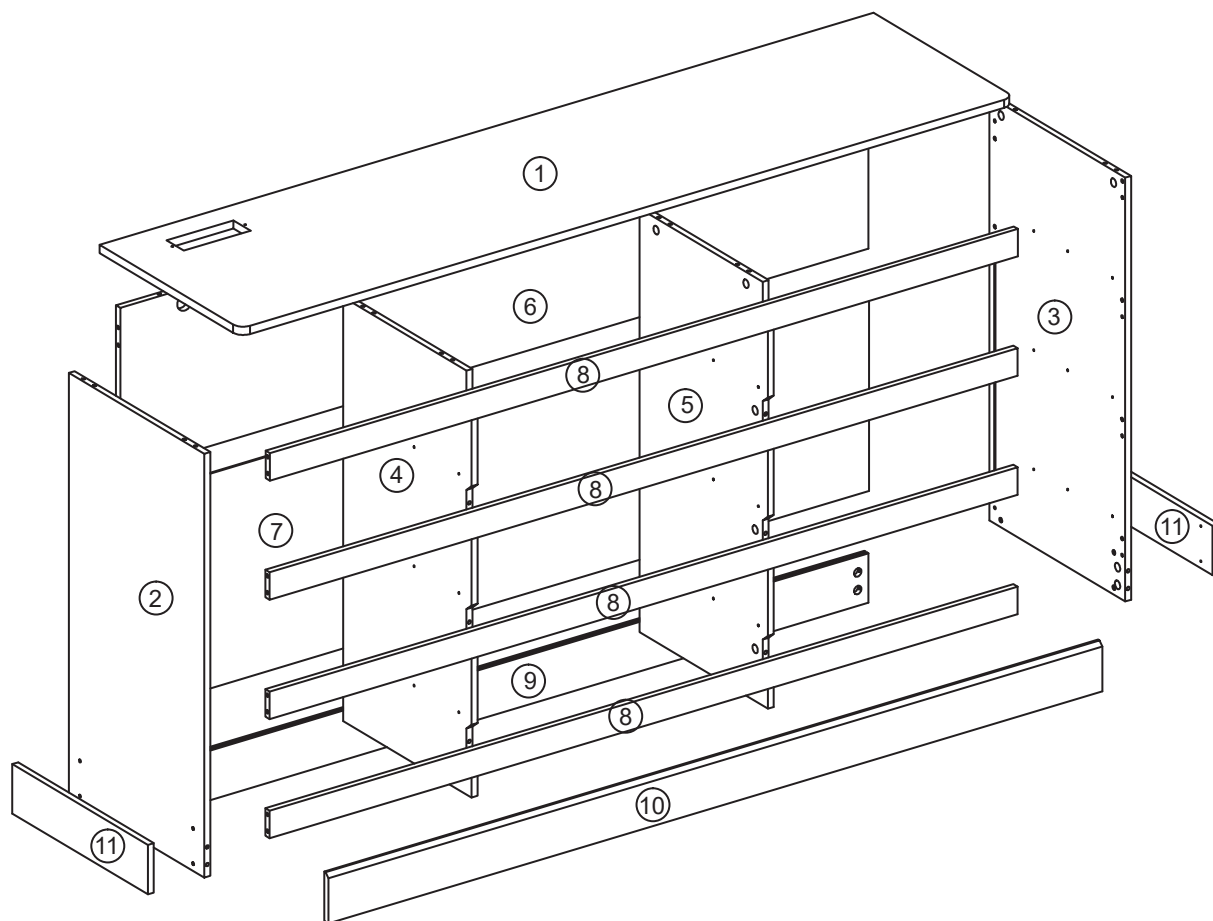


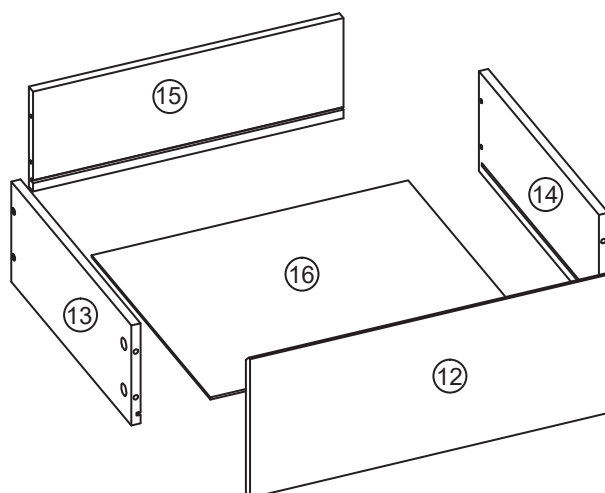

x 3

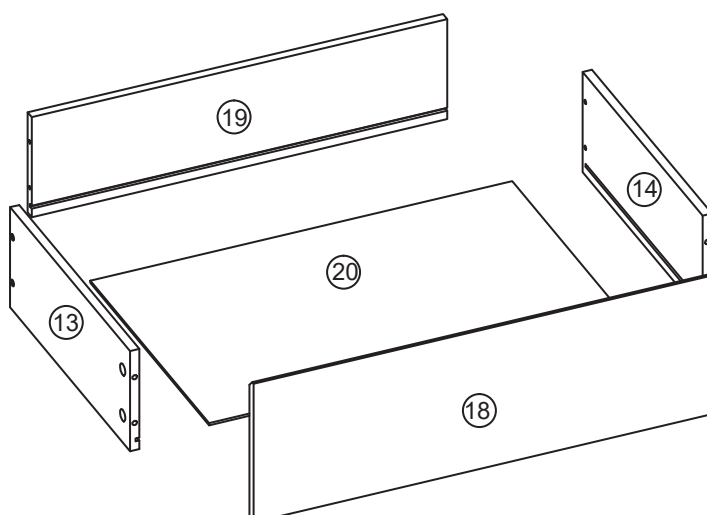


x 3

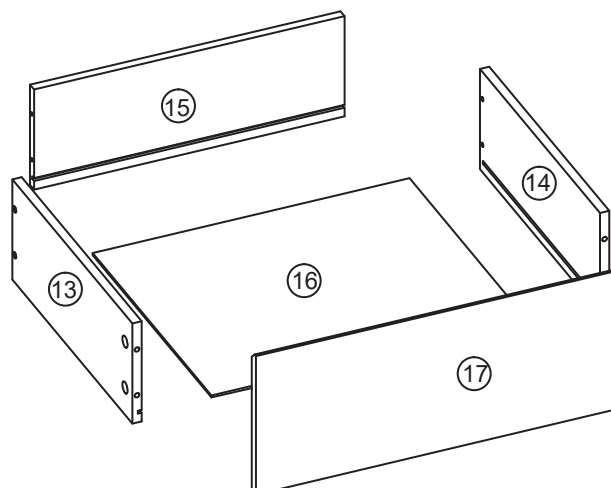


x 3


1

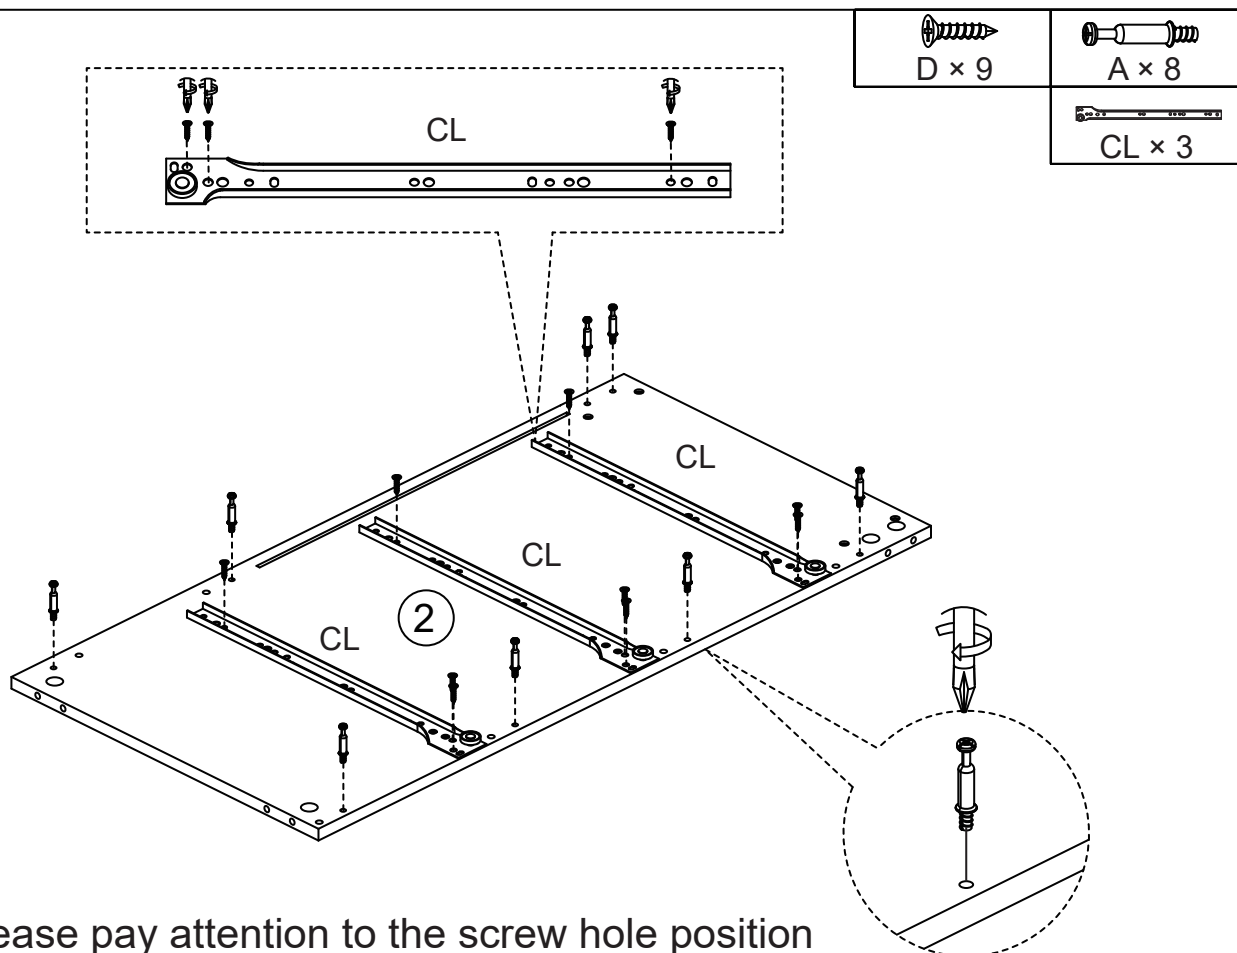


2

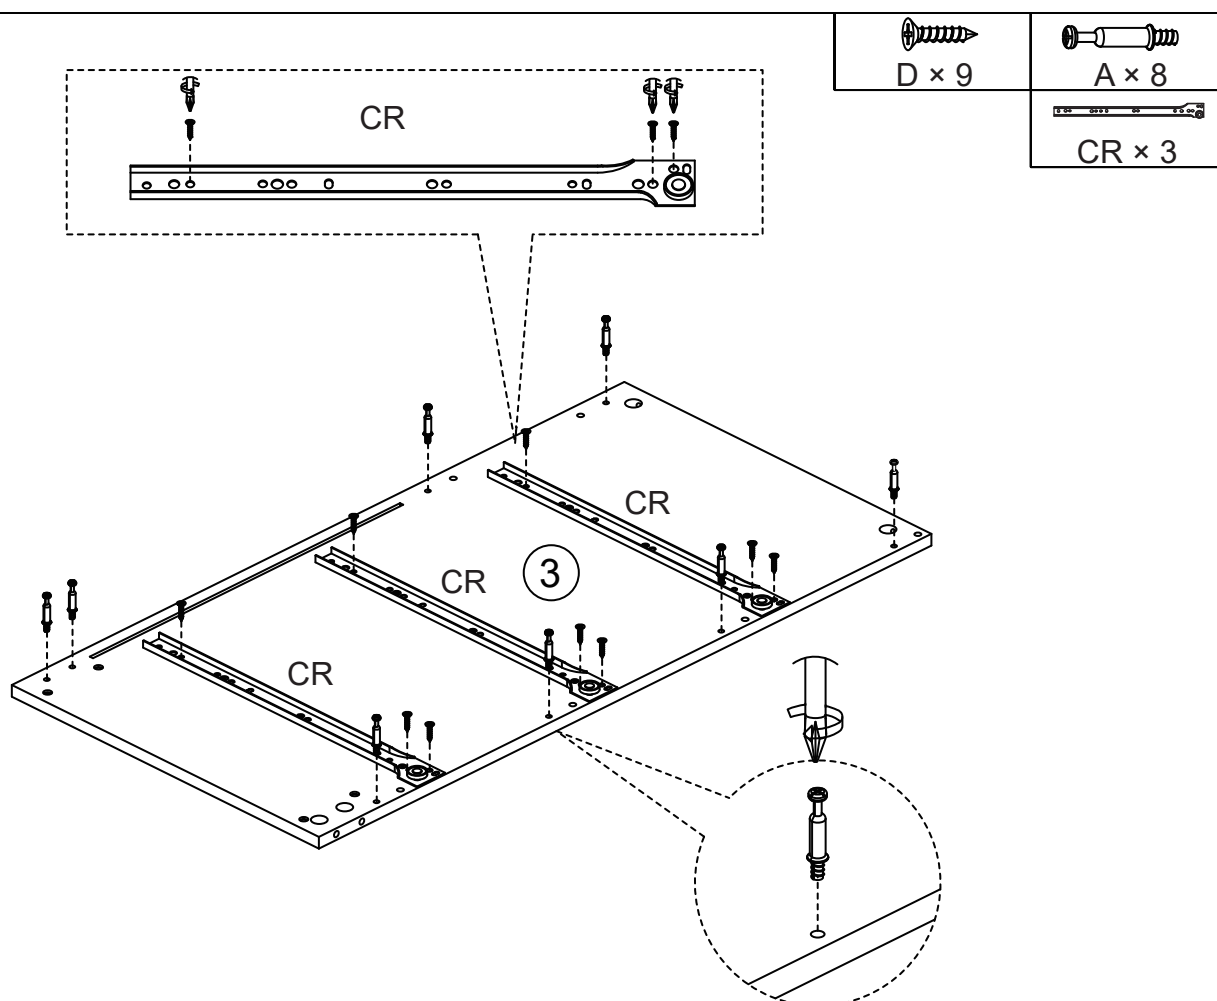


3

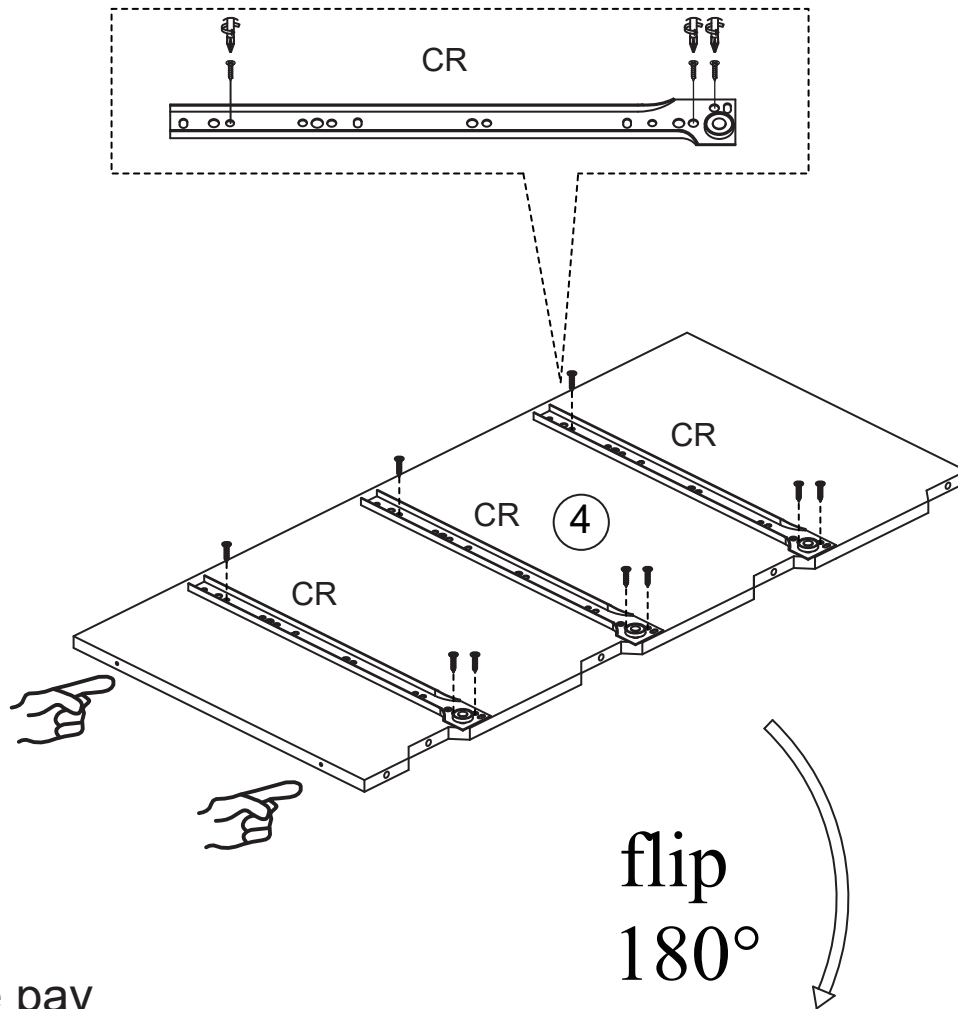
D × 18
CL × 3
CR × 3


Please pay
attention to the installation hole position

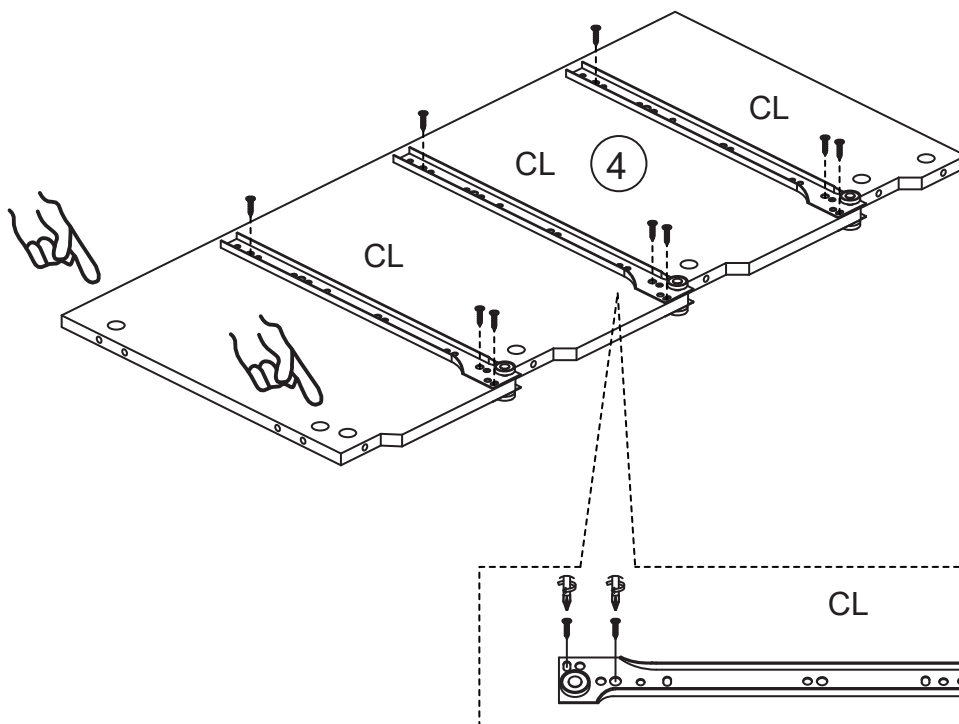

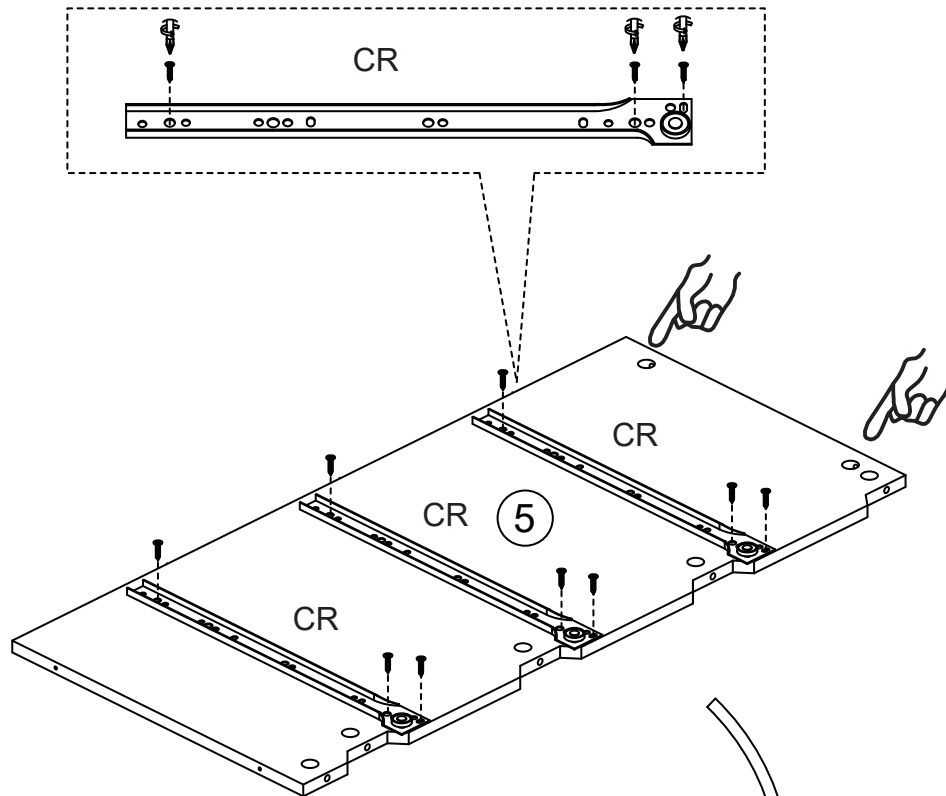



flip
180°

Please pay
attention to the installation hole position

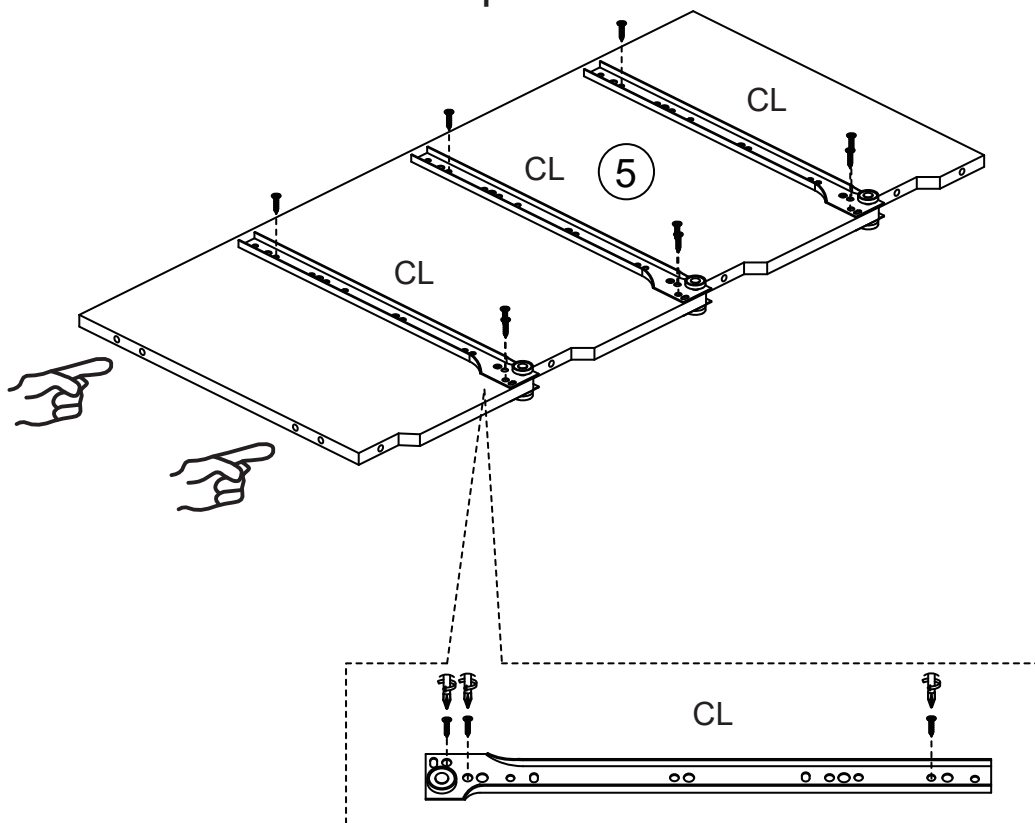





Please pay attention to the installation hole position

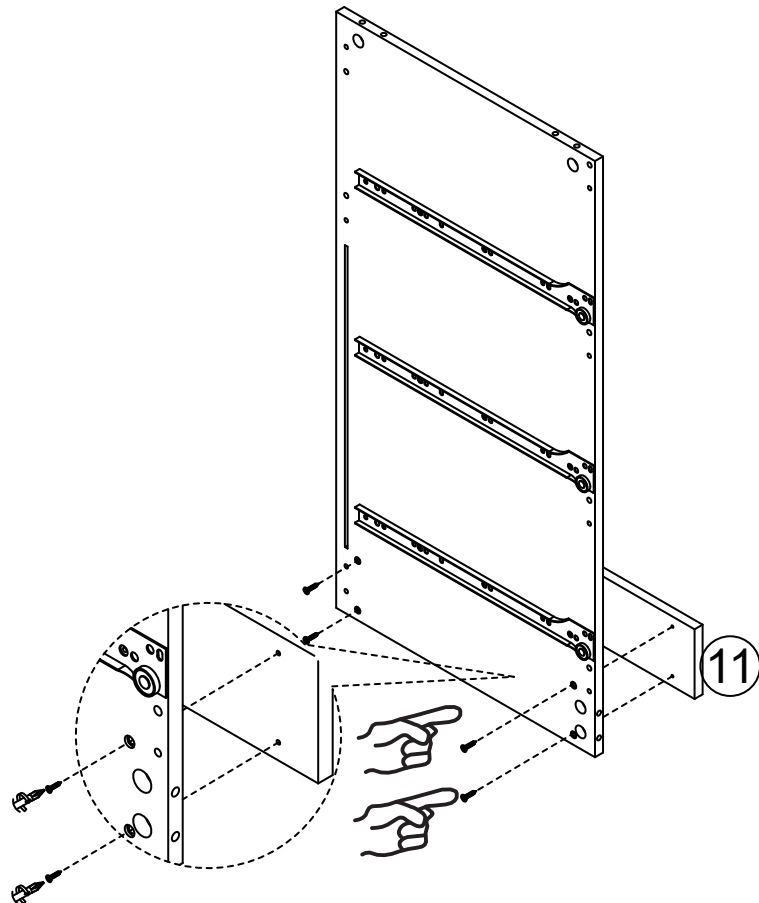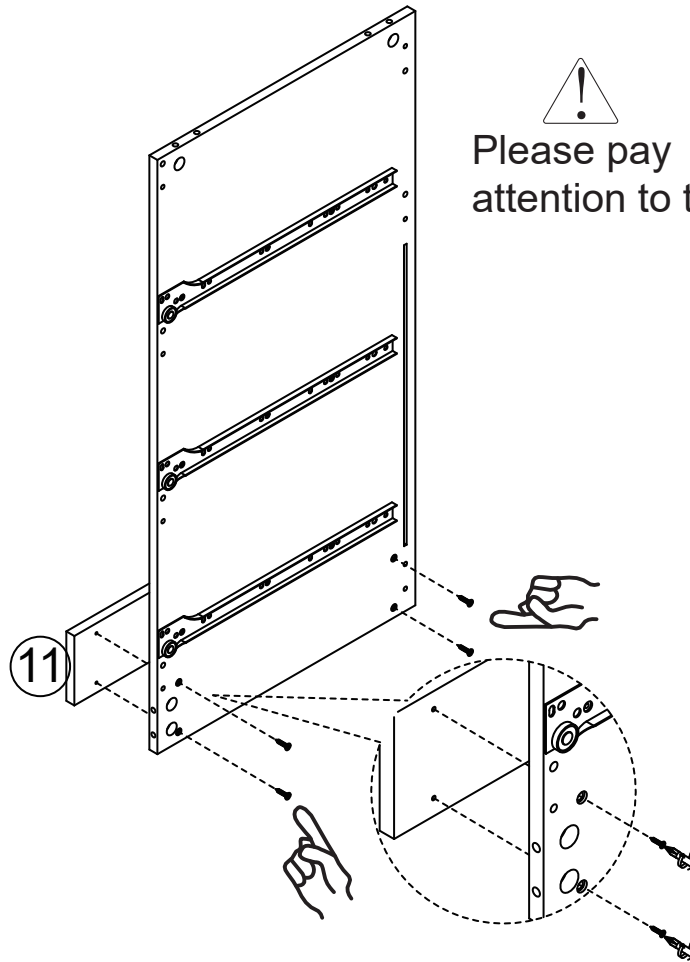


6




A × 12

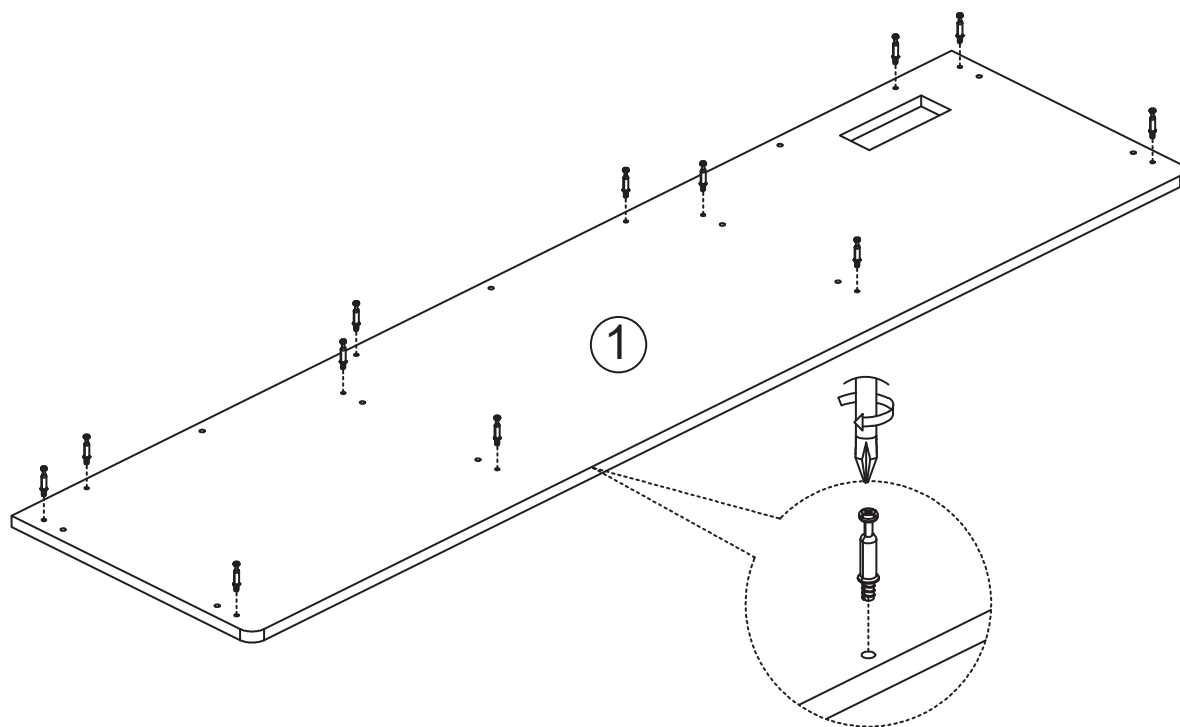

7



A × 8

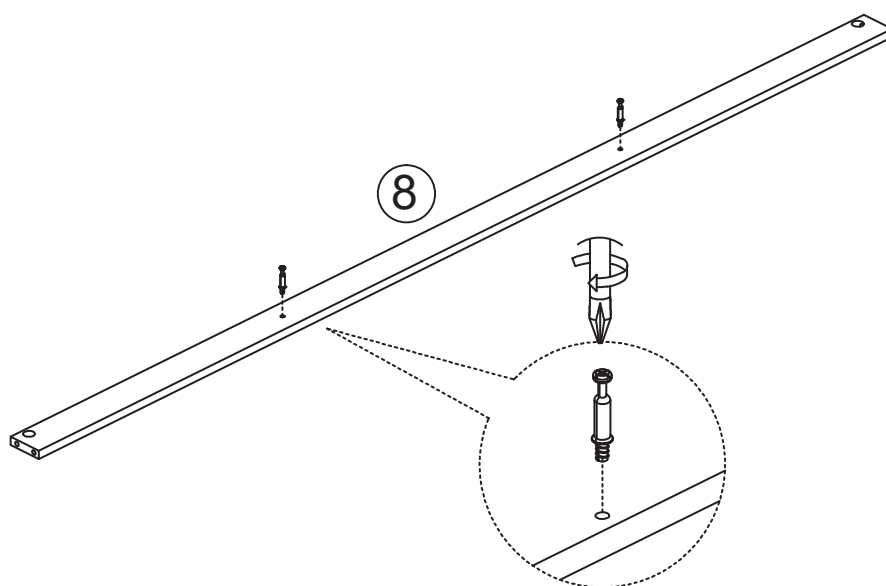


x 4


8




C x 8

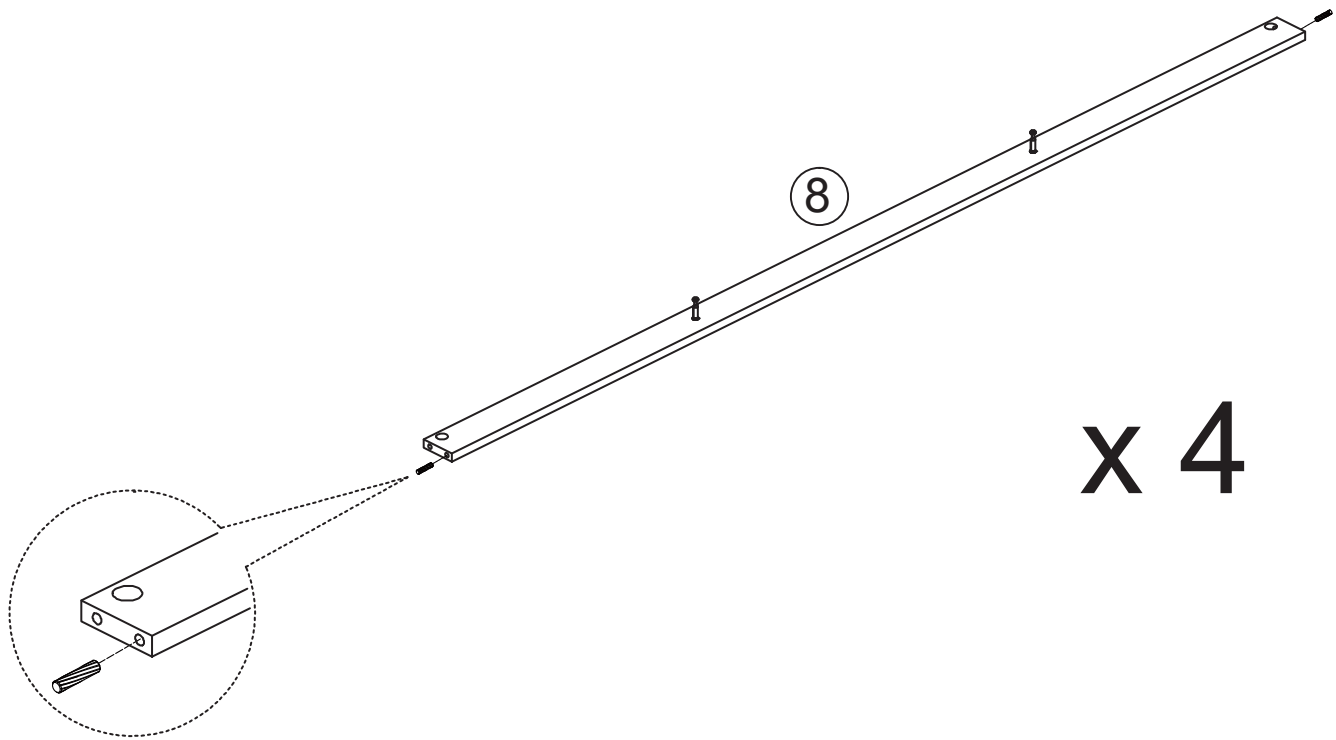


9



A x 8

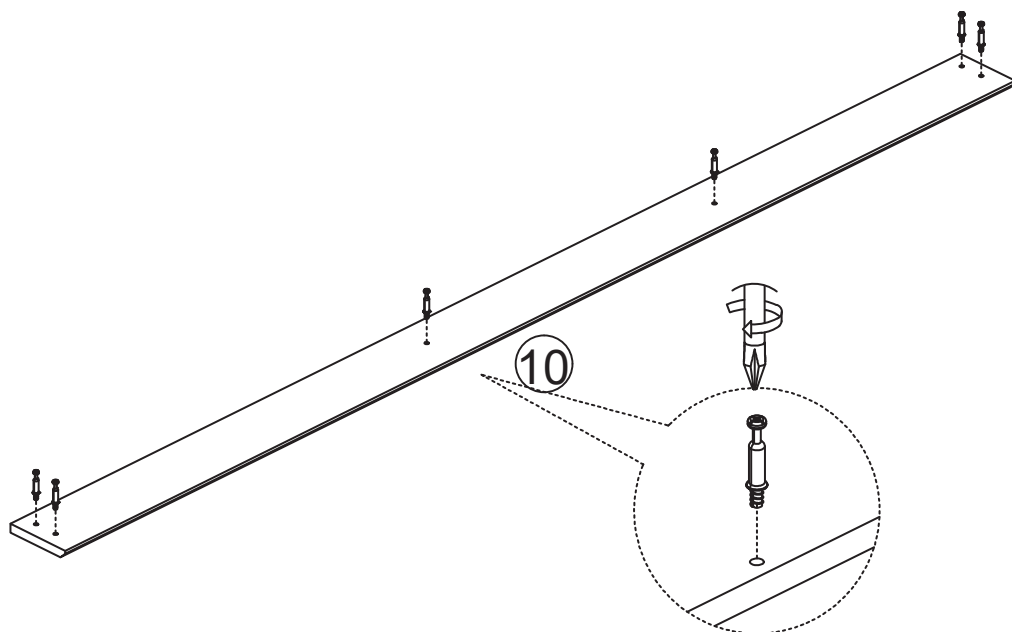





E × 4




C × 4

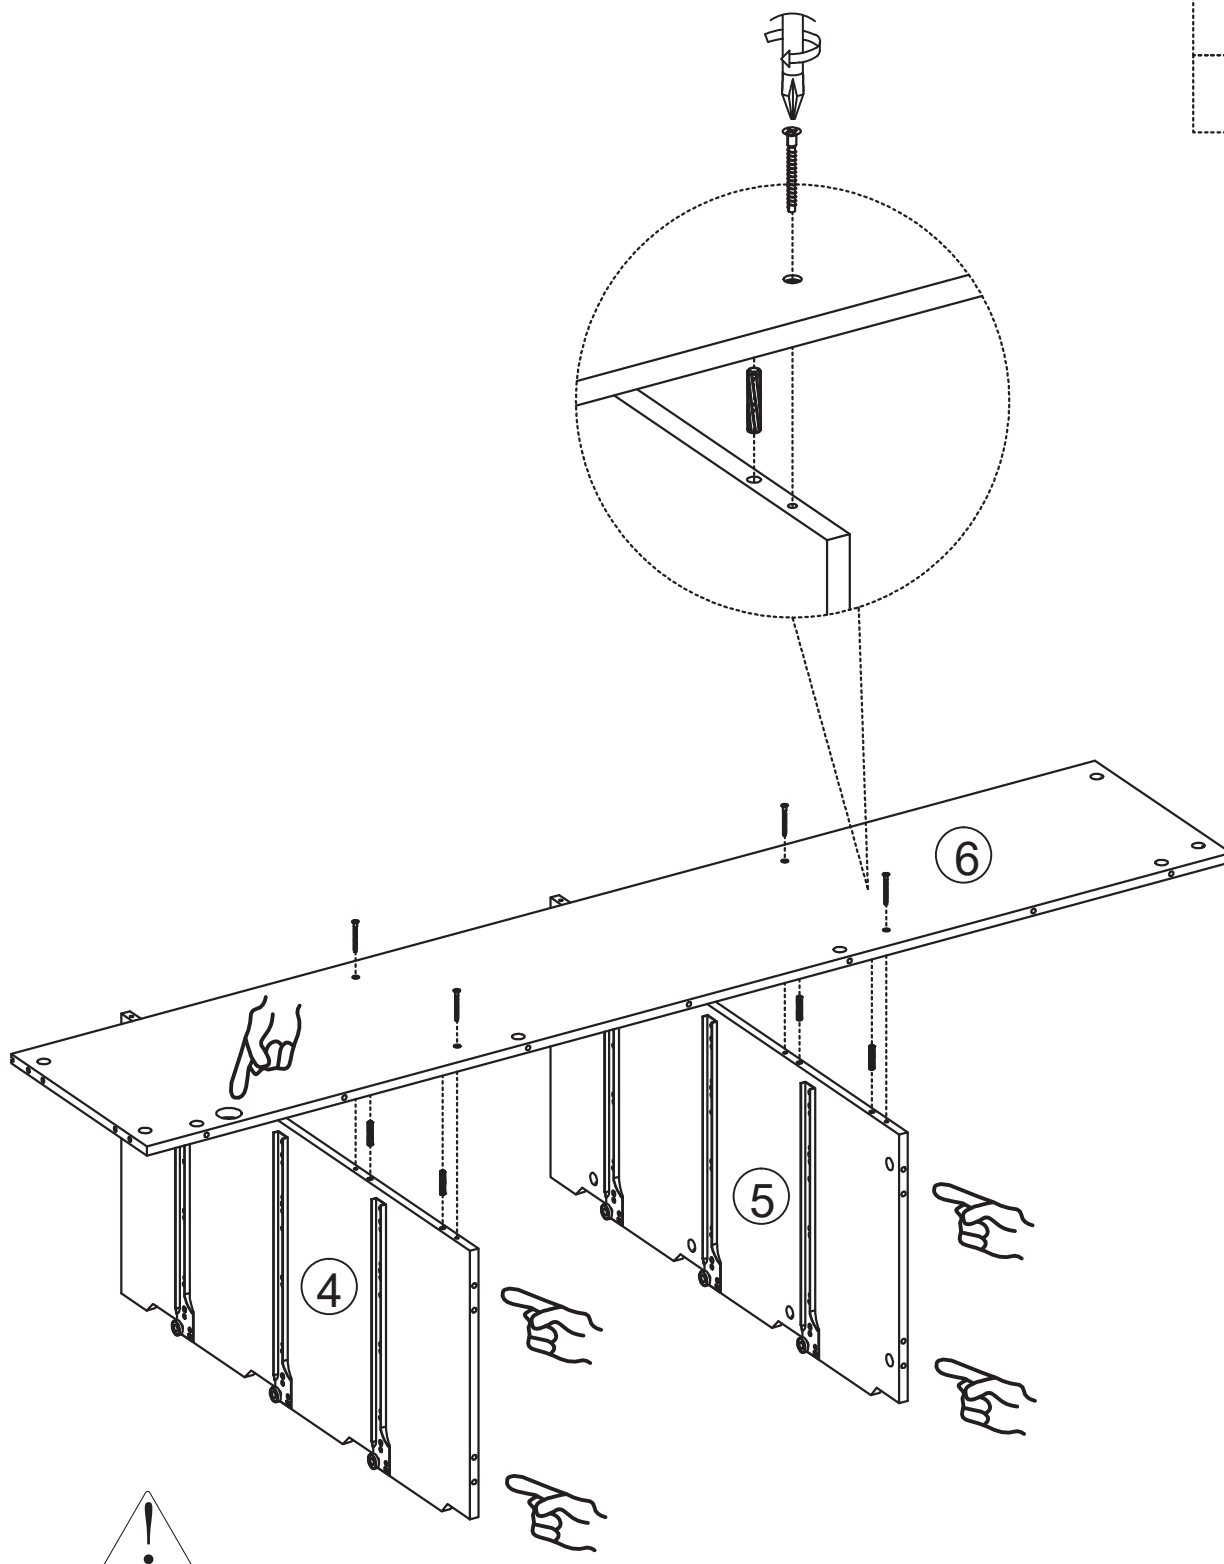


Please pay attention to the installation direction

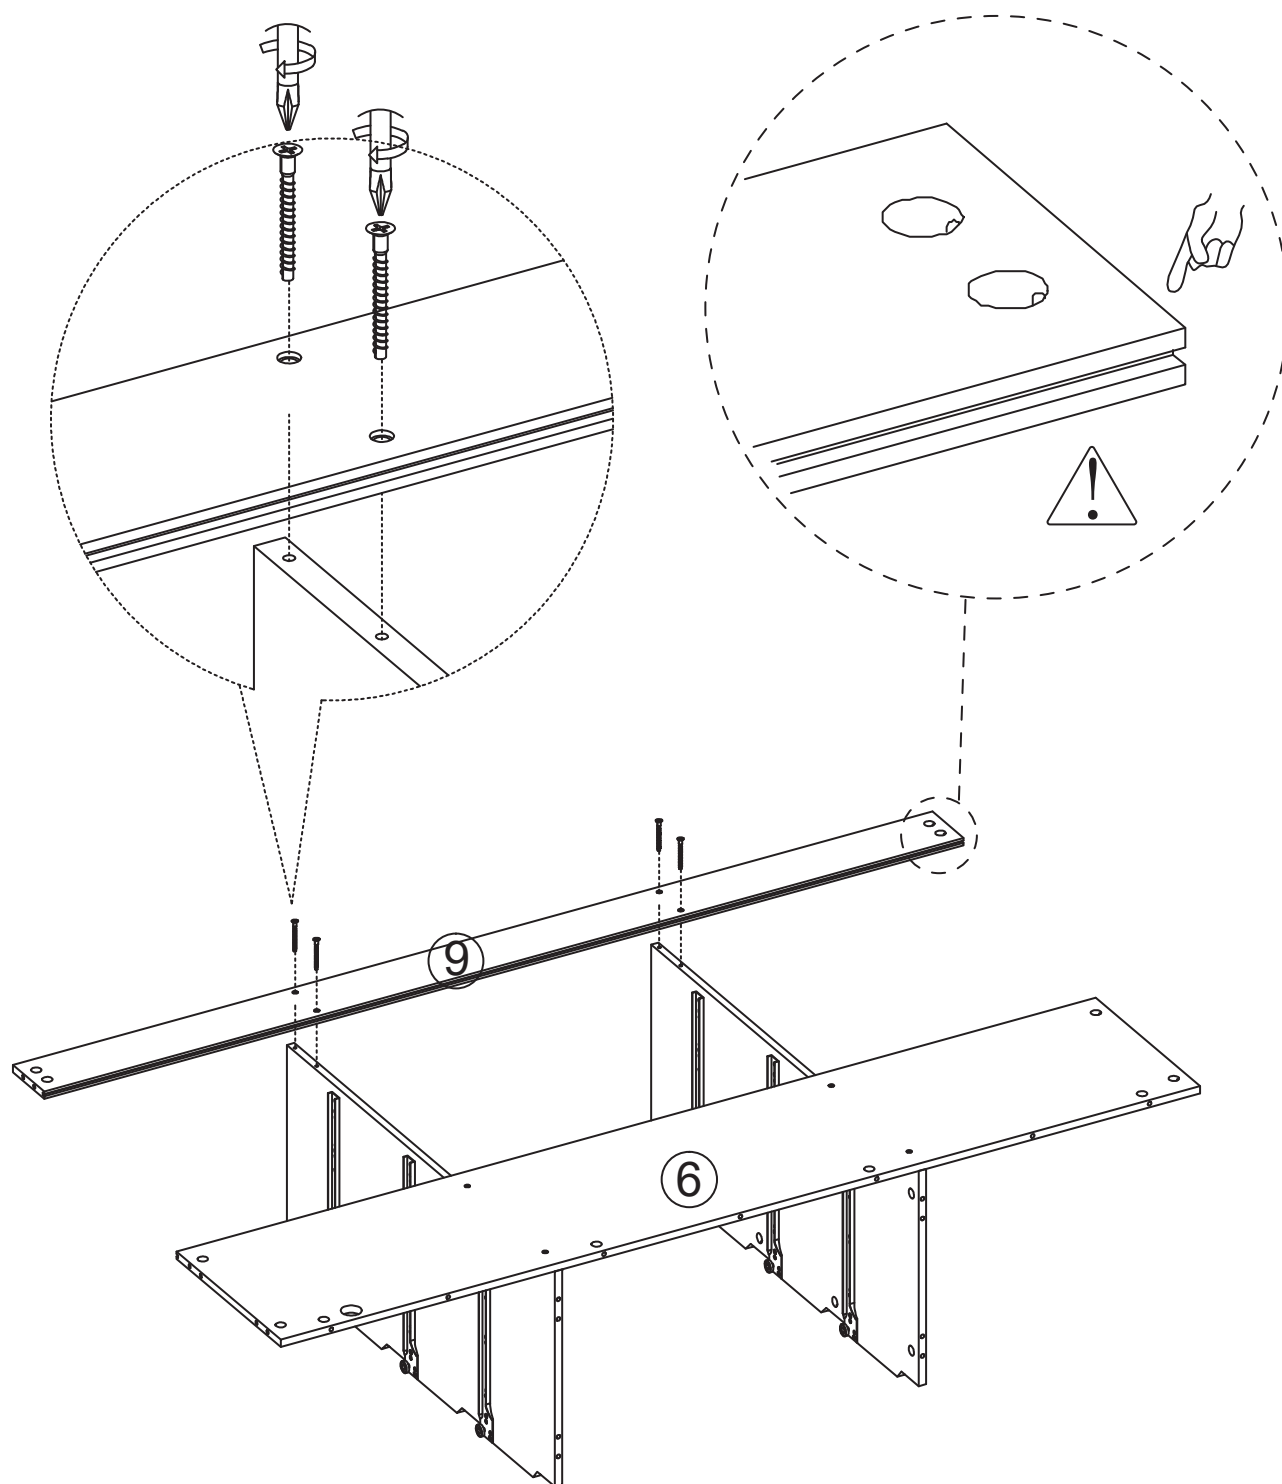



Please pay attention to the installation direction


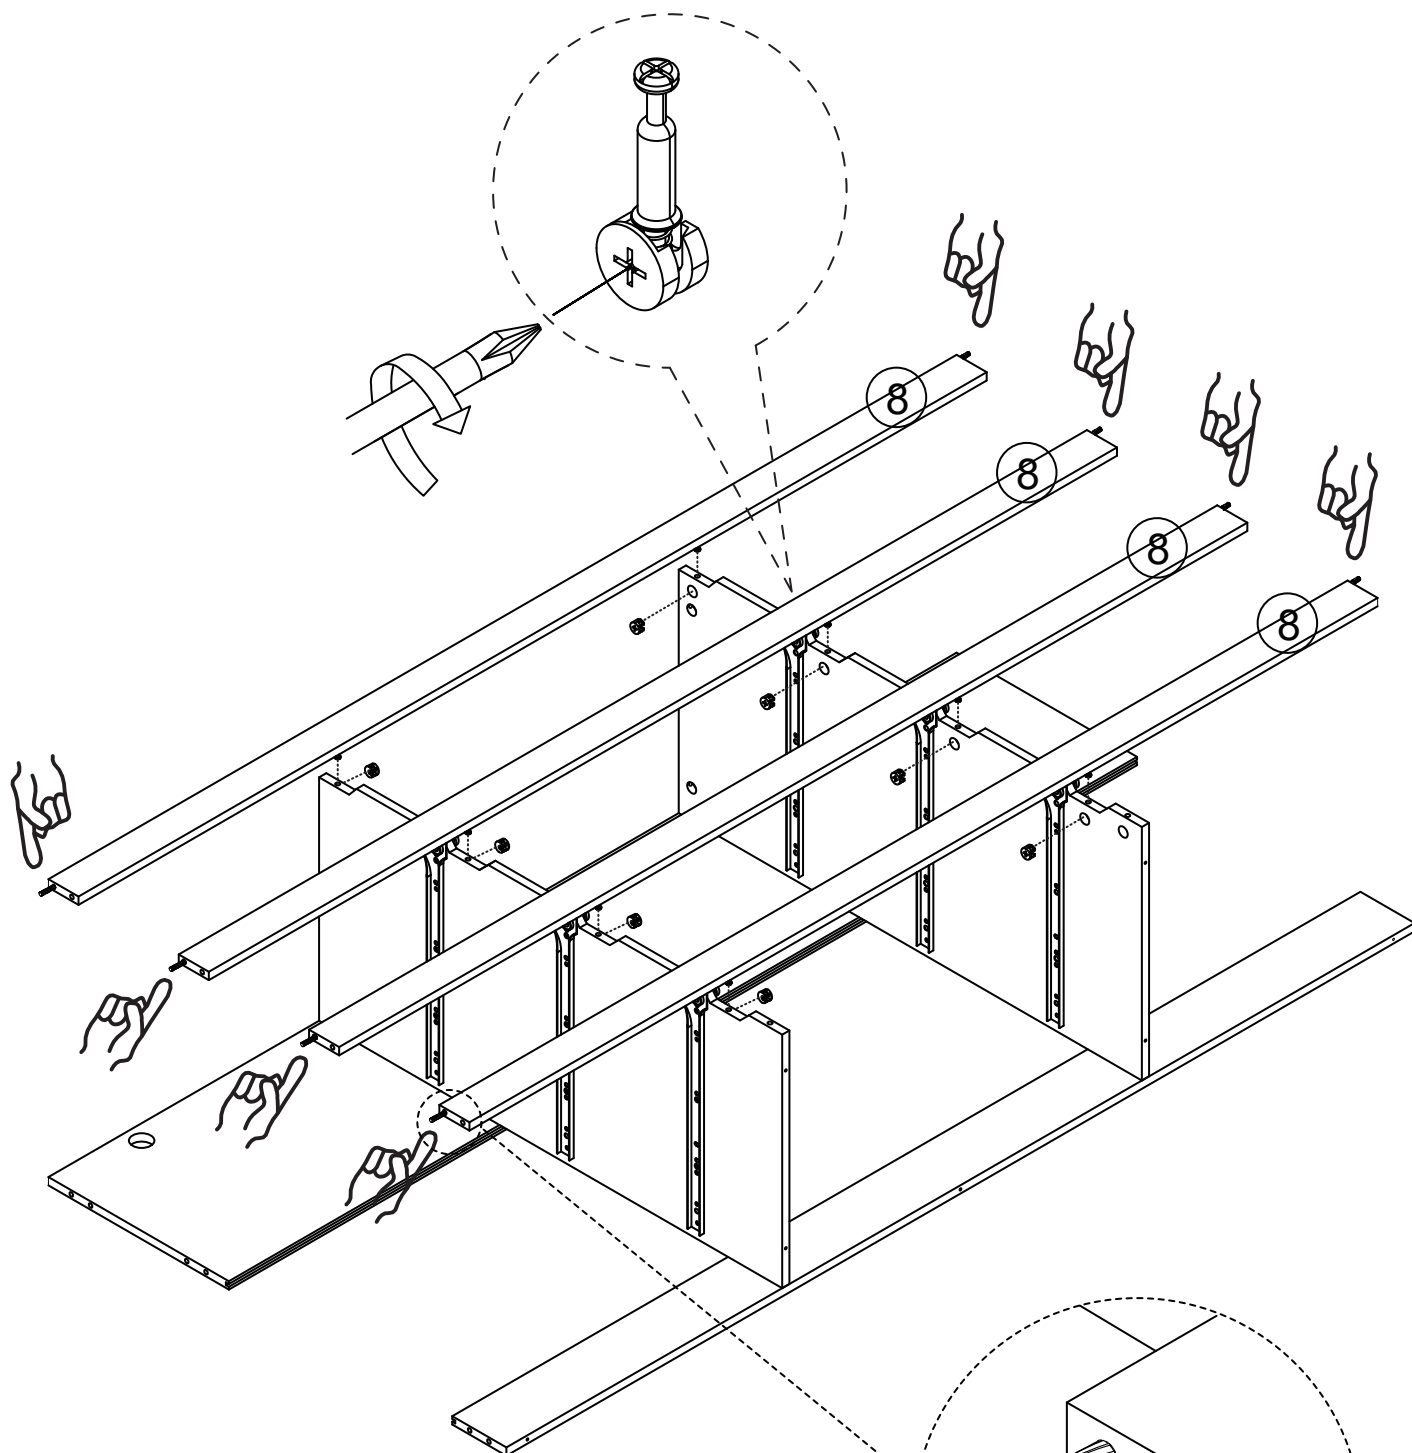


Pay attention to Part 8 do not install it in the wrong direction As shown in the picture, the wooden tenon is placed on top of the 8th wooden board

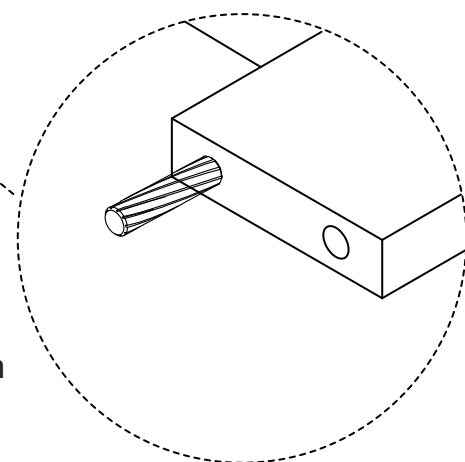


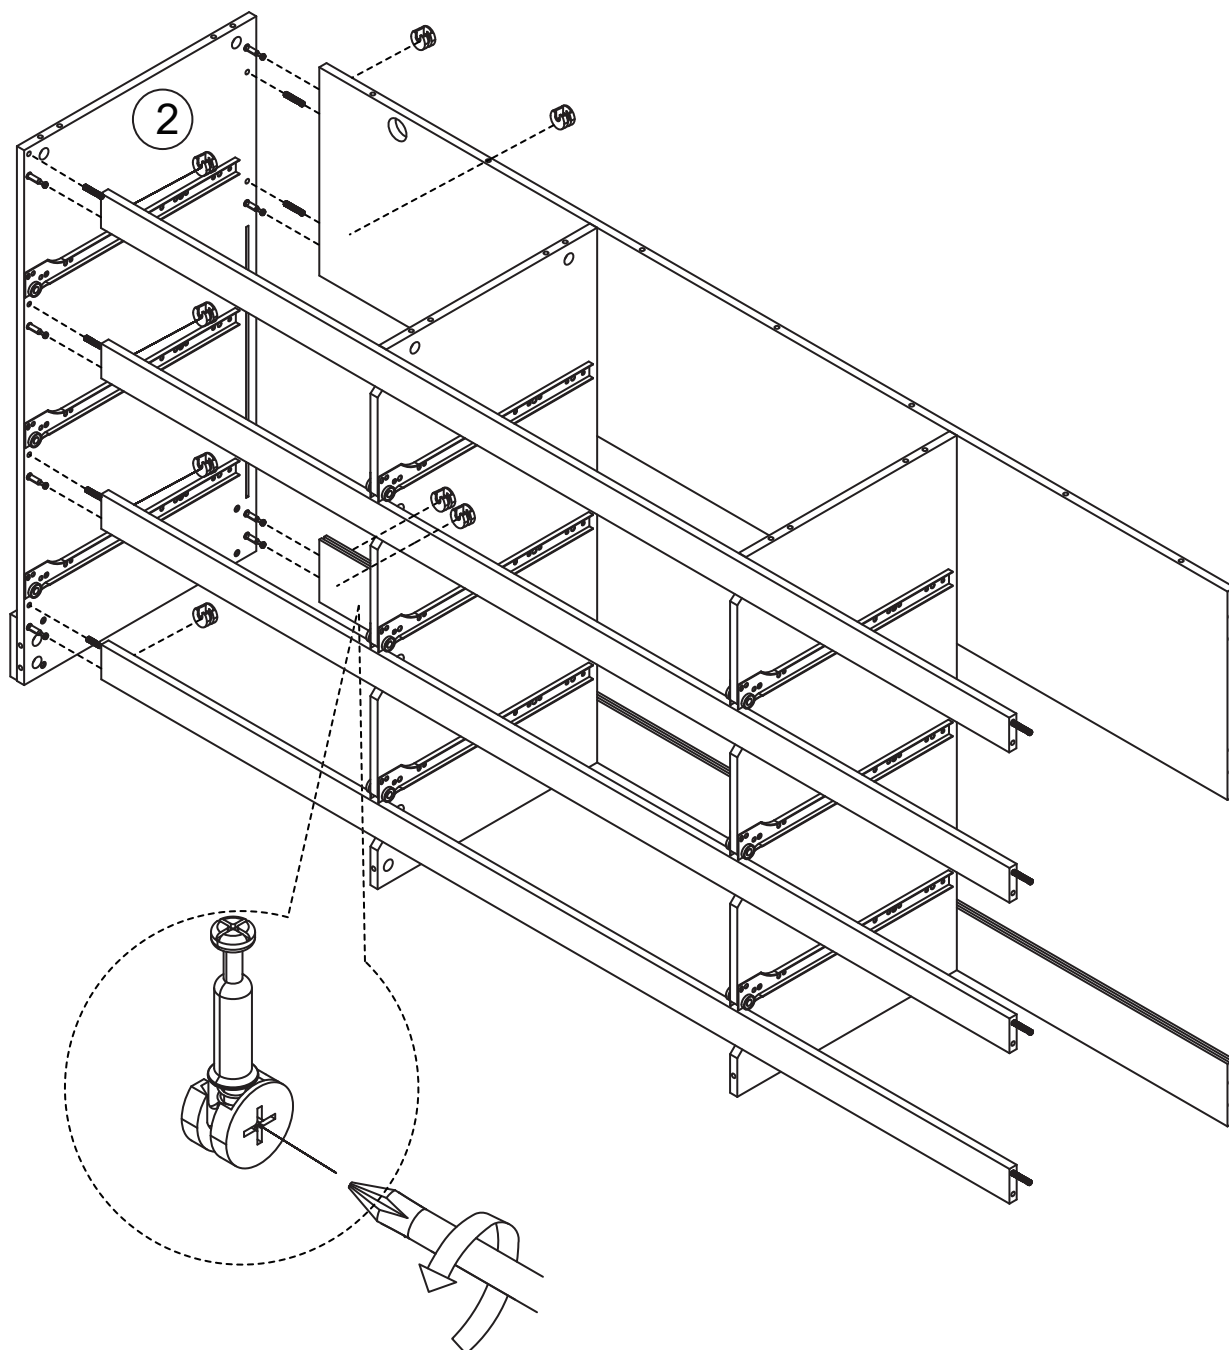


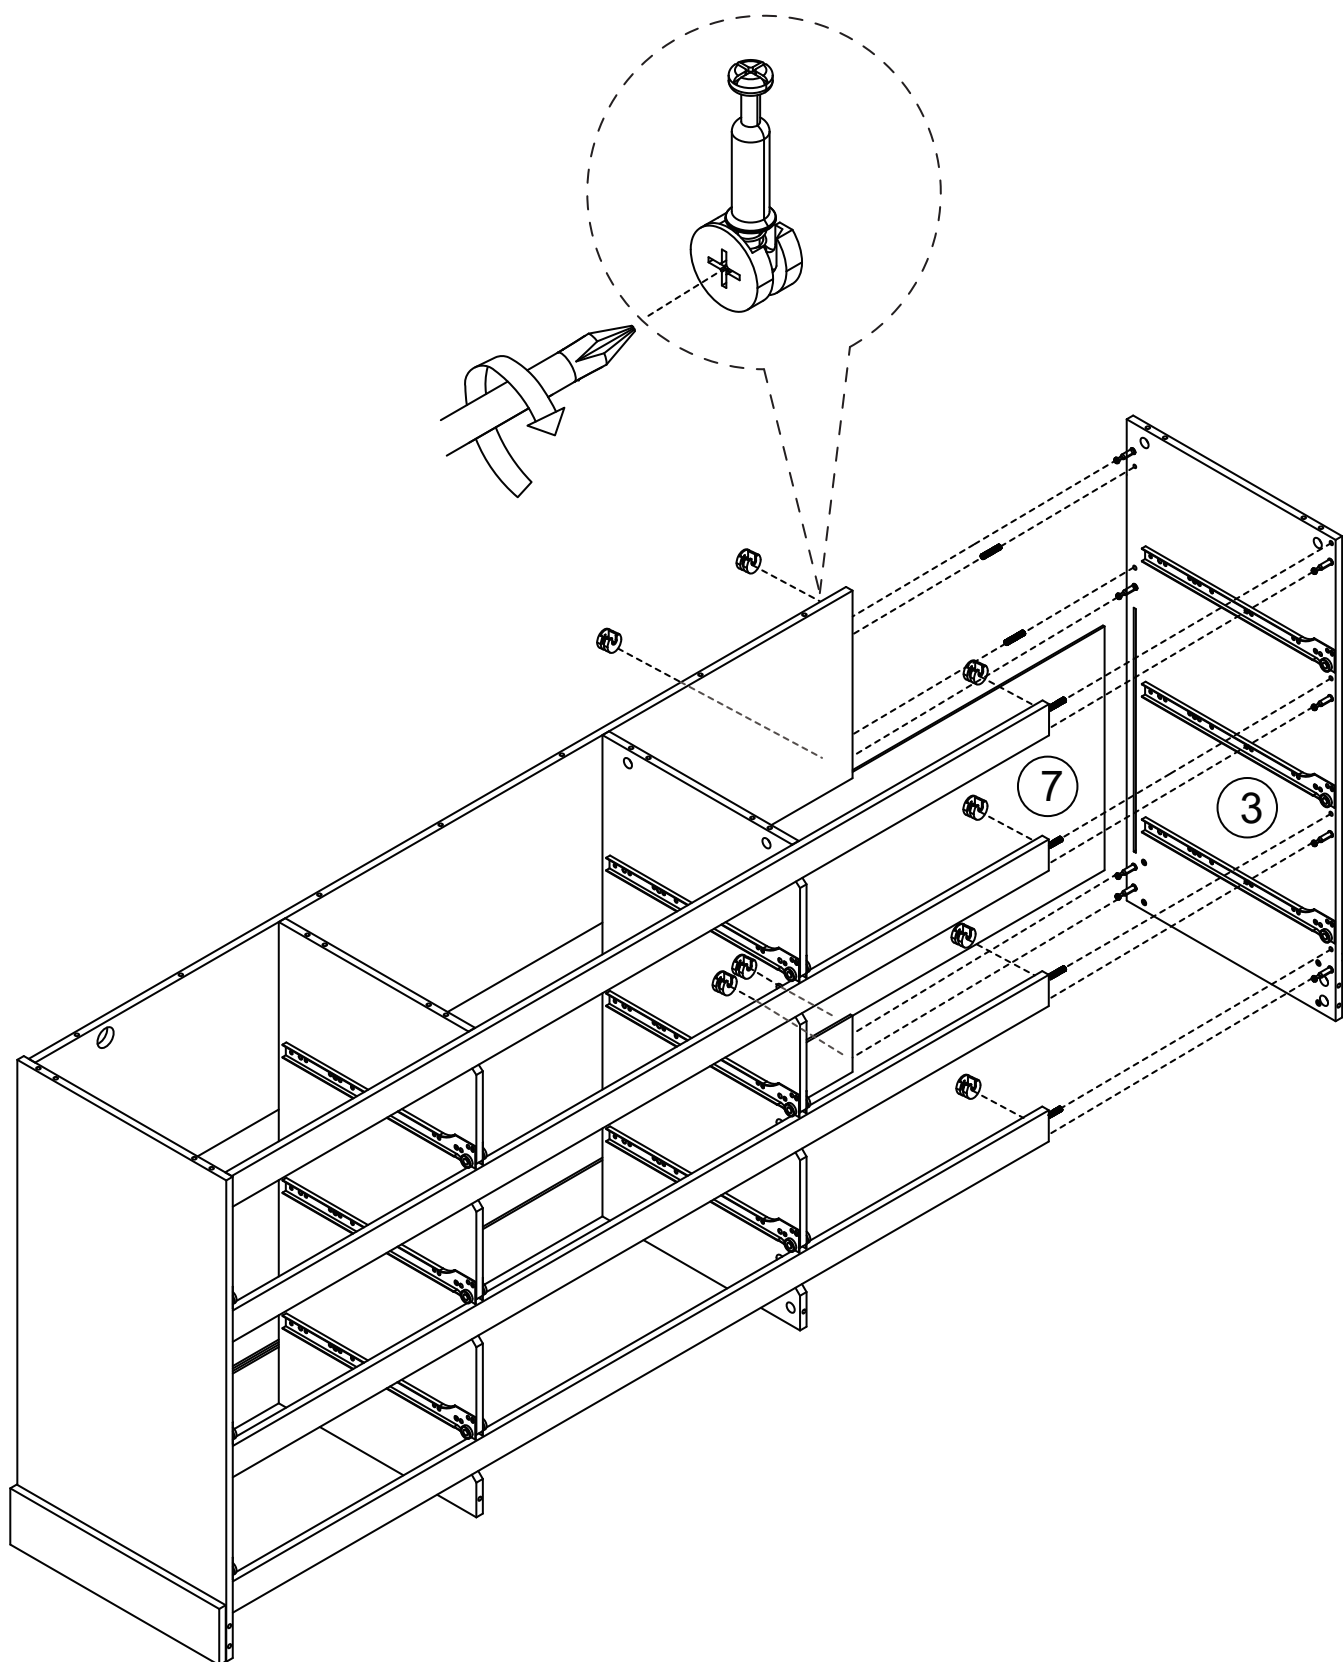 $B \times 8$  $C \times 2$ 

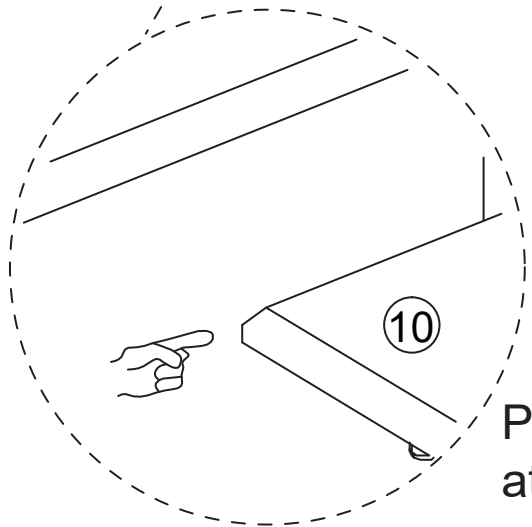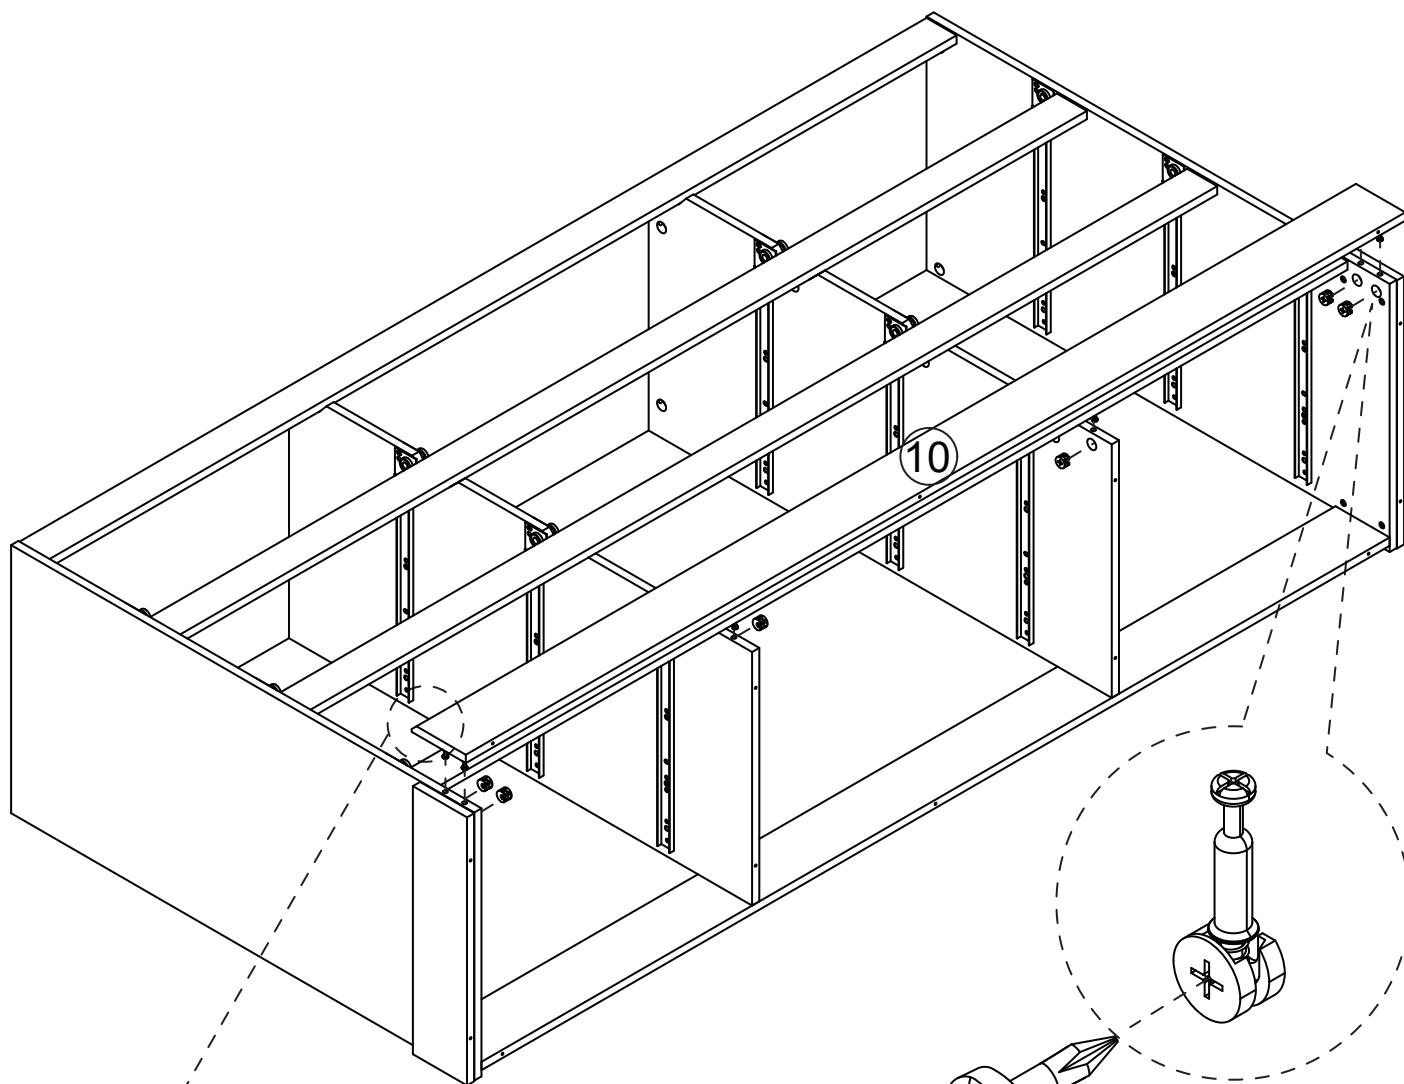


Please pay
attention to the installation direction

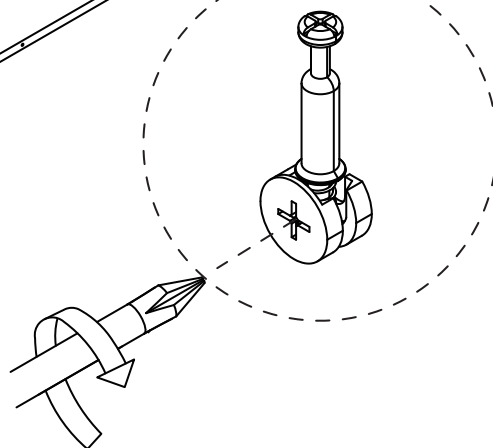

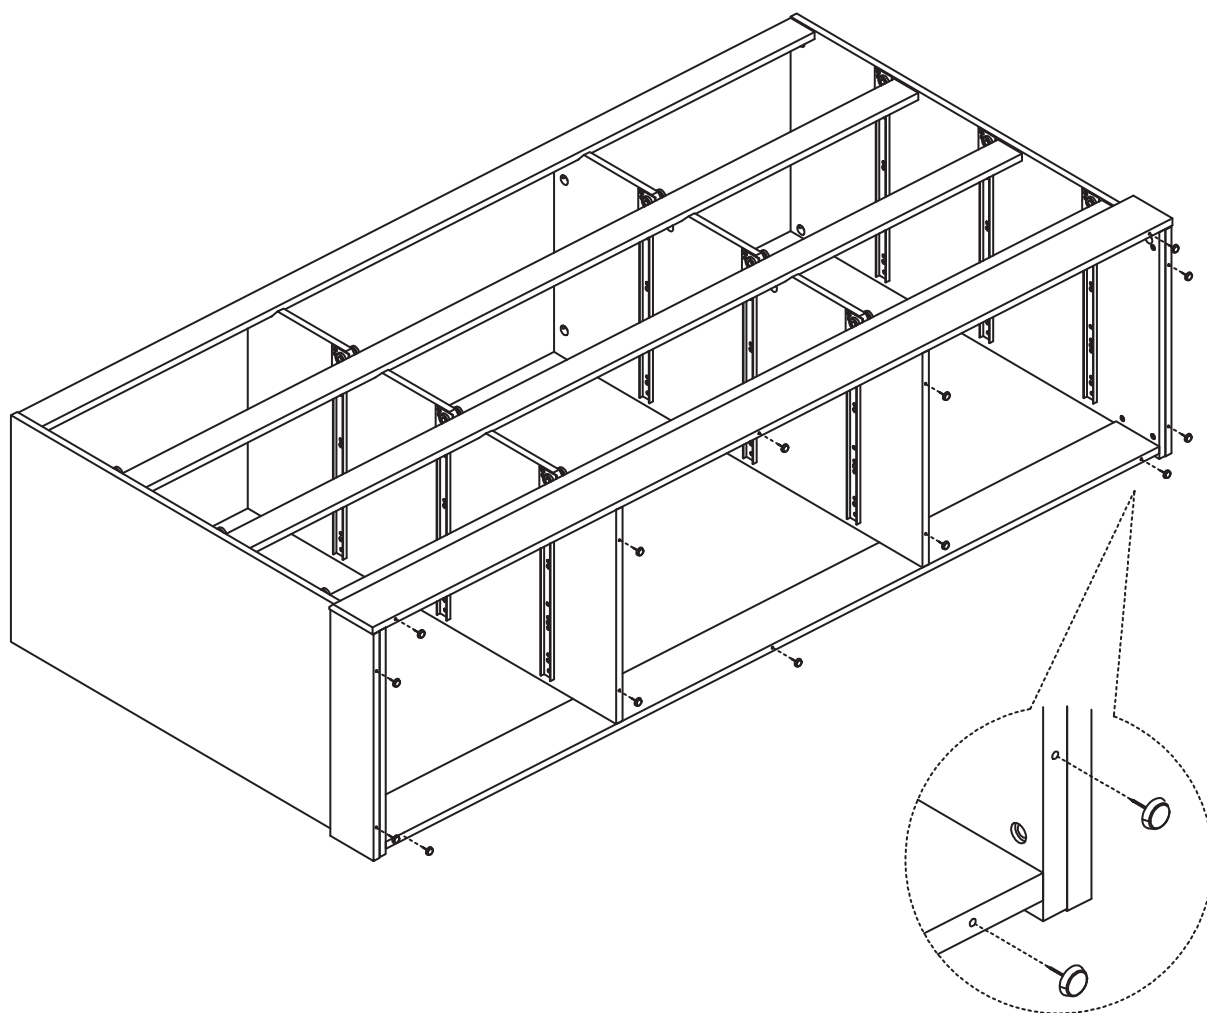


 $B \times 12$  $C \times 11$ 


Please pay
attention to the installation direction

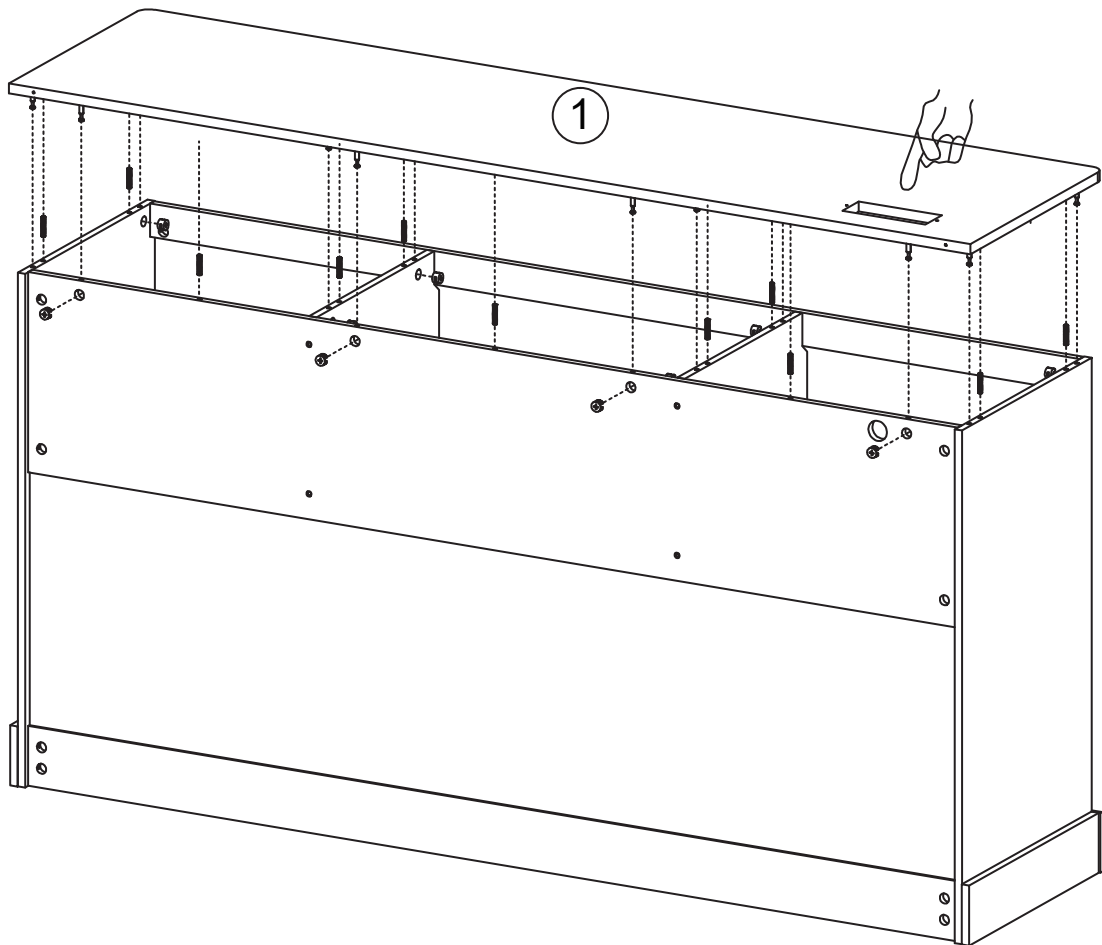

18




A x 12

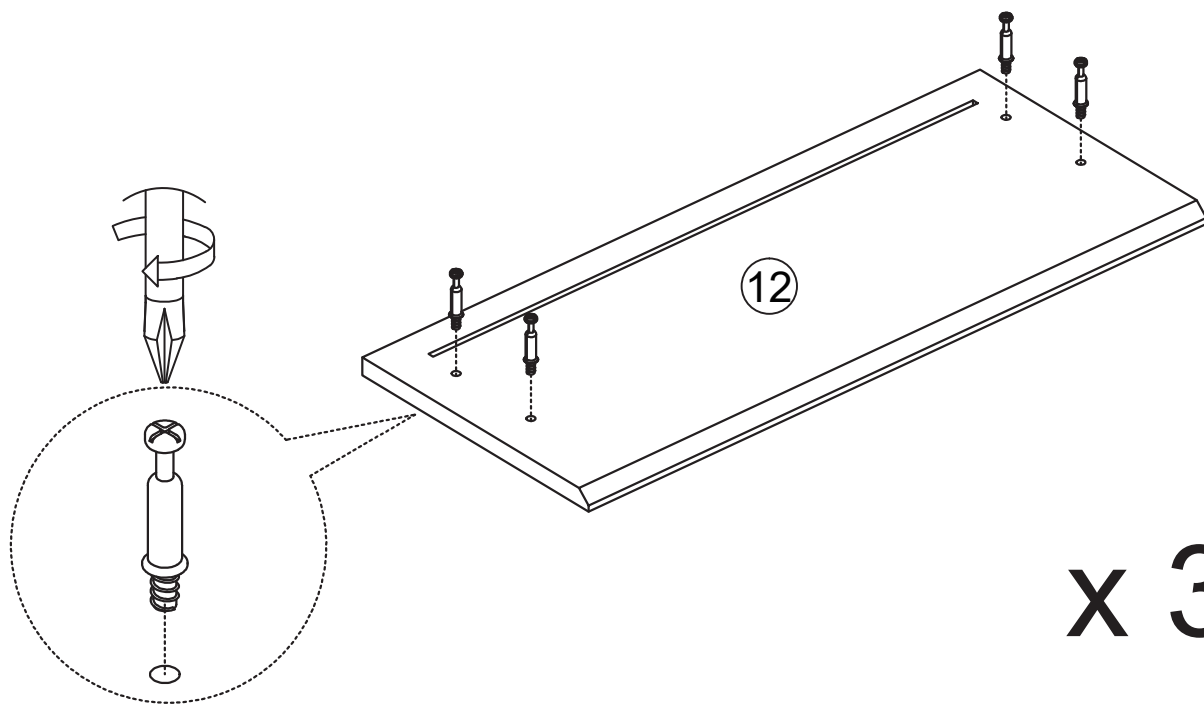


x 3

19




A x 12

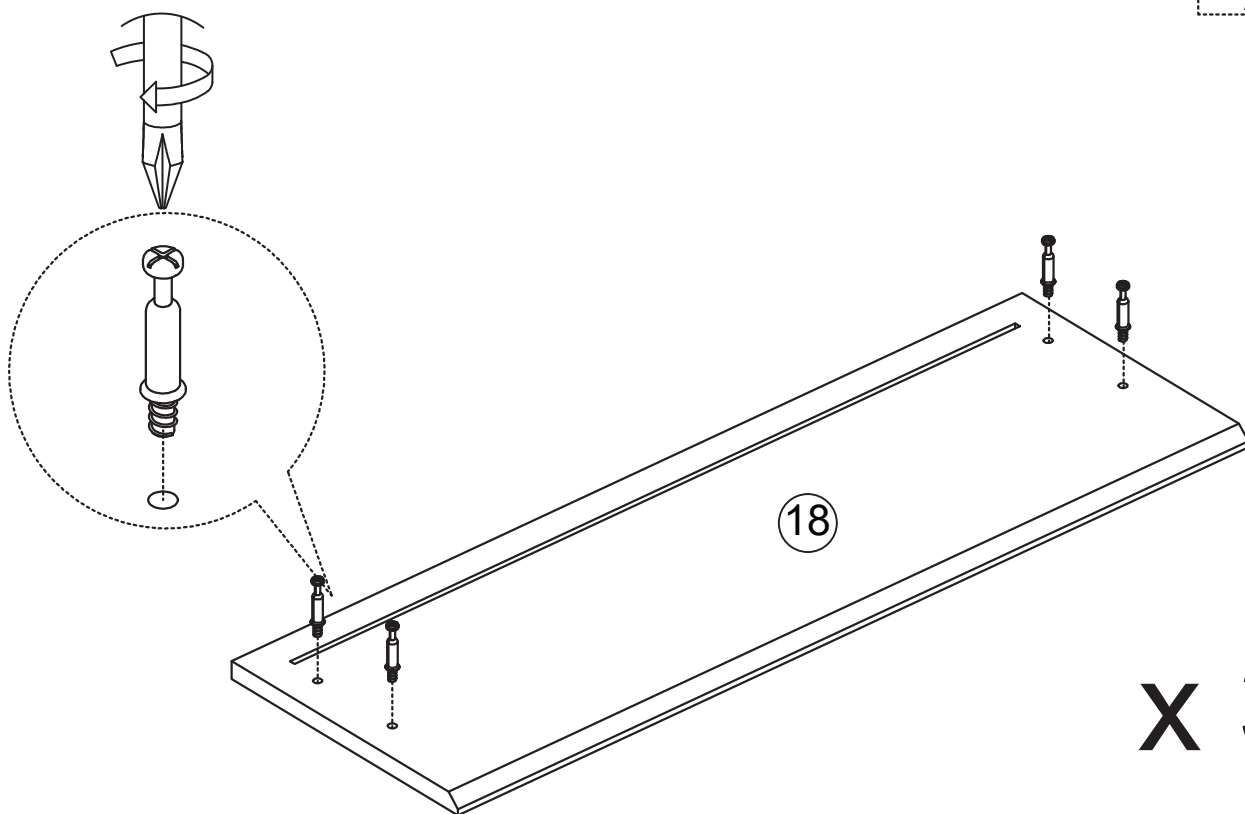


x 3


20




A x 12

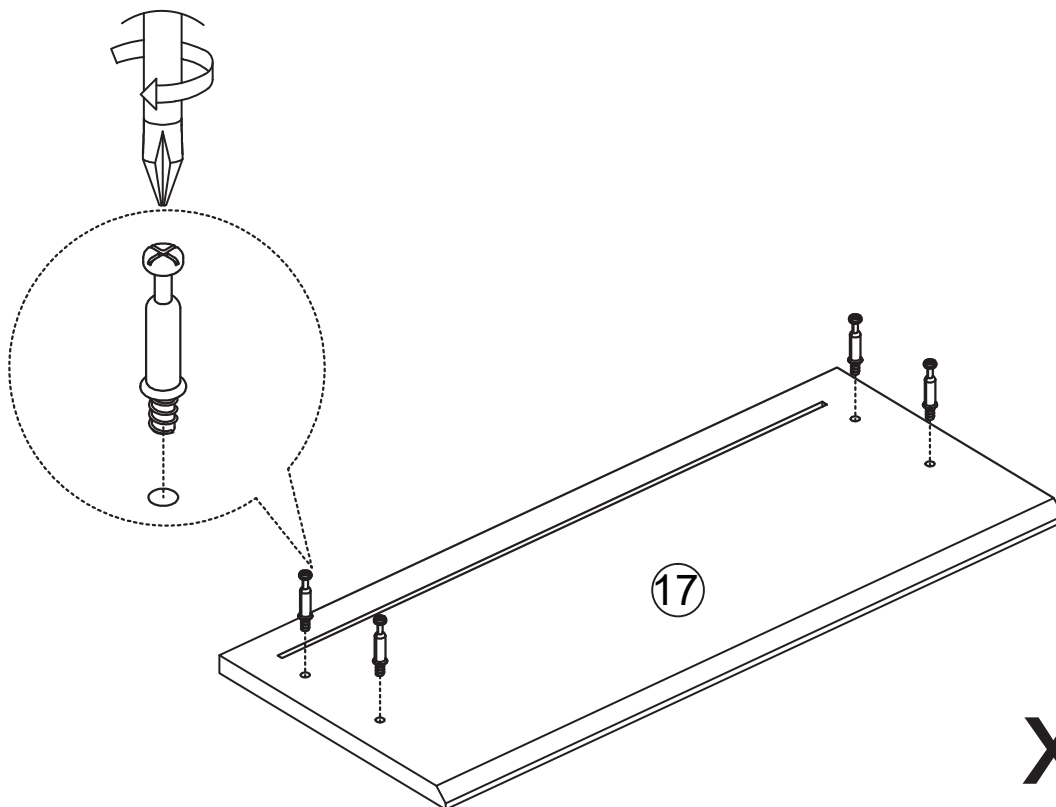


21




E x 24

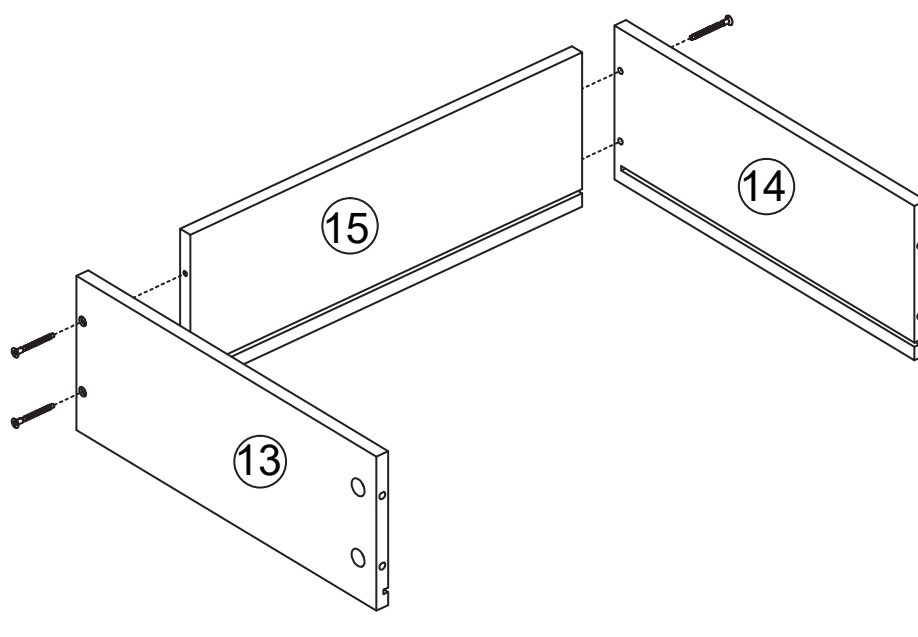


22


E x 12

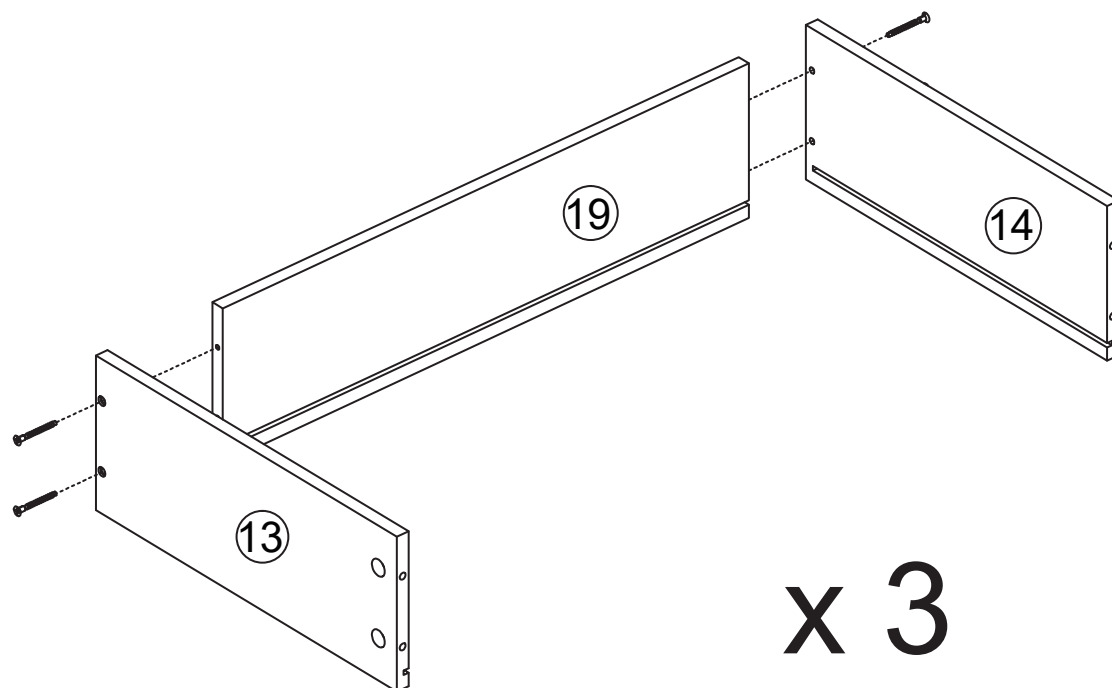


23


B x 12

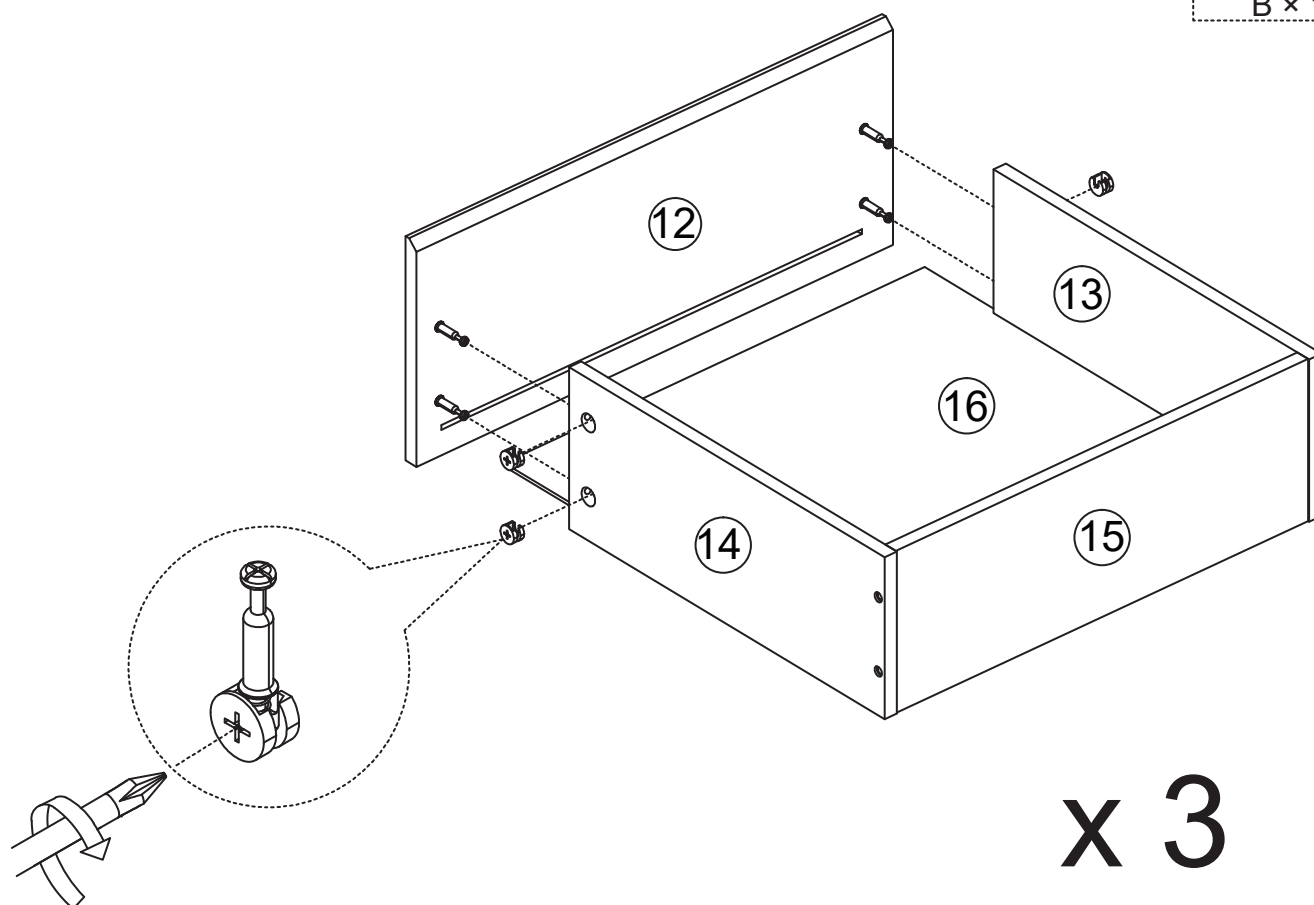


24


B x 12

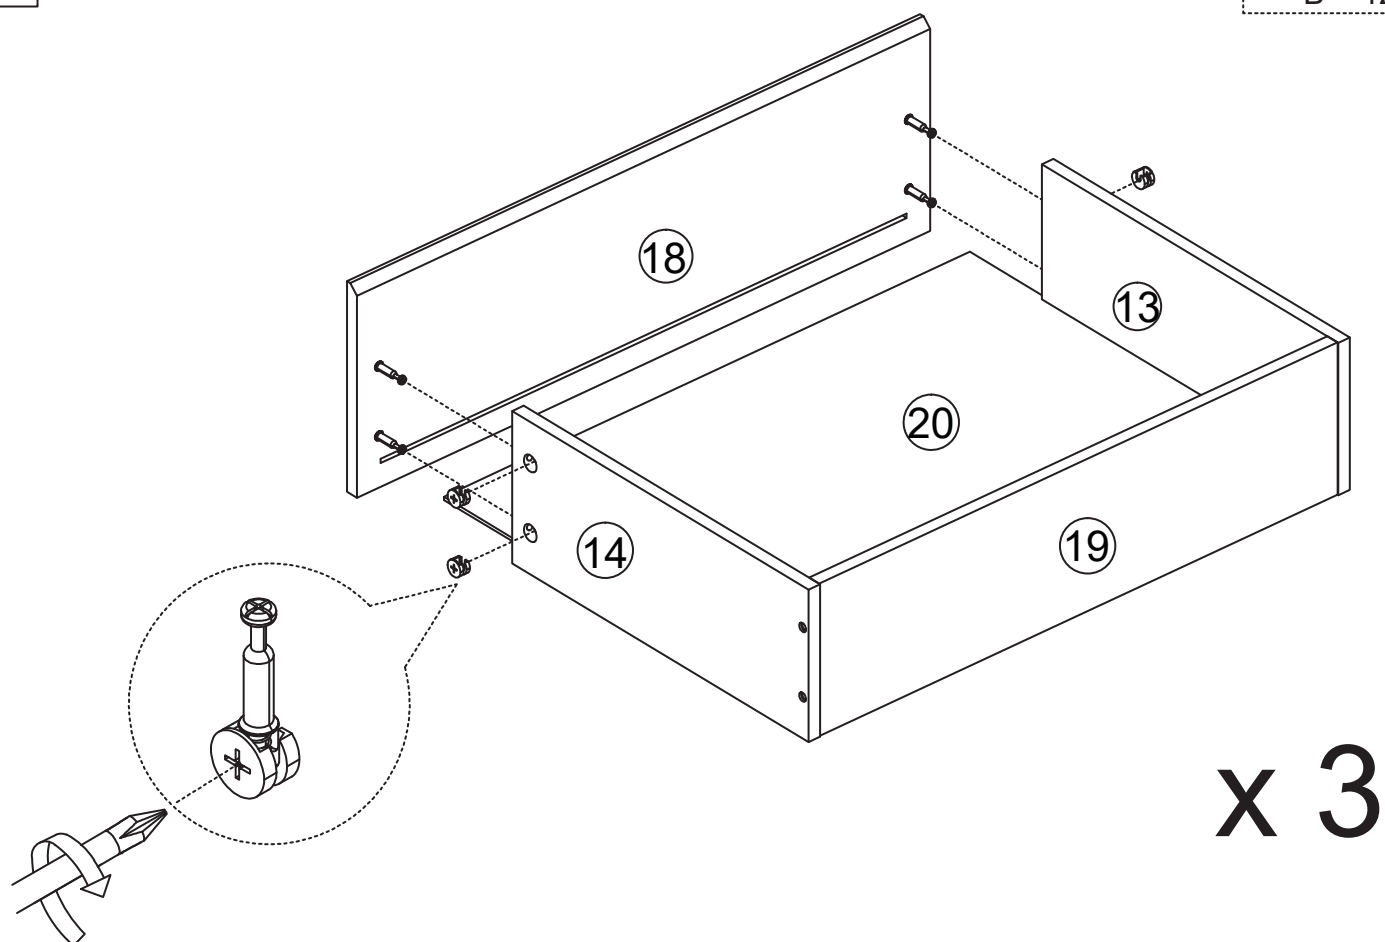


25

B x 12


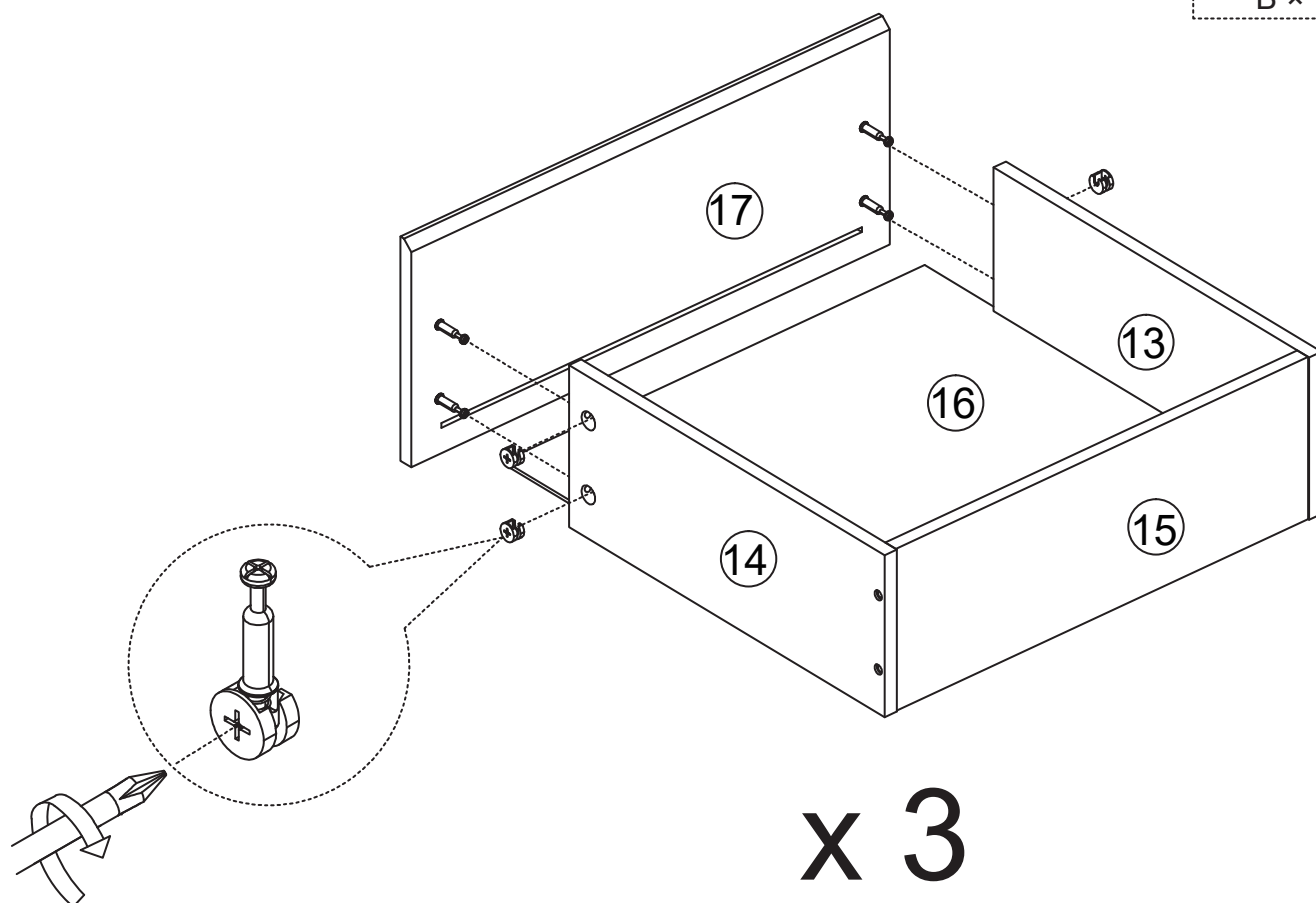


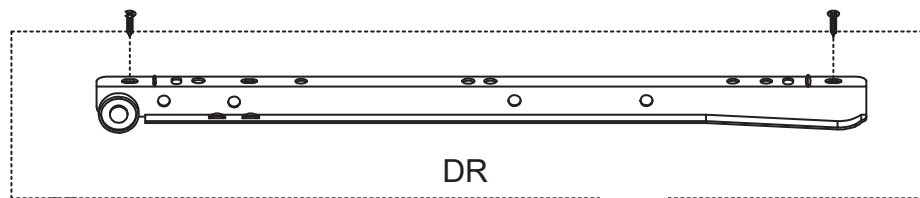


DR x 9
DL x 9
D x 36

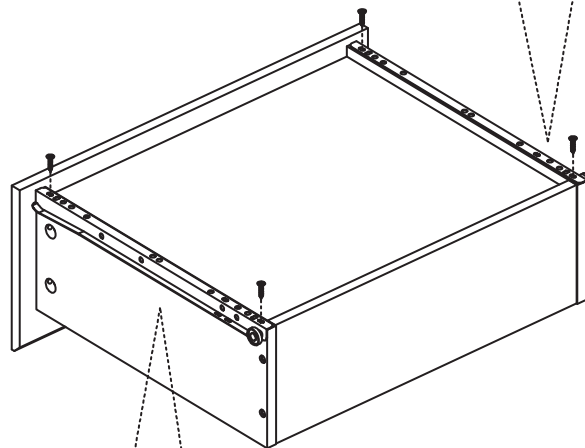

x 3

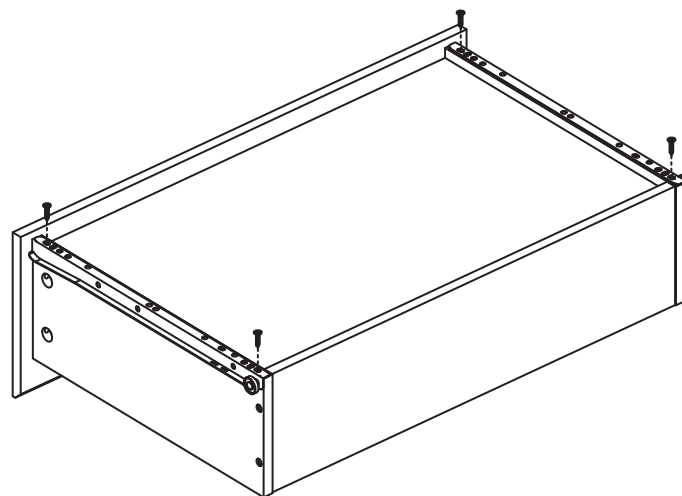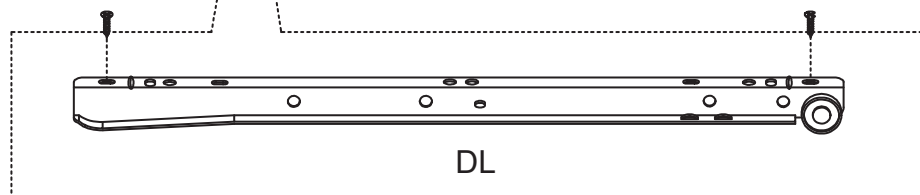

x 3

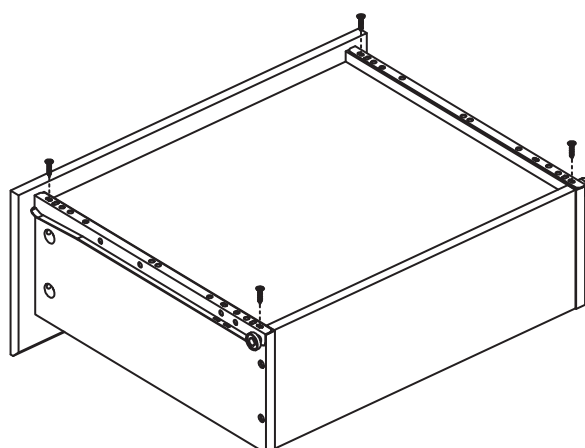

x 3

