NATURAL MARBLE CORNER SHELF

Installation & User Guide

PACKAGE CONTENTS

- Premium Hardware: 1x or 2x Premium Marble Corner Shelves
- Heavy-Duty Adhesive: 3x or 6x Professional Construction Adhesive Tubes (For permanent structural bonding)
- Smart Prep Kit: 3x or 6x Self-Adhesive Support Brackets (For temporary support during installation)
- (Note: 3 brackets and 3 adhesive tubes are required for each individual shelf installation. Please use the exact quantities provided per shelf.)


Installation Video

STEP-BY-STEP INSTALLATION INSTRUCTIONS

- **Step 1**: **Clean & Prep Surfaces**

Thoroughly clean the wall corner (tiles, glass, or stone). Ensure all surfaces are completely dry, free of dust, grease, soap scum, and moisture.



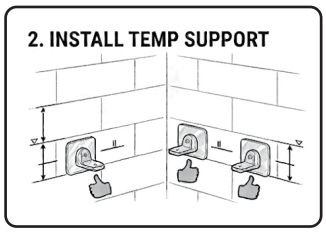



- **Step 2**: **Position & Mount Temporary Brackets**

Determine your desired height for the shelf. Peel off the protective film from 3 self-adhesive support brackets. Stick them firmly onto the wall right beneath where the shelf will sit—two brackets on one wall and one on the adjacent wall—to create a level, stable triangle base. Press firmly for 10 seconds.

- **Step 3**: **Apply Permanent Construction Adhesive**

Cut the tip of the construction adhesive tube. Apply continuous, thick beads of adhesive directly along the two straight edges (wall-contact sides) of the quarter-circle marble shelf.

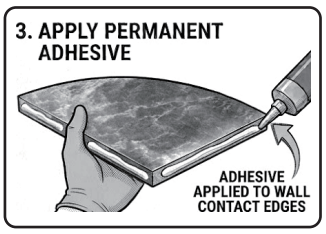

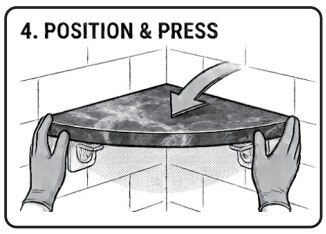



- **Step 4: Place & Press the Shelf**

Carefully slide the marble shelf into the corner, letting it rest gently on top of the 3 temporary adhesive brackets. Press the shelf firmly against both walls to ensure the construction adhesive spreads evenly and forms a solid structural bond. Wipe away any excess glue immediately with a damp cloth.

- **Step 5: Wait 48 Hours for Full Curing**

Allow the permanent construction adhesive to cure completely for at least 48 hours. Keep the shelf completely free of weight, water, and moisture during this period.

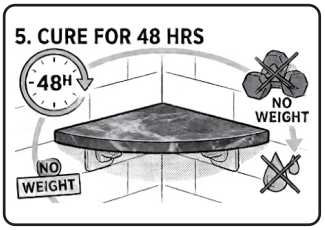

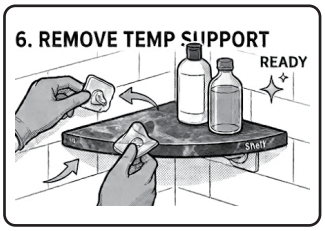

- **Step 6: Remove Temporary Brackets & Apply Waterproof Seal**

Once the 48-hour curing period is complete, carefully peel or slide the 3 temporary self-adhesive brackets off the wall. For optimal waterproofing and a clean finish in wet environments, you can now apply an additional bead of construction adhesive along the top joints where the shelf meets the wall. Your premium marble shelf is now permanently anchored and fully ready for daily use!

- **CRUCIAL SAFETY & USAGE NOTE**

The self-adhesive brackets are designed for temporary leveling and load support ONLY during the installation process. Do not place any items on the marble shelf until the permanent construction adhesive has fully cured for 48 hours and the temporary brackets have been safely removed.

NEED HELP?

CALL US:

1-646-586-1686

OR EMAIL:

inno@innostickers.com