

ASSEMBLY INSTRUCTIONS

ADIRONDACK CHAIR

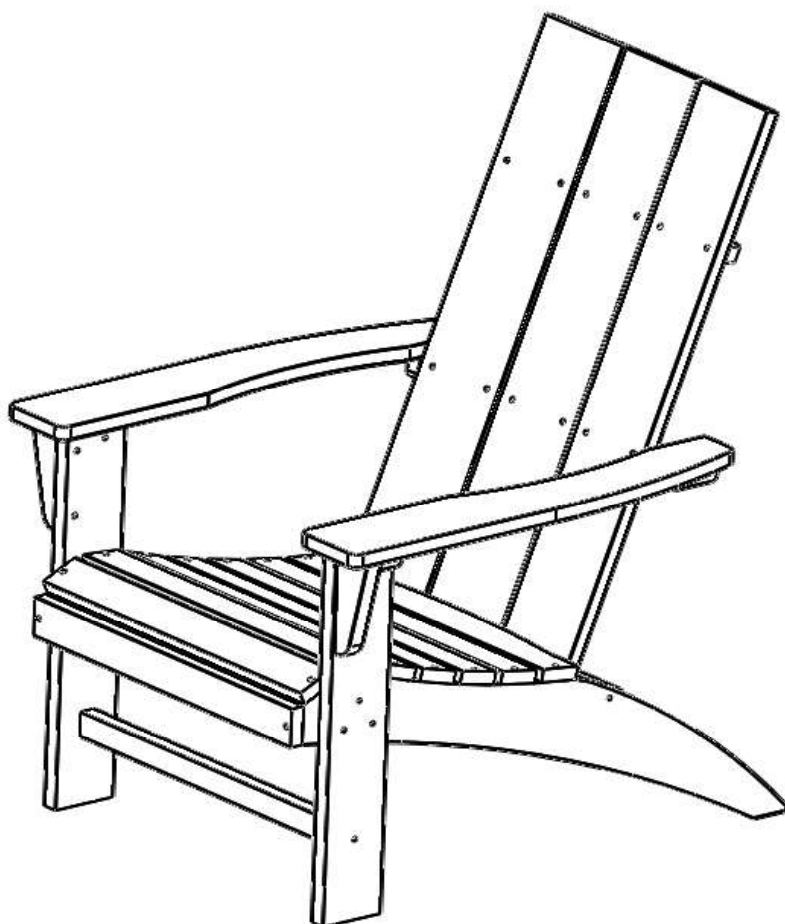

***THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.***

Important Safety Information





- *Please read all instructions carefully before assembling this furniture.*
- *For your safety, assembly by two or more adults is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*

Before Assembly


- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box provides an ideal work surface.*
- *To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- *Use the parts and hardware lists below to identify and separate each of the pieces included.*
- *The use of power tools for assembly is not recommended. Power tools can damage the hardware and/or split the material.*
- **Note:** *Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.*

Care and Cleaning

- *Routine cleaning of the furniture can be completed with only warm water and soap.*
- *You can use the sanding sponge for cleaning.*

Components			(A1)	(A2)	(B1)
A1	Left leg	1			
A2	Right leg	1			
B1	Left armrest	1			
B2	Right armrest	1	(B2)	(C)	(D)
C	Seat	1			
D	Backrest	1			
E	Support bean	1			
H	Seat slat	1	(E)	(H)	
					

Hardware

(F)
 M6*43MM Bolt
 Qty: 12
 


(G)
 M6*55MM Bolt
 Qty: 2
 

(I)
 M4.2*40MM Bolt
 Qty: 2
 



Tools Needed for Assembly



Hex key


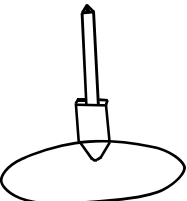


Step 1

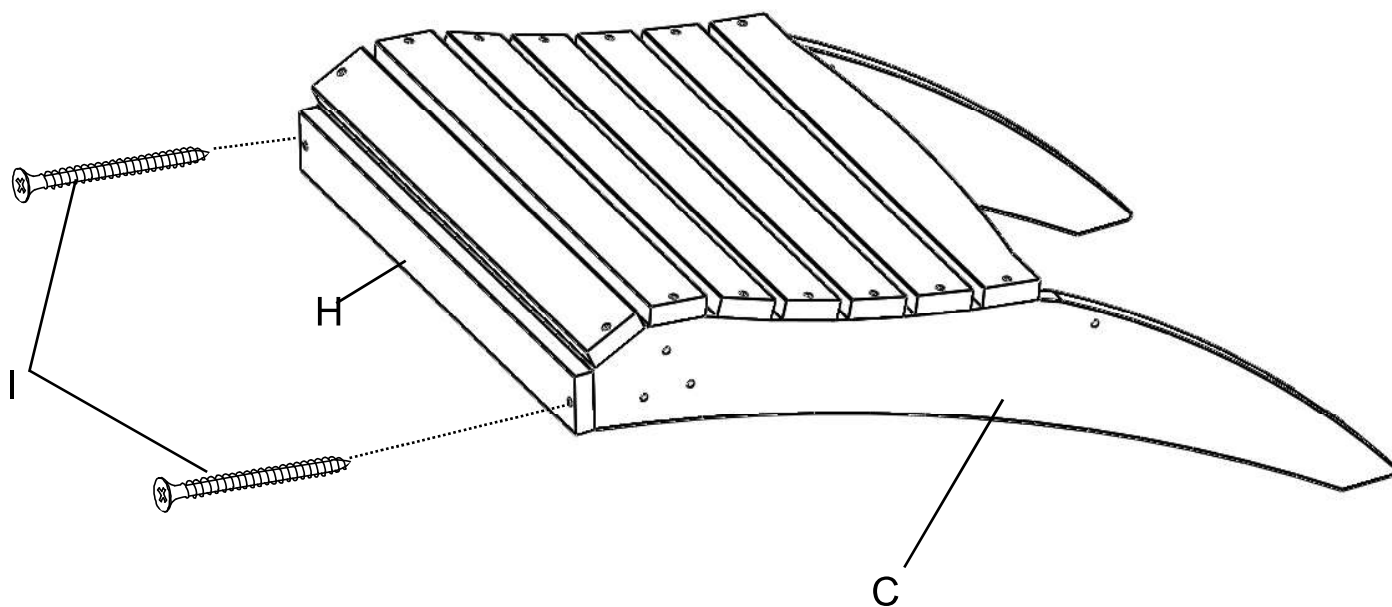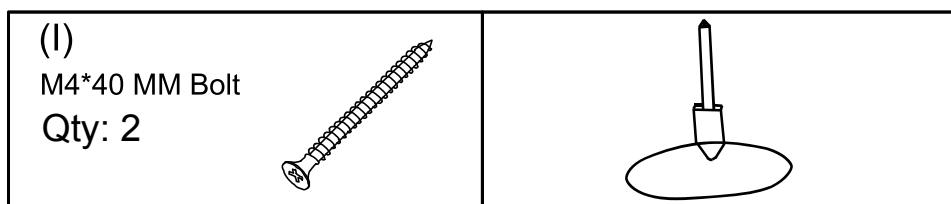



Attach the Seat slat (H) to the seat C.
Secure with bolt I x2

Step 2

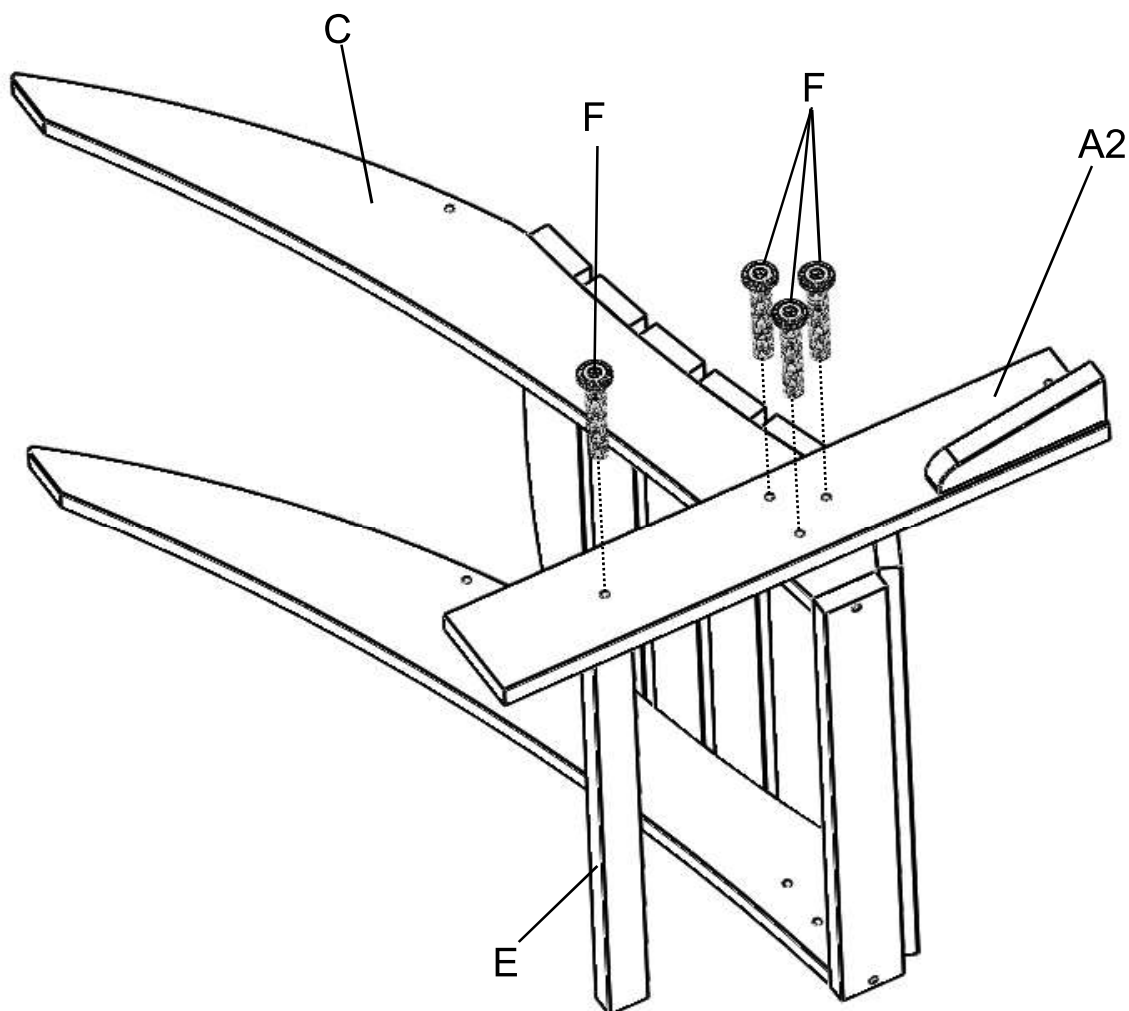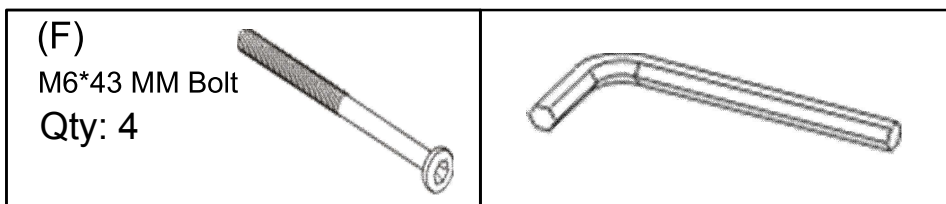

Attach the right leg A2 to the seat C.
Secure with bolt F x3
Attach the support beam E to the right leg A2.
Secure with bolt F x1



Step 3

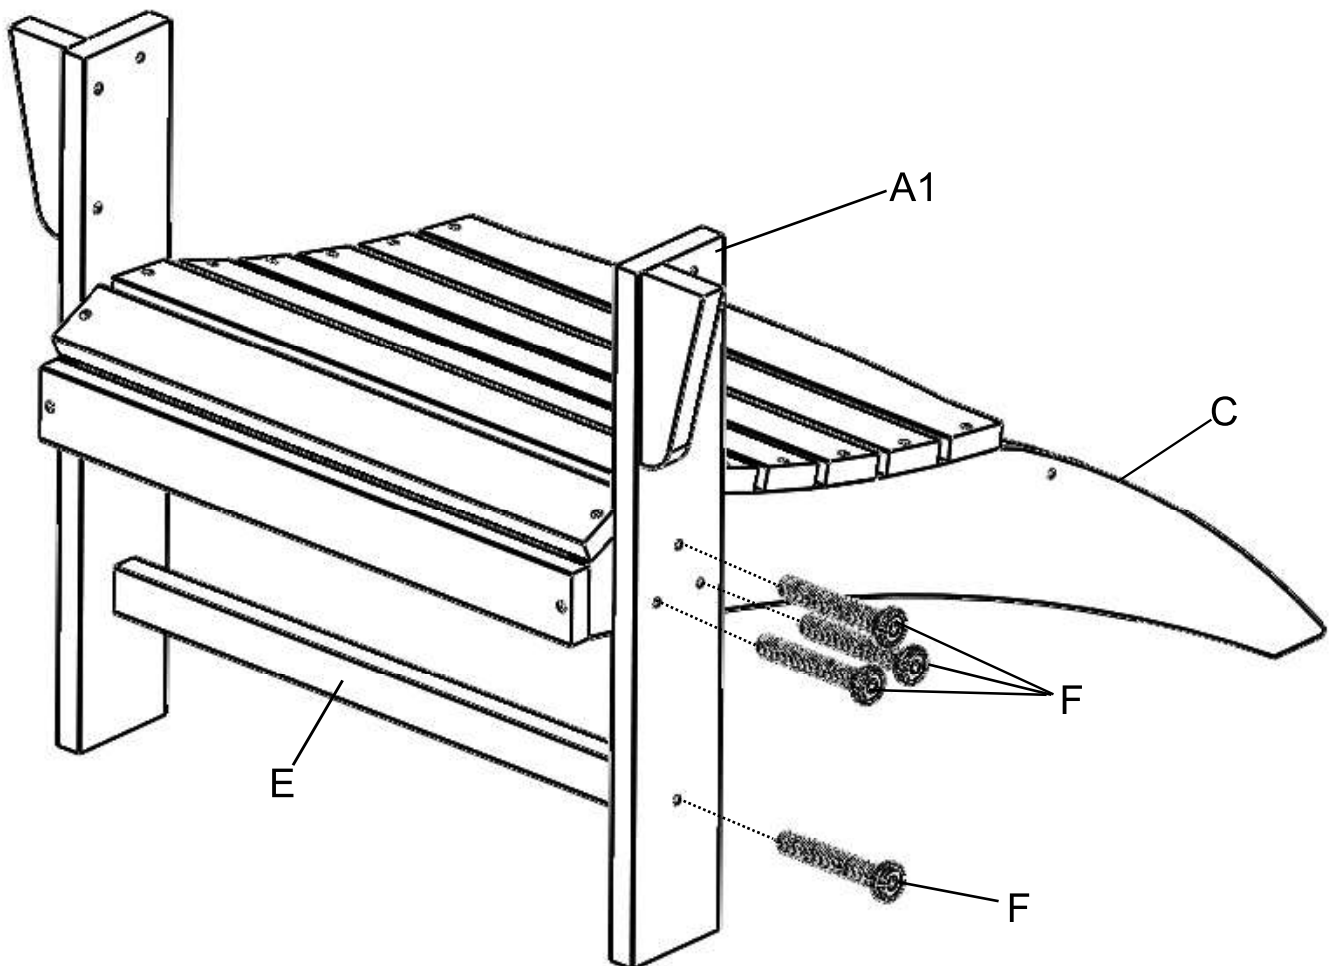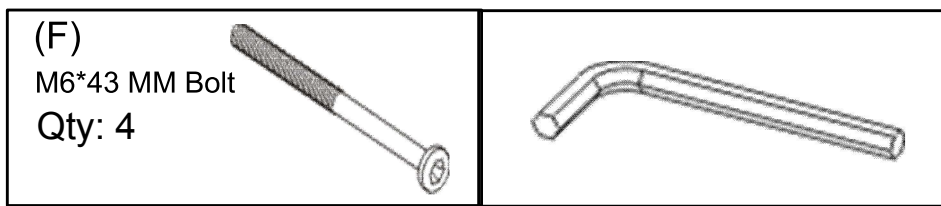

Attach the left leg A1 to the seat C.
Secure with bolt F x3
Attach the support beam E to the left leg A1.
Secure with bolt F x1

Step 4

(F)
M6*43MM Bolt
Qty: 1

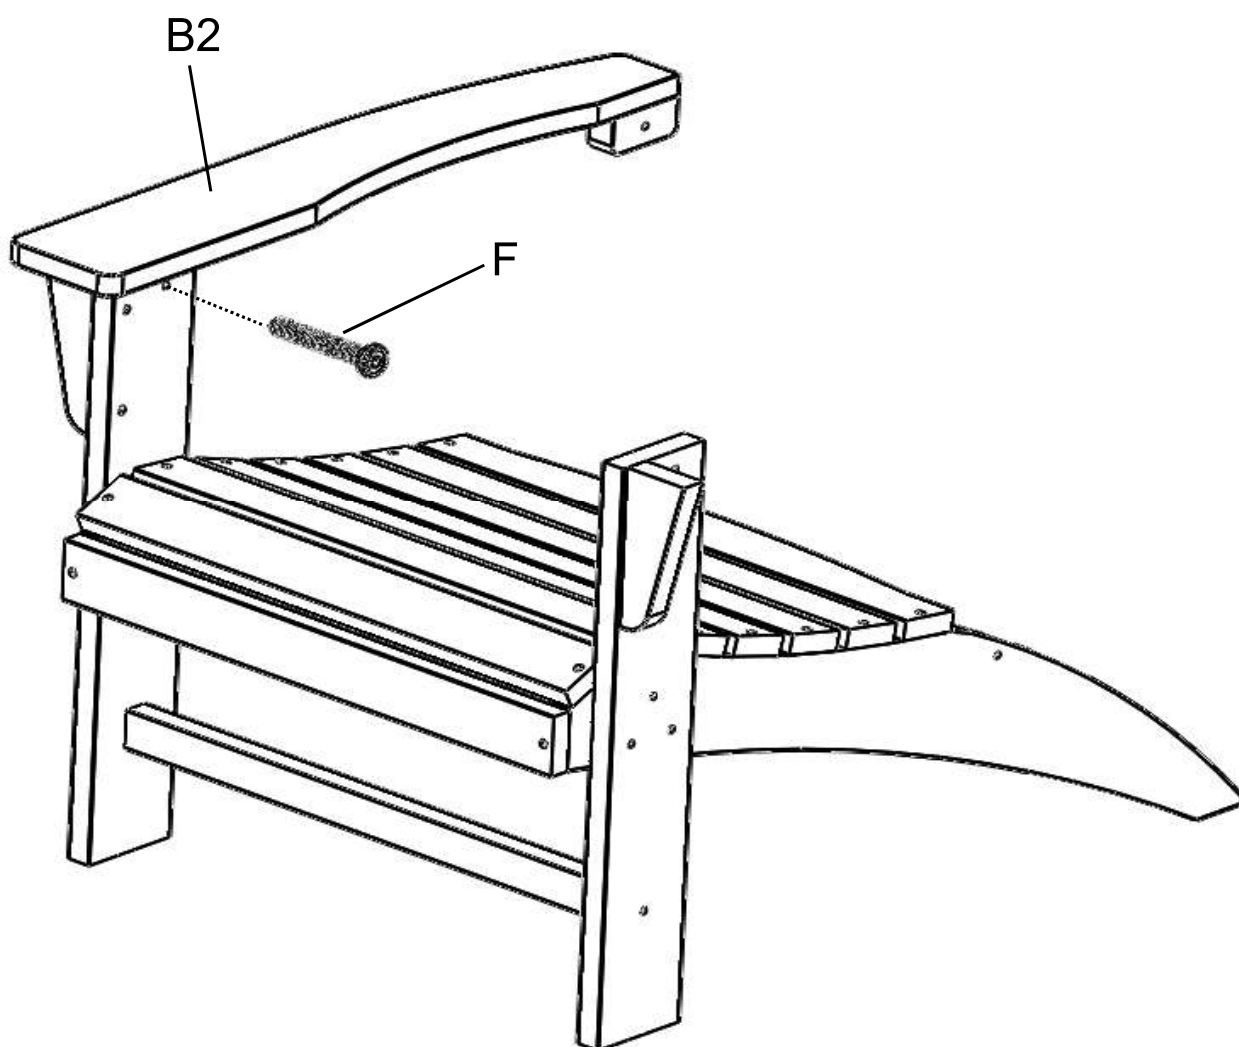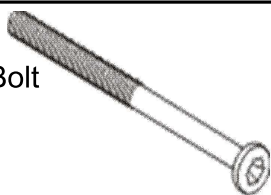



Attach right armrest B2 to the right leg A2
Secure with bolt F

Step 5

(F)

M6*43 MM Bolt

Qty: 1

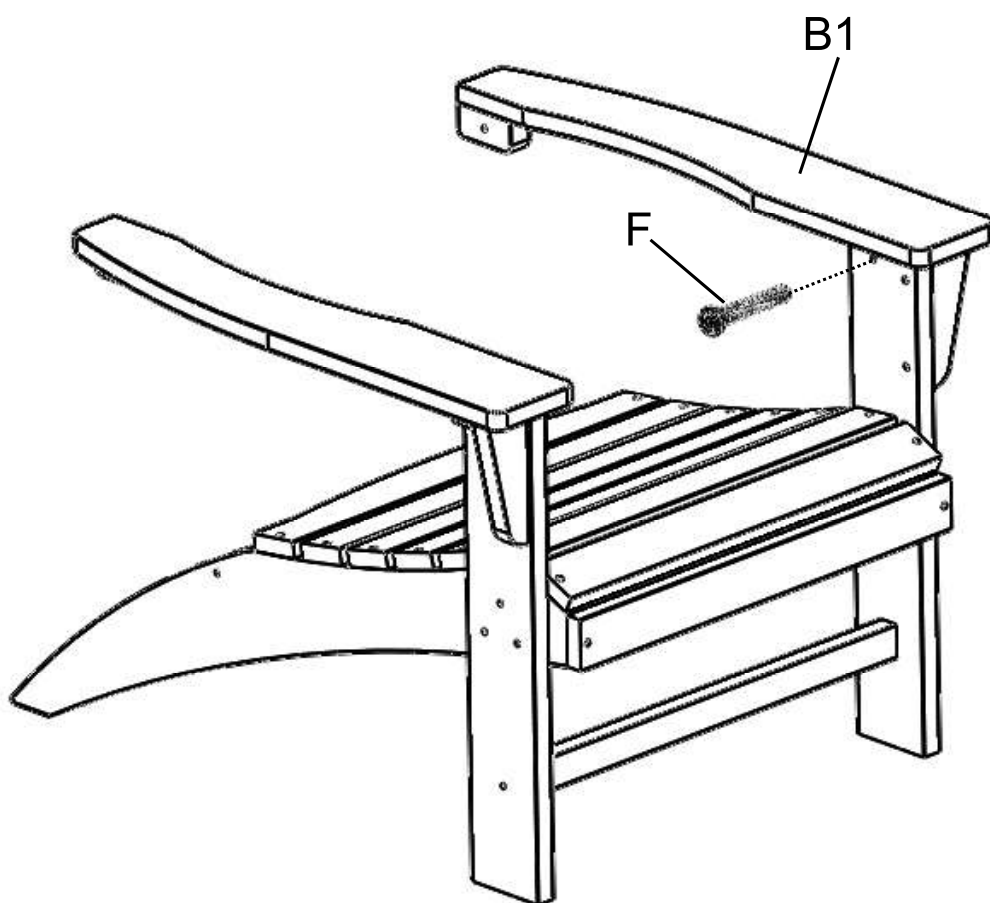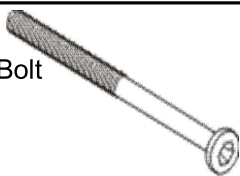



Attach left armrest B1 to the left leg A1
Secure with bolt F

Step 6

(F)

M6*43 MM Bolt

Qty: 2

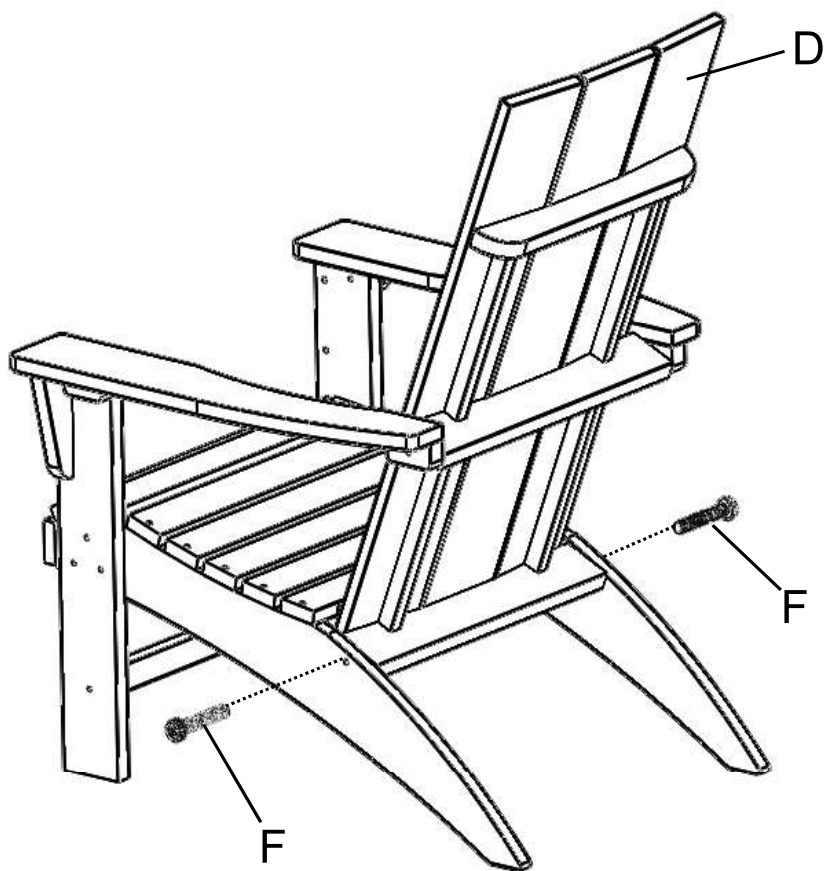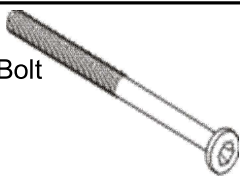



Attach the backrest D to seat C
Secure with bolt FX2

Step 7

(G)

M6*55 MM Bolt

Qty: 2

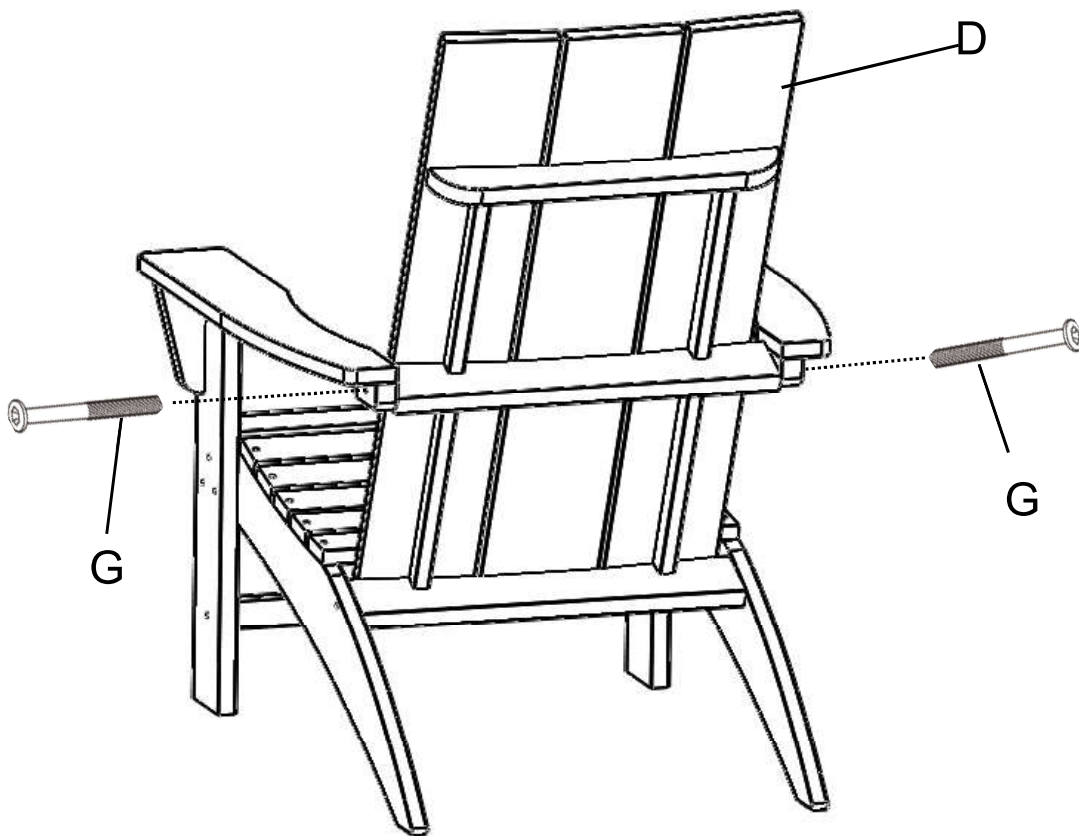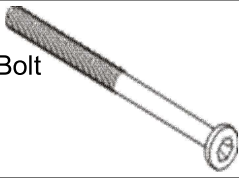

Attach the right armrest B2 and left armrest B1 to backrest D
Secure with bolt GX2
