

installation instructions:

WOOD VENEER CEILING MEDALLION

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

Medallions are not load bearing. Do not use them to support electrical fixtures or ceiling fans.

TOOL & MATERIAL CHECKLIST

- quick dry construction adhesive
- pneumatic nail gun
- small pin nails
- premium wood stain OR premium paint
- paint brush/roller

IMPORTANT INFO

- Clean the installation surface and back of medallion of any debris with a dry, clean cloth.
- It is highly recommended to attach these ceiling medallions into studs or secure structure in the ceiling or wall where installing.
- It is highly recommended that you paint or stain before installing.
- Use the pin nails to hold medallion up while glue cures.

IMPORTANT NOTE:

When installing medallions with a light fixture or ceiling fan turn the power off at the breaker before installation. Medallions are solely decorative. Do not use medallions to support the light fixture or fan. Do not use the fixture or fixture canopy to support the medallion. To ensure all electrical codes are met, make sure to consult with a licensed electrician.



MEDALLION INSTALLATION WITH A LIGHT FIXTURE OR CEILING FAN

1. Disconnect and remove current fixture before installing the medallion (if a current fixture is already installed).
2. Feed the electrical wiring through the medallion's center hole and gently press the medallion up against the ceiling.
3. All medallions will need to be installed with small pin nails to hold while glue cures.
4. Reconnect the ceiling fixture or ceiling fan following the manufacturer's guidelines.

MEDALLION INSTALLATION WITHOUT A LIGHT FIXTURE OR CEILING FAN

1. Gently press the medallion up against the ceiling or wall.
2. All medallions will need to be installed with small pin nails to hold while glue cures.

EXAMPLE DIAGRAM:

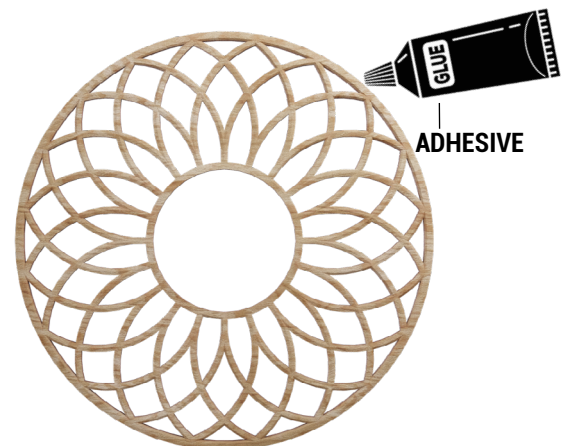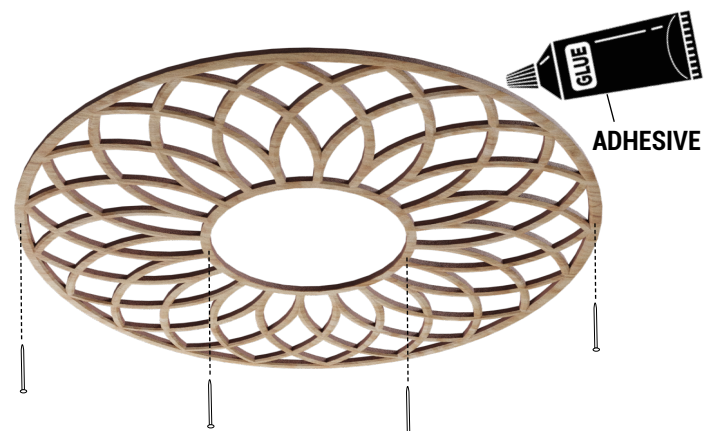

For wall installation you can use adhesive and/or heavy duty double stick tape/strips. Tack up with pin nails or hold until glue cures. Certain designs may allow for claw or cleat hanging brackets to be attached on backside.

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com