
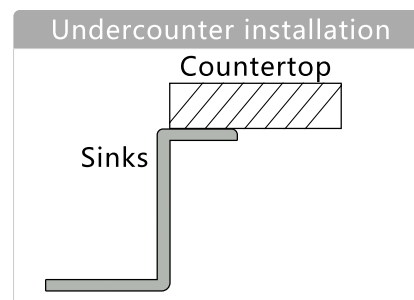
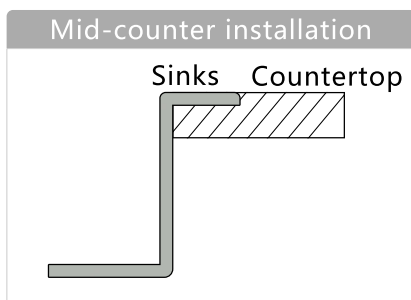


Three types of installation

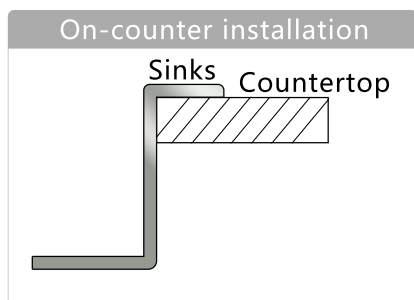


On-counter installation opening dimensions: 77X42cm

Other two installation methods, depending on the actual size

Three types of installation




1. Pad the gasket and slip the liner in.

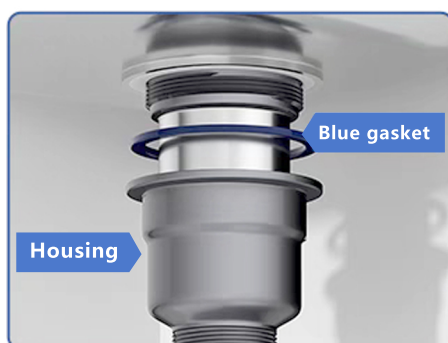

2. The drain housing plus gasket, and the inner liner tightened.




3. Connect the T-tube and fasten it.

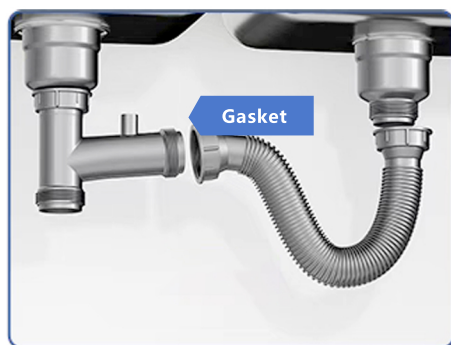

4. Connecting a double slot drain.




5. Installation of V-tube.

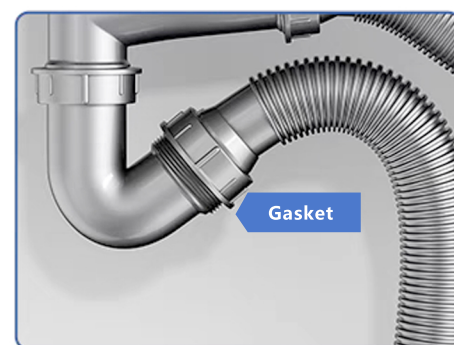

6. Sleeve into the drain and tighten.



7. Pad the overflow hole gasket and install the overflow port.

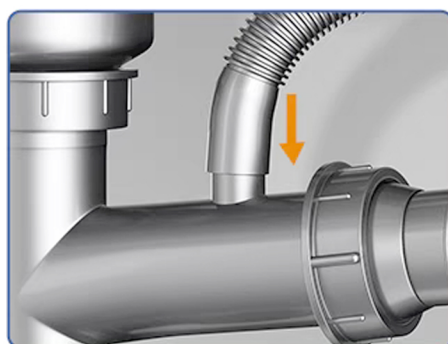

8. Insert overflow pipe



9. The end of the drain pipe into the downpipe, the installation is complete.