







# ASSEMBLY INSTRUCTIONS

## IMPORTANT NOTE :


- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

### HARDWARE LIST

A	JCBB M8 x 80mm + S/W 5/16" + F/W 5/16" x 22mm 	8PCS
B	ALLEN KEY M5 	1PC
C	JCBC W BOLT M7 x 35mm 	1PC
D	ALLEN KEY M4 (BALL SHAPE) 	1PC
E	PH CB SCREW M4 x 38mm 	4PCS
F	PROTECTIVE DISC 22MM 	4PCS

### PART LIST


1	TABLE TOP	1PC
2	TABLE LEG	4PCS
3	X STRETCHER UP	1PC
4	X STRETCHER DOWN	1PC

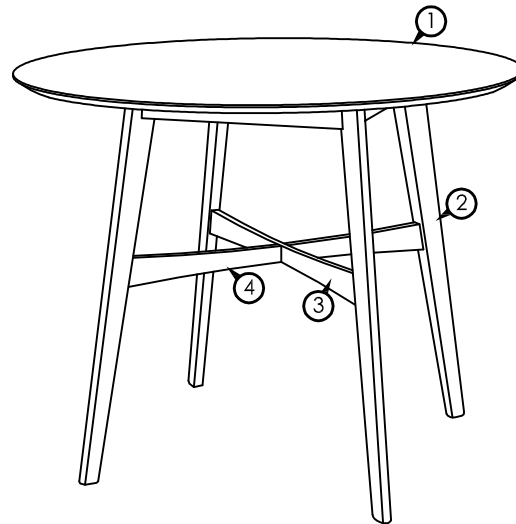

COMPLETED TABLE ASSEMBLY.


## STEP 1

**DO NOT FULLY  
TIGHTEN THE BOLT**

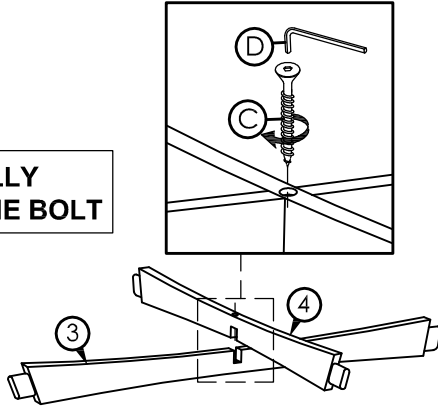


## STEP 2

**DO NOT FULLY  
TIGHTEN THE BOLT**

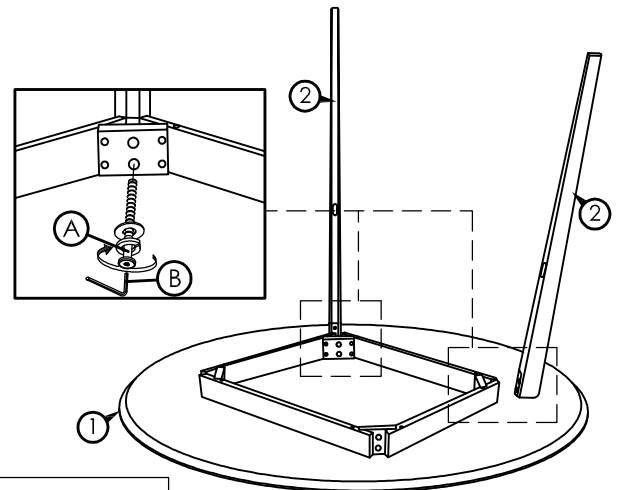


## STEP 3

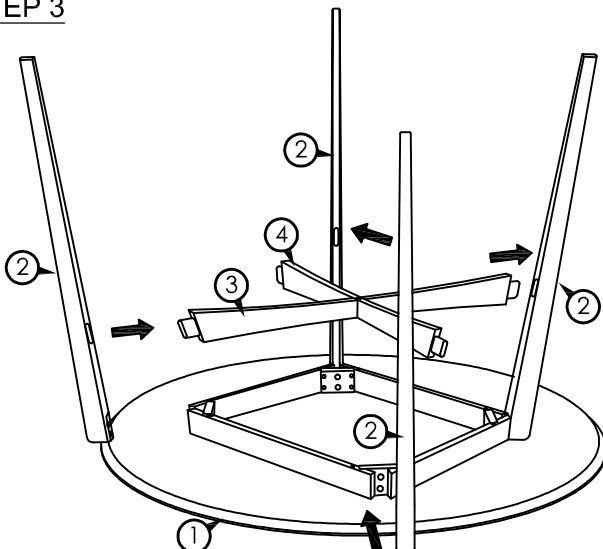


## STEP 4

**FULLY TIGHTEN ALL  
BOLTS & SCREWS**

### STEP 4.3

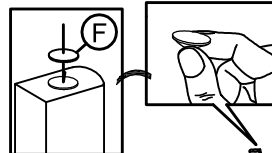

### STEP 4.1

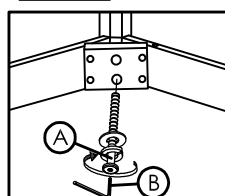

### STEP 4.2

