


Bamboo Bed Frame Set-up Instruction


Size: Full/Queen (03/04)

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!

Components-Parts



①×2PCS




②×2PCS



③×2PCS



④×4PCS



⑤×2PCS



⑥×1PCS



⑦×2PCS



⑧×1PCS



⑩×12PCS



A×20PCS
M8*27



B×4PCS
M8*14



C×2PCS
M8*33



D×1PCS
M8*56



F×4
M8*30




E×28PCS



NOTE: The M8*27 for the bolt indicates a diameter of 8 mm (0.315 in)
and a length of 27 mm (1.06 in).

Spare: A×1, B×1, C×1, E×1, F×1



Component Distribution - Easy Assembly in 7 Steps

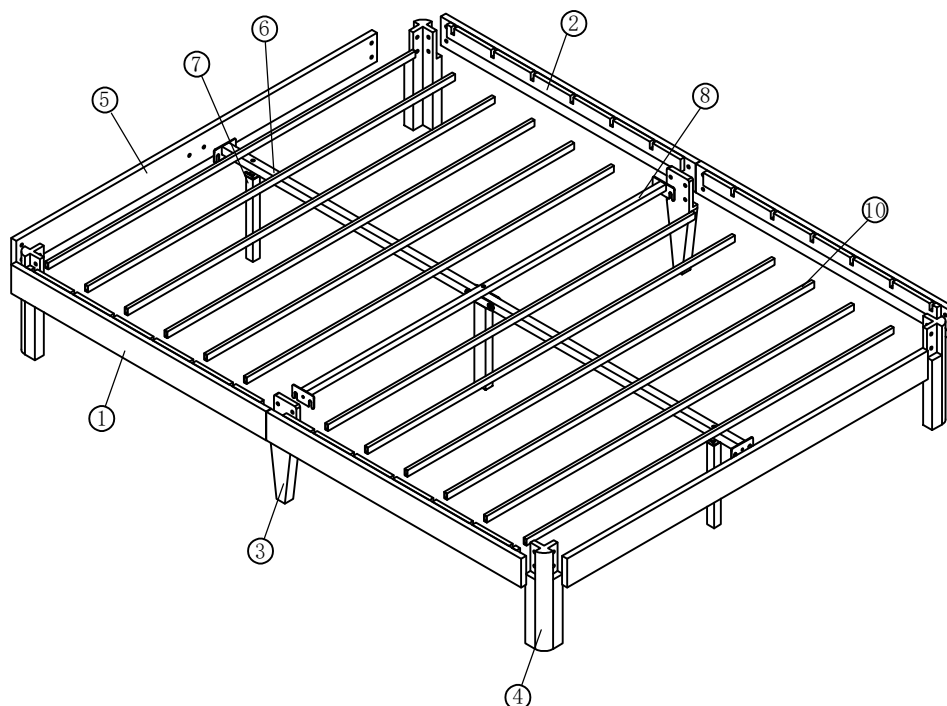



Step1:Take out parts ① & ② & ③ ;
Joint them with screws as shown

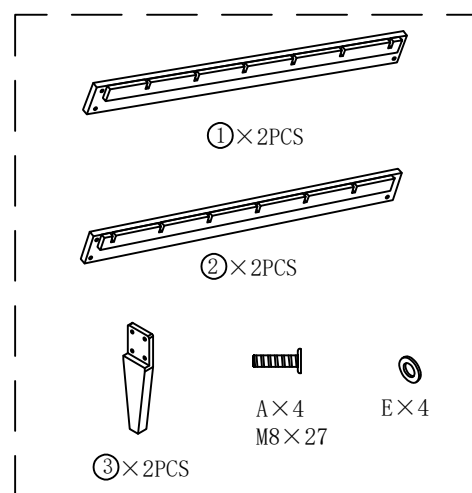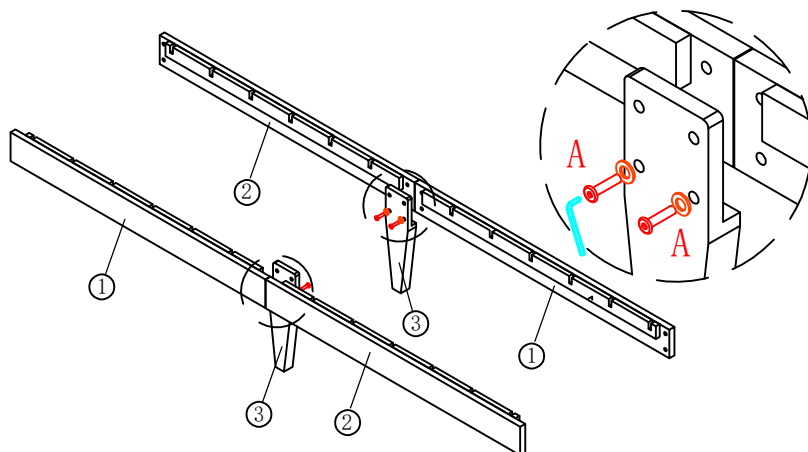


Step2:Joint four corners with screws as shown

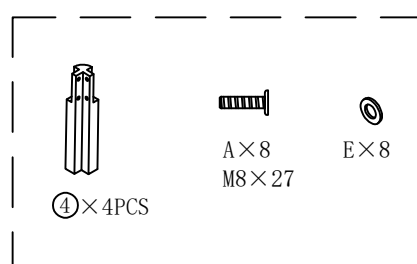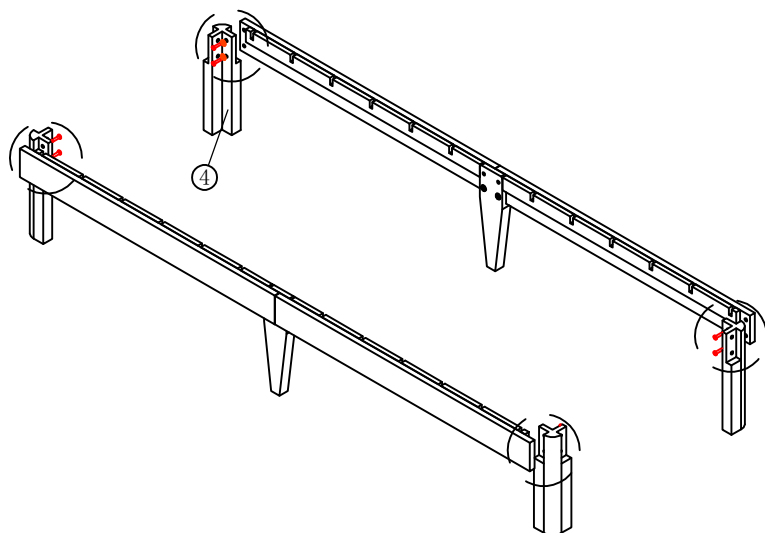

Step3:Joint parts ⑤ with screws as shown

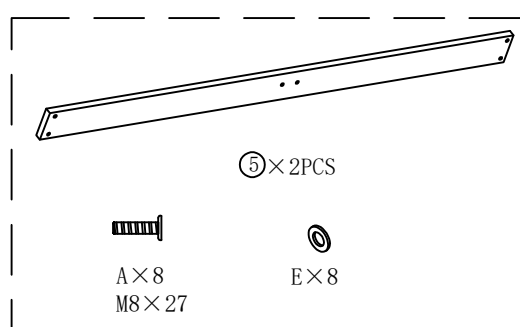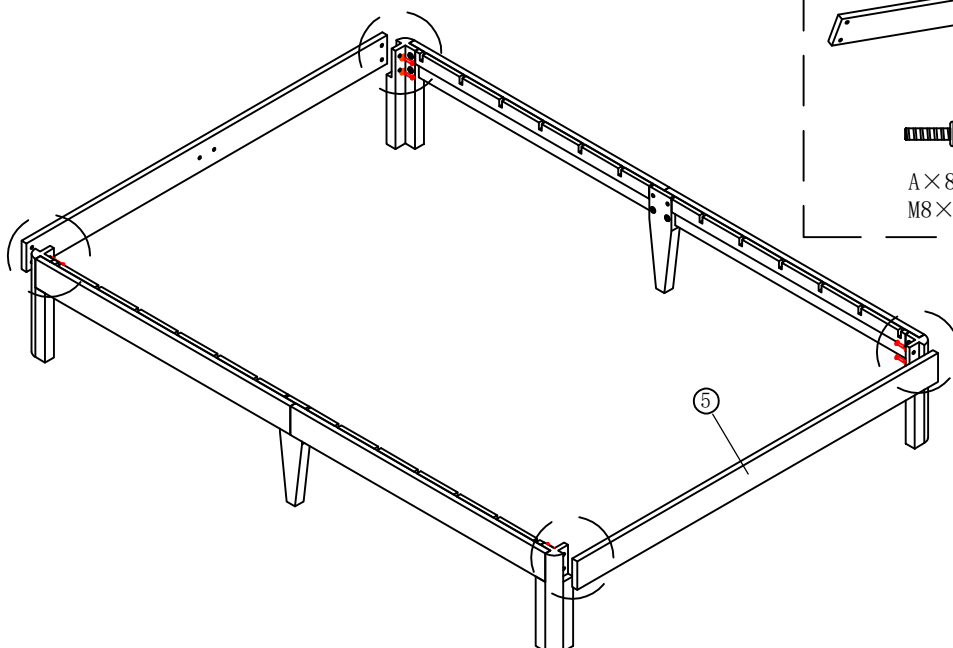

Step4:Joint parts ⑥ with screws as shown

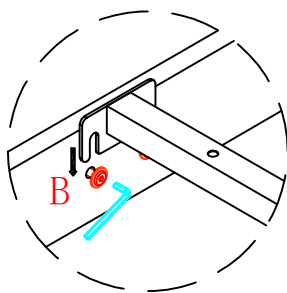


⑥×1PCS




B×4
M8×14



E×4

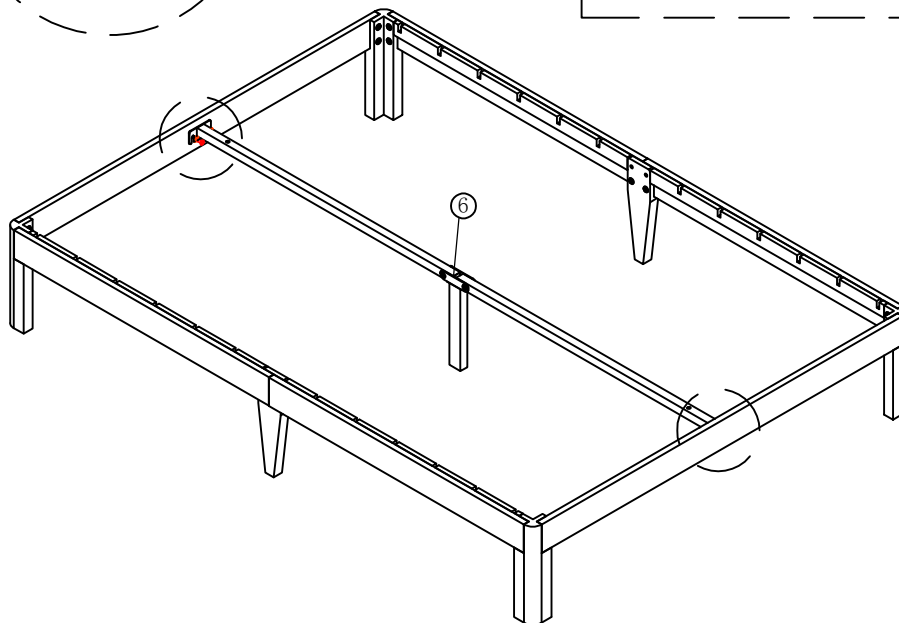


Step5:Joint parts ⑦ with screws as shown

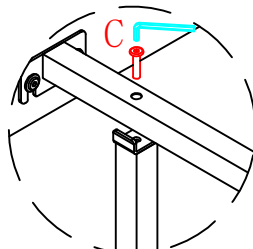


⑦×2PCS




C×2
M8×33

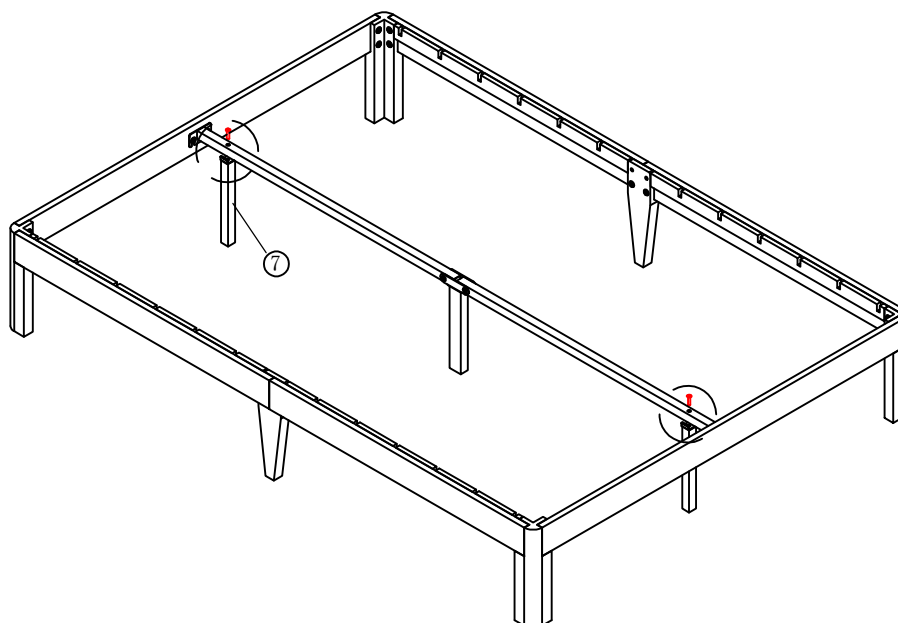

Step6:Joint parts ⑧ with screws as shown

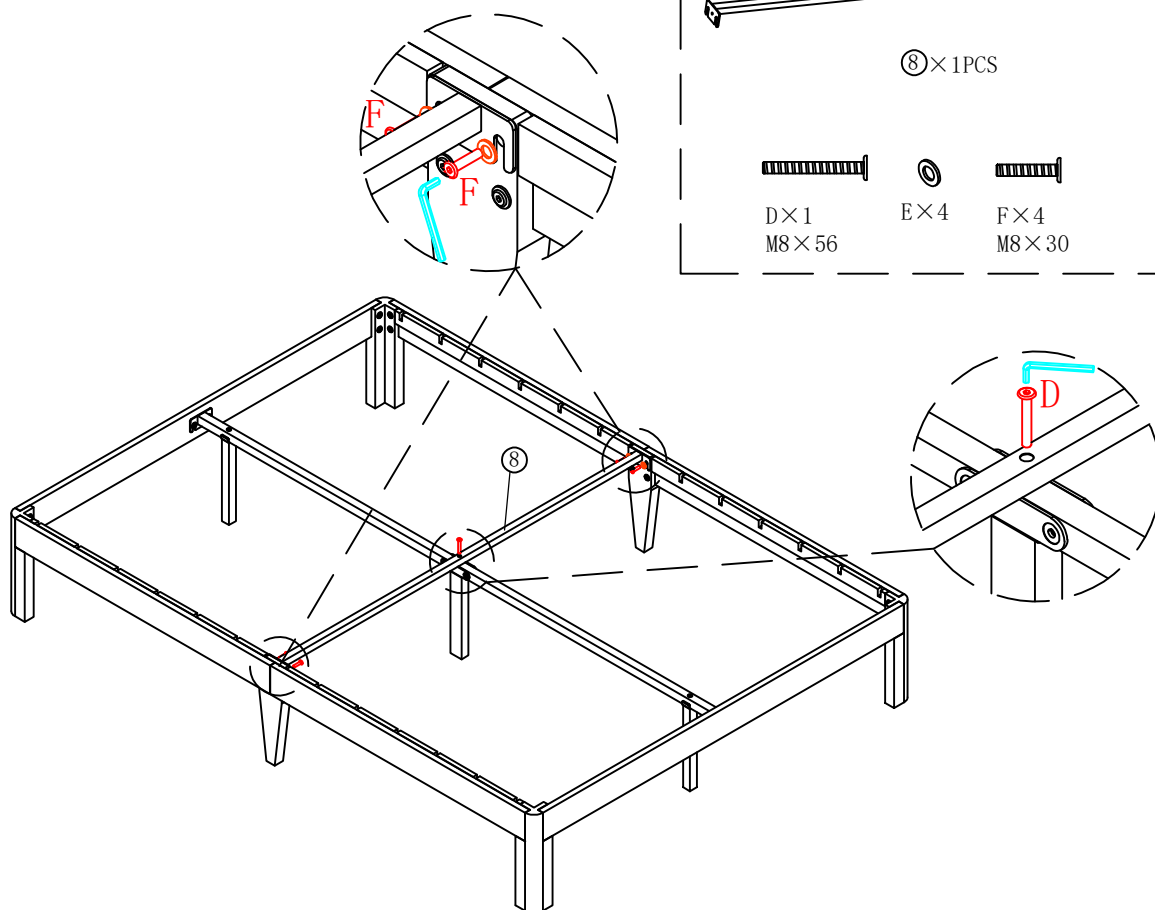

Step7:Insert 12 ⑩ slats

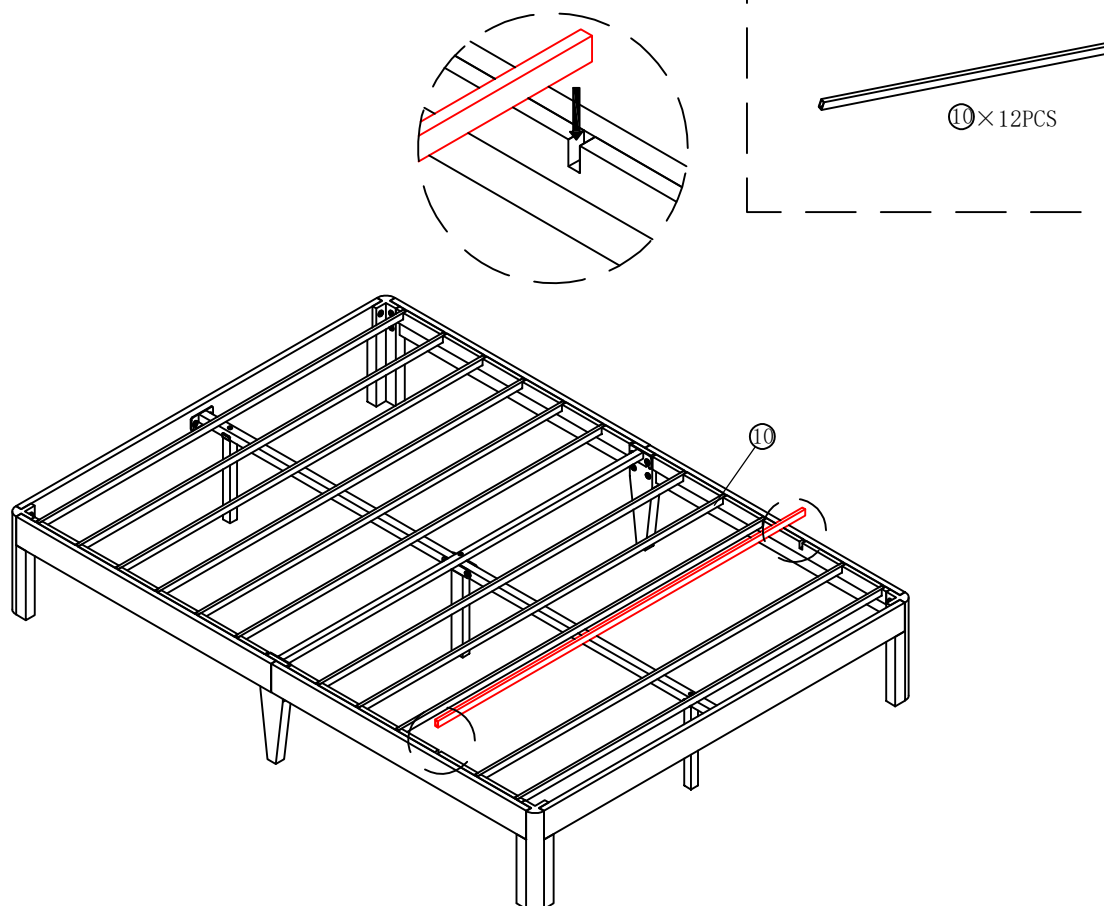

In the last step, please make sure all the screws are tightened.