


# ASSEMBLY INSTRUCTIONS

## Bicycle Shed



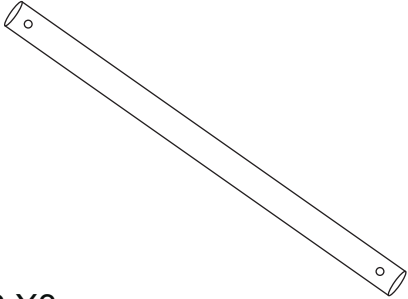
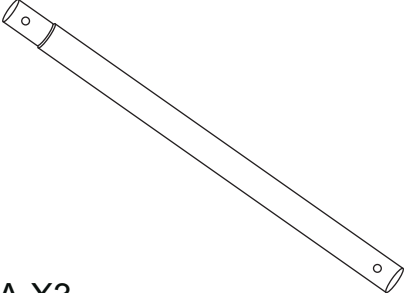
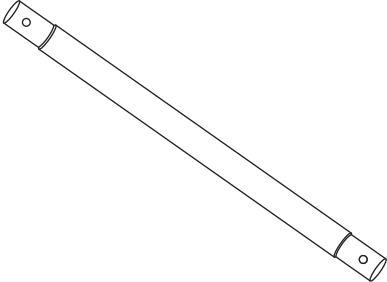
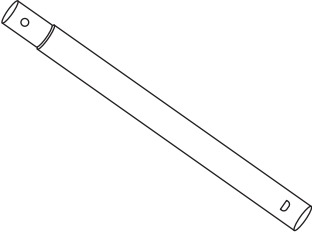
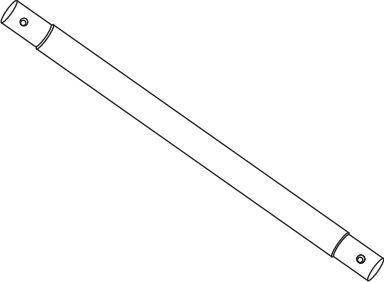
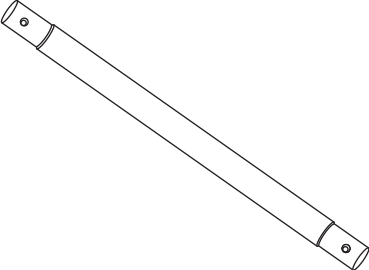
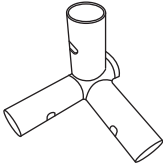
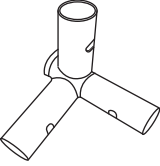
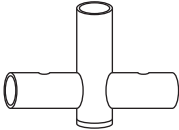
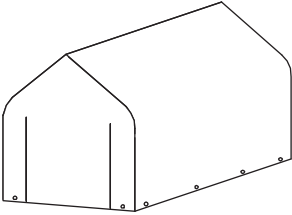





Dimension : 37 \* 70.8 \* 61.8 inch

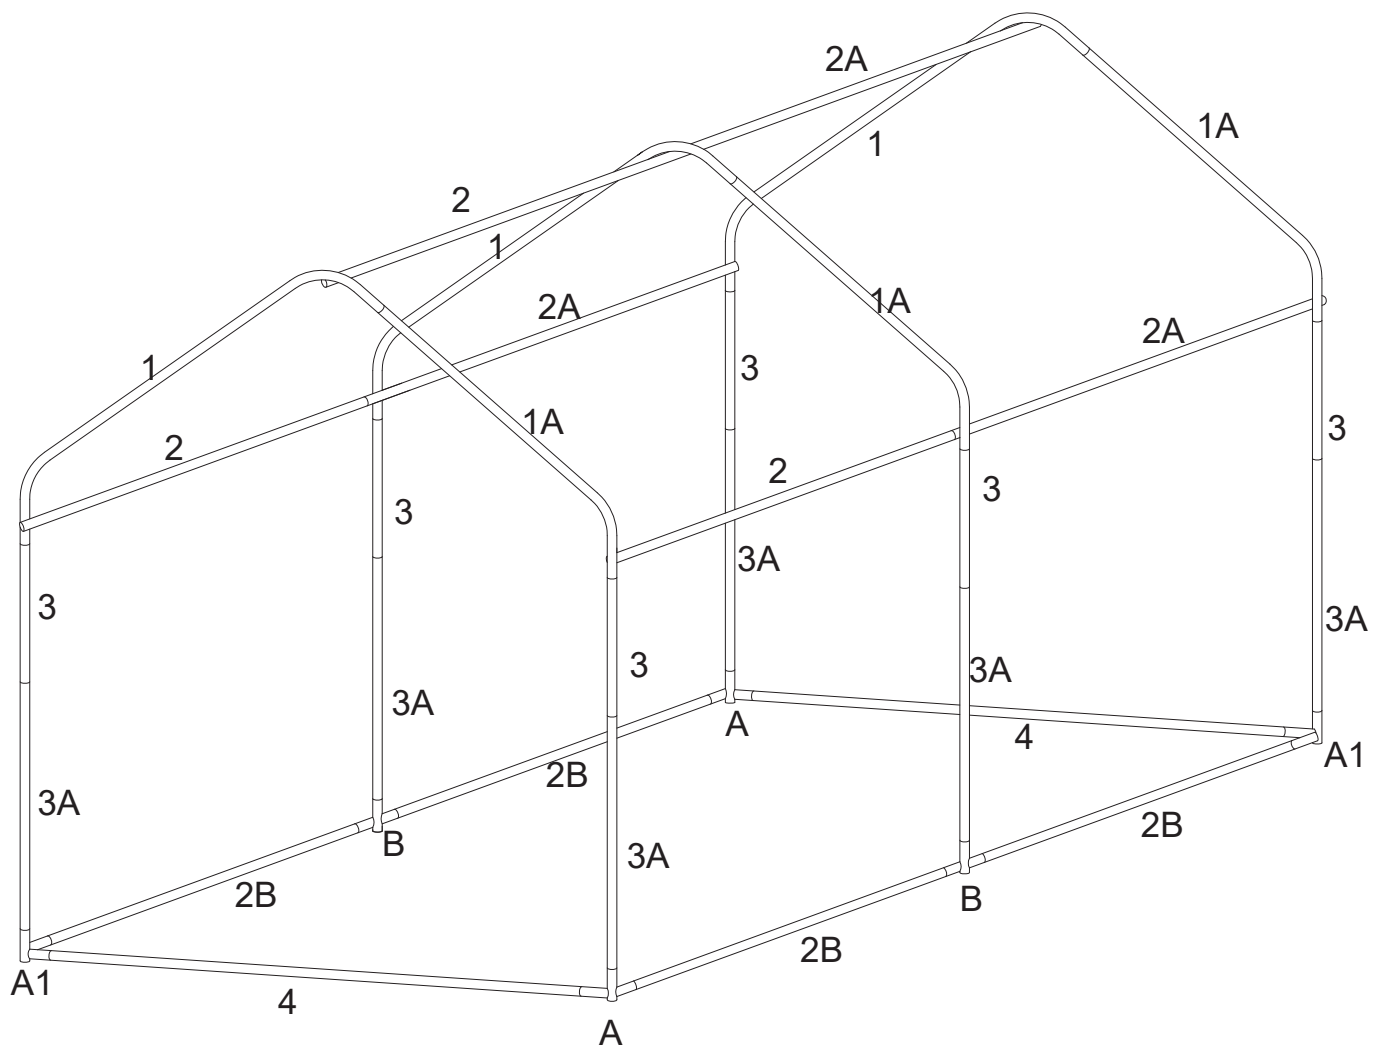


If you have any questions, please contact us : [hofficeservice@gmail.com](mailto:hofficeservice@gmail.com)

Parts


Check and make sure you get the components on the list, contact us for any missing.

 1 X3	 1A X3	 2 X3
 2A X3	 2B X4	 3 X6
 3A X6	 4 X2	 A X2
 A1 X2	 B X2	 X1
 X13	 X6	 X4
 X4 繩	 X9 M6X55	

## Step 1


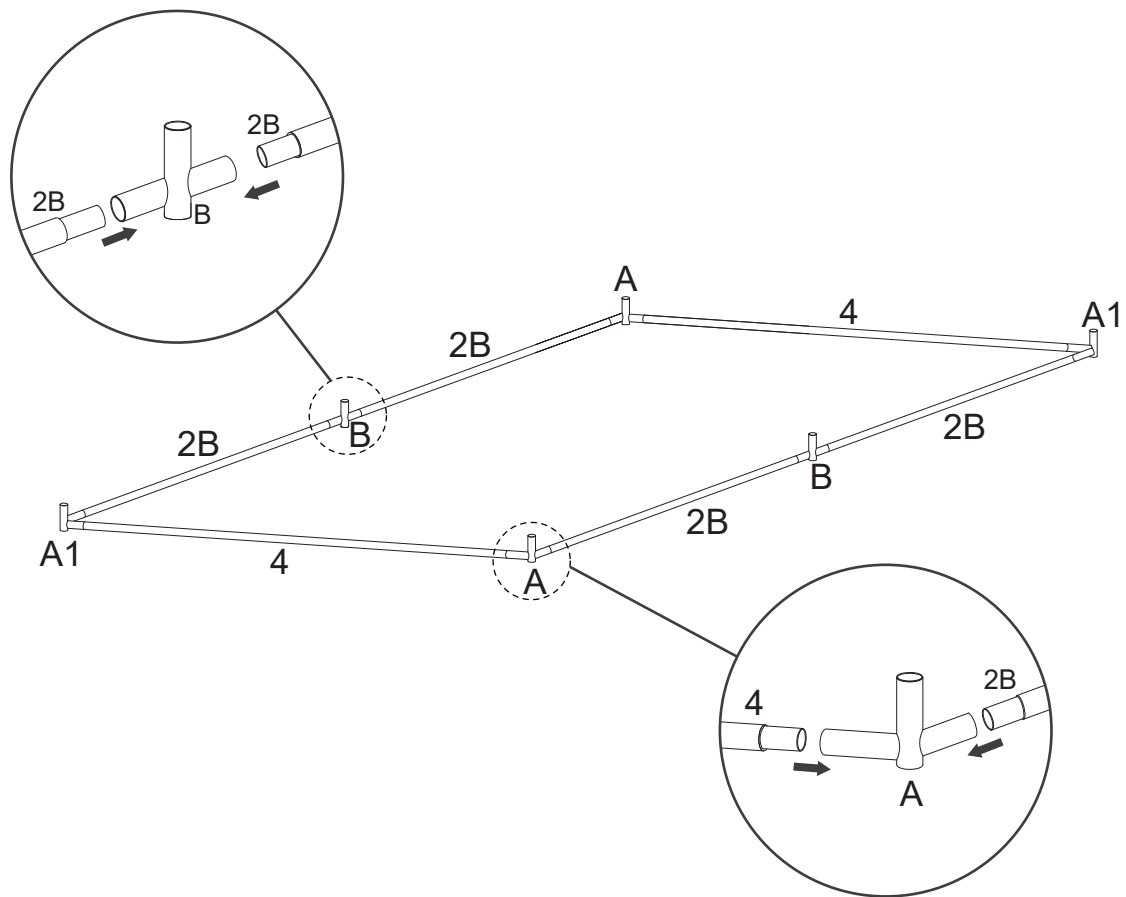


## Step 2


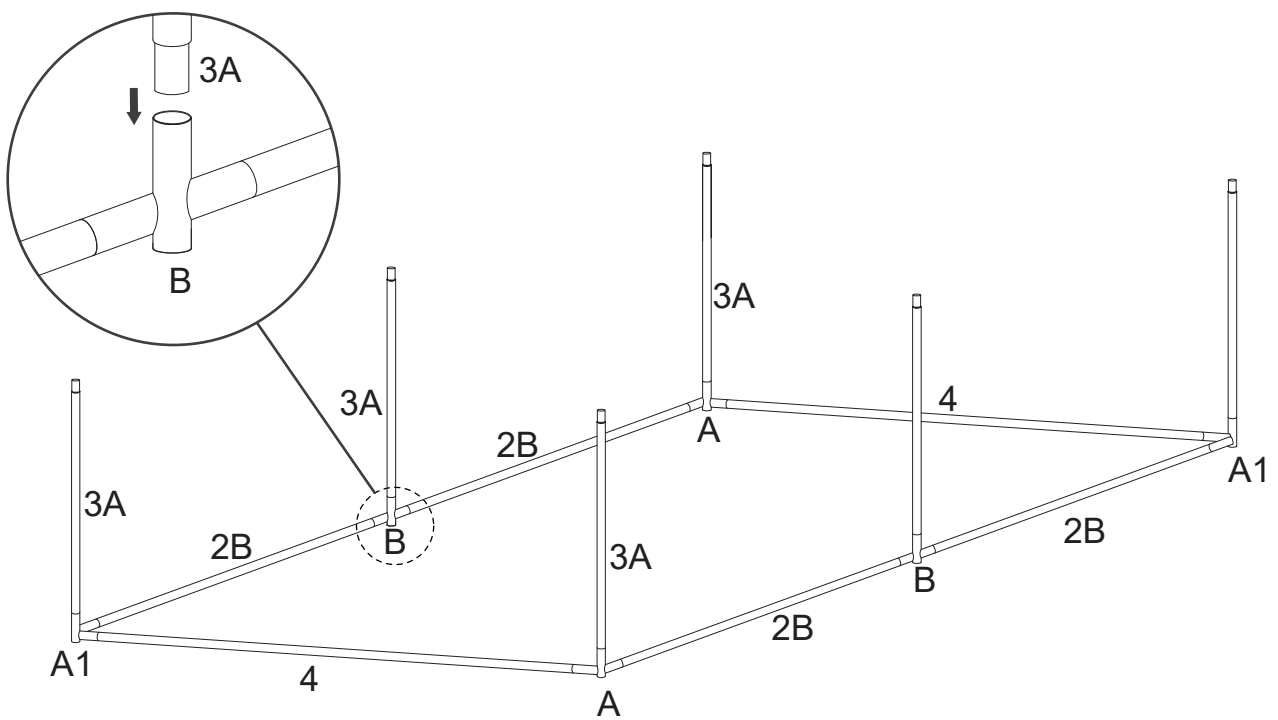


## Step 3

Note : Make sure the nut is installed in the right direction.

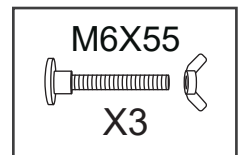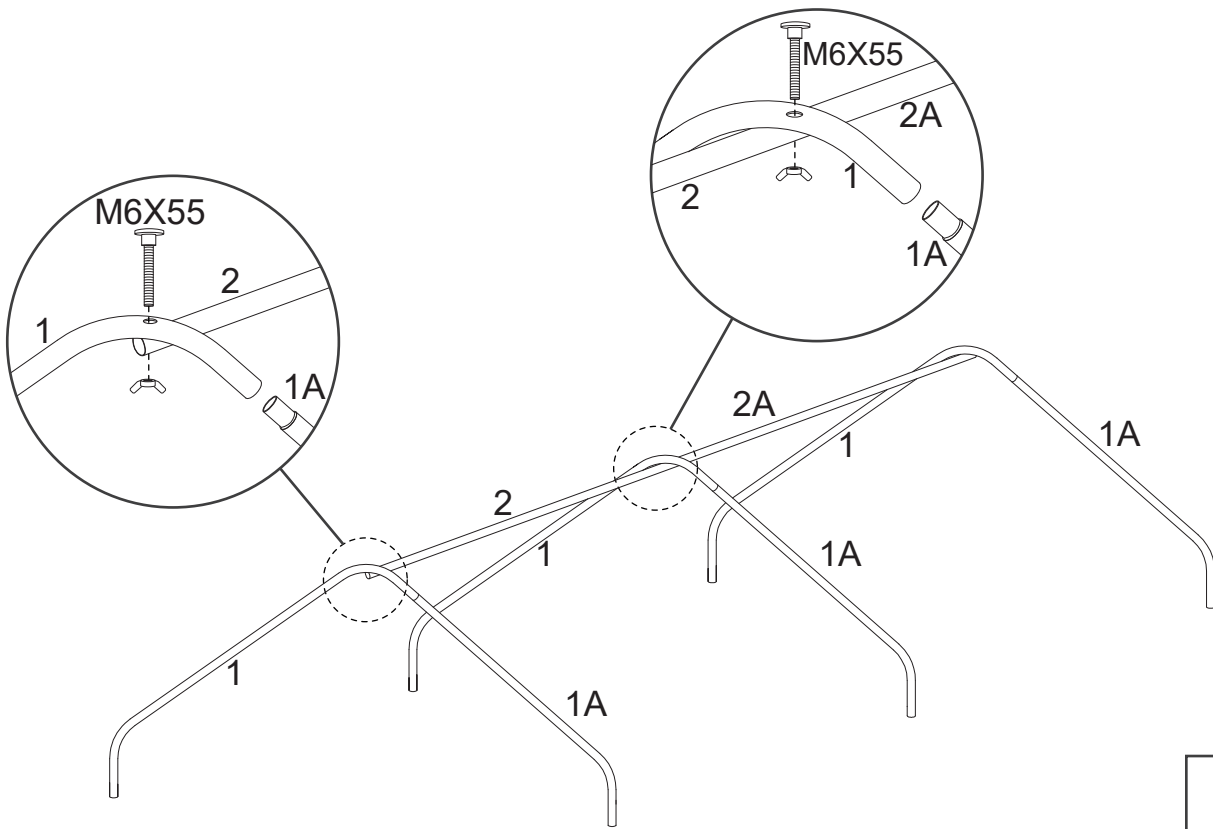


## Step 4

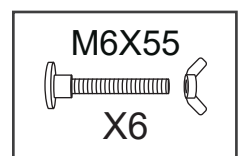
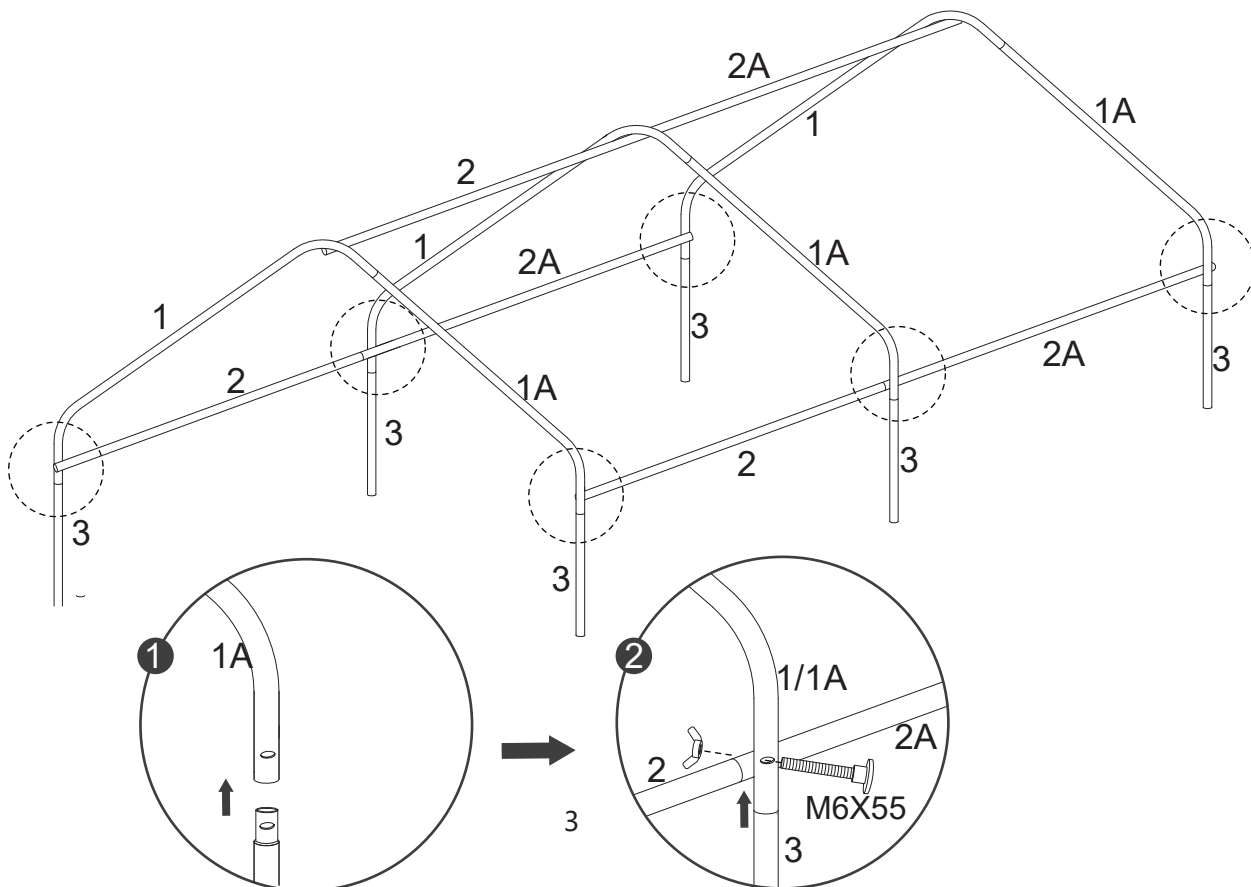


Note : Make sure the nut is installed in the right direction.

## Step 5

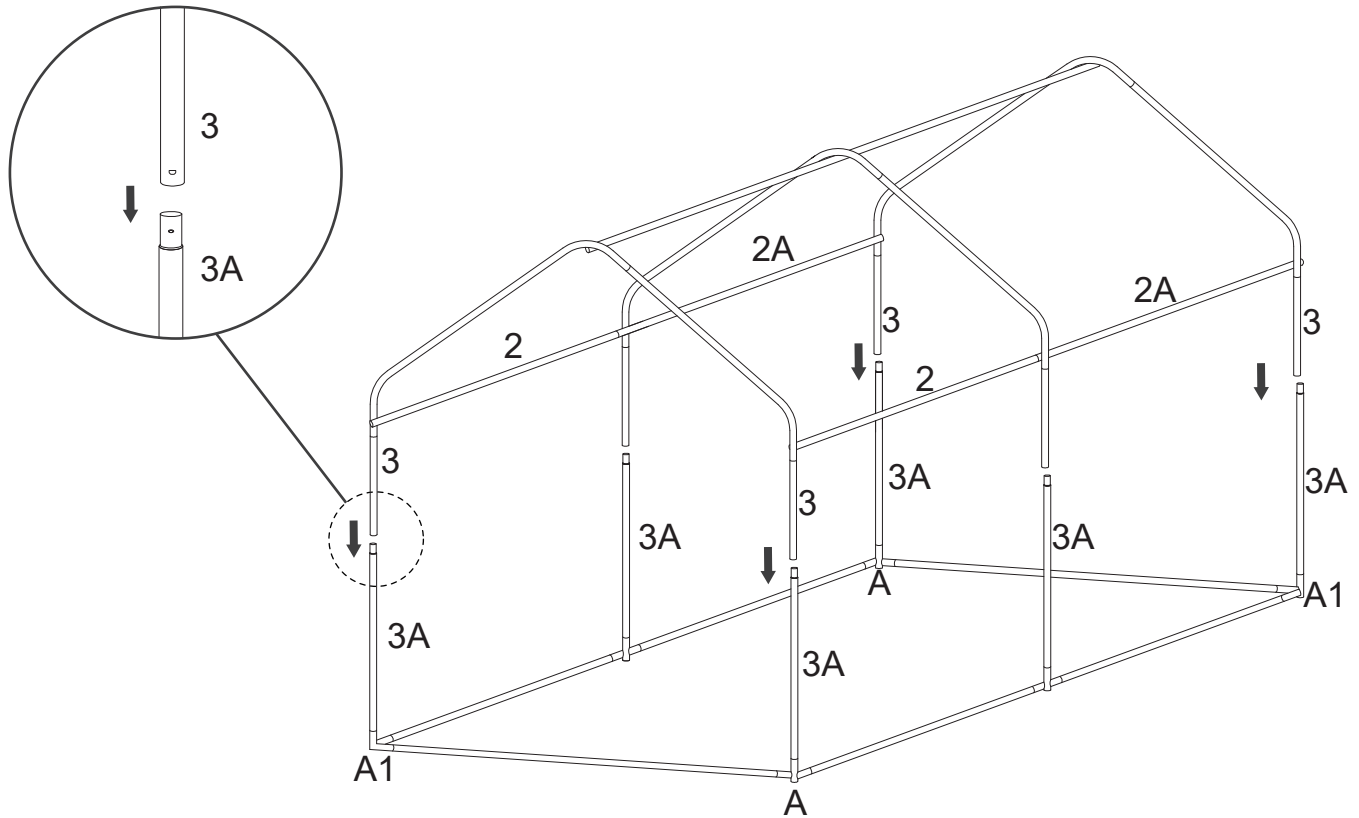


## Step 6

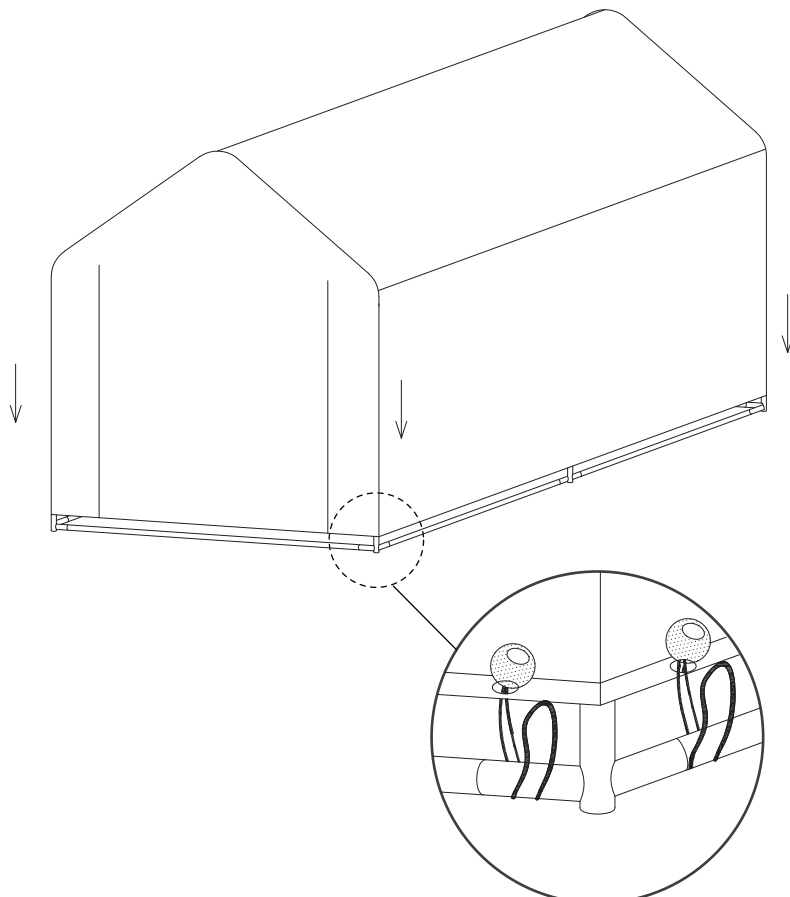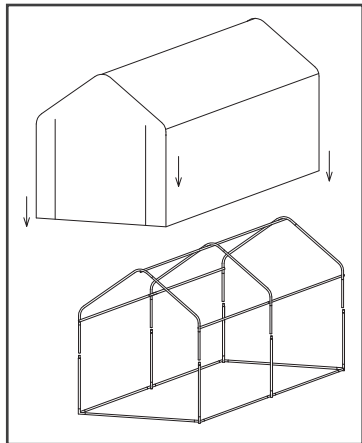


Note : Please put the cord through the cloth hole.

05

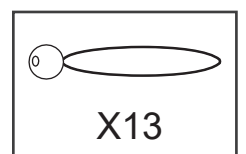

## Step 7

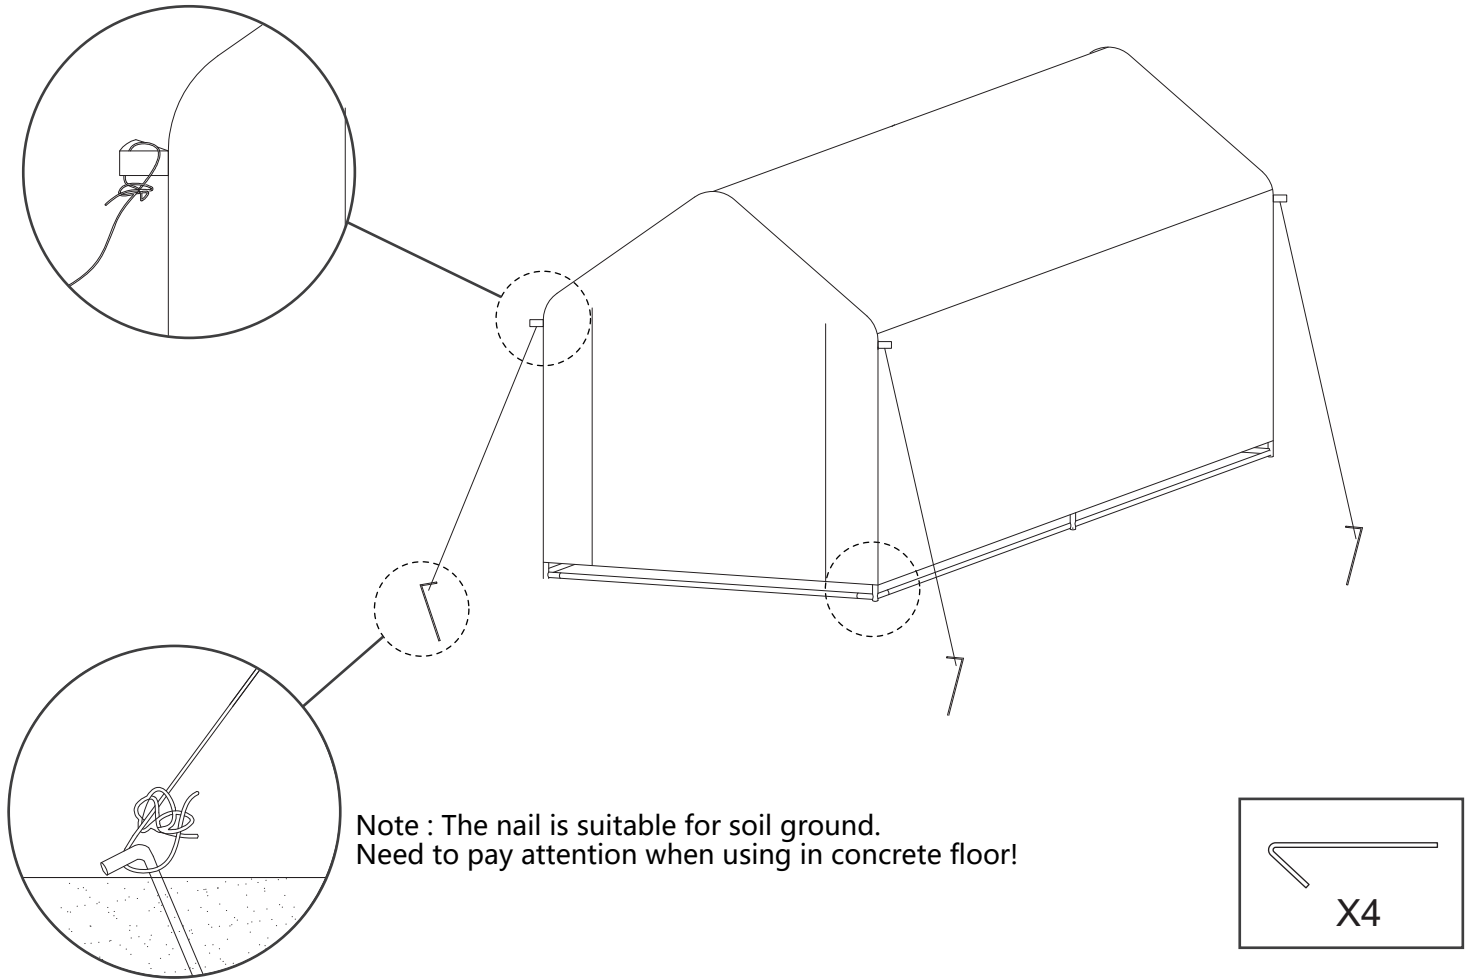

## Step 8

