

15 : 00

---

estimated assembly +  
installation time



2 or more

---

people required

Ok, let's  
get started!



- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface.
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team. We will be happy to fix the problem!

# care guide


- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!

---


ⓘ **While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.**



# product parts



A



B



C



D

Side legs



E

Support Rod  
x2




F,G,H,I,J  
Shelf  
x5

# what's included



(K)-Flat Washer  
Ø20mmxØ8mm  
x20



(O)-Screw  
4x40 mm  
x4




(L)-Lock Washer  
Ø15mmxØ8mm  
x20



(P)-Wall Plug  
x4




(M)-Bolt  
M6x20mm  
x20



(Q)-Allen key  
Ø4mmx110mm  
x1



(N)-Bolt  
M6x10mm  
x4



(R)-Bolt  
M6x40mm  
x4

## assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.


step 1:

Start by attaching the side legs together (A to B and C to D).

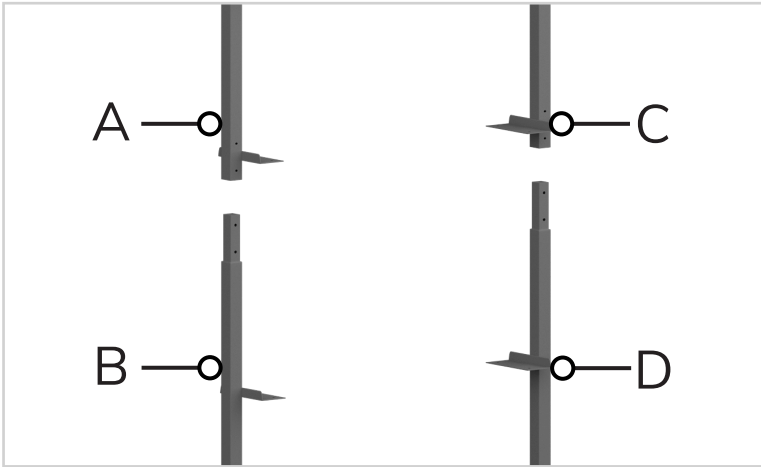


step 2:

To hold them in place, insert bolts (N) in the given holes. Tighten using the allen key (Q).

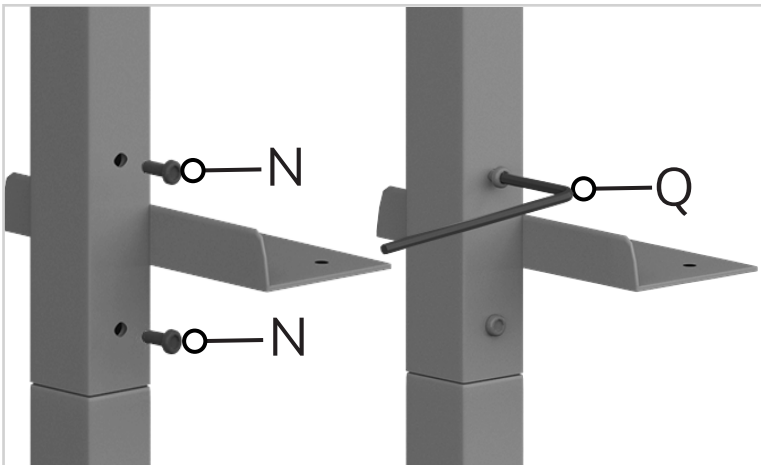


step 3:

Now, place the side legs (AB), (CD) and supporting (E) rods on a flat surfaced carpet or cardboard before starting assembly.

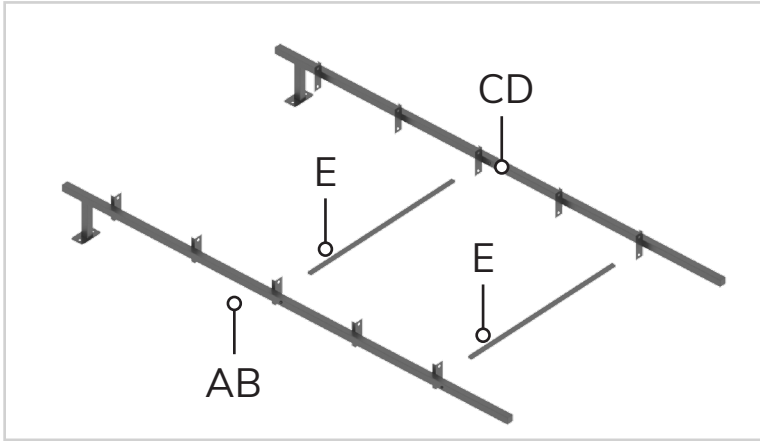


step 4:

Align the supporting rods with the slots given on metal legs (A, B, C, D) as shown in the image below. Once aligned, attach the rods (E) to both the legs using screws (R) and tighten them fully using allen key (Q).

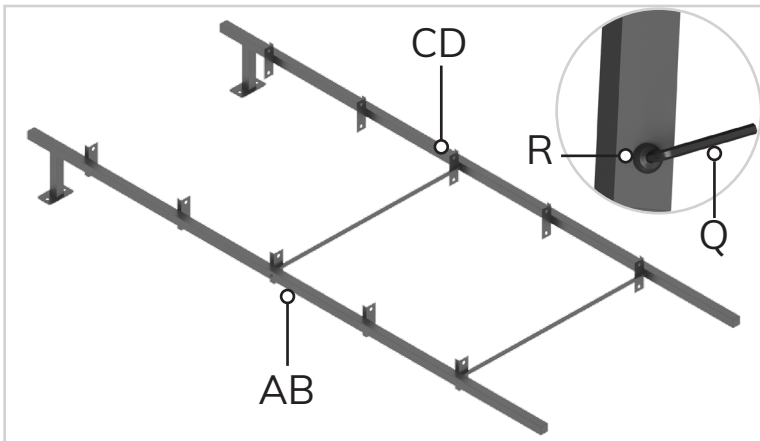


## step 5:

Now, align all shelves with the slots on legs (AB) and (CD) (in any order) so that all shelves (F, G, H, I, J) are facing up. This allows the shelves to assemble on an even plane so that the backs flush against the wall during installation.

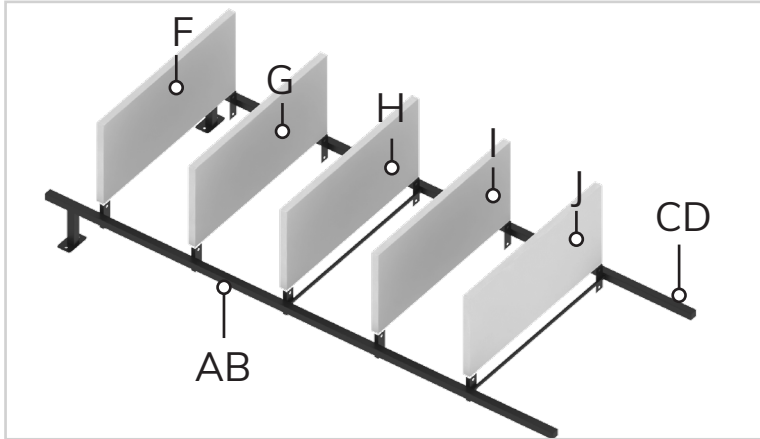


## step 6:


Once aligned, attach the shelves to both side legs (AB) and (CD) in place using washer (K), lock washer (L), and bolt (M). Tighten all points up to 50% using allen key (Q). Do not tighten the screws all the way.

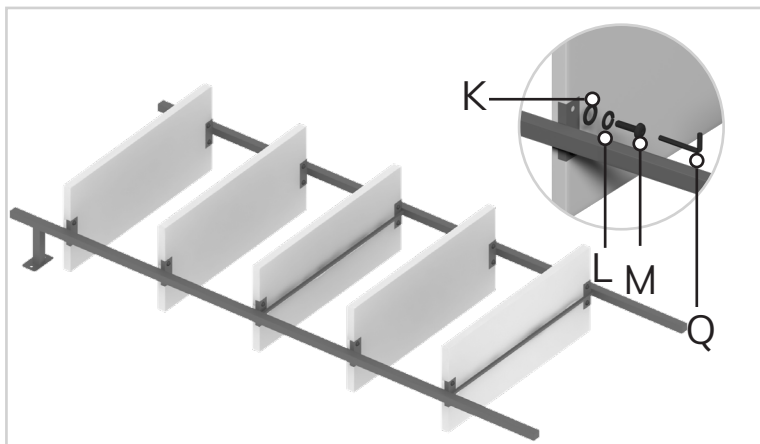

step 7:

Once you ensure all shelves (F, G, H, I, J) are on an even surface, fully tighten all bolts.

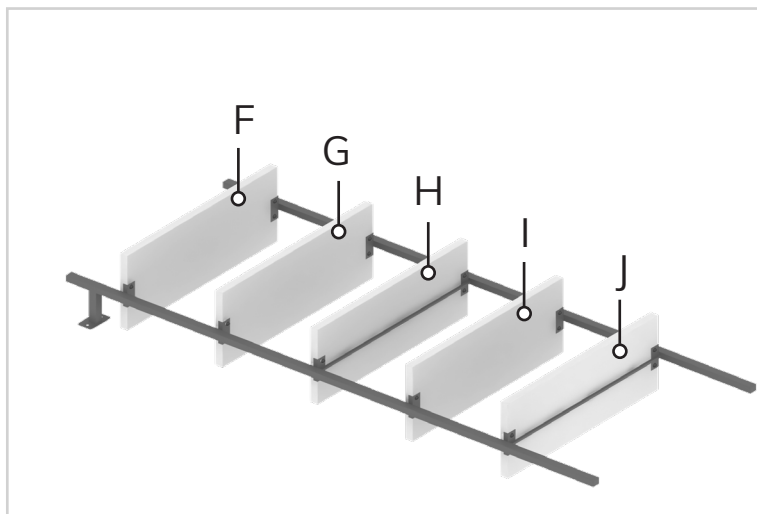

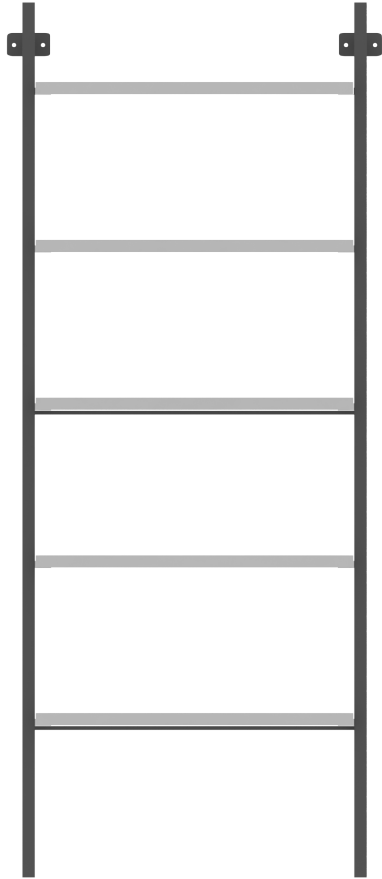

---

**And your shelf is ready for installation**


# installation instructions



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.

step 1:

Place the assembled shelf against the wall and put a spirit level on the top plank to check alignment. Adjust if needed. Have another person stand back to see if both the legs (AB, CD) are in level with the wall. Then, taking this image as reference, mark the top of the shelf on the wall.

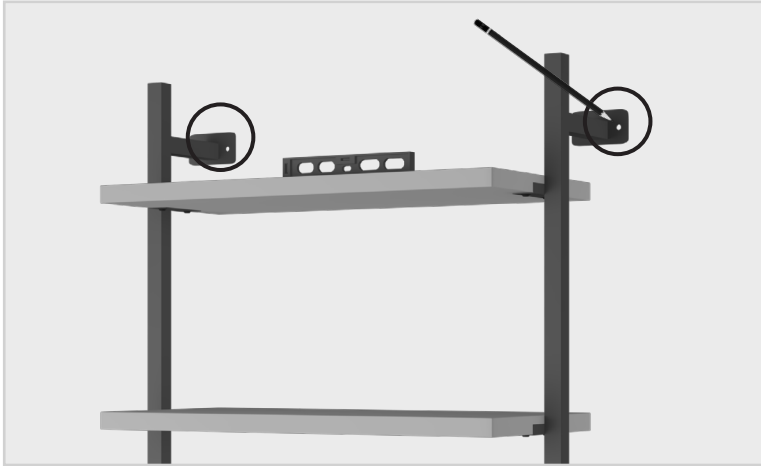


step 2:

Drill holes on the points you just marked.



step 3:

Using a hammer, insert wall plugs (P) in the holes you just marked.

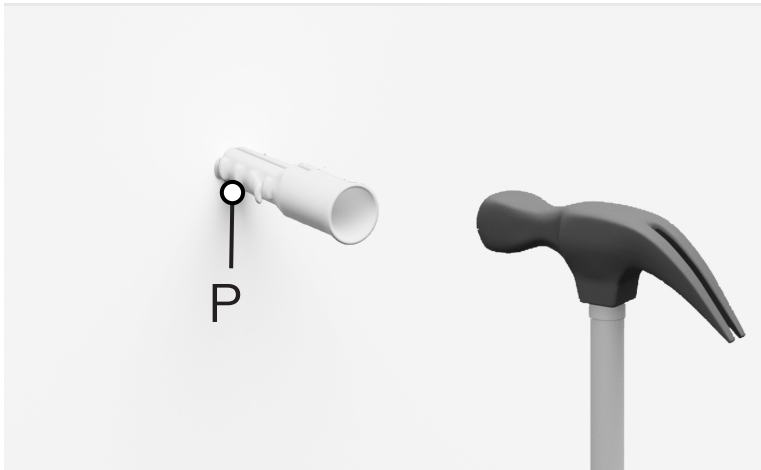

step 4:

Now, insert screws (O) and tighten completely with the help of a screwdriver.

