

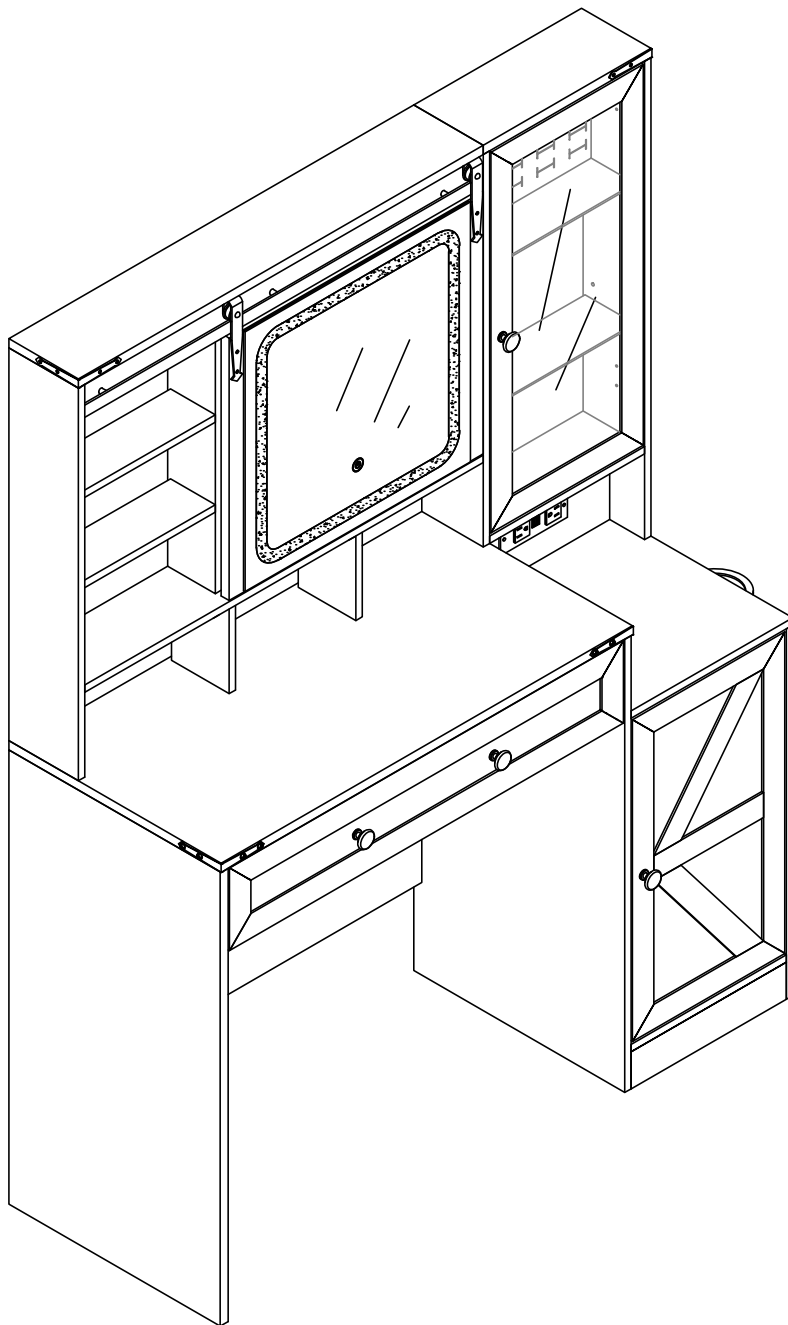



EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

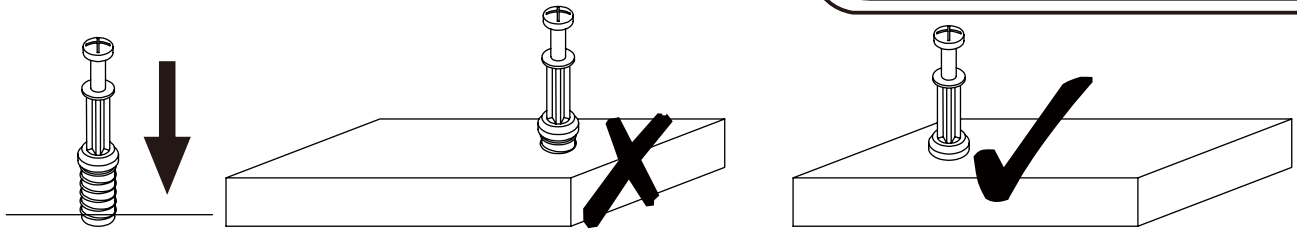


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

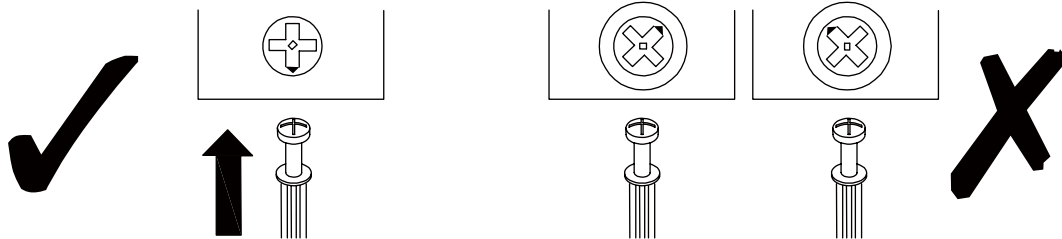










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









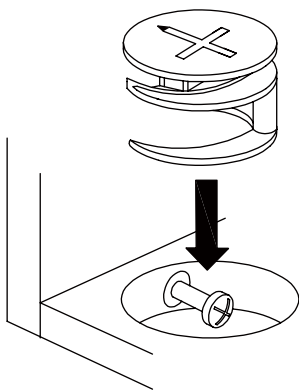












EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.






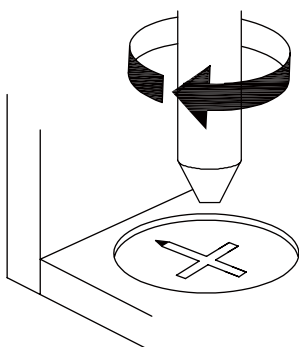


EN_Turn cam lock clockwise to tighten.

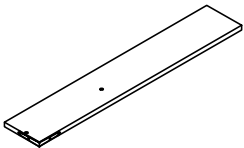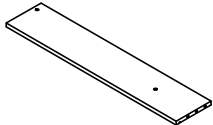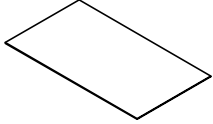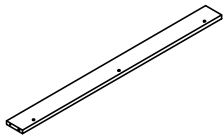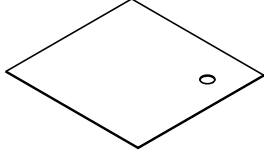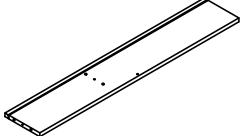
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	





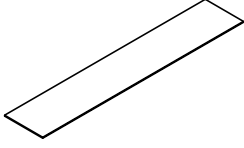

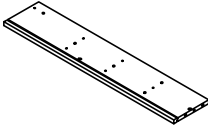

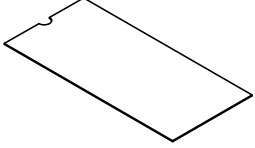



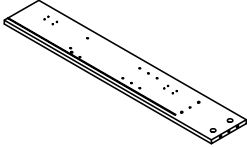
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x2	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x1	
⑲		x1	
⑳		x1	

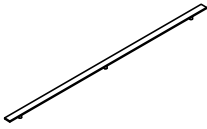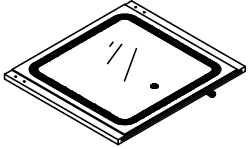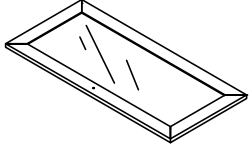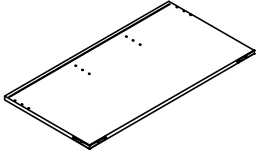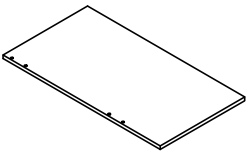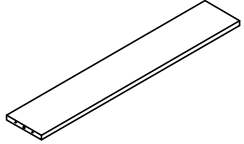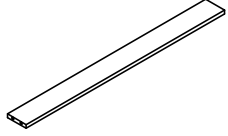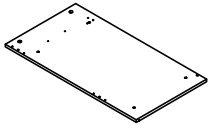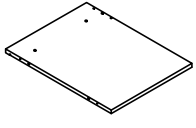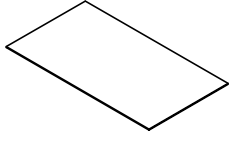NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
24		x1	
25		x1	
26		x2	
27		x1	
28		x1	
29		x1	
30		x1	

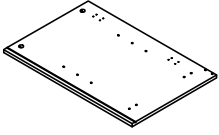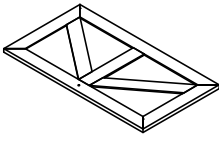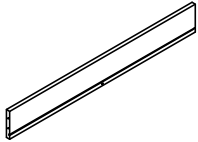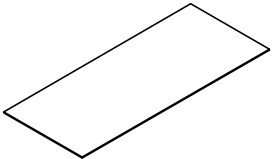NO.	PARTS	QTY	SPARE
31		x1	
32		x1	
33		x1	
34		x1	
35		x1	
36		x1	
37		x1	
38		x1	
39		x1	
40		x1	

[illegible]

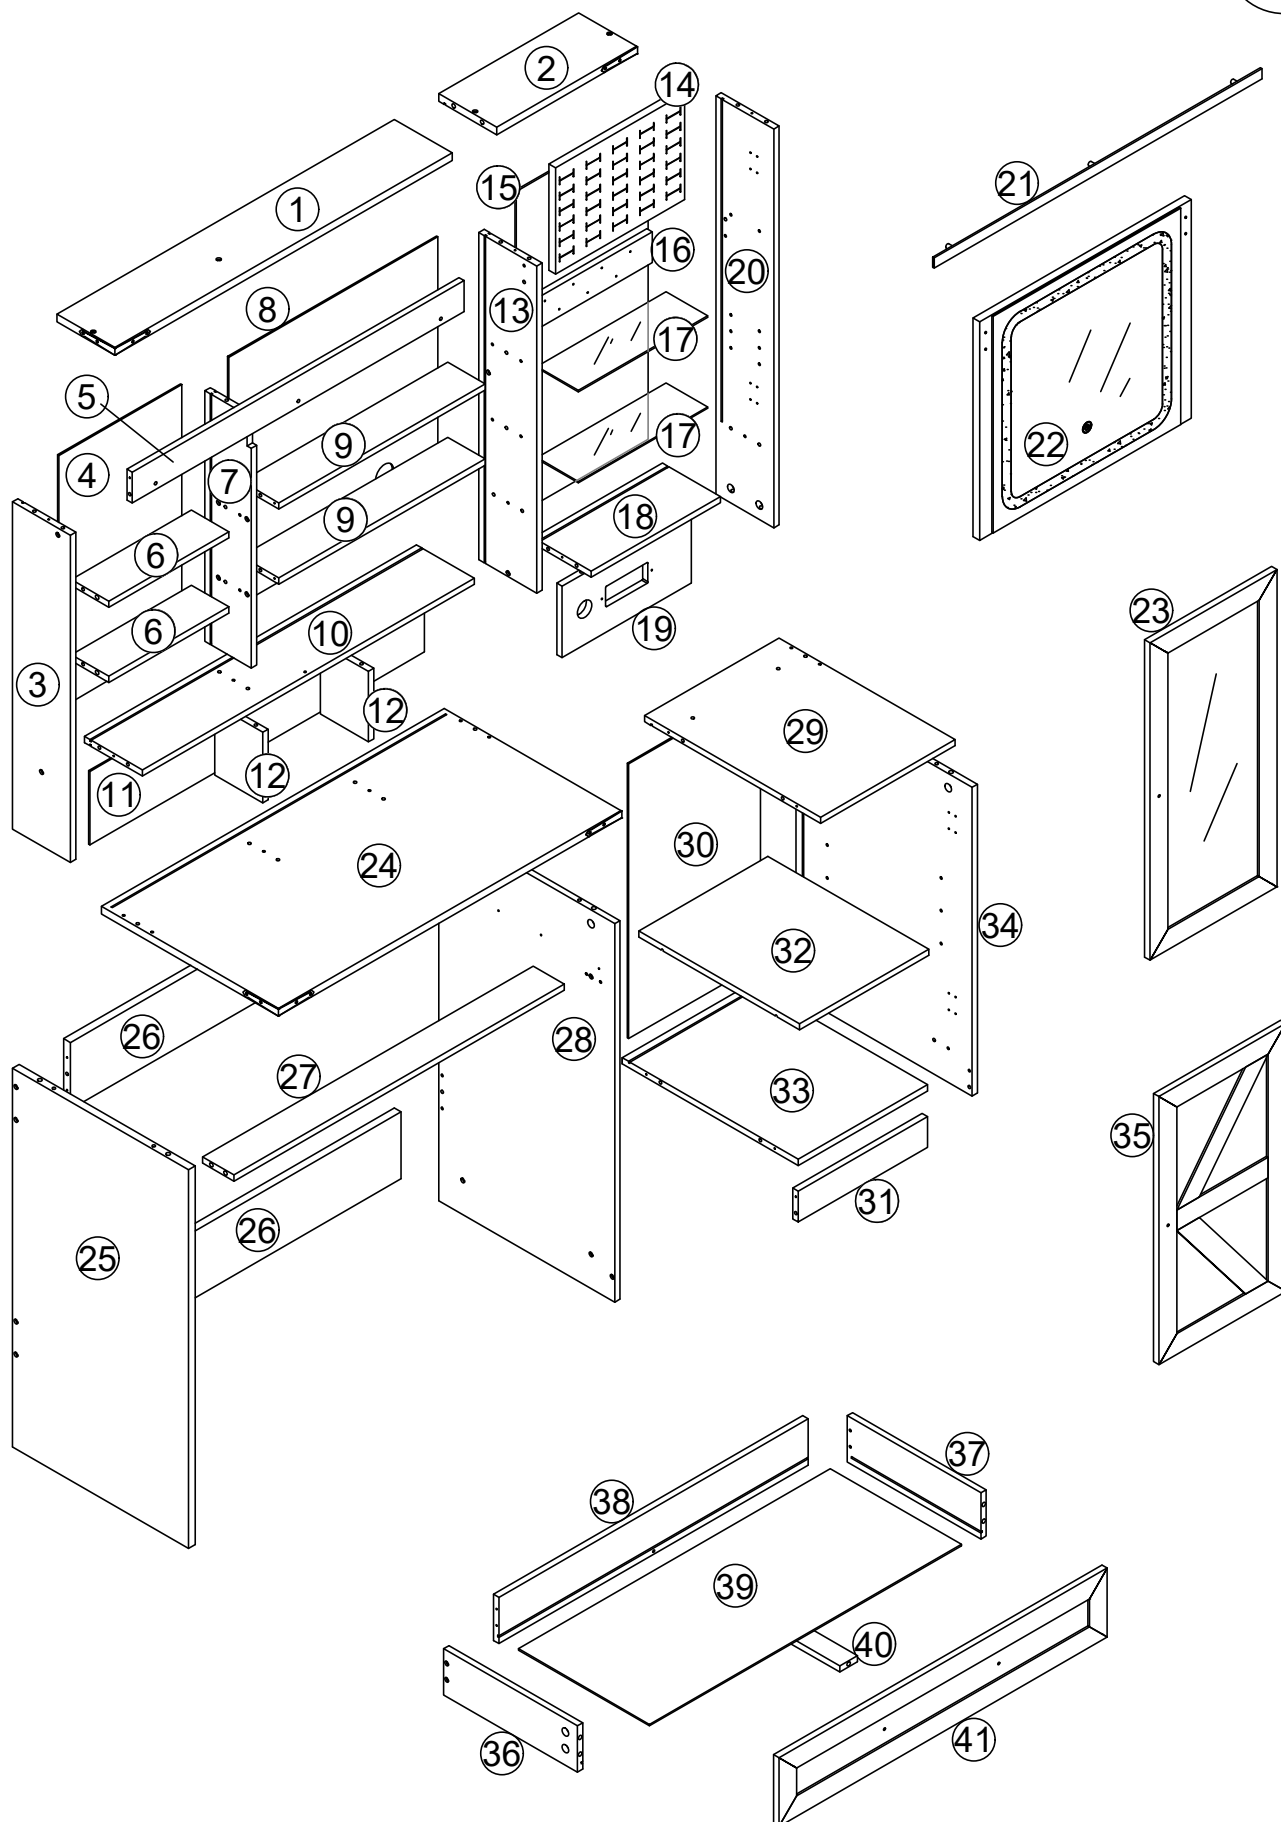



 A x29 Ø6x35mm +2(spare)	 B x31 Ø15x10mm +2(spare)	 C x62 Ø6x30mm +2(spare)	 D x44 Ø4x35mm +2(spare)	 E x12 Ø3.5x12mm +1(spare)	 F x3 Ø6x20mm
 G x24 Ø3.5x12mm +2(spare)	 H x2 H-1 H-2	 I x1	 J x1	 K x7	 L x2 L-1 L-2
 M x8	 N x4	 O x1 O-1 O-2	 P x4	 Q x4	 R x1 Ø3x12mm R-1 R-2
 S x20 Ø3x16mm +2(spare) S-1 S-2	 T x1	 U x2	 V x1	 W x2 Ø4x14mm W-1 W-2	 X x1 M4
 Z x2 Ø6x30mm	 AA x19 Ø15mm +7(spare)	 BB x2	 CC x2	 DD x1	 EE x7 Ø20mm +3(spare)
 CL x1 L300mm	 CR x1 L300mm	 DL x1 L300mm	 DR x1 L300mm		

01

A x2


E x3

CL x1



CL


25

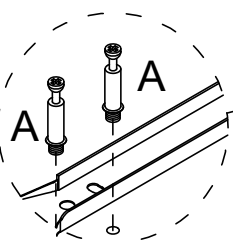

A x2


E x3

CR x1



CR



28

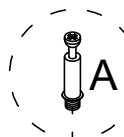



C x3



D x3

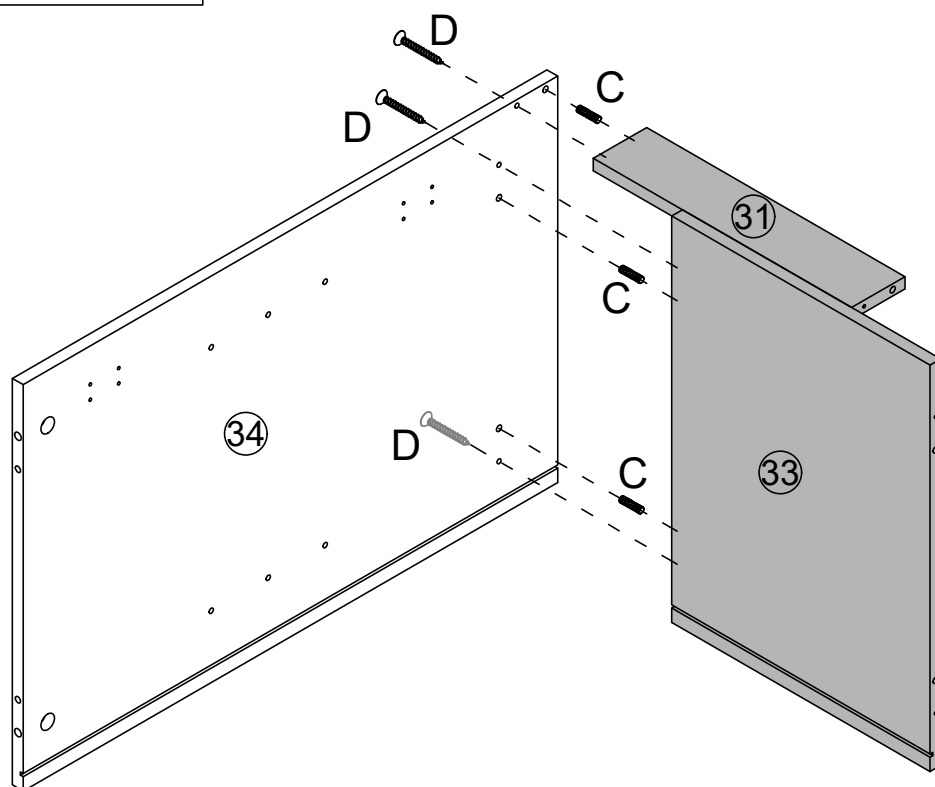


A x2

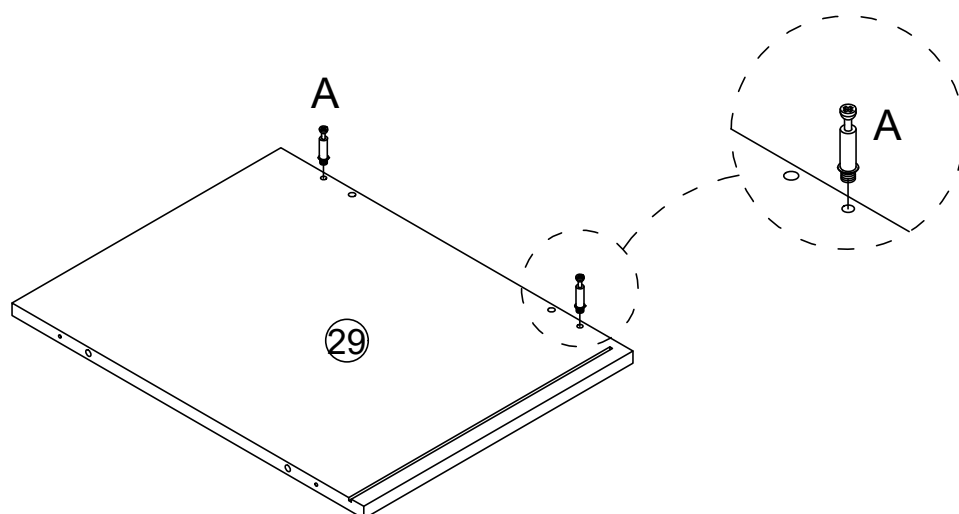


B x2



C x2


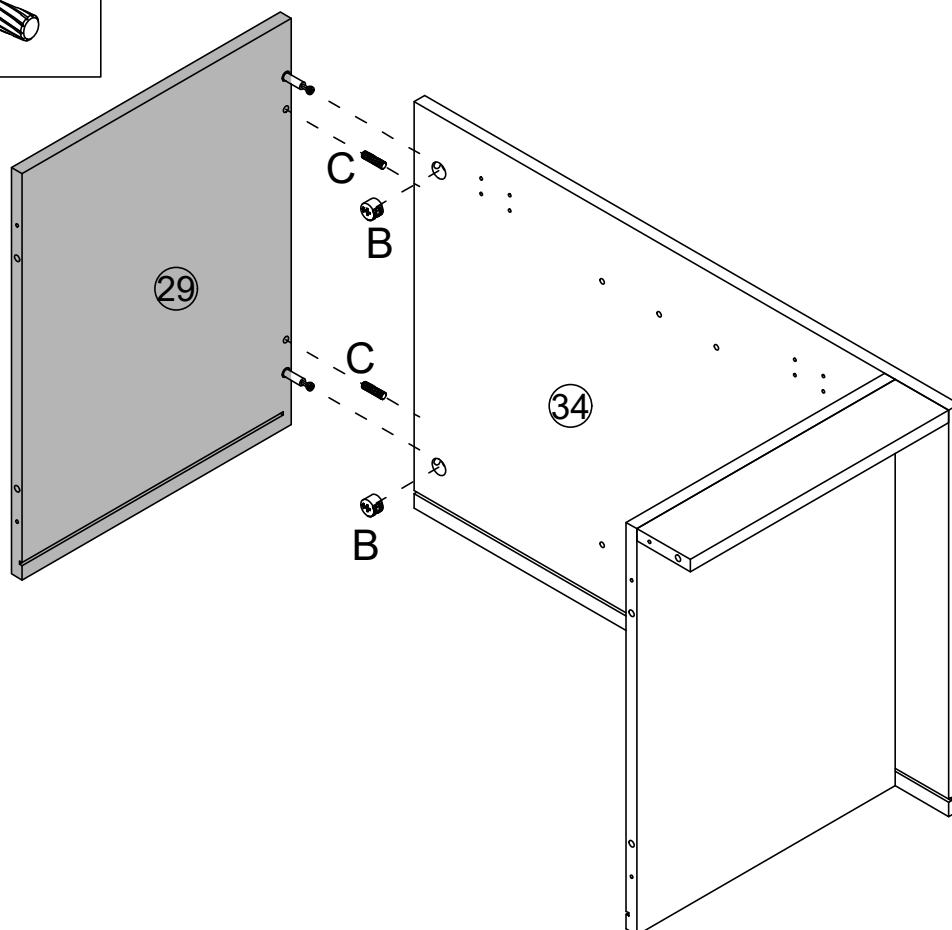


C x5


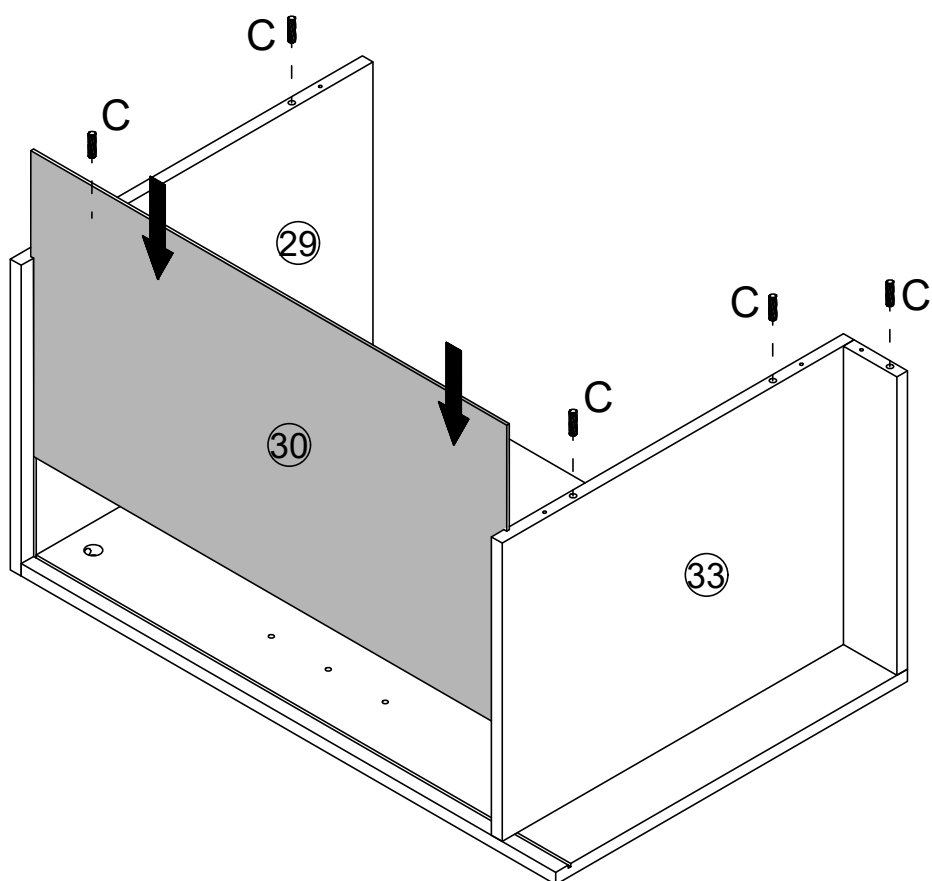


C x2

D x4

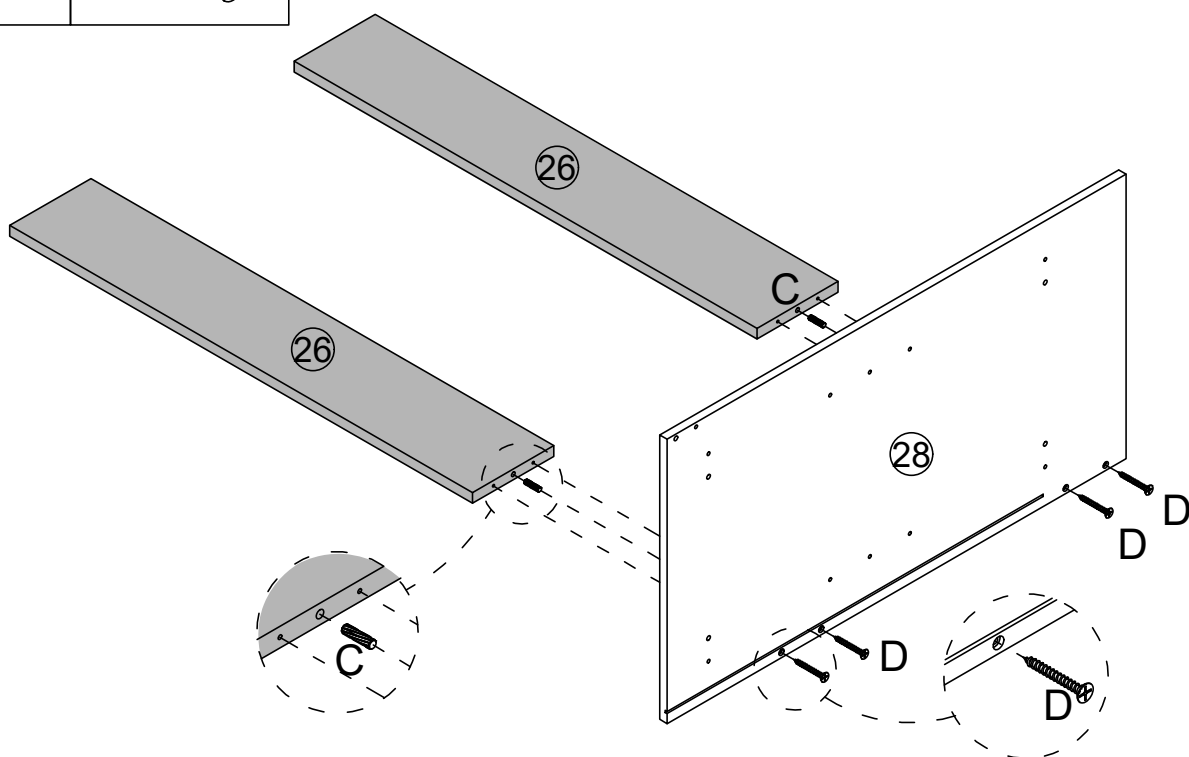

D x5

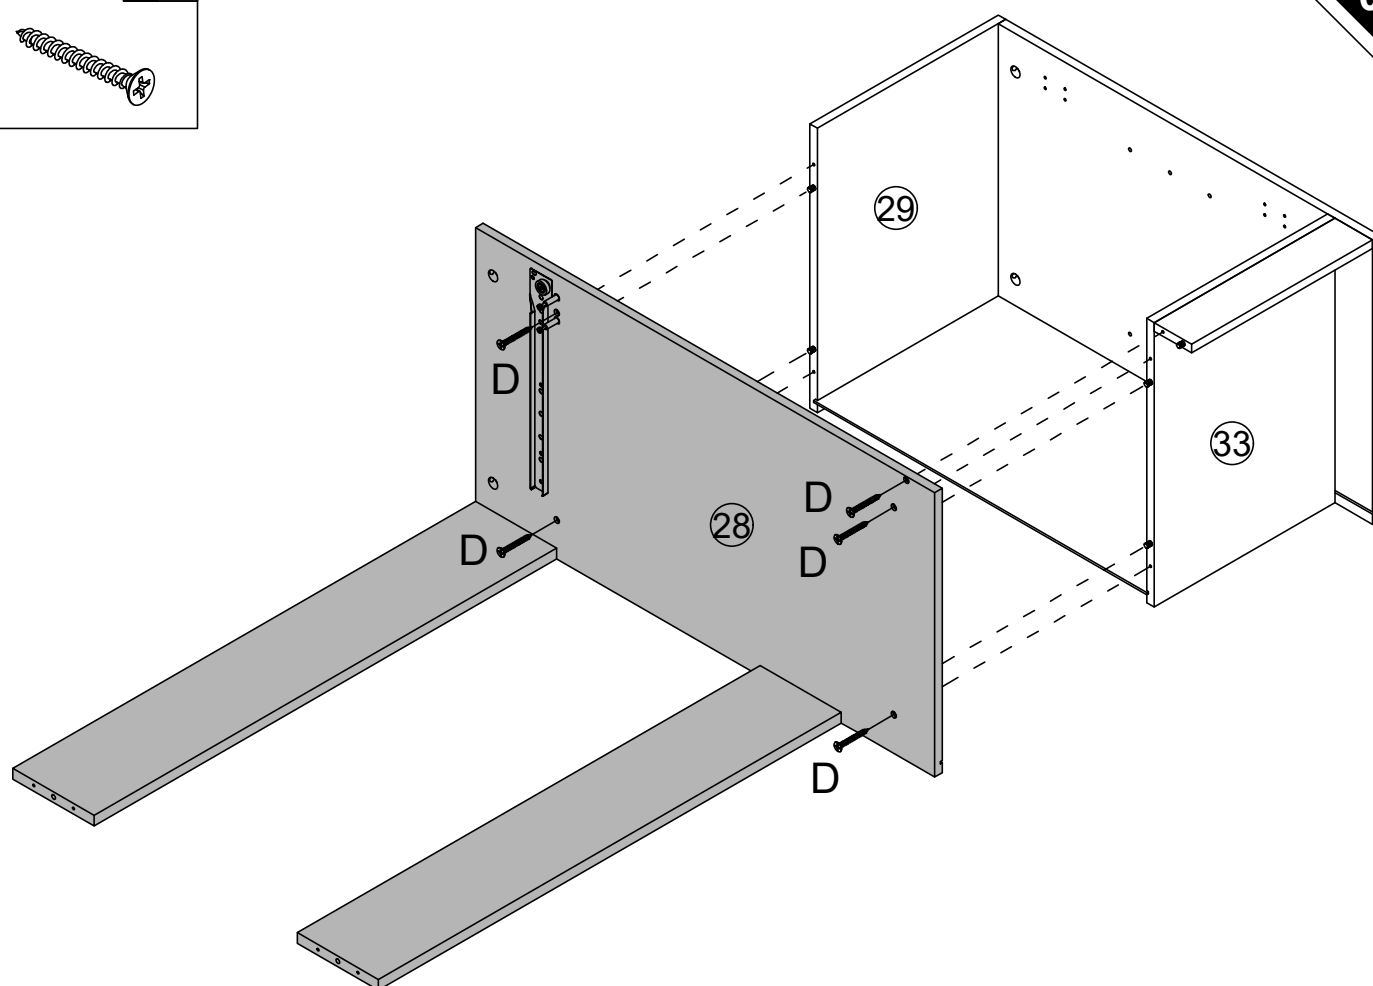



B x4






C x2




D x4

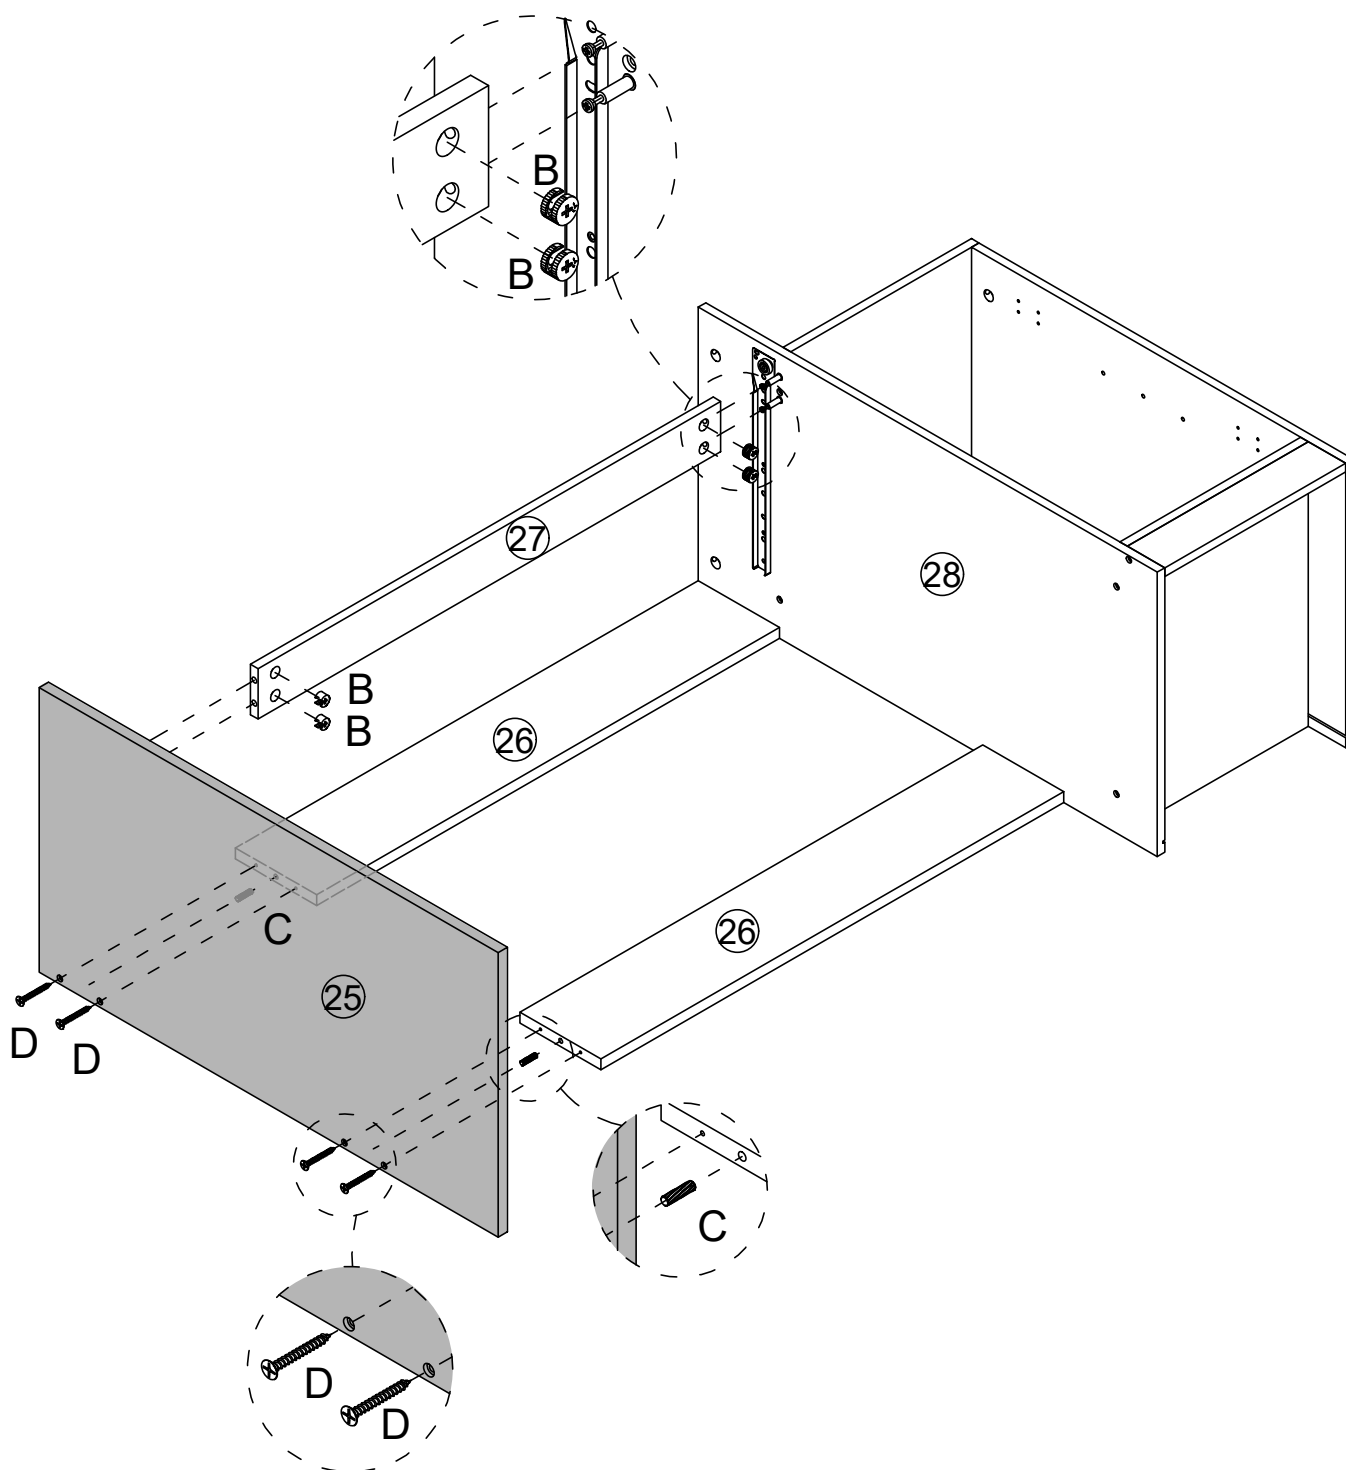

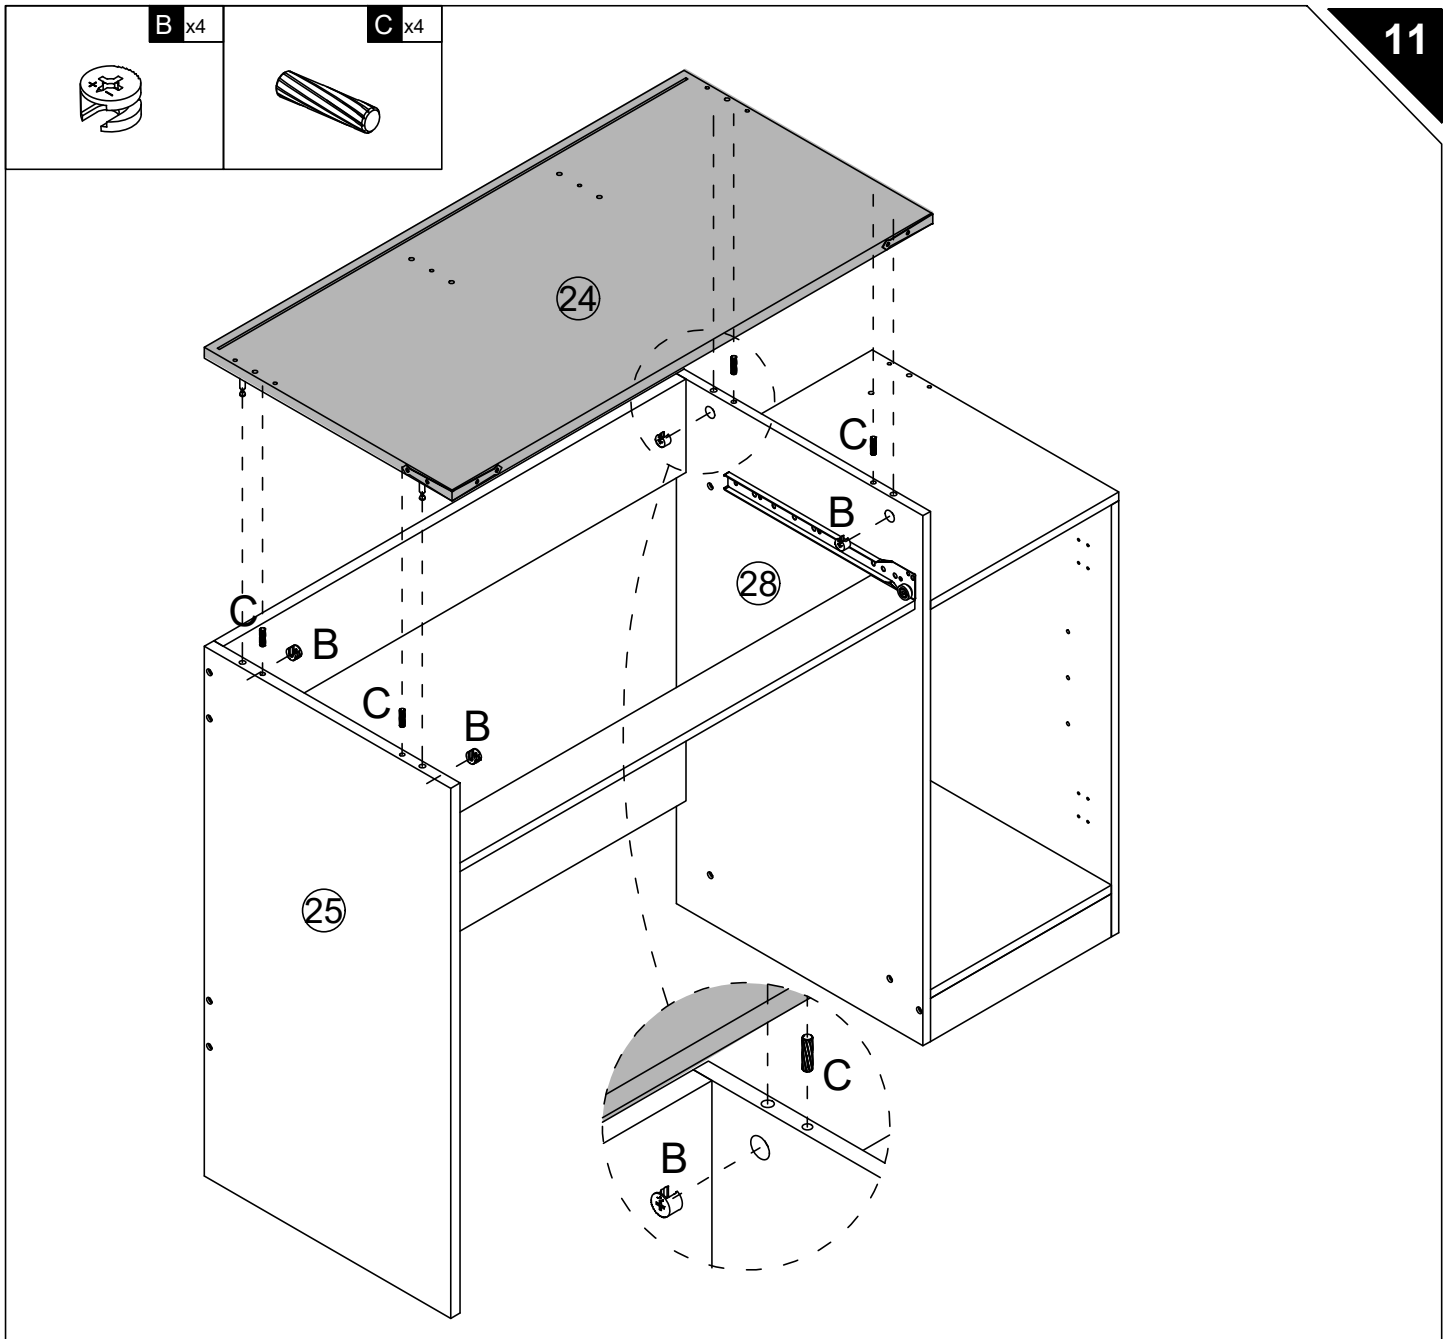
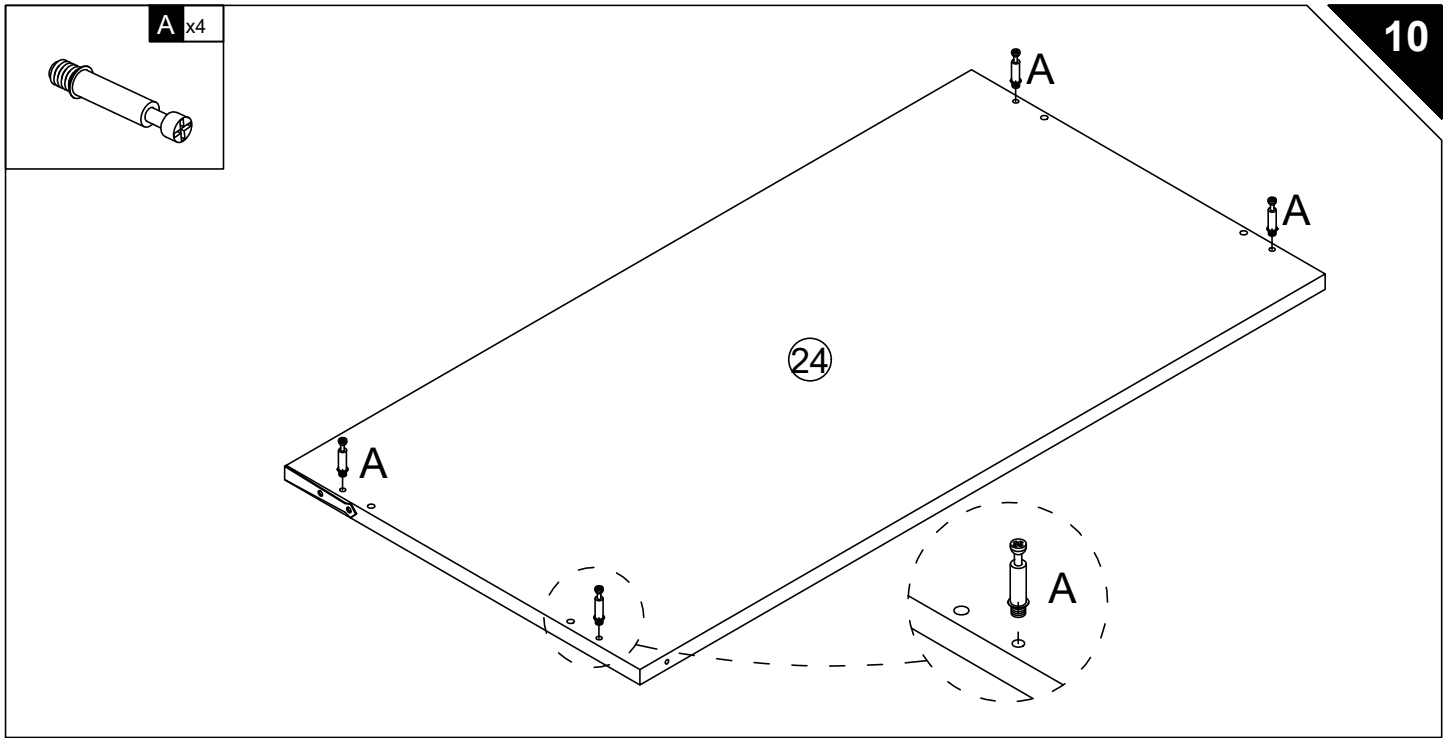


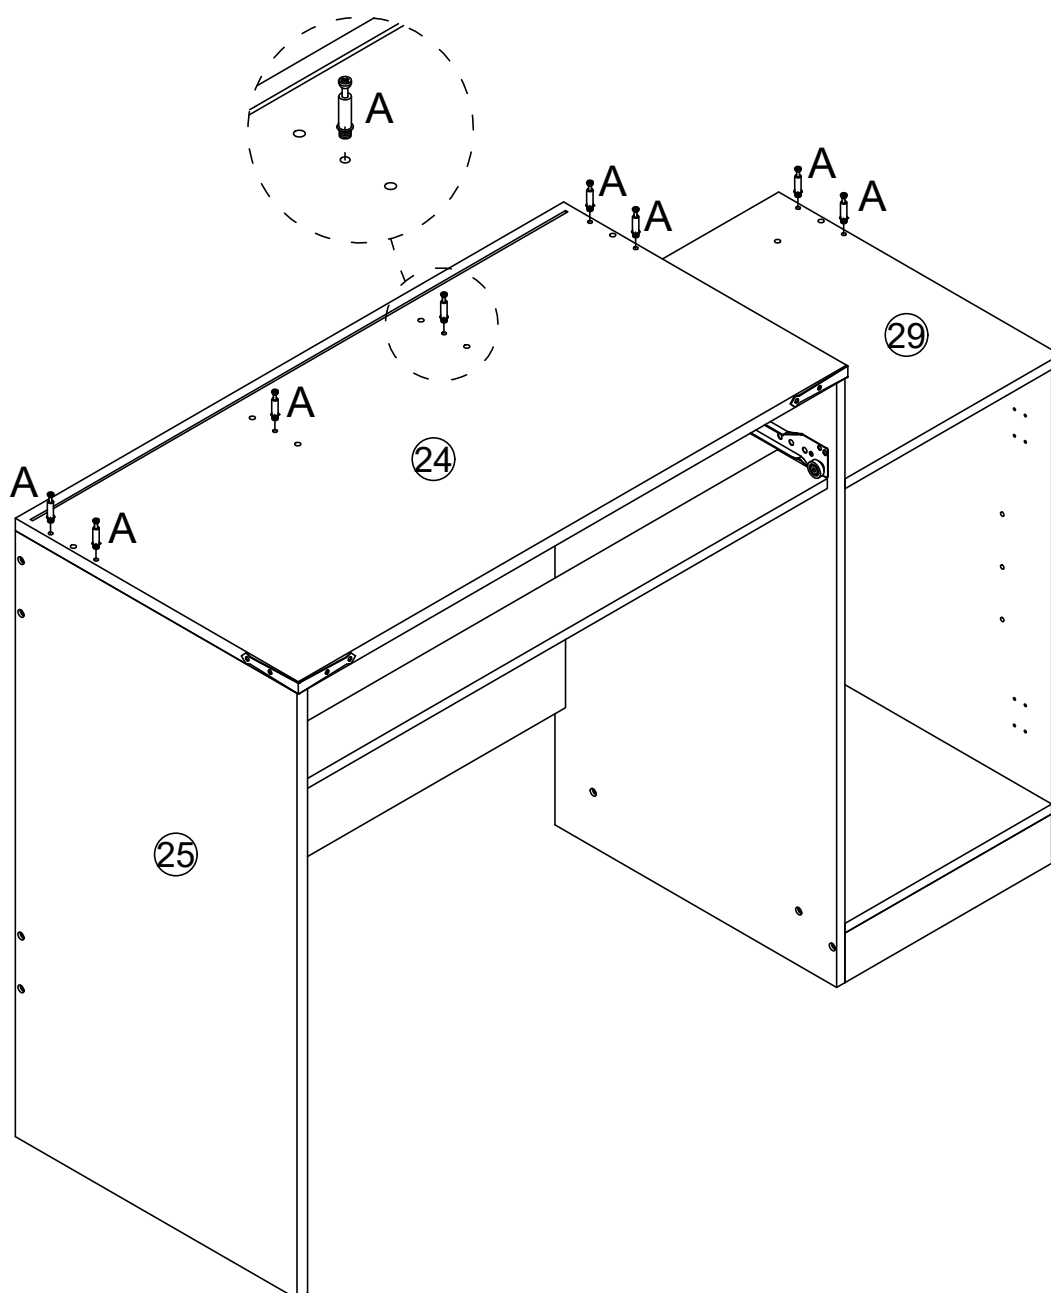


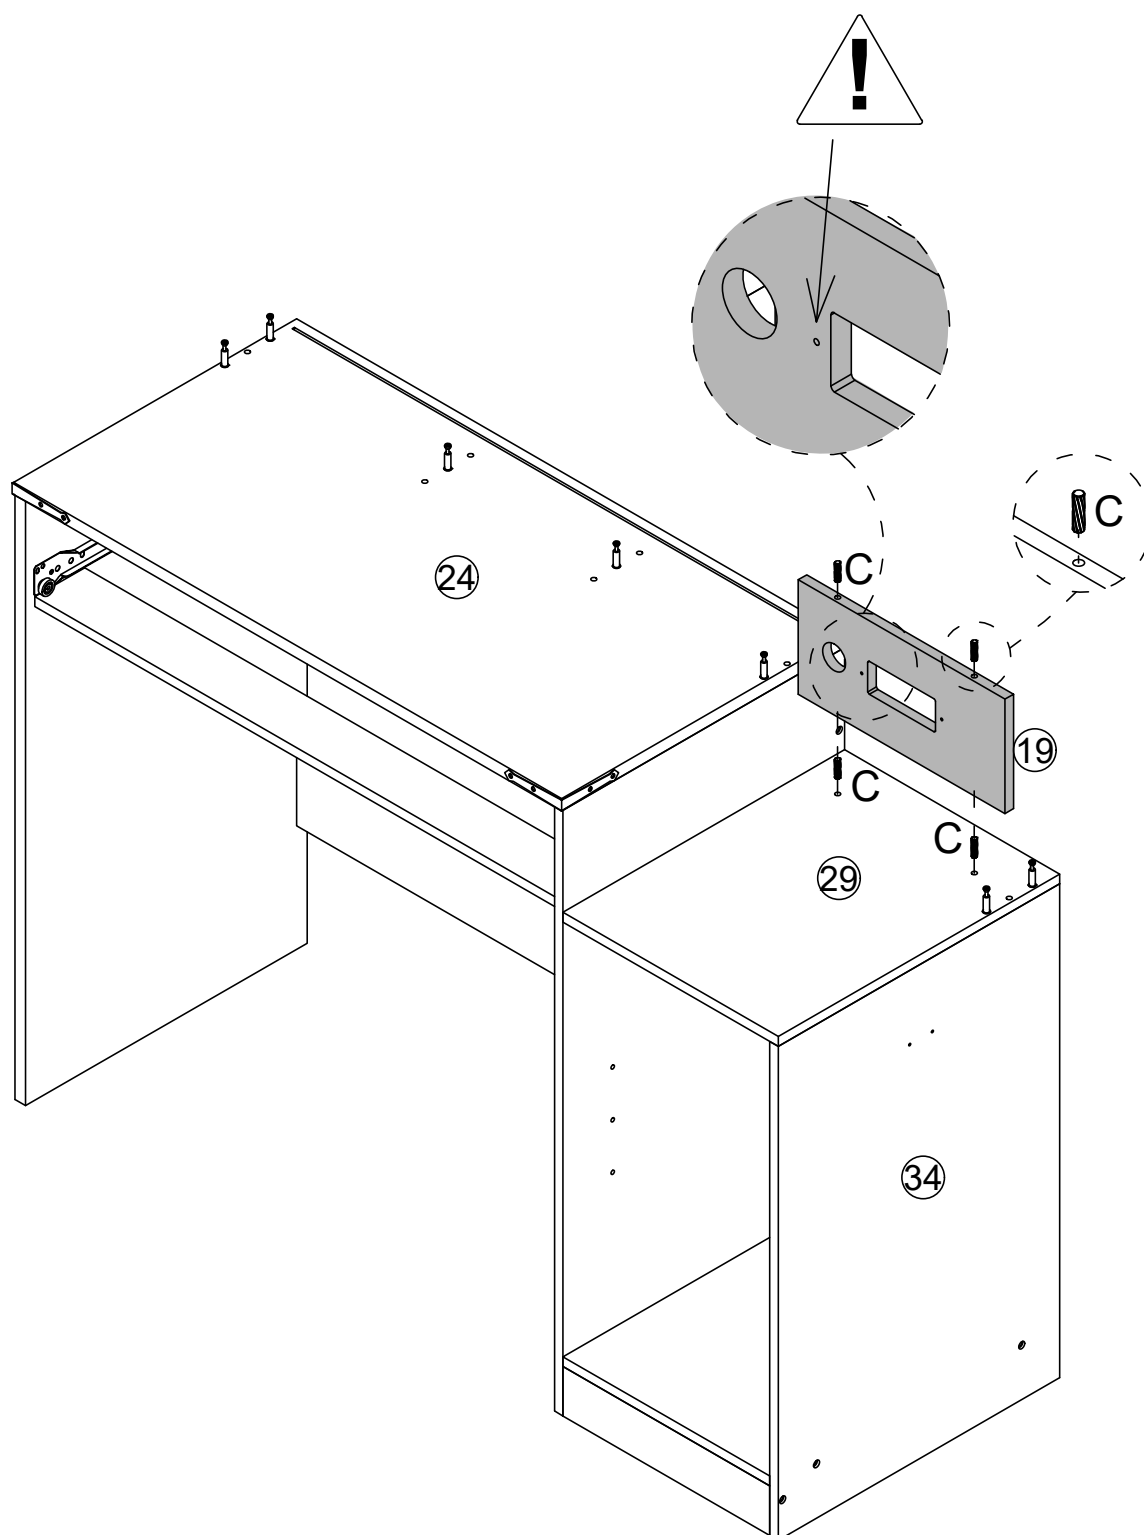


C x6

D x4

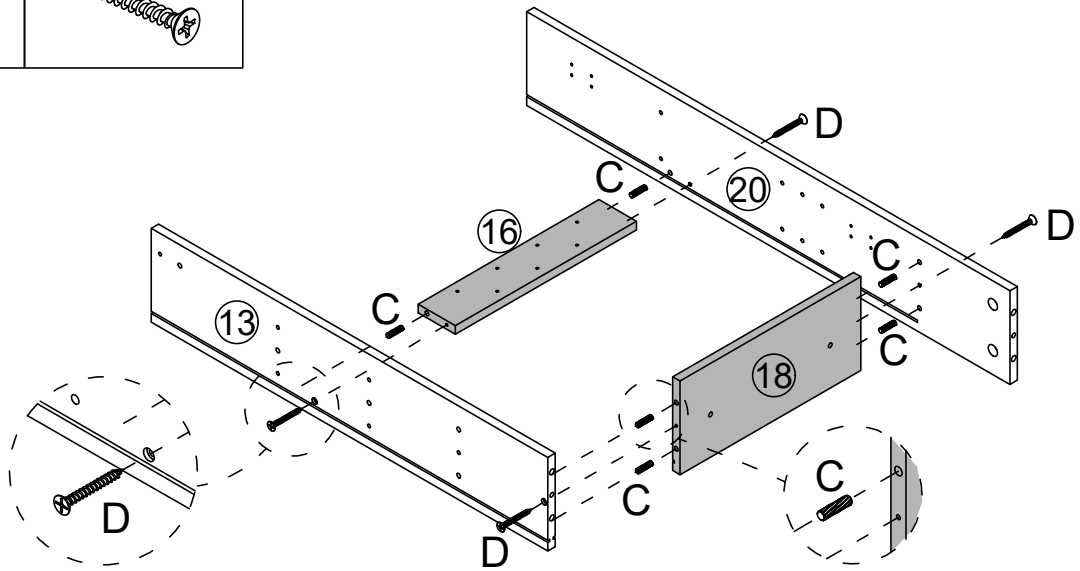



A x6

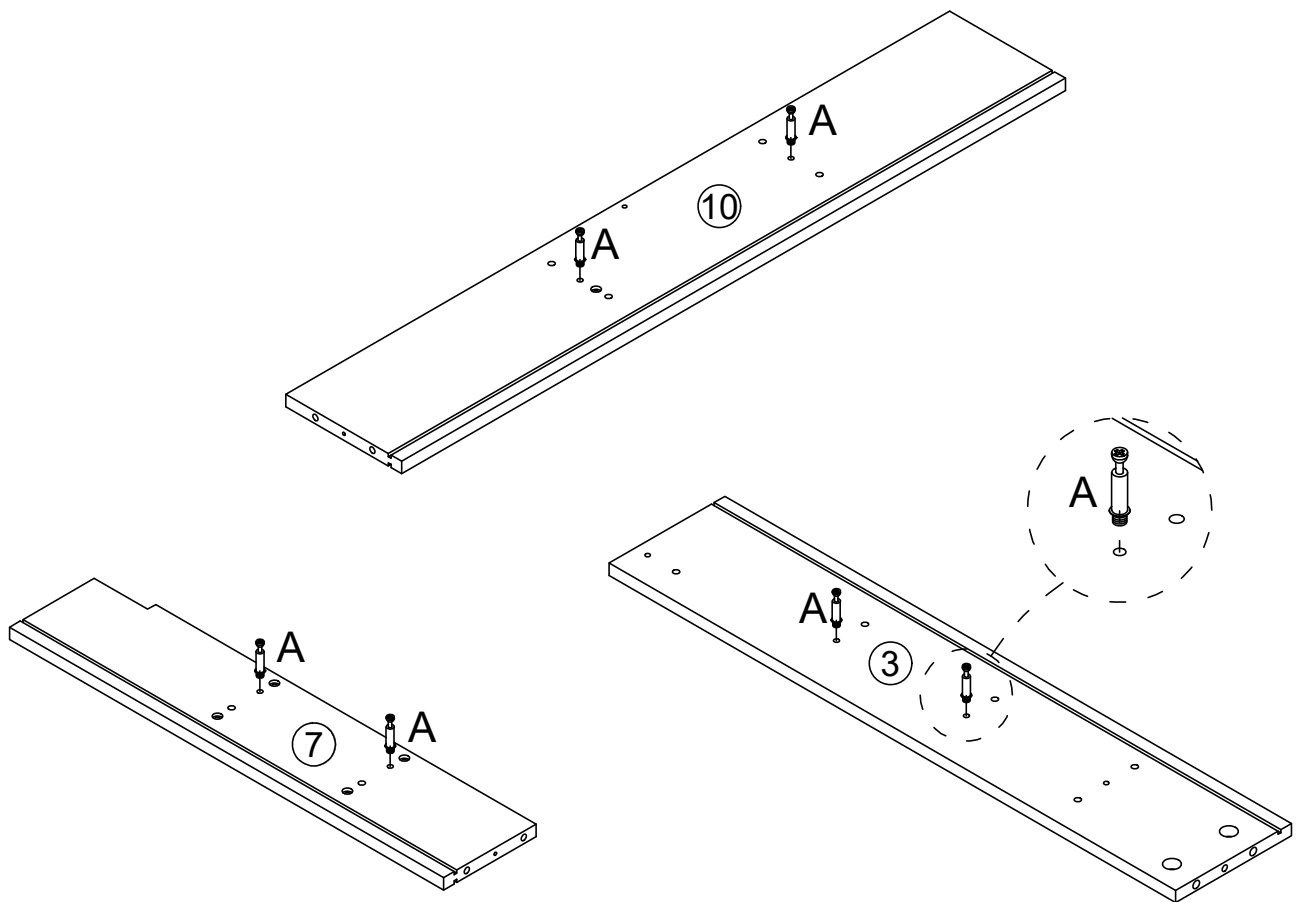


C x2



D x1

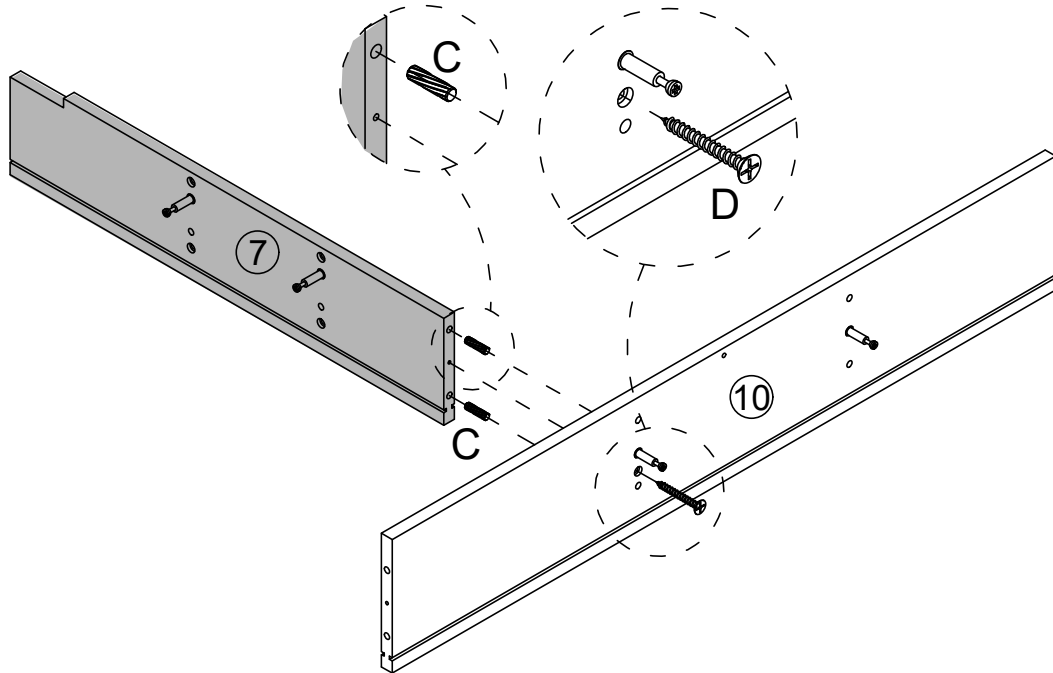

F x3

X x1

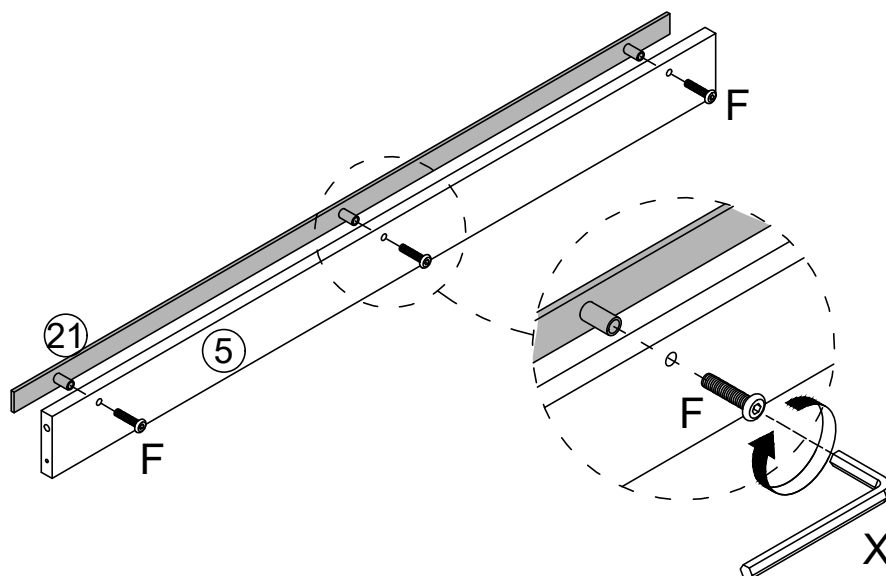

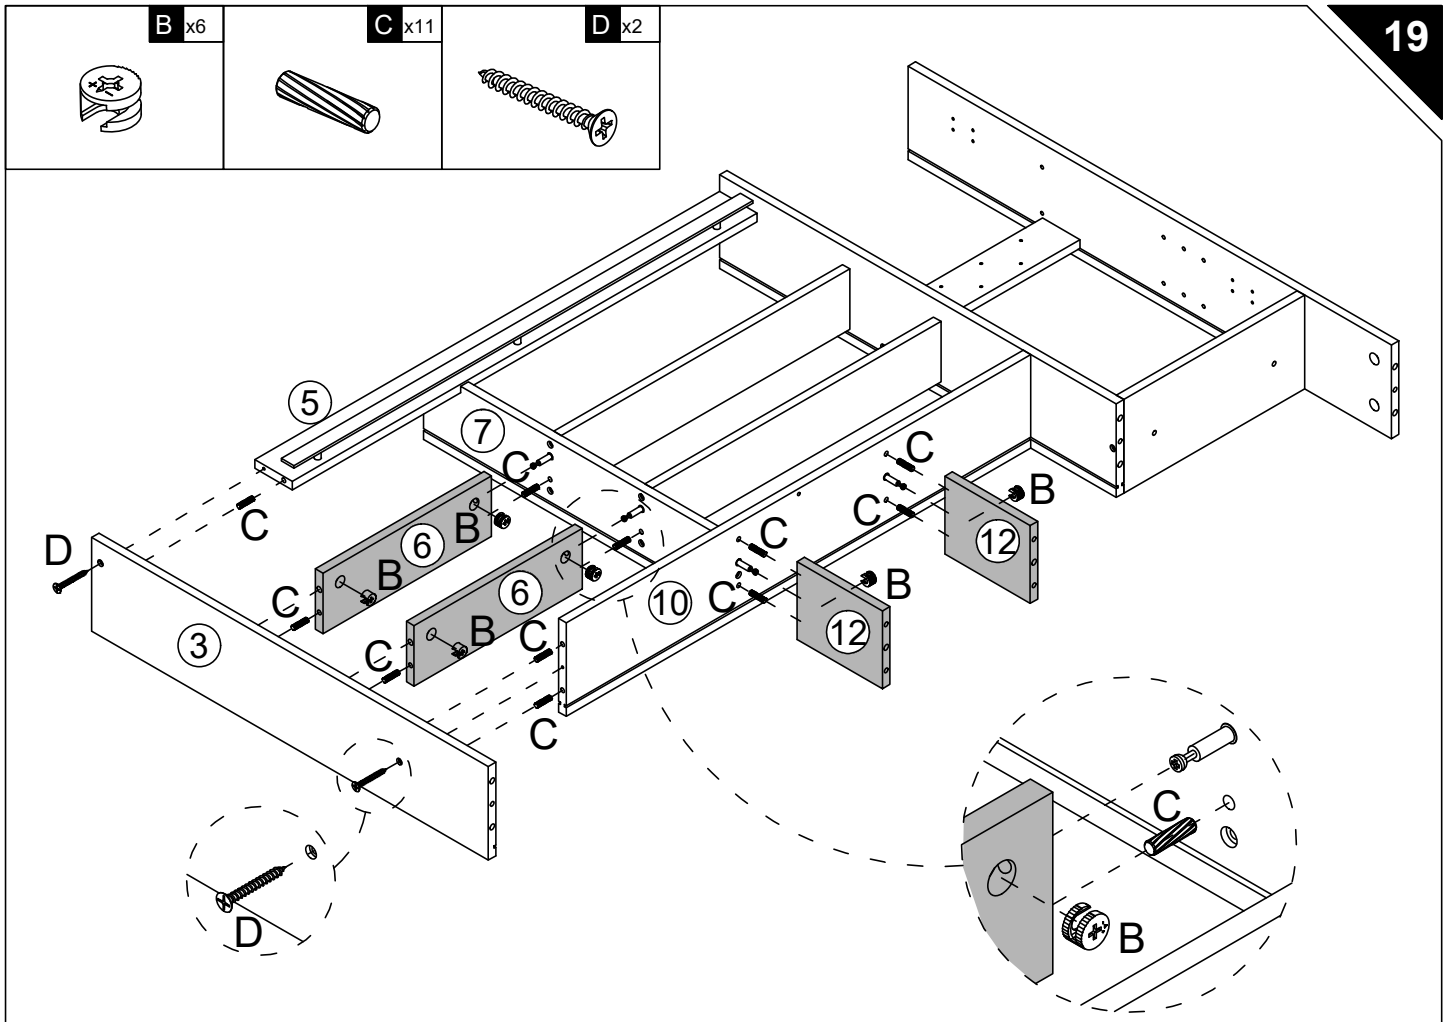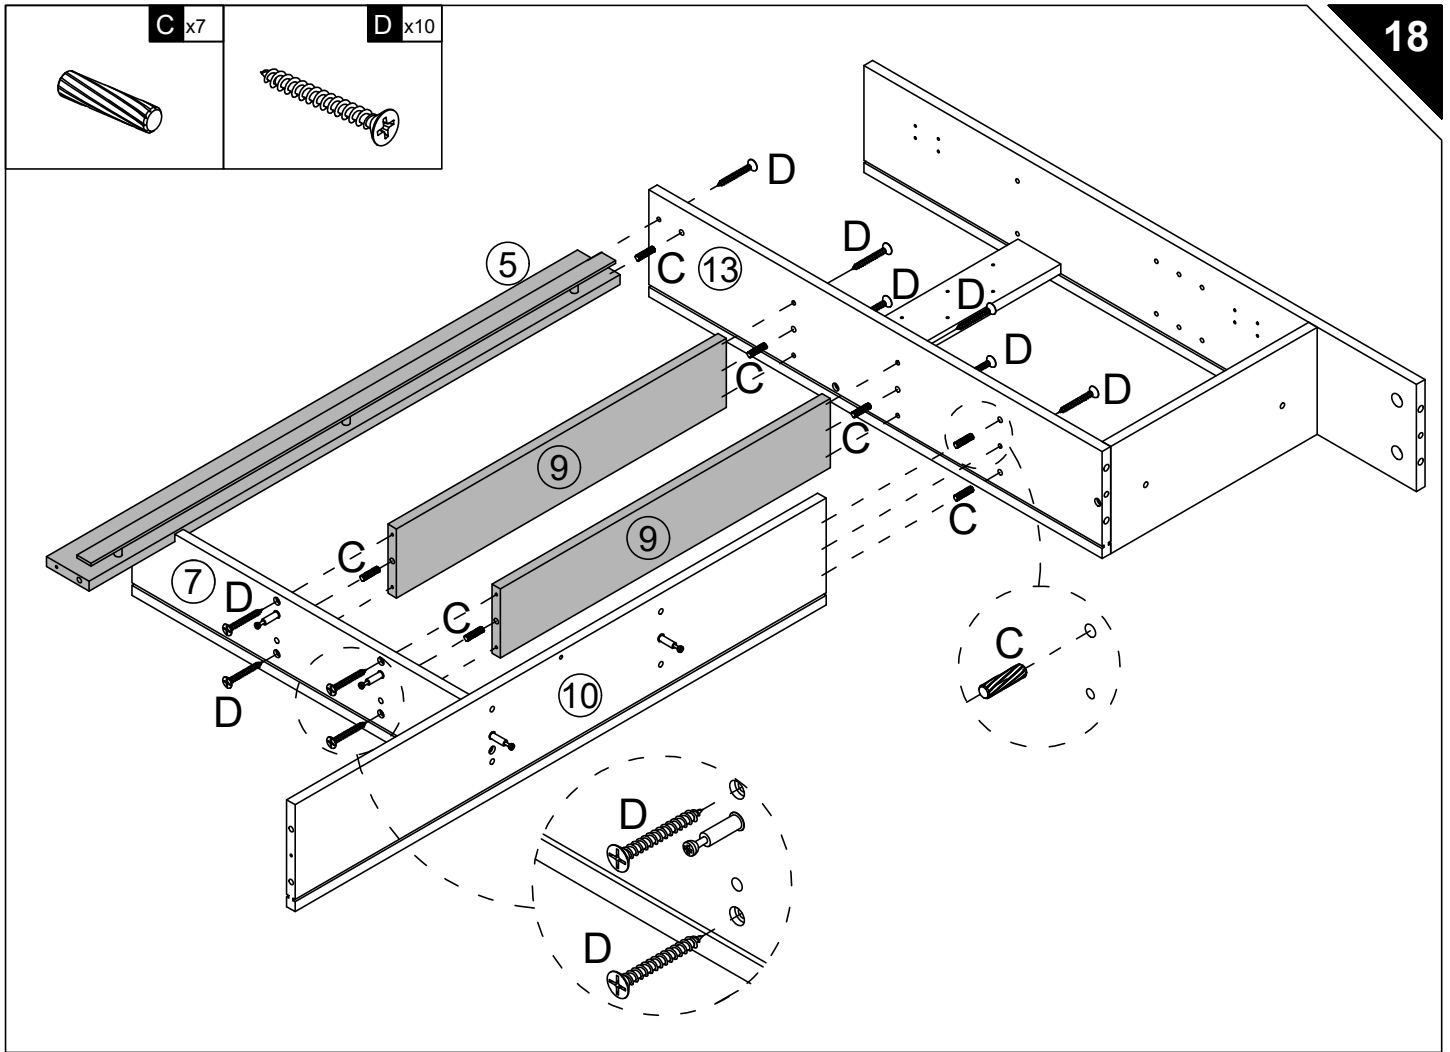





S x2



S-1






S-2

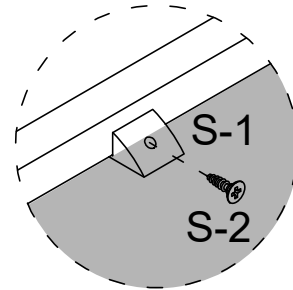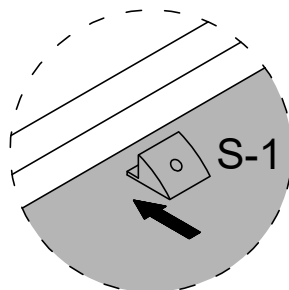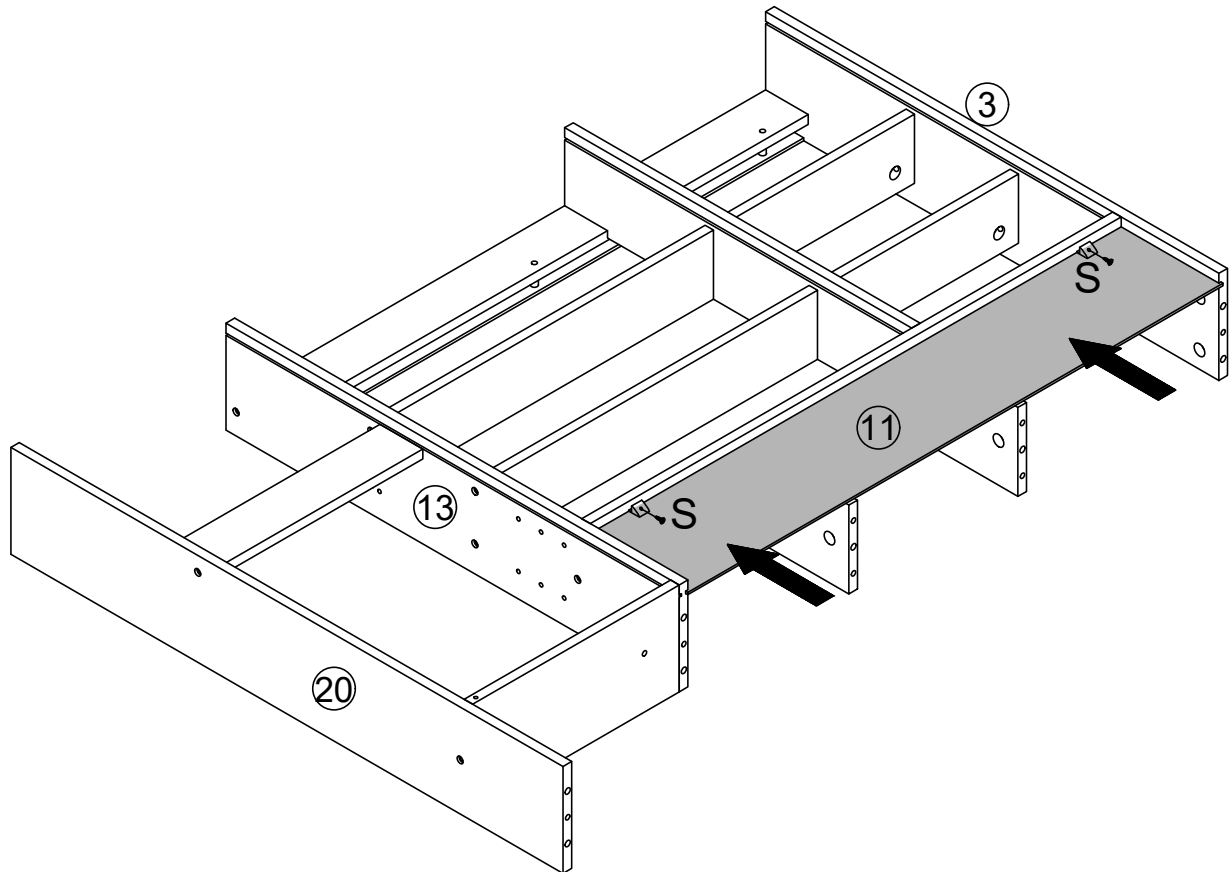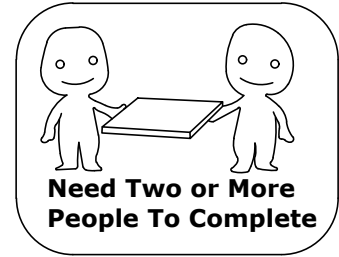

B x8



C x7

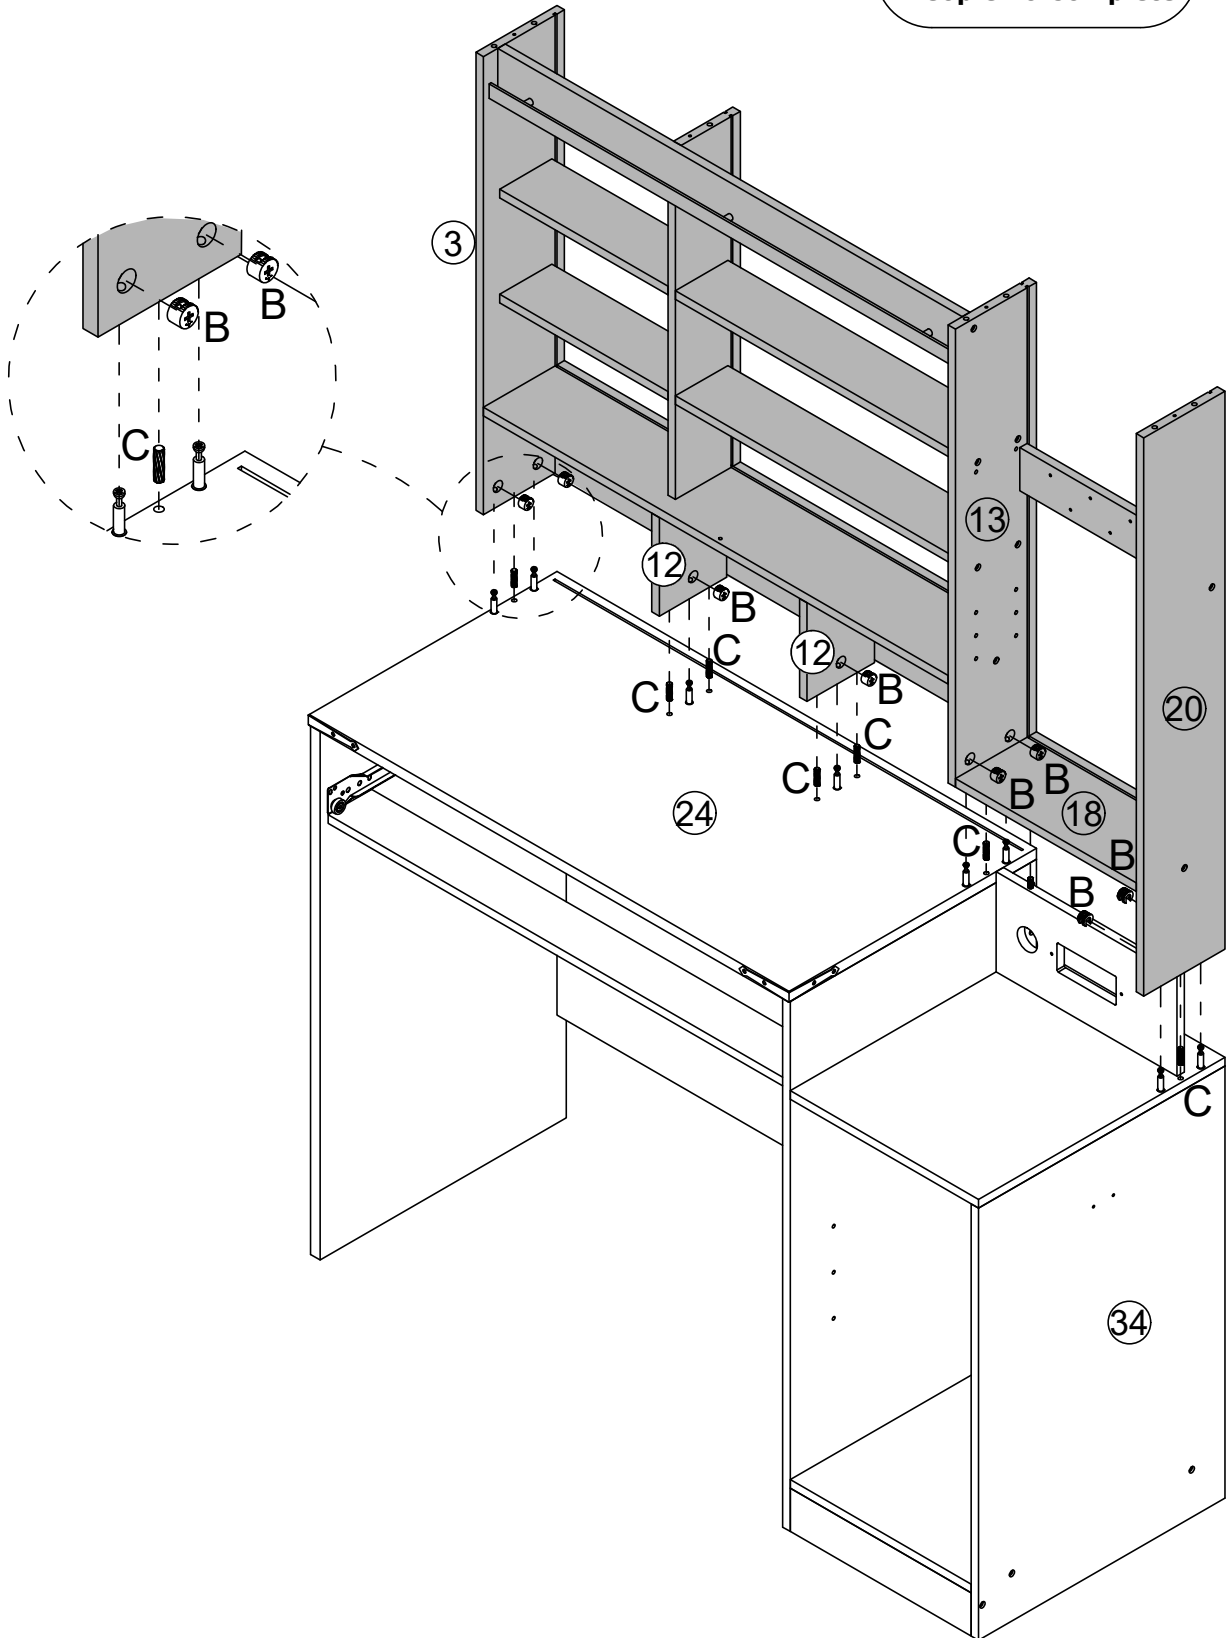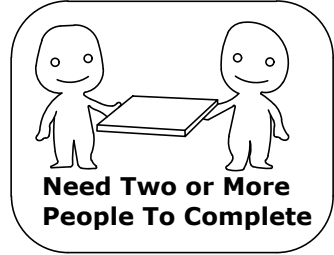

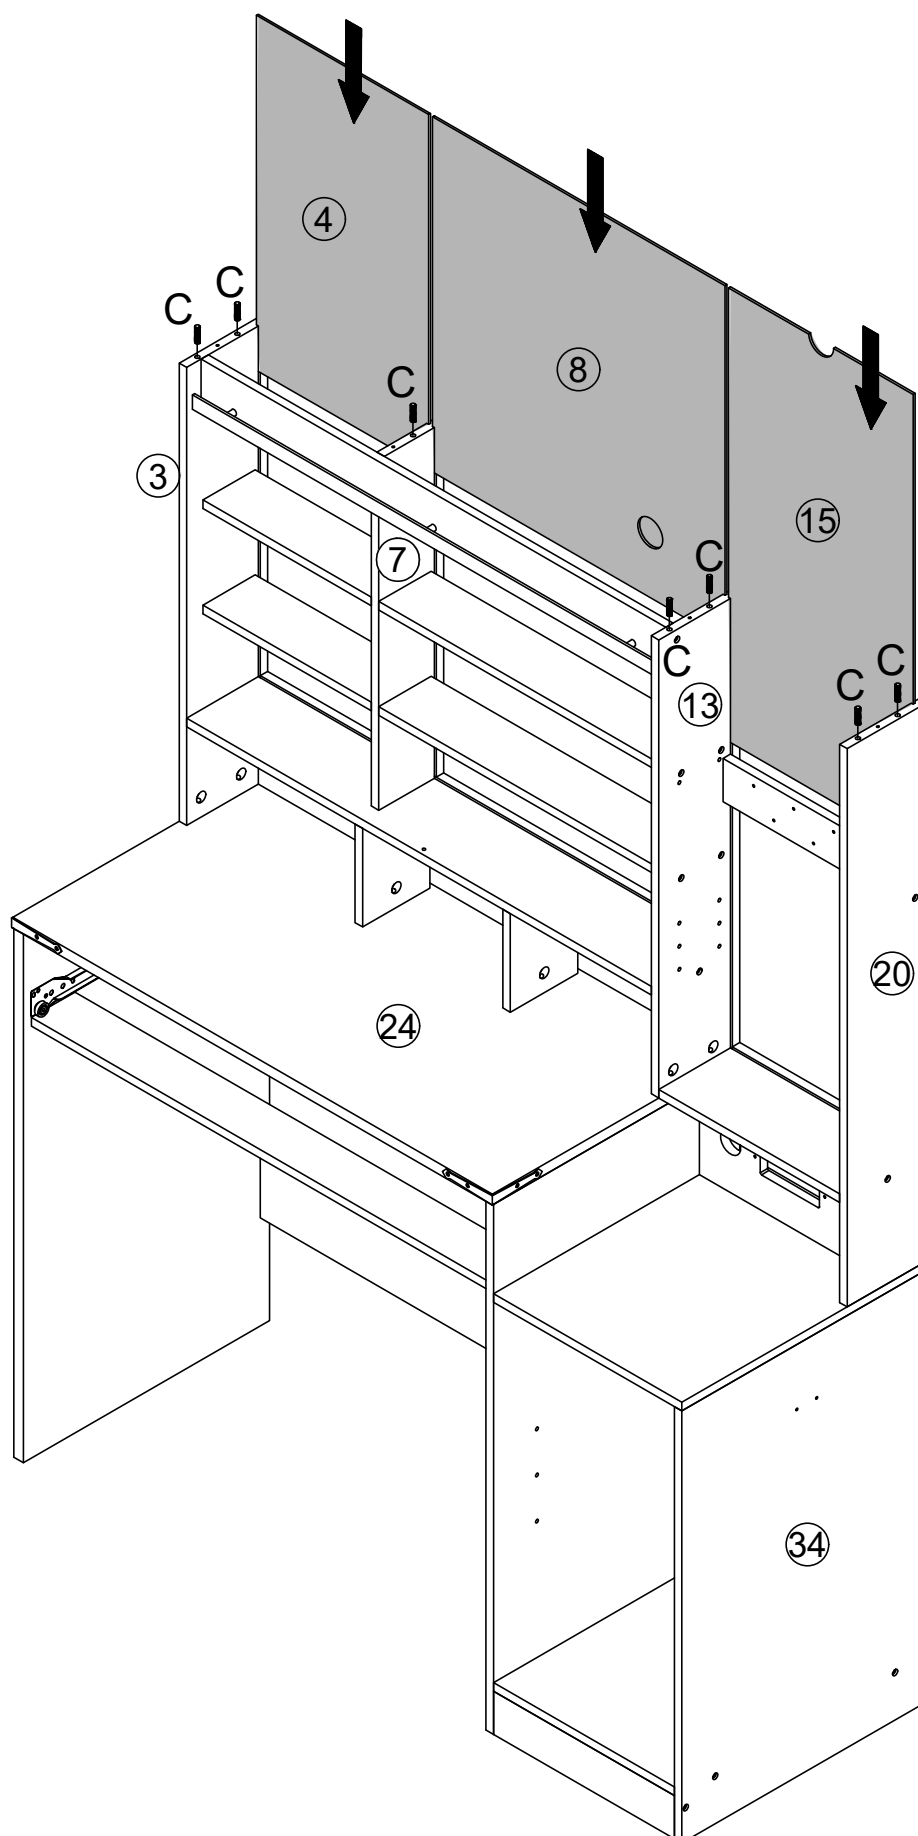

H x2



I x1

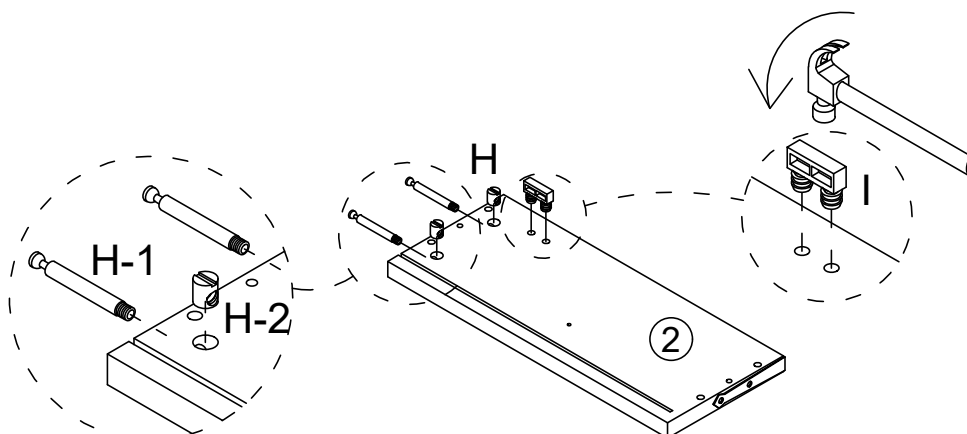


B x2

J x1


R x1

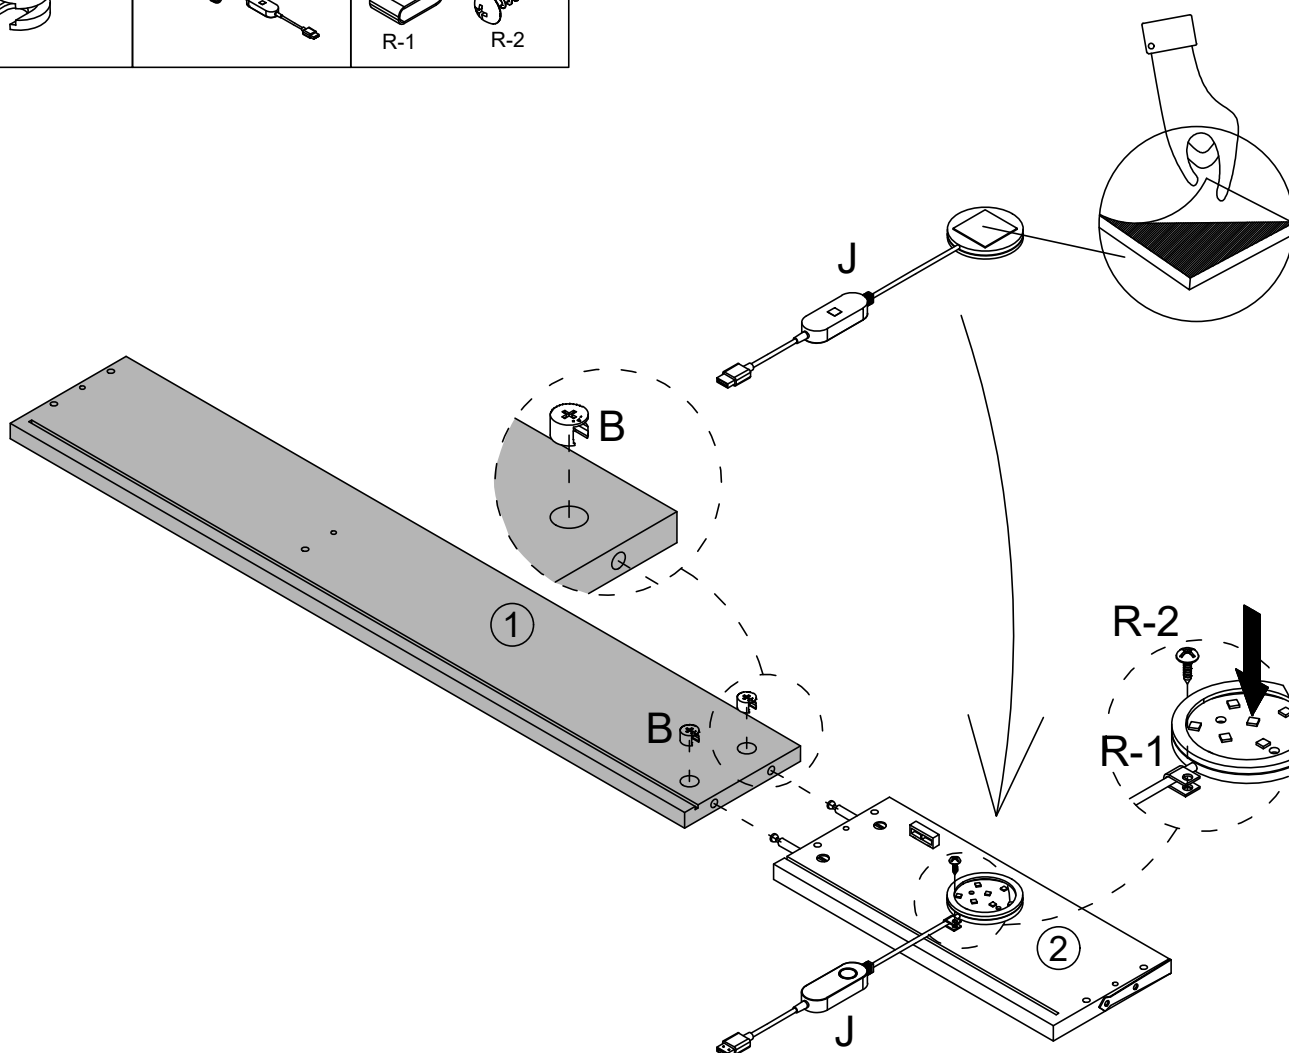


D x4




T x1




U x2

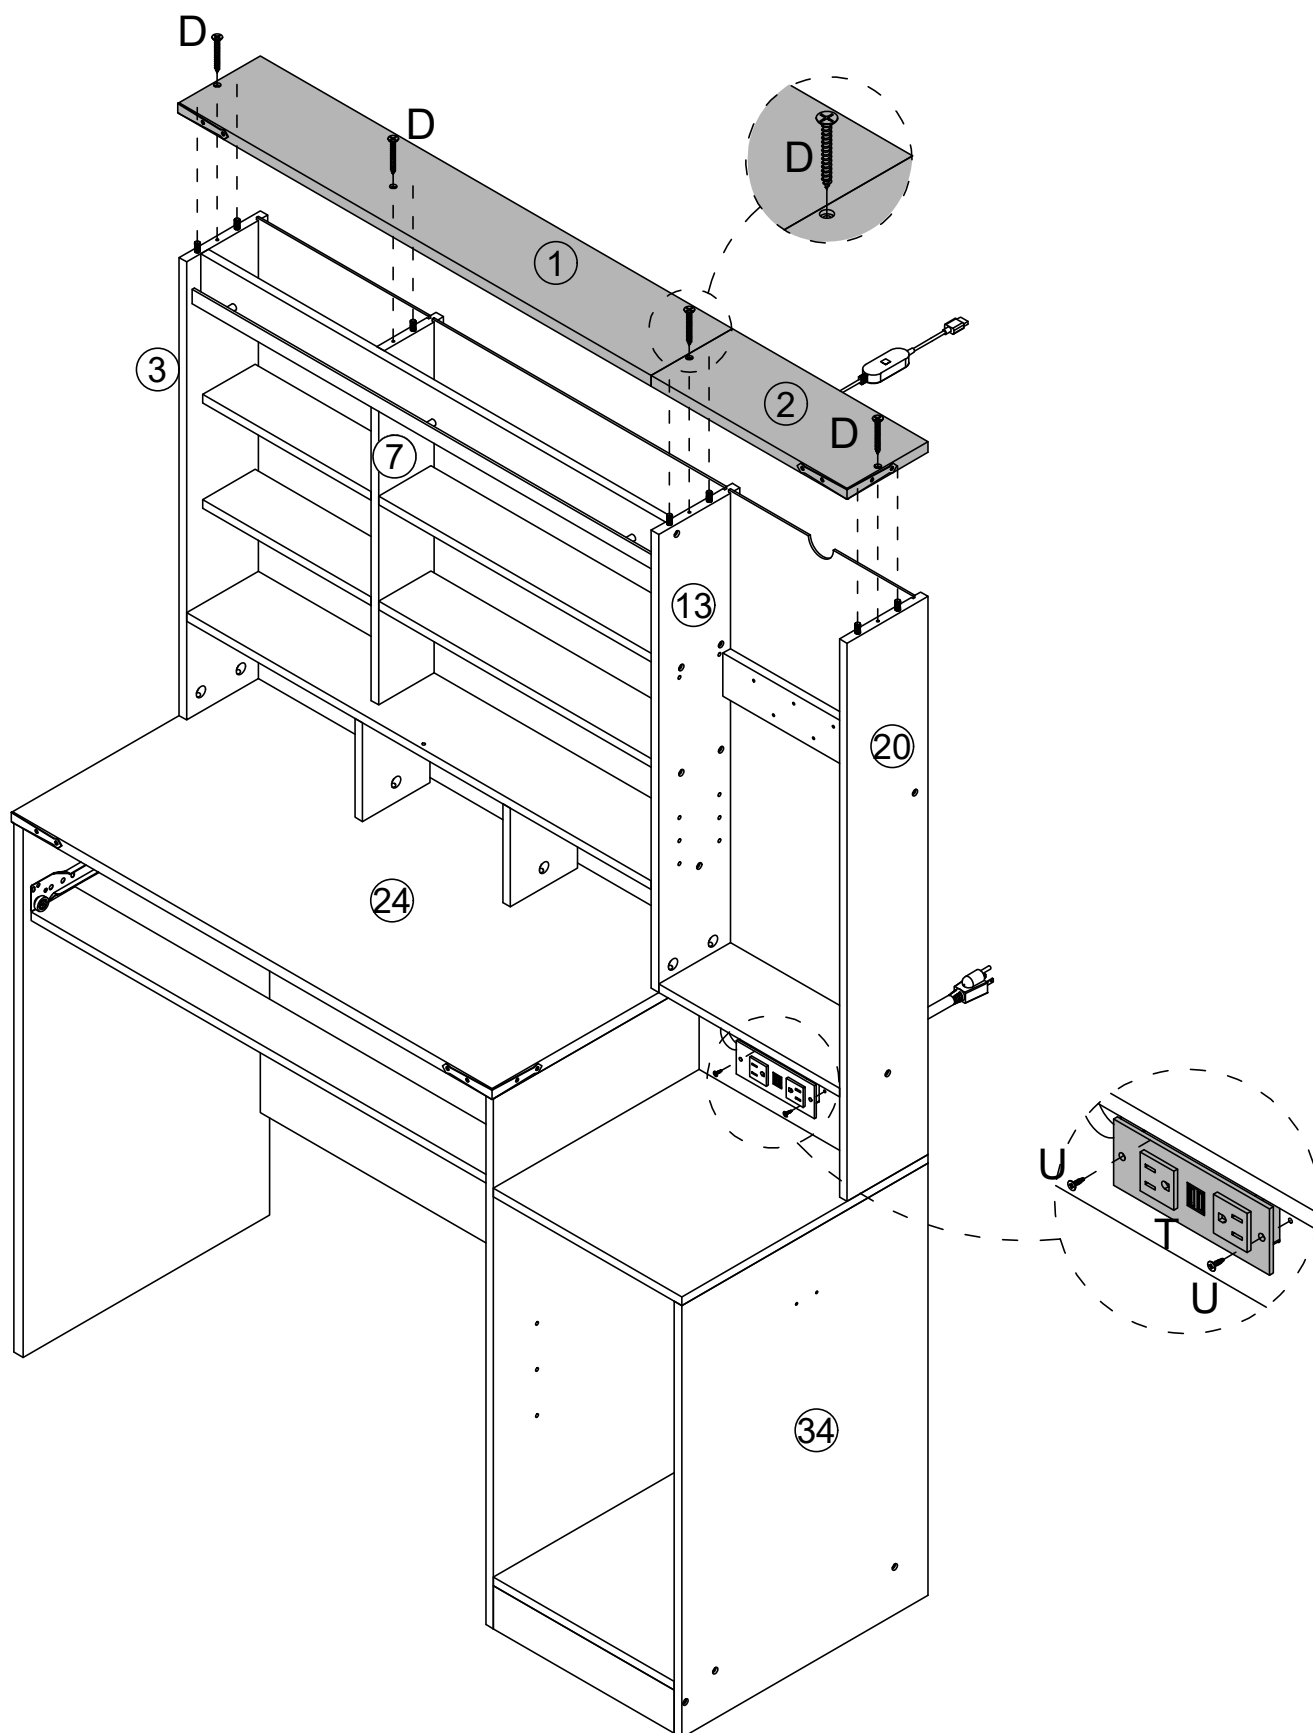

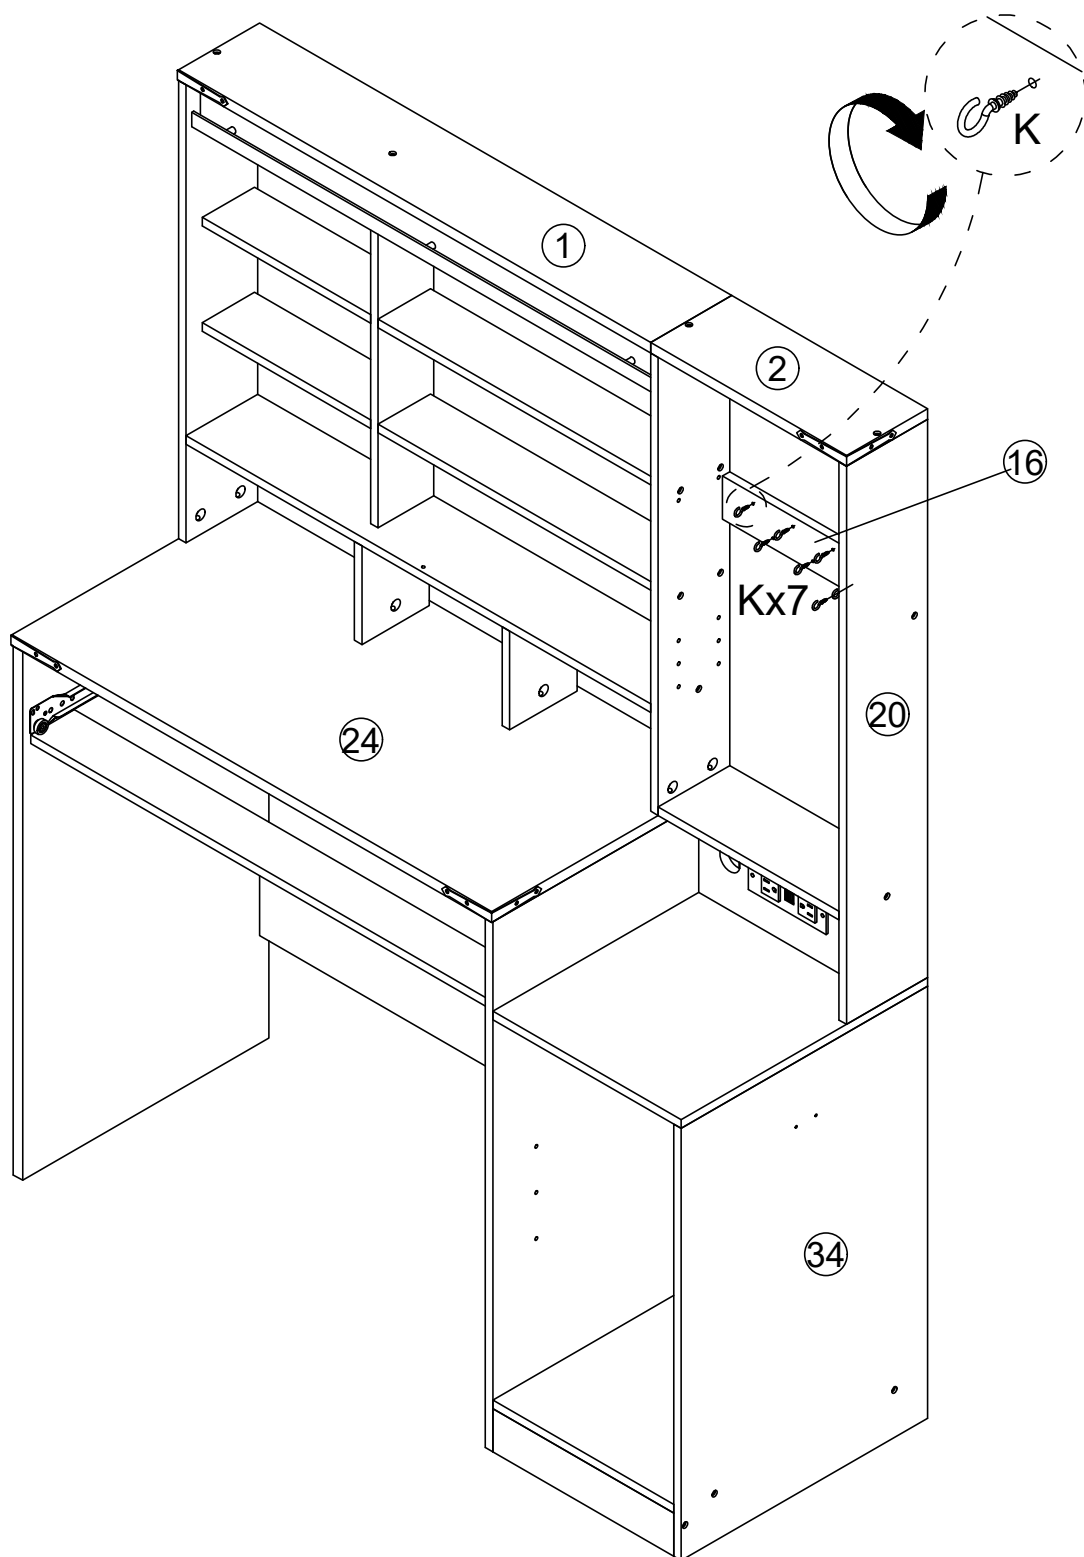


L x2


DD x1




1

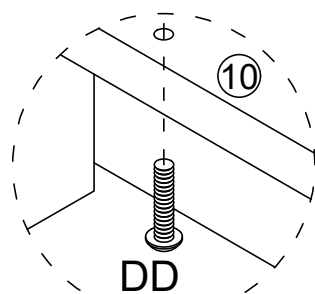


2

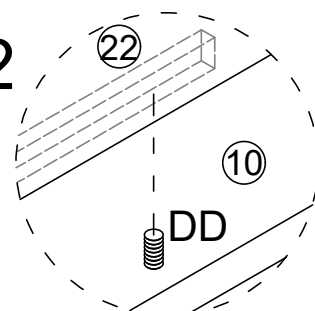


3

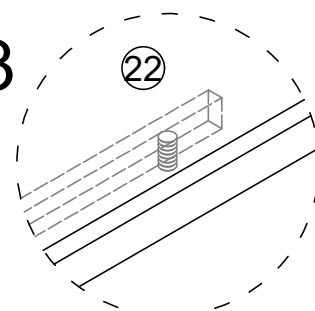



4

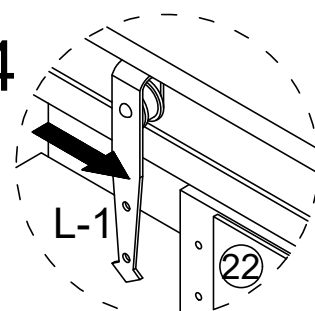

5

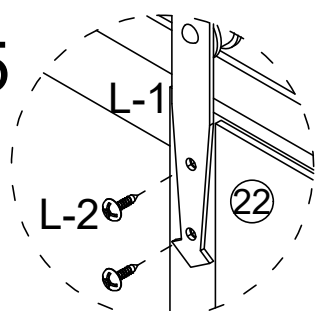








6

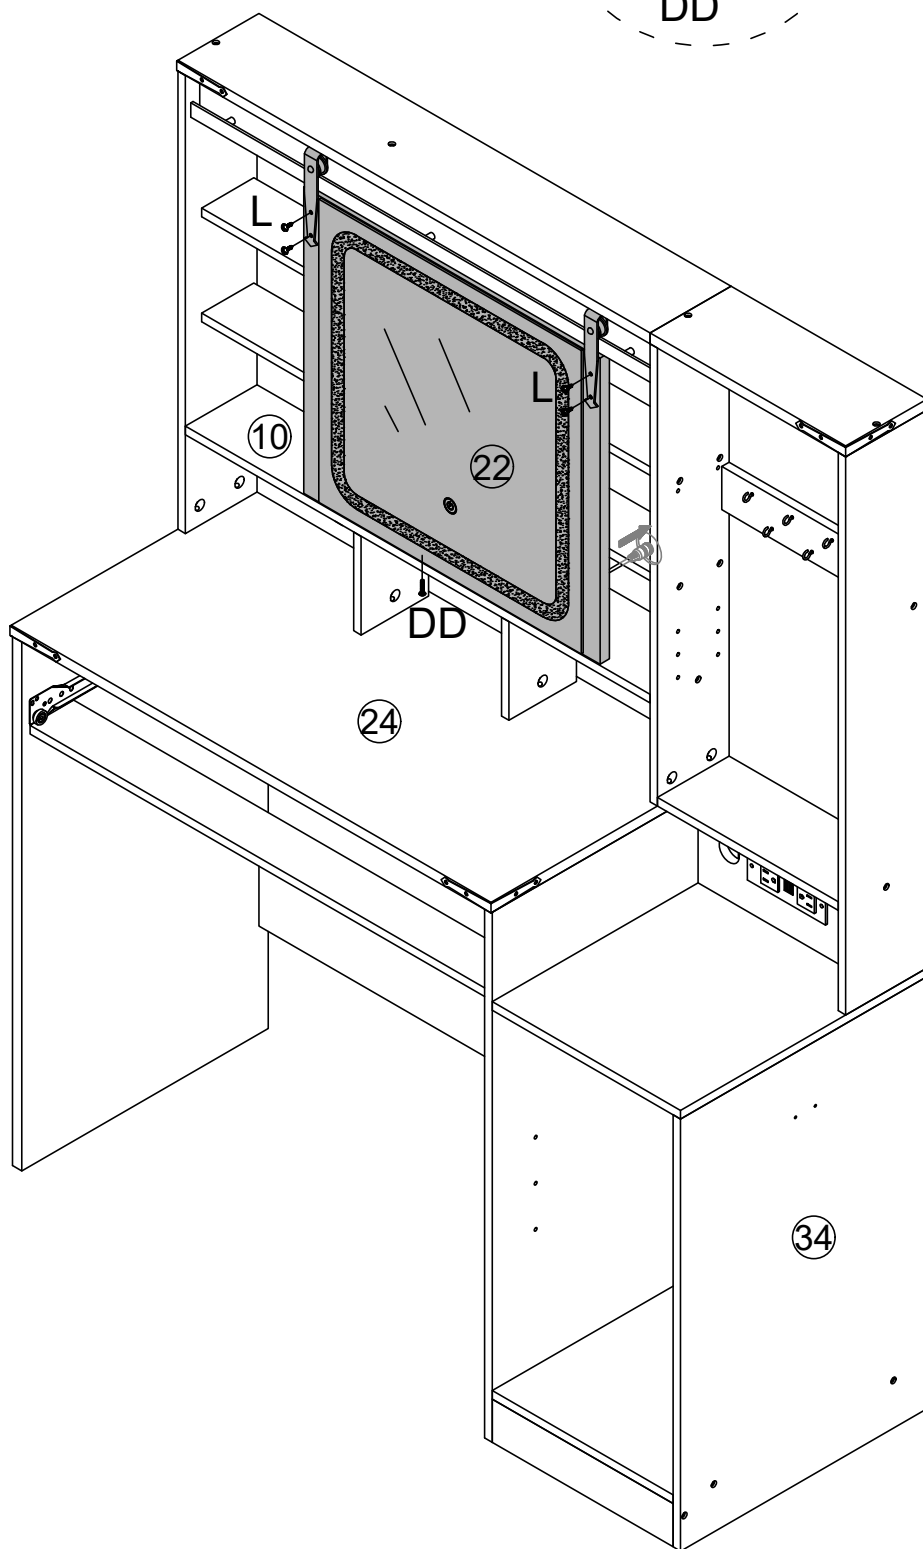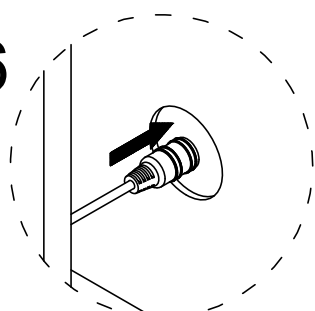

M x8

N x4



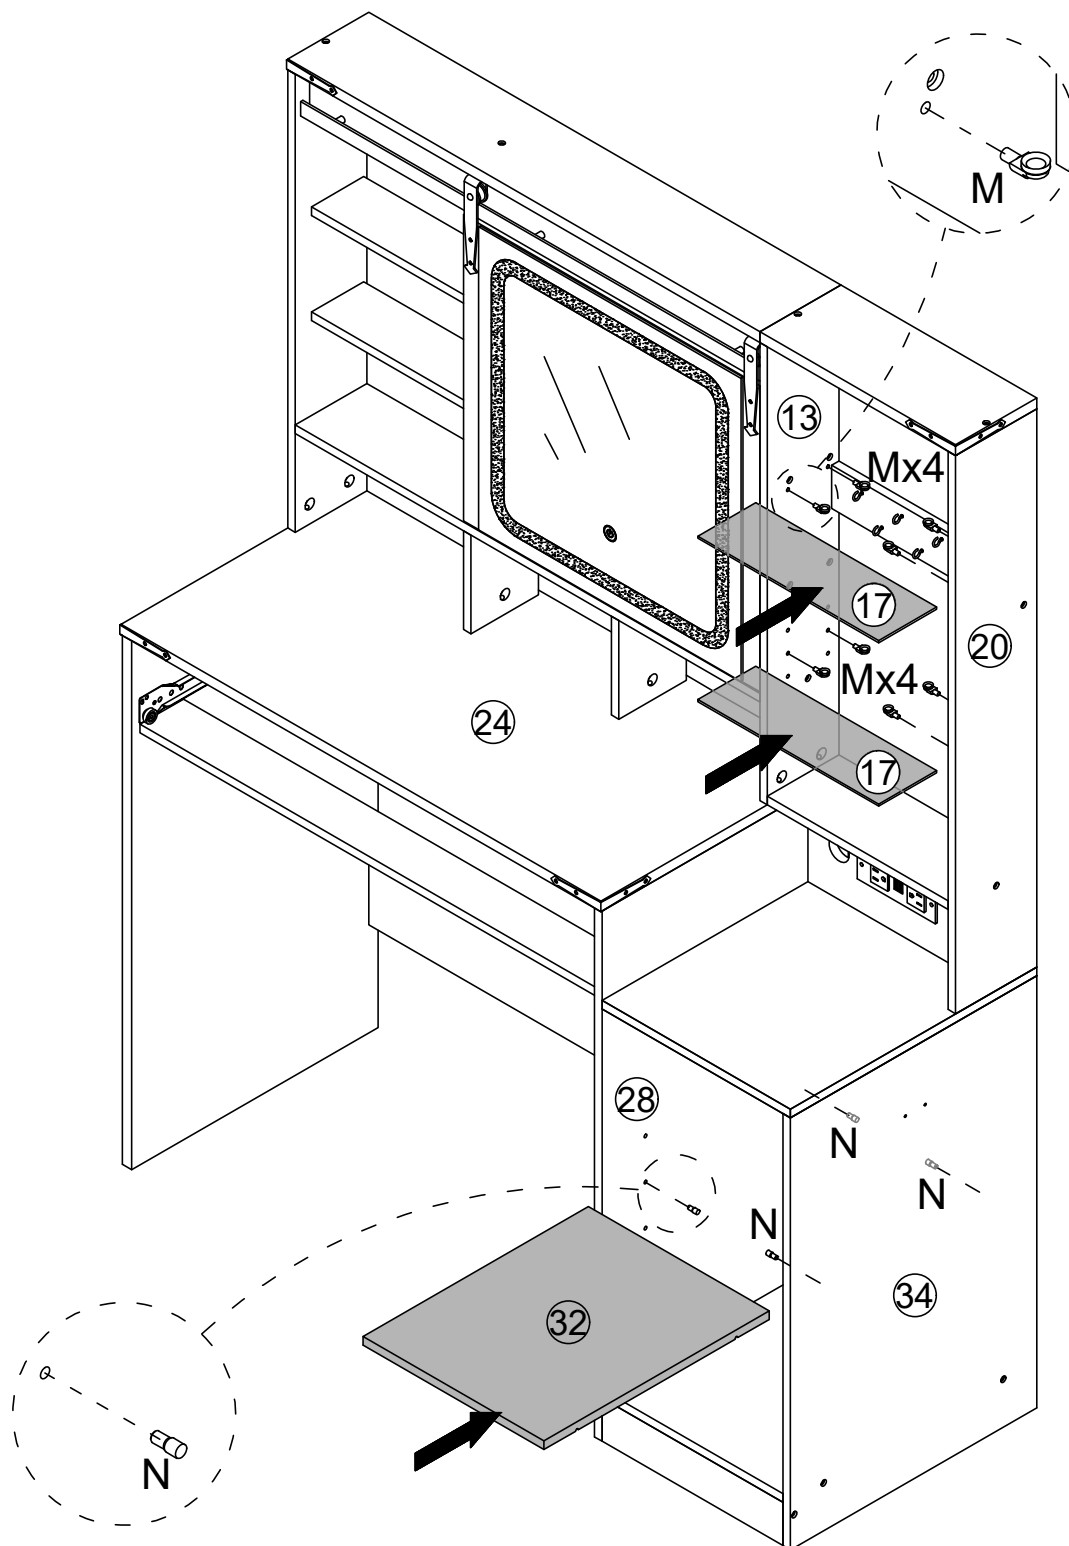


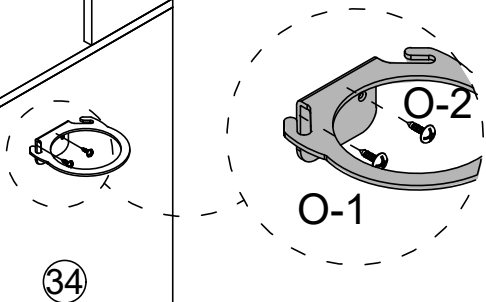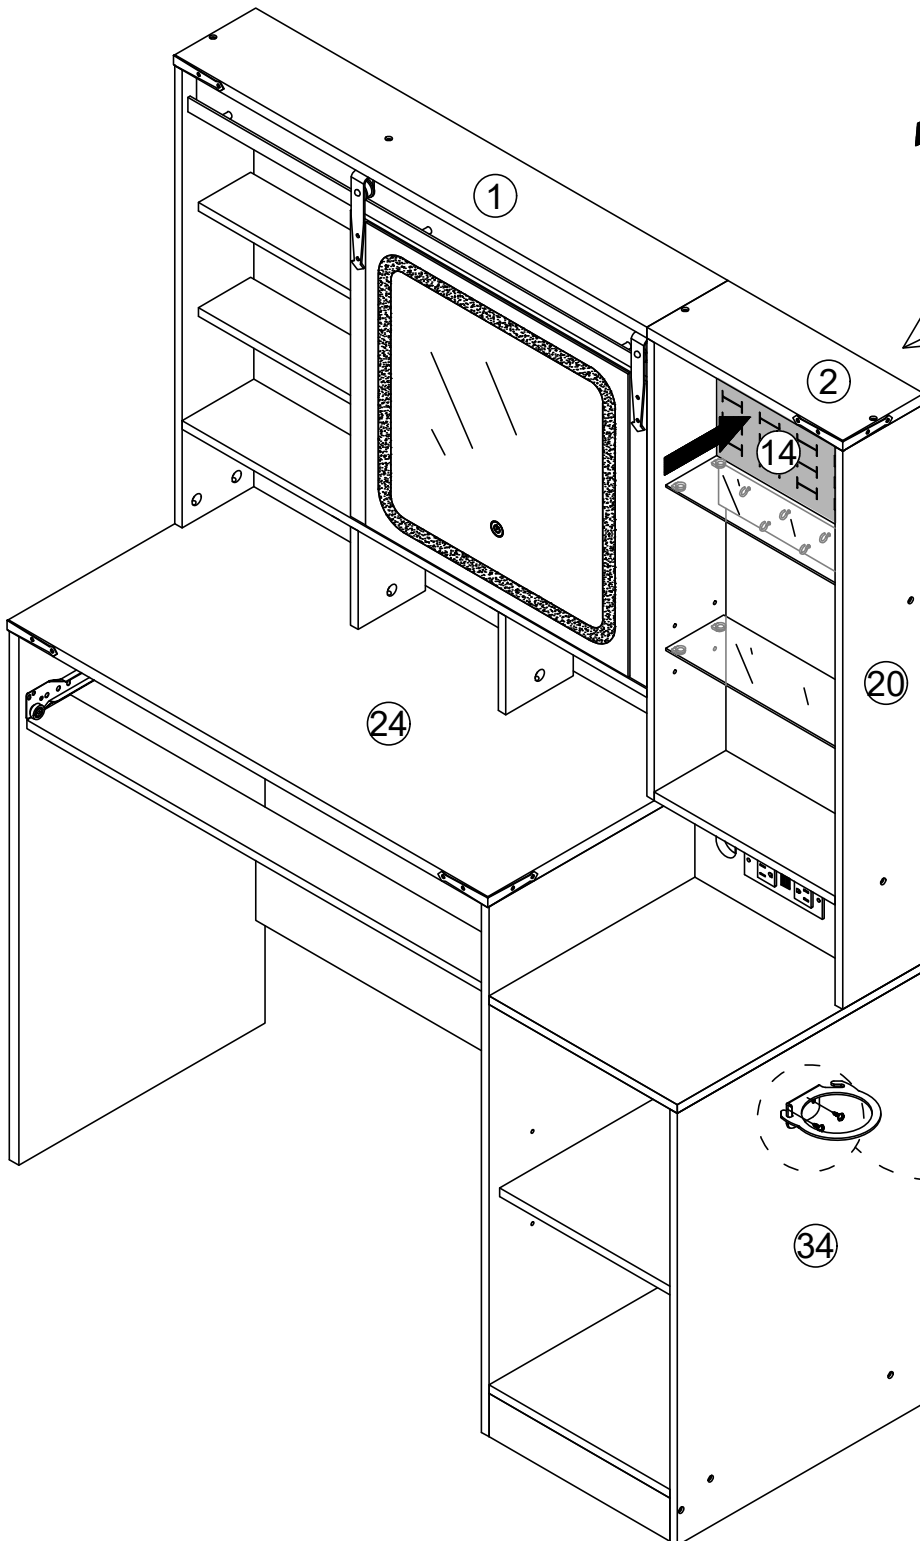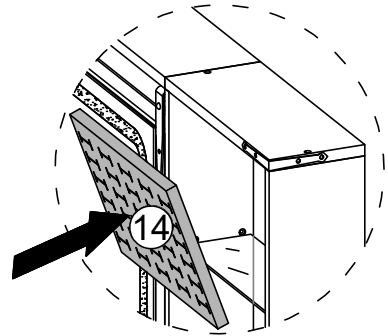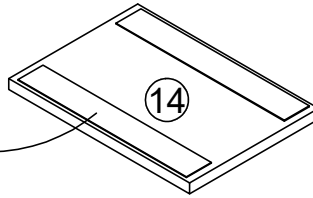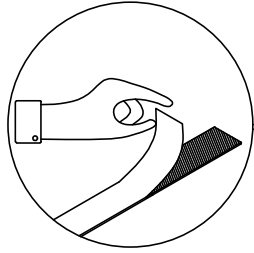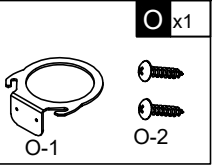

G x8

P x4

30

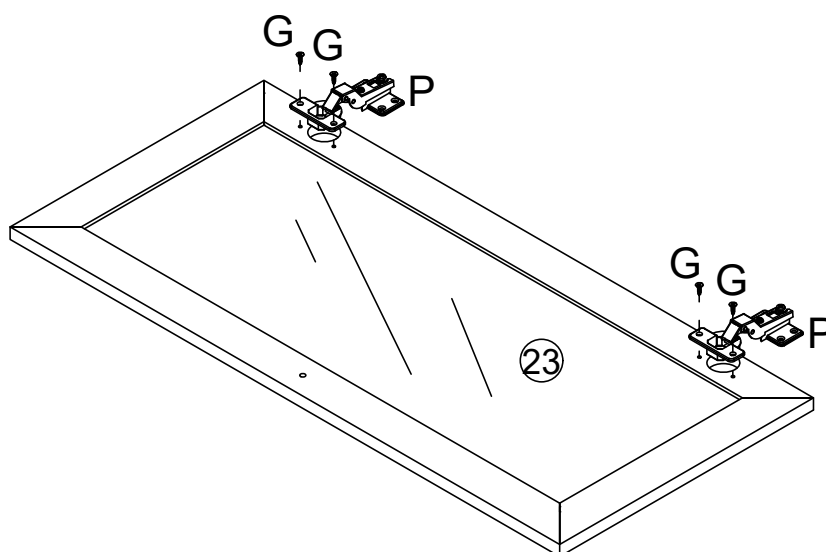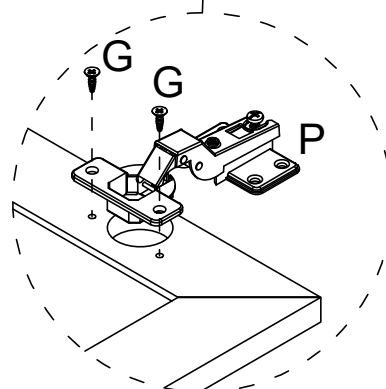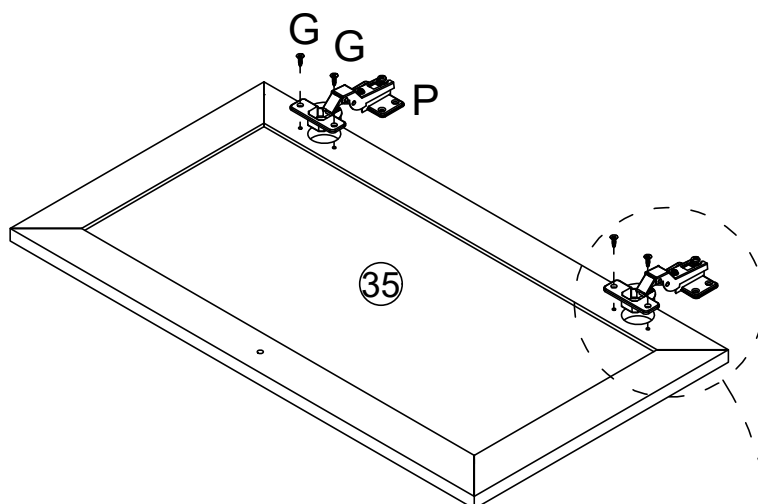



G x16



Q x2



BB x2

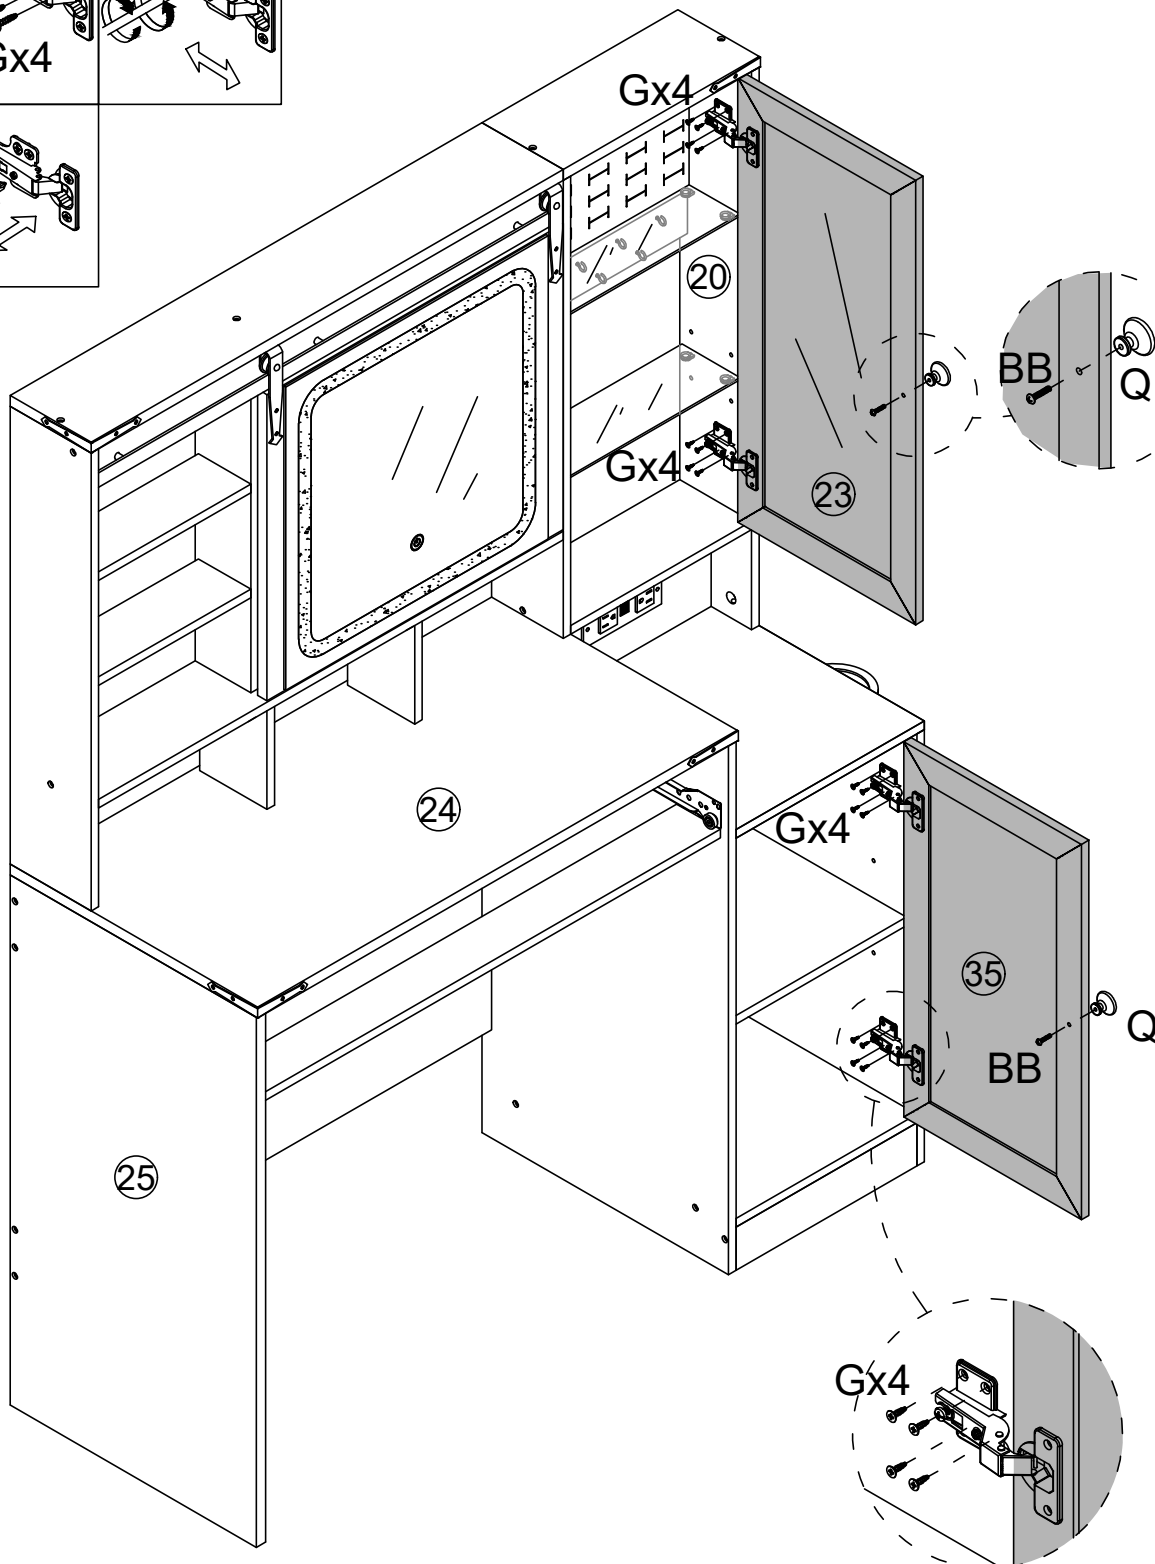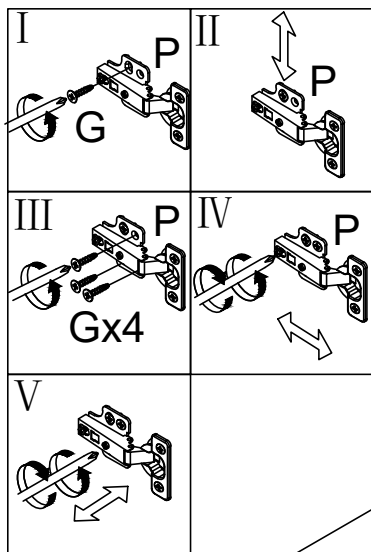



S x18





S-1




S-2

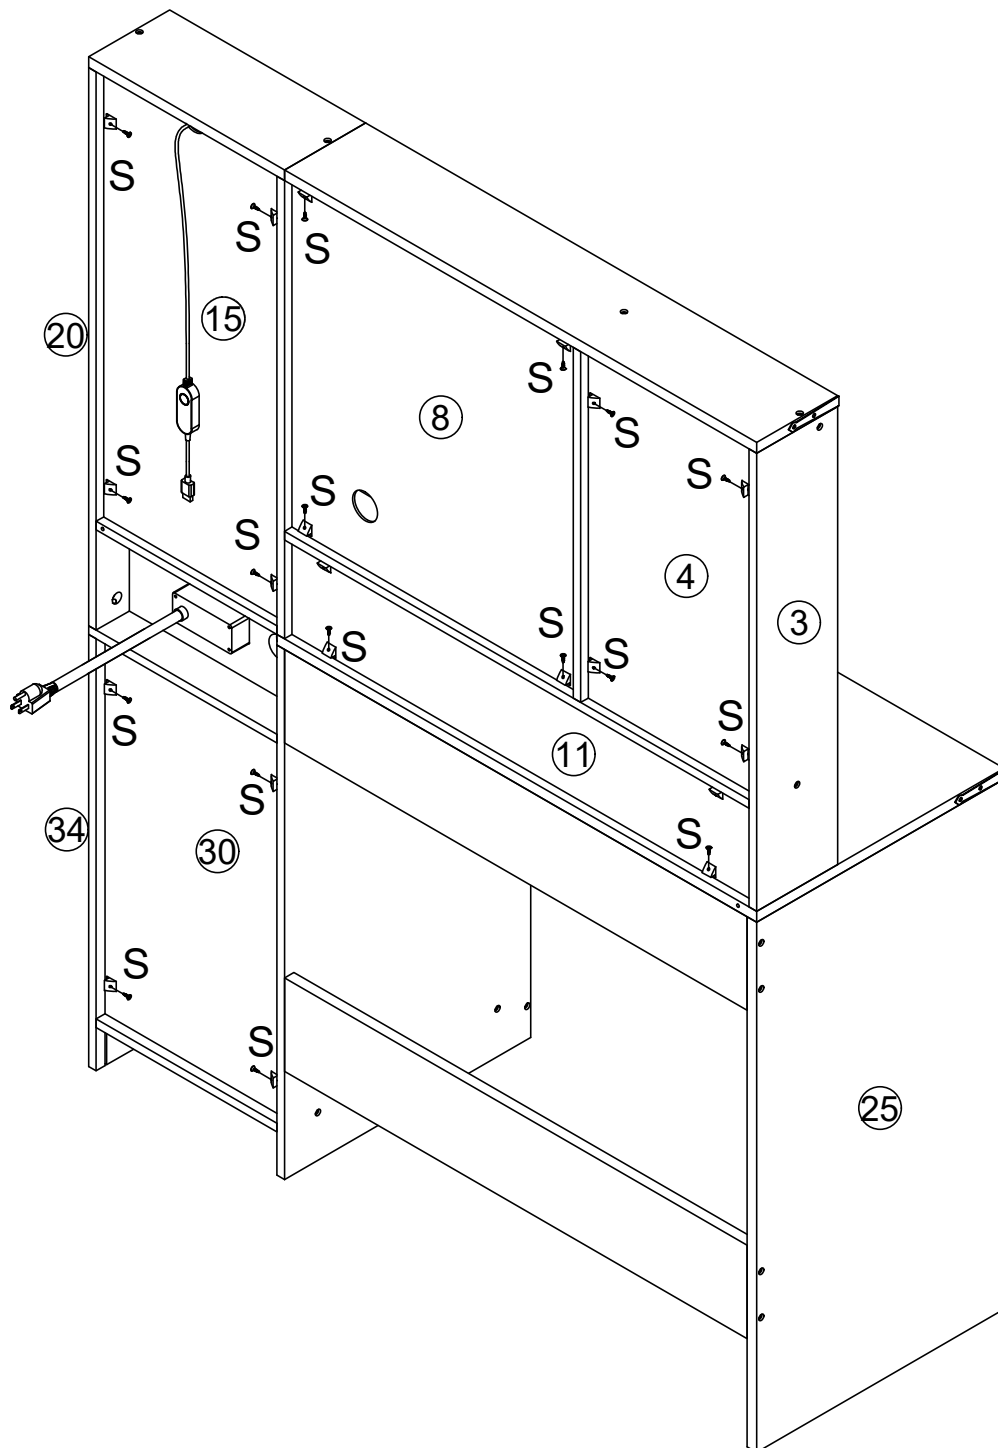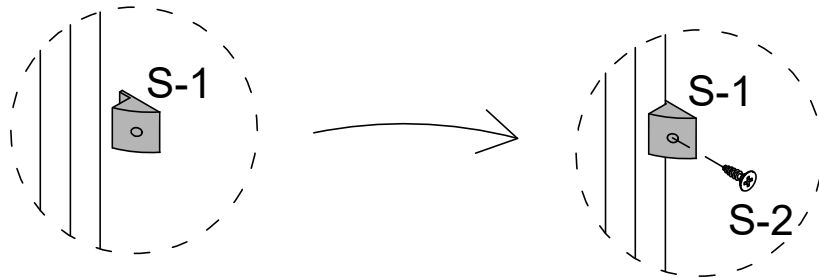

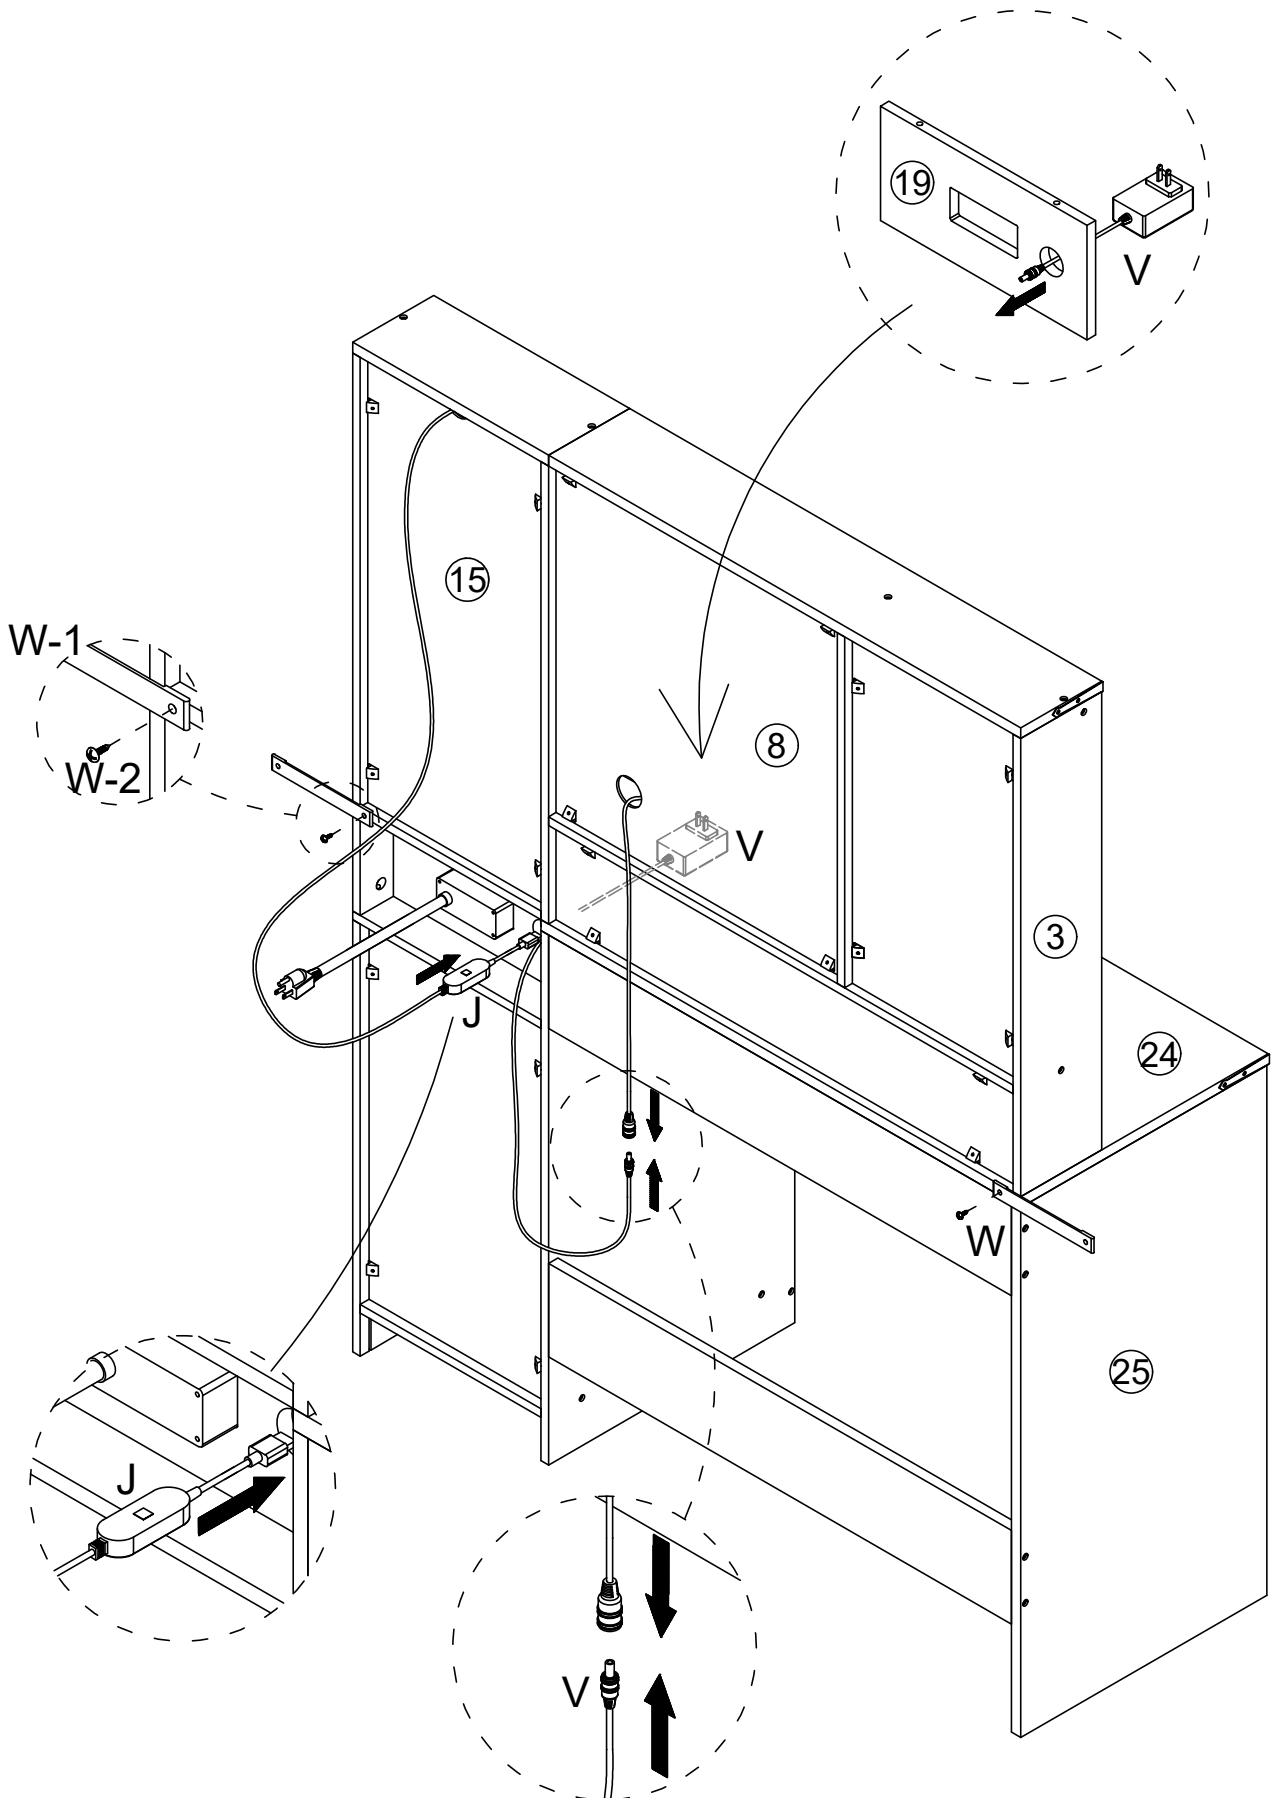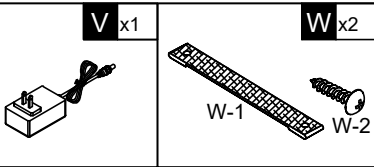


A x5



B x5




D x5



Q x2




CC x2

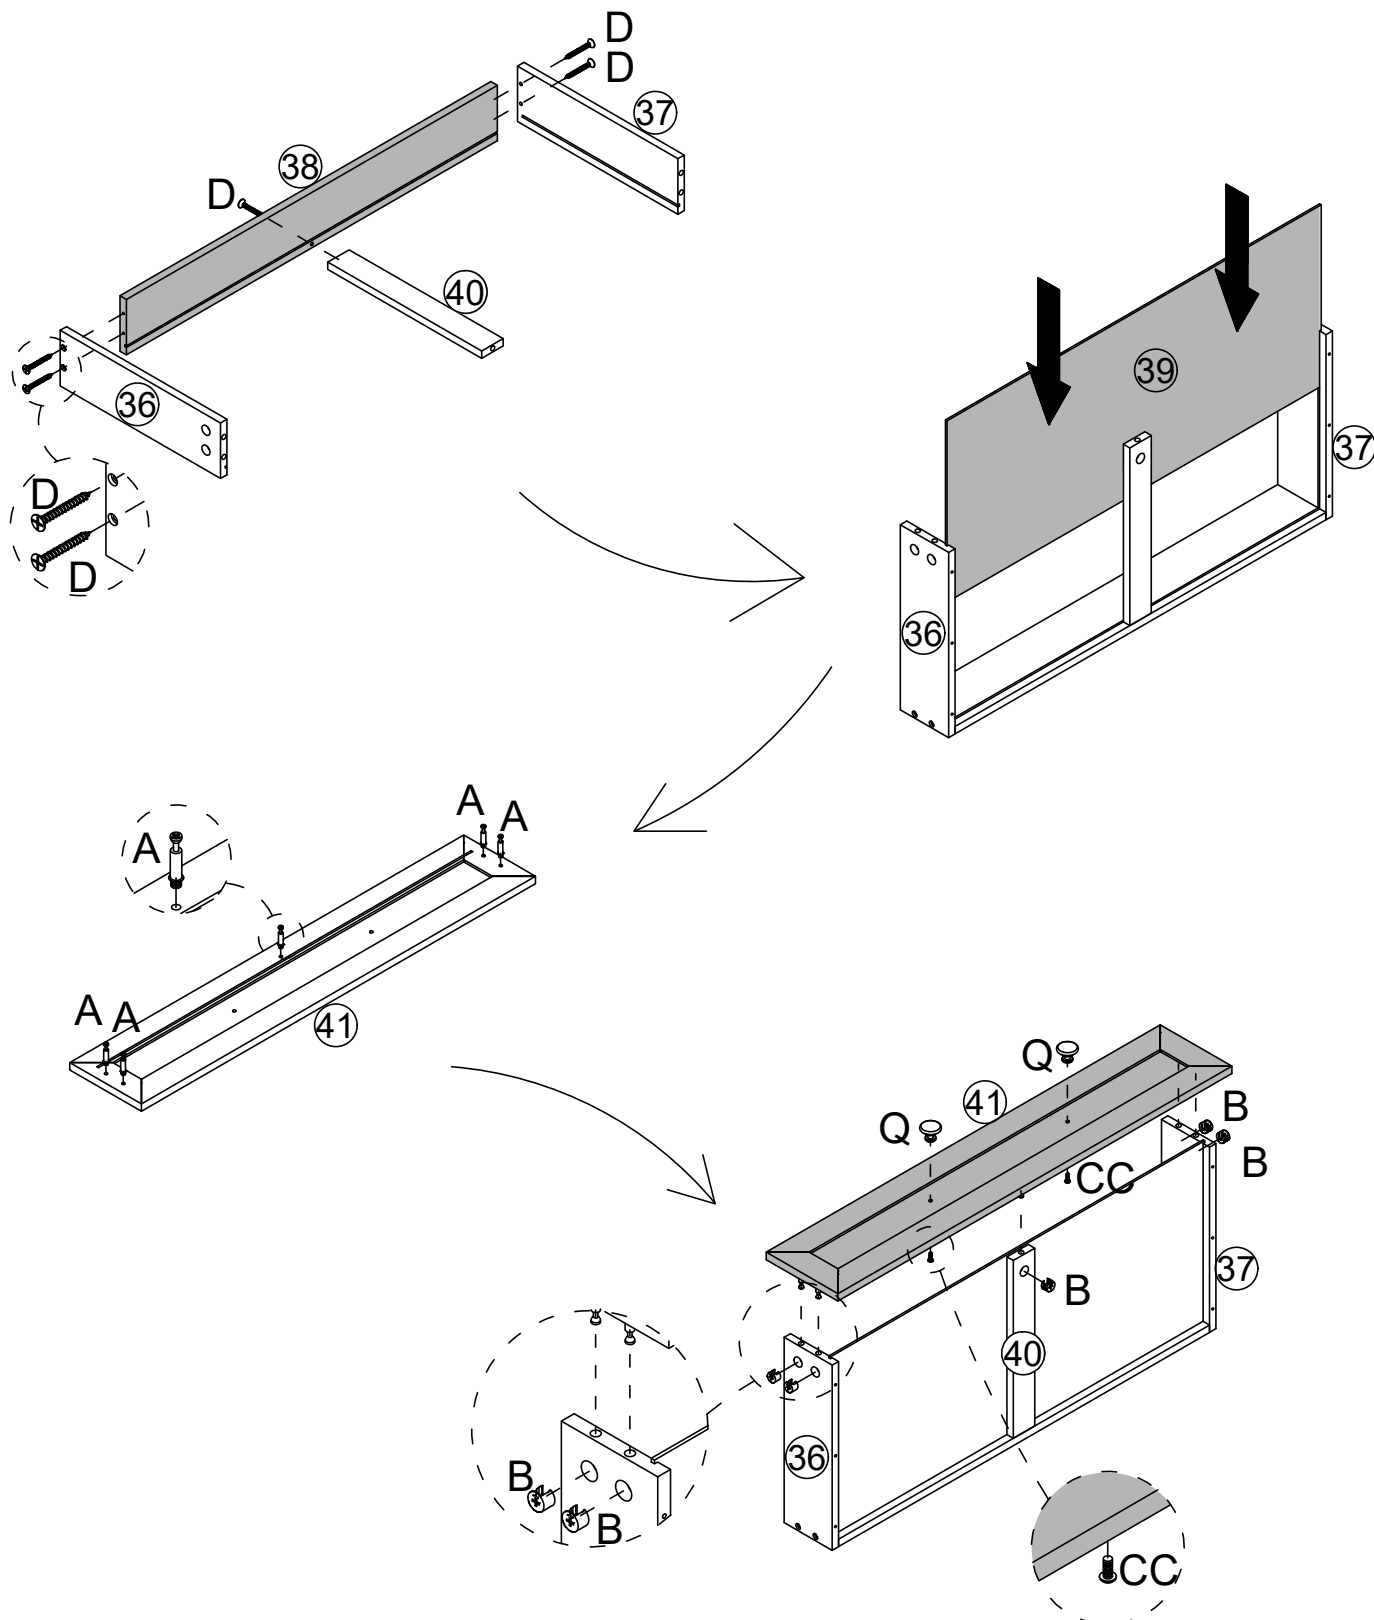





E x6




DL x1




DR x1

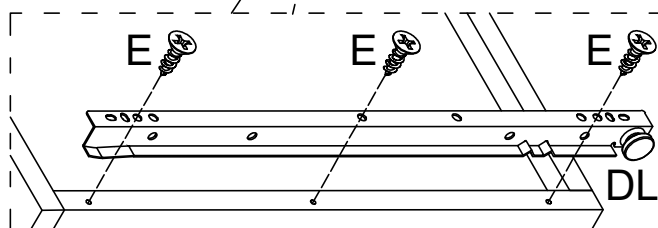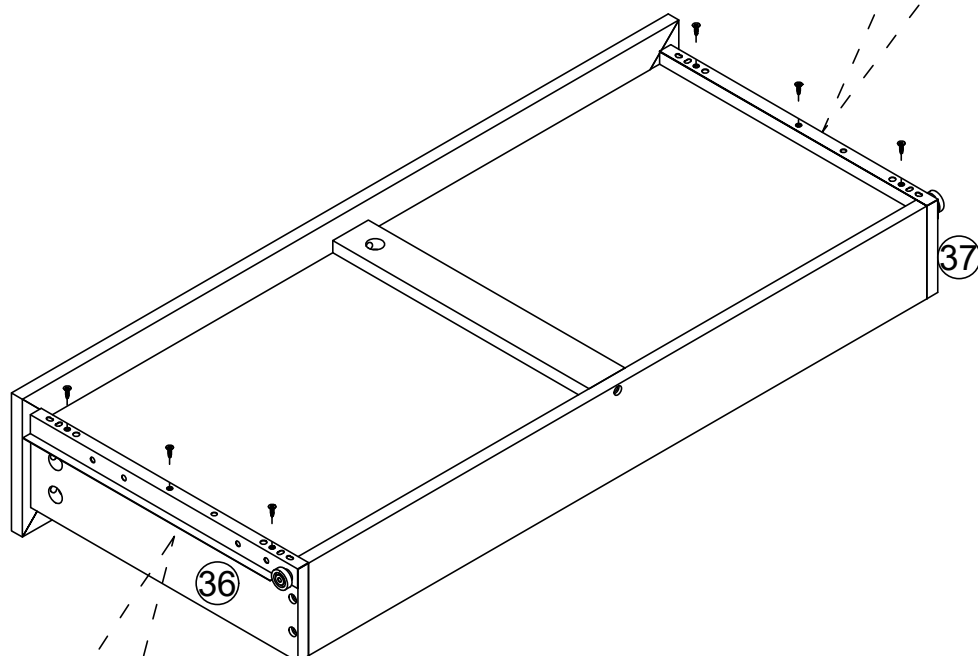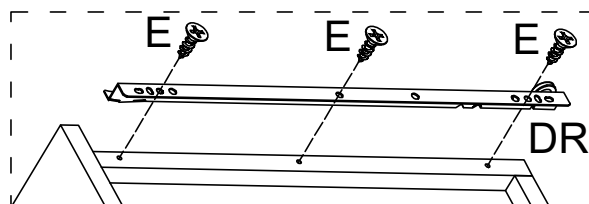



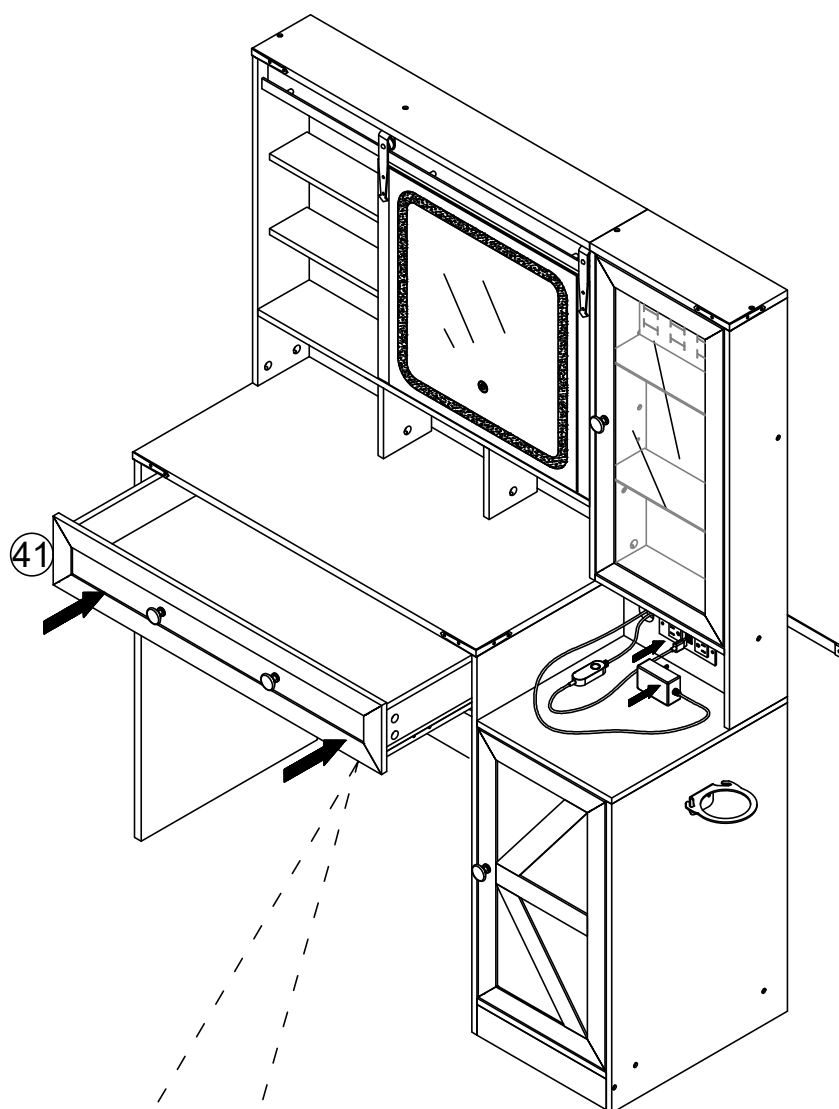


(1)

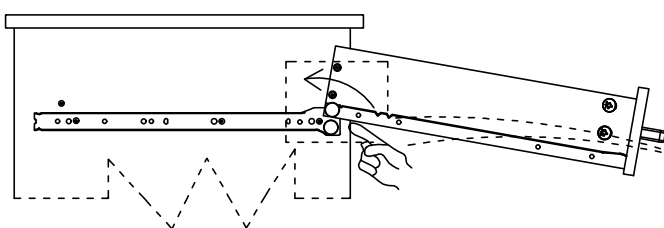


(2)

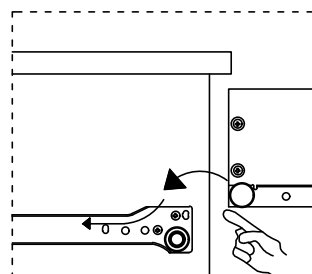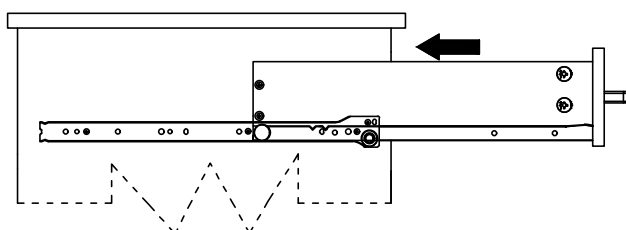

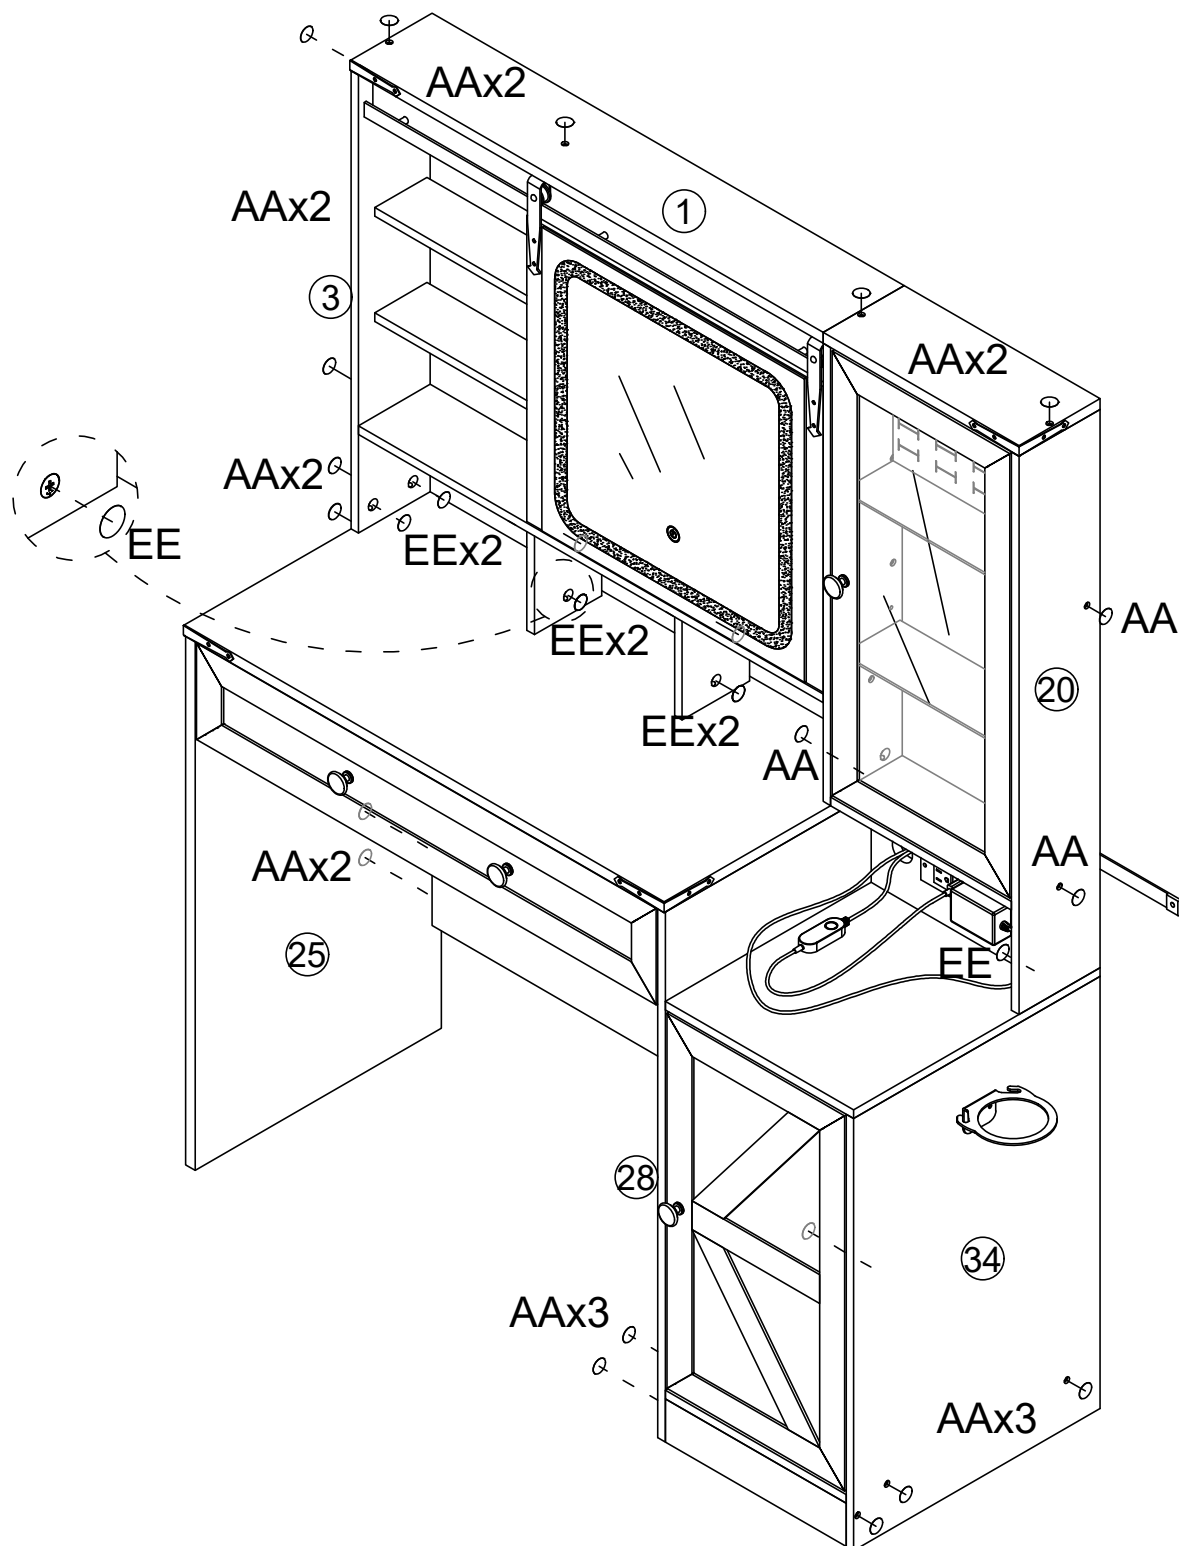

D x2




Z x2



Done

WALL

I x2

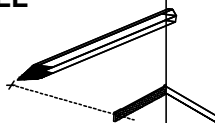

WALL



drilling hole
Ø6x30mm

II x2



WALL

III x2

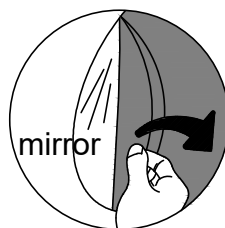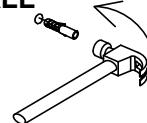

mirror

Please tear off the film on
the outside of the mirror.

WALL

D
Z

D
Z

Scan qr code to download APP
Bluetooth control

OR

Flip to the other side for
key control

