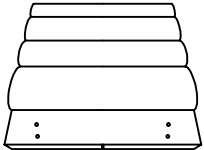
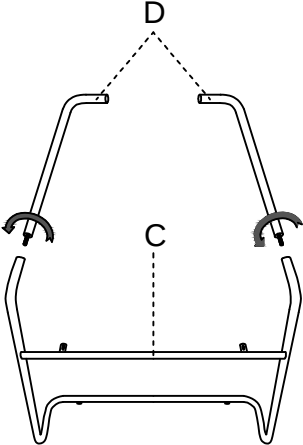
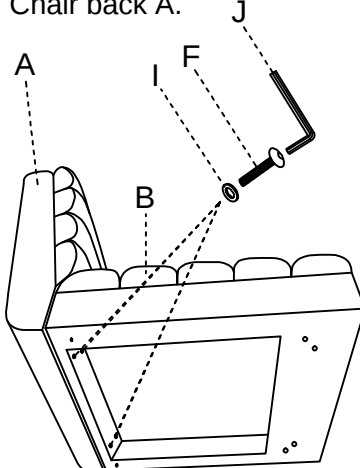
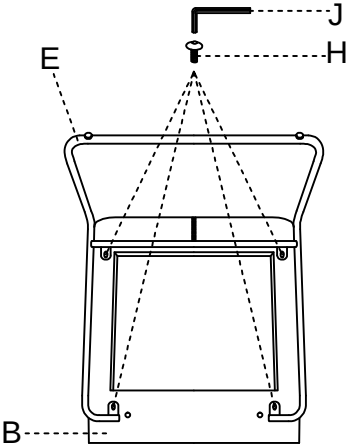
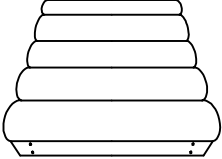


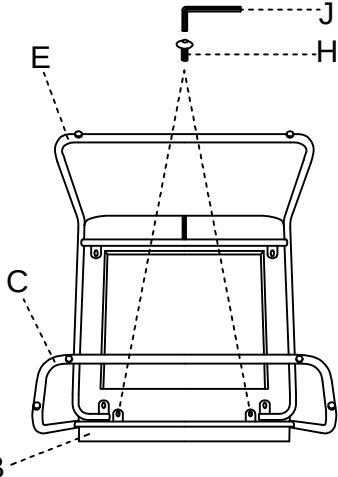
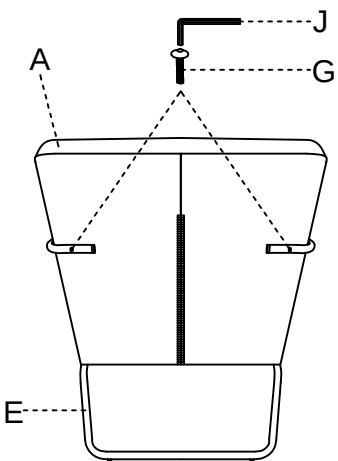
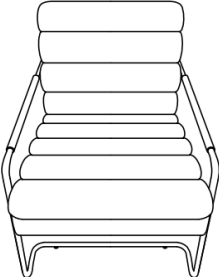

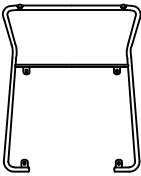



Assembly Instructions

A*1 	G*2 M6*40mm 	① Connect rear armrest D with front frame C, fasten to secure. 	② Place the Chair back A and Seat B on a clean padded surface. Use bolt F, flat washer I, allen key J to connect the Seat B and the Chair back A. 	③ Use bolt H, allen key J to connect the metal legs E to bottom of the Chair. 
B*1 	H*6 M6*18mm 			
C*1 	I*4 M6*16mm 	④ Use bolt H, allen key J to connect the metal legs C to bottom of the Chair. 	⑤ Use bolt G, allen key J to connect the metal handrail D and the Chair back A. 	⑥ Assembly completed.  For velvet: With help of adult partner, iron the fabric cover to stretch the wrinkles and dent mark with steam iron while necessary, please separate with a towel before ironing.. 
	J*1 			
D*2 	F*1 M6*50mm 			
E*1 	EXTRA PARTS			
F*4 M6*50mm 	G*1 M6*40mm 			
	EXTRA PARTS H*1 M6*18mm  EXTRA PARTS			