

BLACK PEDESTAL

ASSEMBLY INSTRUCTIONS



Parts Included:

- 2 Black Vinyl Covered **Side Pieces**
- 1 Black Vinyl Covered **Foot Piece**
- 1 Unfinished **Head Piece**
- ****3 Unfinished Center Support Pieces**
 - 2 Pieces with One Slit
 - 1 Piece with Two Slits
- Pedestal Hardware Kit & Assembly Instructions
- Hardware Included: 4 **Large Corner Brackets**, 28 **Small Screws** (#10 x 1/2"), and 1 Phillips Drill Bit


You will need a **Power Drill** or **Phillips Screwdriver** for this assembly.

“SOF-FRAME” WATERBED PEDESTAL MODEL IS SLIGHTLY DIFFERENT. YOU WILL HAVE A TOTAL OF 6 UNFINISHED **CENTER SUPPORT PIECES**, INSTEAD OF 3. A TOTAL OF 4 PIECES WITH ONE SLIT AND 2 PIECES WITH TWO SLITS.

Please Read the Instructions in Full Before Starting.

Assembly Instructions:

1. Lay your pedestal frame pieces flat on the ground in the arrangement in which they will be assembled:

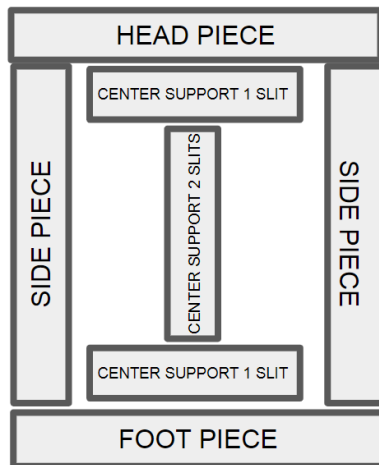


Your 2 long, black vinyl pieces are your **Side Pieces**. The short, black vinyl piece will go at the **Foot** of the bed. The short, unfinished piece will go at the **Head** of the bed. The 3 **Center Support Pieces** will go in the center of the pedestal frame and can be identified by the 'slits' in the wood pieces. You should have a total of 3 unfinished **Center Support Pieces**: one **Center Support Piece** has two slits cut into it and two **Center Support Pieces** have one slit cut into each.

2. Stand one **Side Piece** up on its side and ensure the black vinyl side is facing the outside. Stand the **Head Piece** on its side and line it up with the top INSIDE edge of the **Side Piece** that is standing up. Screw the **Large Bracket** into the inside corner of these 2 pieces using the **Short Screws** to secure them together.



3. Stand the other **Side Piece** up on its side and ensure the black vinyl side is facing the outside. Line up the **Side Piece** to the other end of the **Head Piece** with the INSIDE edge of the side piece. Screw the **Large Bracket** into the inside corner of these 2 pieces using the **Short Screws** to secure them together.

**THE SHORT HEAD & FOOT PIECES SHOULD BE
INSIDE THE TWO SIDE PIECES:**

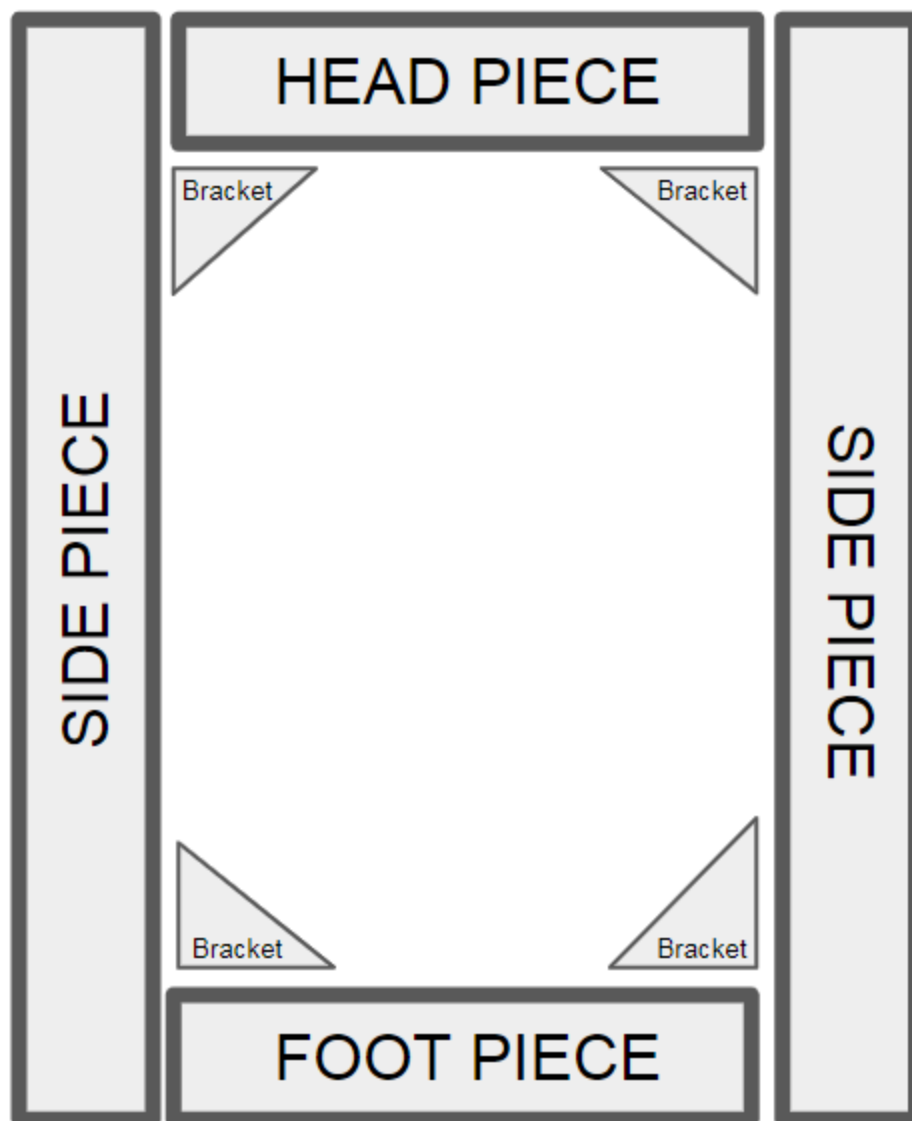


4. Stand the **Foot Piece** up on its side and place at the bottom of the two **Side Pieces**, ensuring the **Side Pieces** are on the OUTSIDE of the **Foot Piece**. The black vinyl should be facing the outside. Screw the **Foot Piece** to both **Side Pieces** using the **Large Corner Brackets** and the **Short Screws** to secure them together.



5. Now that your Pedestal Frame is built, slip together your **Center Support Pieces** in the middle of the Pedestal Frame. The **Center Support Piece** with TWO Slits in it should be placed long ways with the slits facing UP in the center of the frame. The **Center Support Pieces** with ONE Slit in it should be placed long ways with slits facing DOWN over the piece with two slits. The slits should lock each piece in place. **FOR SOF-FRAME" MODEL ONLY, PLEASE REFER TO THE NEXT PAGE FOR A REFERENCE IMAGE OF THE CENTER SUPPORT PIECES LAYOUT**



***FOR SOF-FRAME” WATERBED
MODEL ONLY,PLEASE ARRANGE THE
CENTER SUPPORT PIECESAS SHOWN IN
THE REFERENCE IMAGE BELOW.**

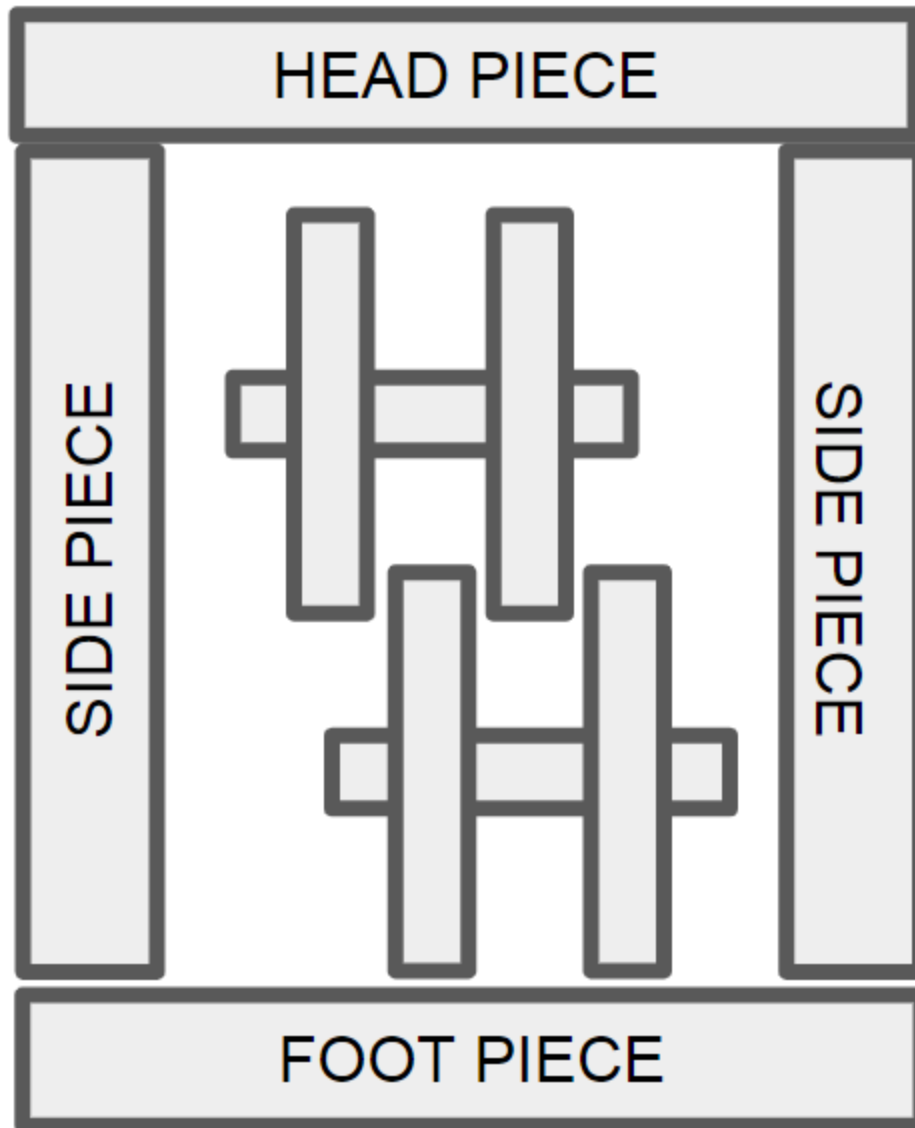

6. Your **Pedestal** is now fully assembled.

7. *If your purchase included **Wood Decking***, lay down your **Wood Decking** pieces, one at a time, on top of the Pedestal. There will be an overhang on all sides.



Thank you for your purchase!

**If you have any questions regarding your
purchase, please contact us directly
(not your retailer)**