

ASSEMBLY INSTRUCTIONS


13400

PARTS:

(1) Top Piece



(1) Shelf

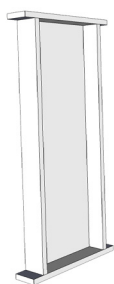

(4) Legs



(1) Vise



Hardware:


(2) Allen Wrenches



(12) Hex Screws




(12) Cap Nuts

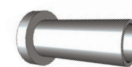


Step 1:

Position **top piece** as shown.

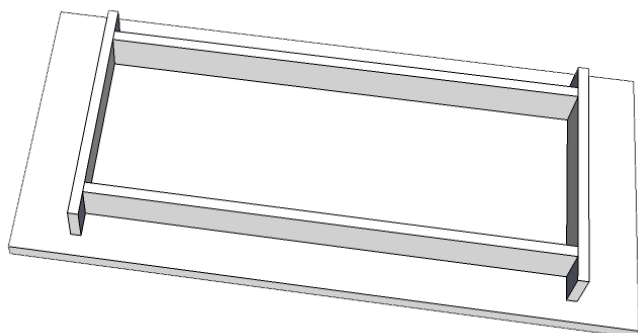


Step 2:

Attach **legs** with **hex screws** and insert **cap nuts**. DO NOT OVER TIGHTEN.

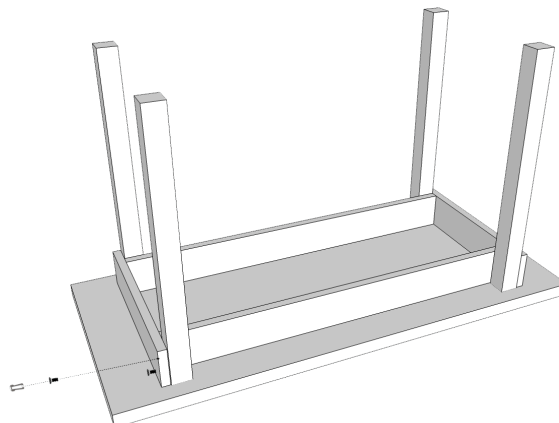

Step 3:

Position **shelf** as shown. Attach with **hex screws** and insert **cap nuts**.

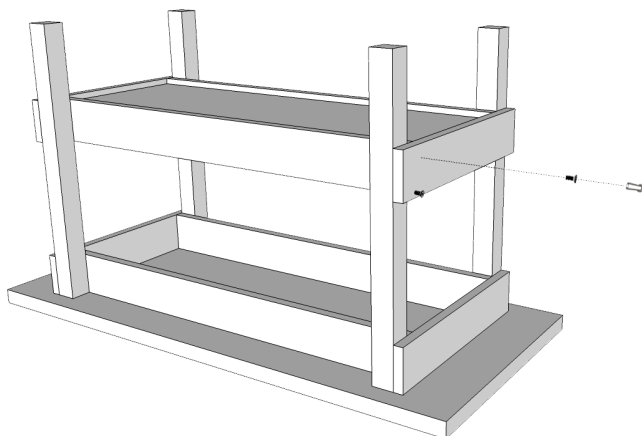

Step 4:

Tighten all **screws** securely and place in upright position. Attach **vise** and tighten securely.

