

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Sets often ship in multiple boxes and may arrive a day or two apart.

QUEEN BED

N758P518029 - N758P518030



WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.
NEVER suspend strings over bed.
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.
ALWAYS follow assembly instructions.



WARNING!

Not intended for children under the age of six. **INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS.** Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.


The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

Note: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.

The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.






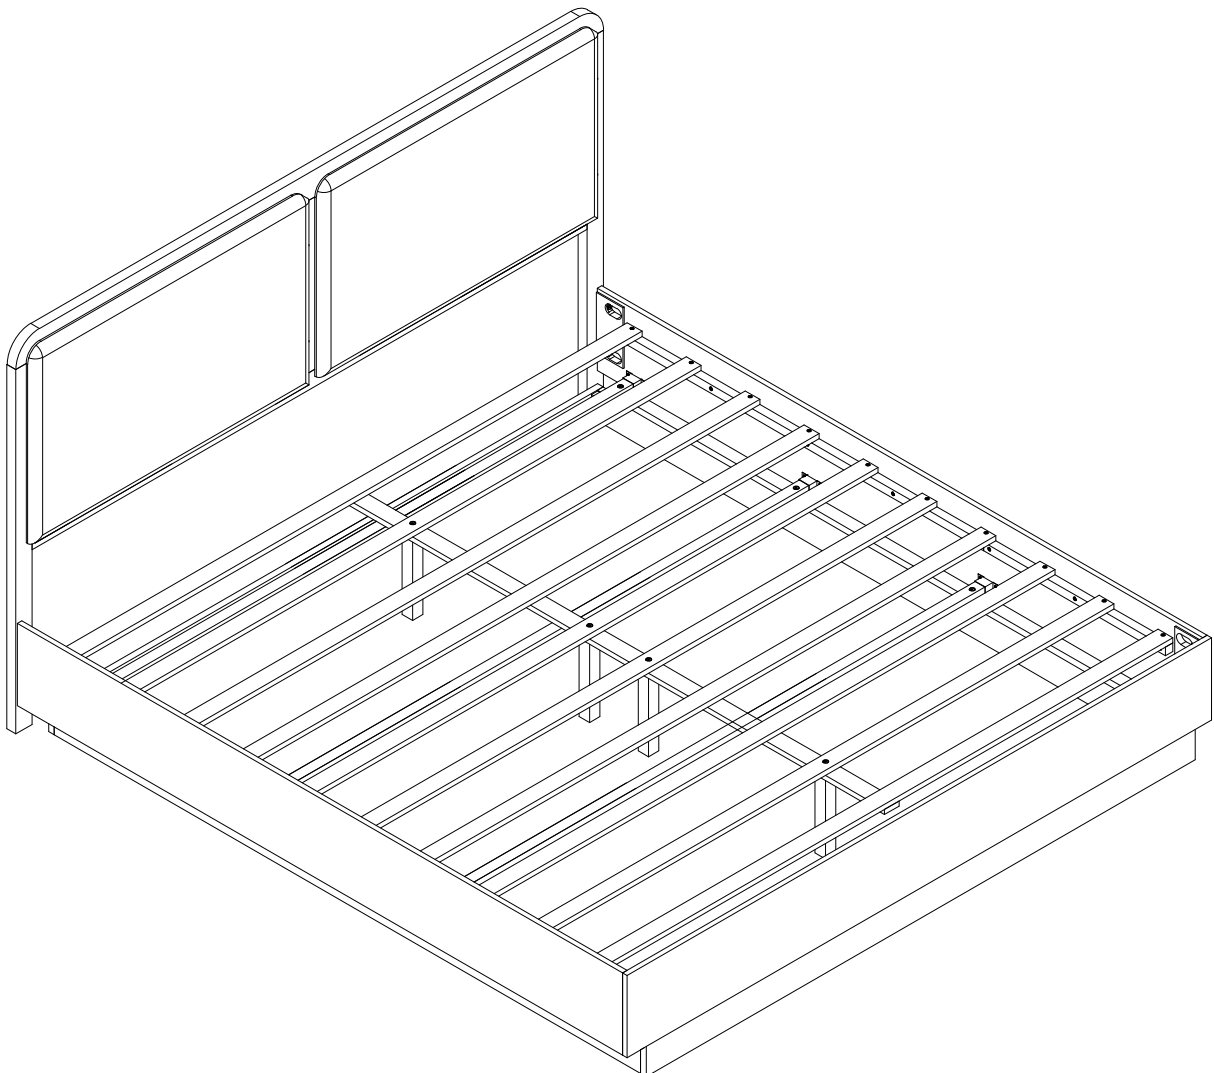


PARTS LIST

N758P518029









⑤	Upholstered Headboard Panel 	2PCS	⑪	Slats 2 	4PCS
⑩	Slats 1 	6PCS			

N758P518030


①	Headboard Side Post (Right) 	1PC	⑨	Flap Slats Support 	1PC
②	Headboard Side Post (Left) 	1PC	⑫	Footboard 	1PC
③	Headboard Top Rail 	1PC	⑬	Base Frame Crossbar (Left) 	1PC
④	Headboard Center Support 	1PC	⑭	Base Frame Front And Rear Crossbar 	2PCS
⑥	Headboard Bottom Rail 	1PC	⑮	Base Frame Support Bar 	4PCS
⑦	Middle Leg 	4PCS	⑯	Base Frame Crossbar (Right) 	1PC
⑧	Side Rails 	2PCS			

HARDWARE LIST

N758P518030

Ⓐ	Allen Wrench 	2PCS	Ⓖ	Wooden Dowel Ø 8 * 30mm 	16PCS +1
Ⓑ	Bolts 1/4*30mm 	8PCS +1	Ⓕ	Bolts 1/4*85mm / 1/4*Ø9.5*12mm  	1PC +1
Ⓒ	Bolts 1/4*75mm / 1/4*Ø9.5*12mm  	8PCS +1	Ⓖ	Bolts 1/4*35mm 	10PCS +1
Ⓓ	U - Brackets 	8PCS +1	Ⓖ	Bolts 1/4*25mm 	10PCS +1
Ⓔ	Screw 3.5*15mm 	48PCS +2	Ⓖ	Bolts 1/4*45mm 	4PCS +1
Ⓕ	Bolts 1/4*45mm / R35mm 	13PCS +1	Ⓖ	Screw 4*30 mm 	20PCS +1
			ASSEMBLY TOOLS REQUIRED (NOT INCLUDED) 		

PRODUCT DETAILS

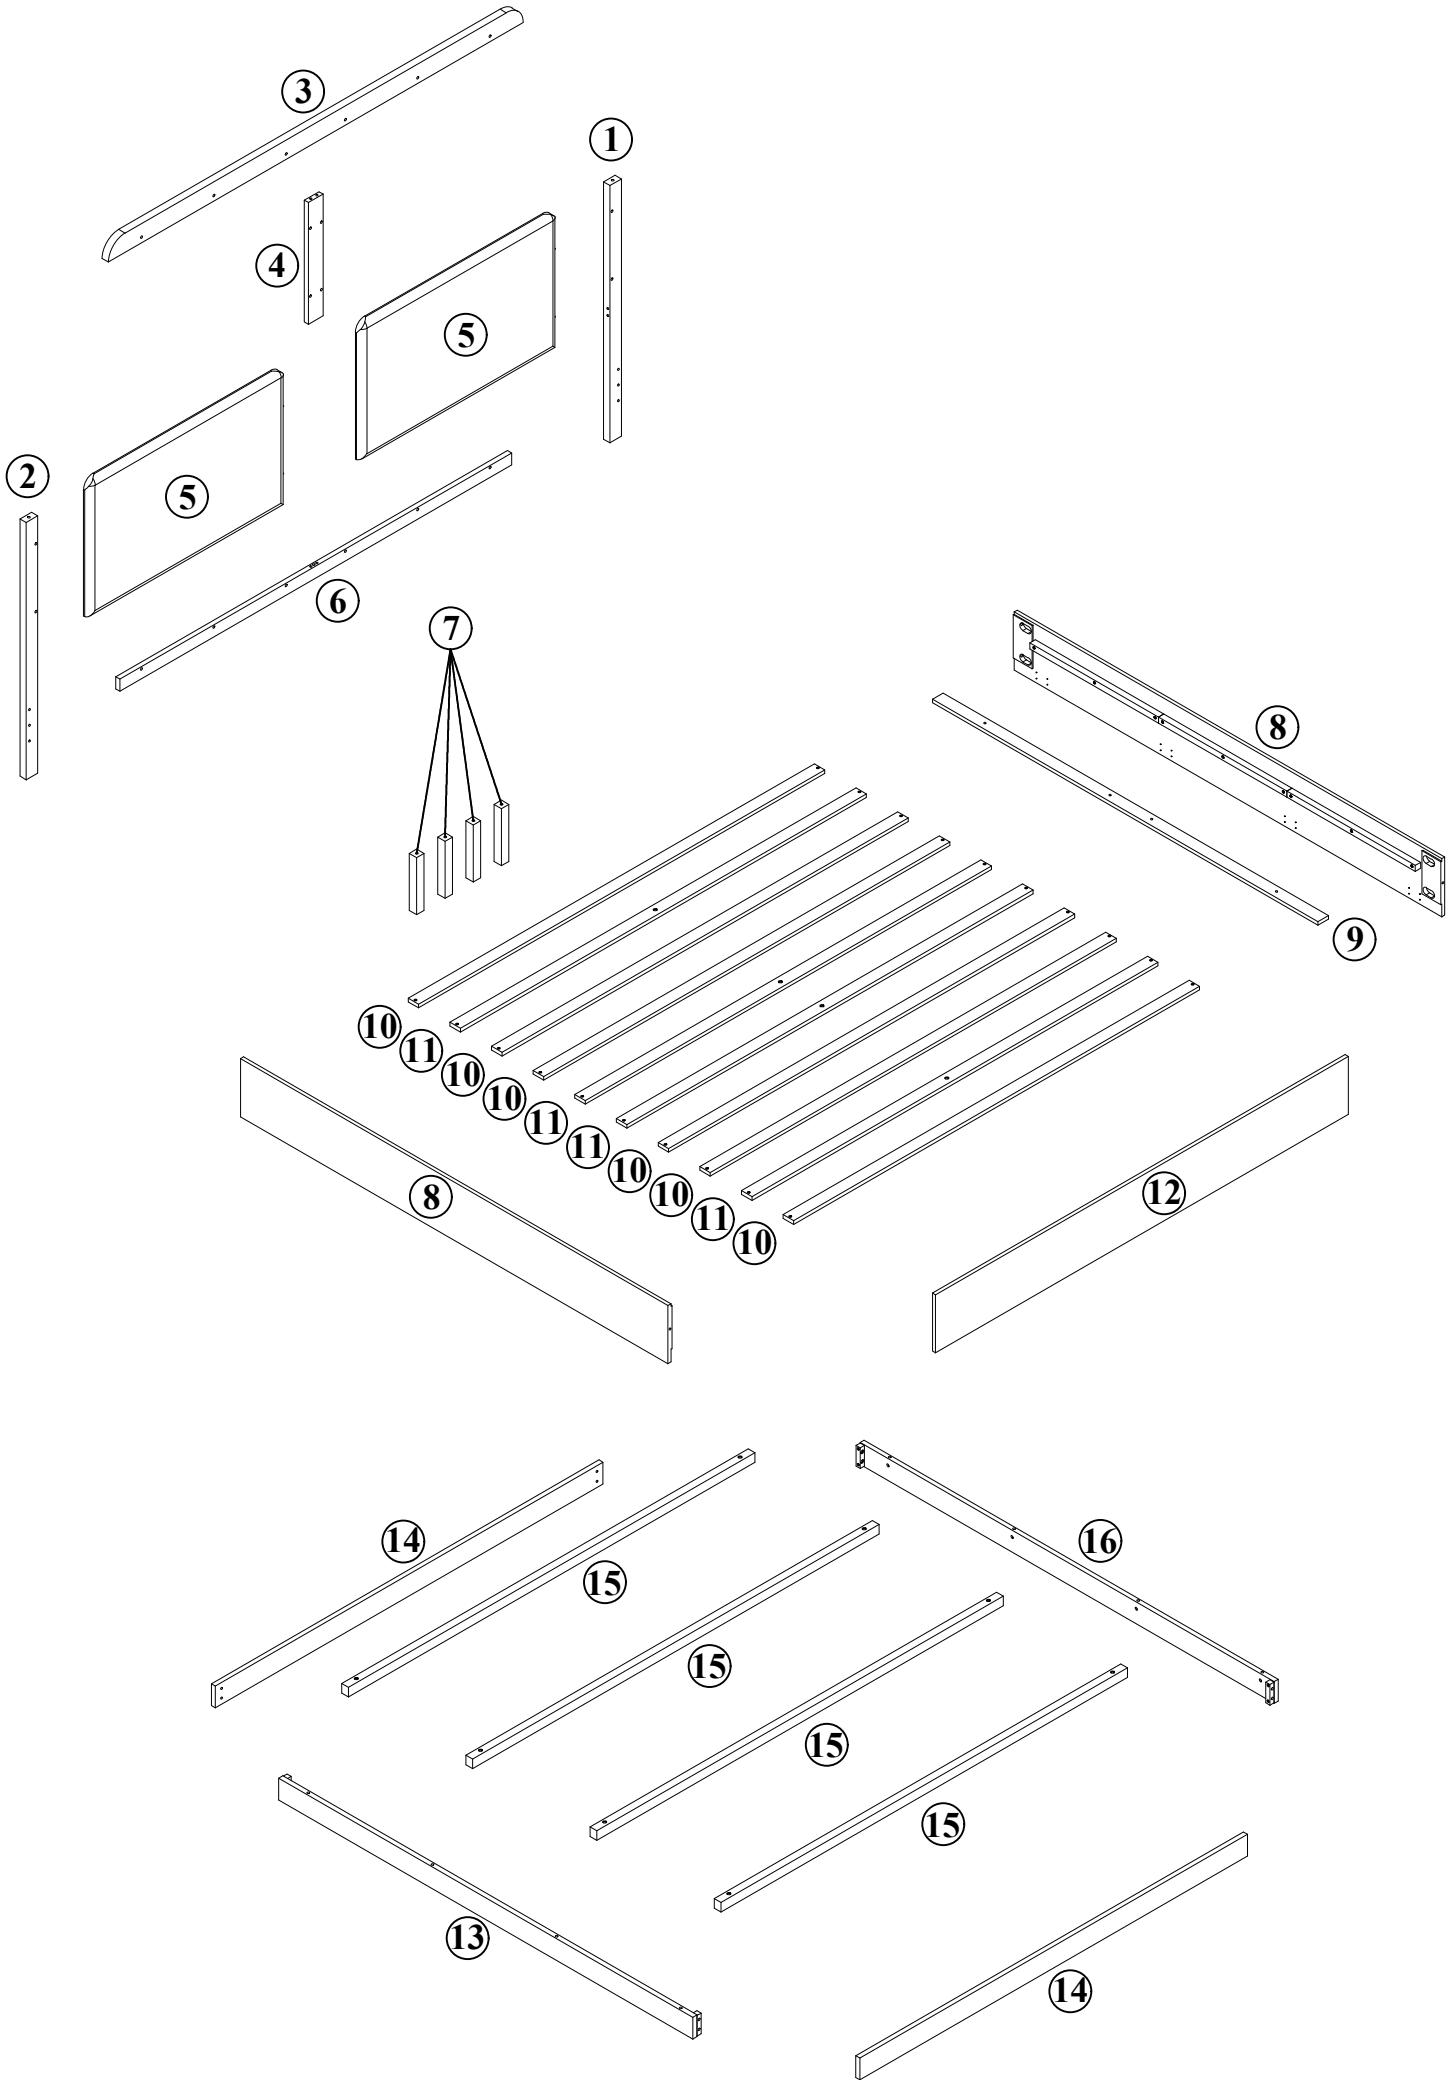


ASSEMBLY PREPARATION


① 1pc



⑨ 1pc



② 1pc



⑩ 6pcs




③ 1pc



⑪ 4pcs




④ 1pc



⑫ 1pc



⑤ 2pcs



⑬ 1pc




⑥ 1pc




⑭ 2pcs



⑦ 4pcs




⑮ 4pcs




⑧ 2pcs



⑯ 1pc



A	Allen Wrench 	2PCS
B	Bolts 1/4*30mm 	8PCS +1
C	Bolts 1/4*75mm / 1/4*Ø9.5*12mm 	8PCS +1
D	U - Brackets 	8PCS +1
E	Screw 3.5*15mm 	48PCS +2
F	Bolts 1/4*45mm / R35mm 	13PCS +1
G	Wooden Dowel Ø 8 * 30mm 	16PCS +1
H	Bolts 1/4*85mm / 1/4*Ø9.5*12mm 	1PC +1
I	Bolts 1/4*35mm 	10PCS +1
J	Bolts 1/4*25mm 	10PCS +1
K	Bolts 1/4*45mm 	4PCS +1
L	Screw 4*30 mm 	20PCS +1



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-

ASSEMBLY STEPS

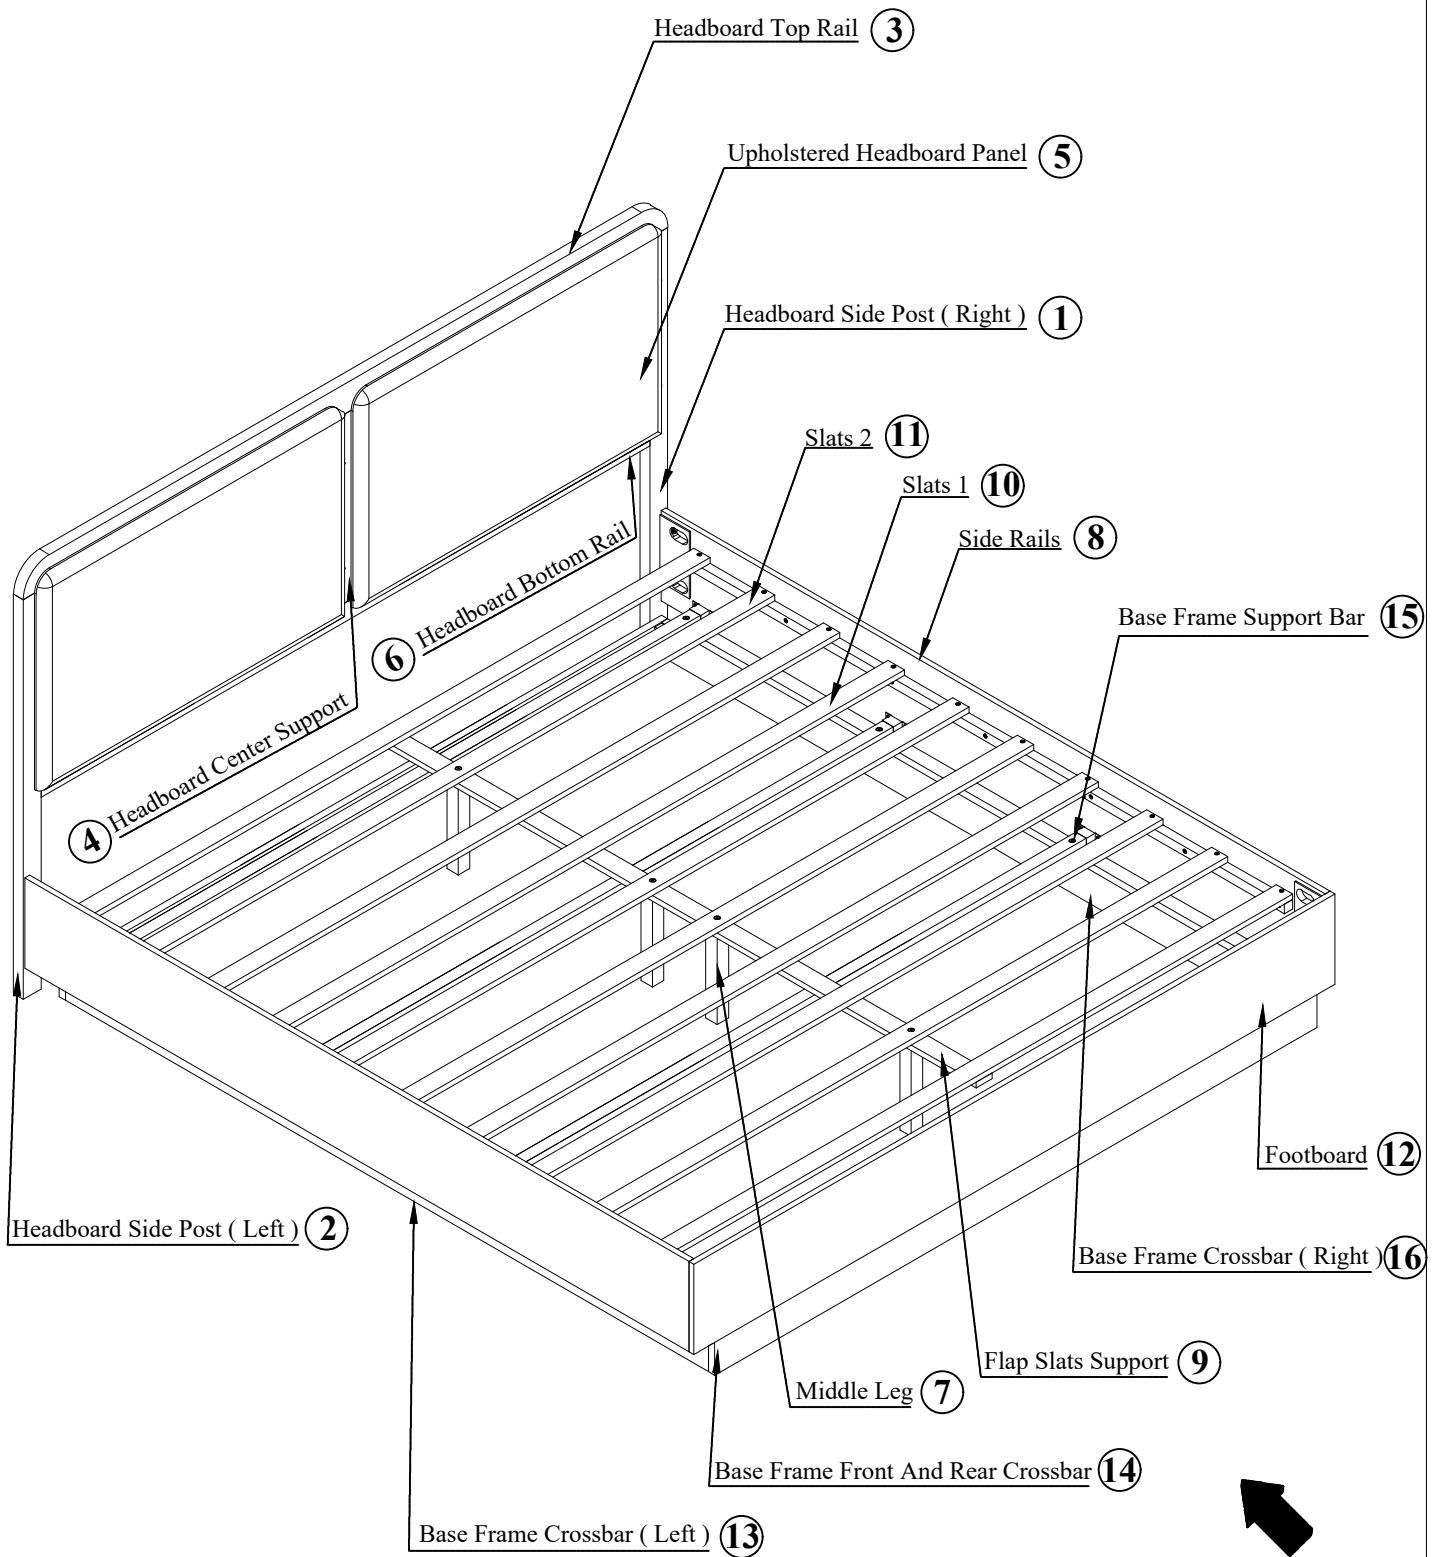


FRONT FACING

This bed has multiple parts and may require up to some 30 minutes - 1Hour to assemble. To give you an overview of the upholstered bed parts, the above picture is to help you put the various parts into perspective . please read through the instructions below to familiarise yourself with the parts and steps before assembly.


STEP 1


- 1






9
- 2



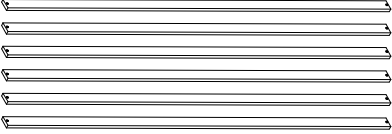

10
- 3






11
- 4






12
- 5







13
- 6





14
- 7





15
- 8






16

Unpack and place all part on a clean, non-marring surface

STEP 2

(A)


Allen Wrench




1PC

(B)

Bolts 1/4*30mm



8PCS

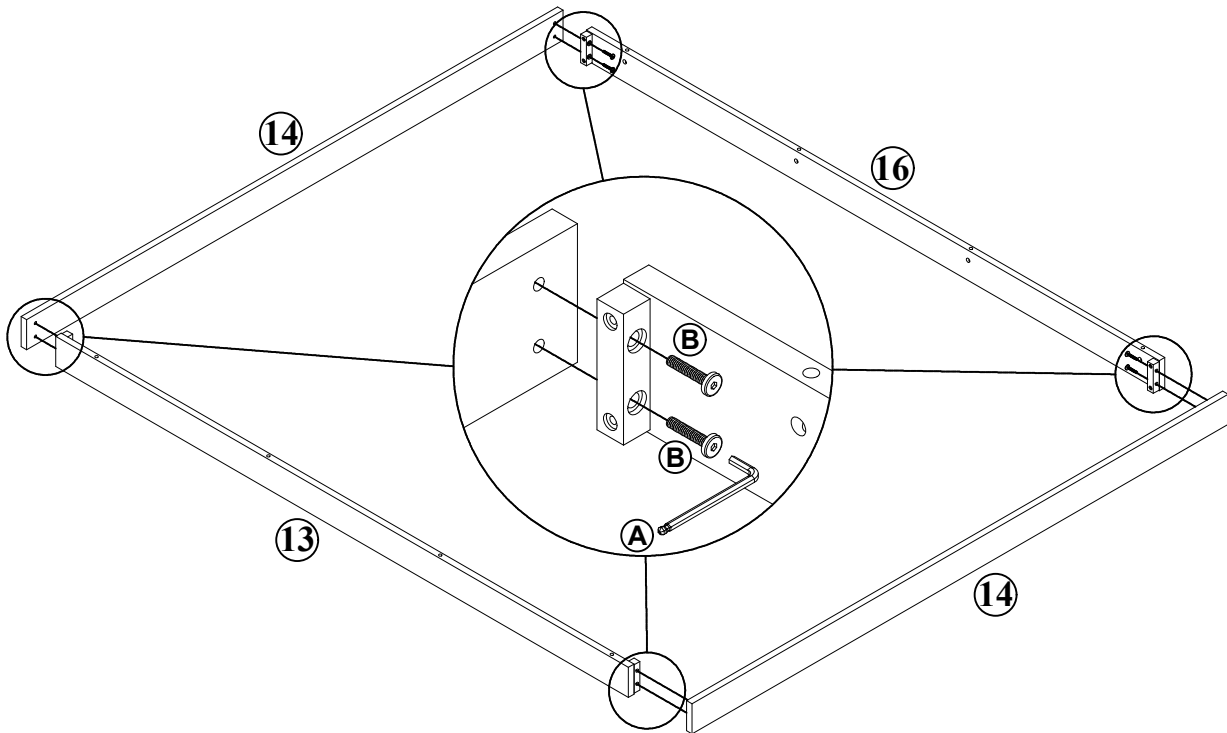

Step2: Attach the Base Frame Front and Rear Crossbar (14) to Base frame crossbar (Left) (13) & Base frame crossbar (Right) (16) by using hardware bolts (B) with Allen wrench (A) as shown above.



STEP 3

(C)

Bolts
1/4*75mm / 1/4*Ø9.5*12mm



8PCS

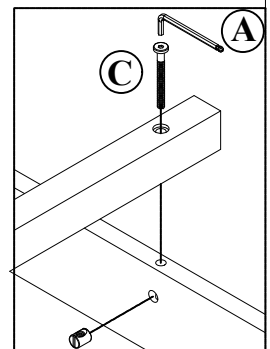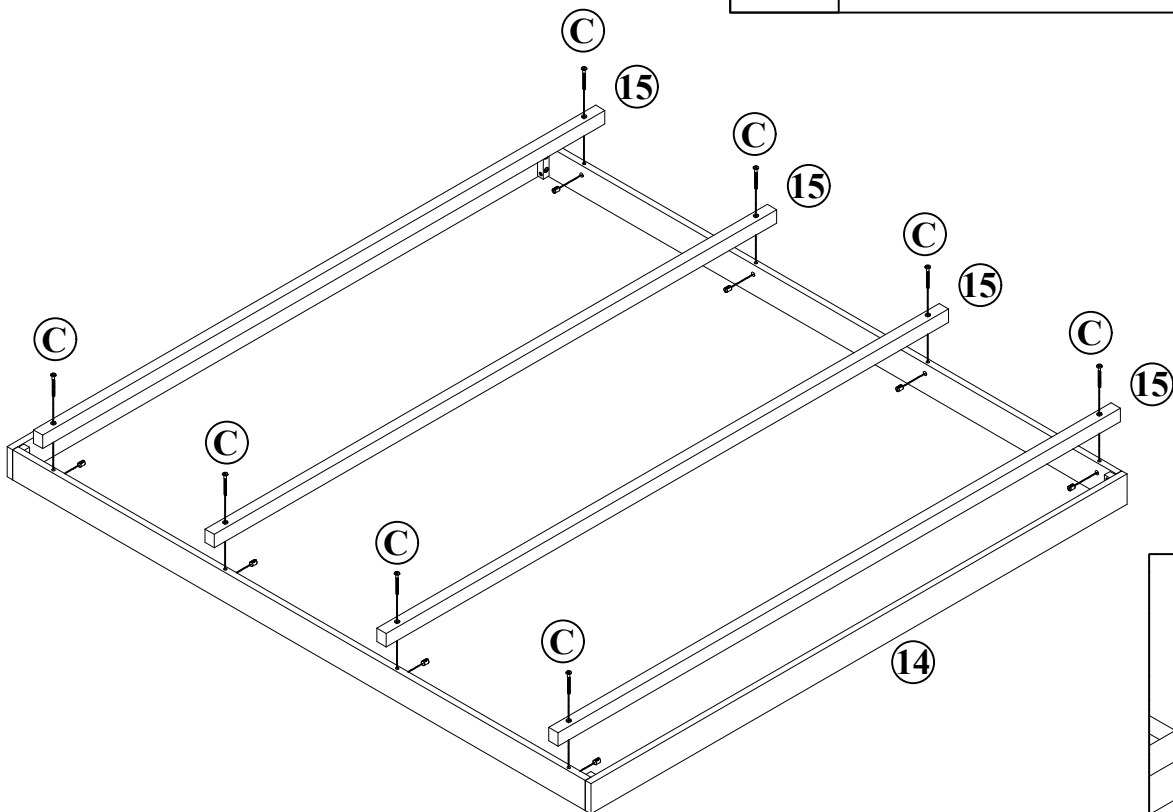


Step3: Attach the Base Frame Support Bar (15) to assembled Base Frame (13 & 16) by using hardware bolts (C) with Allen wrench (A) as shown above.

STEP 4

(D)

U - Brackets





8PCS

(E)

Screw 3.5*15mm



32PCS

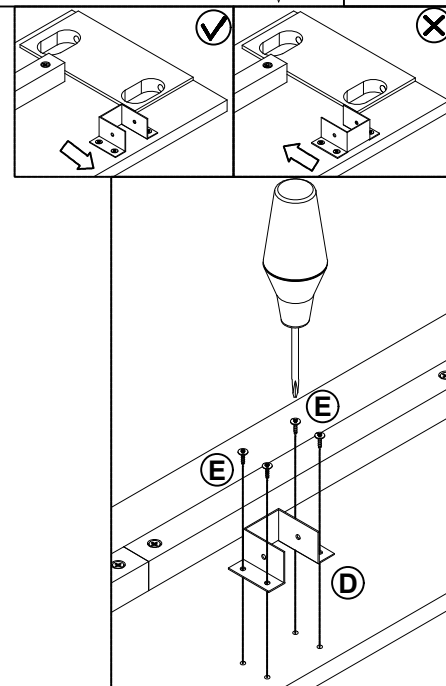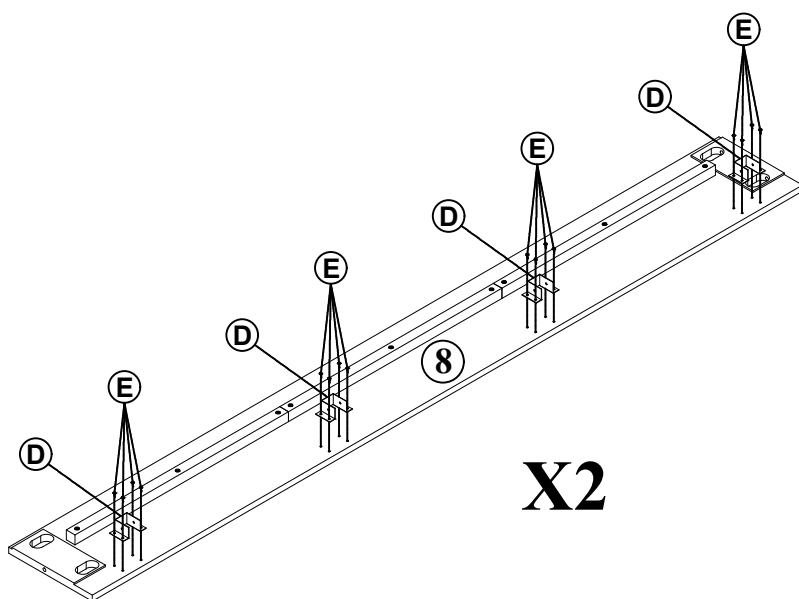

Step4: Attach U - brackets ((D)) to Side rails ((8)) by using Screw ((E)) with screwdriver (not provided) as shown above.

STEP 5

(G)

Wooden Dowel
Ø 8 * 30mm




2PCS

(F)

Bolts
1/4*45mm / R35mm



4PCS

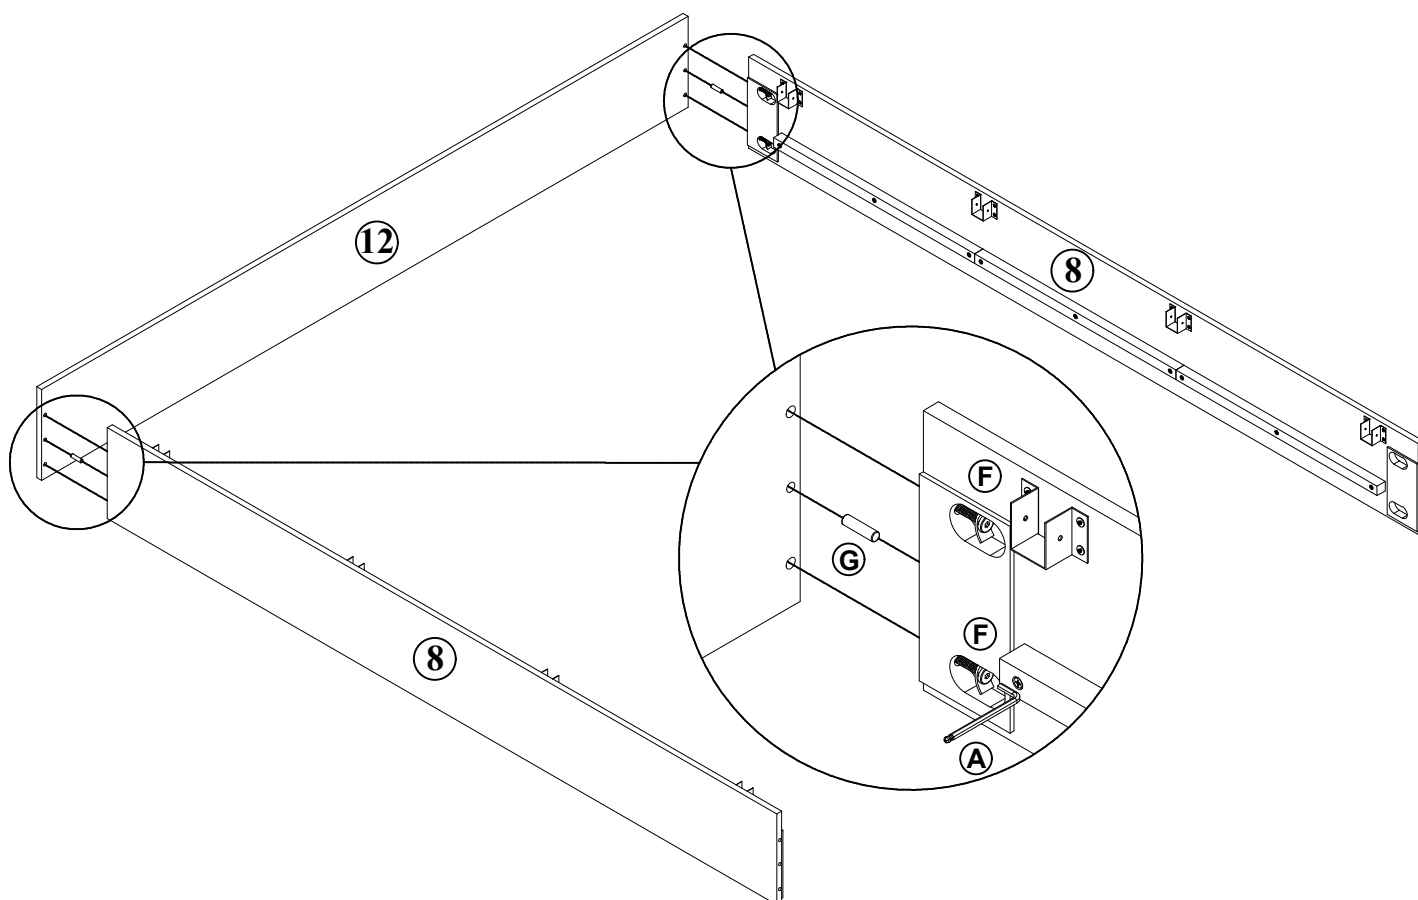

Step5: Attach the Side Rails ((8)) to Footboard ((12)) by using Wooden Dowel ((G)) & Bolts ((F)) with Allen wrench ((A)) as shown above.


STEP 6

(E)

Screw 3.5*15mm



16PCS

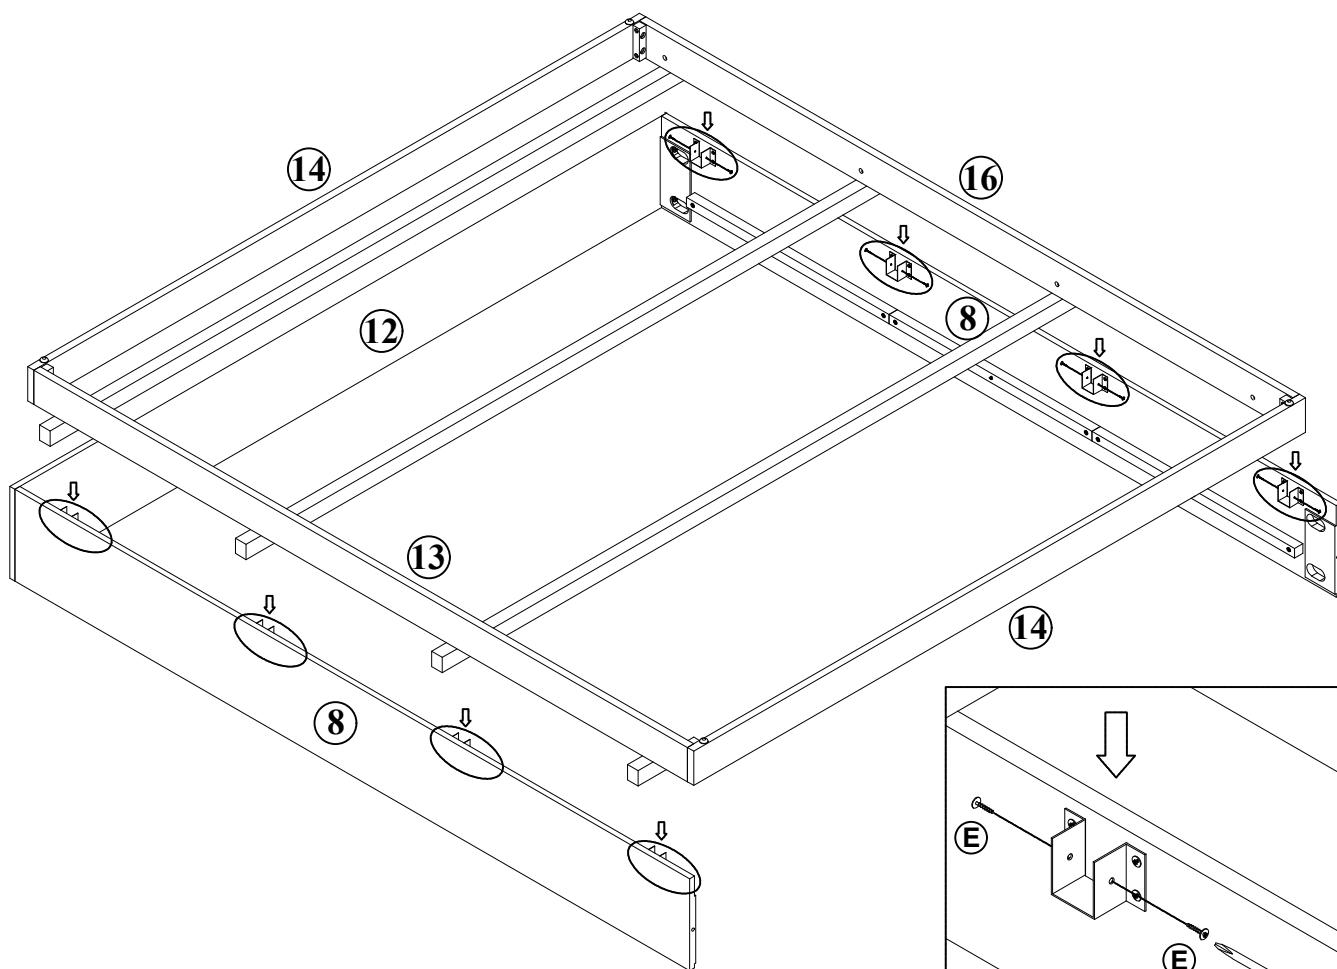

Step6: Attach the assembled Base Frame Support Bar ((15)) to the U - brackets ((D)) on assembled Side rails&Footboard (8&12) by using Screw ((E)) with screwdriver (not provided) as shown above.

STEP 7

(H)

Bolts
1/4*85mm / 1/4*Ø9.5*12mm





1PC

(G)

Wooden Dowel
Ø 8 * 30mm



2PCS

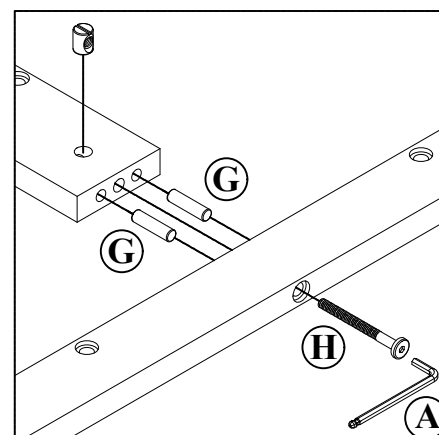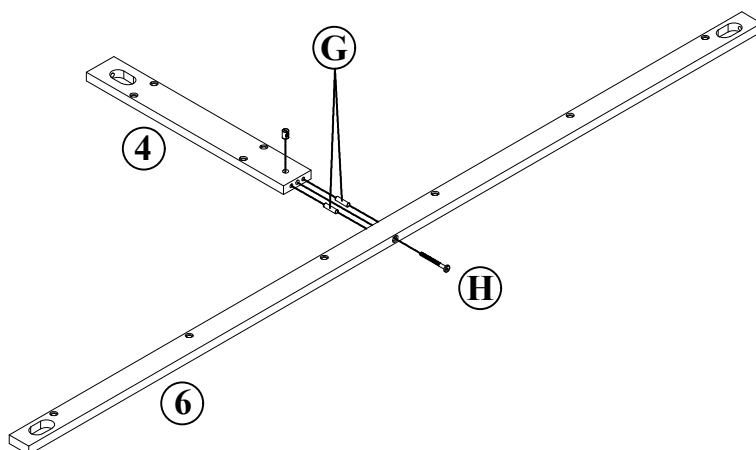

Step7 : Attach the Headboard Center Support ((4)) to Headboard Bottom Rail ((6)) by using Wooden dowel ((G)), Bolts ((H)) with Allen wrench ((A)) as shown above

STEP 8

(F)

Bolts
1/4*45mm / R35mm




2PCS

(G)

Wooden Dowel
Ø 8 * 30mm



4PCS

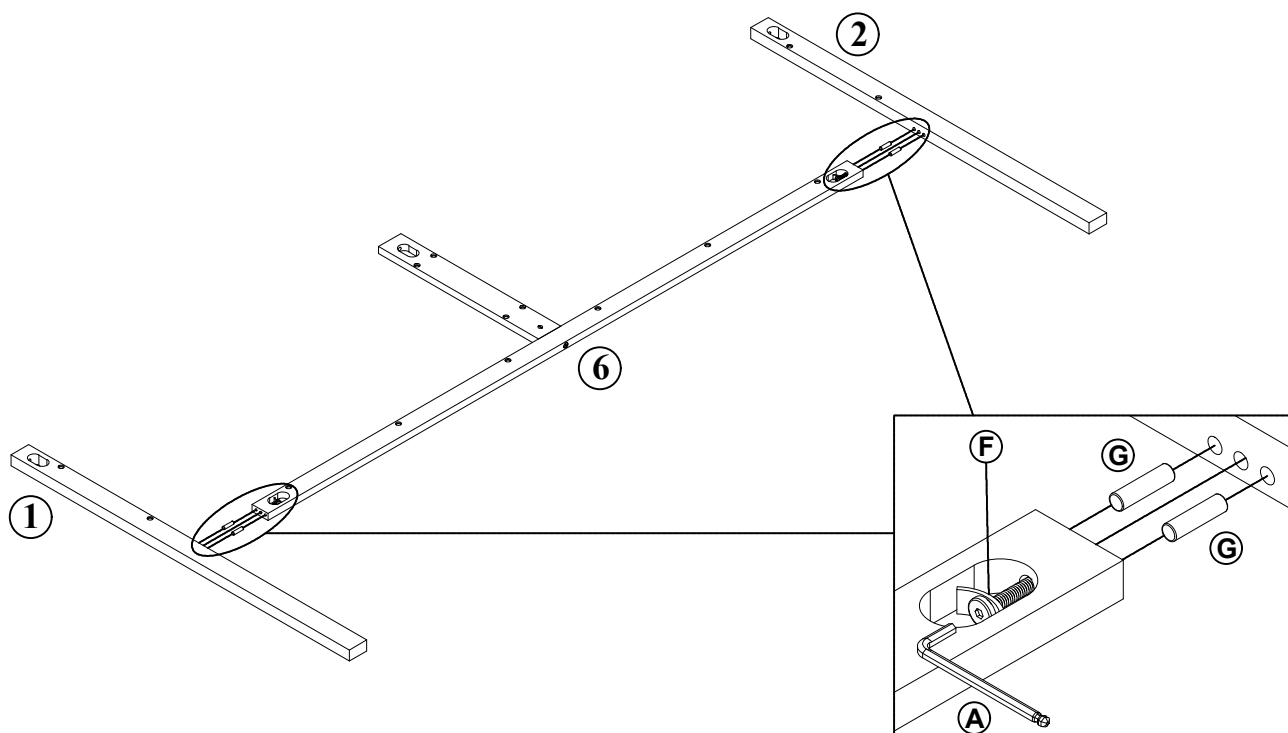

Step8:Attach the Headboard Side Post (Right) (1) & Headboard Side Post (Left) (2) to Headboard Bottom Rail (6) by using Wooden dowel (G),Bolts (F) with Allen wrench (A) as shown above.

STEP 9

(F)

Bolts
1/4*45mm / R35mm




3PCS

(G)

Wooden Dowel
Ø 8 * 30mm






6PCS

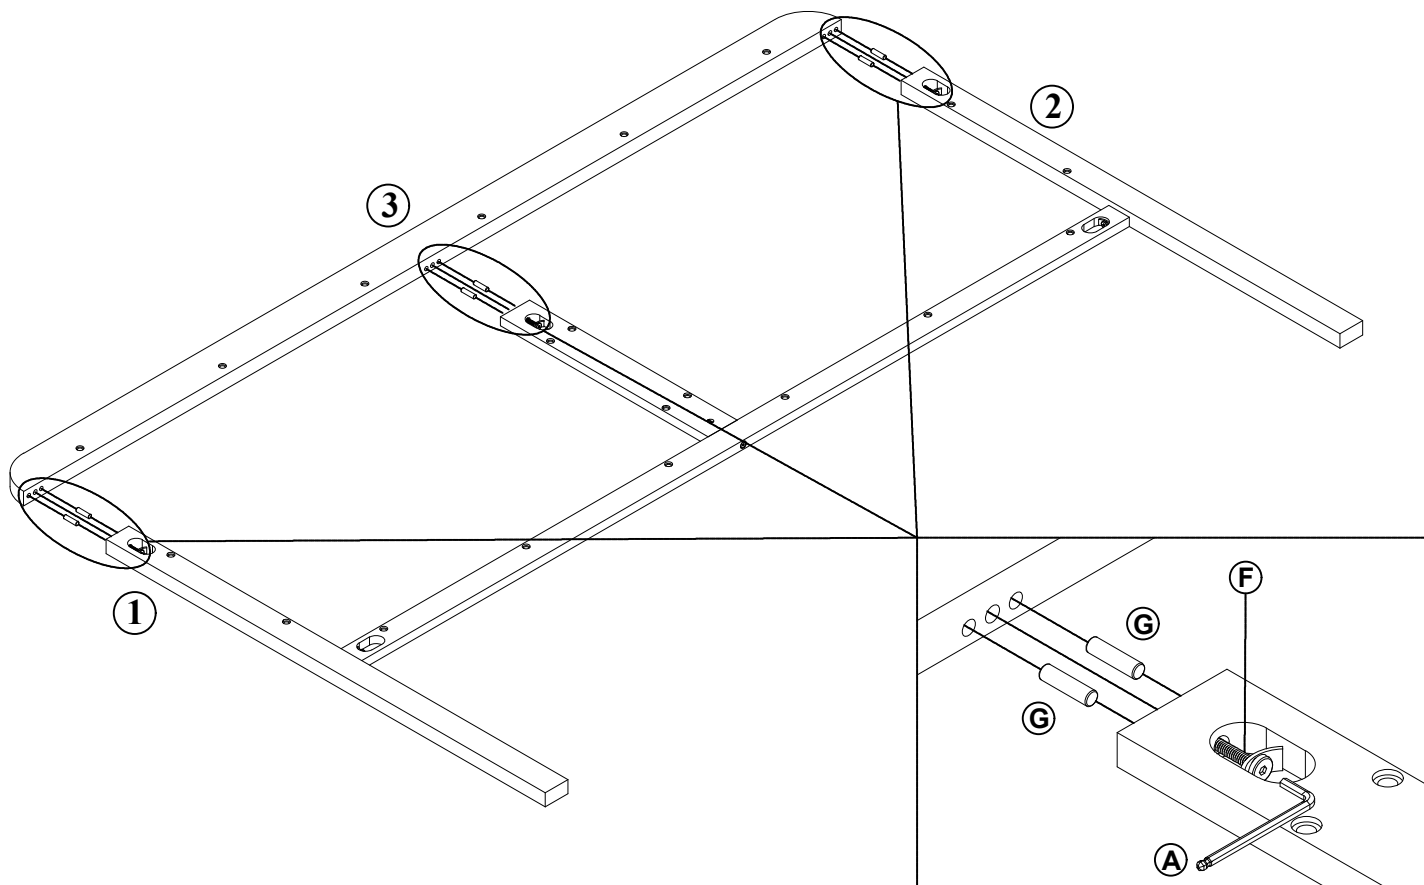

Step9 : Attach the Headboard Top Rail (3) to assembled Headboard (1&2&4) by using Wooden dowel (G),Bolts (F) with Allen wrench (A) as shown above.

STEP 10


(J)	Bolts 1/4*25mm		10PCS	(I)	Bolts 1/4*35mm		10PCS
------------	----------------	--	-------	------------	----------------	--	-------

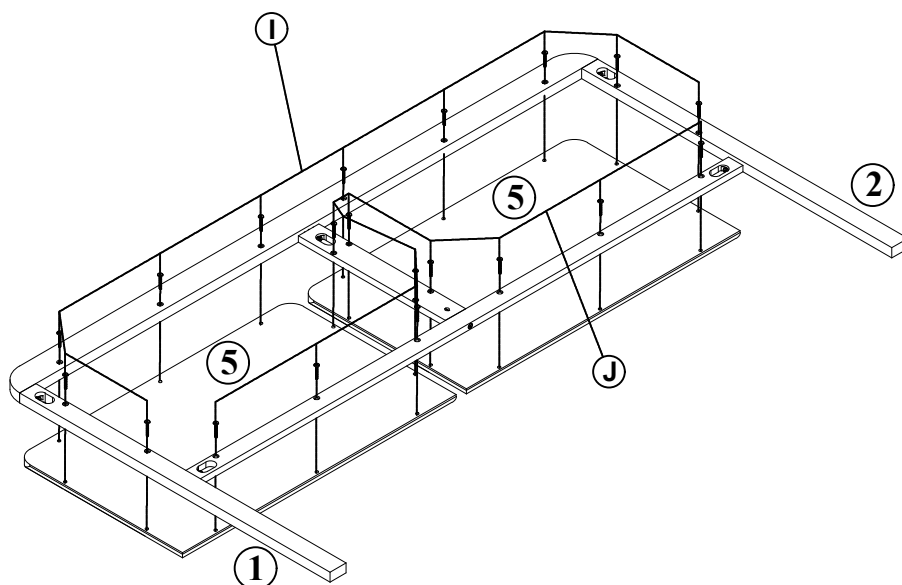

Step10 : Attach the assembled Headboard Rail (1&2&3) to Upholstered Headboard Panel (5) by using Bolts (I) with Allen wrench (A) as shown above. Attach the assembled Headboard Rail (4&5) to Upholstered Headboard Panel (5) by using Bolts (J) with Allen wrench (A) as shown above.

STEP 11

(F)	Bolts 1/4*45mm / R35mm		4PCS	(G)	Wooden Dowel Ø 8 * 30mm		2PCS
------------	---------------------------	---	------	------------	----------------------------	---	------

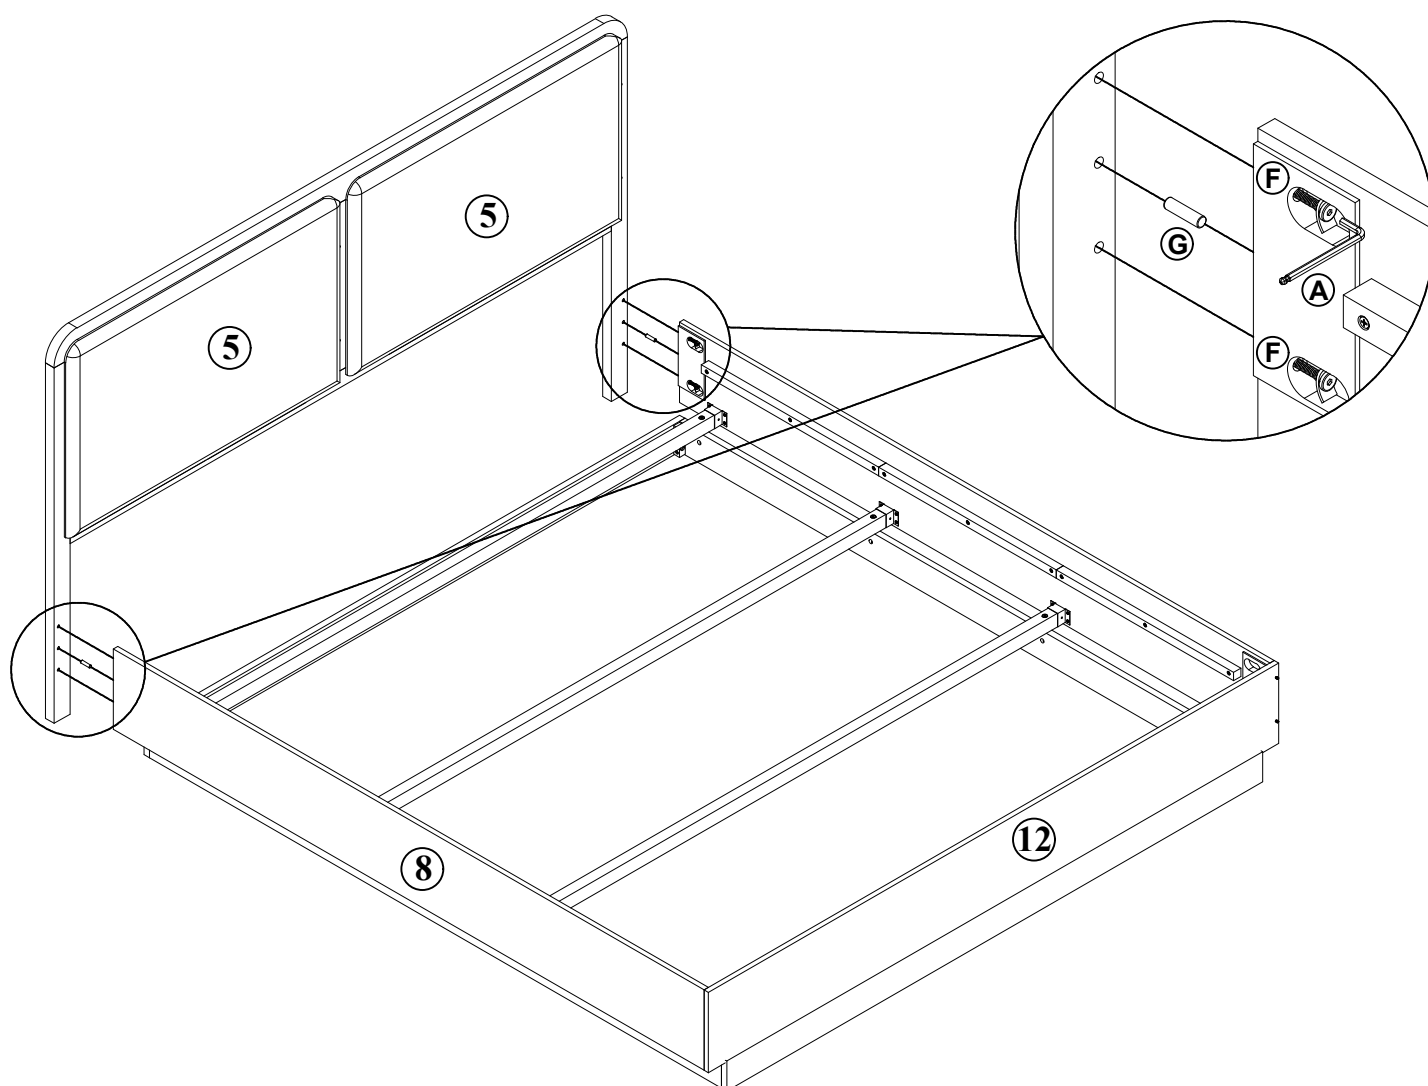


Step11 : Attach the assembled Headboard Post (1&2) to assembled Side Rails (8) by using Wooden dowel (G), Bolts (F) with Allen wrench (A) as shown above.



STEP 12

(K)

Bolts 1/4*45mm



4PCS

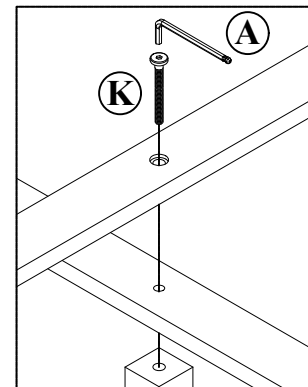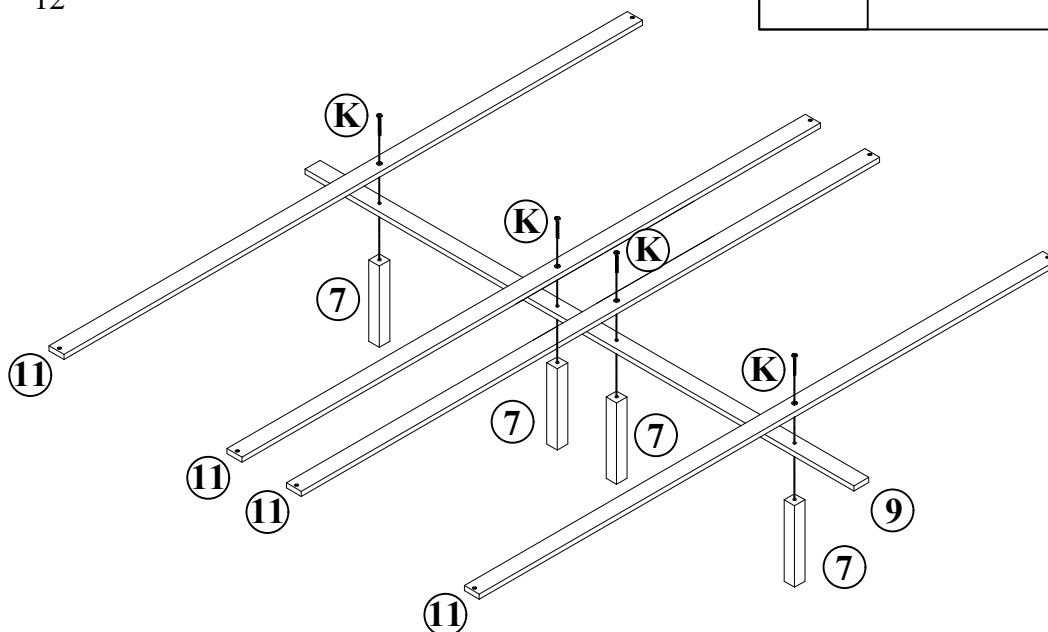

Step12:Attach the details Middle leg (7)& Slats 2 (11) to Flap slats support (9) by using Bolt (K) with Allen wrench (A) as shown above.



STEP 13

(L)

Screw 4*30 mm



20PCS

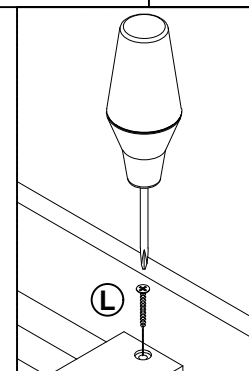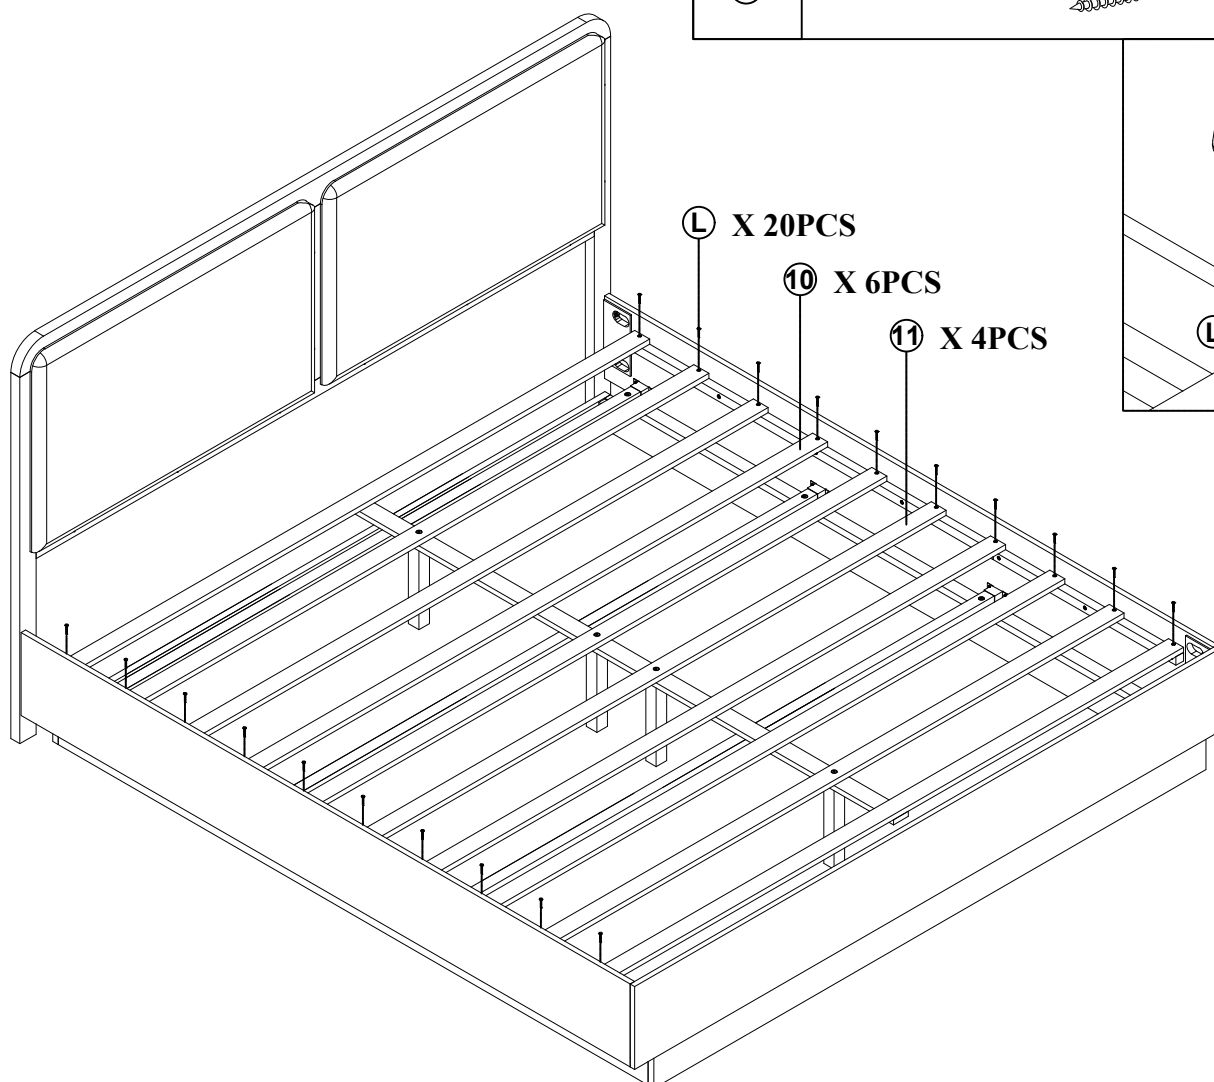


(L) X 20PCS

(10) X 6PCS


(11) X 4PCS

Step13:Attach assembled Slats(7&11&9)&Slat2 (10) to Side Rails (8) by using Screw (L) with Screwdriver (not provided) as shown above.

STEP 14

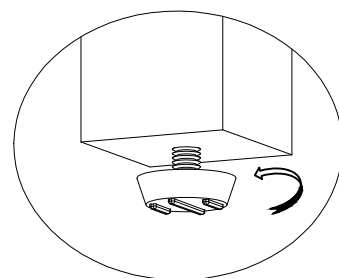

Adjust the feet to be level with the floor.

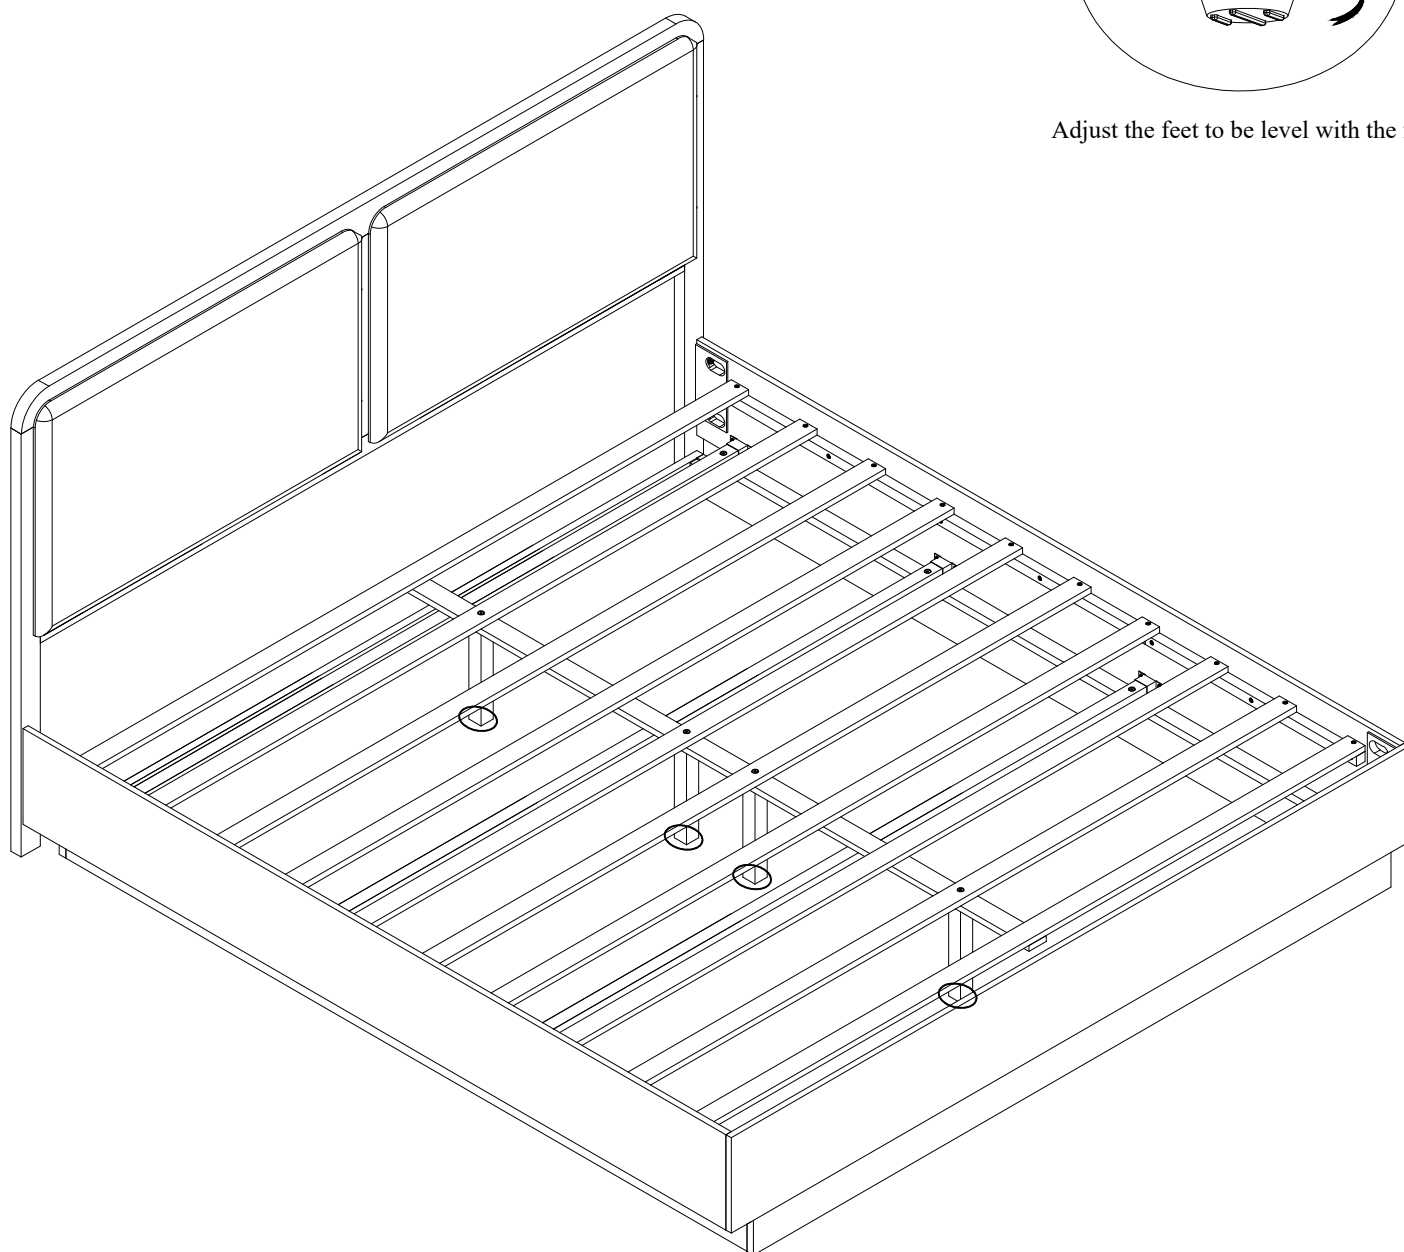

Check for wobbles.

In a sequential manner, gradually tighten all Bolts until evenly secured.

Inspect the Bed and make sure all parts are adequately connected.

With assistance from your adult partner, adjust the Levelers to desired height to avoid wobbles

To adjust the Levelers, get assistance from an adult partner to lift/ lean and hold the Bed while you are working.

Your Bed is ready for use.

This Bed can only be used on a flat, level surface