


ASSEMBLY INSTRUCTIONS




24 INCH BATH VANITY (COMBO)

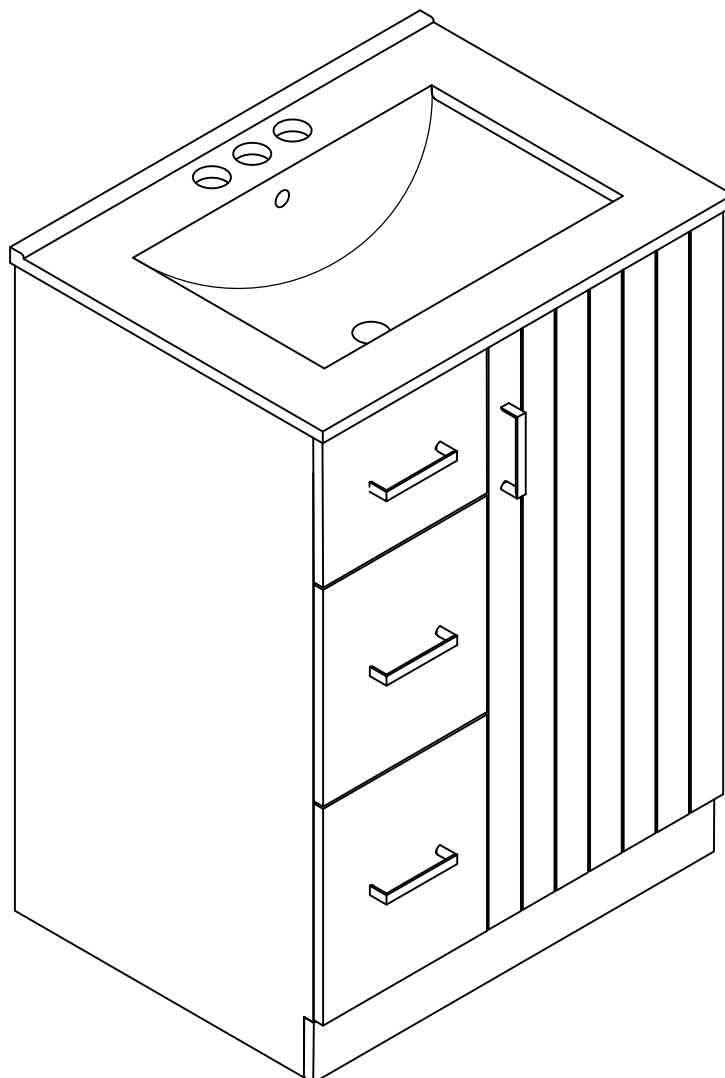


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

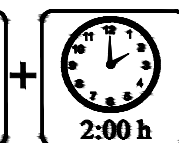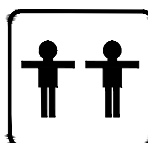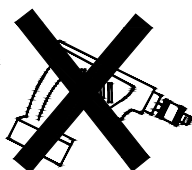

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions









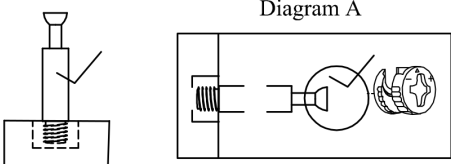
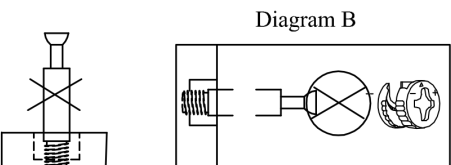
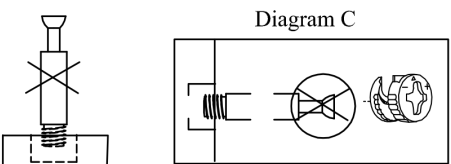

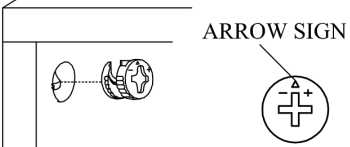
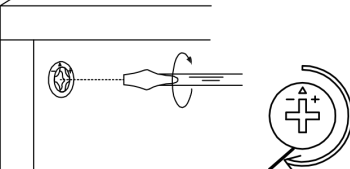
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET

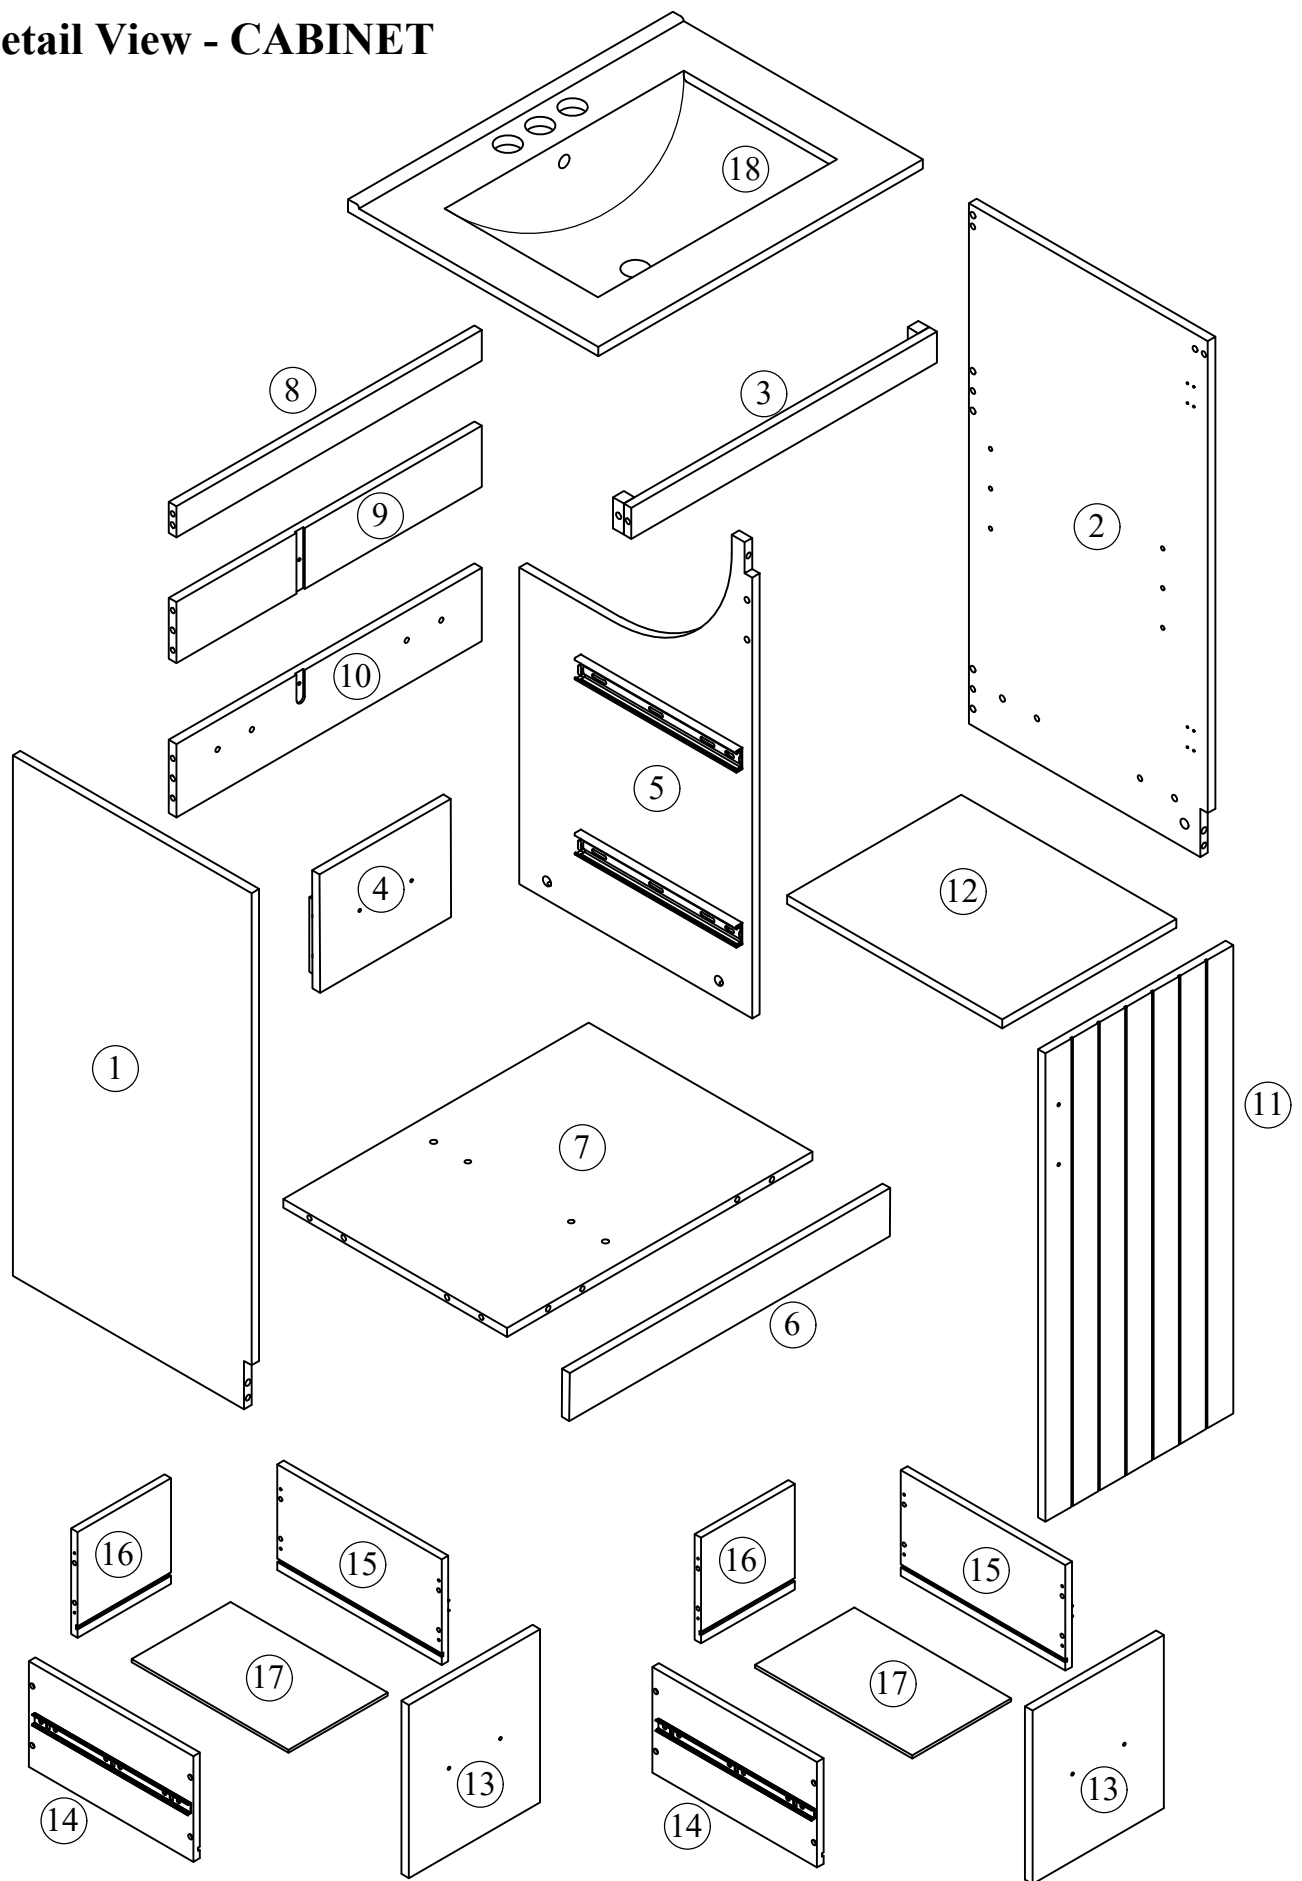


Identifying the Hardware—Identify the hardware using the illustrations below.

Part List - N710P288936

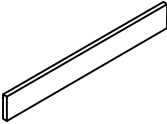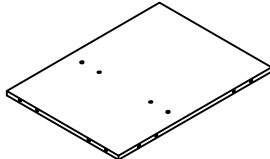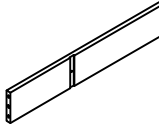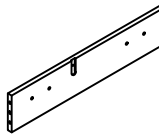1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Front Bar - 1pc		Drawer Fake - 1pc
5		6	
	Mid Panel - 1pc		Bottom Front Bar - 1pc
7		8	
	Bottom Panel - 1pc		Top Rear Bar - 1pc
9		10	
	Mid Rear Bar - 1pc		Bottom Rear Bar - 1pc
11		12	
	Door - 1pc		Adjustable Shelf - 1pc
13		14	
	Drawer Face - 2pcs		Drawer Side Panel (L) - 2pcs
15		16	
	Drawer Side Panel (R) - 2pcs		Drawer Back Panel - 2pcs


Part List - N710P288936

17












Drawer Bottom Panel - 2pcs

18

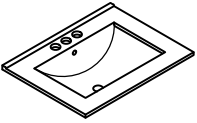


Sink - 1pc

Hardware List - N710P288936

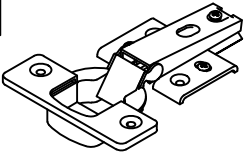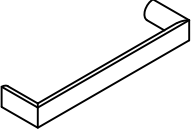
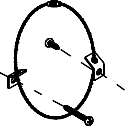
A  ø6x35mm	B  ø14.5x12mm	C  ø8xø4x32mm
Three in one bolts (22pcs)	Three in one lock (22pcs)	Round head screw (18pcs)
D 	E  ø7xø3.5x12mm	F  ø8x30mm
Damping hinge (2pcs)	Flat head screw (12pcs)	Wood dowel (21pcs)
G  ø6x30mm	H 	I  ø5/32"x19mm
Wood dowel (16pcs)	Handle (4pcs)	Handle screw (4pcs)
J  ø5/32"x32mm	K 	L  ø13x1/4"x28mm
Handle screw (4pcs)	Laminate pad (4pcs)	Hex-Head bolts (6pcs)
M  ø1/4"x16x1mm	N  4mm	O 
Washer (6pcs)	Allen key(1pc)	Anti fall hardware (2sets)

STEP: 1


A




22PCS

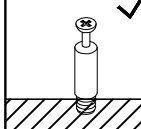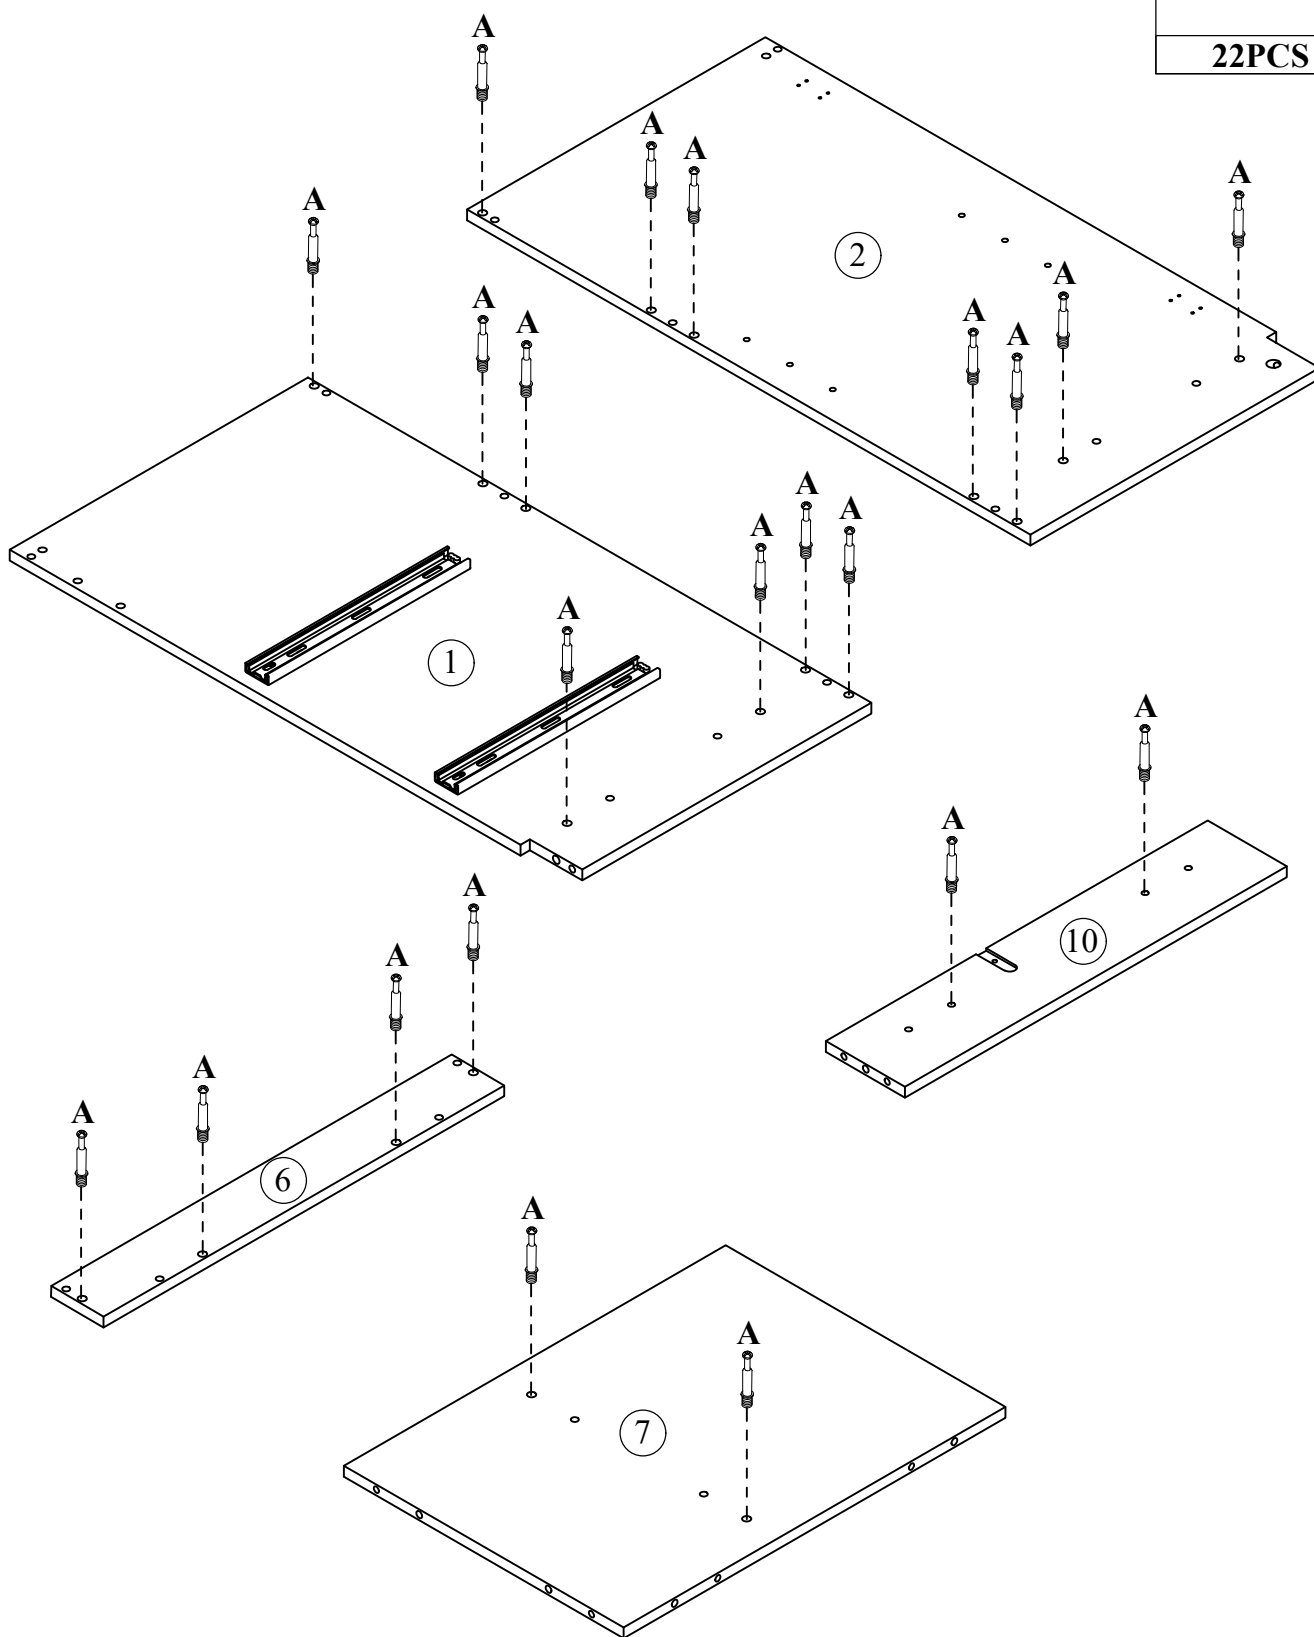


Don't lean




Don't over tighten




STEP: 2

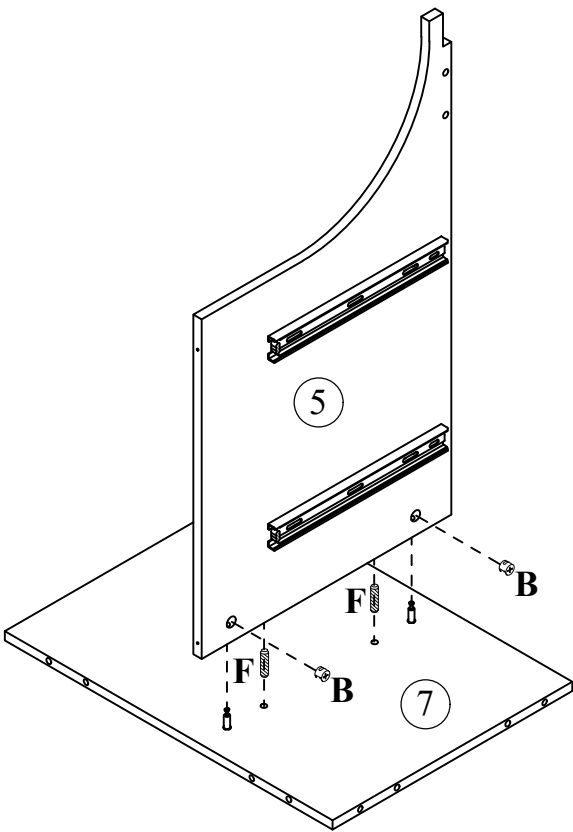


B	F
	
2PCS	2PCS

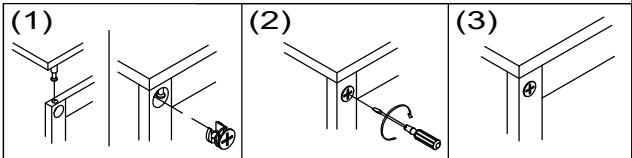



STEP: 3





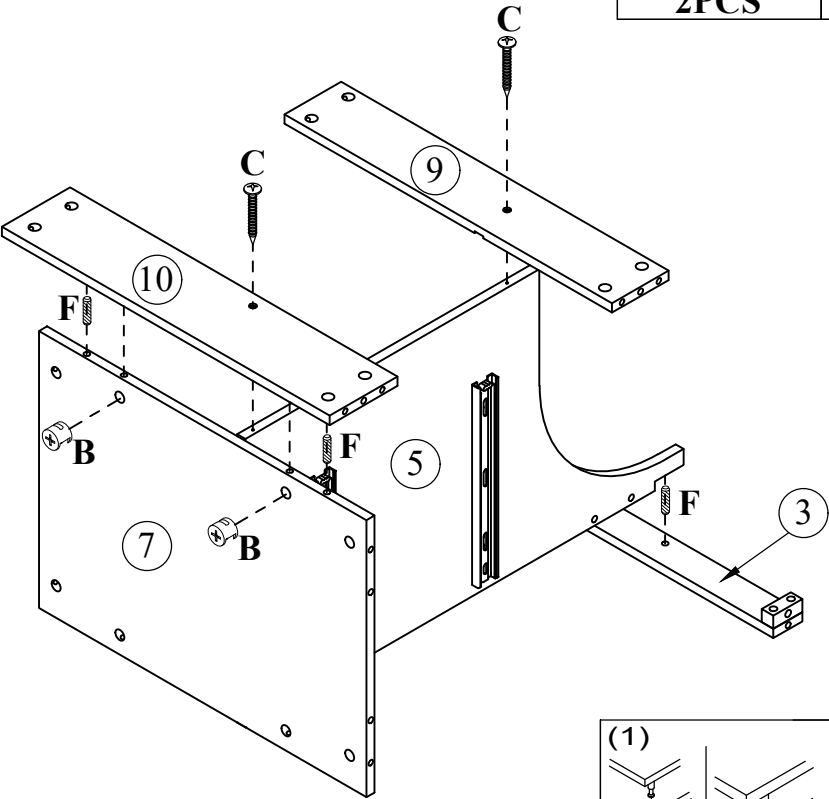


B	C	F
		
2PCS	2PCS	3PCS

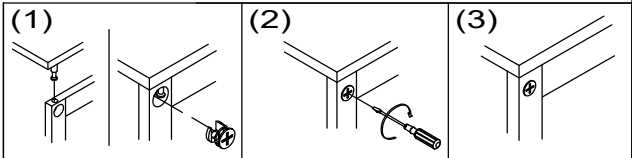


STEP: 4


B	F	L	M
			
14PCS	12PCS	6PCS	6PCS

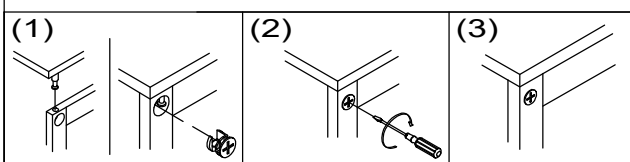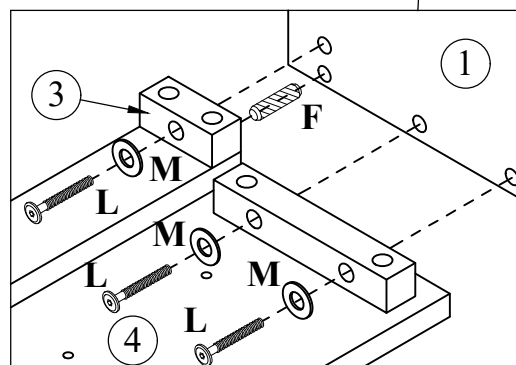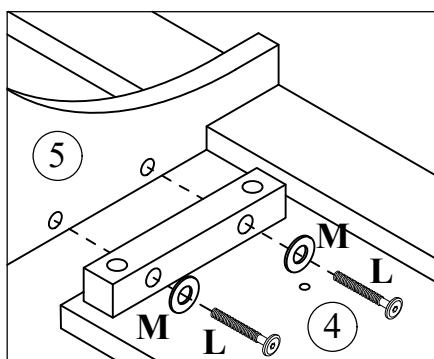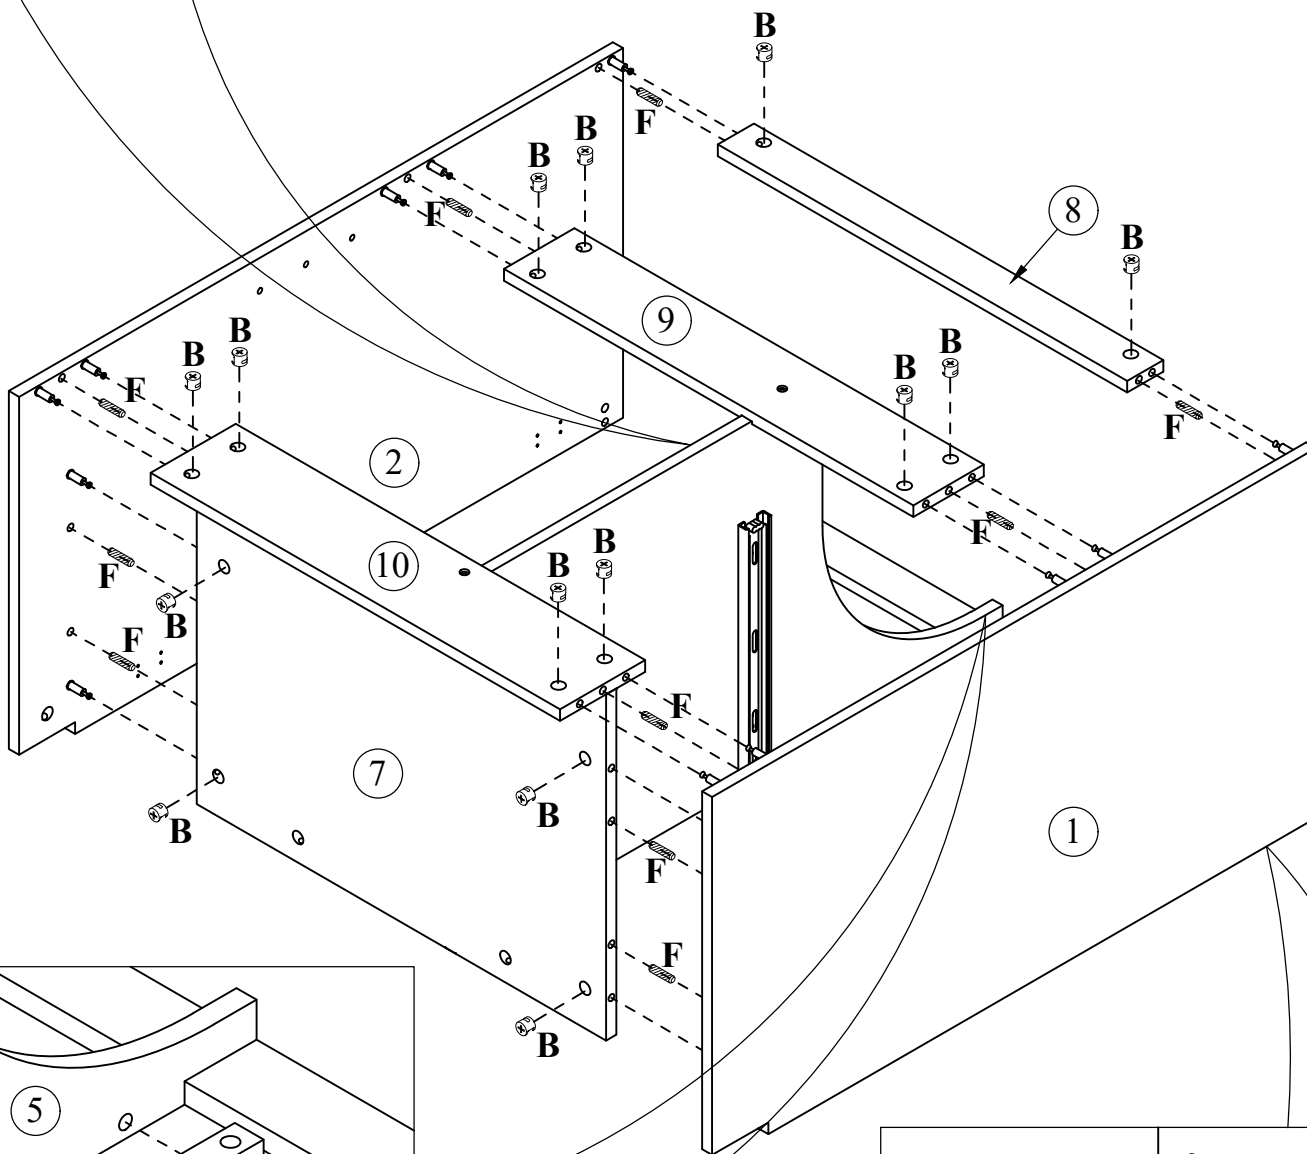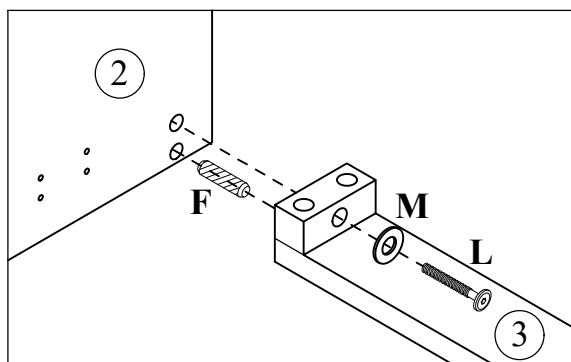


STEP: 5


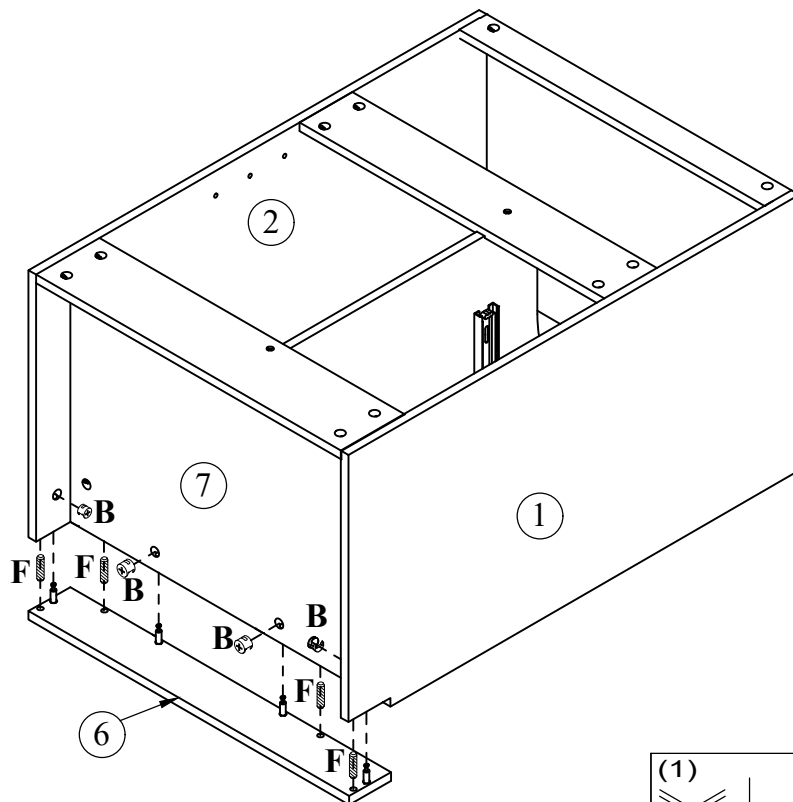


B		F	
4PCS		4PCS	

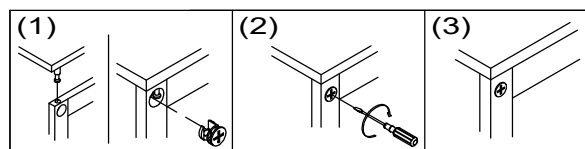



STEP: 6

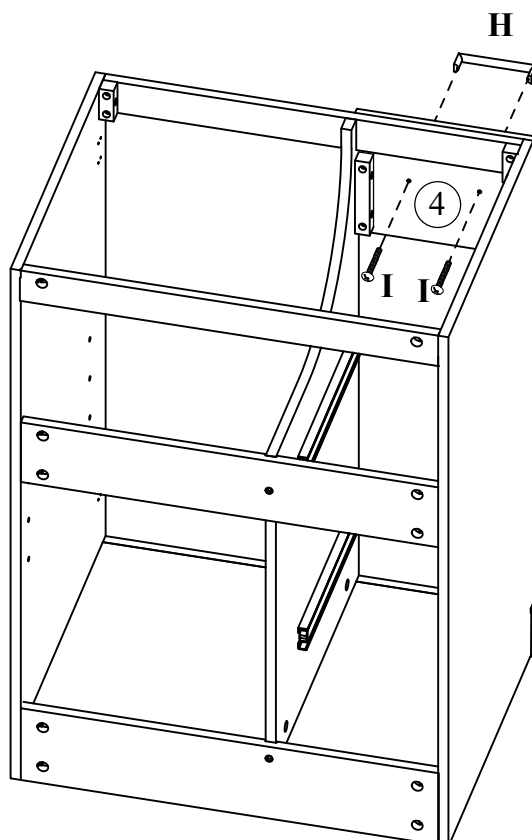

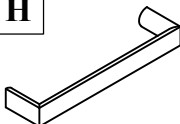
H		I	
1PC		2PCS	



STEP: 7

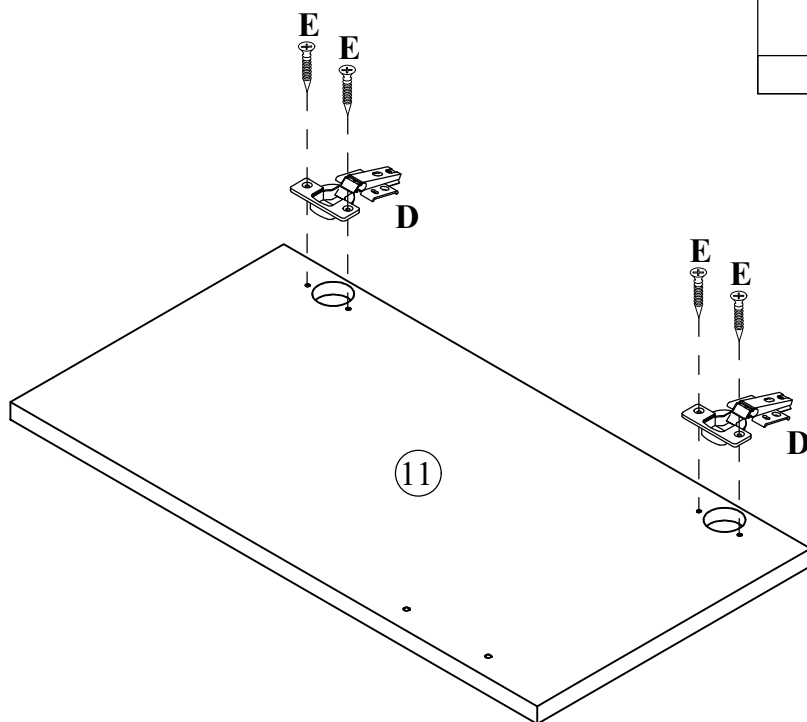


D	E
	
2PCS	4PCS



STEP: 8

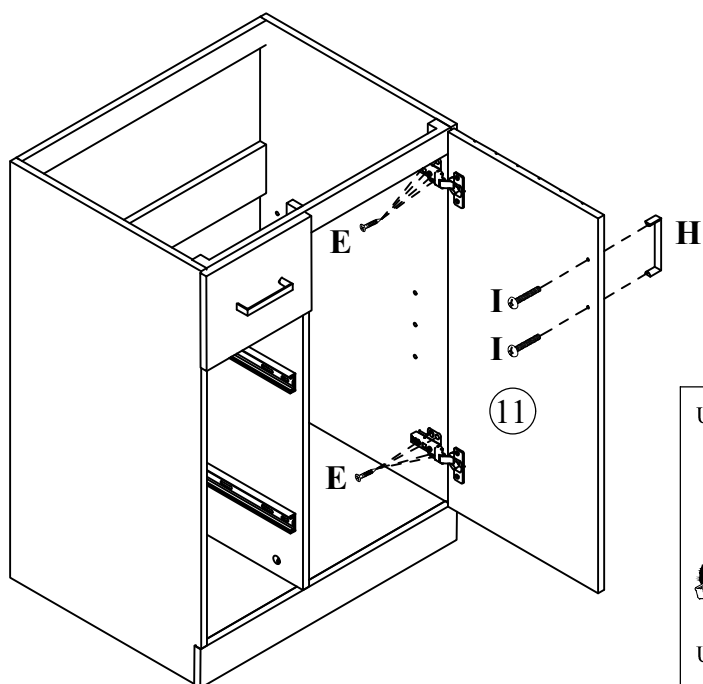


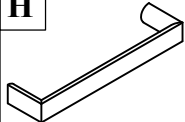E	H	I
		
8PCS	1PC	2PCS

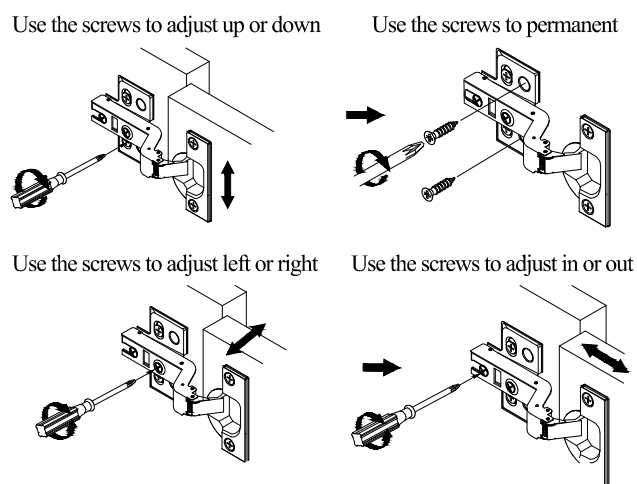


STEP: 9

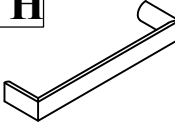C	G	H	J
			
16PCS	16PCS	2PCS	4PCS

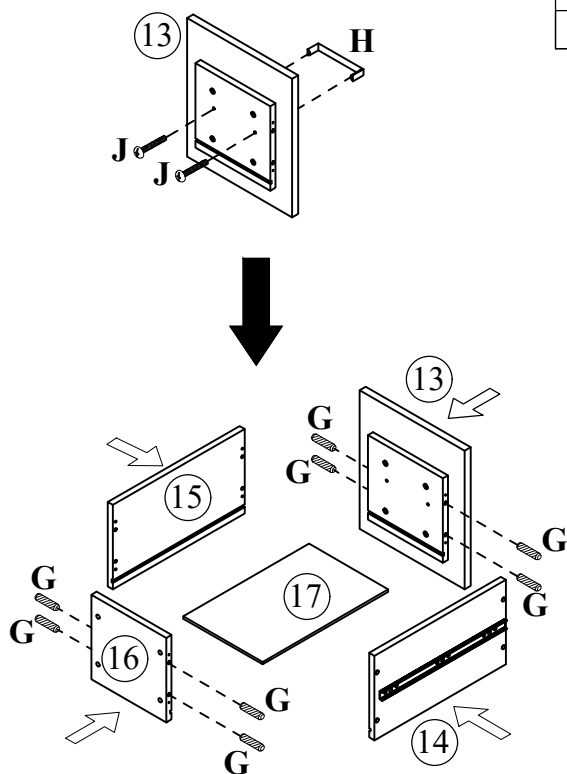



x2

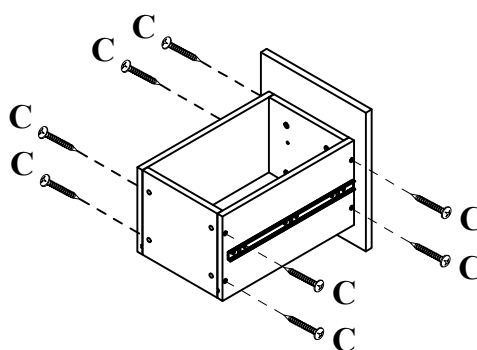


STEP: 10

K



4PCS

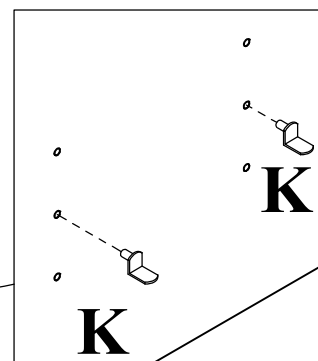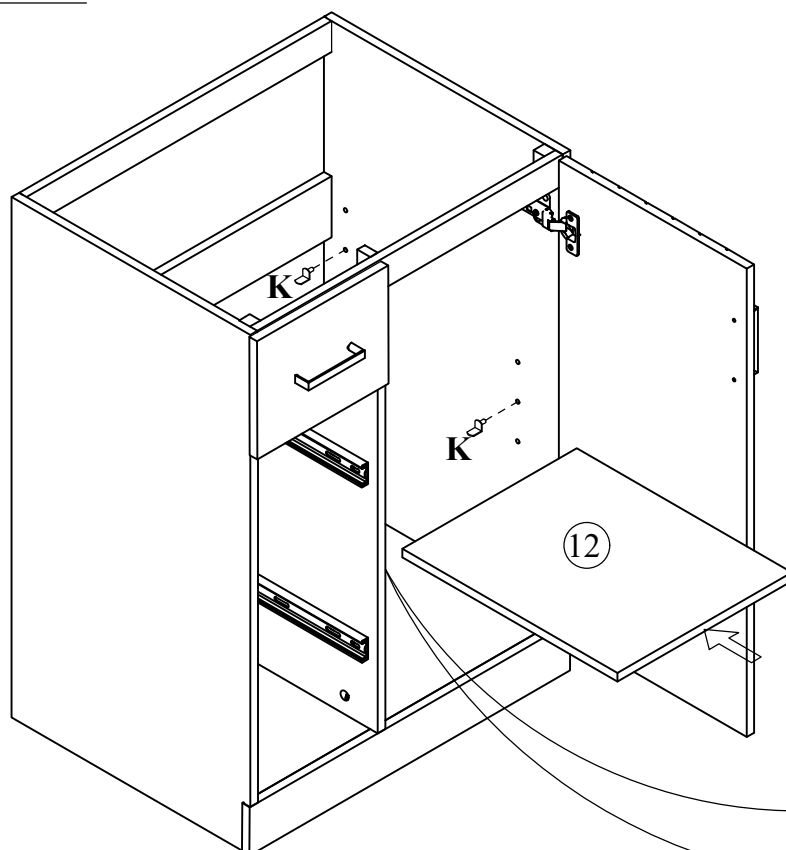

STEP: 11

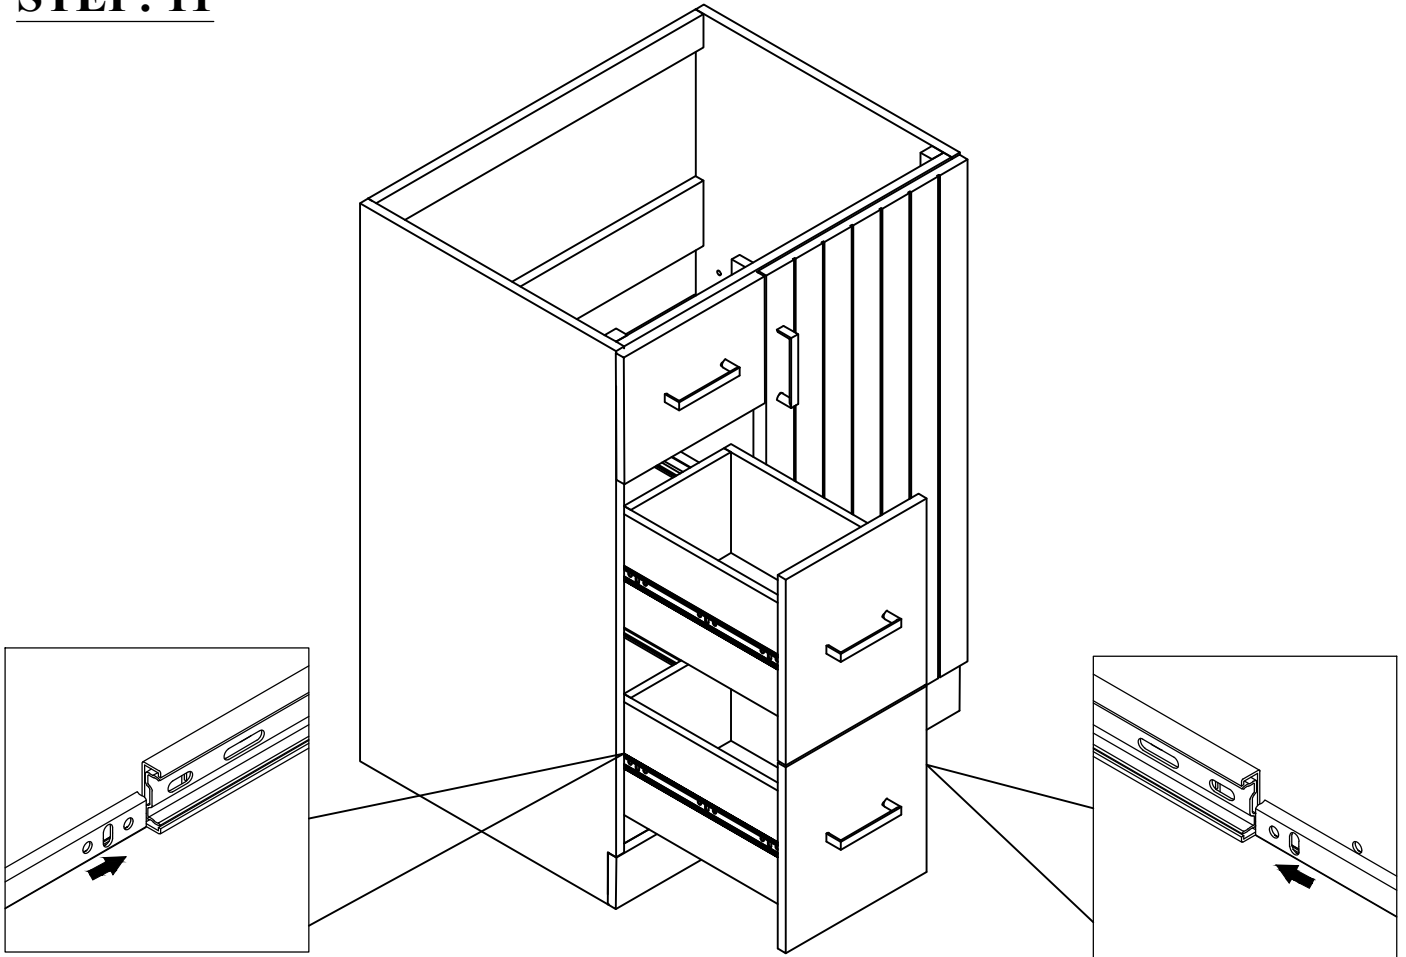


STEP: 12

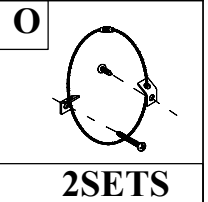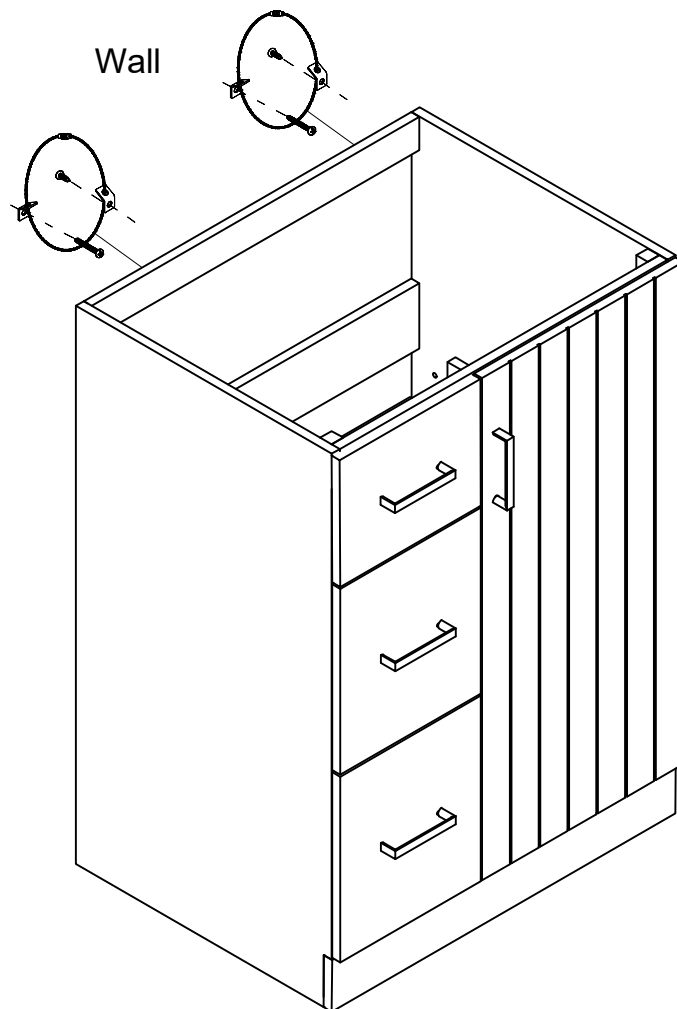



STEP: 13

Install the sink on the cabinet with glue.
Let stand for 24 hours

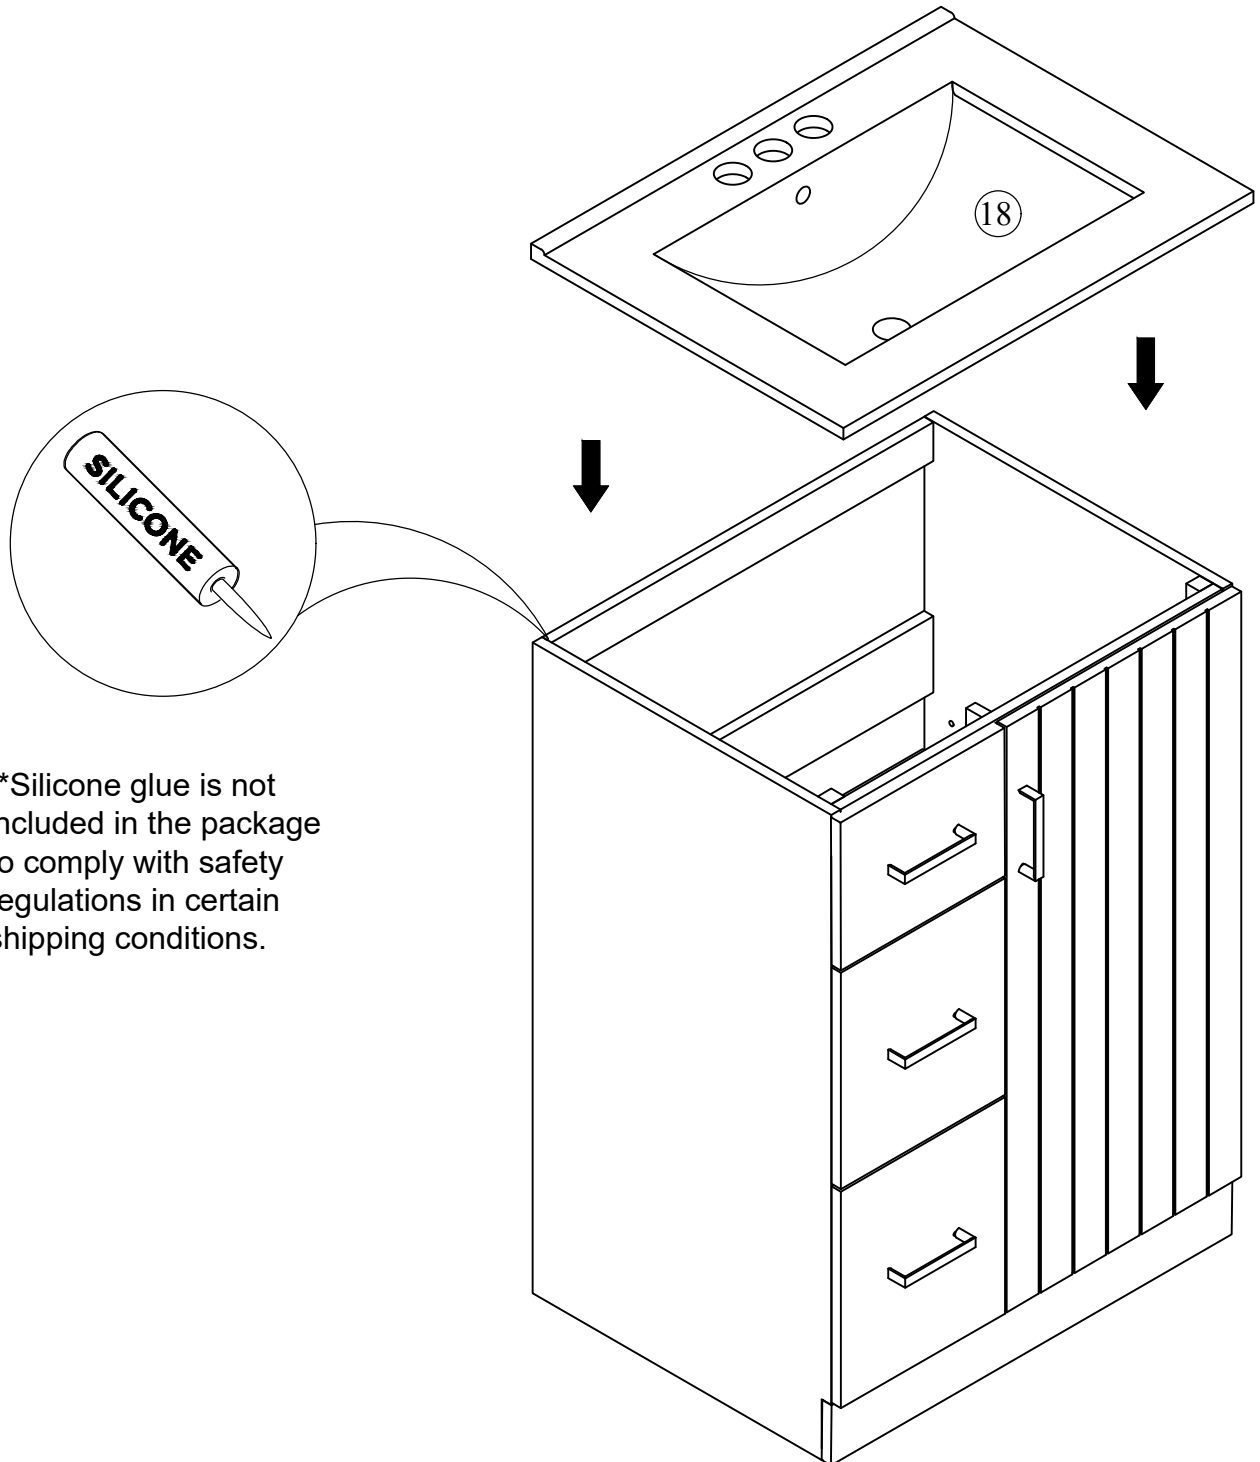


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 14

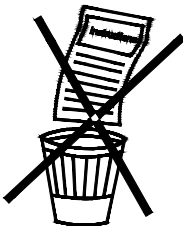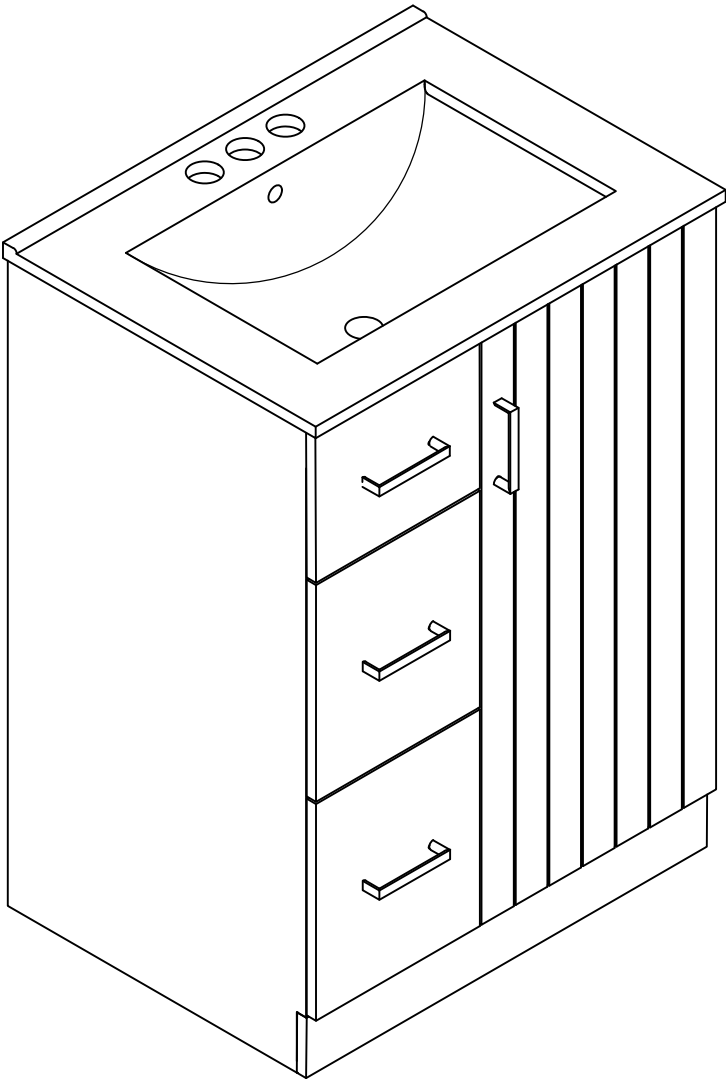

HINGE ADJUSTMENTS

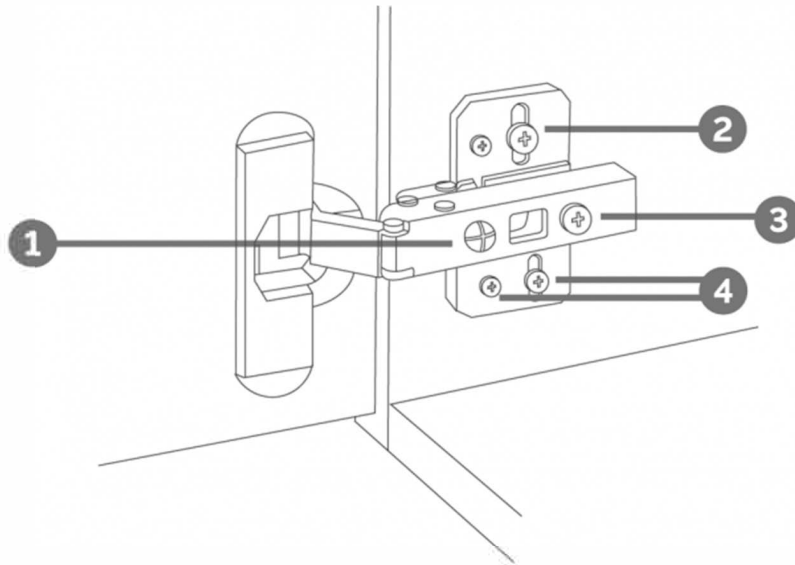


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

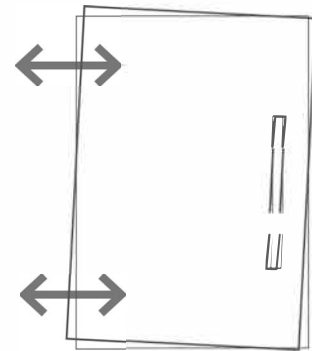


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

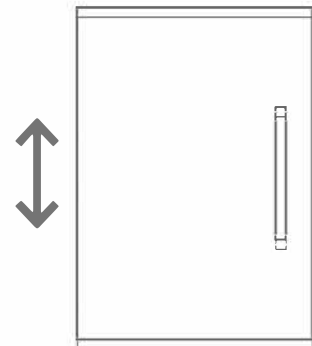

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

