



Multifunctional storage Assembly Instructions

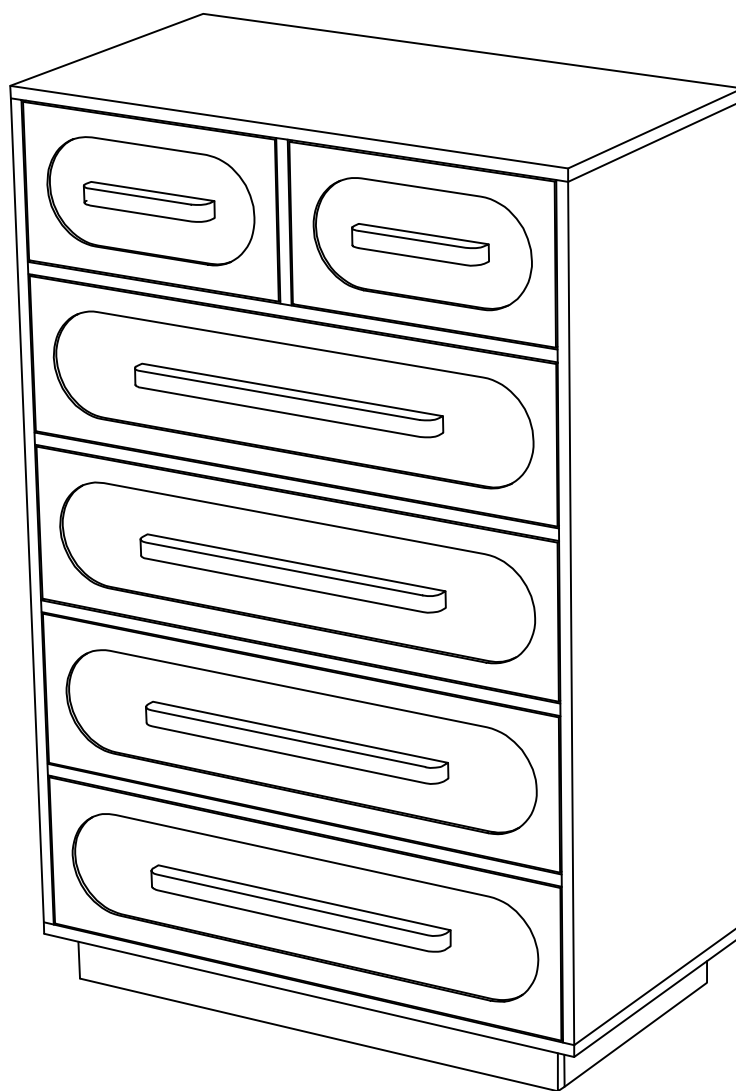










Parts List

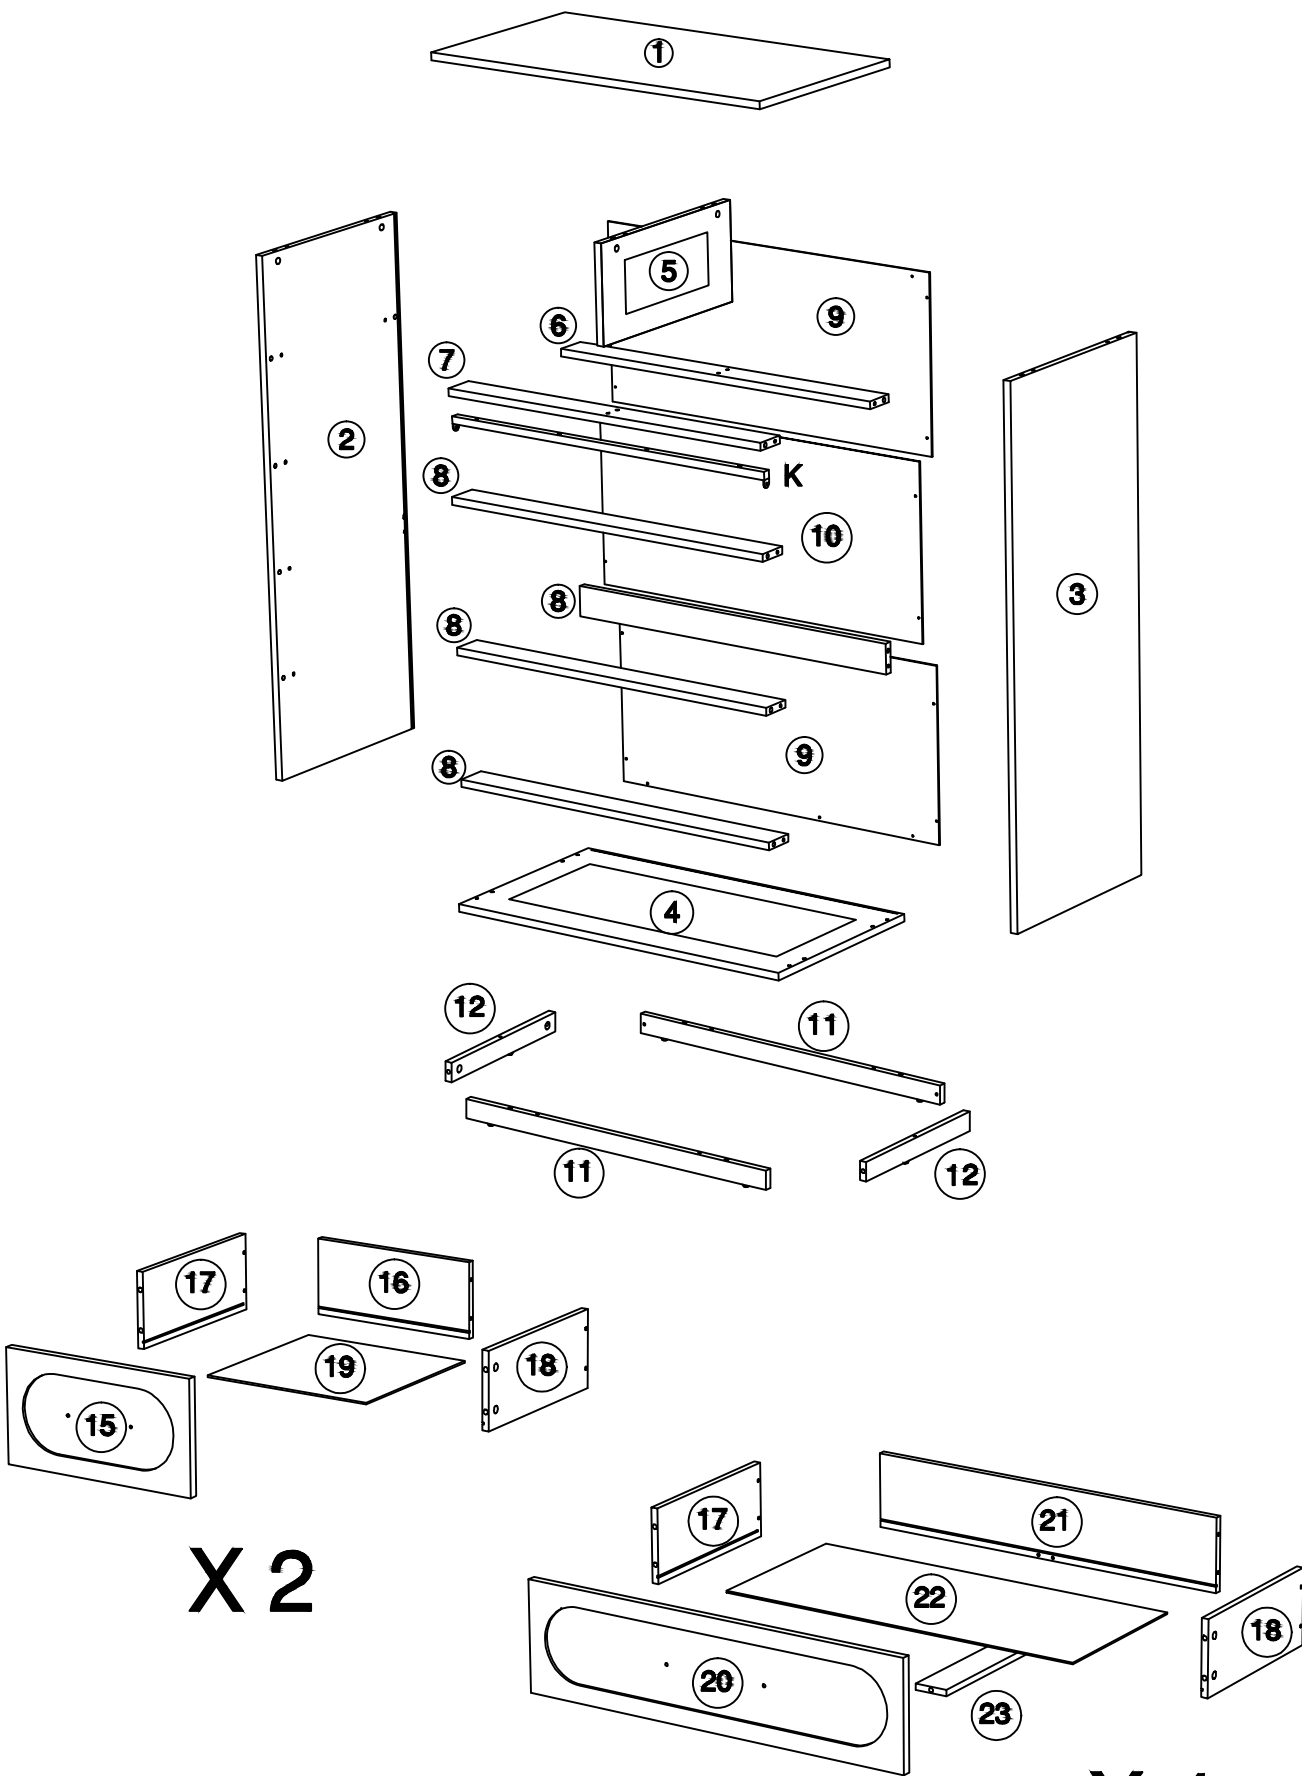






X 2







X 4

Hardware

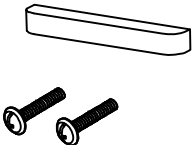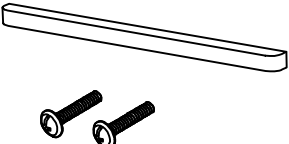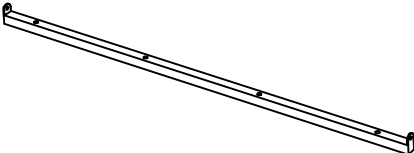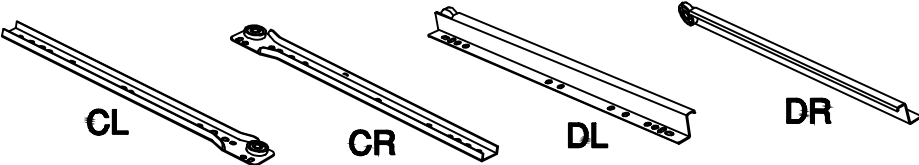
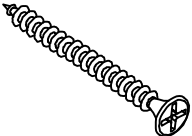
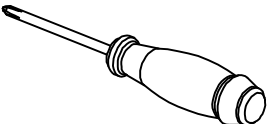
A  M6×35mm50+2PCS	B  Ø15×9mm50+2PCS	C  Ø8×30mm28+4PCS	D  Ø4×38mm8+1PCS
E  Ø4×30mm32+2PCS	F  Ø3.5 x 12mm72+2PCS	G  Ø3.5 x 12mm20+2PCS	H  Ø4×25mm4+1PCS
I  Ø4 x 16mm2SETS	J  Ø4 x 16mm4SETS	K  1PC	
L  SAFETY STRAP KIT 1SET	M  CLCRDLDR L300mm6SETS		
N  Ø4×45mm4+1PCS	 1PC		

ASSEMBLY MATERIAL

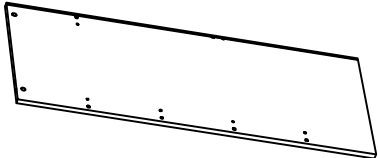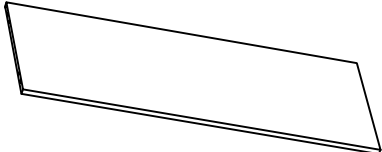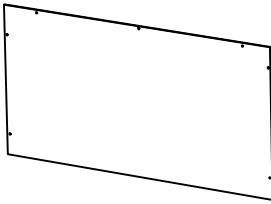
Item no.	Reference Image	QTY.
①		1
②		1
③		1
④		1
⑤		1
⑥		1
⑦		1
⑧		4
⑨		2

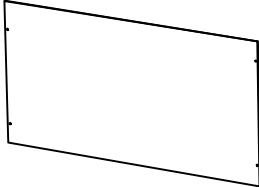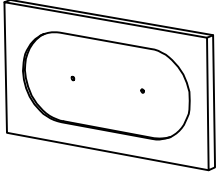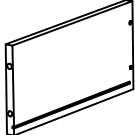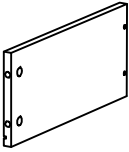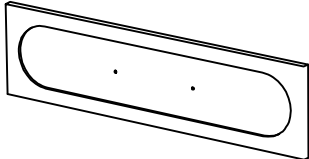Item no.	Reference Image	QTY.
⑩		1
⑪		2
⑫		2
⑮		2
⑯		2
⑰		6
⑱		6
⑲		2
⑳		4


ASSEMBLY MATERIAL

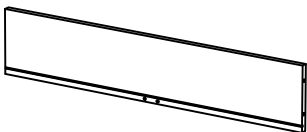Item no.	Reference Image	QTY.
21		4
22		4
23		4


How to use the cam lock system

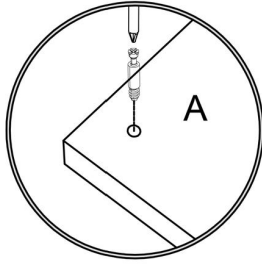


1. Screw cam bolt into panel

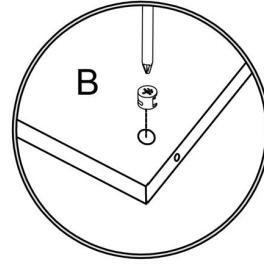


2. Push cam into panel - arrow feature on cam top points to panel edge

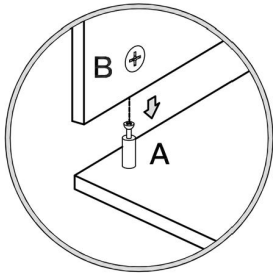

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)




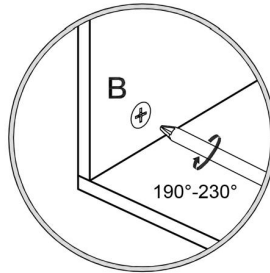


4. Rotate cam(s) clockwise 190°-230° to lock panels together

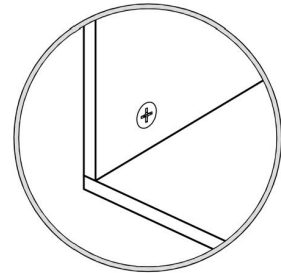

5. Panels should be tight against each other and connection should be rigid


Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

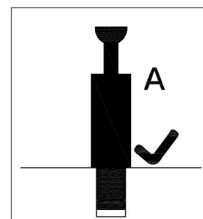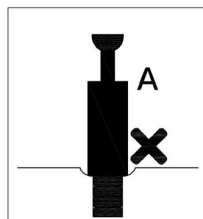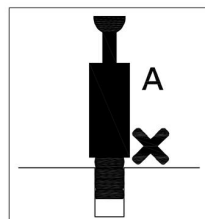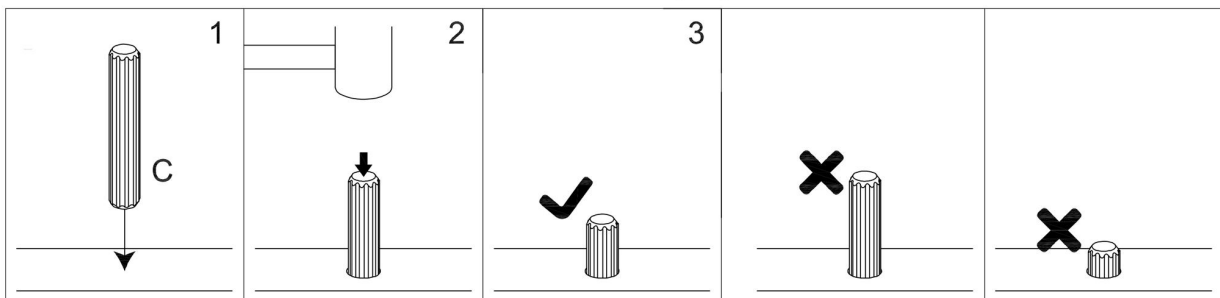





WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Step 1

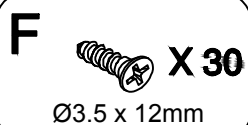




First secure the two screws with pre-drilled holes to ensure the rail is properly positioned.
Then, install the first reinforcement screw (which has no pre-drilled hole) to enhance overall stability.

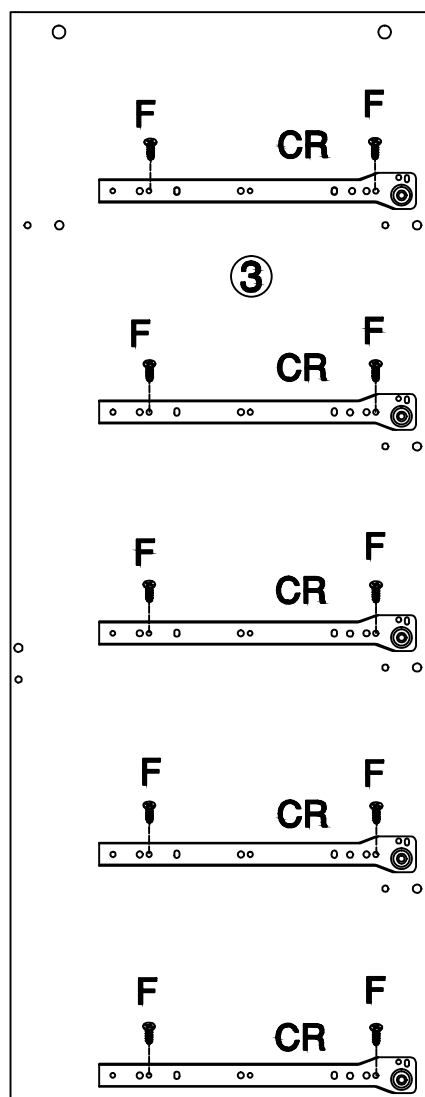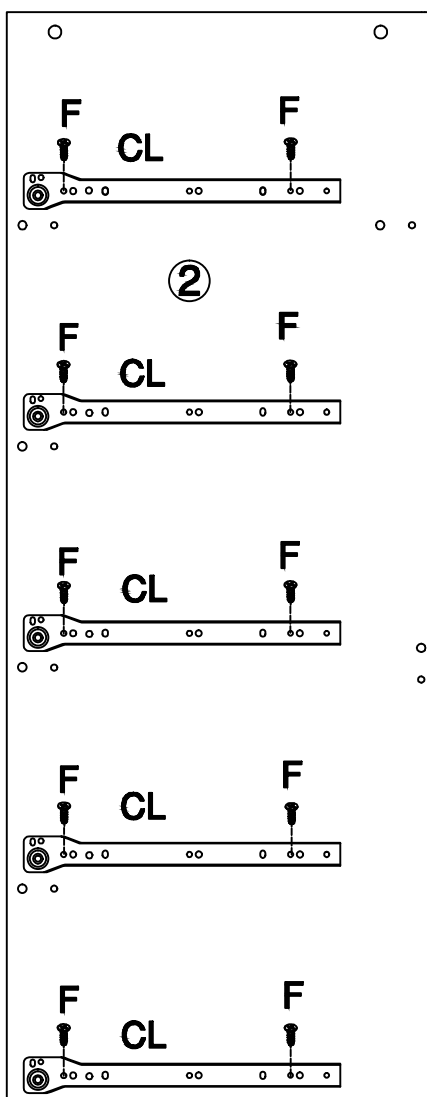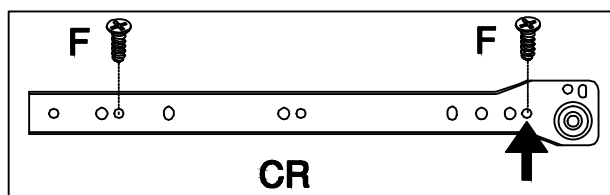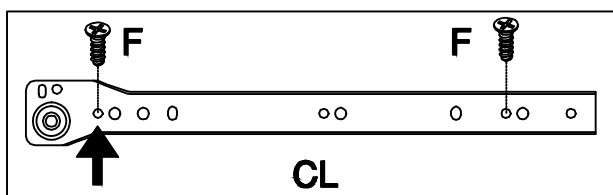


Step 2

F  **X 6**
Ø3.5 x 12mm

First secure the two screws with pre-drilled holes to ensure the rail is properly positioned.
Then, install the first reinforcement screw (which has no pre-drilled hole) to enhance overall stability.

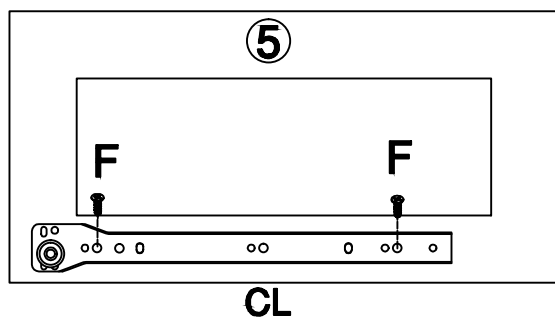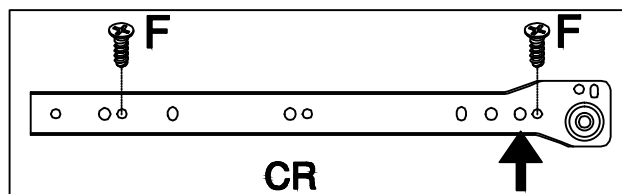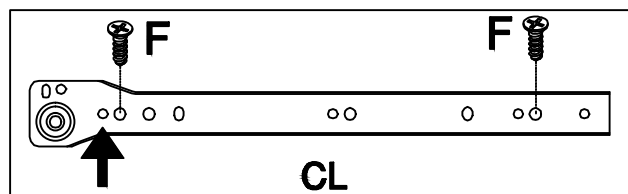


180°


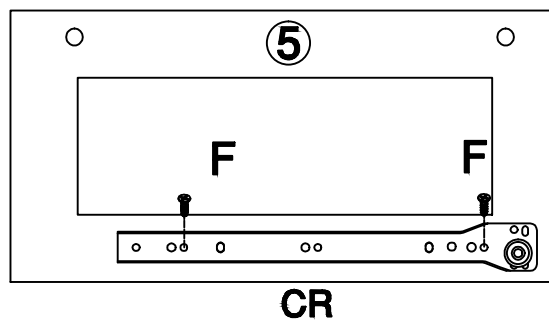


Step 3





A  **X 6**

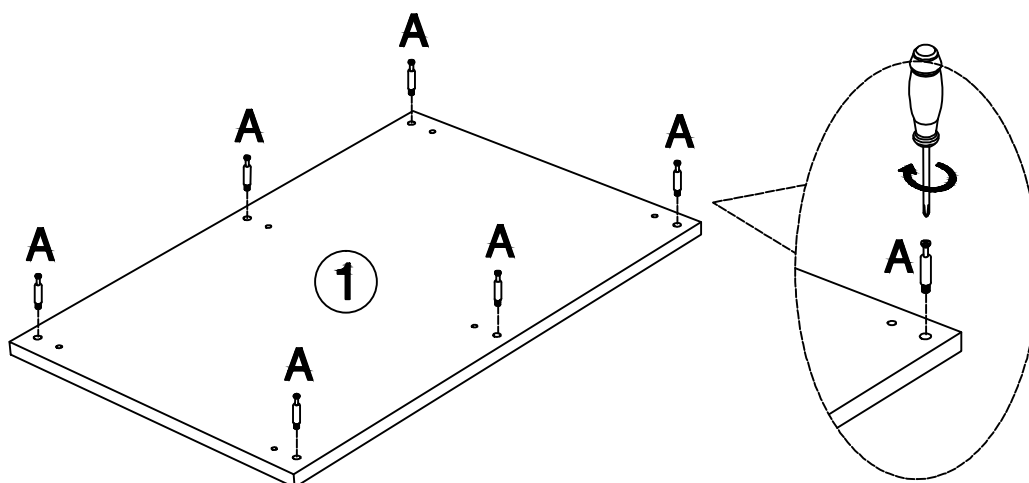





Step 4

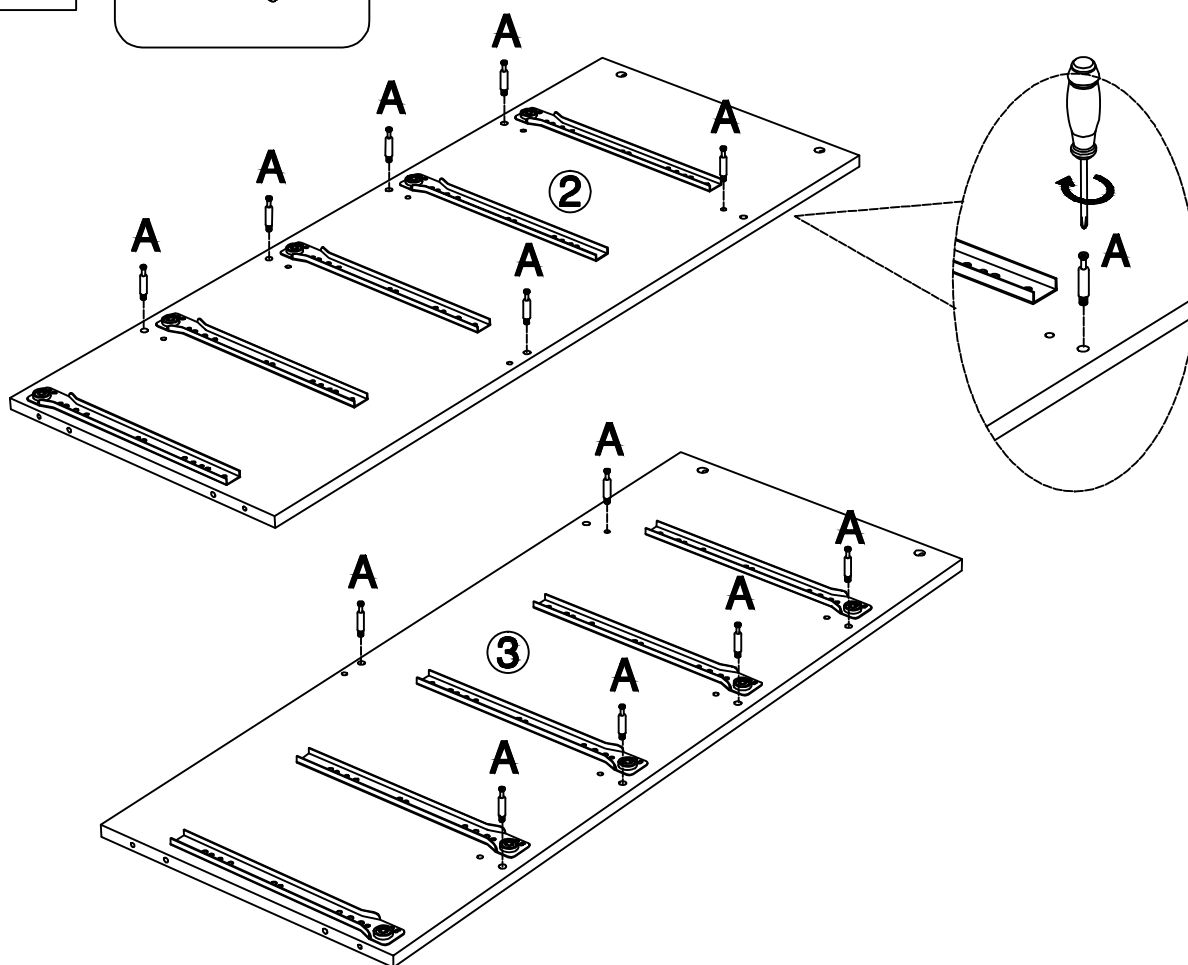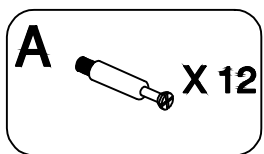




Step 5

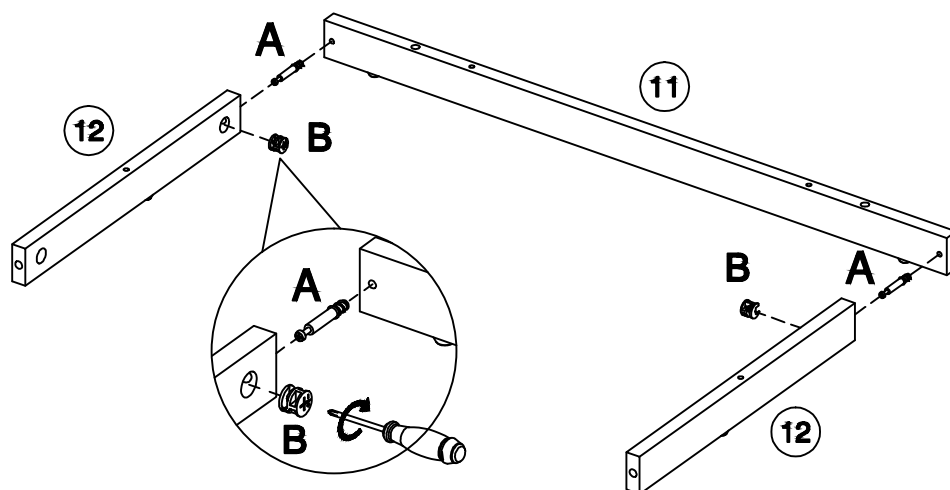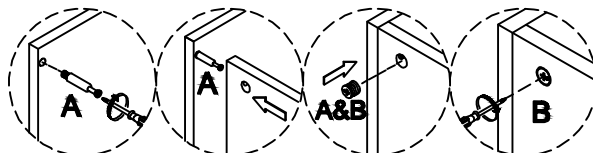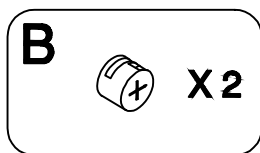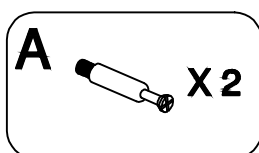

Step 6

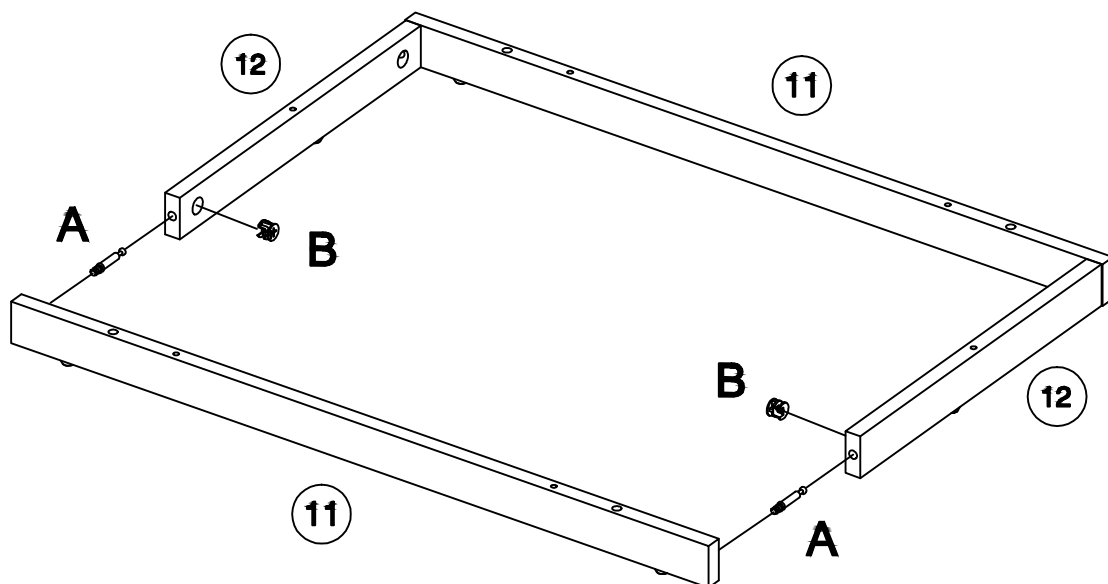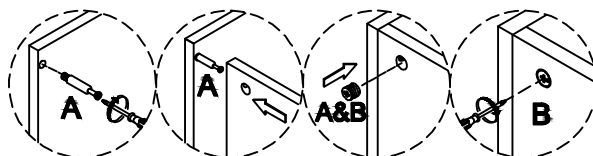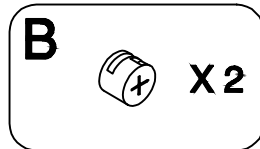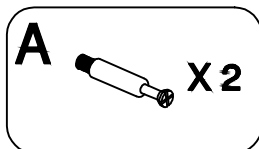


Step 7

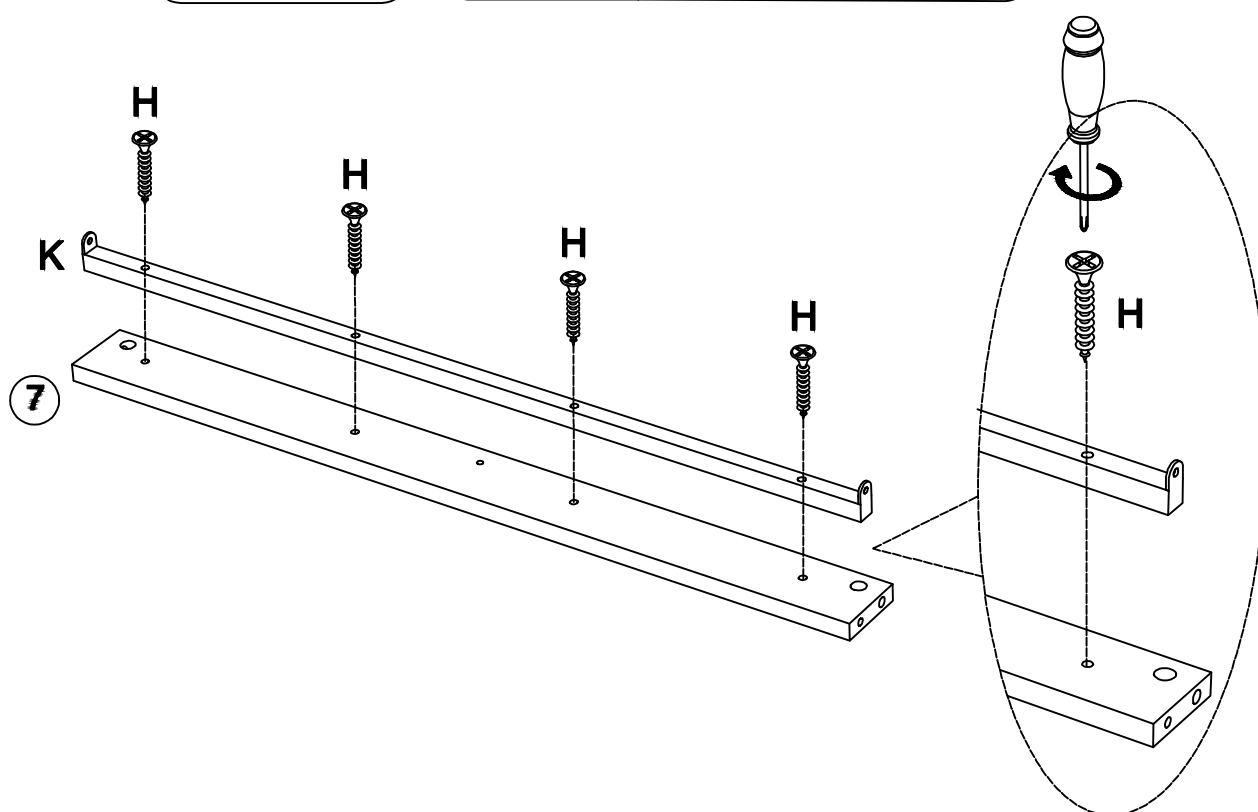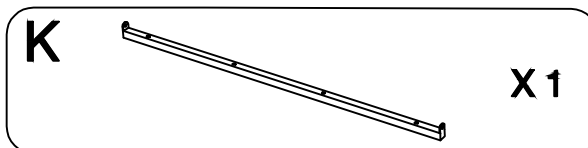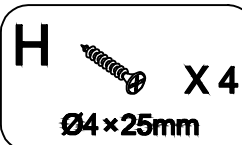

Step 8

D  X 2
Ø4×38mm



C  X 2
Ø8×30mm

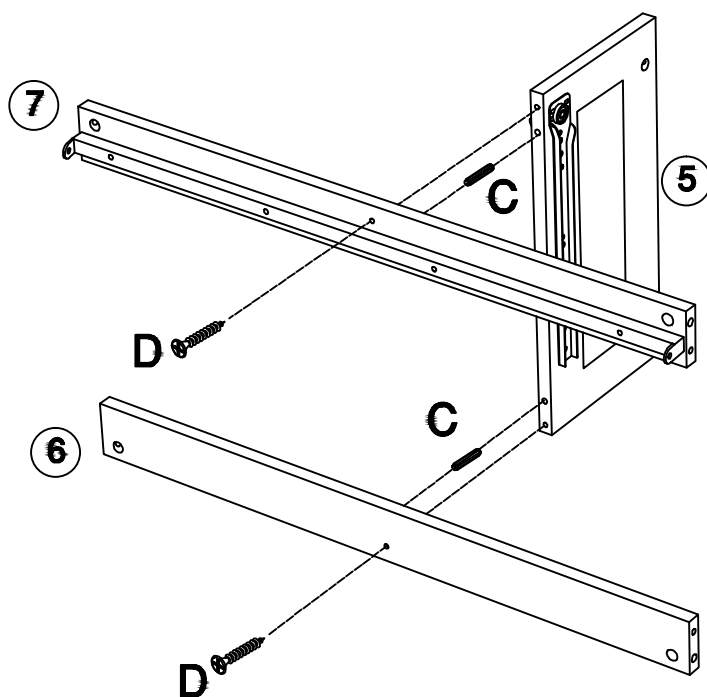

Step 9

B  X 2

C  X 2
Ø8×30mm

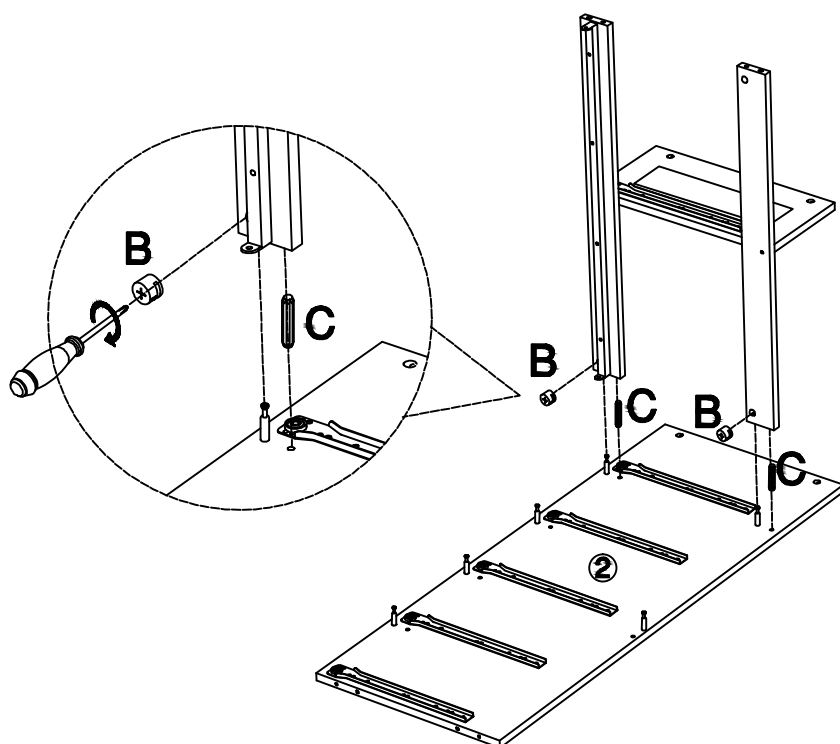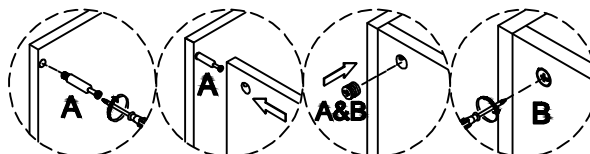

Step 10

B









X 4

C



X 4

Ø8×30mm

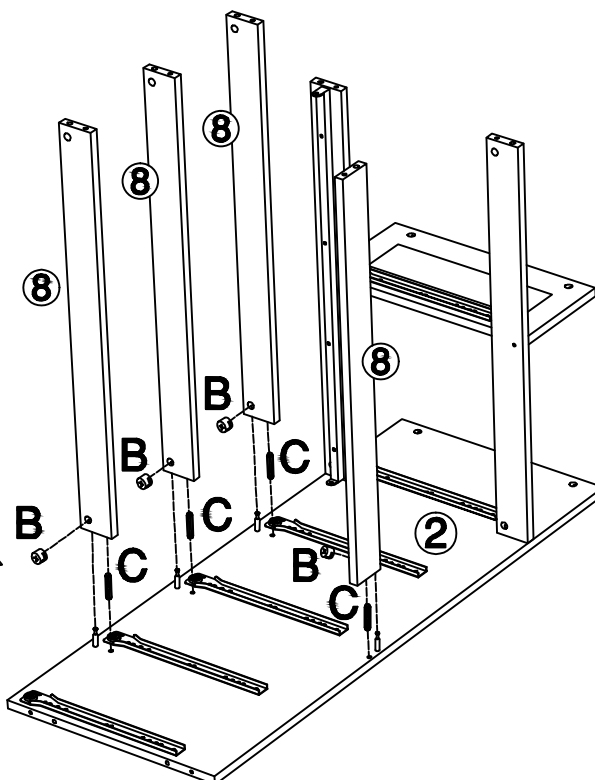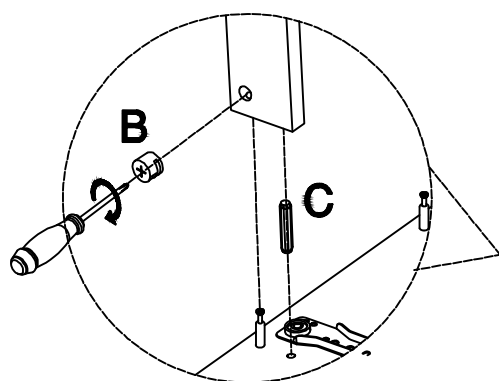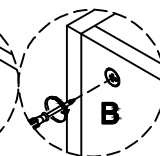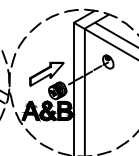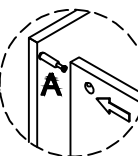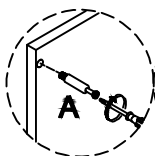

Step 11

B









X 6

C



X 6

Ø8×30mm

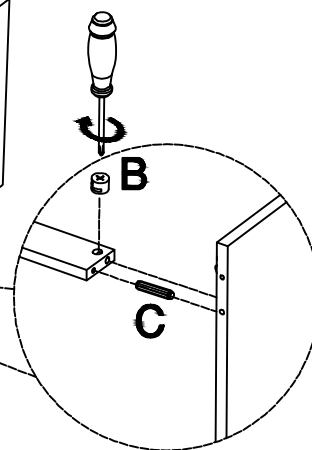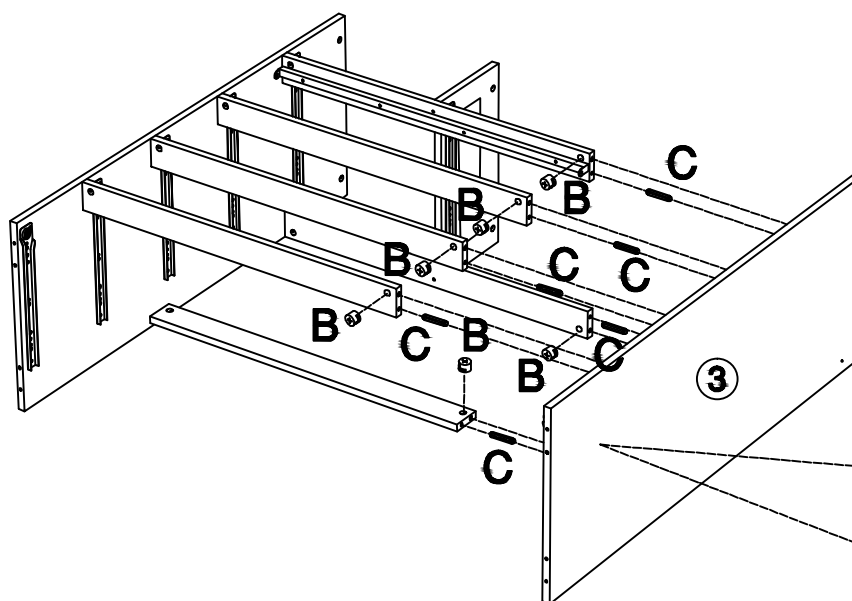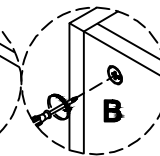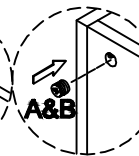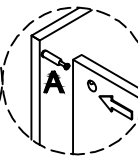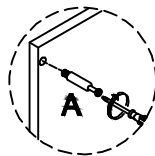


Step 12

N X 4
Ø4×45mm

C X 4
Ø8×30mm


G X 2
Ø3×12mm

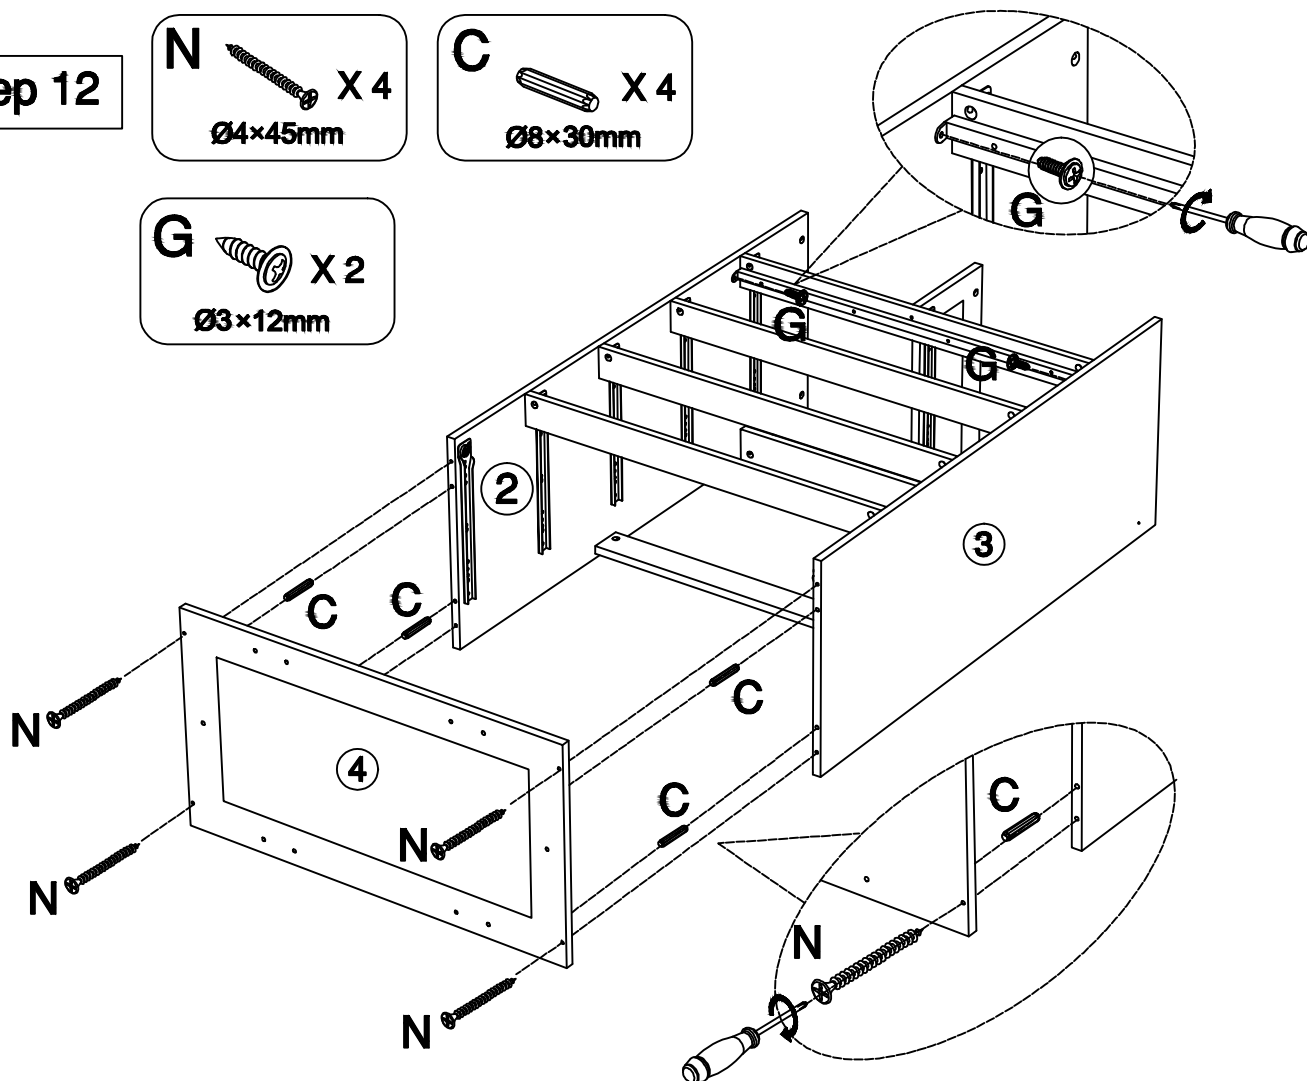







Step 13

D X 6
Ø4×38mm

C X 4
Ø8×30mm

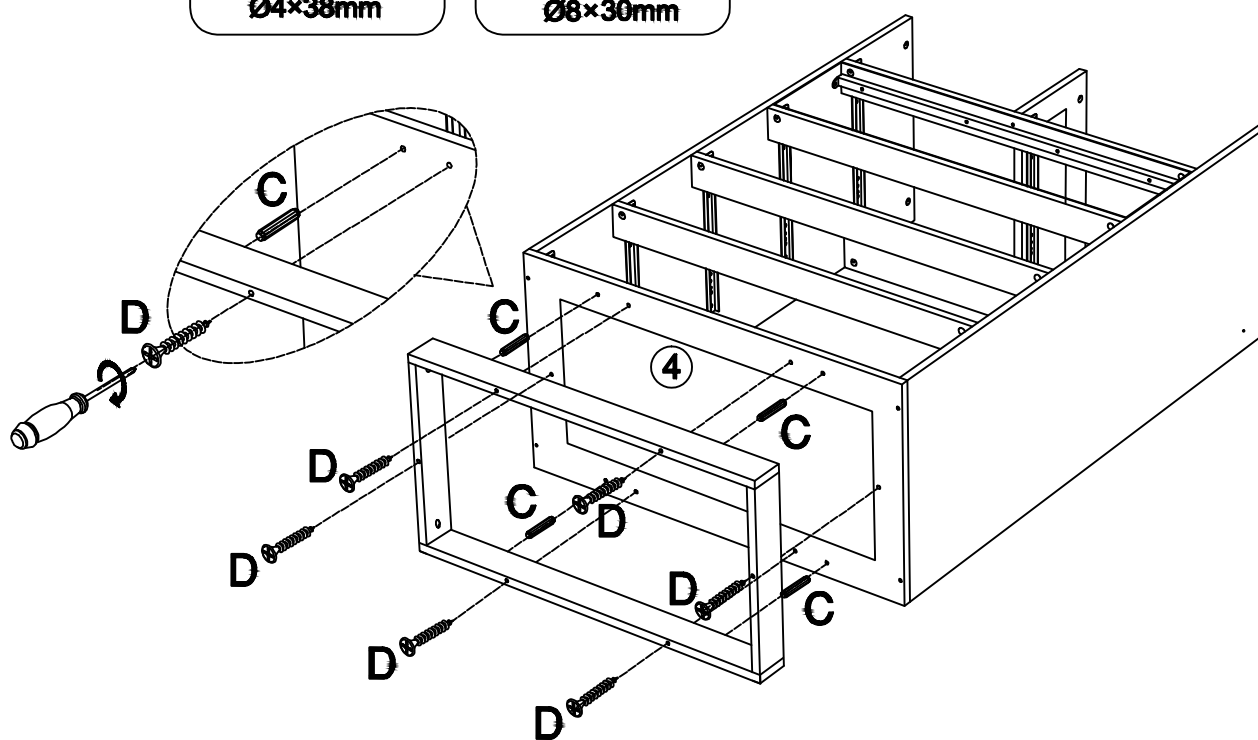


Step 14

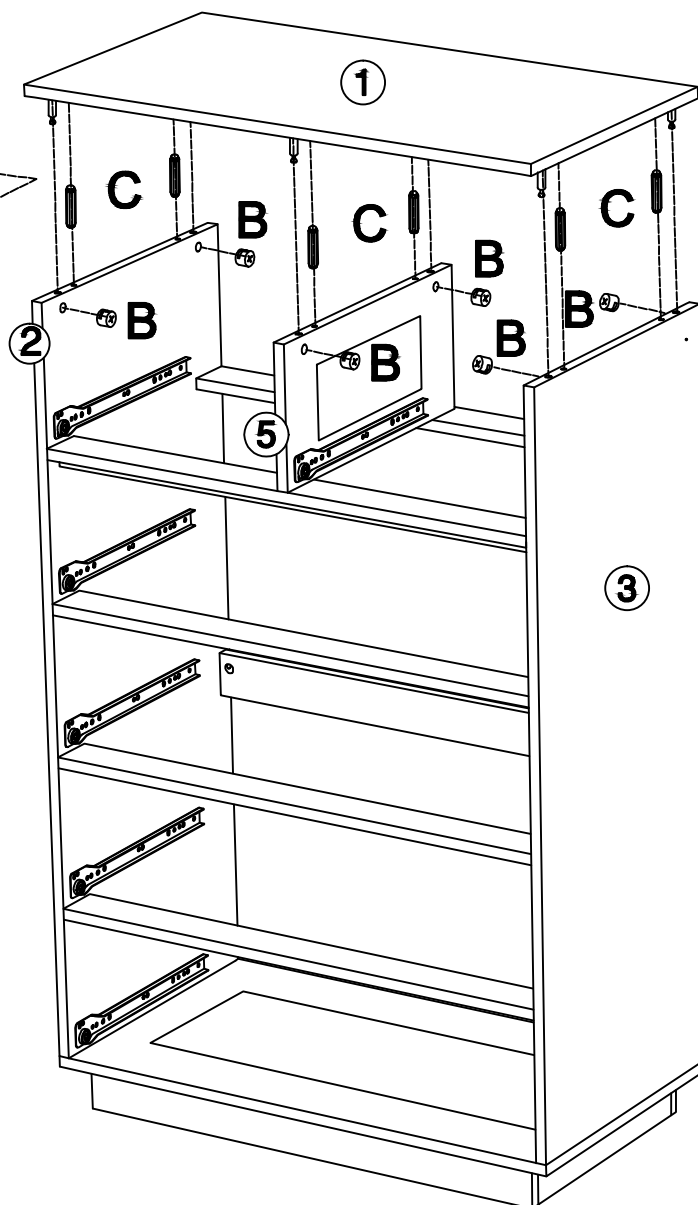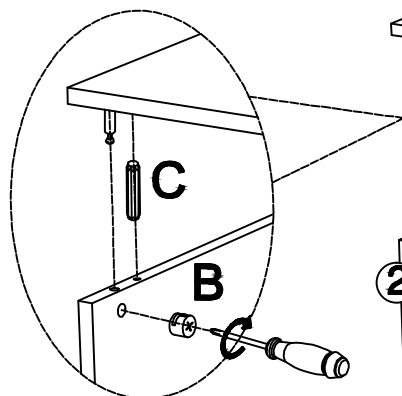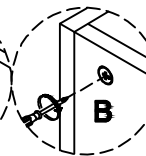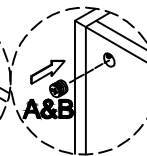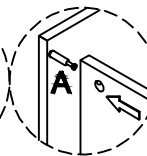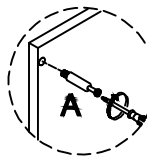B**X 6****C****X 6****Ø8×30mm**

Step 15

G  **x18**
Ø3.5 x 12mm




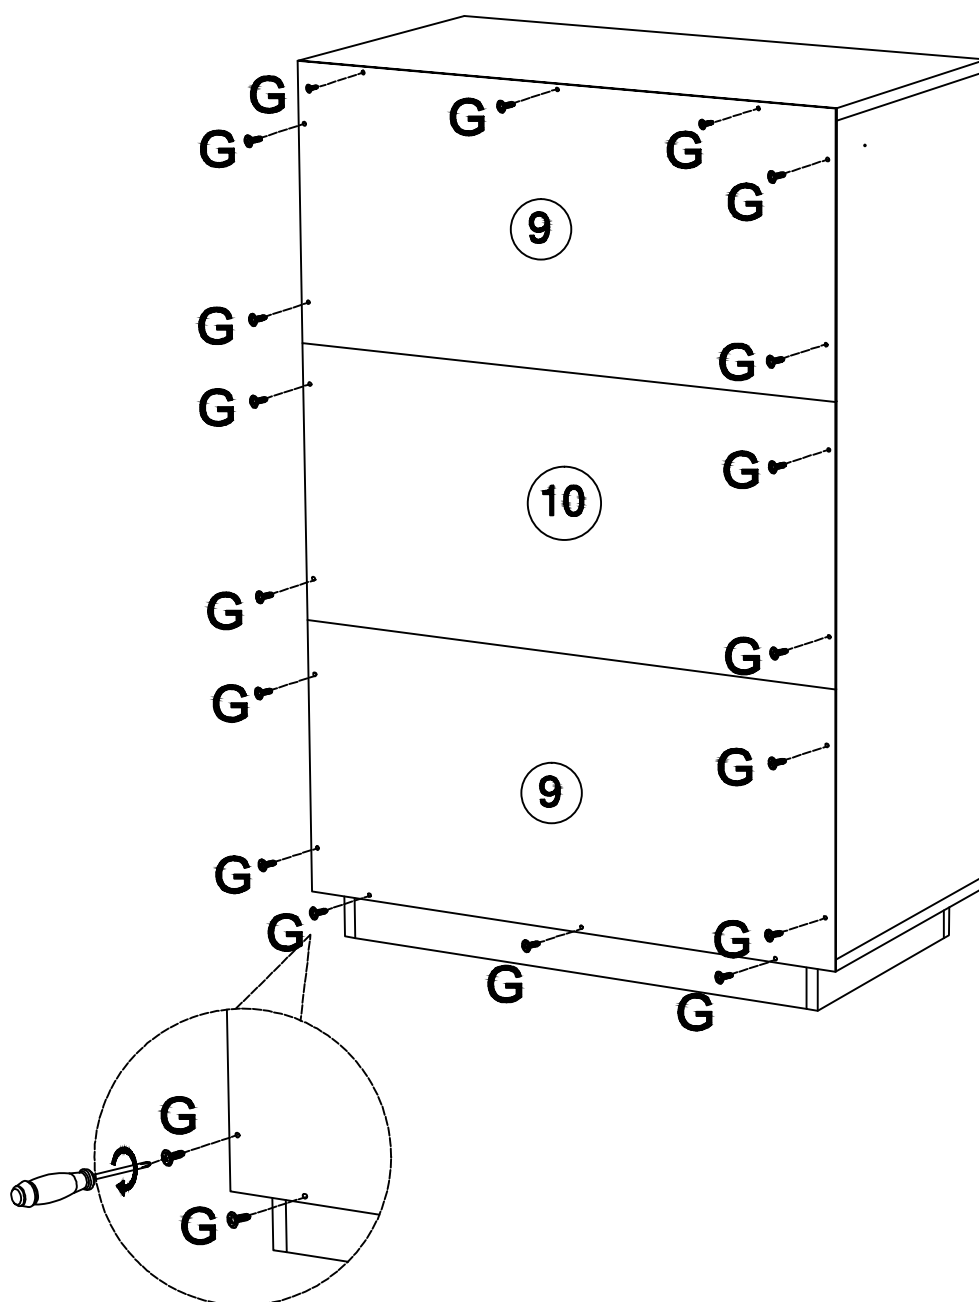


Step 16

A  X 8

B  X 8


E  X 8
Ø4×30mm

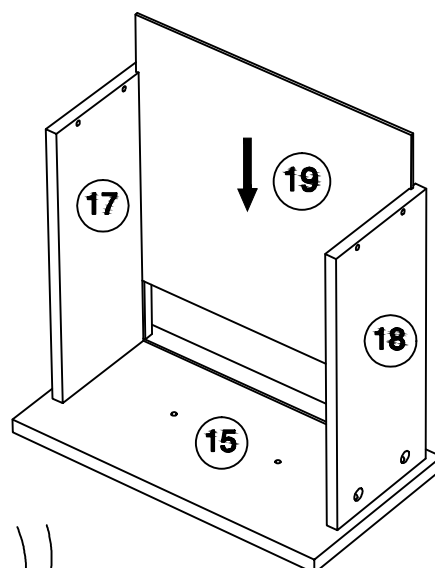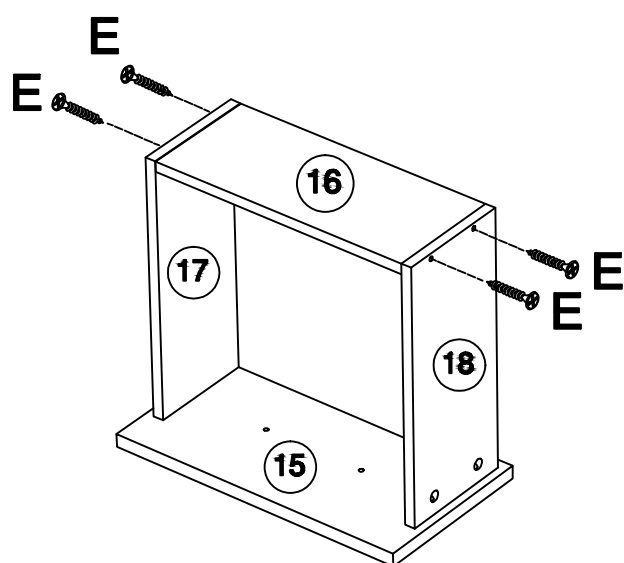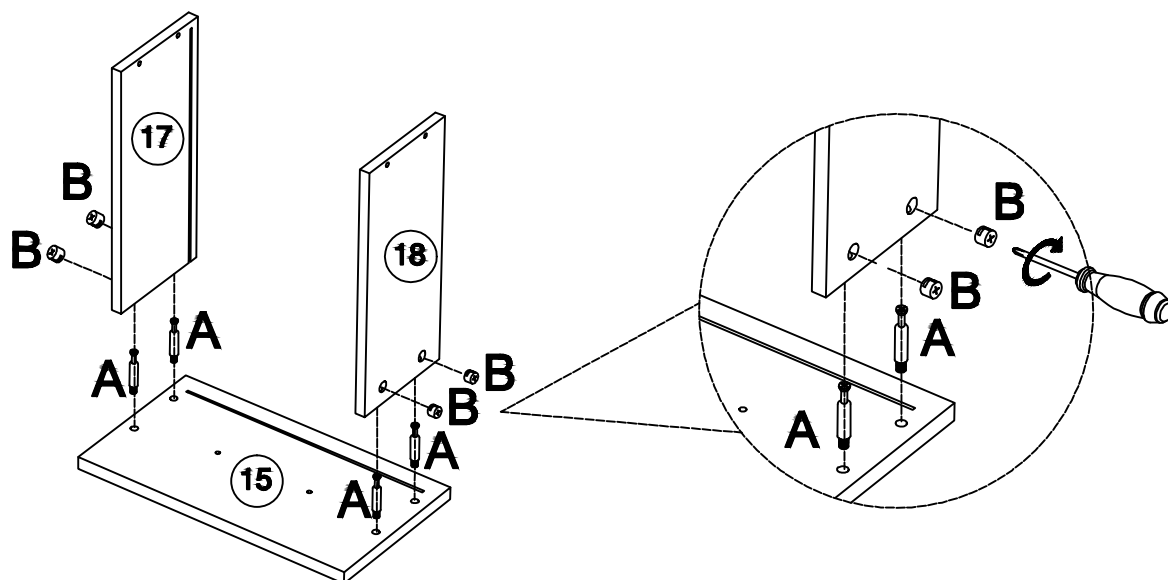
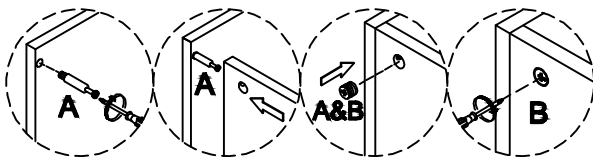


Step 17

F  **X 12**
Ø3.5 x 12mm

I  **X 2**


M  **X 2**
DR DL


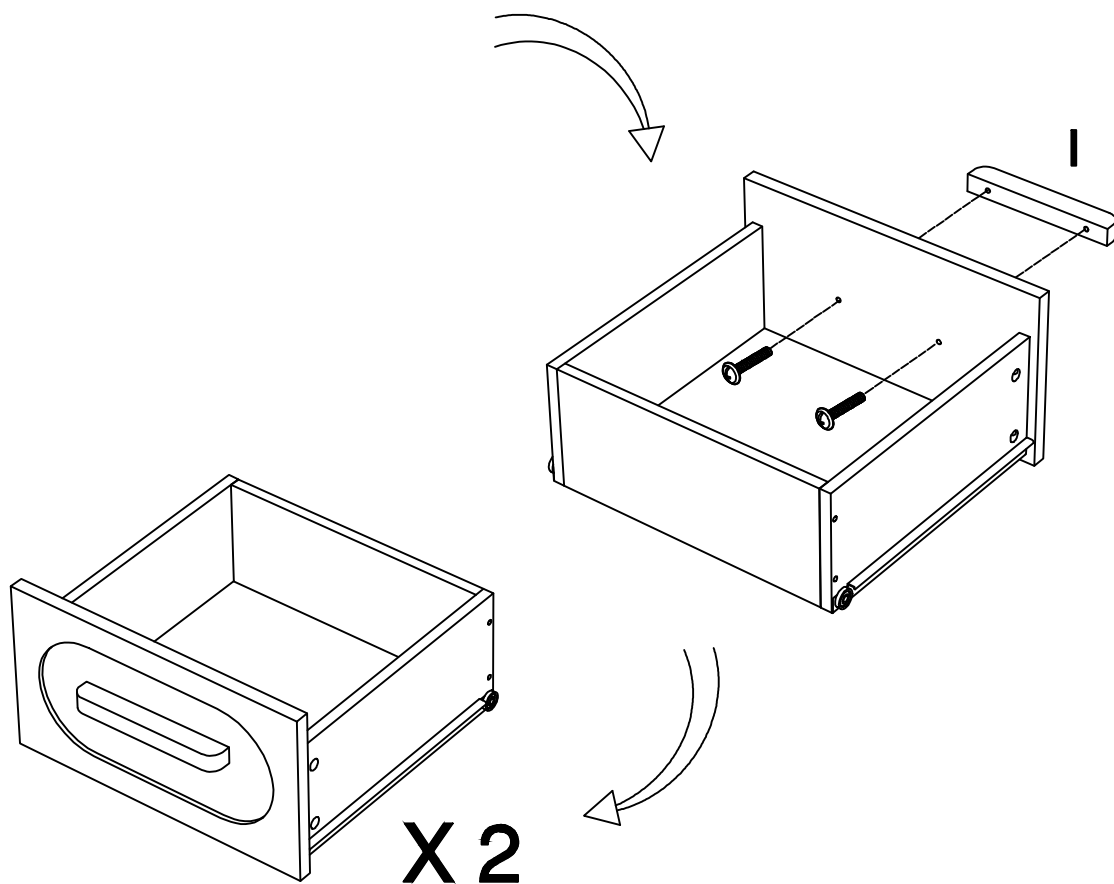
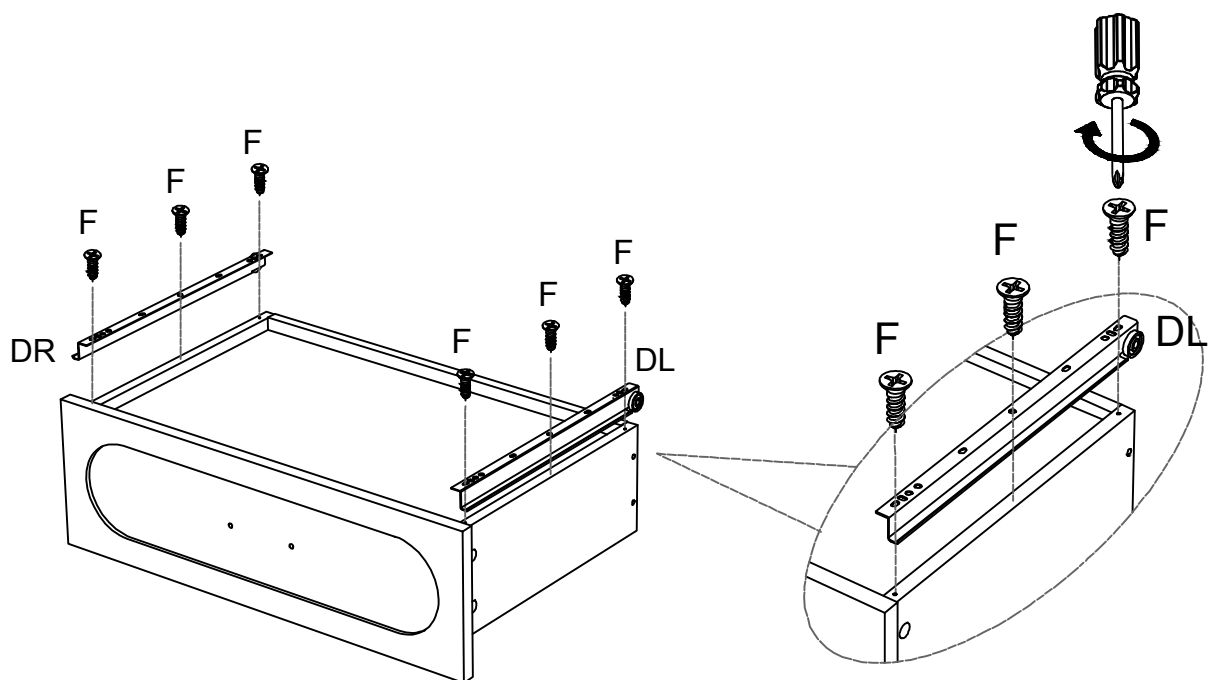


Step 18

A  X 20

B  X 20



E  X 24
Ø4×30mm

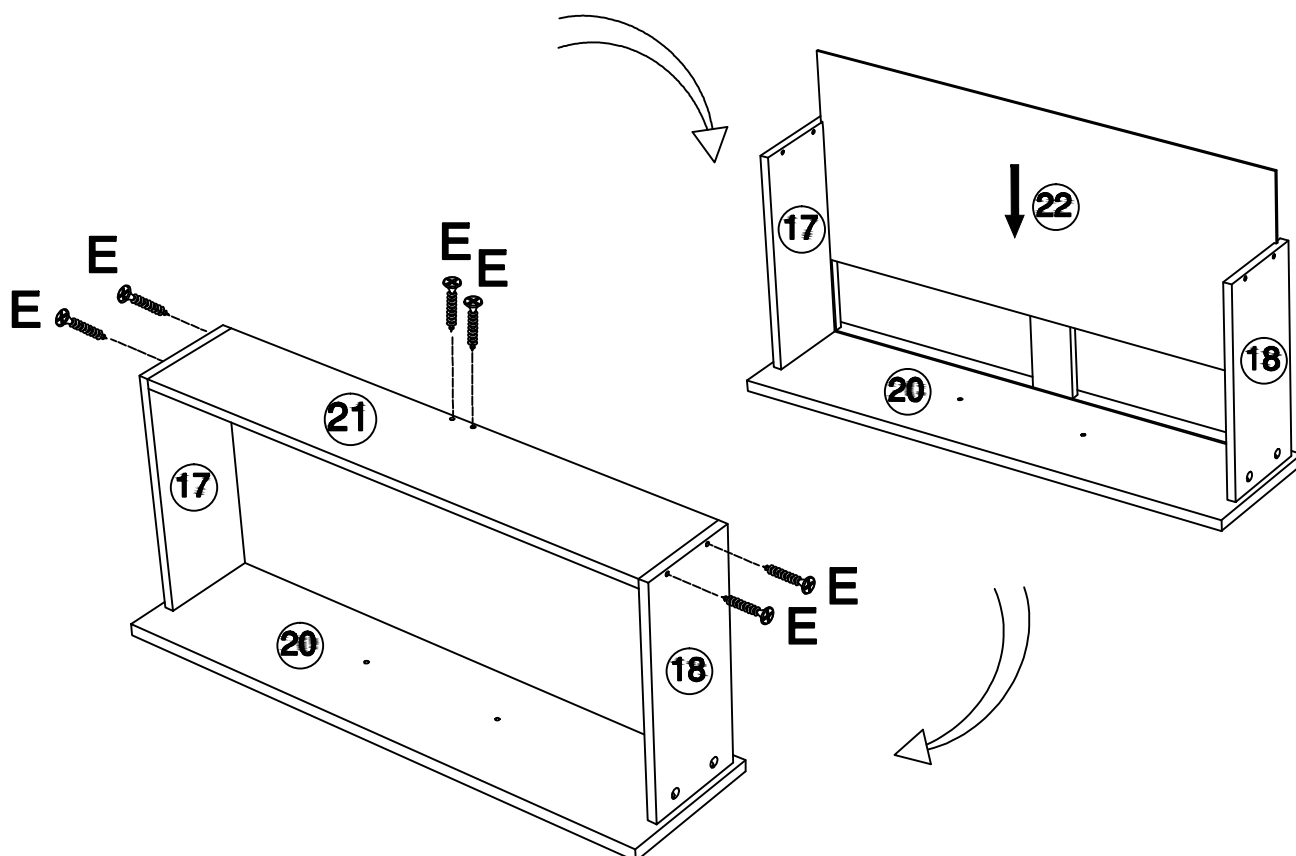
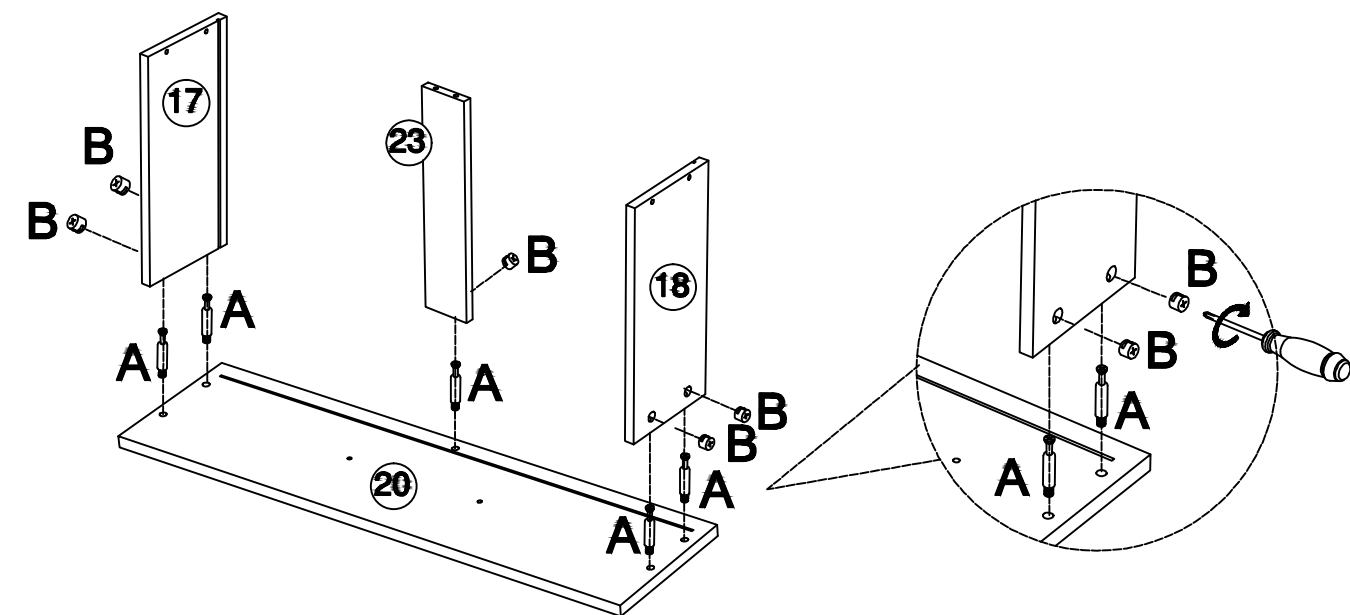
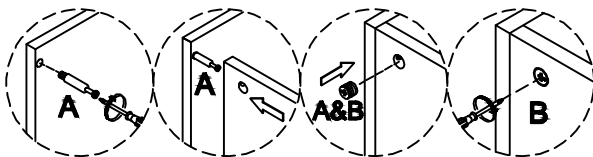


Step 19

F  **X 24**
Ø3.5 x 12mm





J  **X 4**

M  **DR**  **DL** **X 4**

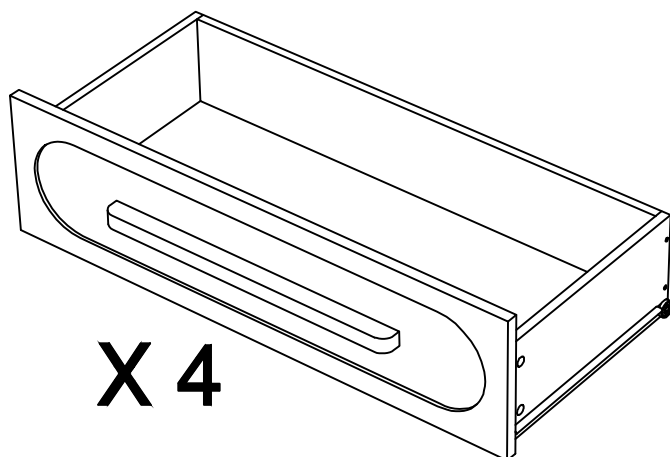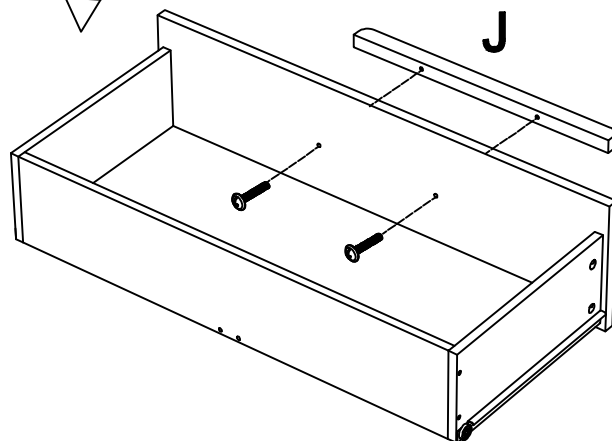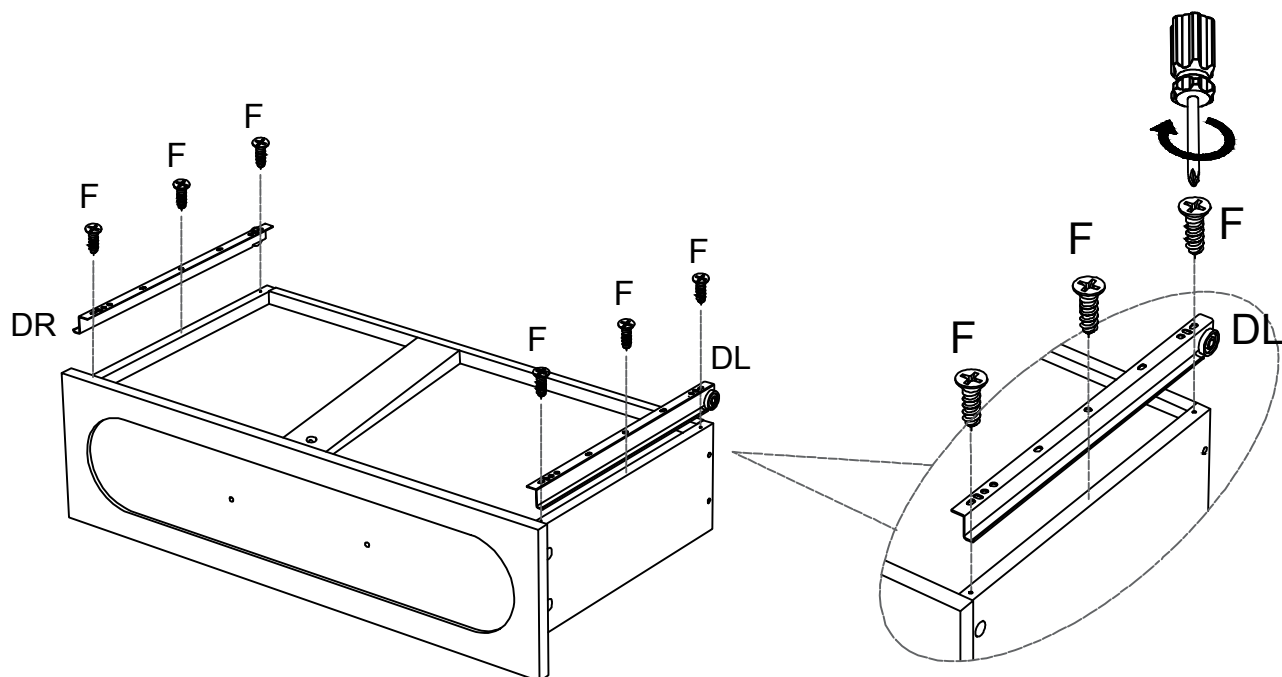

X 4

Step 20

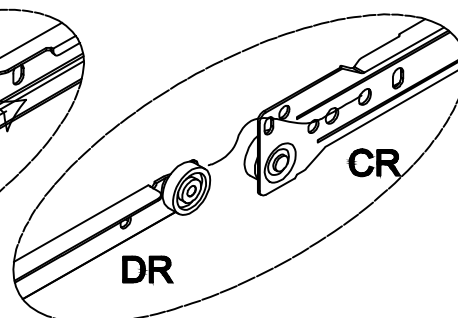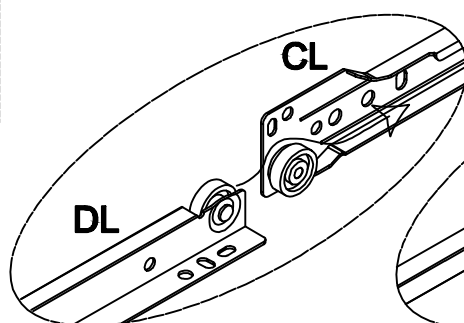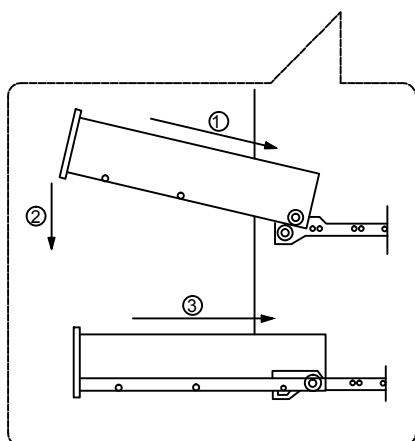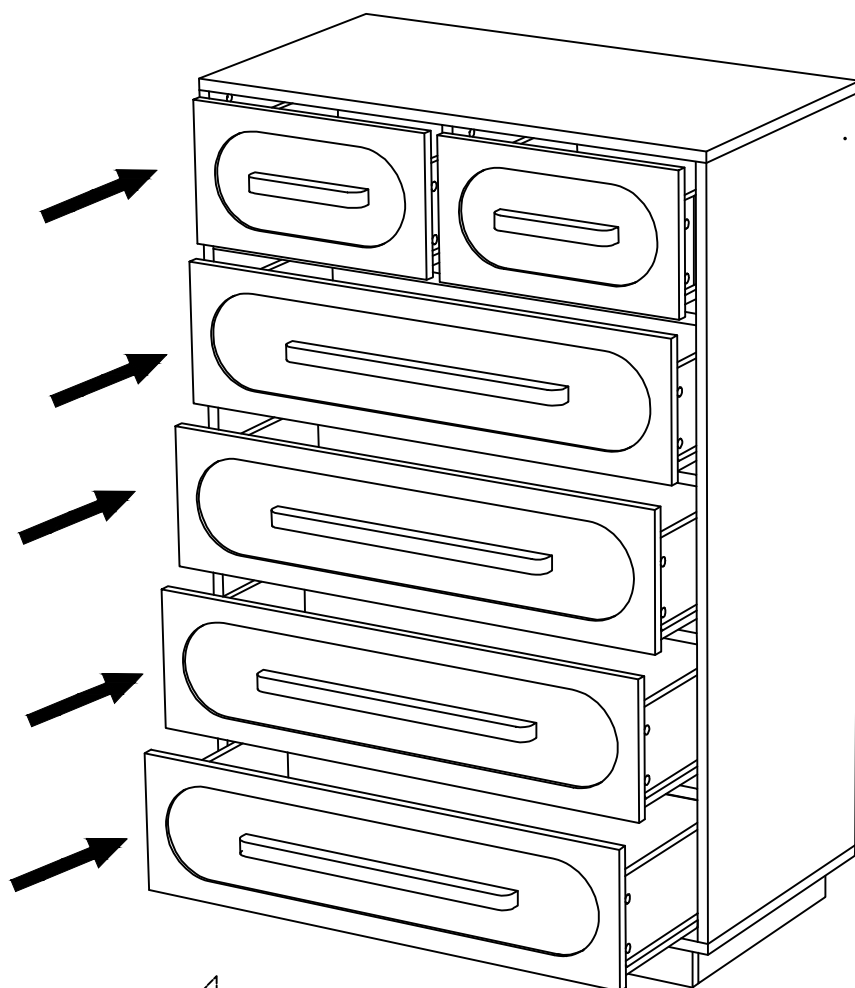

Step 21

