

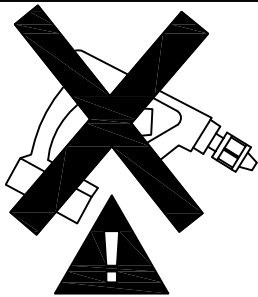
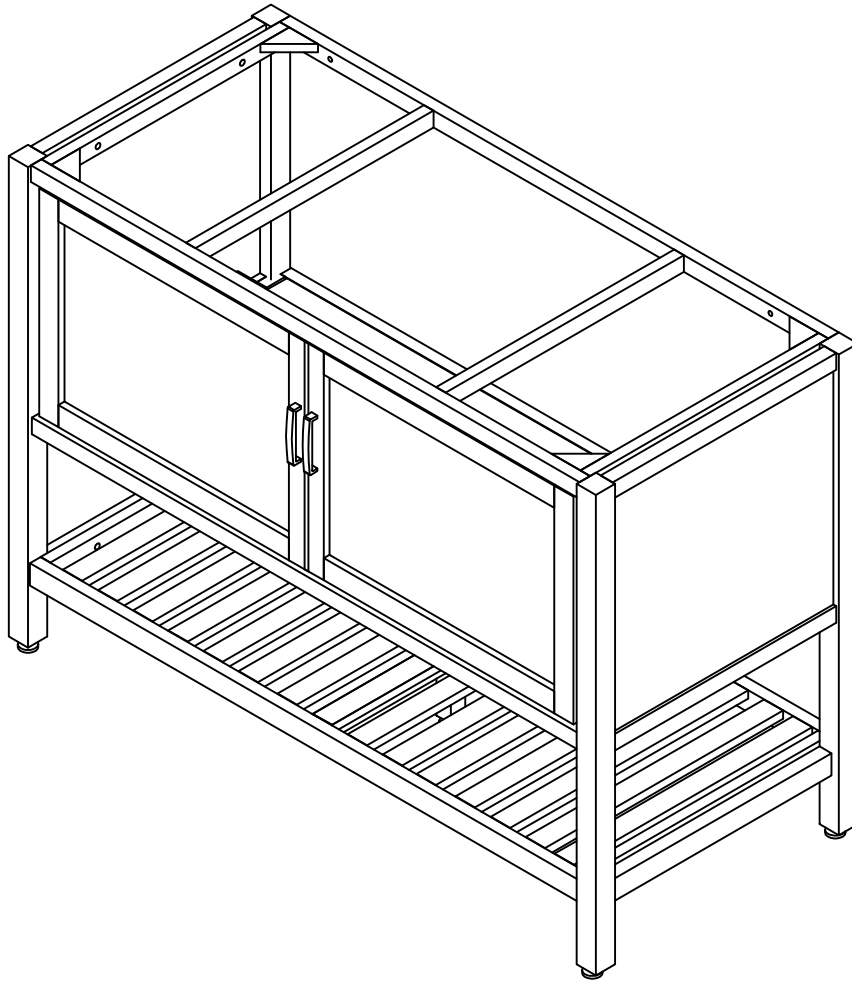


ASSEMBLY INSTRUCTION




48" Vanity




. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

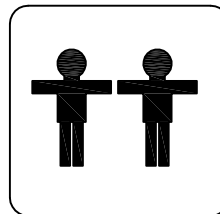



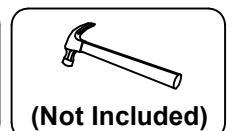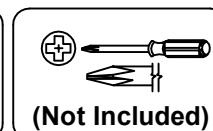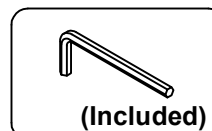



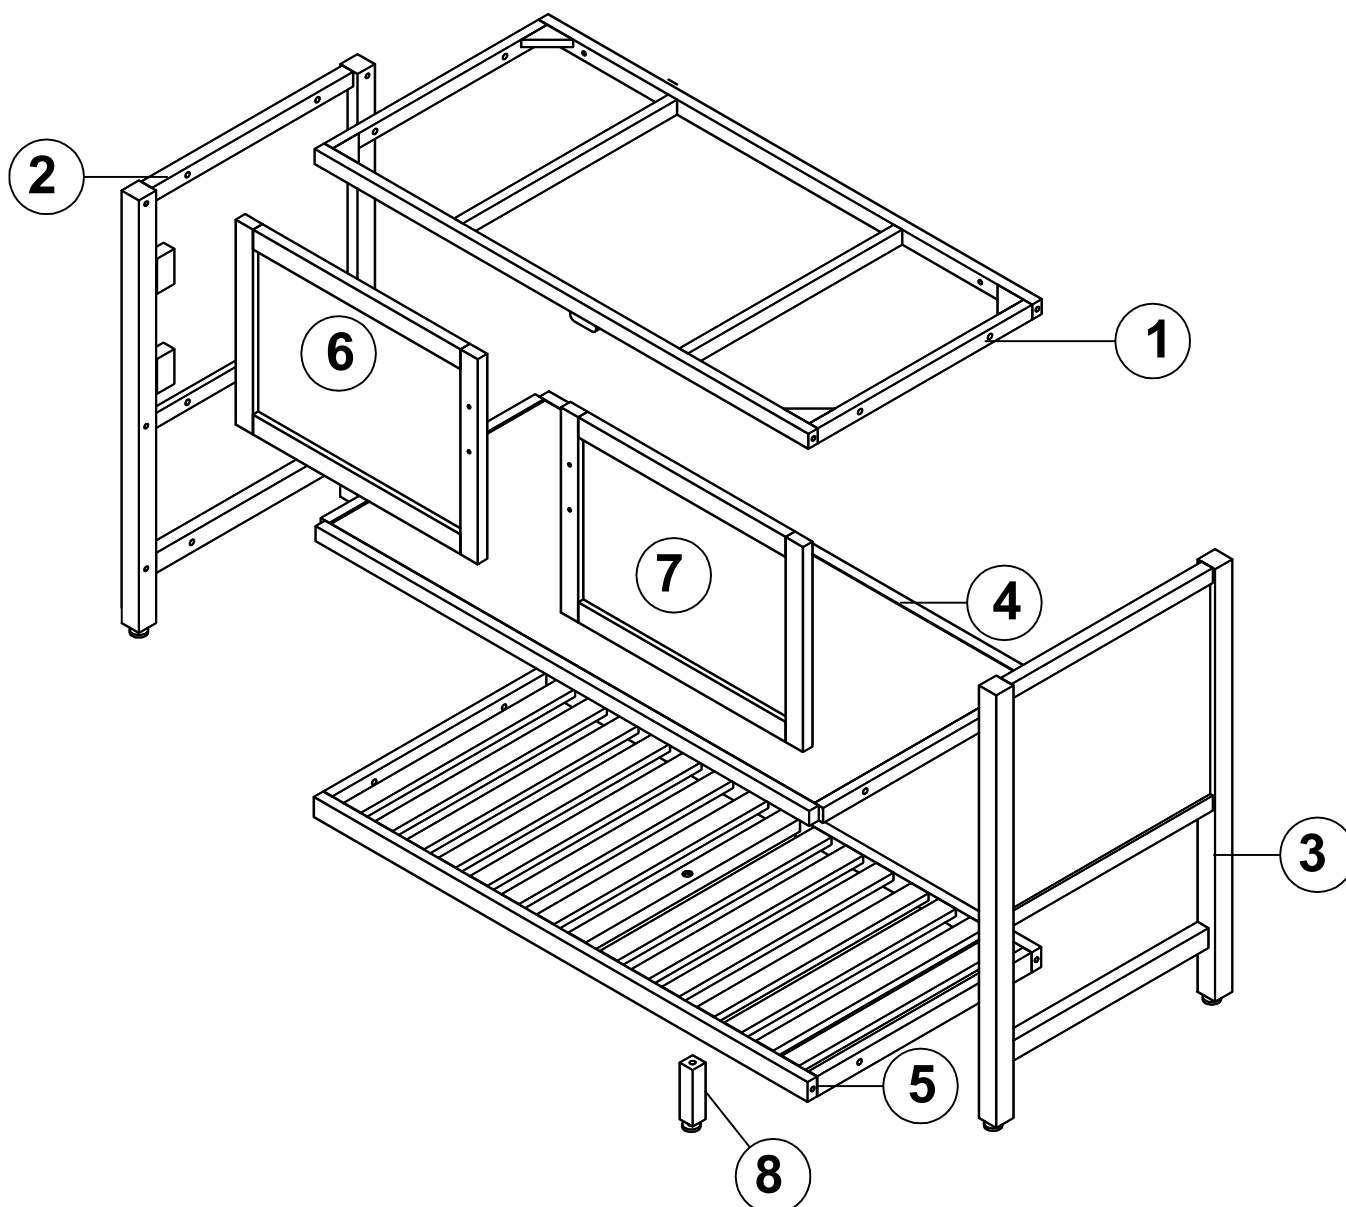



Tools Required



Part list - 48" Vanity




Identifying the hardware-Identify the hardware using the illustrations below

A  06 Ø8*30mm Wood Dowel	B  13 M6*45mm Bolt	C  12 Ø6*16mm Washer
D  04	E  24 3.5*15mm Screw	F  02
G  04 4*25mm Screw	H  05	I  02 4*50mm Screw
J  01		

Step 01

A  **06**
Ø8*30mm Wood Dowel


(Not Included) **01**

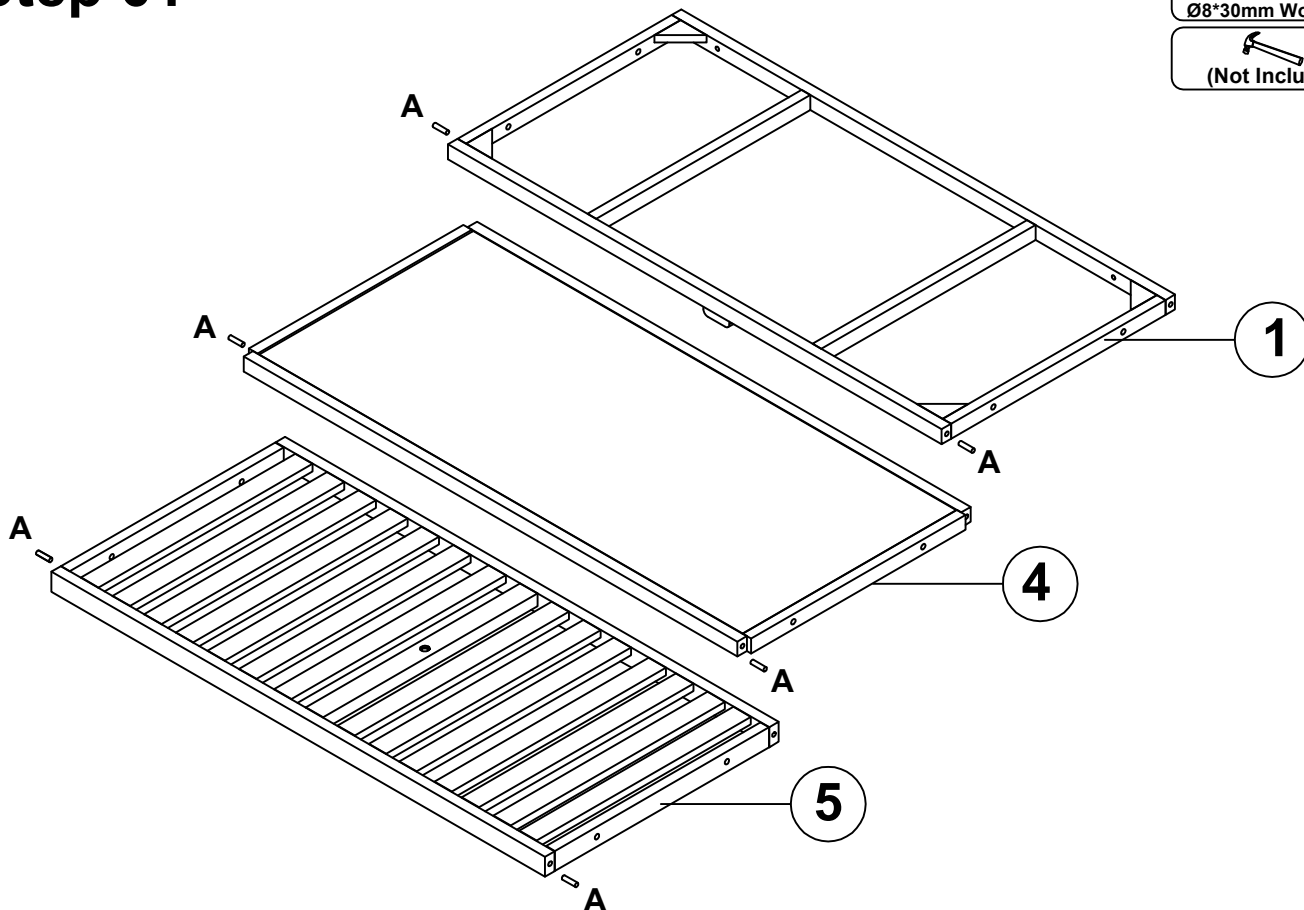



Step 02

B  **07**
M6*45mm Bolt


C  **07**
Ø6*16mm Washer

J  **01**

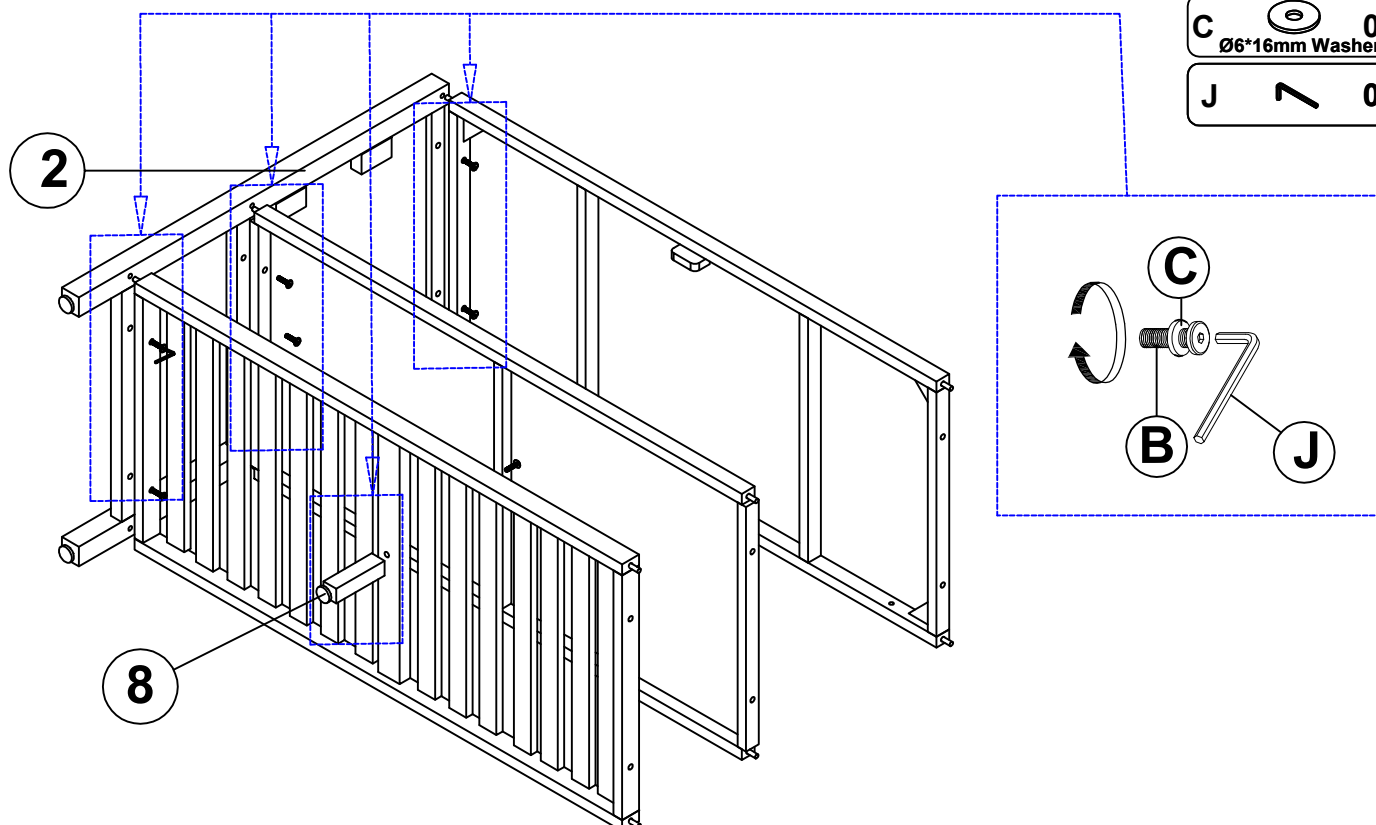


Note: Do not tighten bolts firmly at this time

Step 03

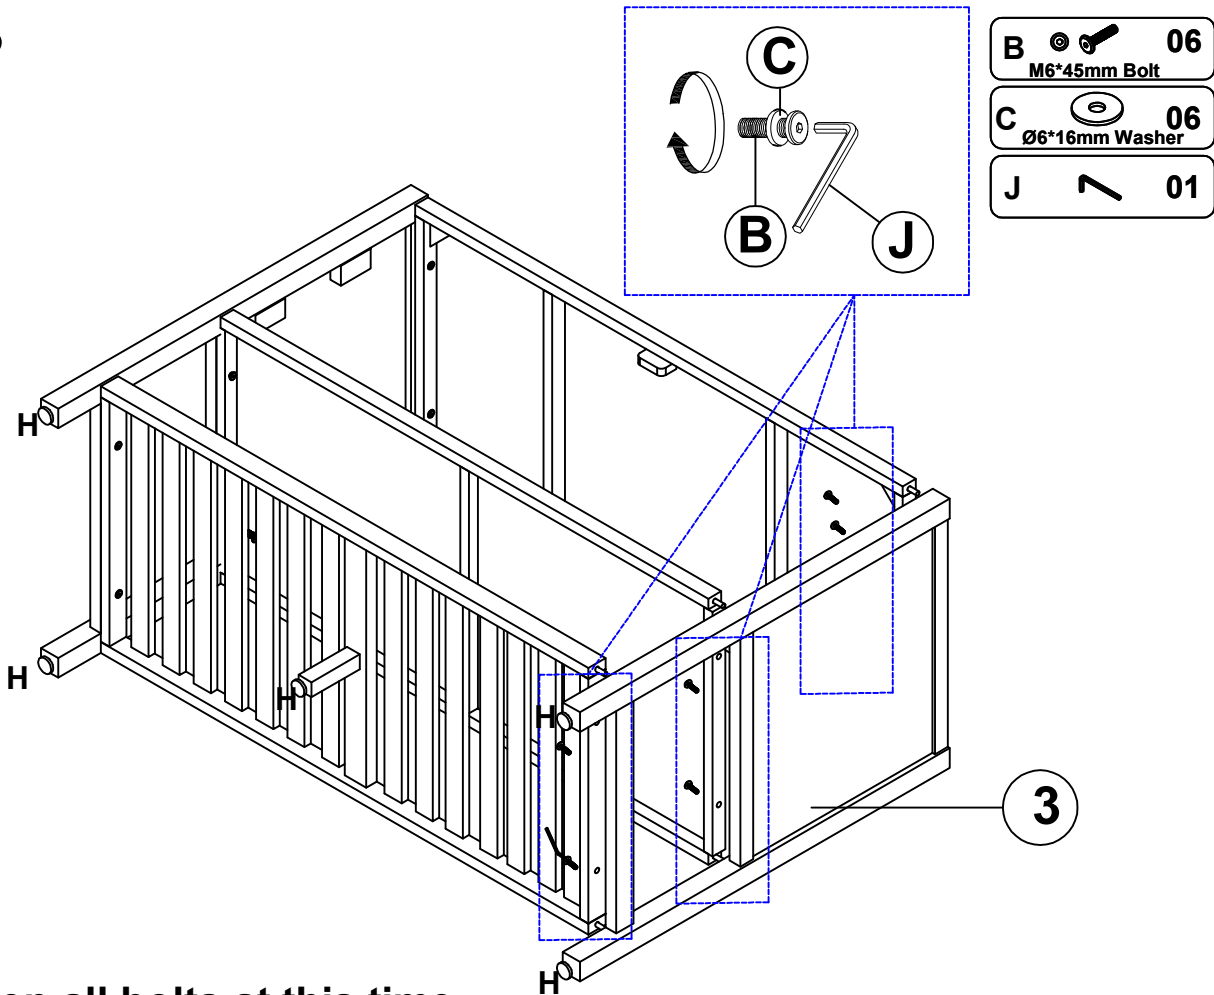


Note: Tighten all bolts at this time

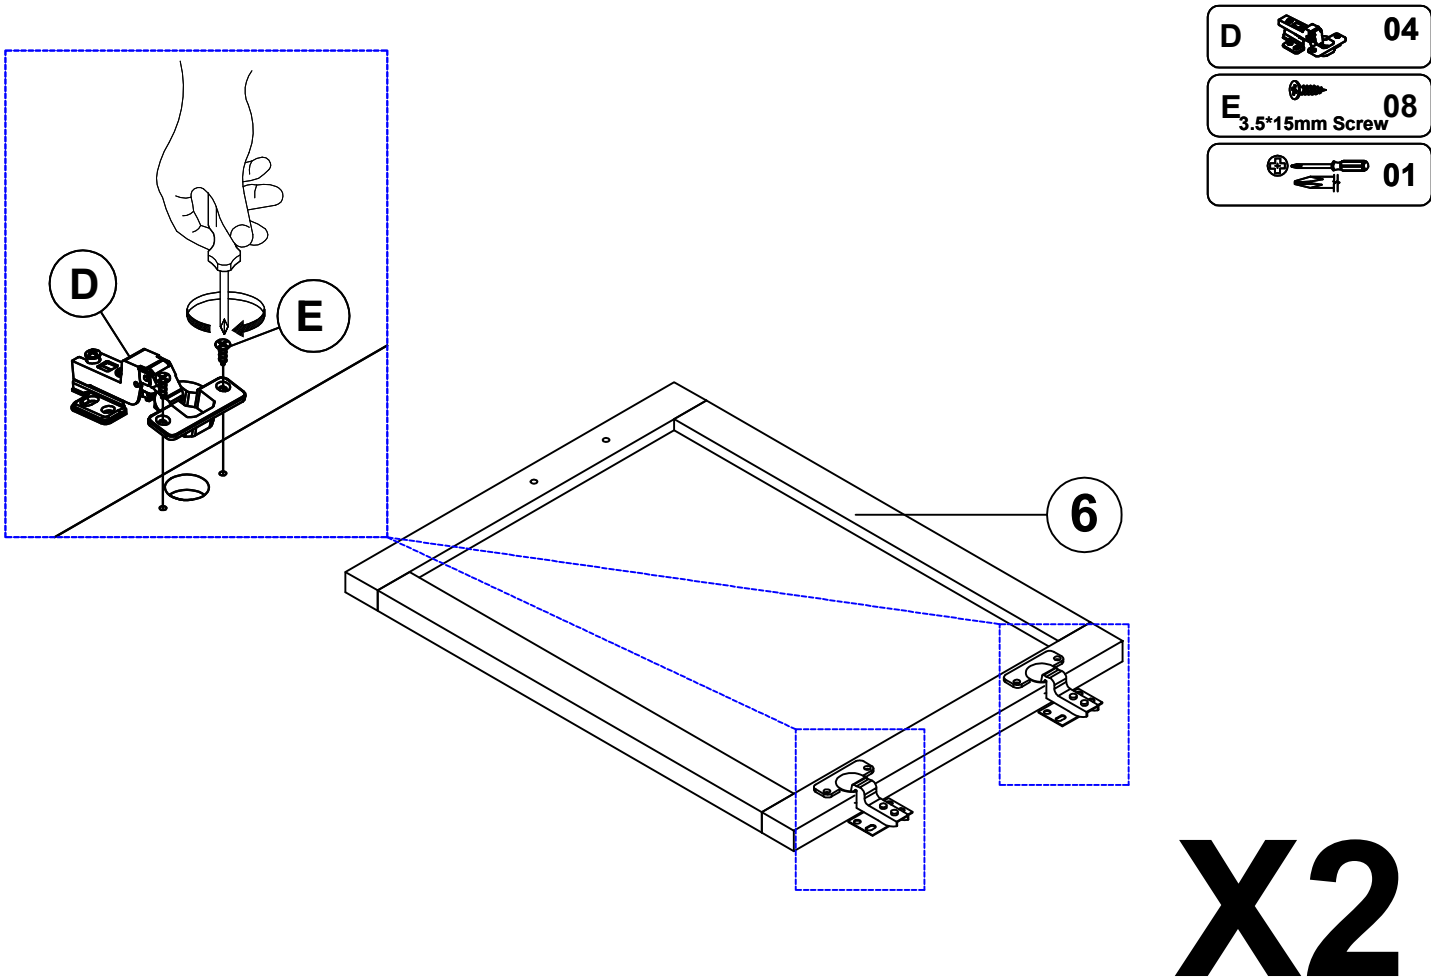

E 16
3.5*15mm Screw


01

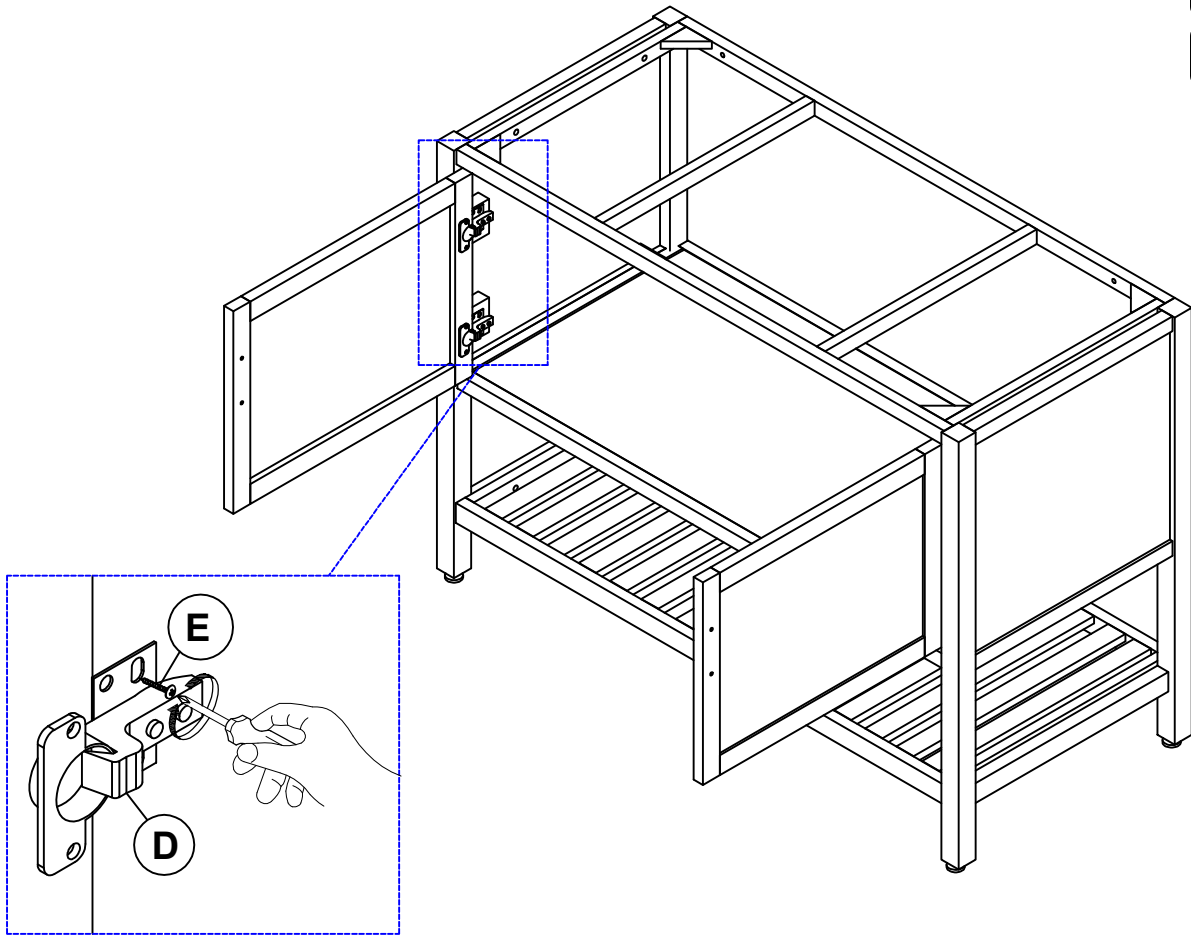

F 02

G 04
4*25mm Screw

01

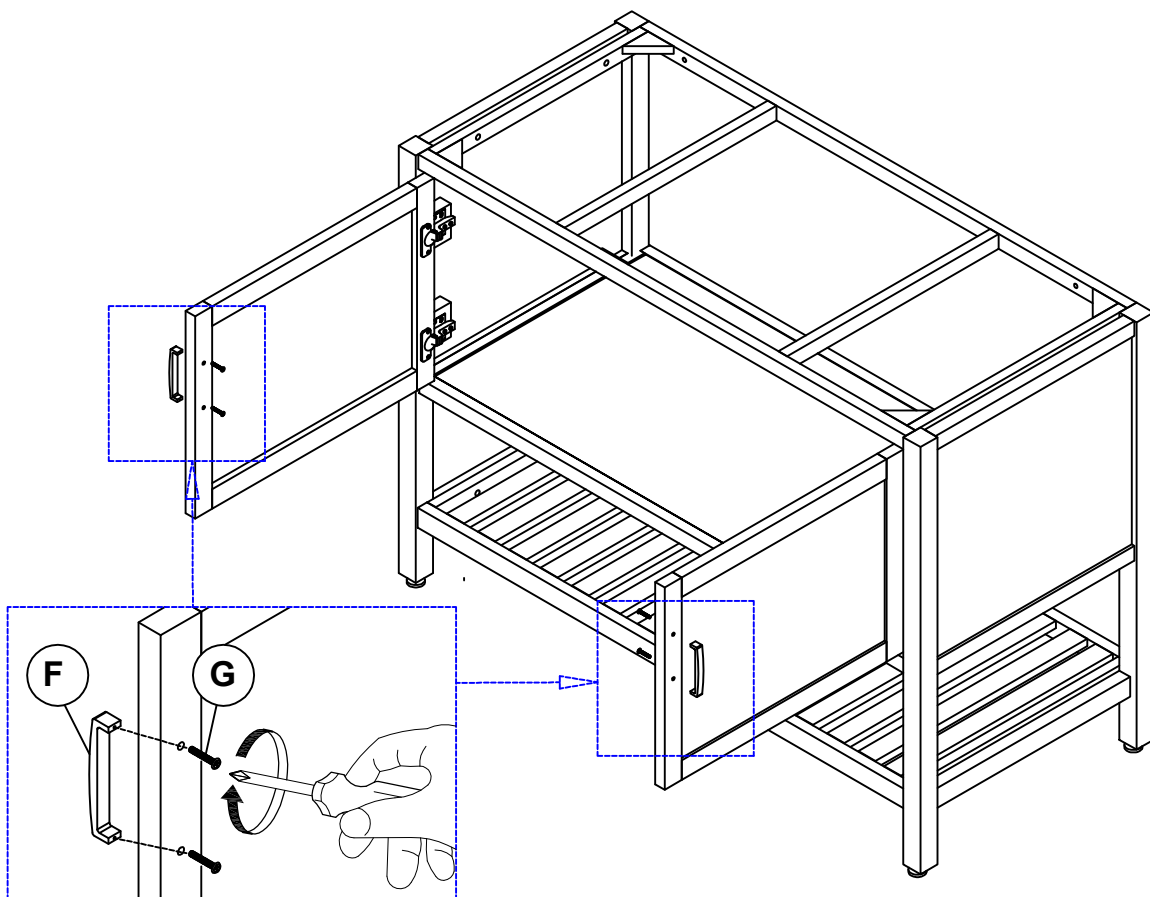

Step 07

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (I)
Make sure the screws align with the Studs in the wall.

I 4*50mm Screw 02

01

