


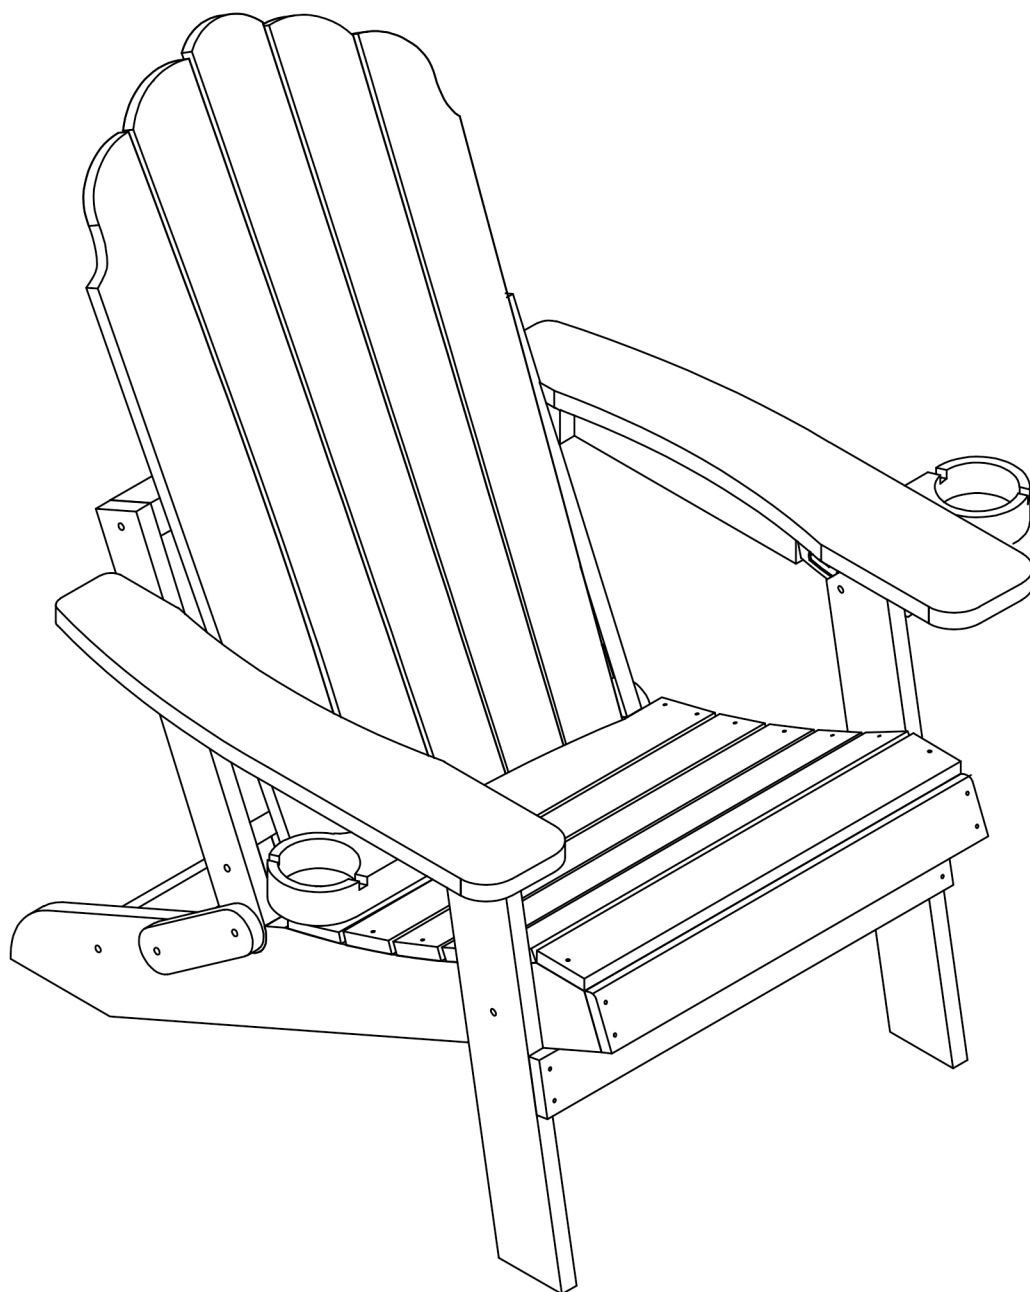


60 Mins













x2











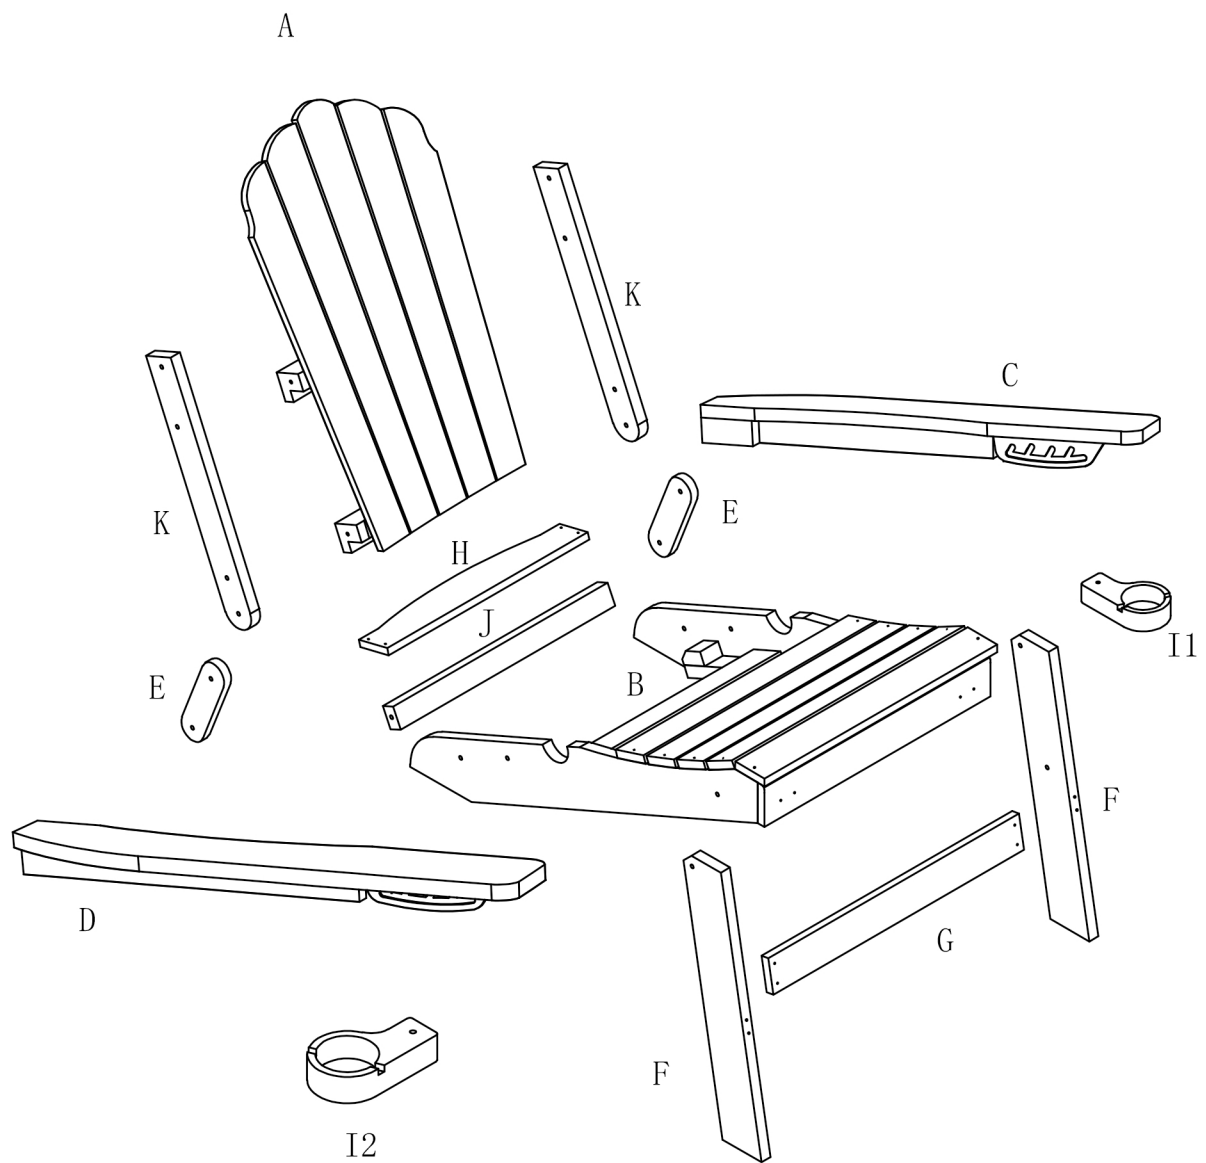


Exploded View




Fittings


<p>AA×8</p>  <p>4*35 Screw</p>	<p>BB×4</p>  <p>M6*45 Bolt</p>	<p>CC×6</p>  <p>M6*45 Bolt</p>	<p>DD×2</p>  <p>M6*45 Bolt</p>	<p>EE×2</p>  <p>M6*80 Bolt</p>
<p>FF×2</p>  <p>M6*50 Bolt</p>	<p>GG×2</p> 			

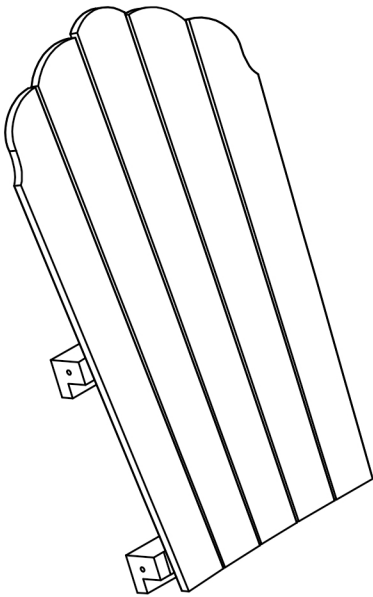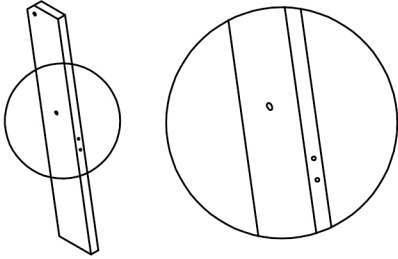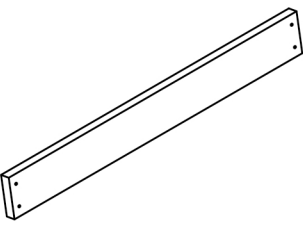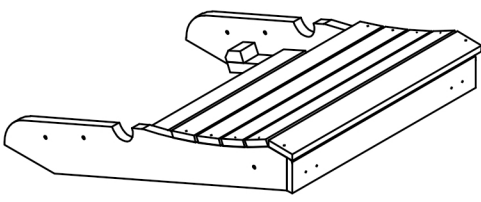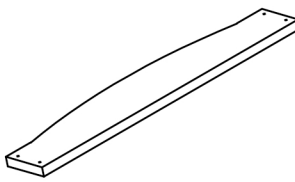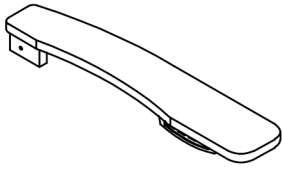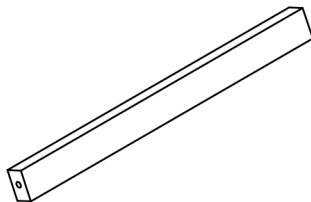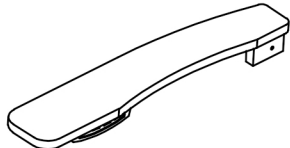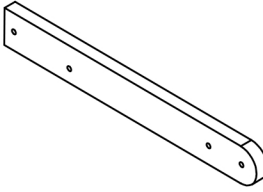Panel List					
A		1PC	E		2PCS
			F		2PCS
			G		1PC
B		1PC	H		1PC
			I		2PCS
C		1PC	J		1PC
D		1PC	K		2PCS


# Step1

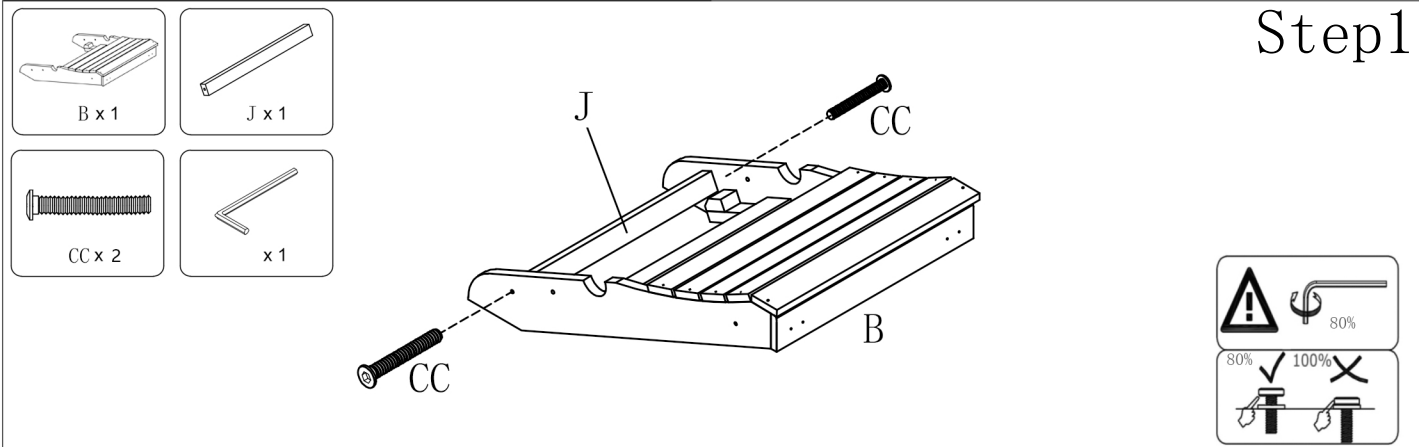


# Step2

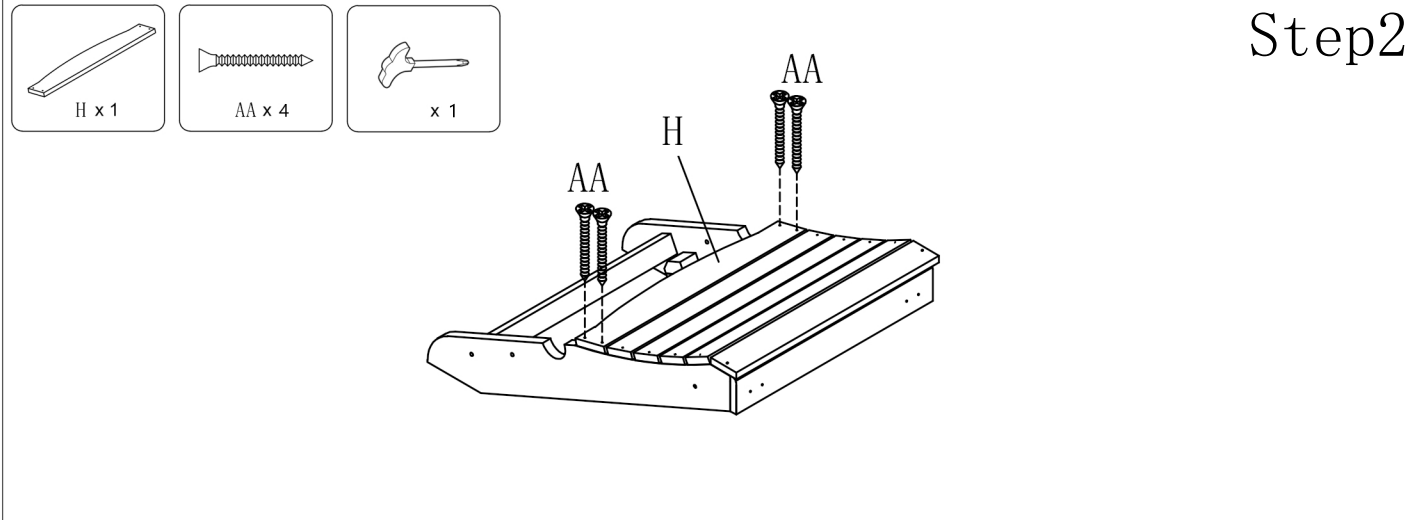

# Step3


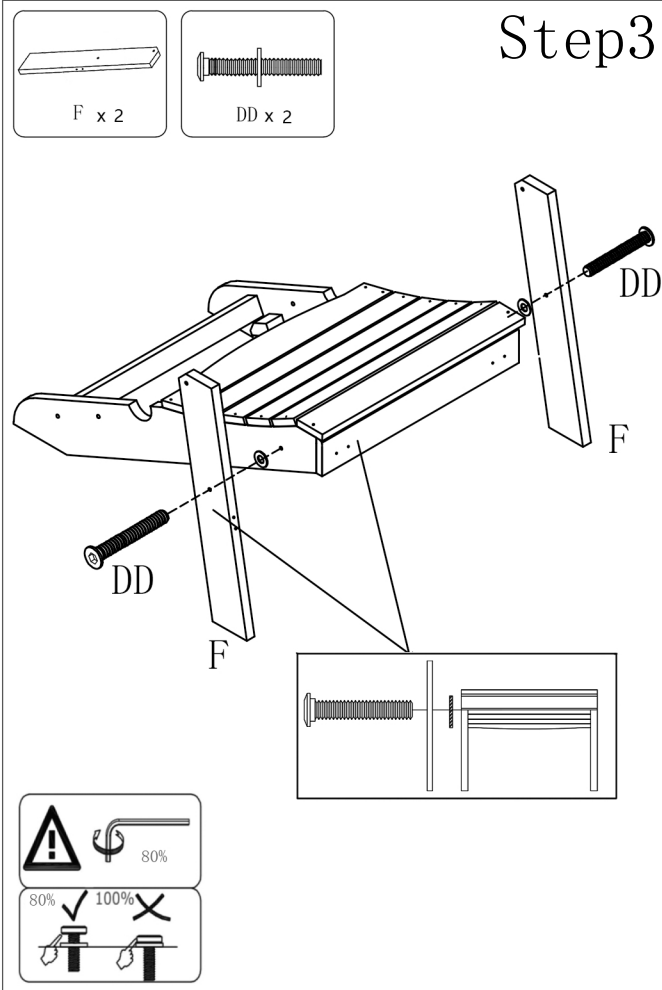


# Step4


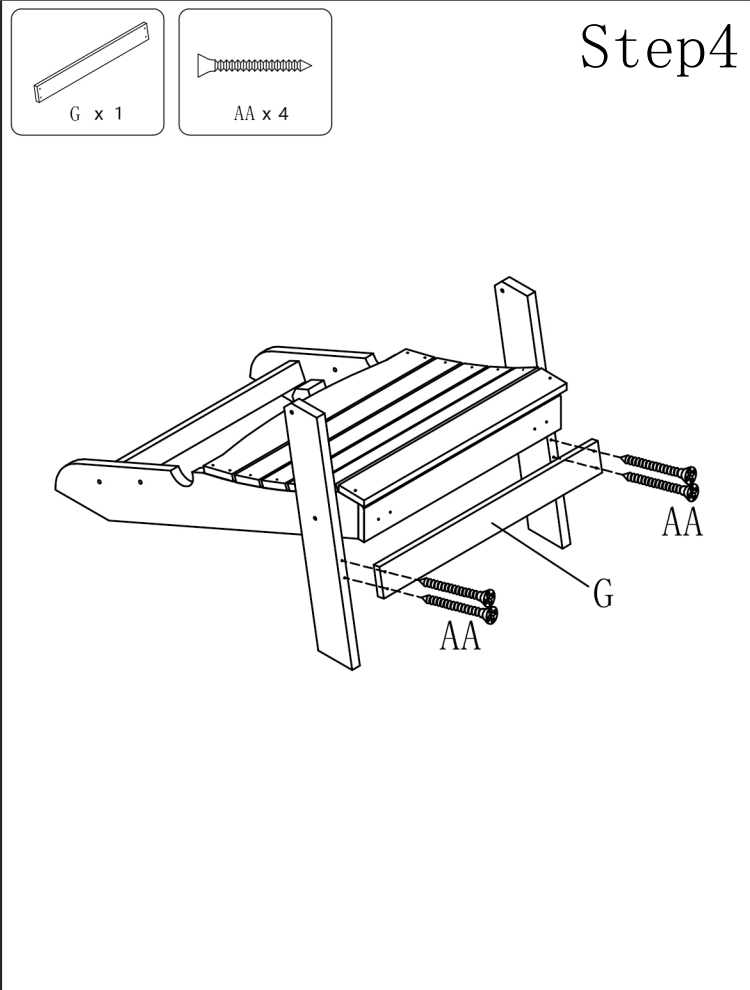






## Step5

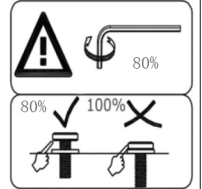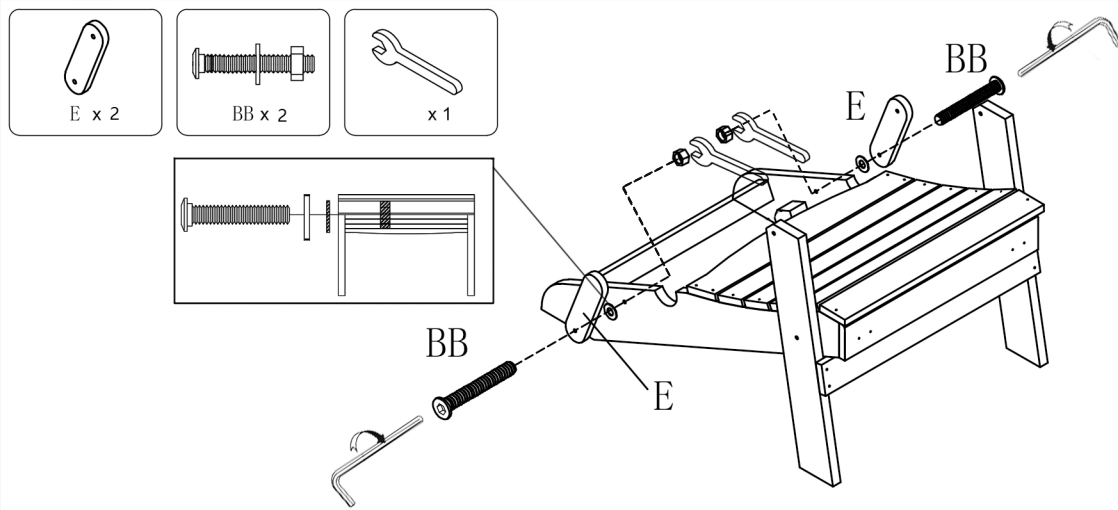



## Step6

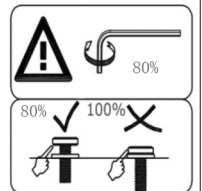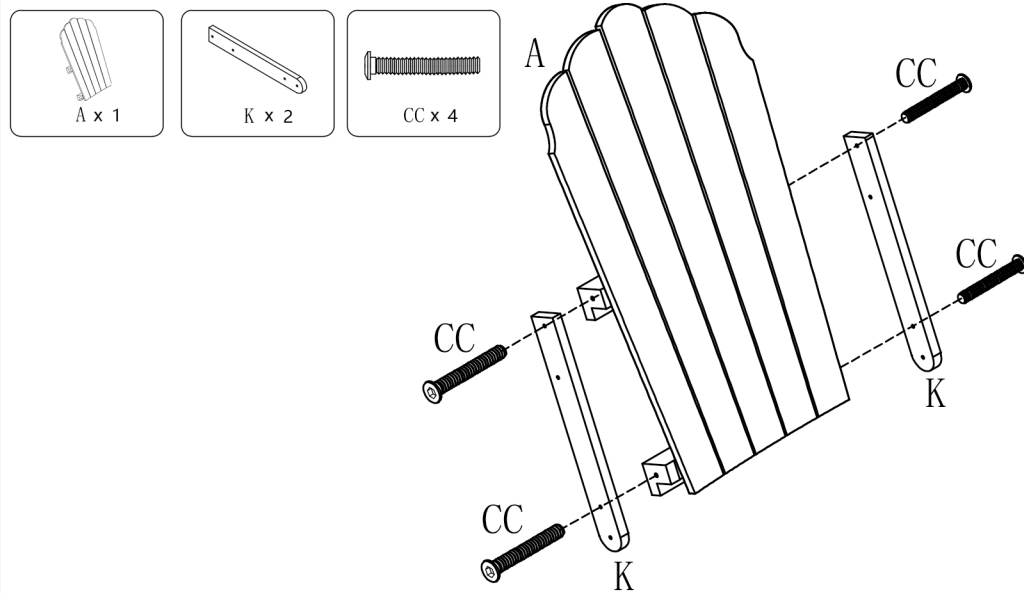



## Step7



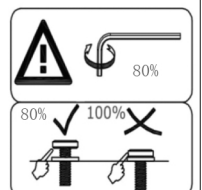
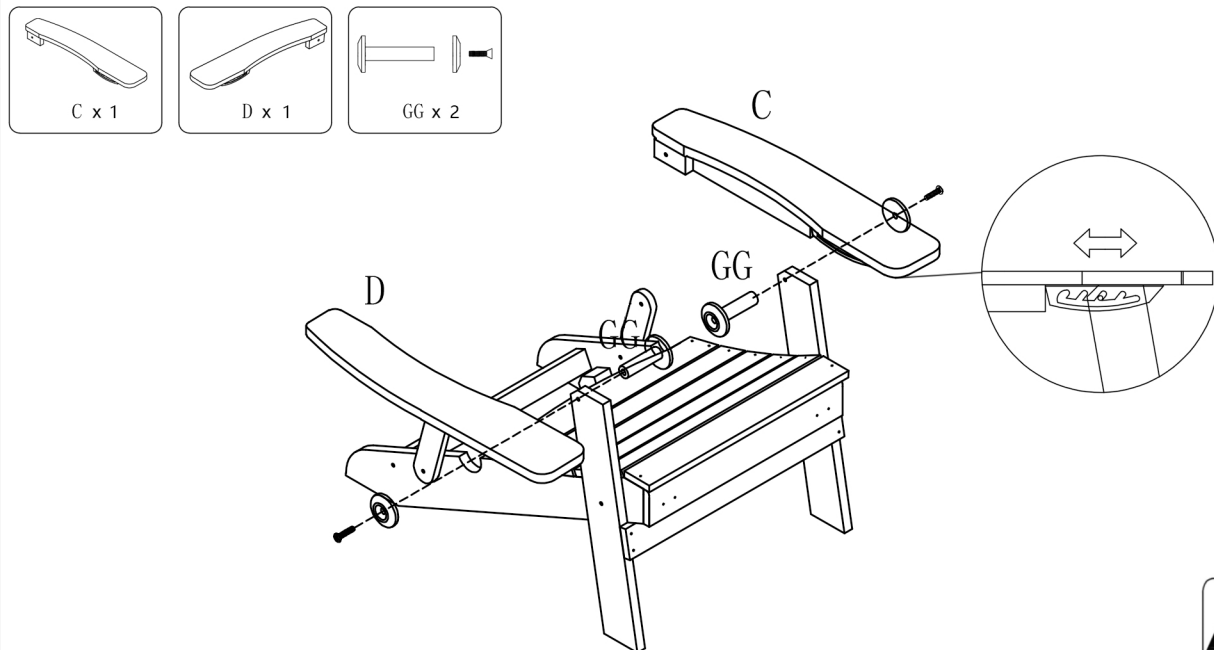


## Step8

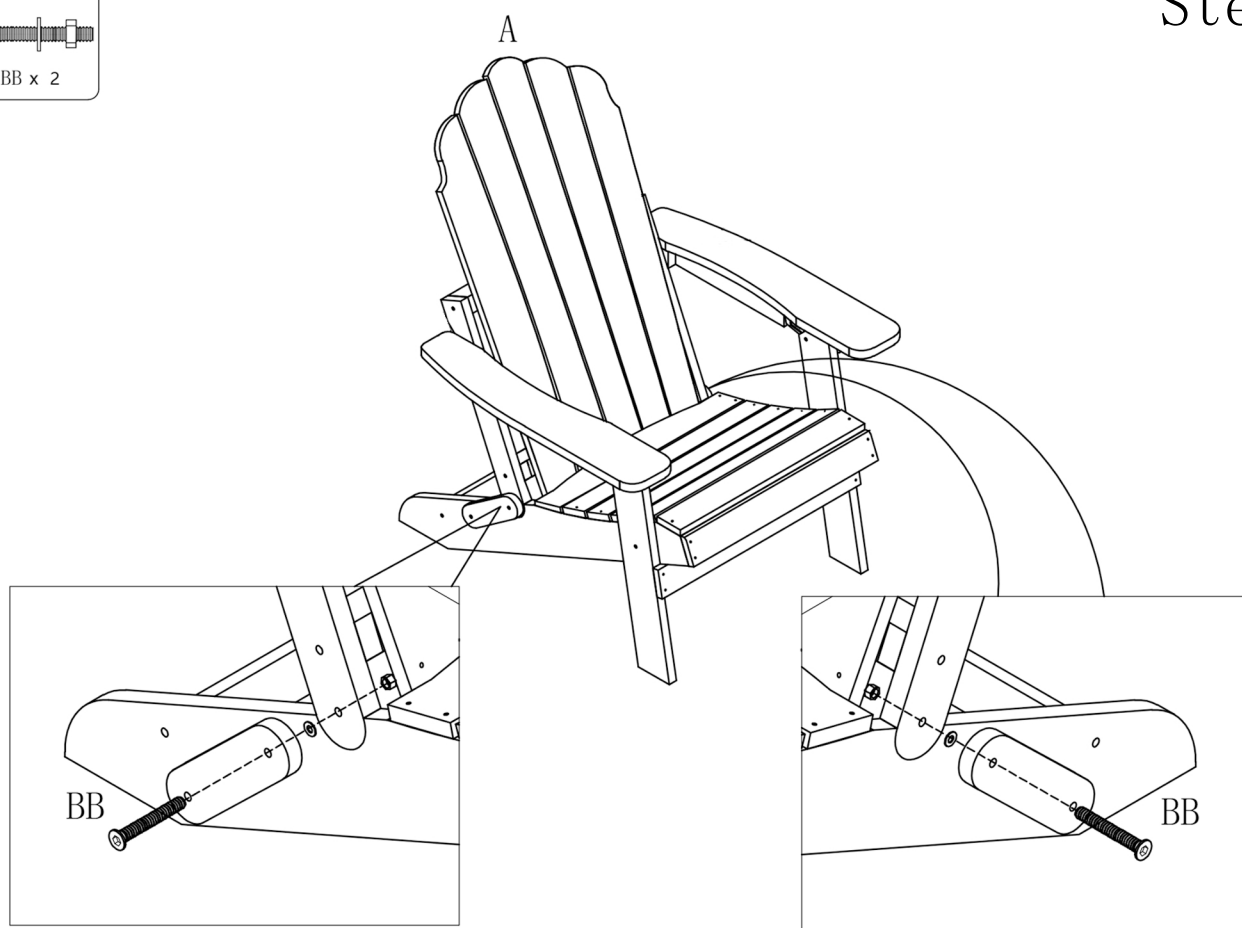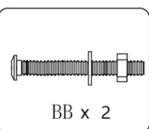


## Step9

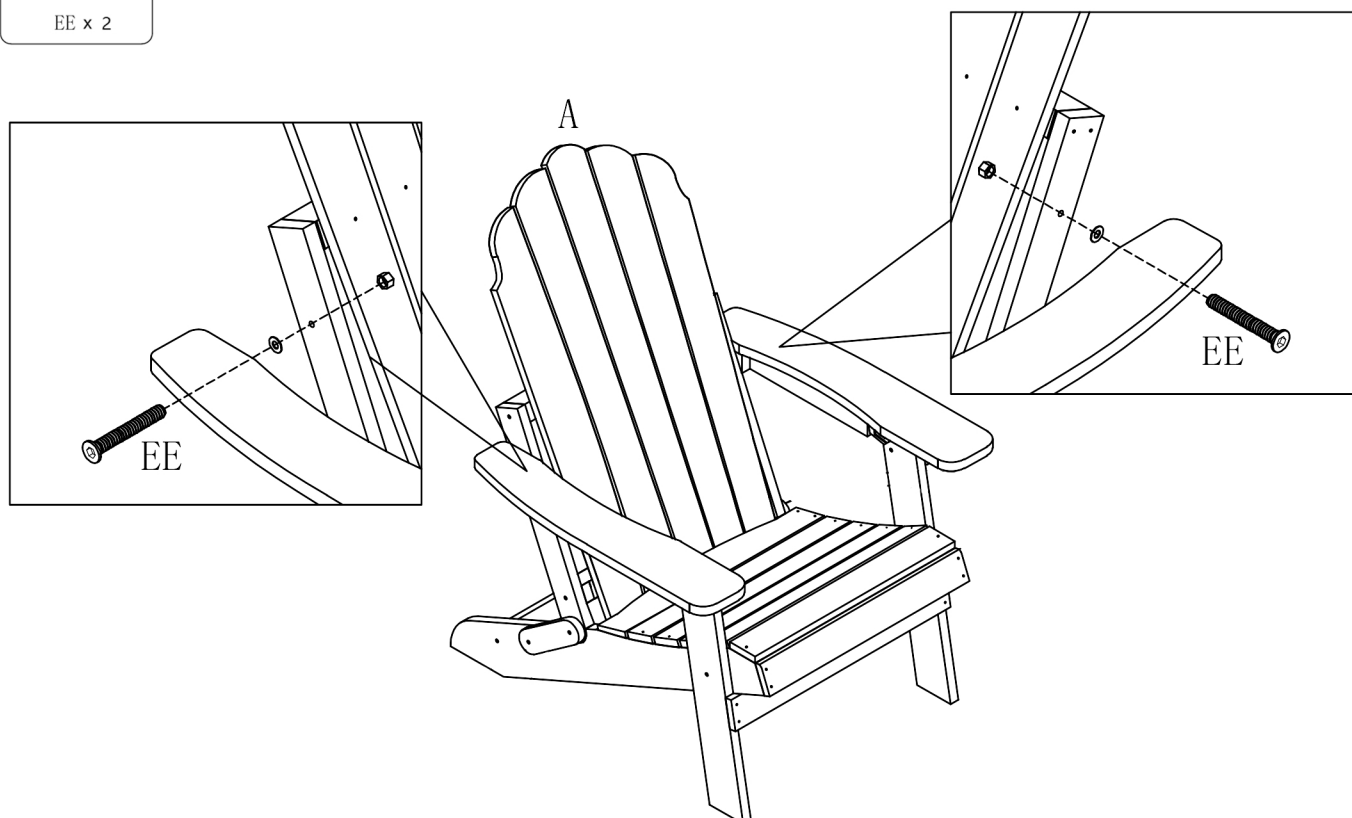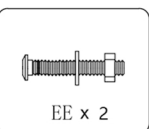

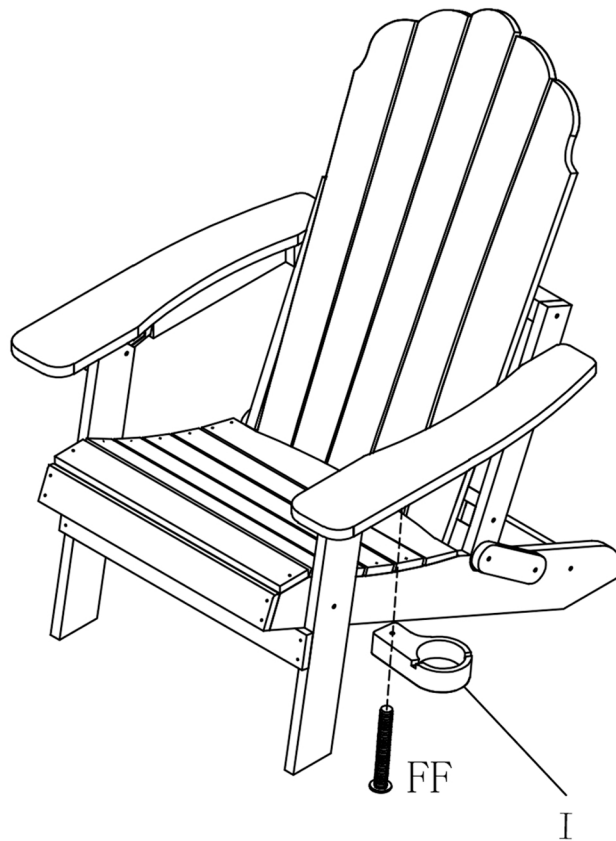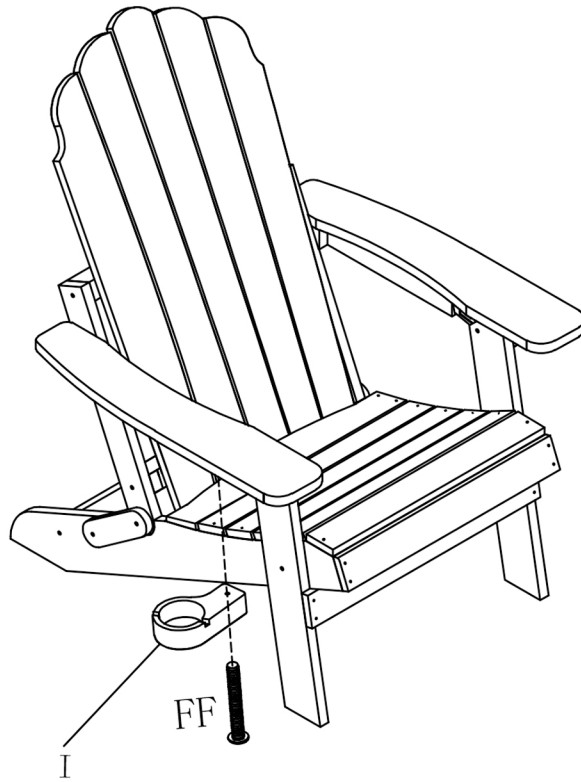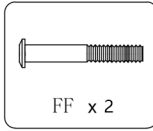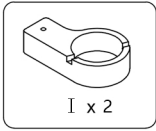

After all the parts are assembled correctly,  
please tighten the screws and nuts to 100%

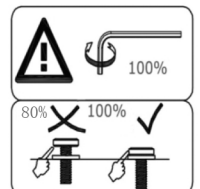

# Step11

