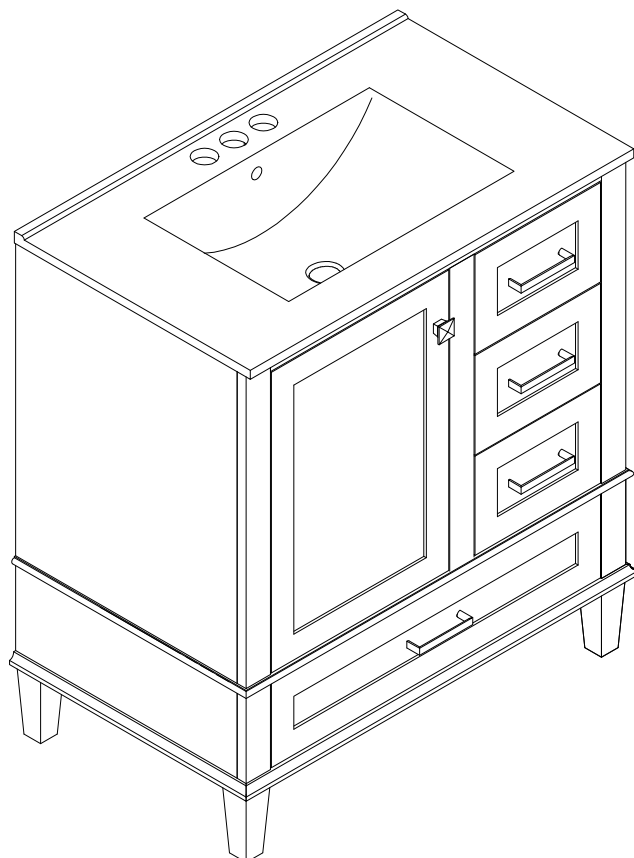


ASSEMBLY INSTRUCTIONS

30 INCH BATH VANITY (COMBO)

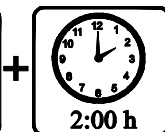
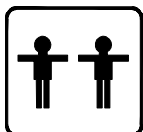


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation







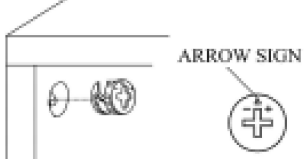
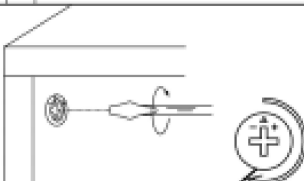
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

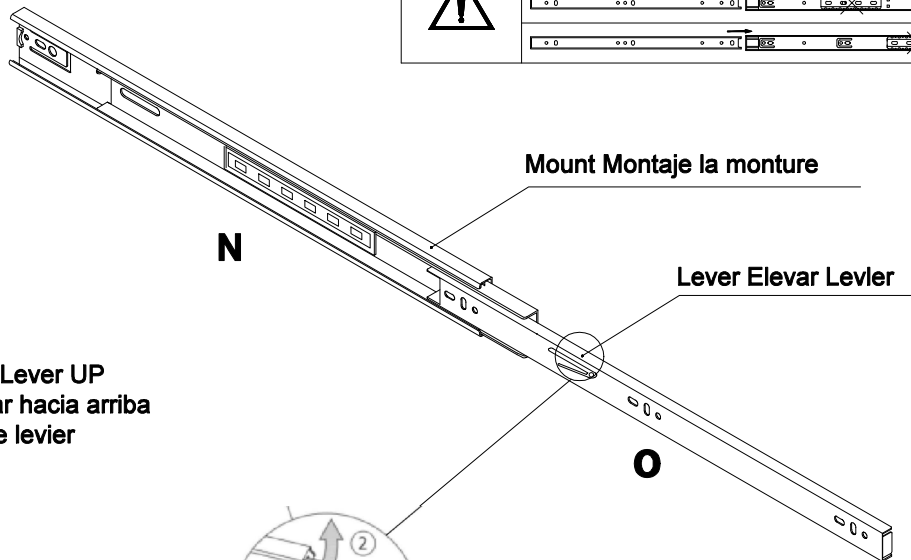
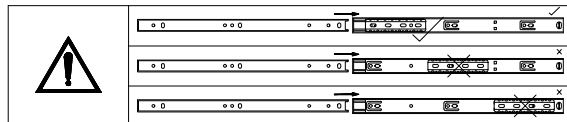
Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
 Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
 Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


Pay attention when connecting !
The sliding module must be at the front end.

STEP 1 : Extend Slide
Extender la diapositiva




STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

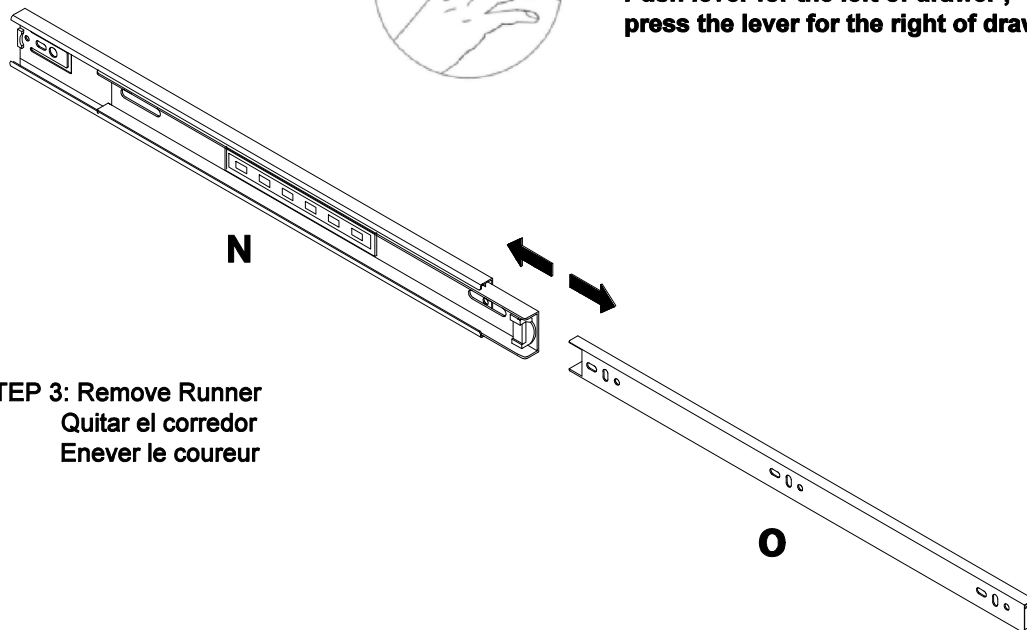Push lever for the left of drawer ,
press the lever for the right of drawer.















STEP 3: Remove Runner
Quitar el corredor
Enever le coureur

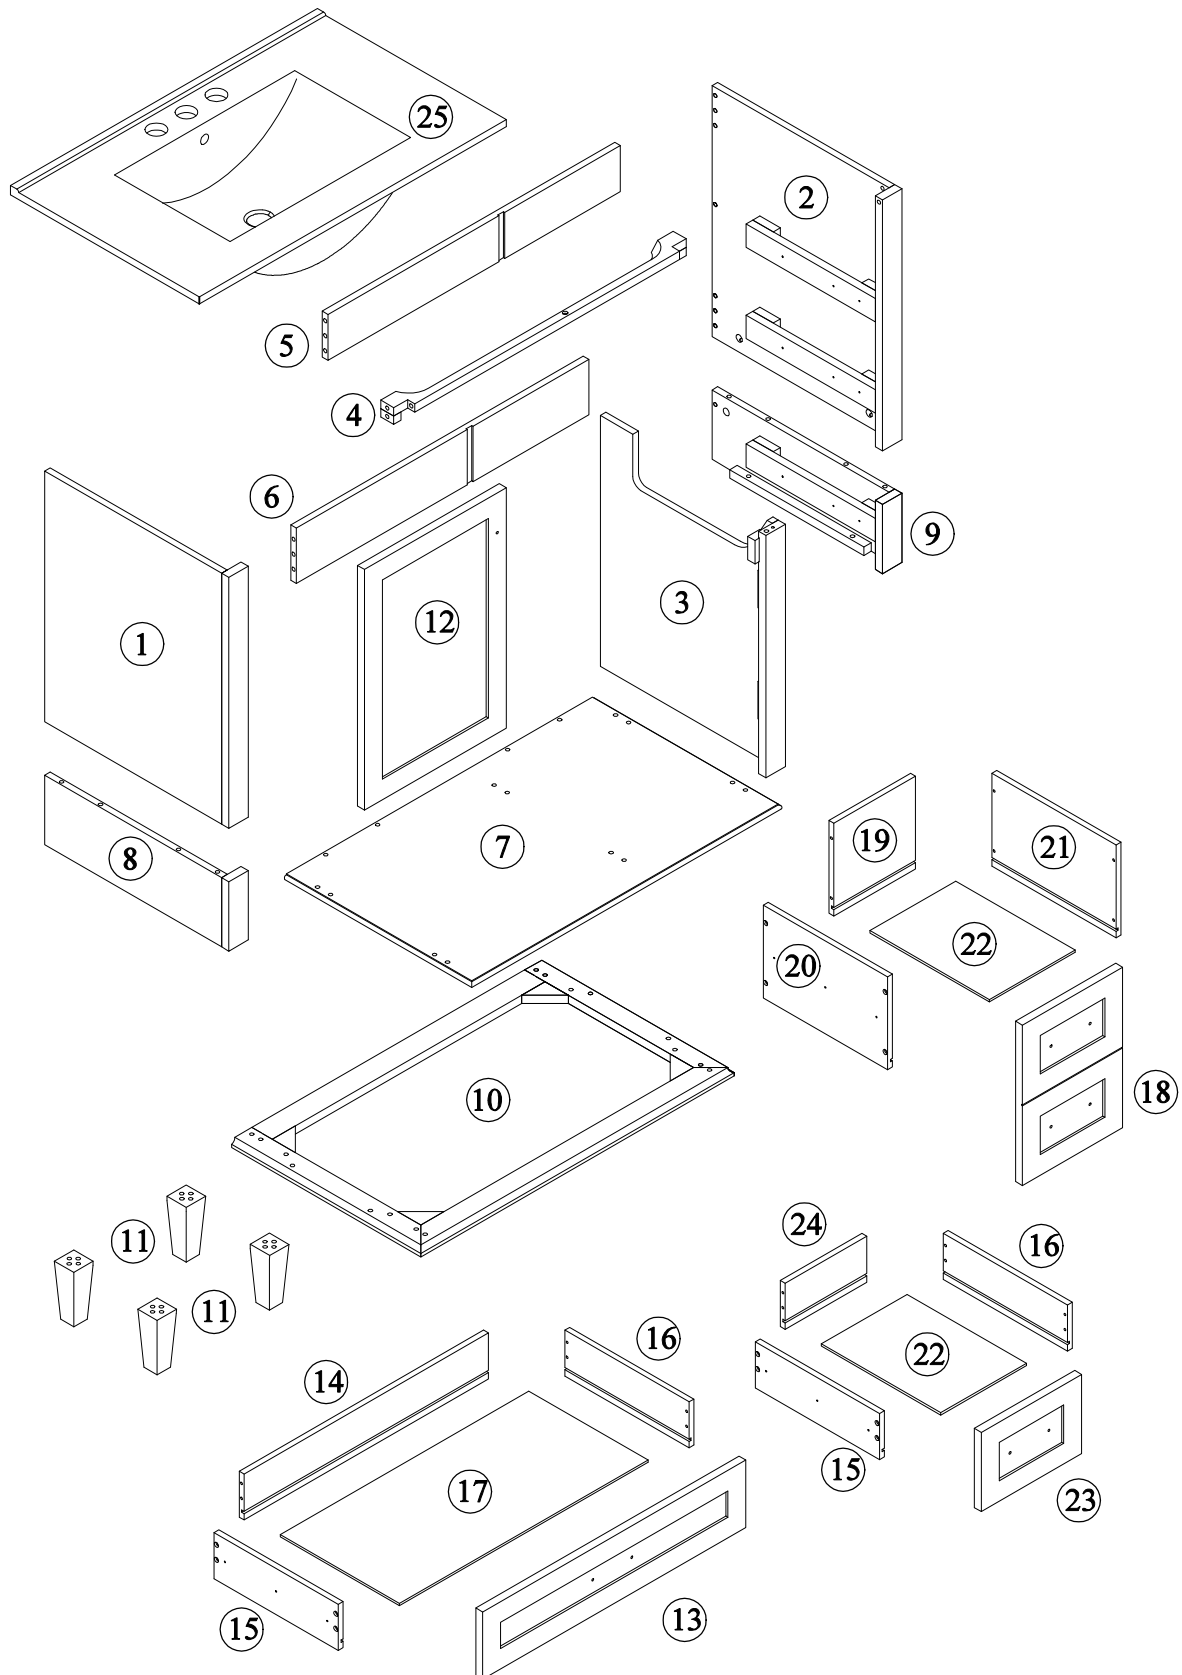Detail View - CABINET














Identifying the Hardware-Identify the hardware using the illustrations below.

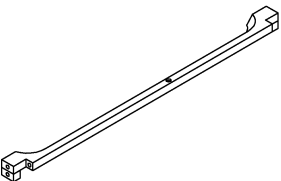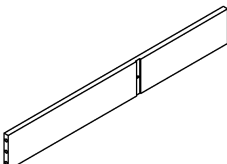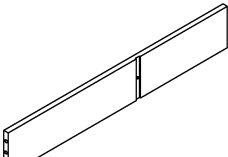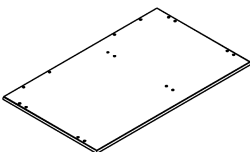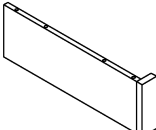
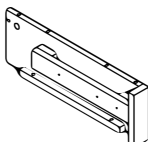
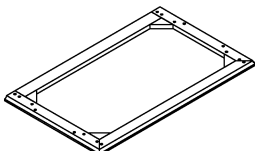

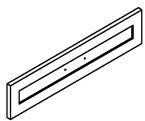
Part List

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel - 1pc		Top Crossbar - 1pc
5		6	
	Top Panel Rear - 1pc		Bottom Panel Rear - 1pc
7		8	
	Bottom Panel - 1pc		Left Panel - 1pc
9		10	
	Right Panel - 1pc		Bottom Frame - 1pc
11		12	
	Foot Cabinet - 4pcs		Cabinet Door - 1pc
13		14	
	Long Drawer Face - 1pc		Long Drawer Rear panel - 1pc

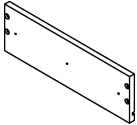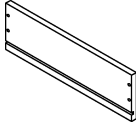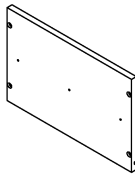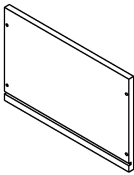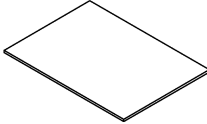
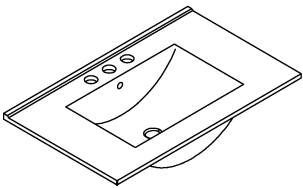
Part List

15		16	
	Drawer Side panel (L) - 2pcs		Drawer Side panel (R) - 2pcs
17		18	
	Long Drawer panel Bottom - 1pc		Double Drawer Face - 1pc
19		20	
	Double Drawer Panel Rear - 1pc		Double Drawer Side (L) - 1pc
21		22	
	Double Drawer Side (R) - 1pc		Drawer panel Bottom - 2pcs
23		24	
	Drawer Face - 1pc		Drawer Panel Rear - 1pc
25			
	Sink - 1pc		

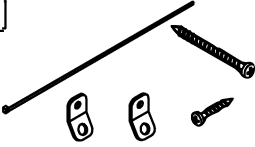
Hardware List

A  $\varnothing 13 \times 1/4" \times 28 \text{mm}$ Hex-Head bolts (14pcs)	B  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer (6pcs)	C  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts (20pcs)
D  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock (20pcs)	E  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw (3pcs)	F  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw (24pcs)
G  Handle (4pcs)	H  Handle (1pc)	I  $\varnothing 5/32" \times 15 \text{mm}$ Handle screw (2pcs)
J  $\varnothing 5/32" \times 22 \text{mm}$ Handle screw (1pc)	K  $\varnothing 5/32" \times 25 \text{mm}$ Handle screw (6pcs)	L  Damping hinge (2pcs)
M  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw (12pcs)	N  $\varnothing 300 \times 35 \text{mm}$ Slide rails (6pcs)	O  $\varnothing 298 \times 18 \text{mm}$ Slide rails (6pcs)
P  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$ Flat head screw (36pcs)	Q  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (33pcs)	R  4mm Allen key (1pc)
S  Anti fall hardware (1set)		

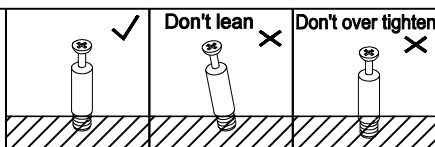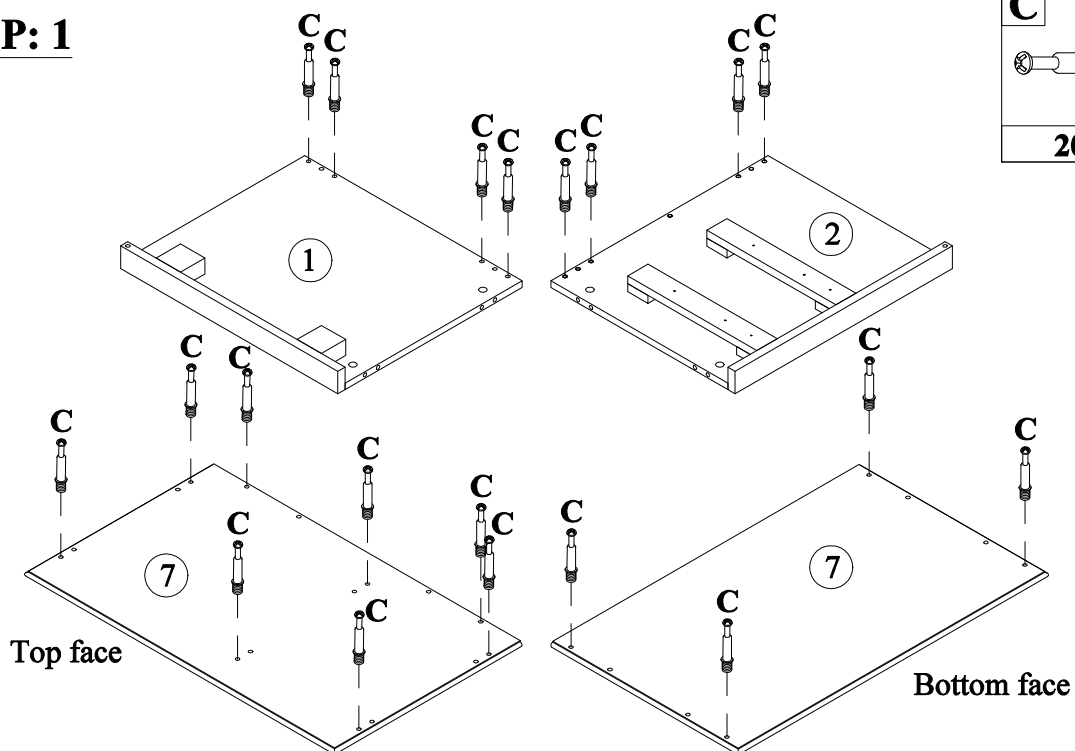
STEP: 1



STEP: 2

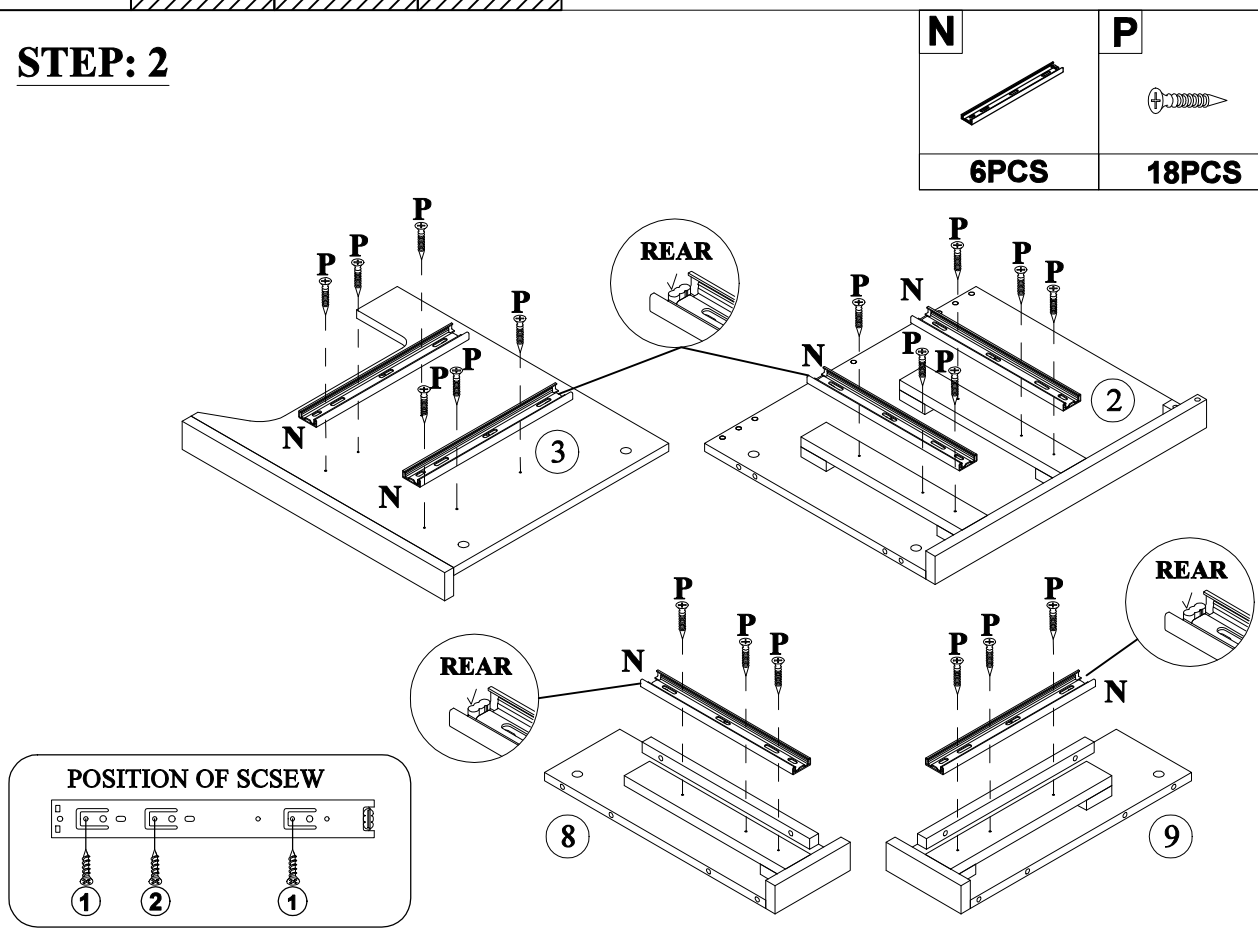


STEP: 3

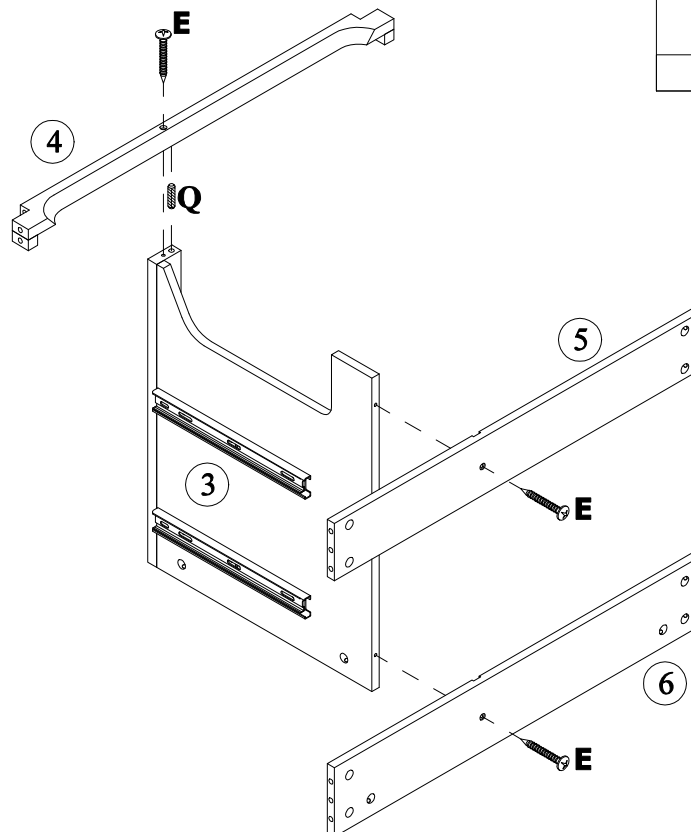


E	Q
	
3PCS	1PC

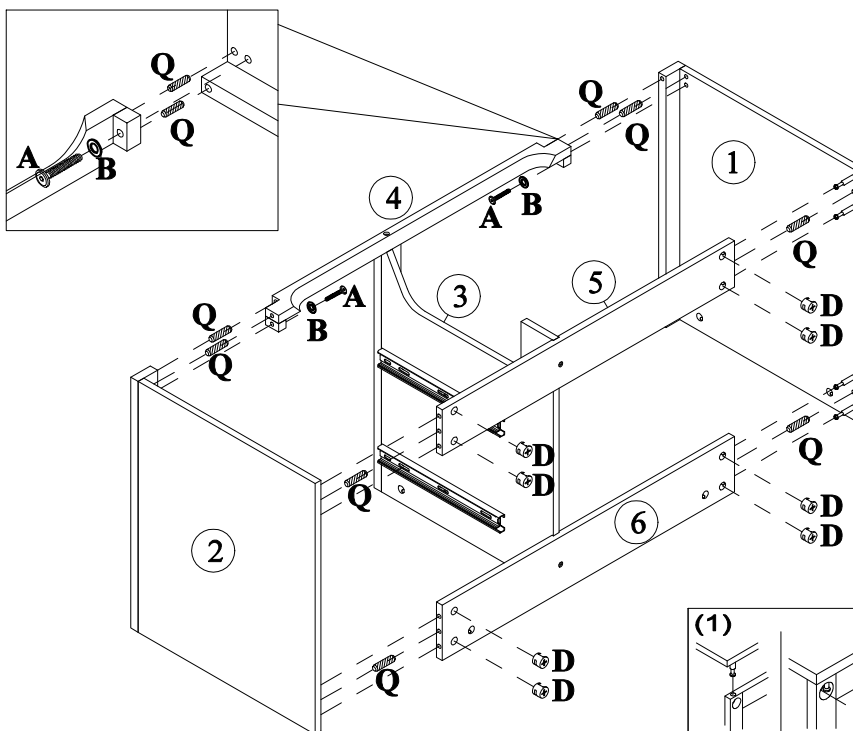
STEP: 4




A	B	D	Q
			
2PCS	2PCS	8PCS	8PCS

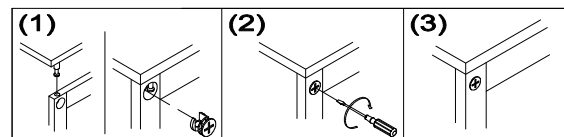




STEP: 5

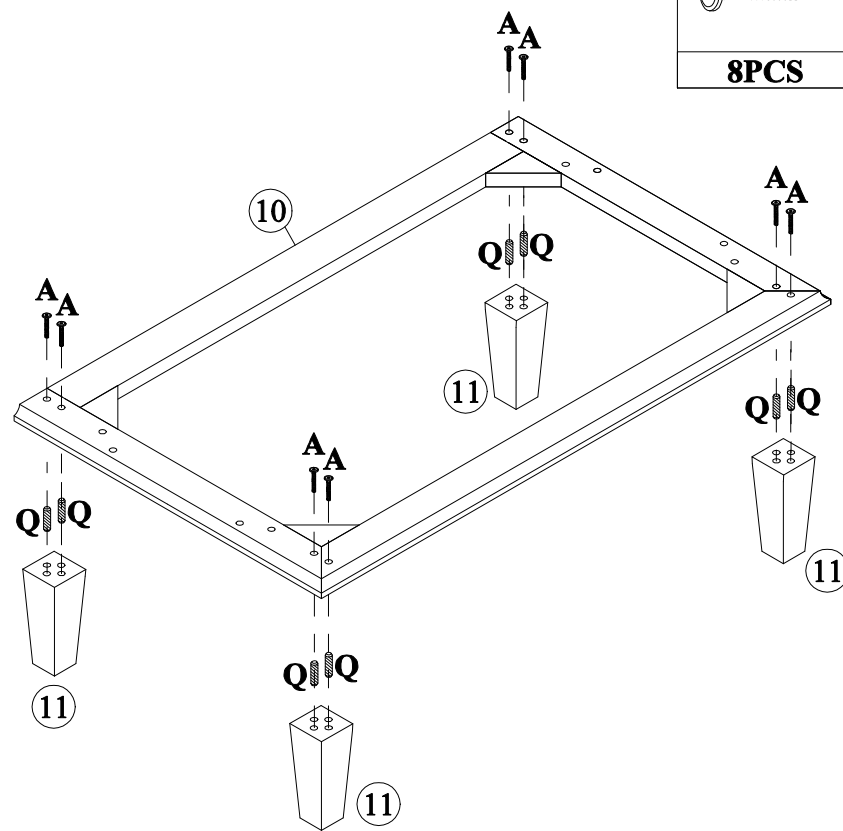


A	Q
	
8PCS	8PCS

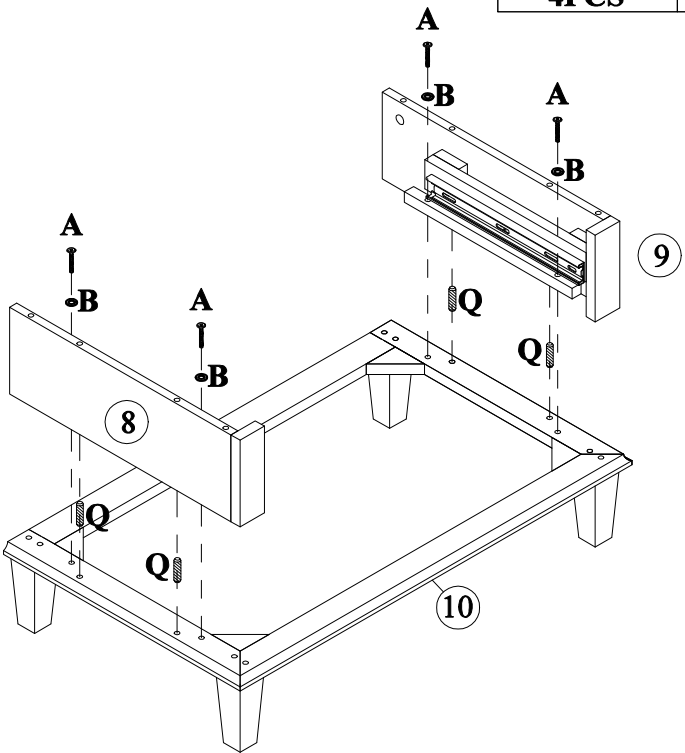STEP: 6




A	B	Q
		
4PCS	4PCS	4PCS

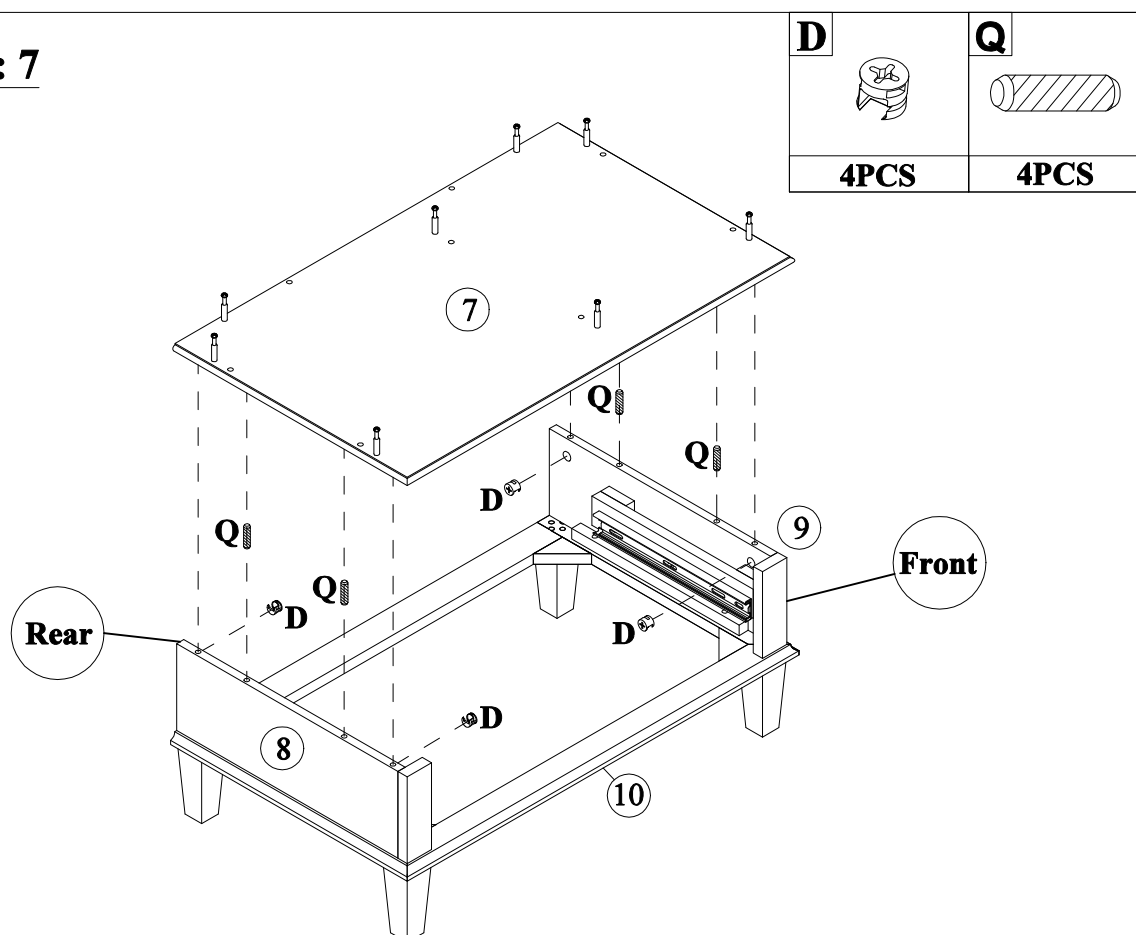STEP: 7



STEP: 8

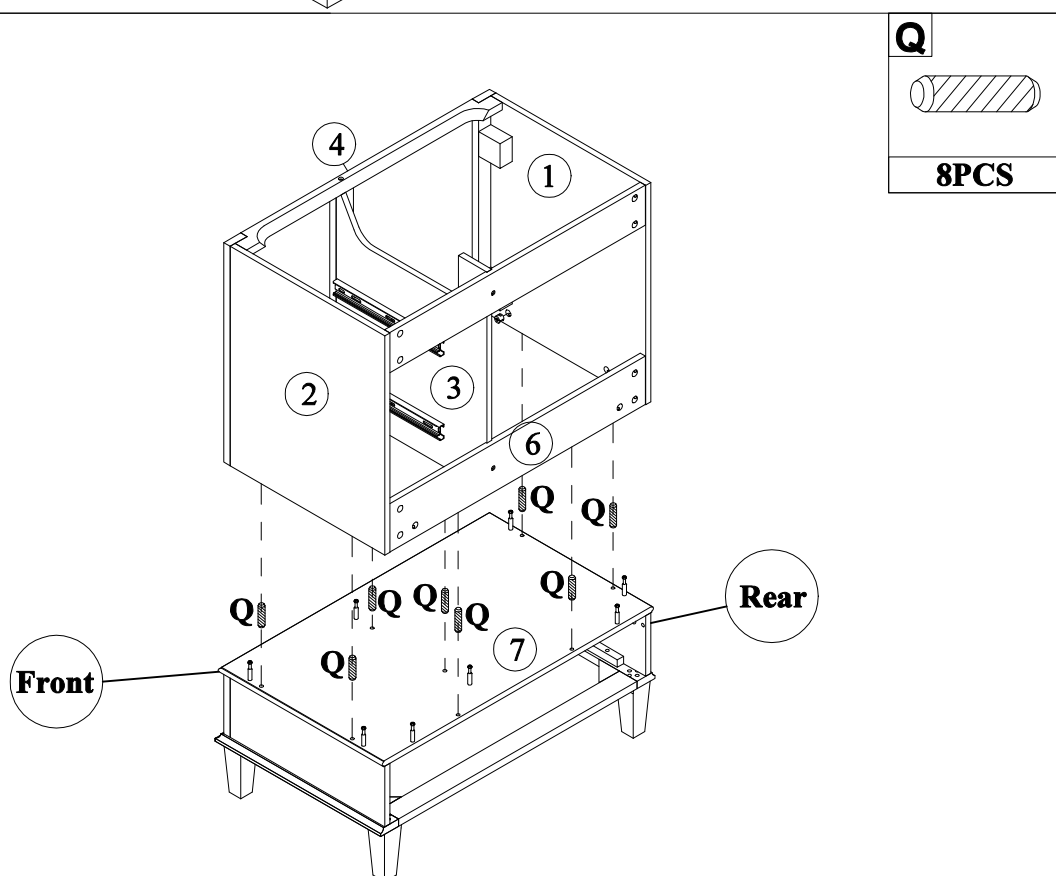


Please be careful not to install the front and rear backwards.

STEP: 9

D



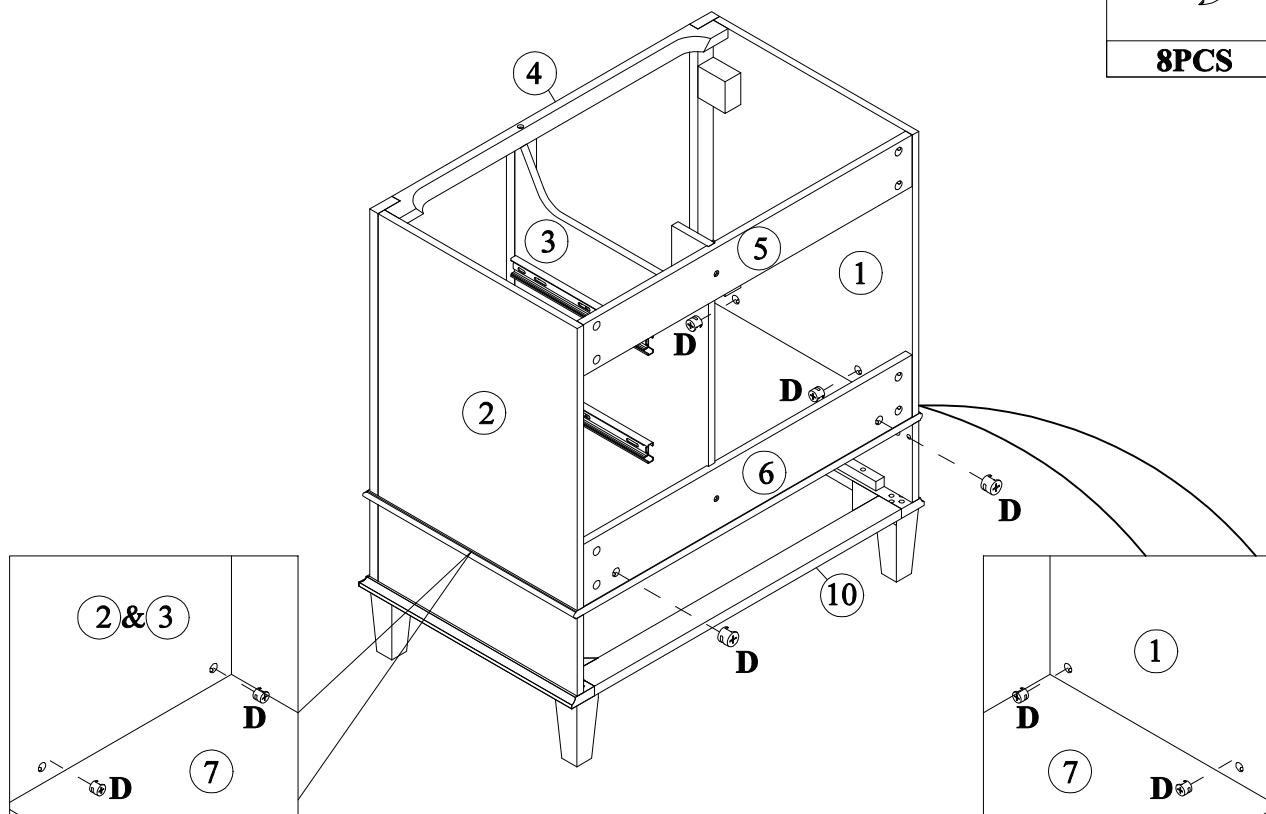8PCS



STEP: 10

L

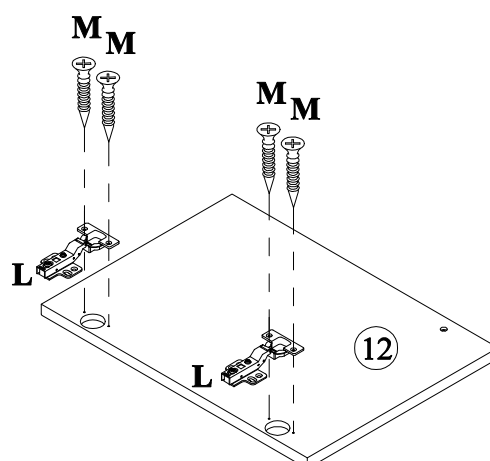


2PCS


M





4PCS




STEP: 11

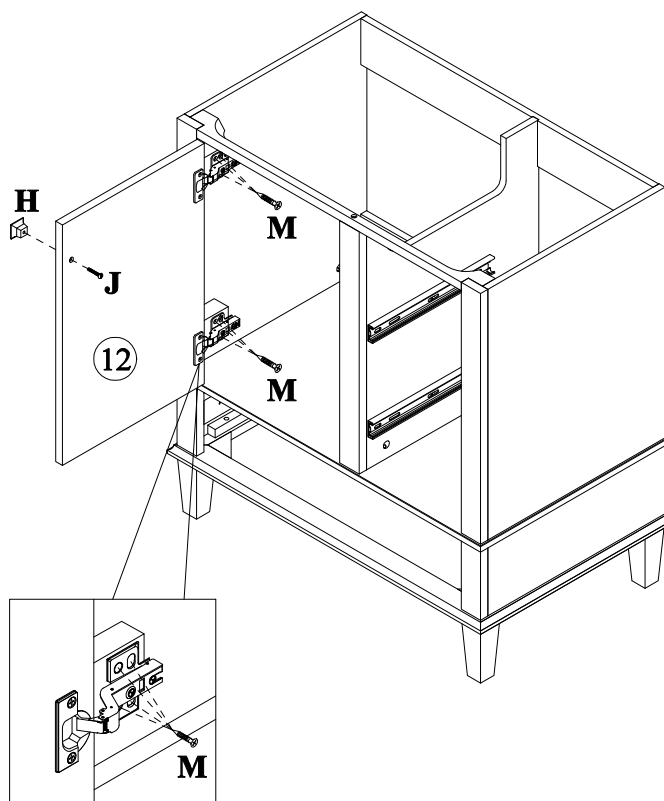


H		J		M	
	1PC		1PC		8PCS

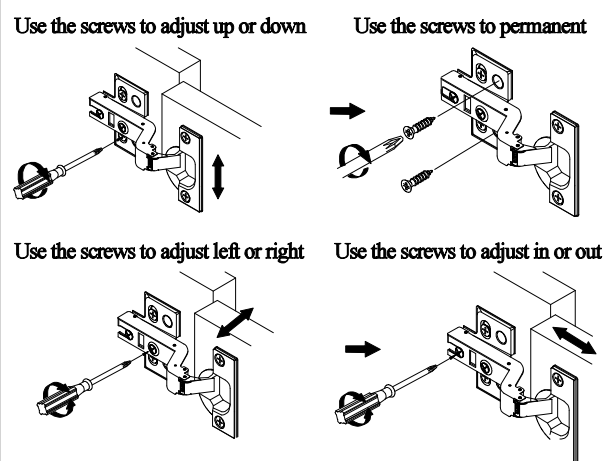


STEP: 12

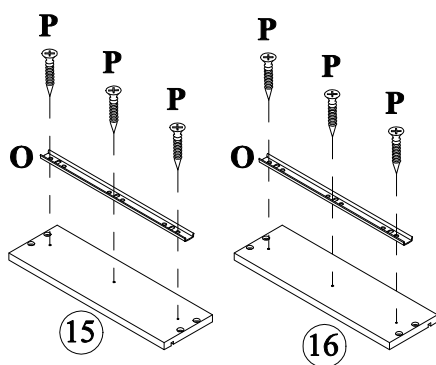


O		P	
	6PCS		18PCS

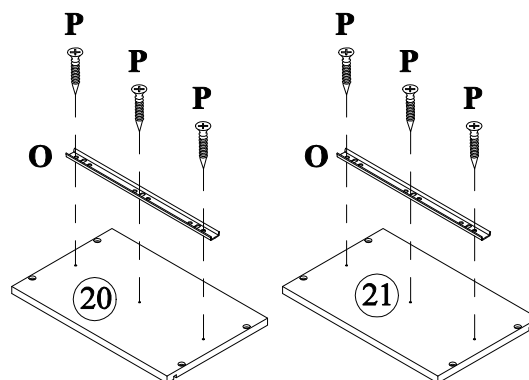




POSITION OF SCREW

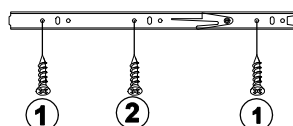


STEP: 13



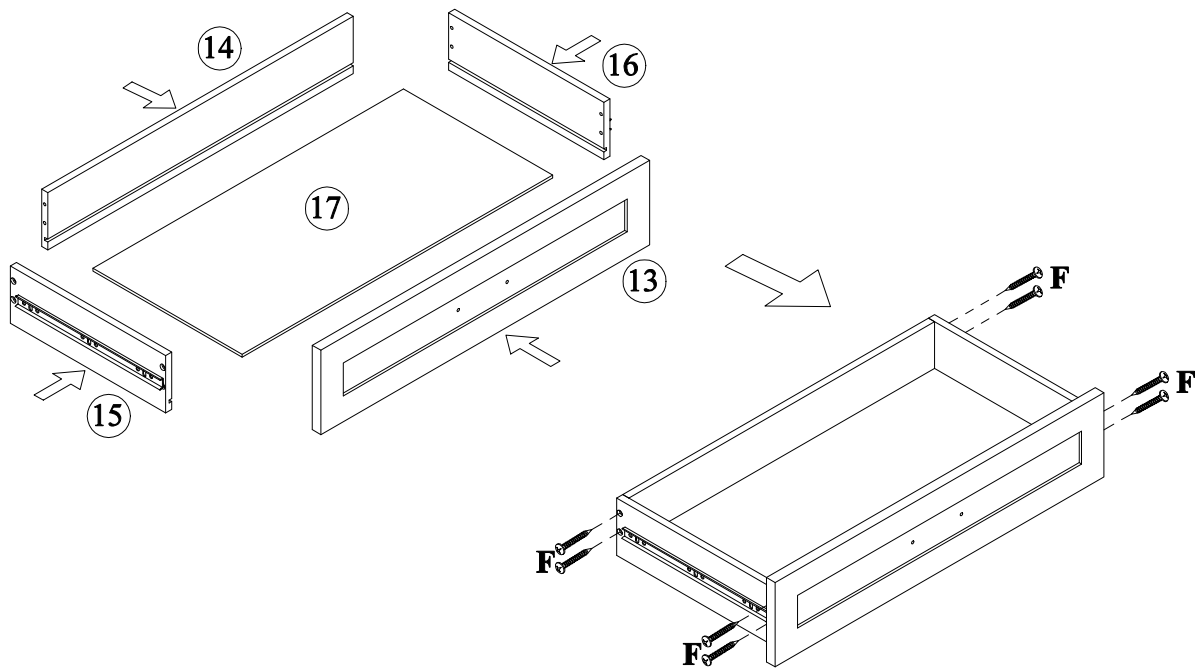
F**8PCS**


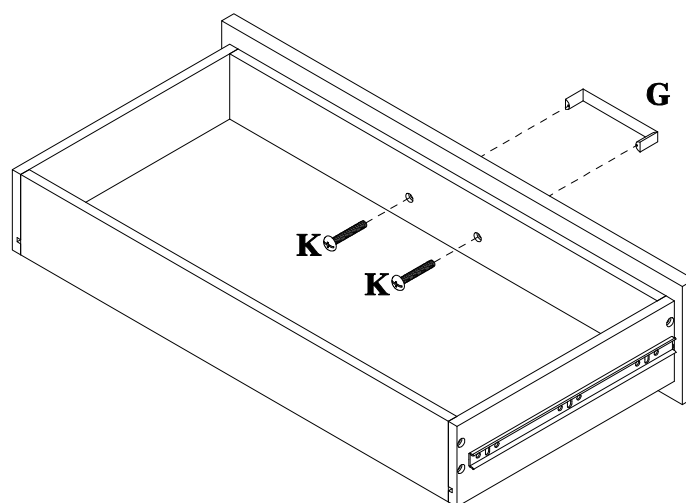
STEP: 14

G**1PC****K****2PCS**

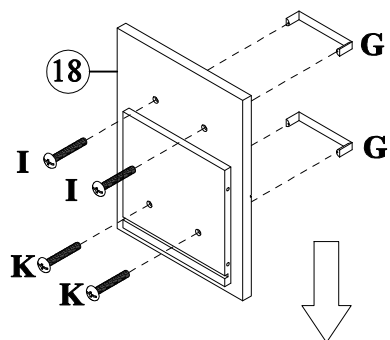
STEP: 15








G	I	K	F
			
2PCS	2PCS	2PCS	8PCS

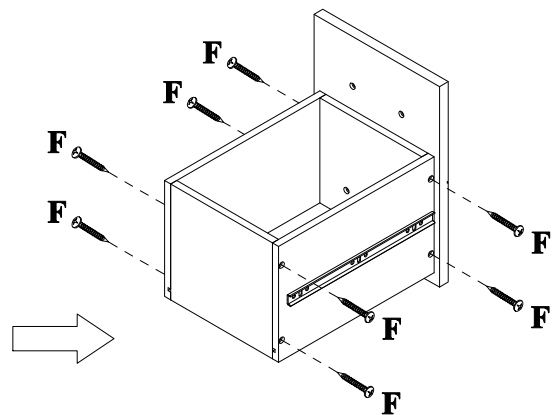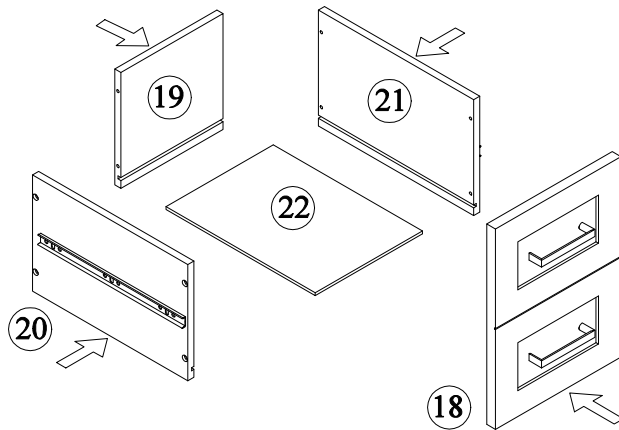


STEP: 16

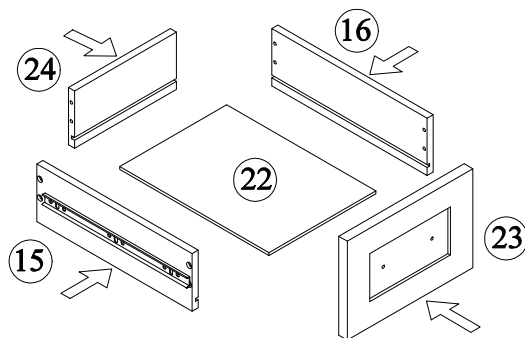



G	K	F
		
1PC	2PCS	8PCS

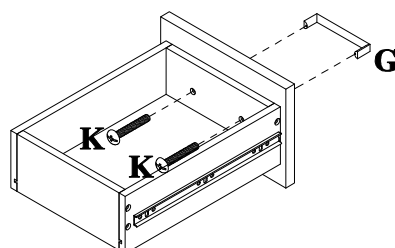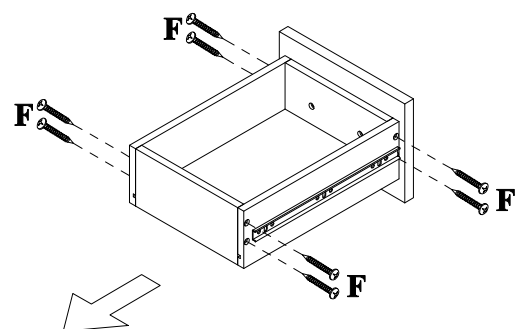

STEP: 17

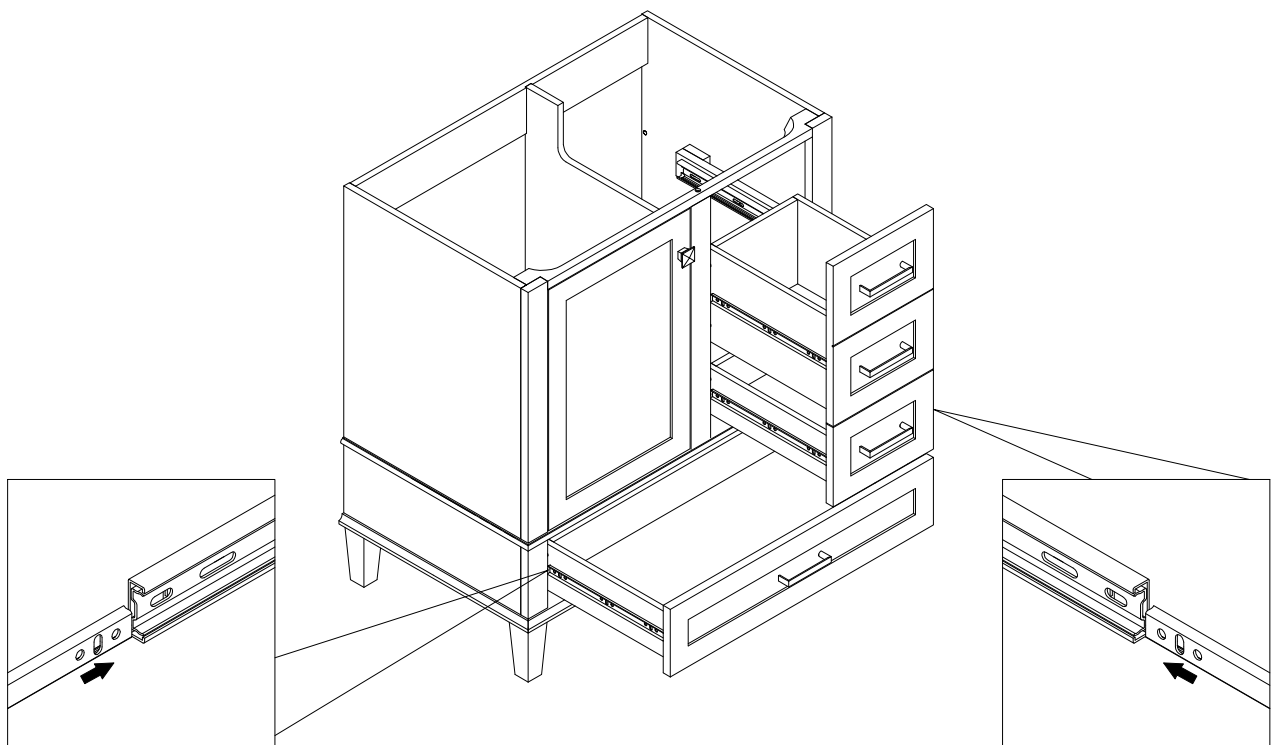


STEP: 18

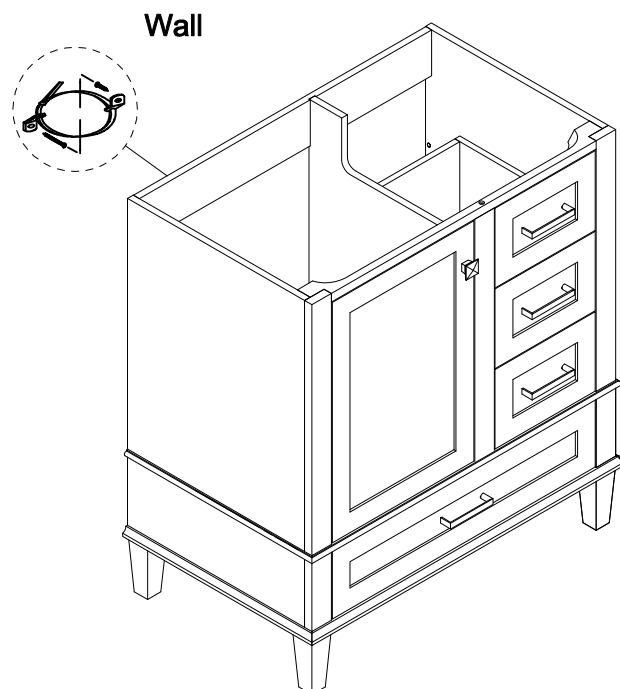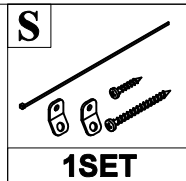


STEP: 19

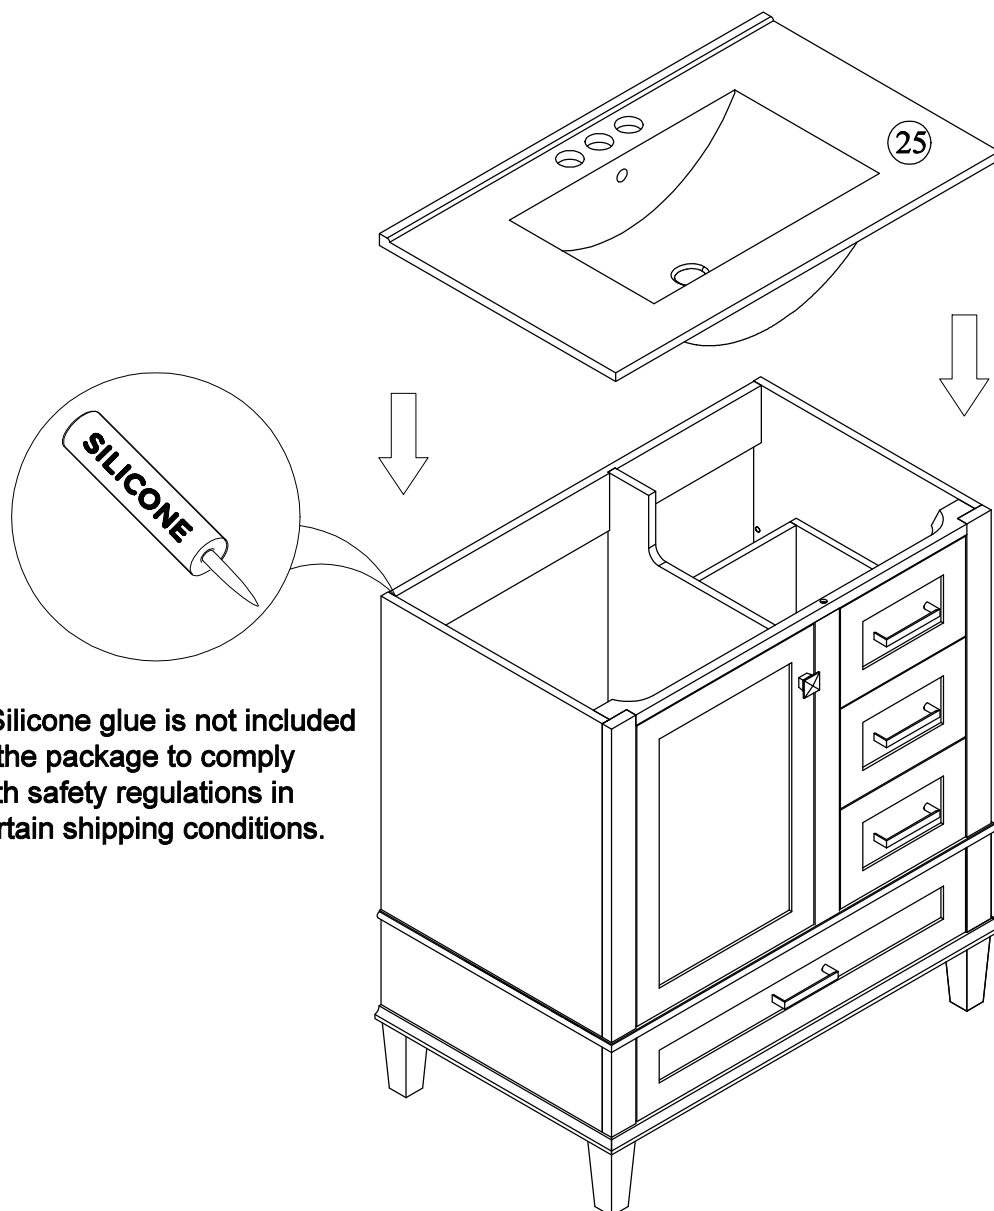**Install the sink on the cabinet with glue.
Let stand for 24 hours**




***Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.**

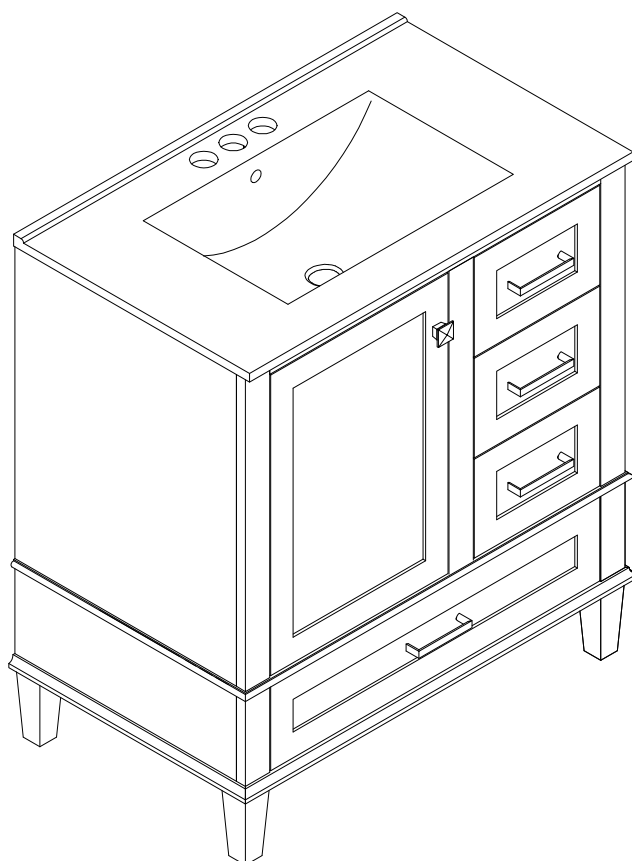STEP: 20



HINGE ADJUSTMENTS

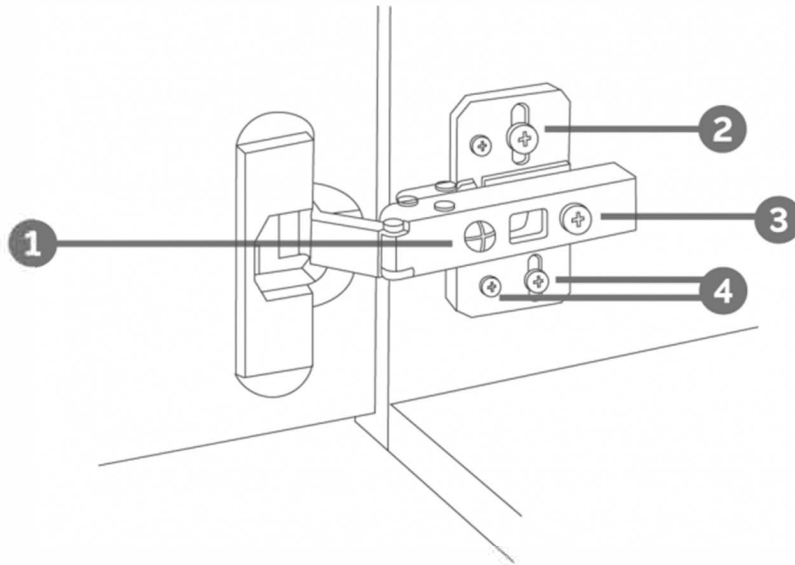


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

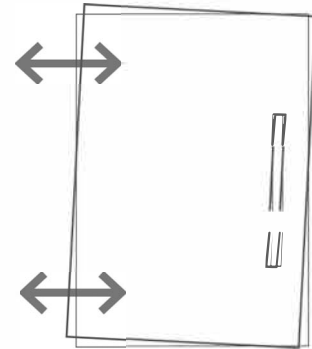anticlockwise to move the door closer to the side of the cabinet




② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

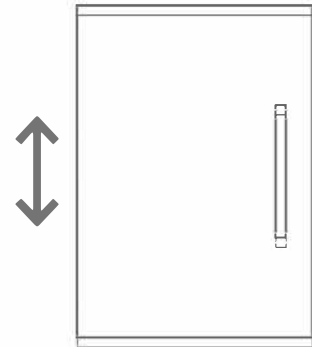anticlockwise to move the door down



③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

