
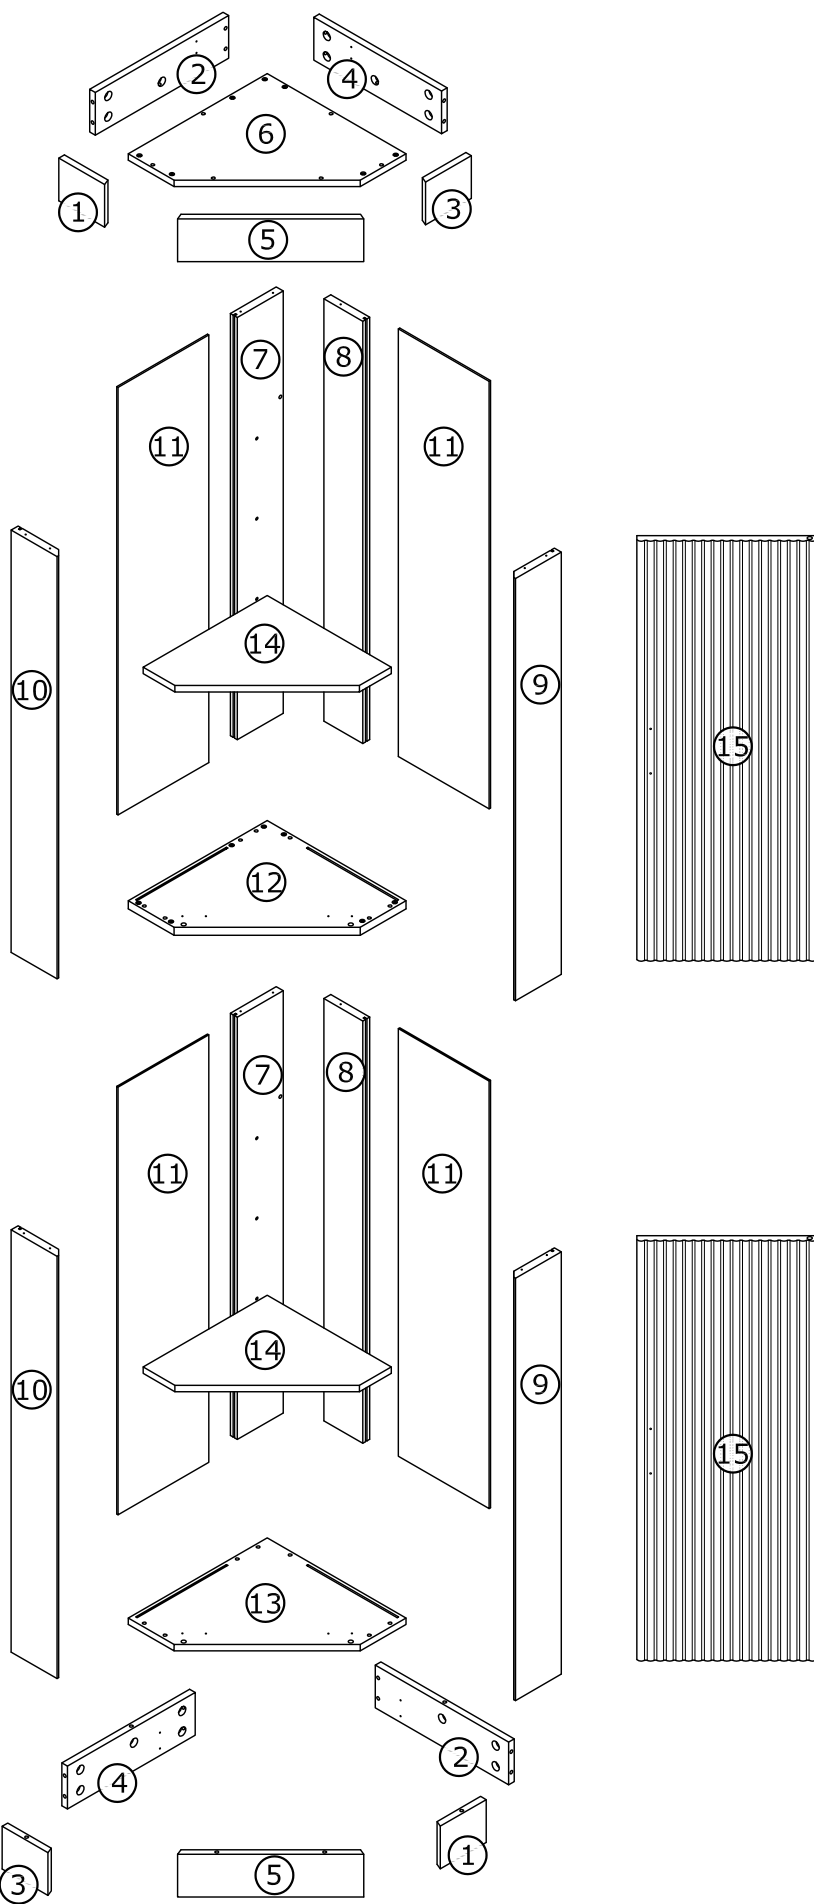

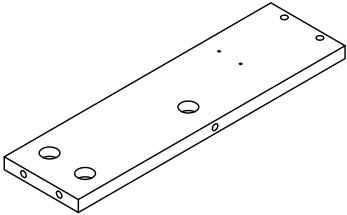

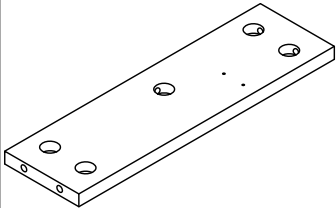
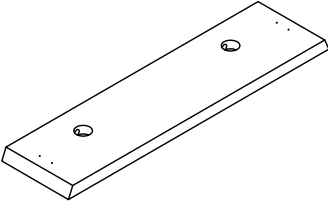

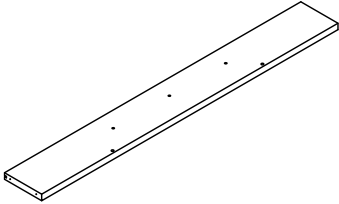
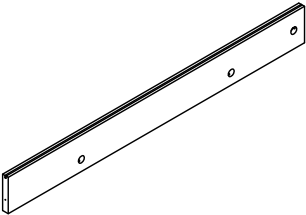
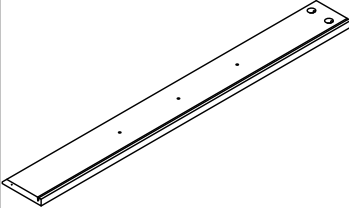
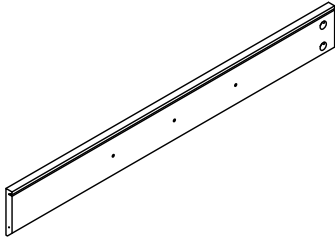
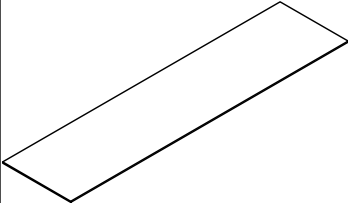











Installation instruction

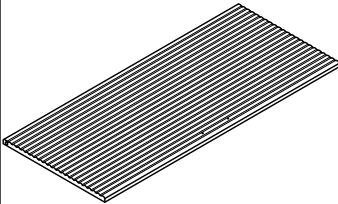

Parts and Operation Elements

							
①	2pcs	②	2pcs	③	2pcs	④	2pcs
							
⑤	2pcs	⑥	1pc	⑦	2pcs	⑧	2pcs
							
⑨	2pcs	⑩	2pcs	⑪	4pcs	⑫	1pc
							
⑬	1pc	⑭	2pcs	⑮	2pcs		




Hardware

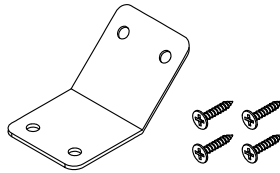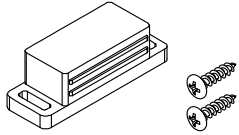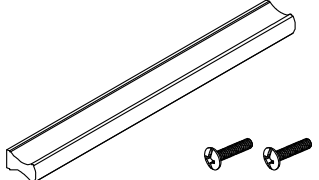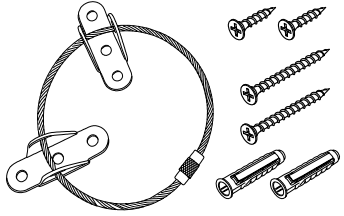 Cam bolt		 Cam lock		 3x12mm Screw		 Ø4 x 40mm	
A	42+2pcs	B	42+2pcs	C	4sets	D	14+1pcs
 3x14mm Screw						 4x18mm Screw	
E	4sets	F	6pcs	G	4pcs	H	2sets
 3x16mm Screw				 3x12mm Screw			
I	16sets	J	1set	K	4sets		







SPARE BAG




THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

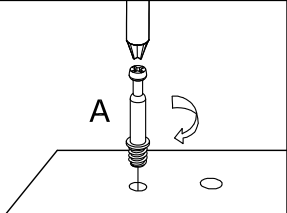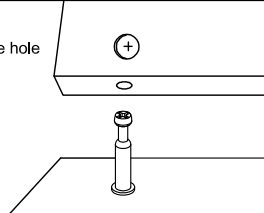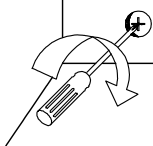 A		Arrow must face hole 			
Gently screw cam bolt into the threaded anchor				Screw the camlock firmly into locked position.	




1

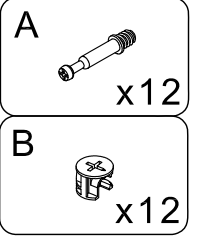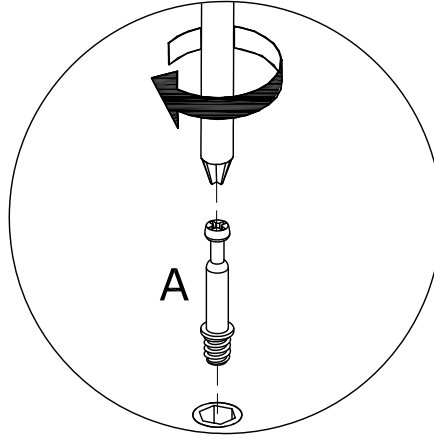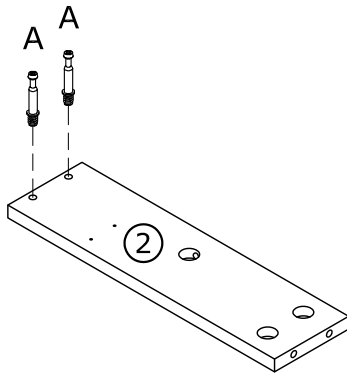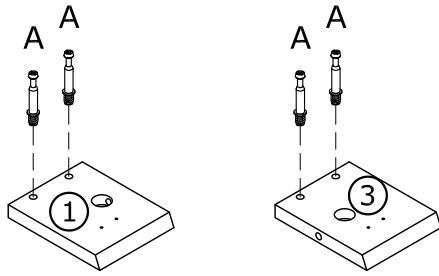


x2

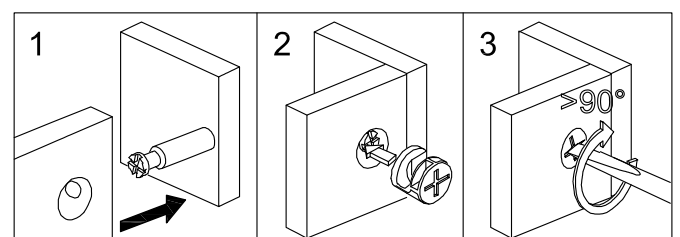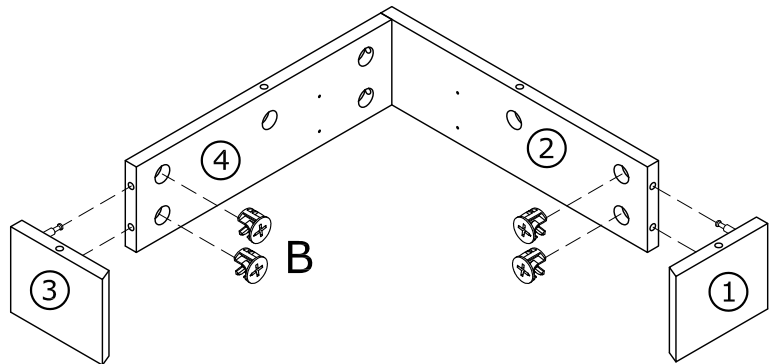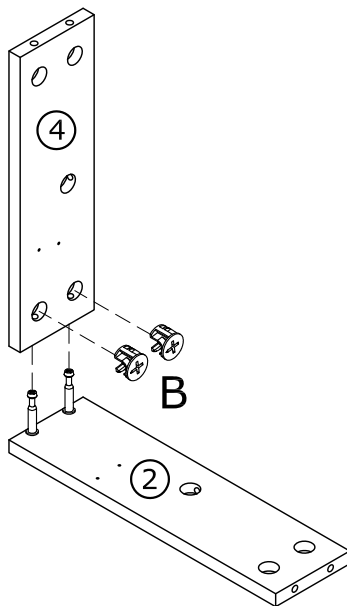

2

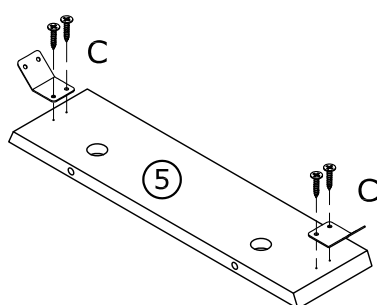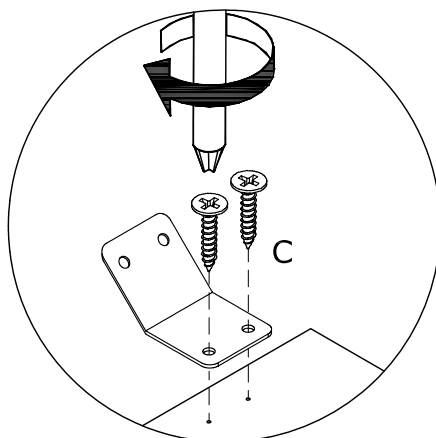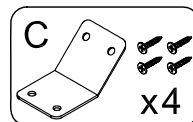





x2

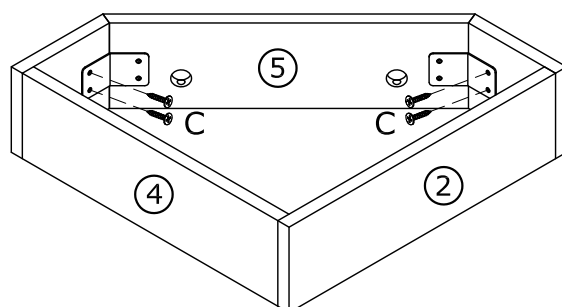



3

A  x13



B  x6

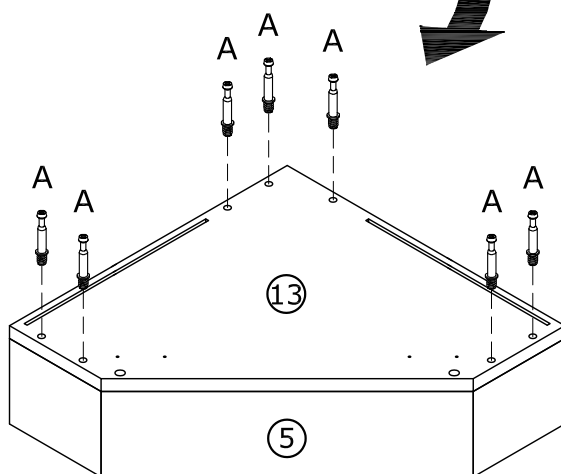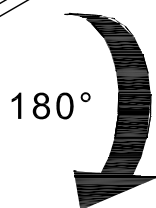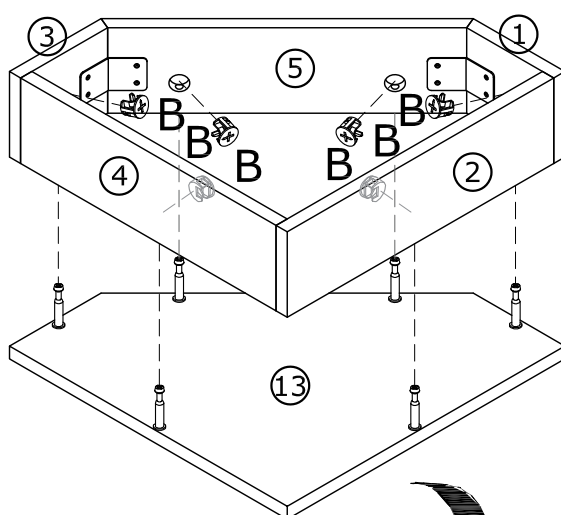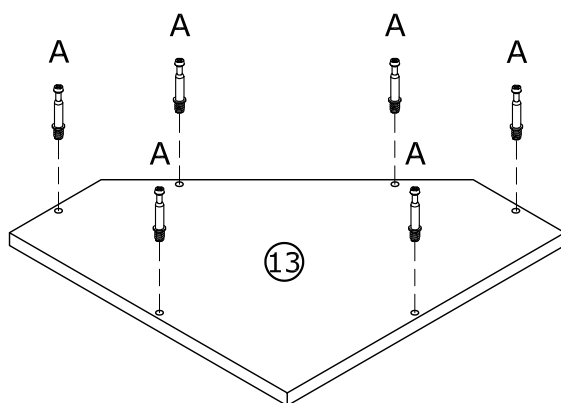

4

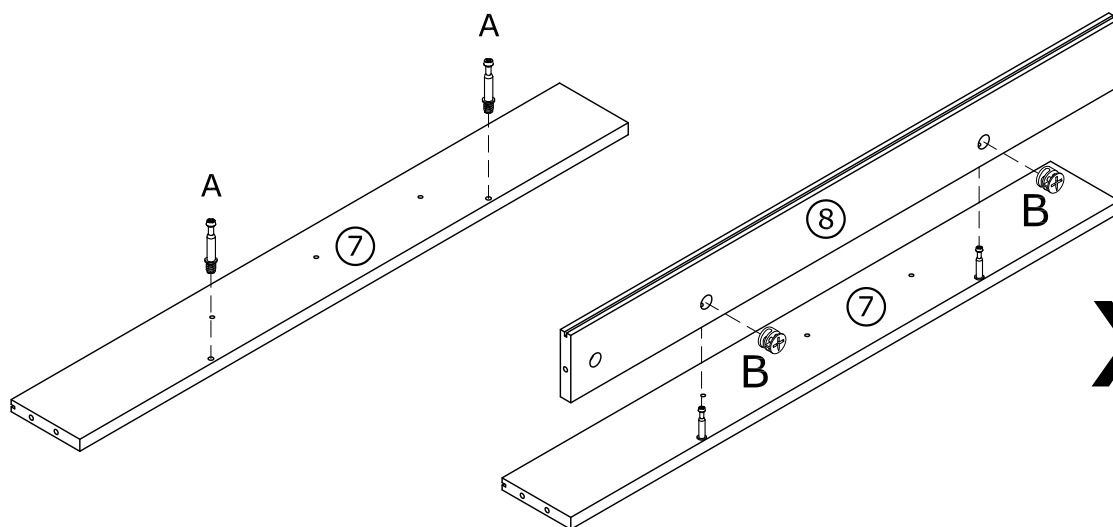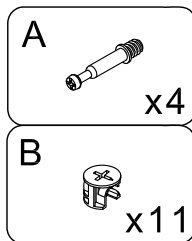

x2

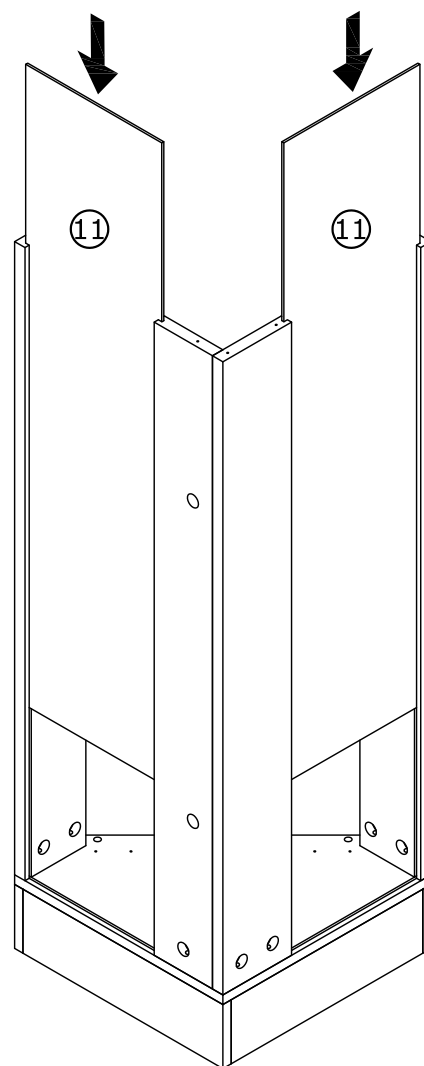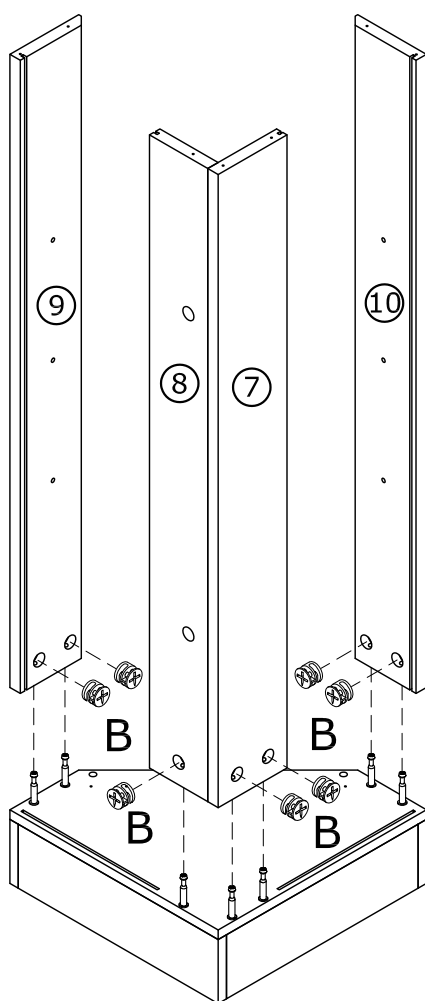




- D



x7
- A





x7

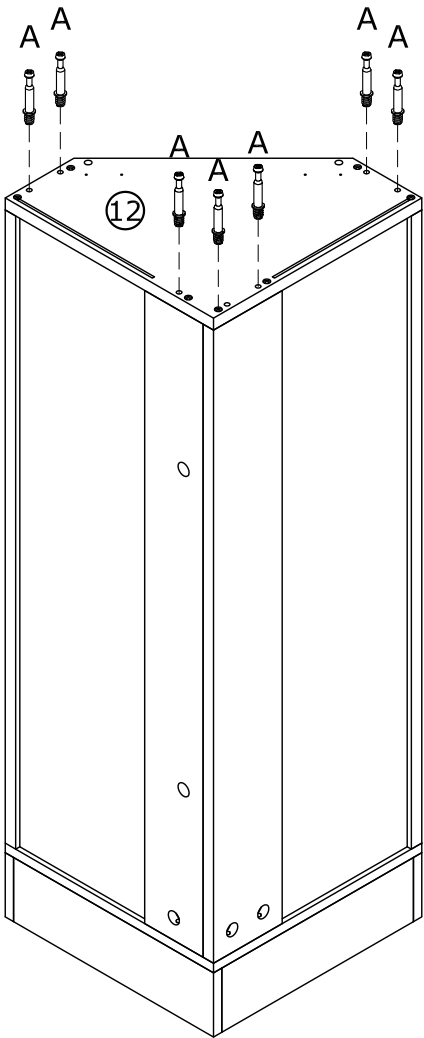
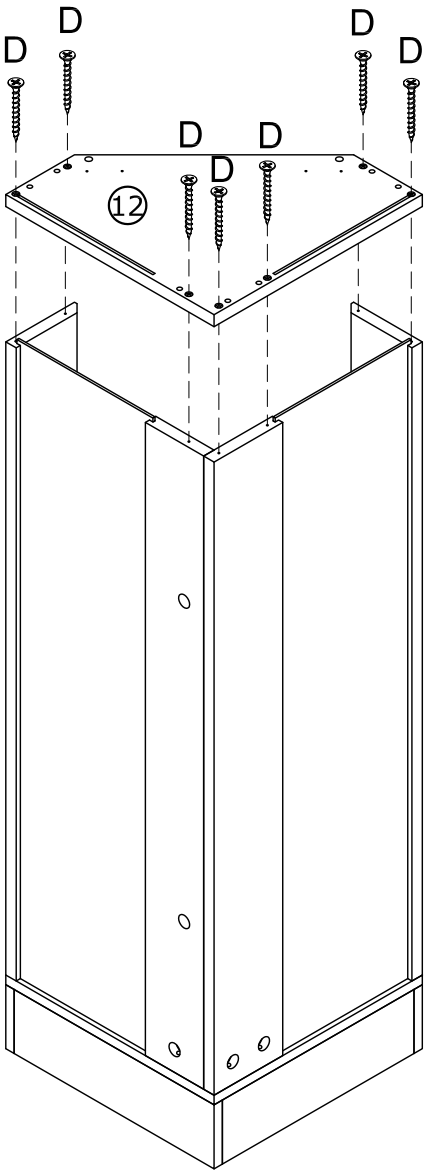
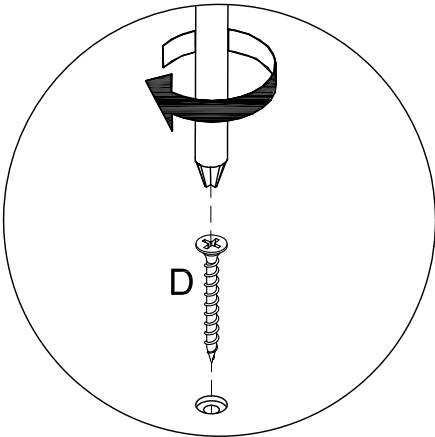



6

B  x7

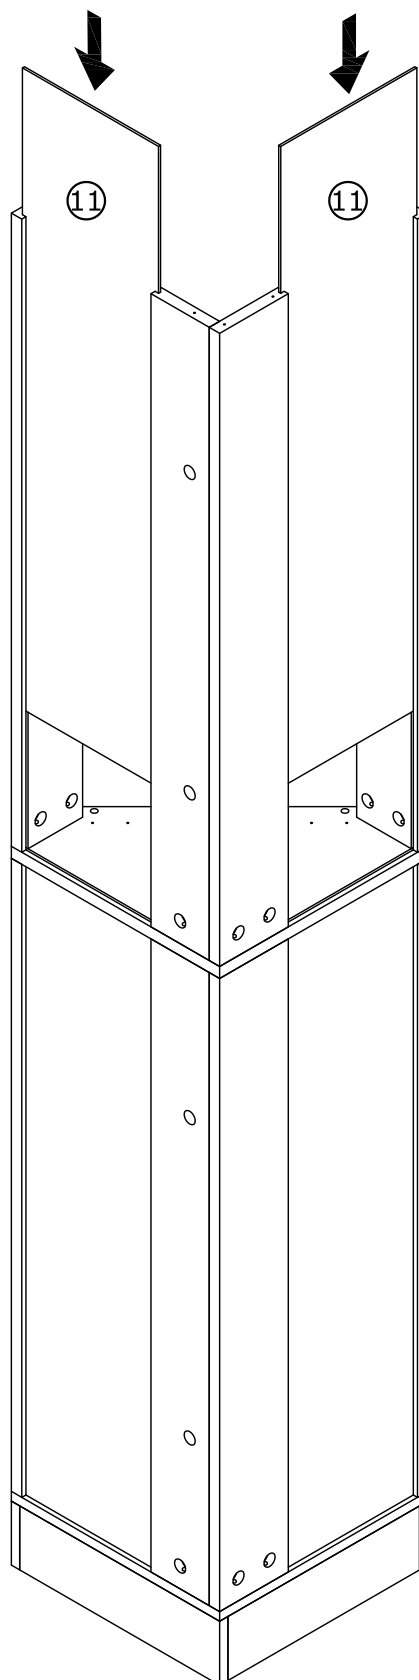
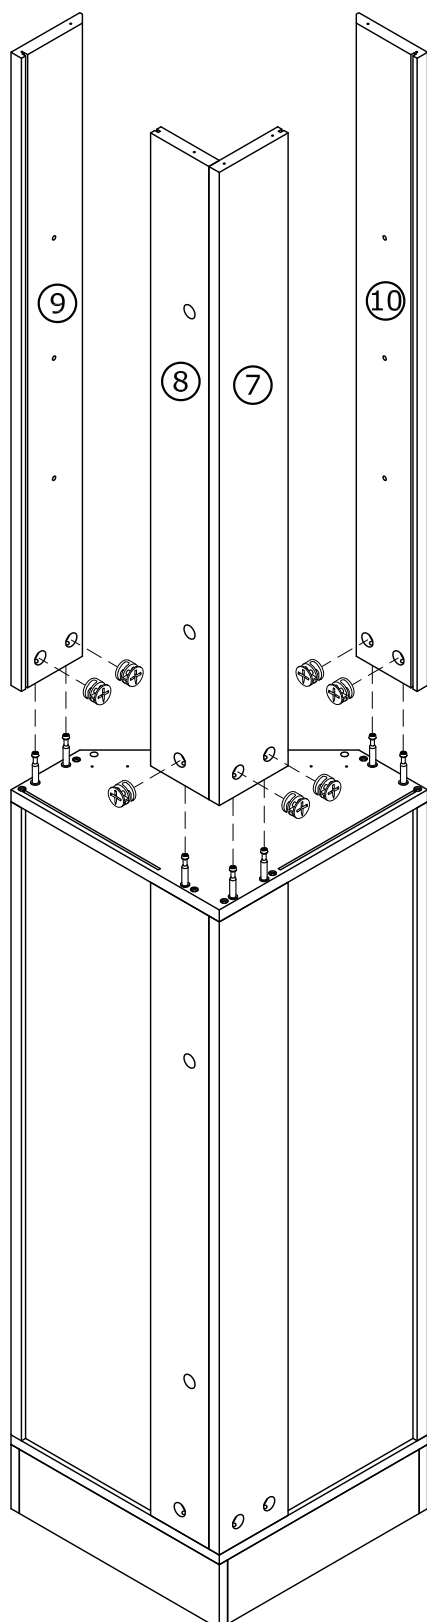


7

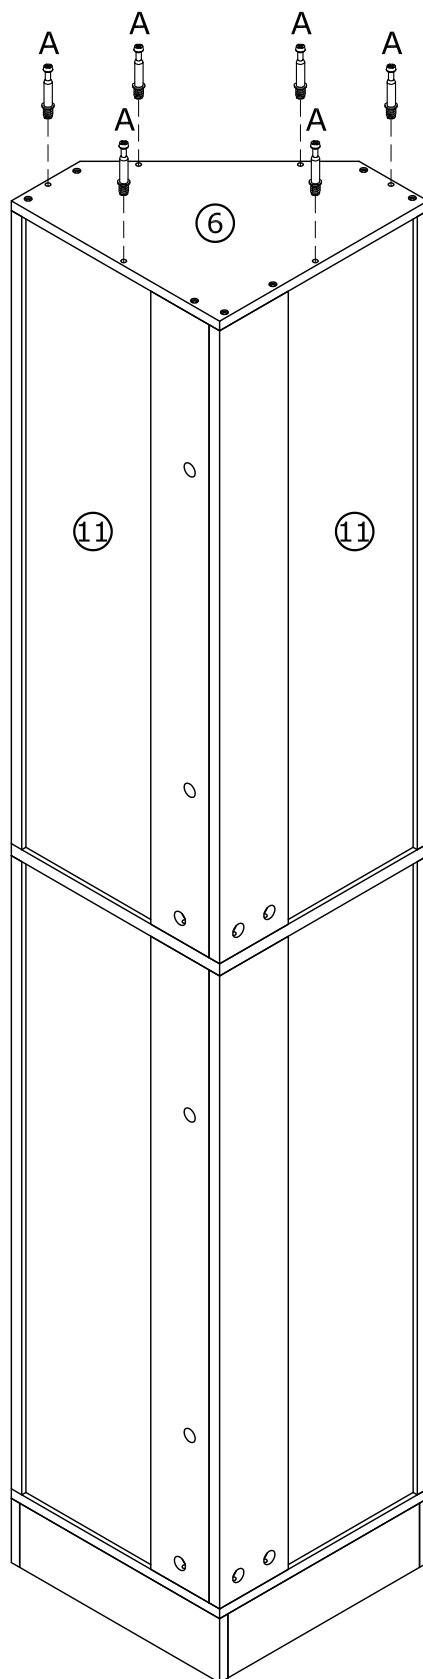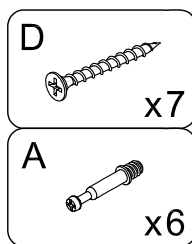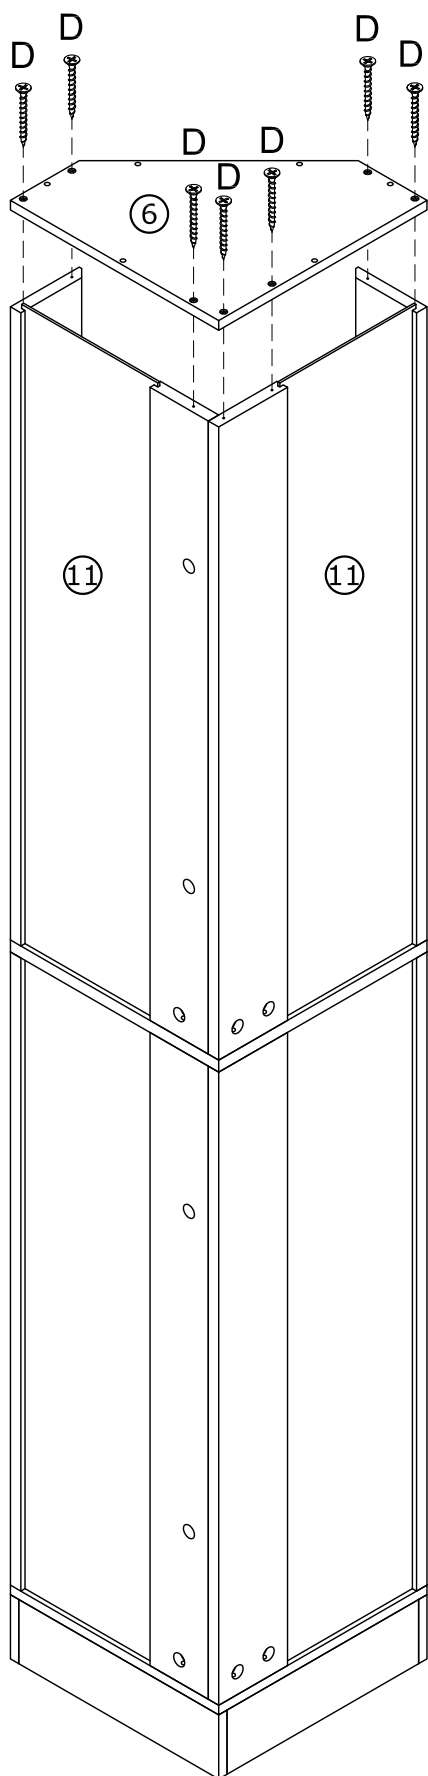





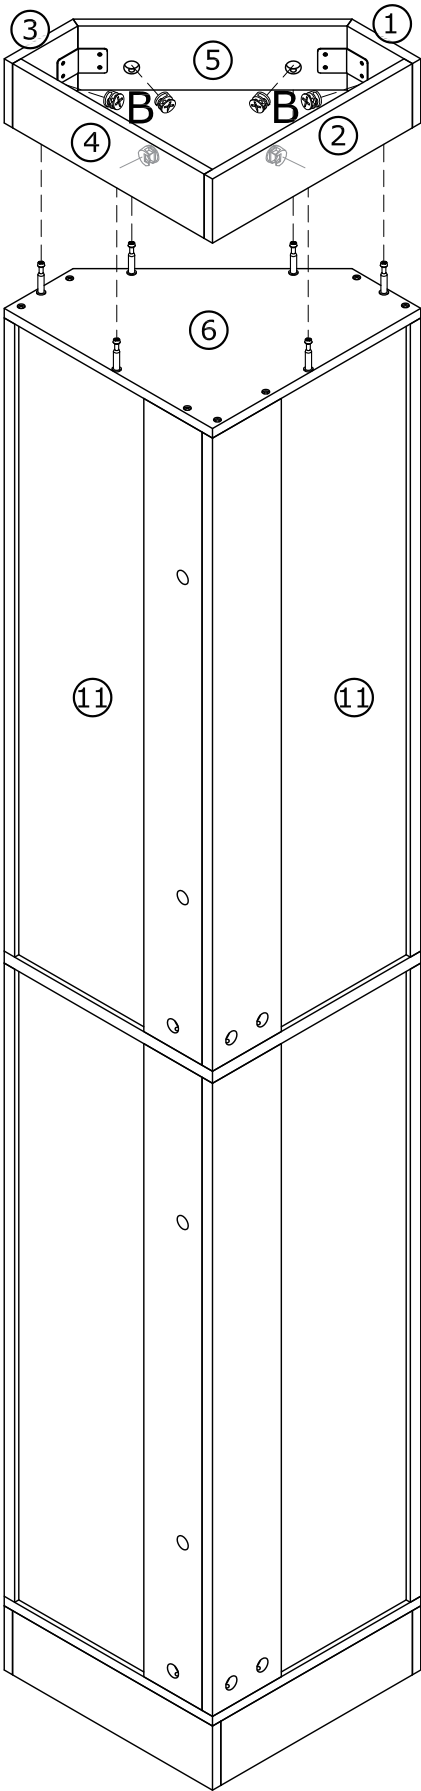


9

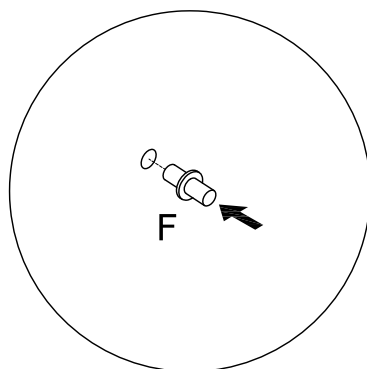
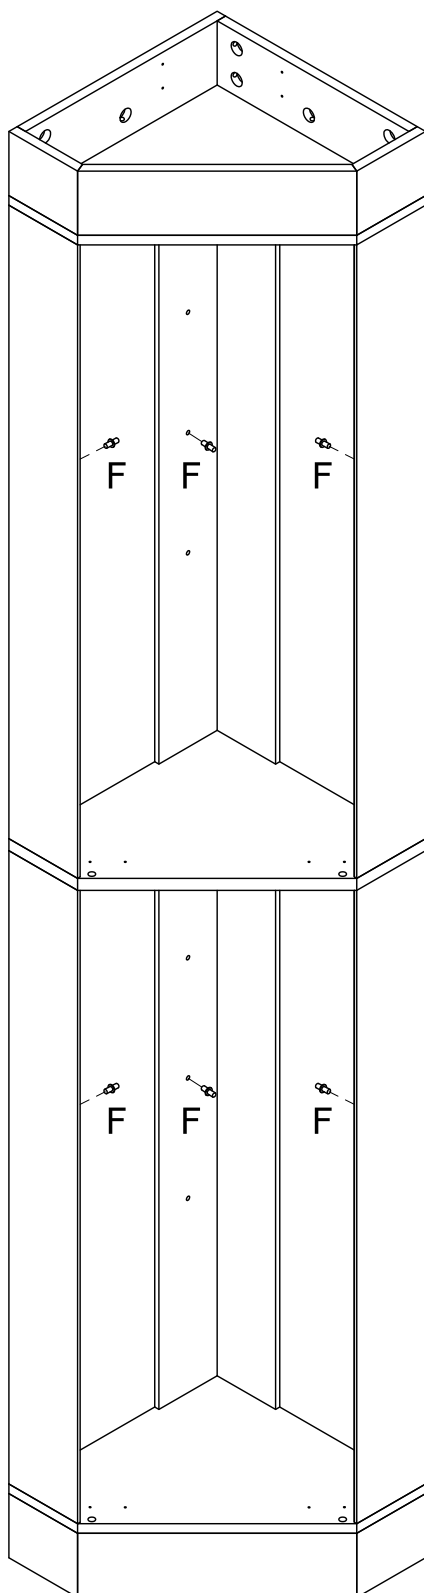


x6


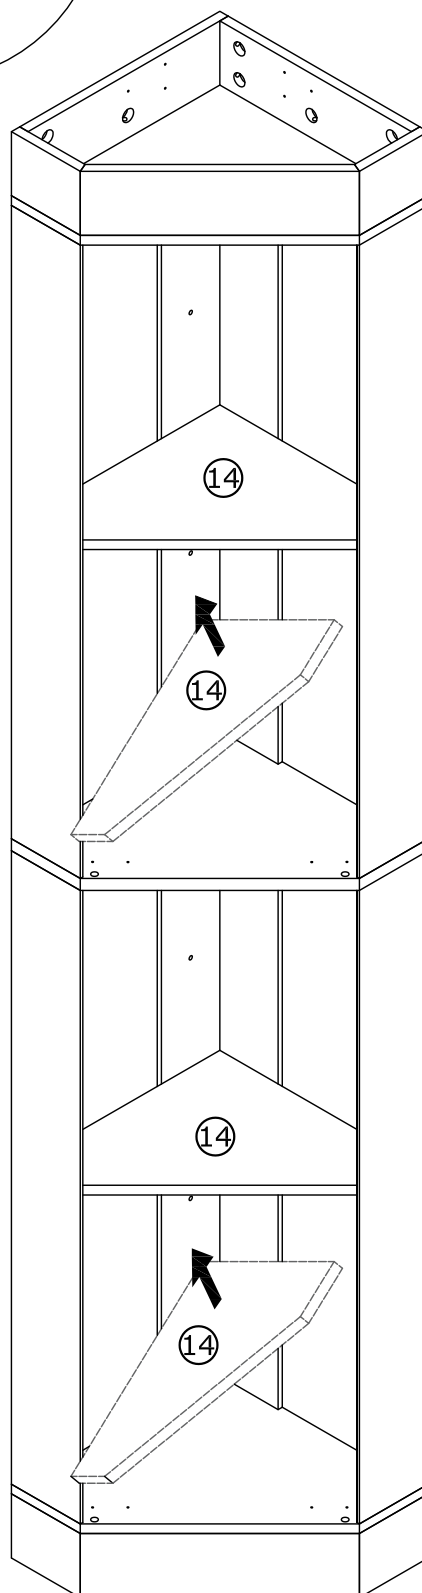


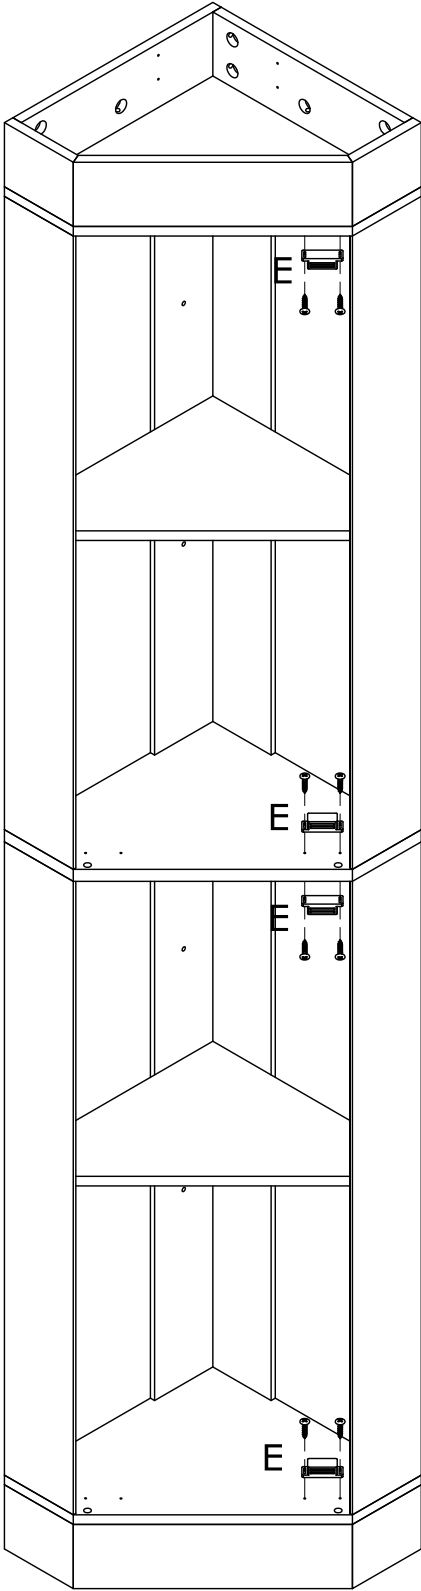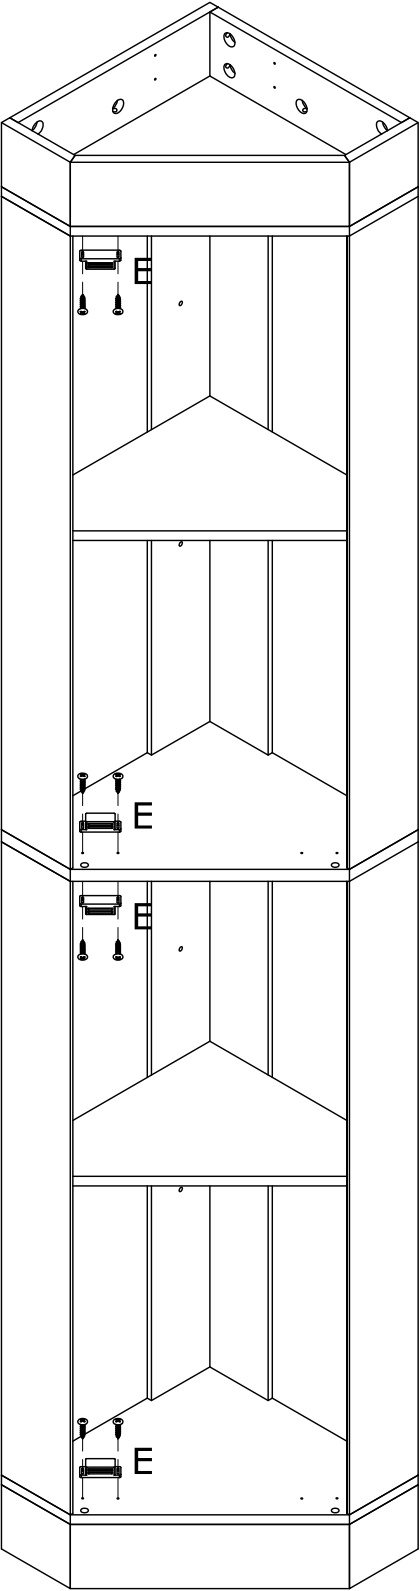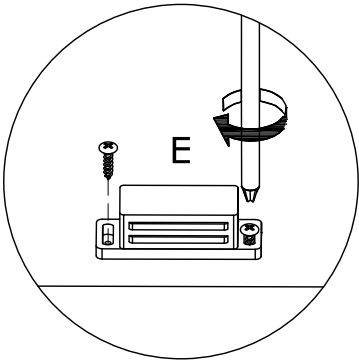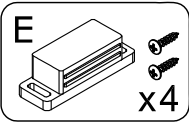


OR



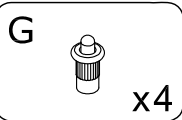
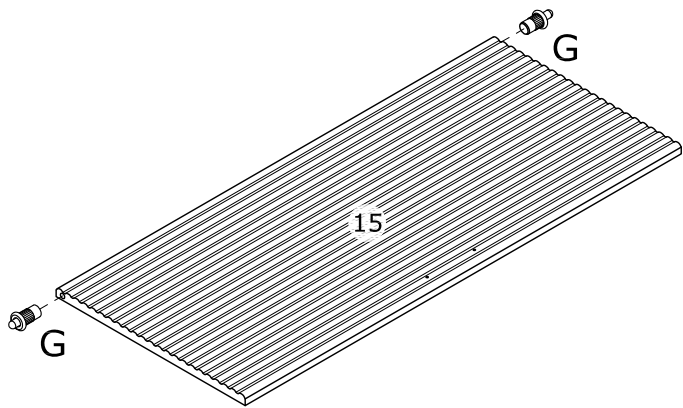


x2

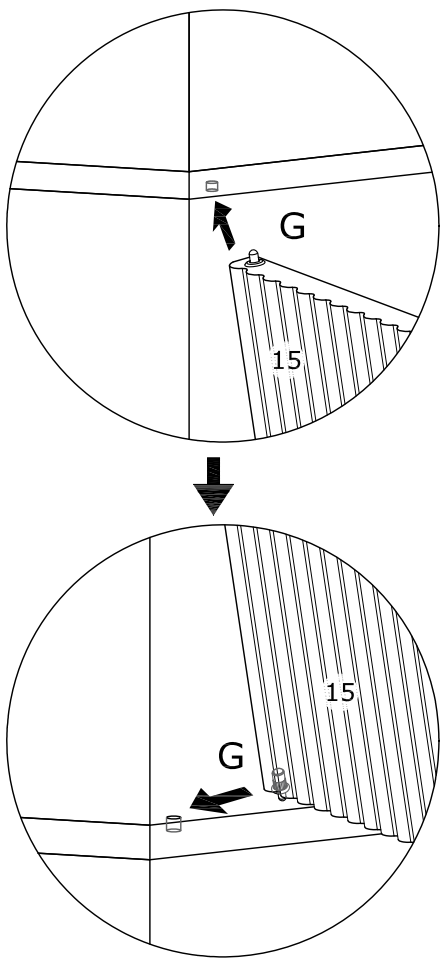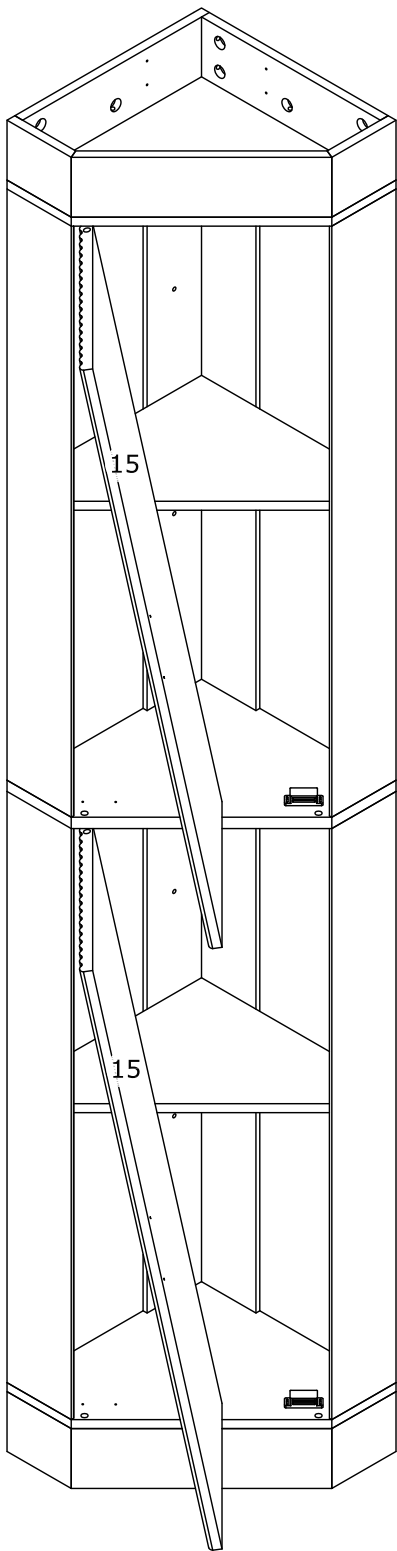




OR

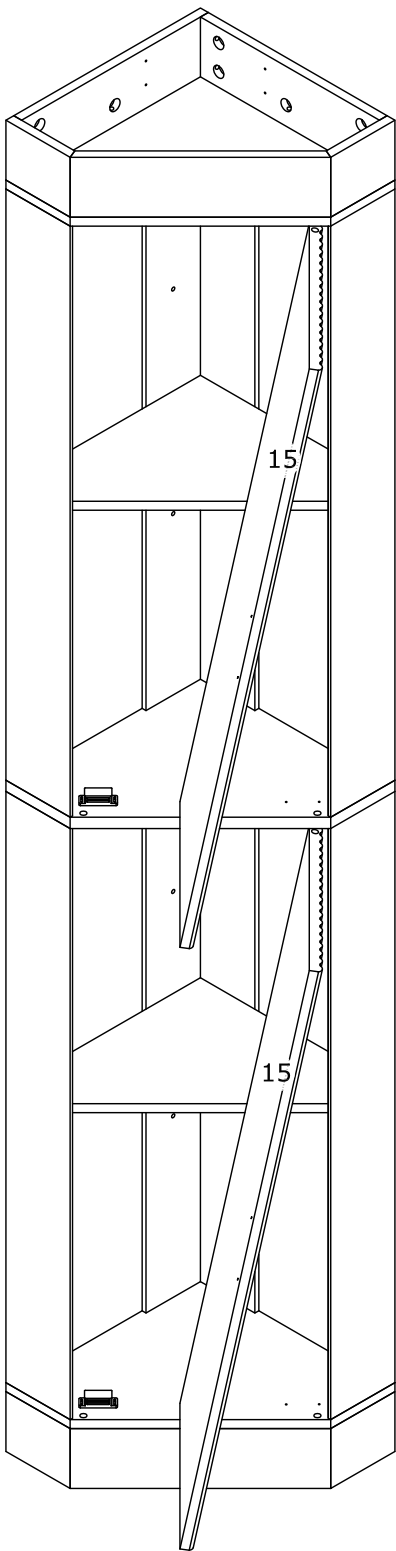

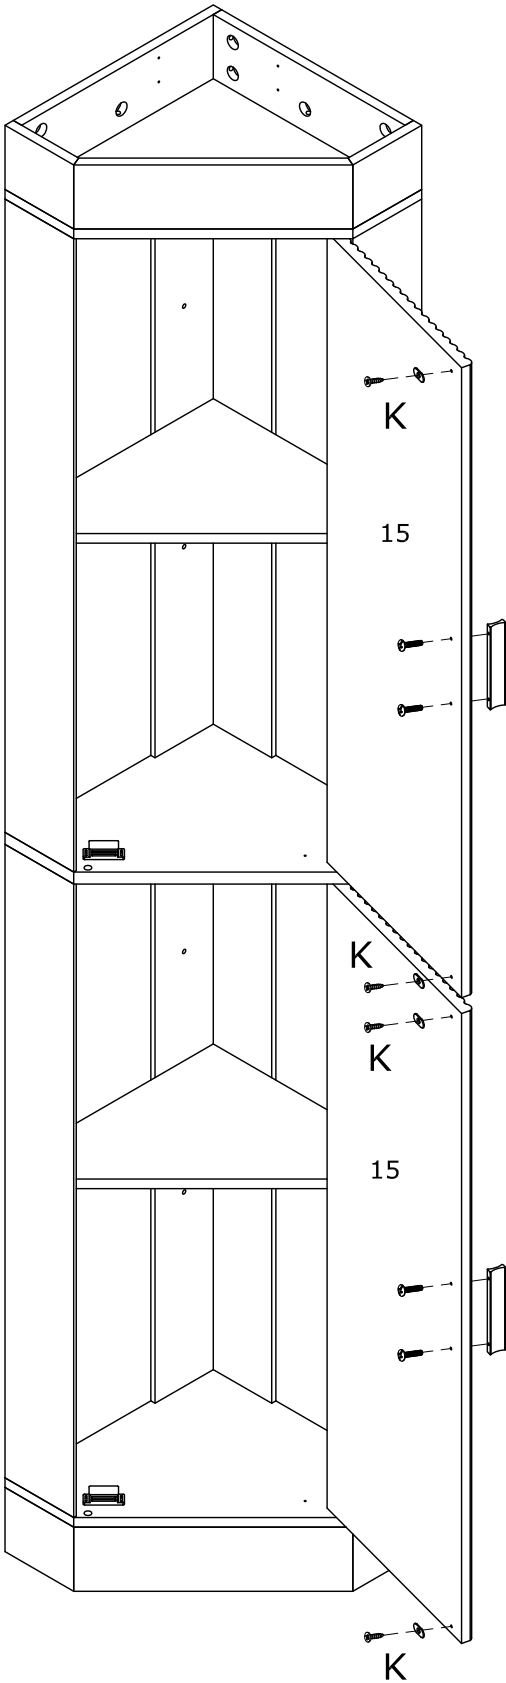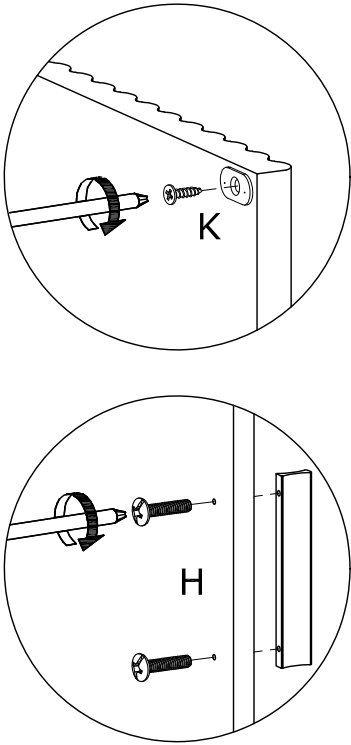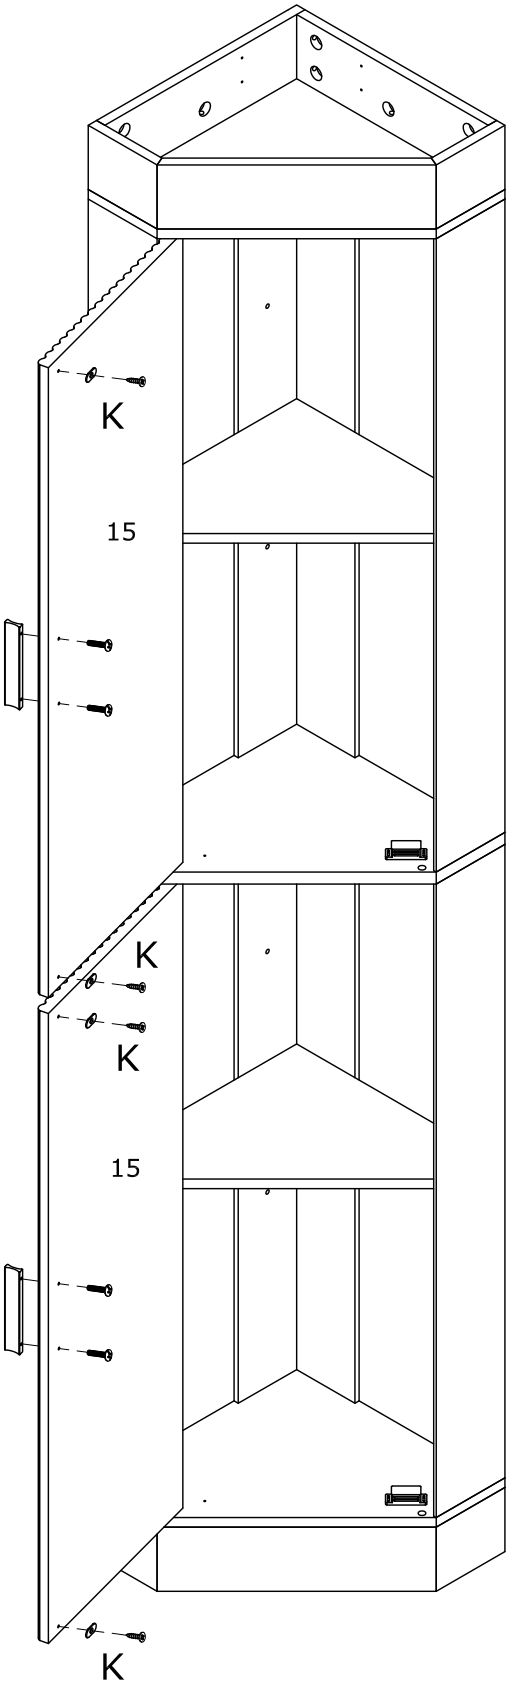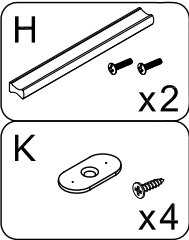

OR

13

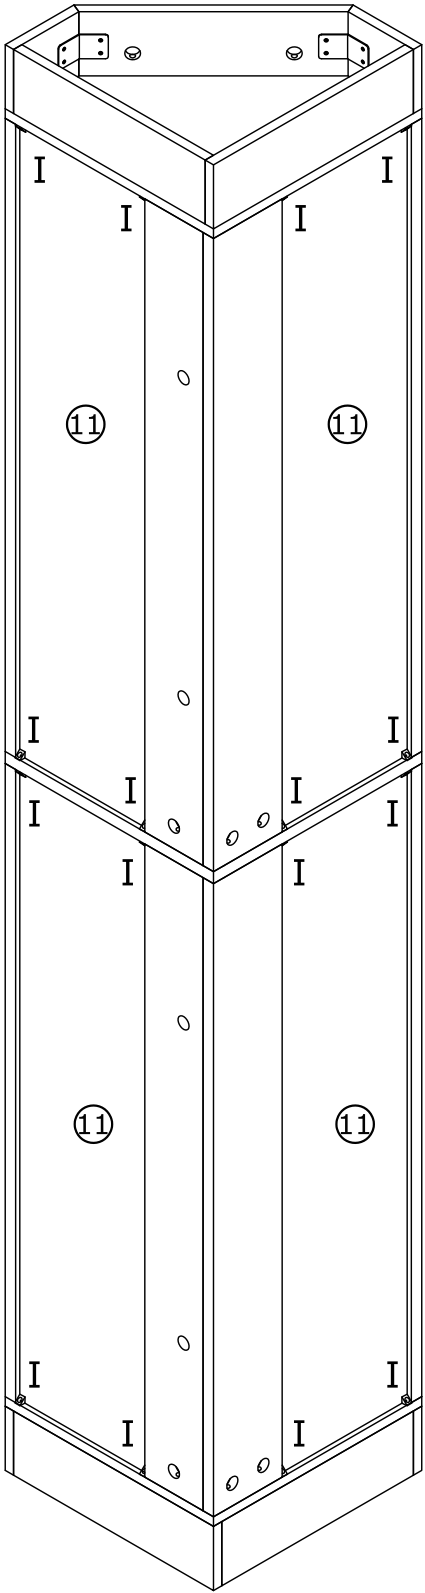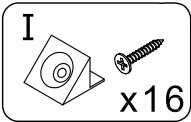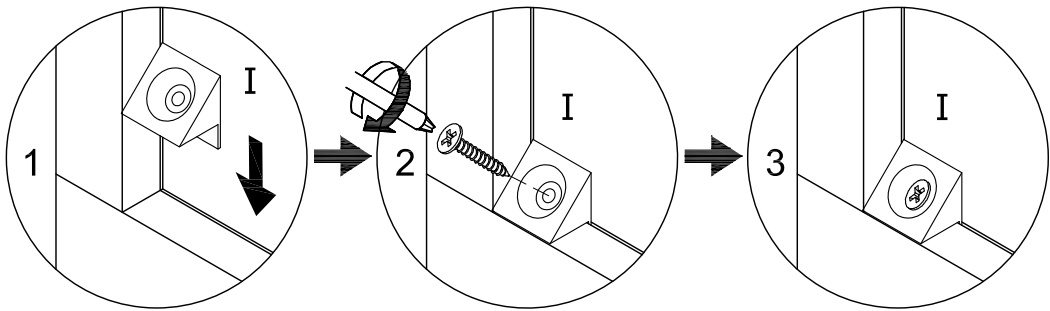

14

