

ASSEMBLY ***INSTRUCTION***



WARRANTY

One-year limited manufacturer's warranty is offered from the date of purchase. The warranty covers manufacturing defects in materials and parts (including armrests, sofa/chair legs, cushions, seat panel, hardware, etc.).

The warranty does not cover damage caused by accidents or any unreasonable use.

This limited warranty is only applicable to the original purchase and is non-transferable. When making a claim, the original receipt is required as proof.

CUSTOMER SERVICE

Ovios is committed to providing quality products and timely customer service. If you have any further questions or need replacement parts, Please see the information below to contact us. Our customer service will respond to you as soon as possible .

Cushion Recovery Notice

For convenient packaging, the seat cushions, back cushions, and ottoman pads have been vacuum-compressed. After unpacking, please allow 5 to 7 days for them to fully expand and regain their original shape. Gently patting or fluffing the cushions can help speed up the recovery process, which typically takes between 72 hours and one week.



Seat Cushion x3

Packaging 1



Back Cushion x3



Cushion 1 x3



Cushion 2 x2



Backrest Cover Cloth x1












Ottoman Cushion x2

Packaging 2


Packaging 1 in BOX2
Packaging 2 in BOX2

Parts List

Part Number	Picture	Description	QTY	Part Number	Picture	Description	QTY
①		Sofa Panel	7	⑪		Seat Frame	3
②		Sofa Panel	4	⑫		Middle Sofa Leg	4
③		Hollow Iron Tube 1	4	⑬		Sofa Back Supported Leg	2
④		Hollow Iron Tube 2	8	⑭		Backrest Cover Cloth	1
⑤		Slat	30	⑮		Seat Cushion	3
⑥		Sofa Leg	12	⑯		Back Cushion	3
⑦		Ottoman Cushion	2	⑰		Cushion 1	3
⑧		Right Armrest	1	⑱		Cushion 2	2
⑨		Left Armrest	1				
⑩		Backrest	3				

A		Screw(M6*16)	16	G		Nut Wrench	1
B		Screw(M6*35)	38	H			12
C		Screw(M6*55)	46	I		Foot Pad	12
D		Gasket	128	J			60
E		Allen Key	1	K		L-Shaped Iron Sheet	2
F		Hexagon Nut	28	L		Iron Sheet	2

Alignment First, Then Tighten Do not fully tighten any screws until all holes are aligned. Insert all screws first, then secure them evenly.

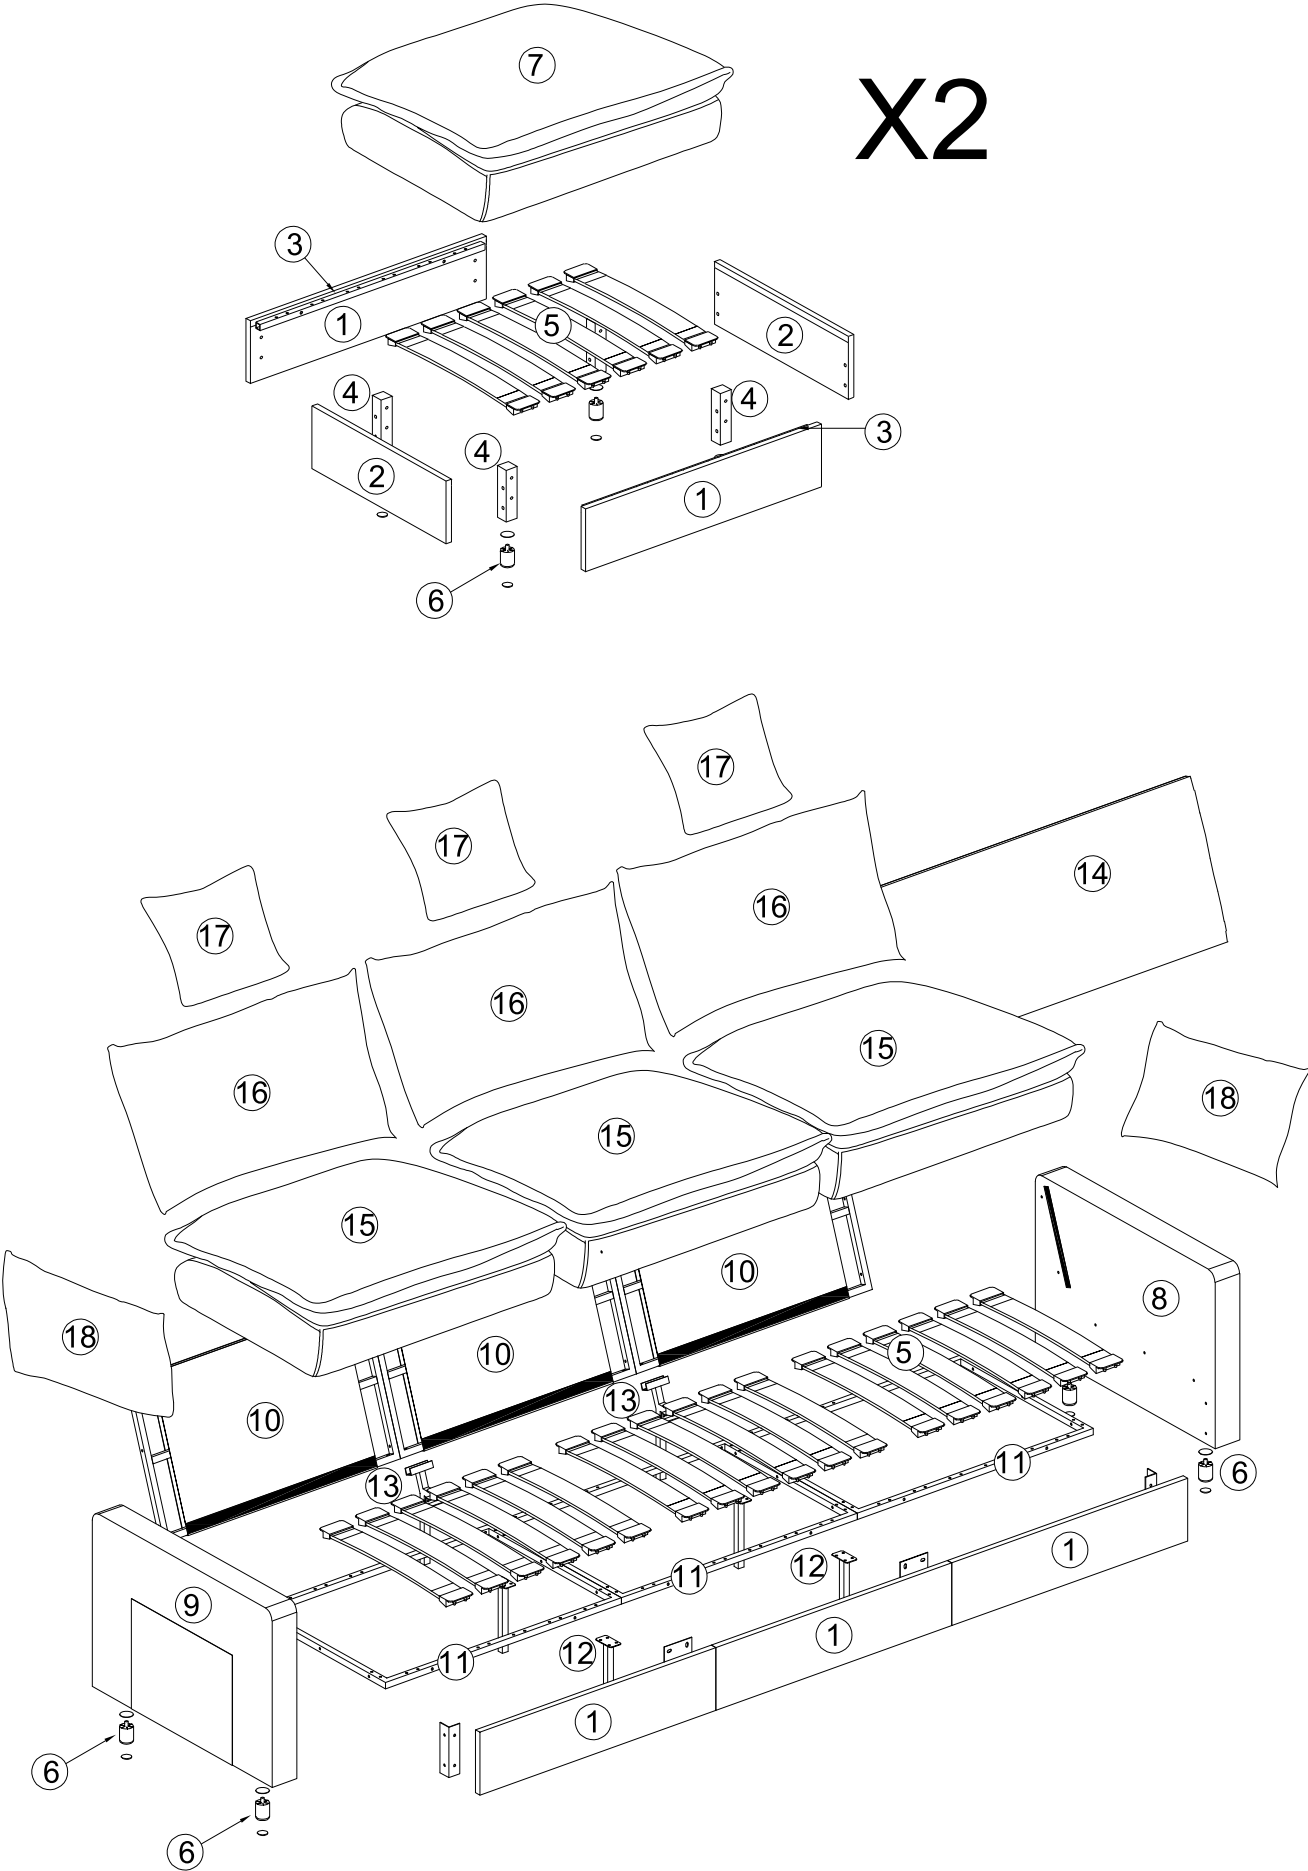


Step 1:

① 4pcs	③ 4pcs	④ 8pcs
B 6*35 8pcs	C 6*55 16pcs	D 24pcs

	80%	✓
80%	100%	✗

X4

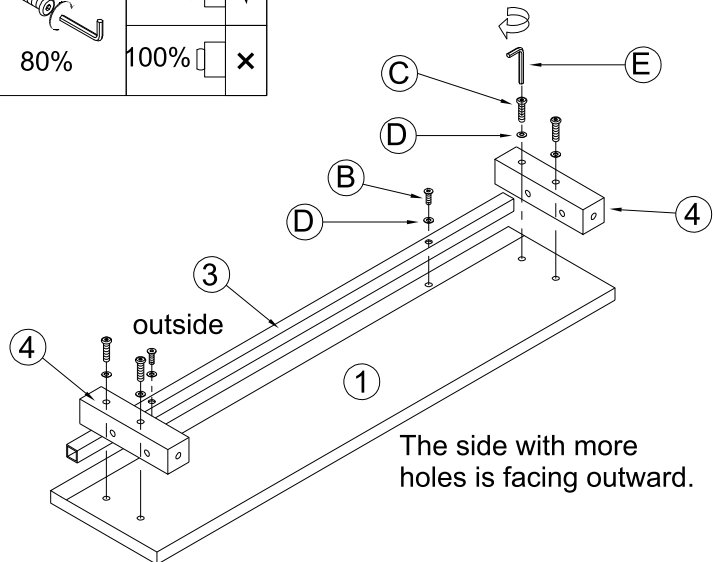


Insert part B and C through component D, then attach parts 3 and 4 to part 1.
Do not fully tighten B and C—tighten them to approximately 80% of final torque.

Step 2:

② 4pcs	C 6*55 16pcs	D 16pcs
-----------	-----------------	------------

	80%	✗
100%	100%	✓


X2

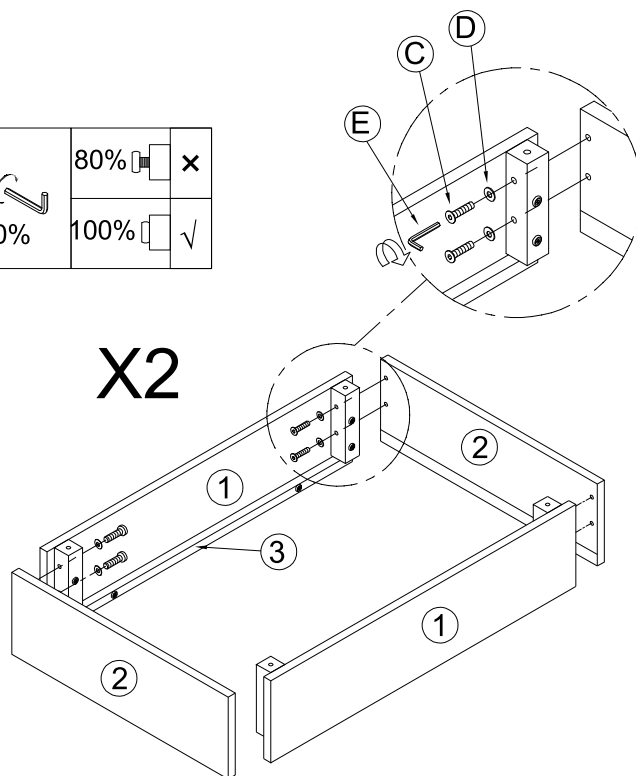

Insert C through D and connect the pre-assembled components.
Tighten all screws completely.

Step 3:

⑥ 8pcs	H 8pcs	I 8pcs
-----------	-----------	-----------

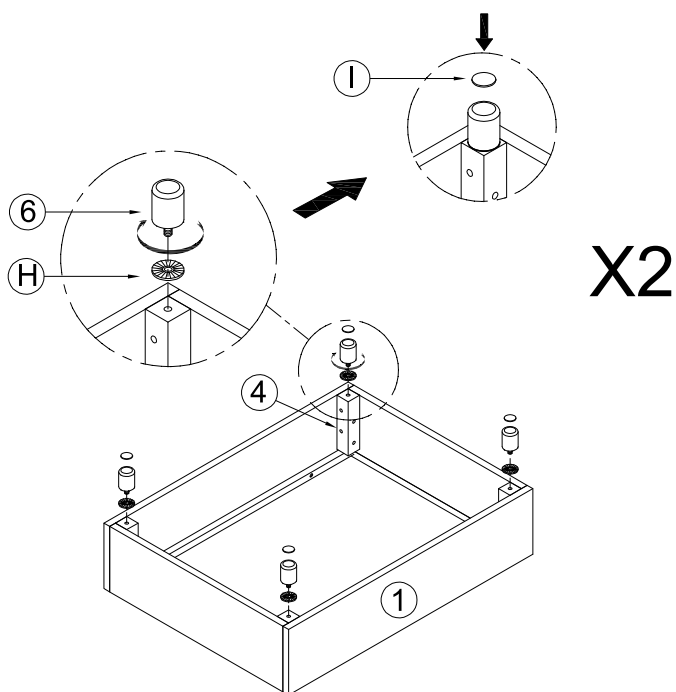


Insert part 6 into H, then mount the assembly onto part 4.
Finally, attach component I to part 6.

Step 4:


⑤ 30pcs	J 60pcs
------------	------------

X30

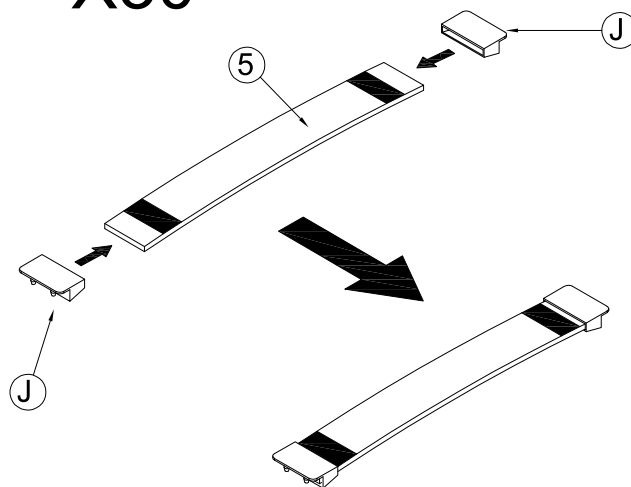


Place part 5 into the designated slot on component J, ensuring the Velcro-faced side is oriented upward.

Step 5:

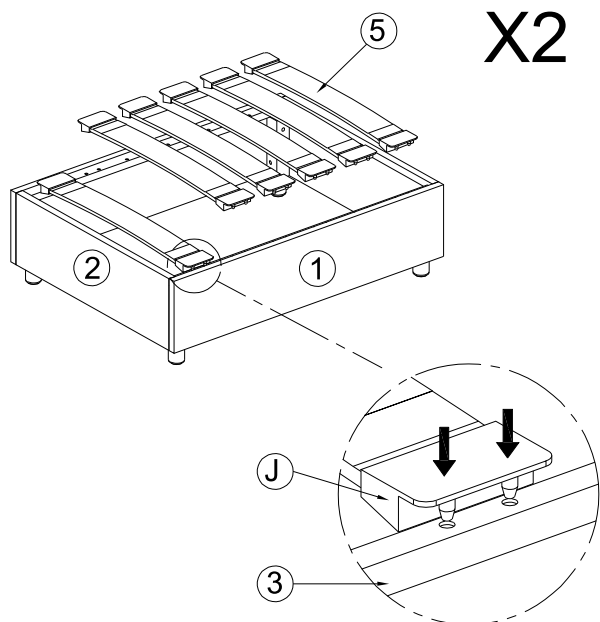

Align J with the mounting hole, then insert and secure it in place.


Step 6:

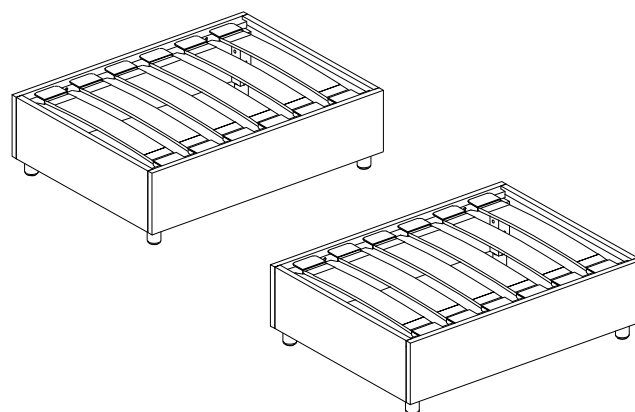

Finish

Step 7:


⑥	⑧	⑨	A	D	K	H	I
4pcs	1pcs	1pcs	4pcs	4pcs	2pcs	4pcs	4pcs

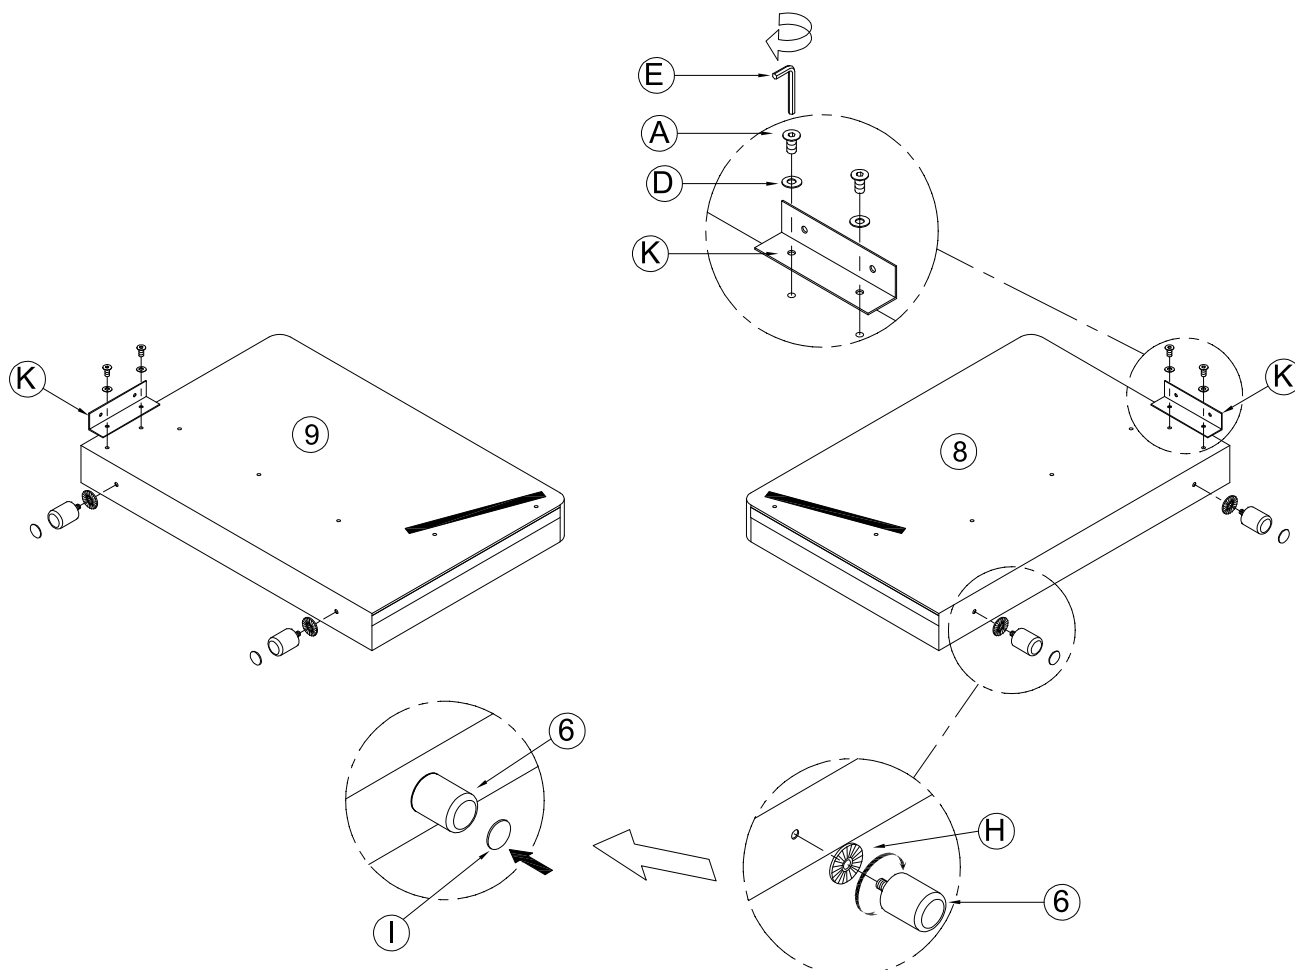

Insert screw A through D, then secure component K to parts 8 and 9. Do not fully tighten A—tighten it to approximately 80% of final torque. Next, insert part 6 into H and mount the assembly onto parts 8 and 9. Finally, attach component I to part 6.

Step 8:

⑩	C 6*55	D	F
3pcs	4pcs	8pcs	4pcs

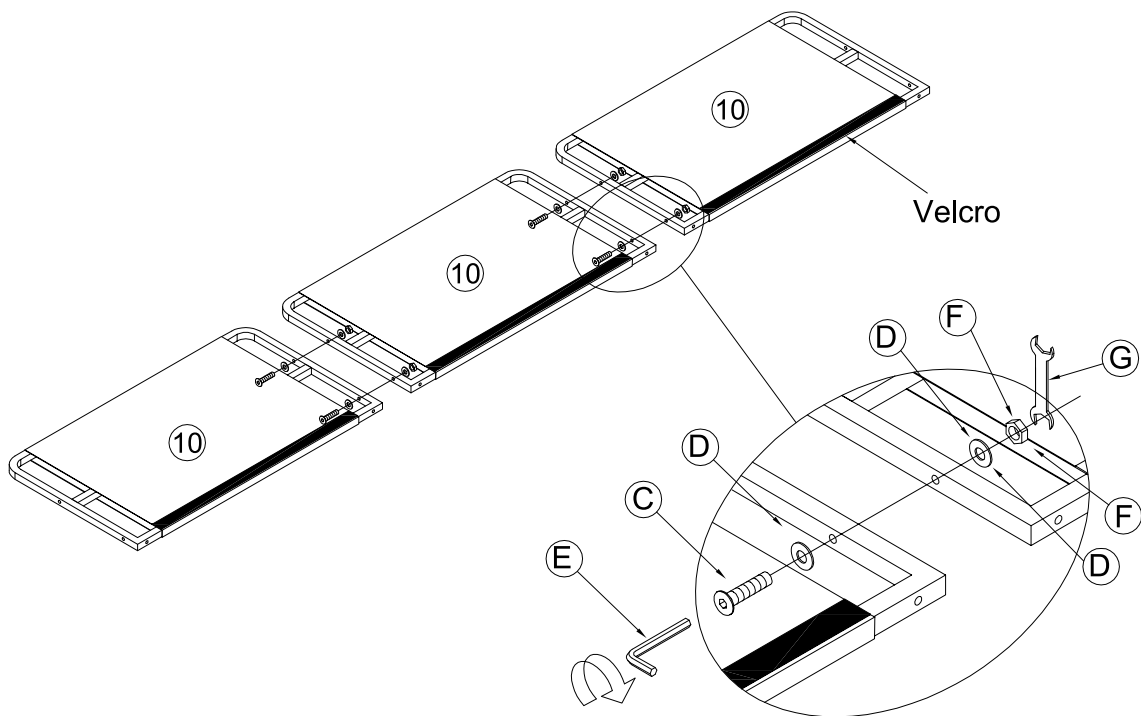

Install the backrest.


Pass screw C through D and use F as an auxiliary lock.

Ensure the Velcro side faces forward—note that the backrest fabric is rotatable for proper orientation.

Step 9:

⑪	⑫	⑬	B 6*35	D	F
3pcs	4pcs	2pcs	20pcs	40pcs	20pcs


Install with the side that has more holes facing up. Part 12 goes underneath.

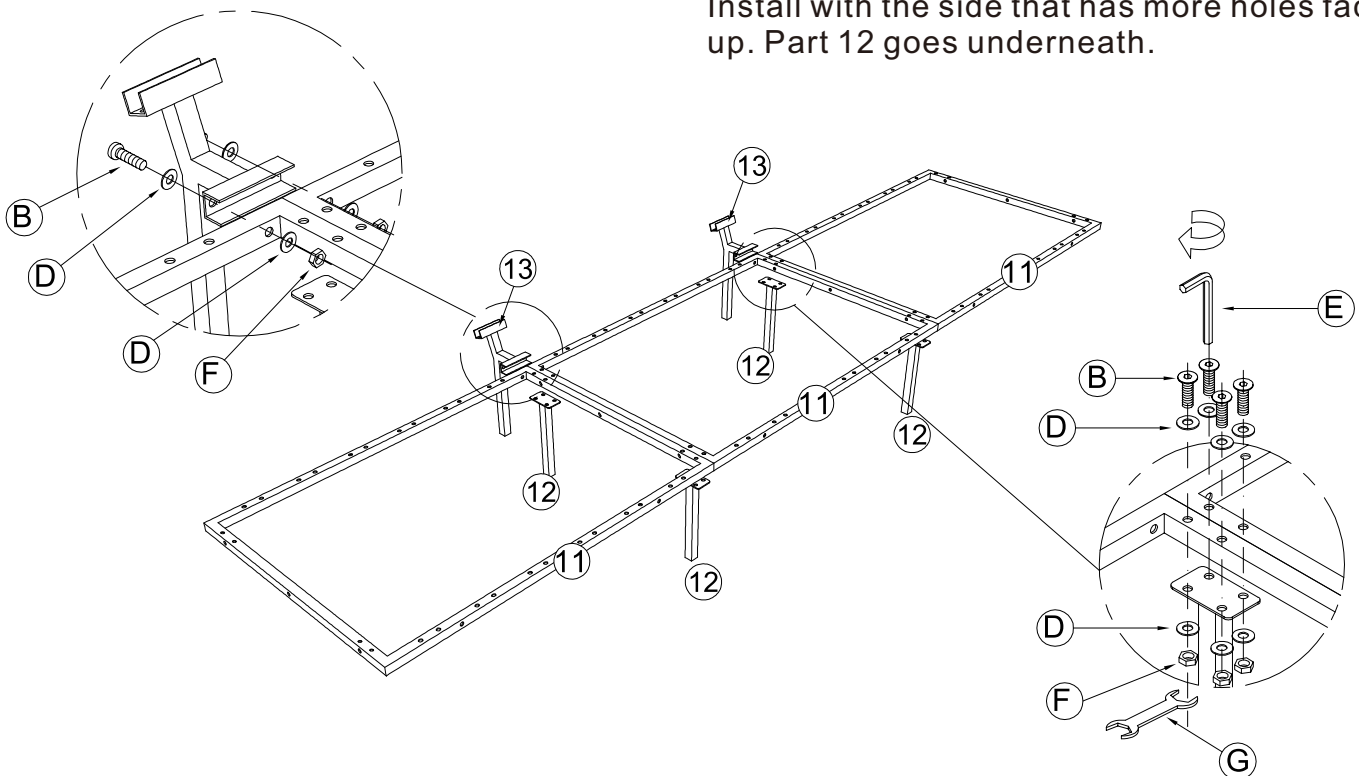

Pass screw B through D and engage F as an auxiliary lock. Secure the sofa's leg to the seat frame.

Step 10:


C	6*55	D	
			
10pcs		10pcs	

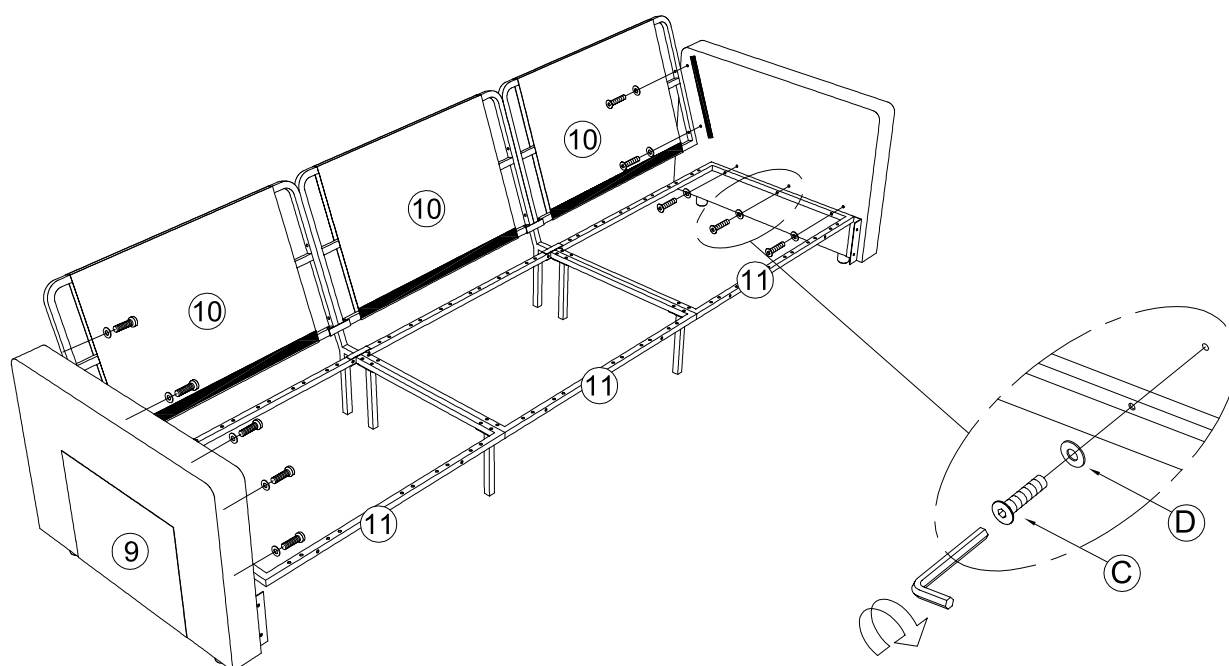

Insert screw C through D, then secure the seat frame and backrest to parts 8 and 9. Do not fully tighten C—tighten it to approximately 80% of final torque.


Step 11:

B	6*35	D		F	
					
4pcs		8pcs		4pcs	

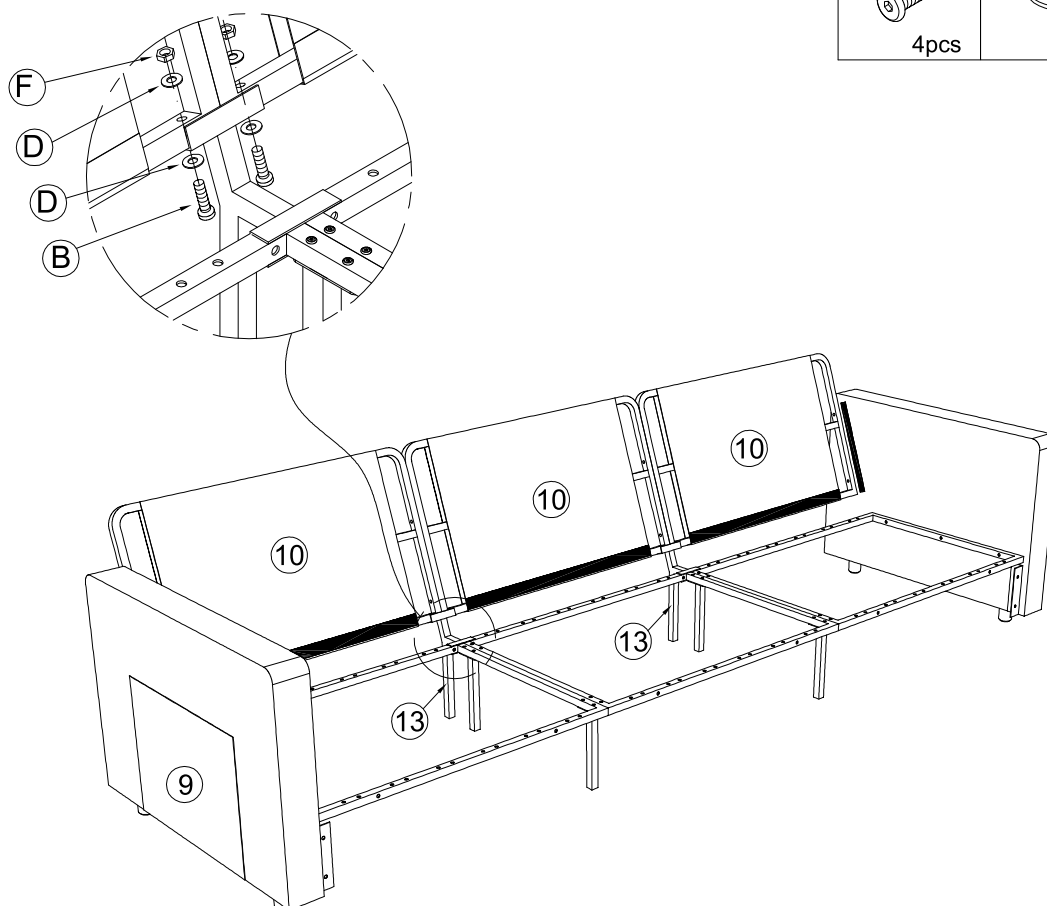


Pass screw B through D and engage F as an auxiliary lock. Secure the sofa's back leg to both the seat frame and the backrest.

Step 12:

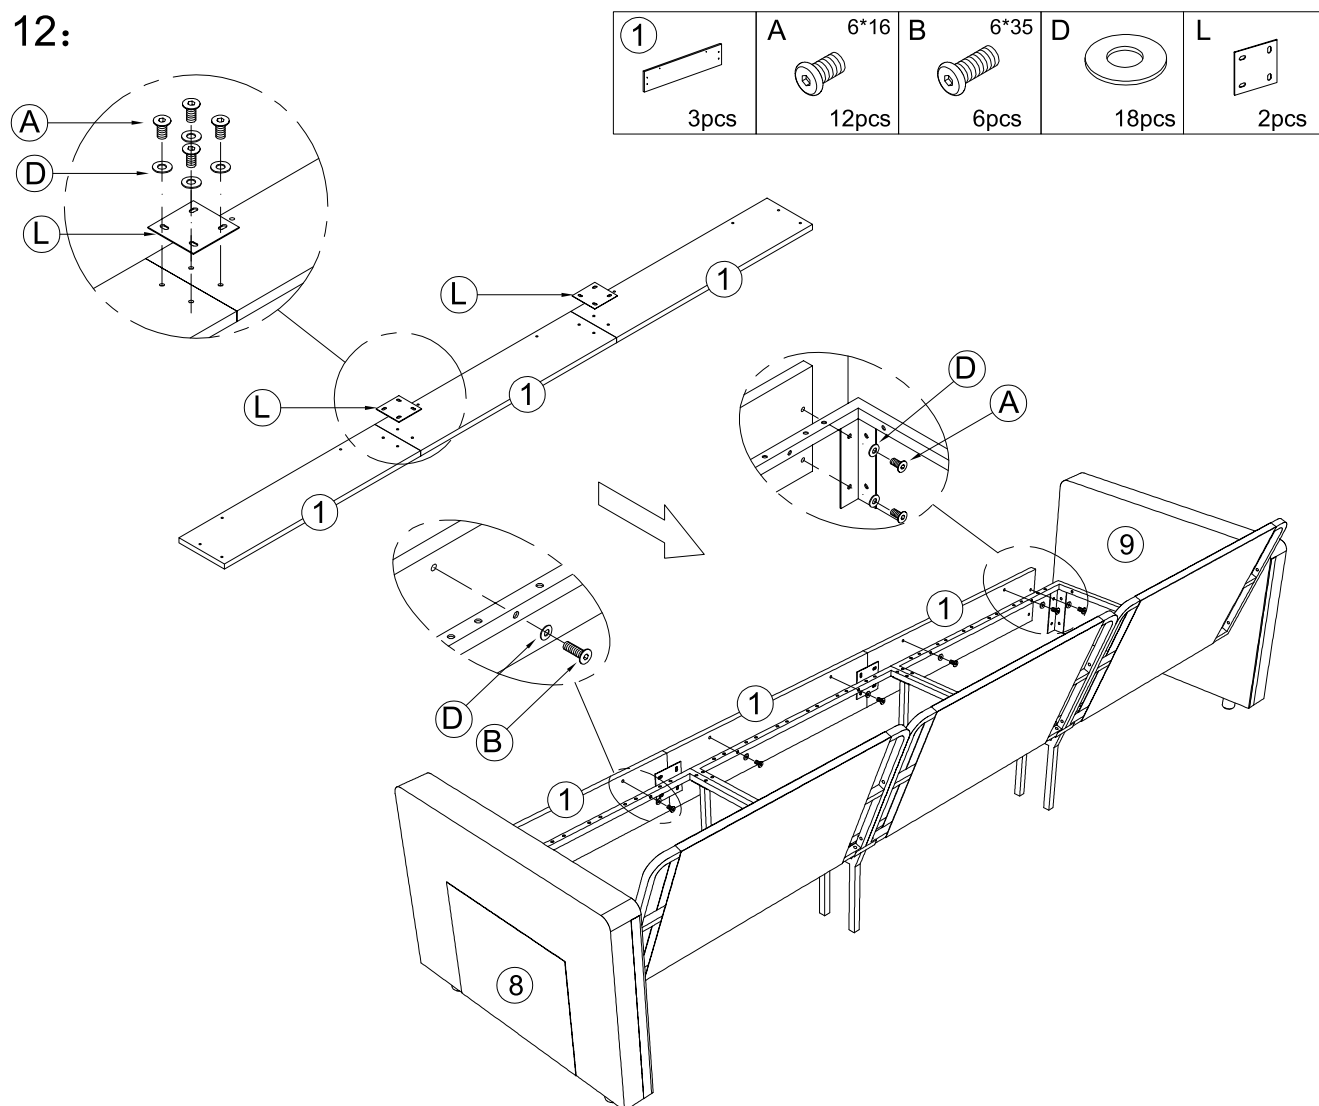


Insert A into D; attach L to 1.
Then pass A and B through D to connect pre-assembled parts.
Fully tighten all screws.

Step 13:

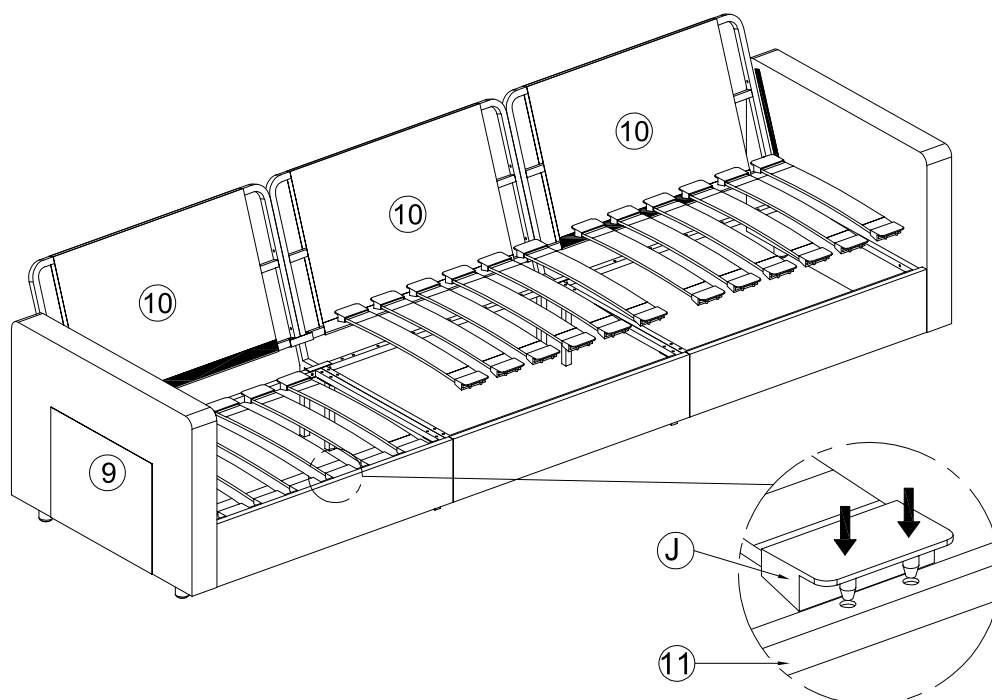


Align J with the mounting hole, then insert and secure it in place.

Step 14:

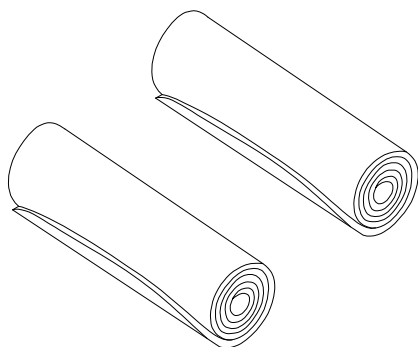



Take out the compressed package from the box.

Step 15:

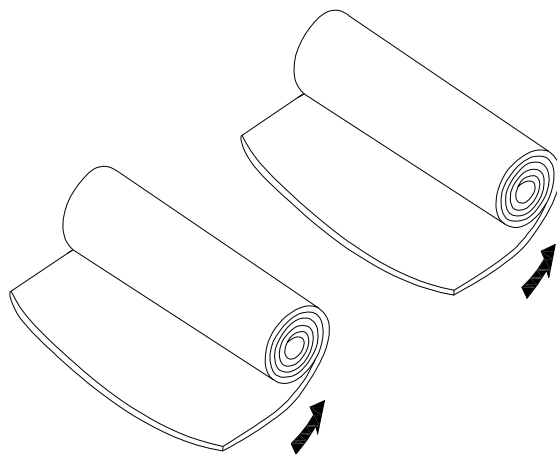


Tear off the outer film and unroll the package until flat.

Step 16:

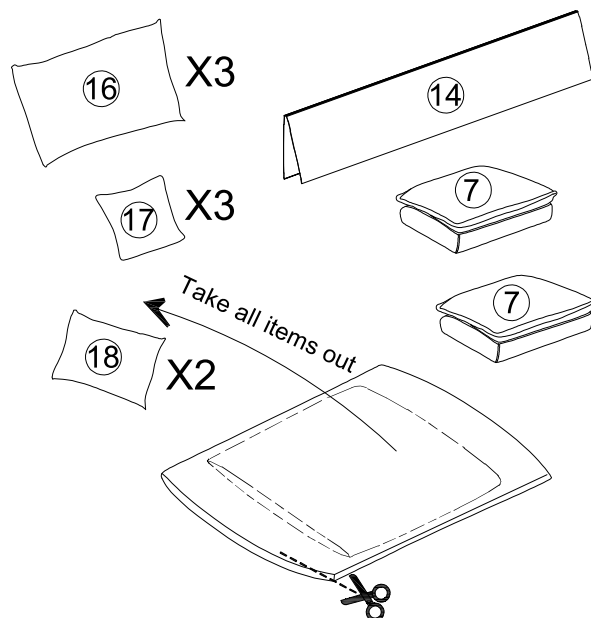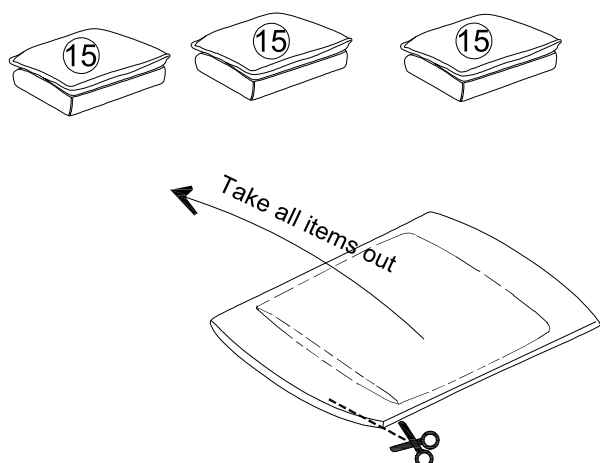


Carefully cut open the plastic bag with scissors.

Step 17:

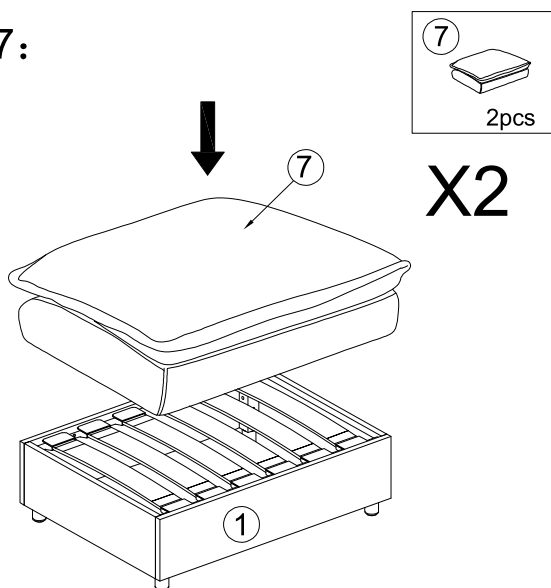


Place the cushion 7 on the Ottoman.

Step 18:

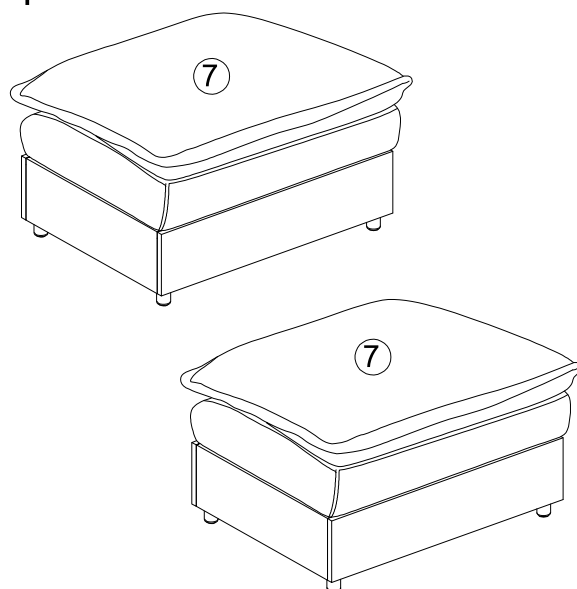


Step 19:

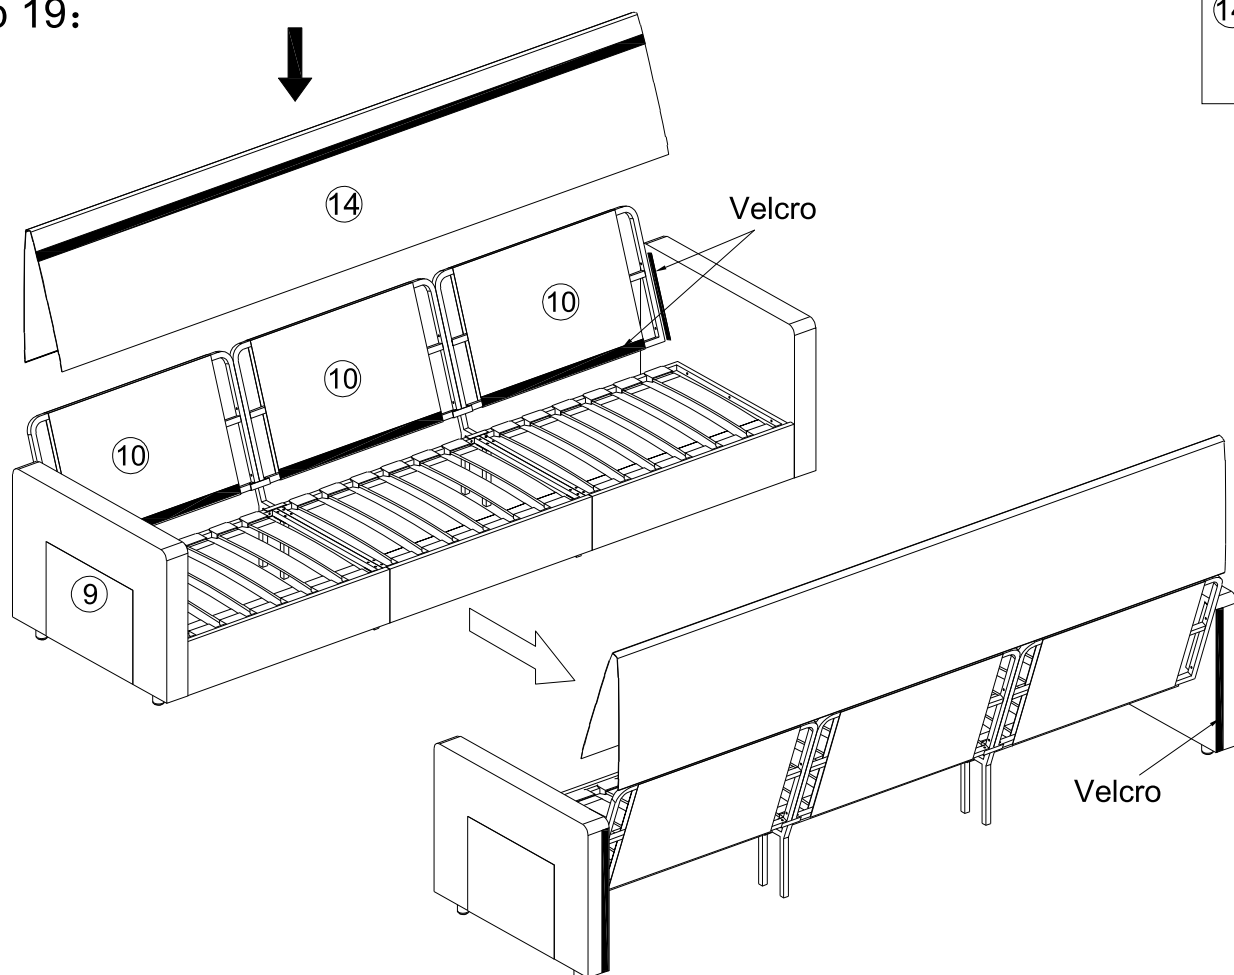


Cover components 10 with part 14, securing it in place with Velcro

Step 20:

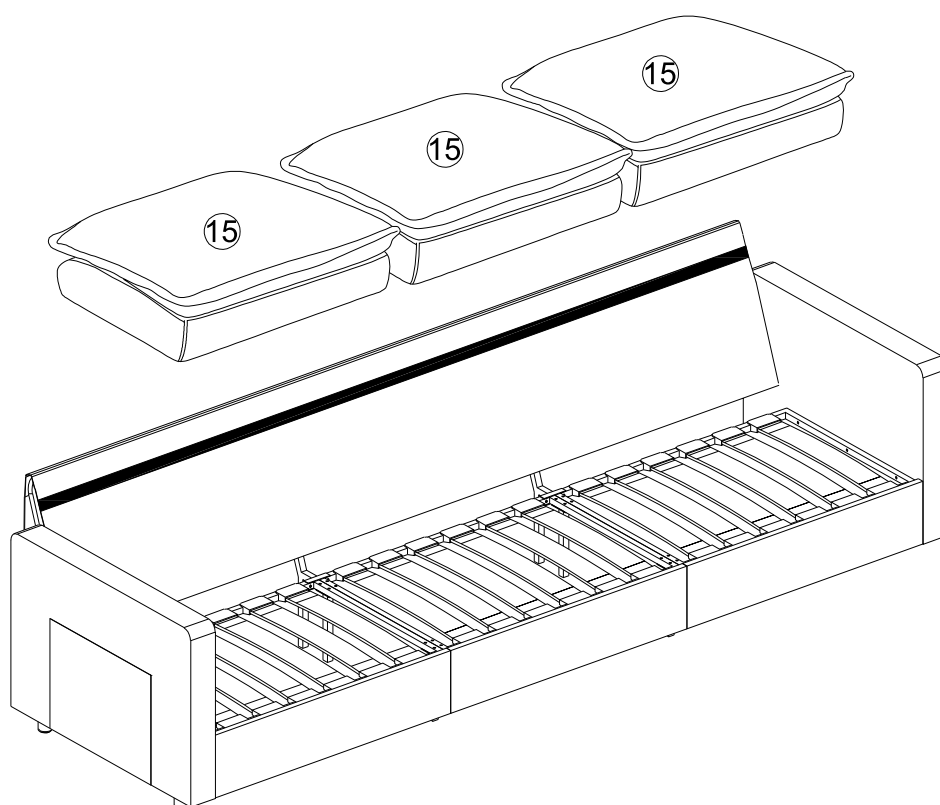


Place the cushion on the sofa with the zipper (located on the bottom) facing the rear.

Step 21:

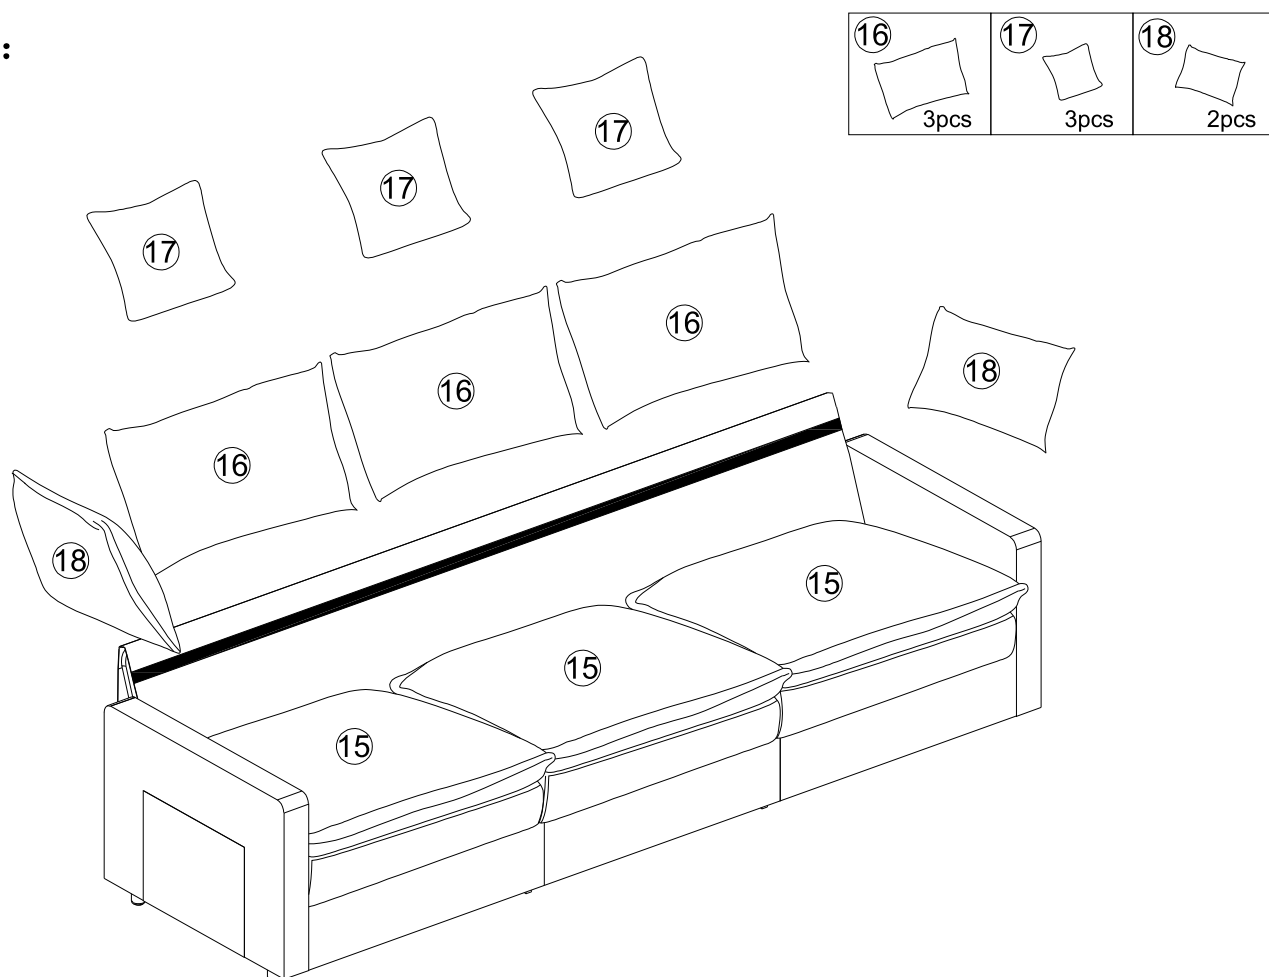

Place the back cushions on the sofa

Step 22:

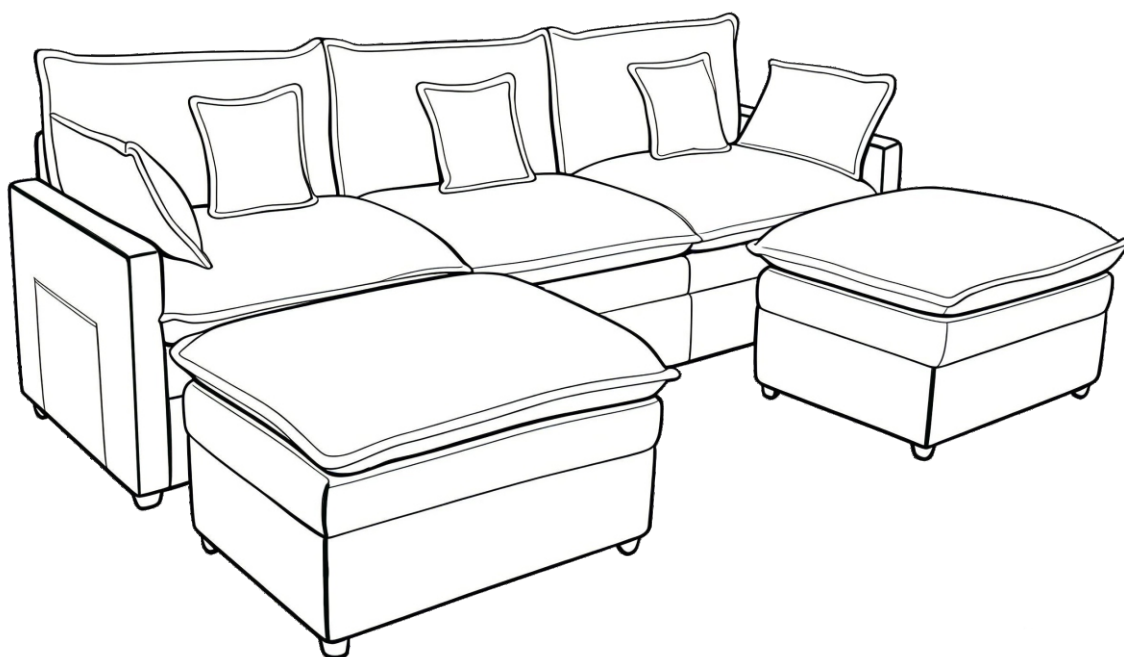

Finish