


ASSEMBLY INSTRUCTIONS

TWIN LOW LOFT BED


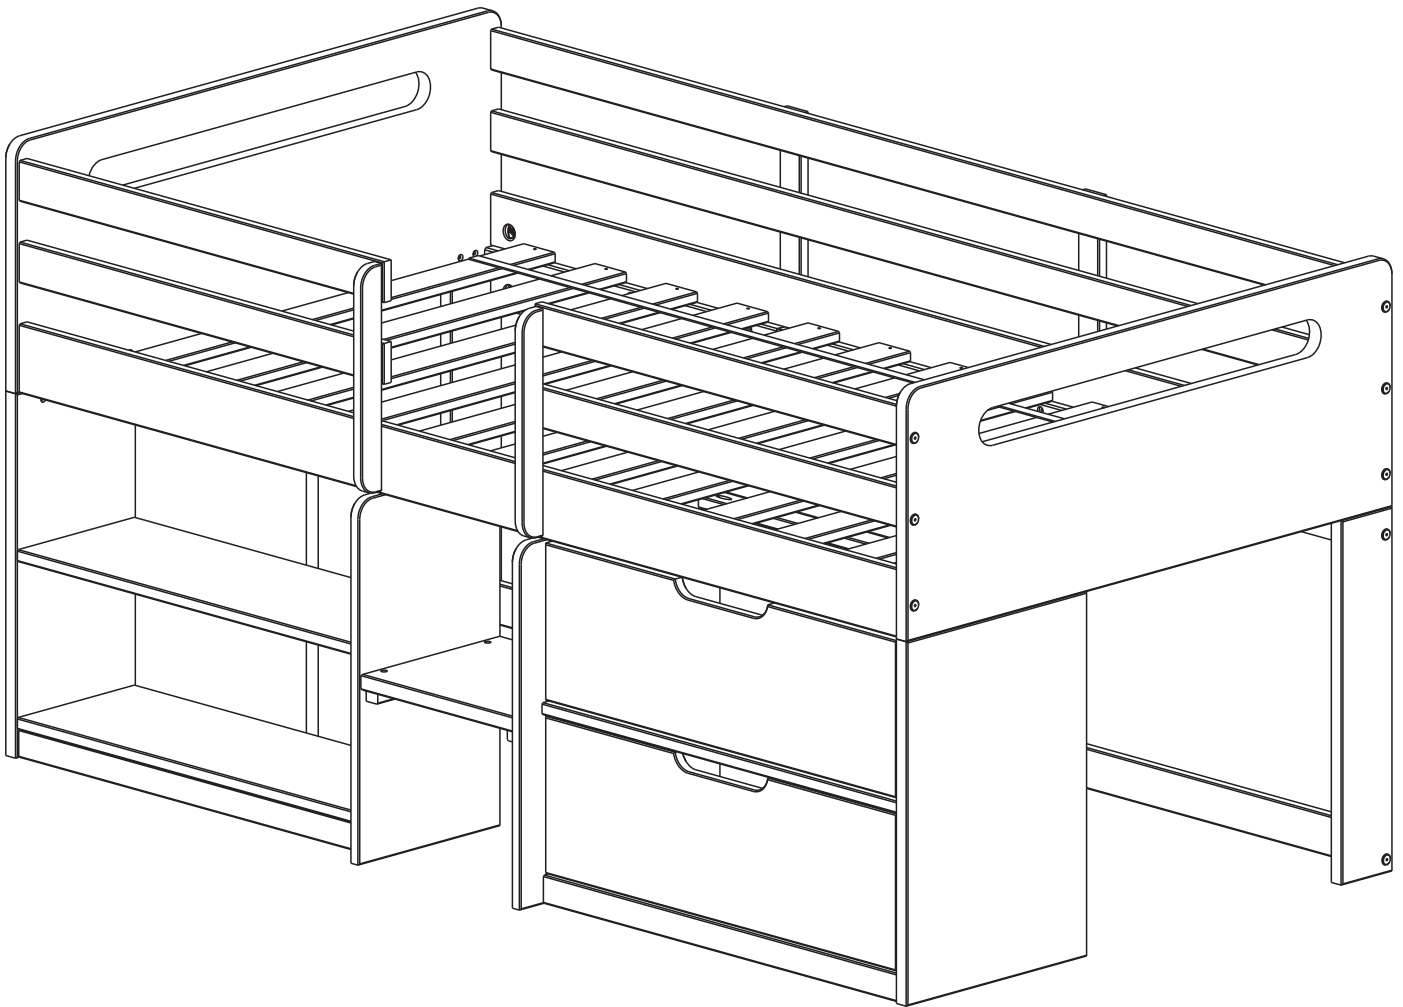


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

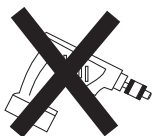

Tools Required




(Not included)



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - 2 DRAWER CHEST LOW LOFTT

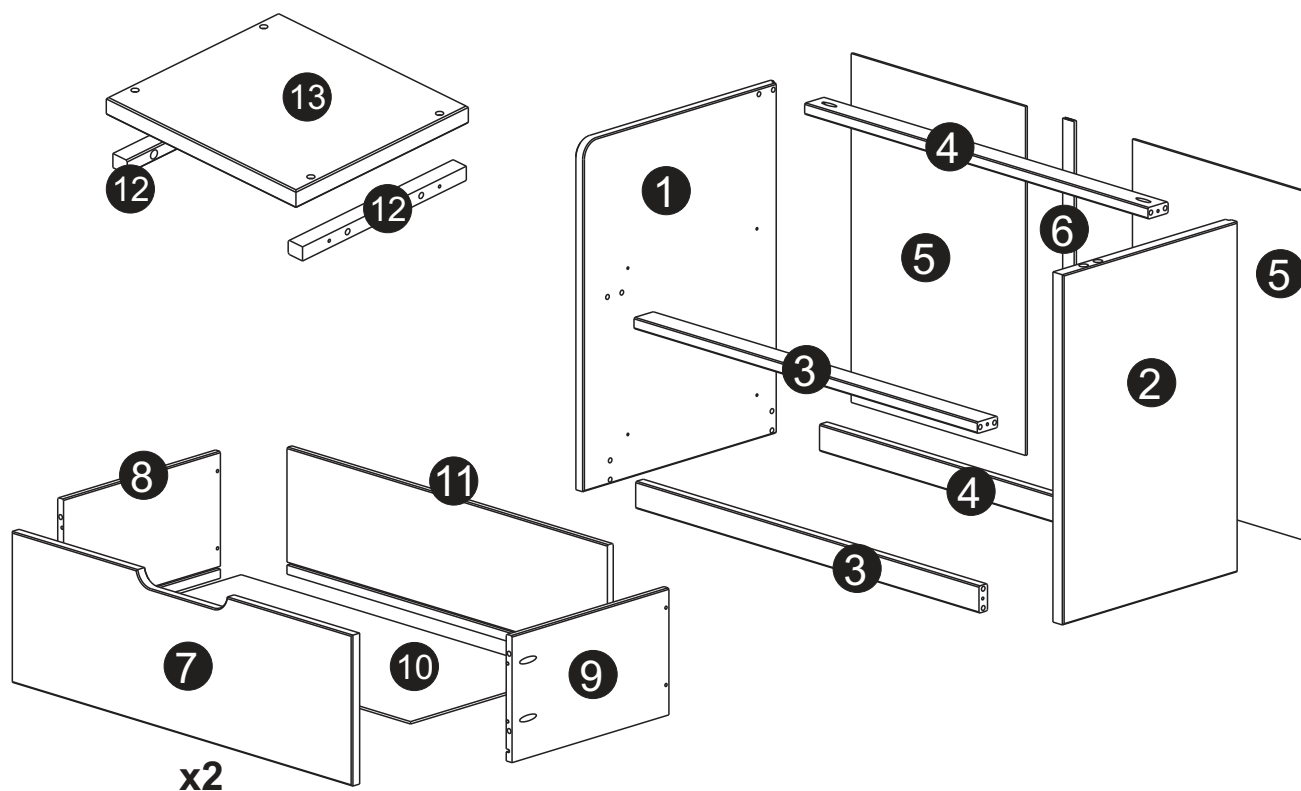

Identifying the Hardware-Identify the hardware using the illustrations below.

B



15 x 90 Wood Dowel

Qty

02

C



8x30 Wood Dowel

Qty

28

D




6,0x10 Screw

Qty

16

E




Drawer Runner 350mm

Qty

02

F



4,0 x 30 Screw

Qty

26

G




10 x 10

Qty

18

H



Drawer Runner 350mm


Qty

02



SET OF METAL SLIDES FOR THE DRAWERS

The metal glides hardwares are all in one packed. Please separate the left and right pieces like a pair.

- The glides # E are used on chest panel side and as left and right pieces.
- The glides # H are used on drawers side, also has left and right pieces.

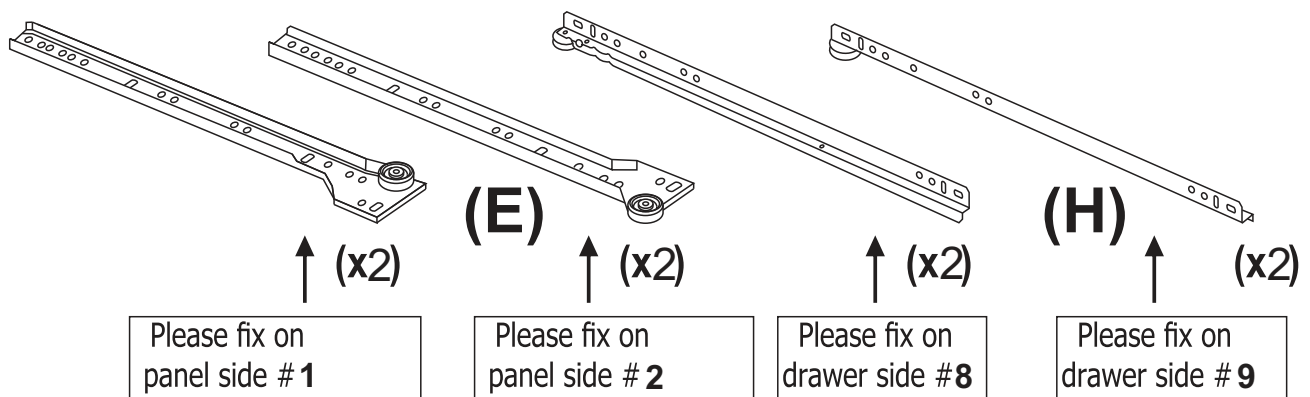

01

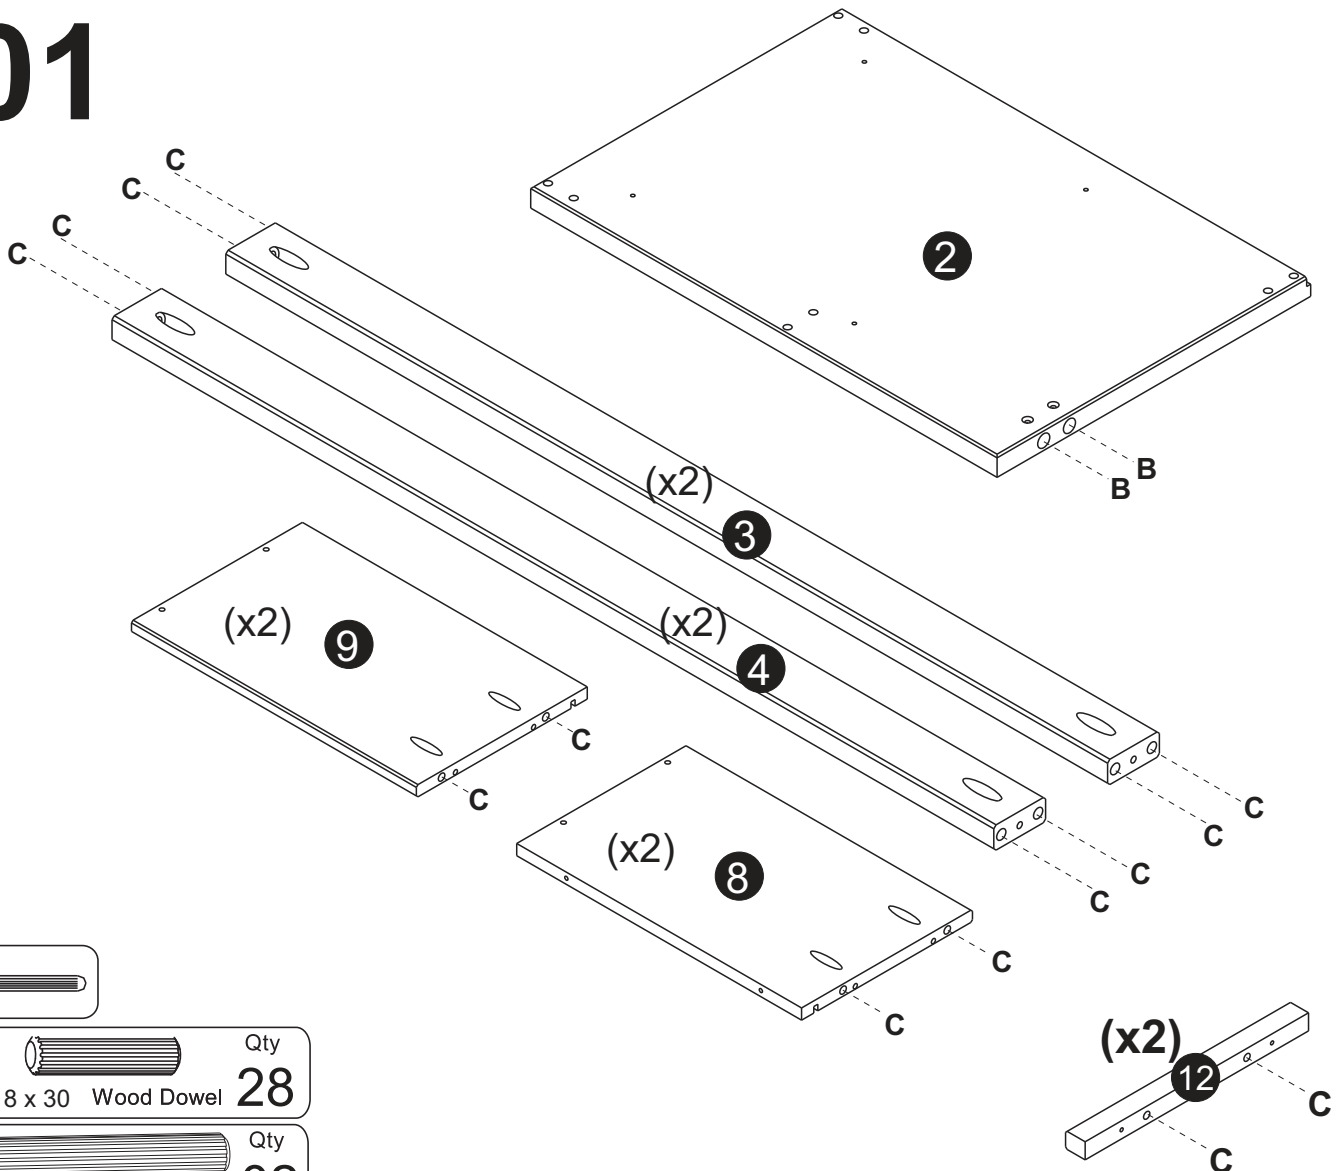


C 8 x 30 Wood Dowel Qty **28**


B 15 x 90 Wood Dowel Qty **02**

02


Left side

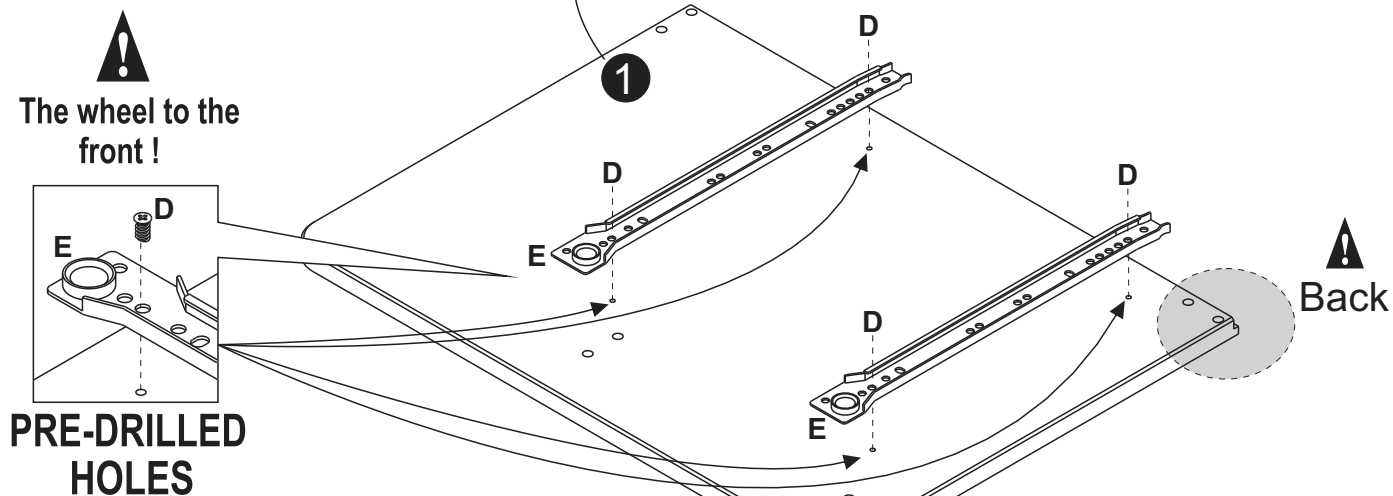

Right side

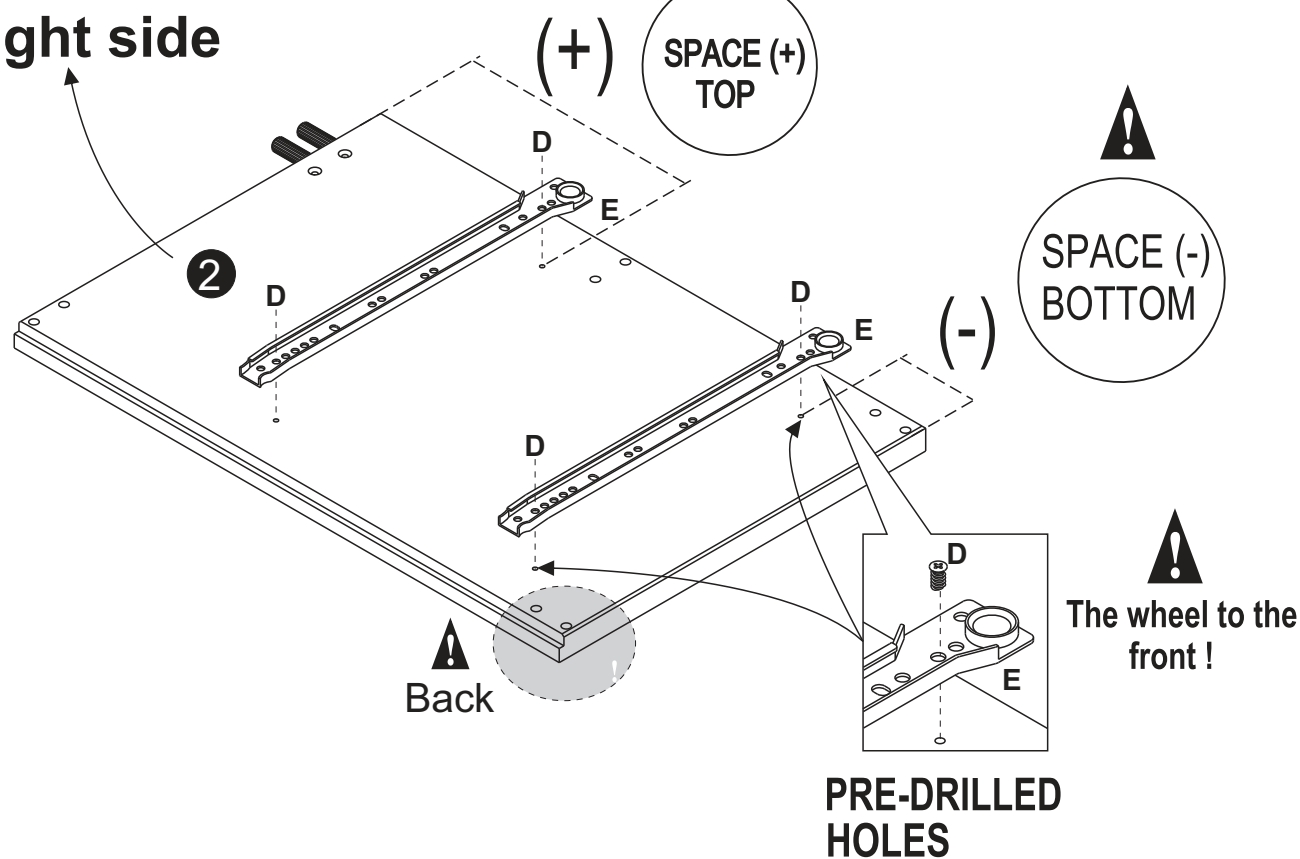


E



Drawer Runner 350mm

Qty

02



D




6,0 x 10 Screw


Qty

08

03


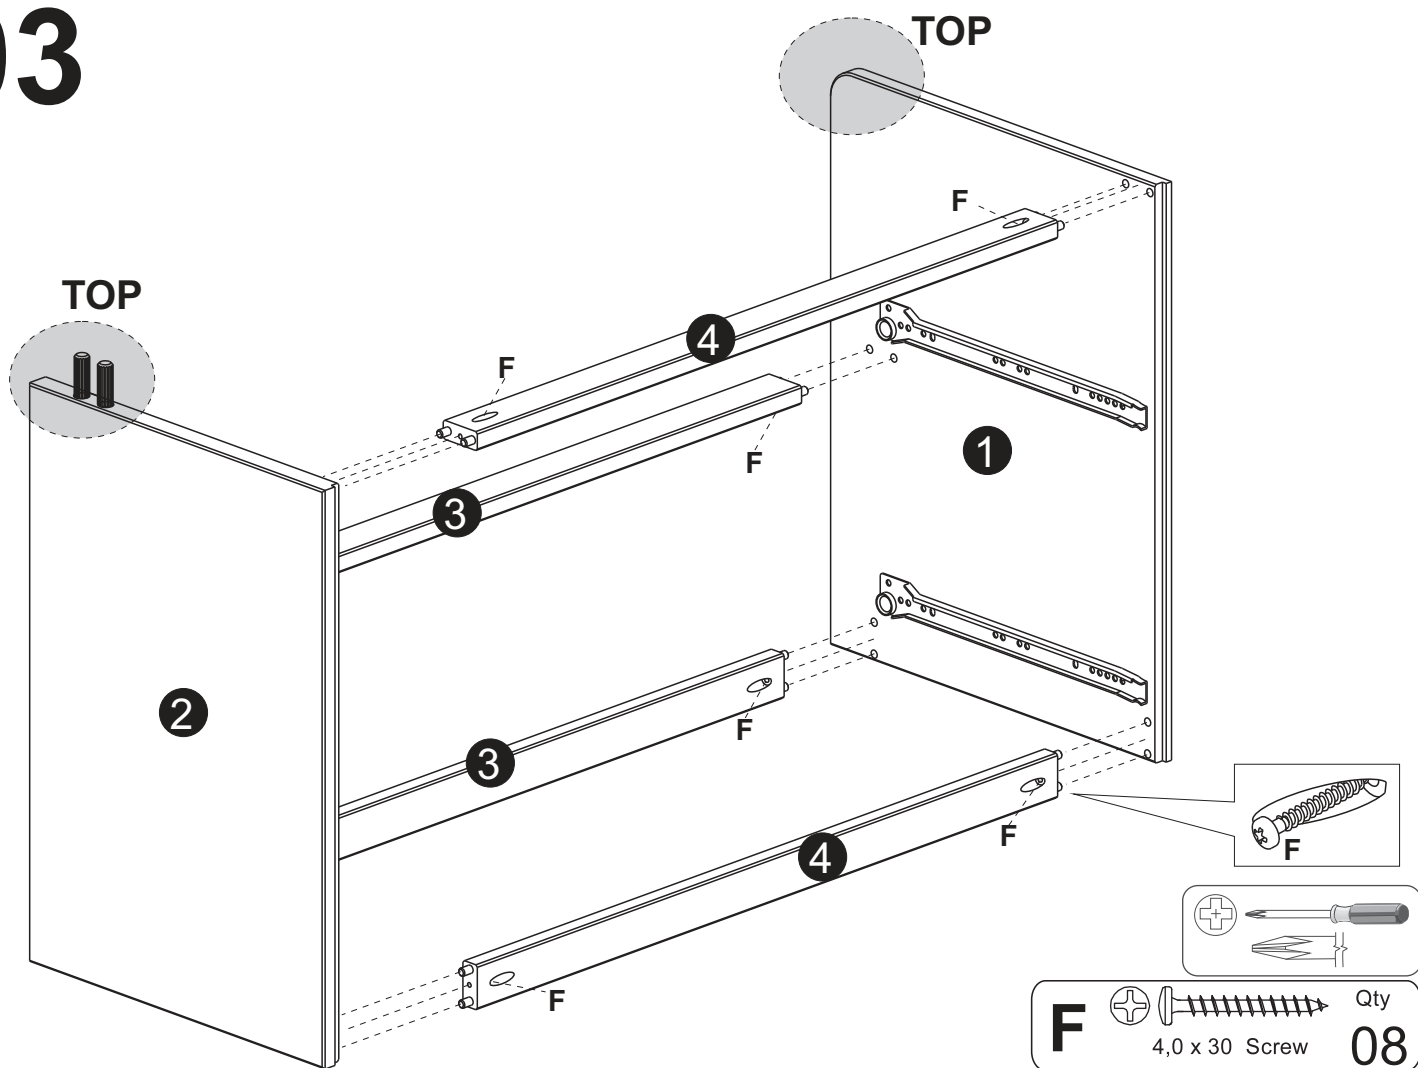


04

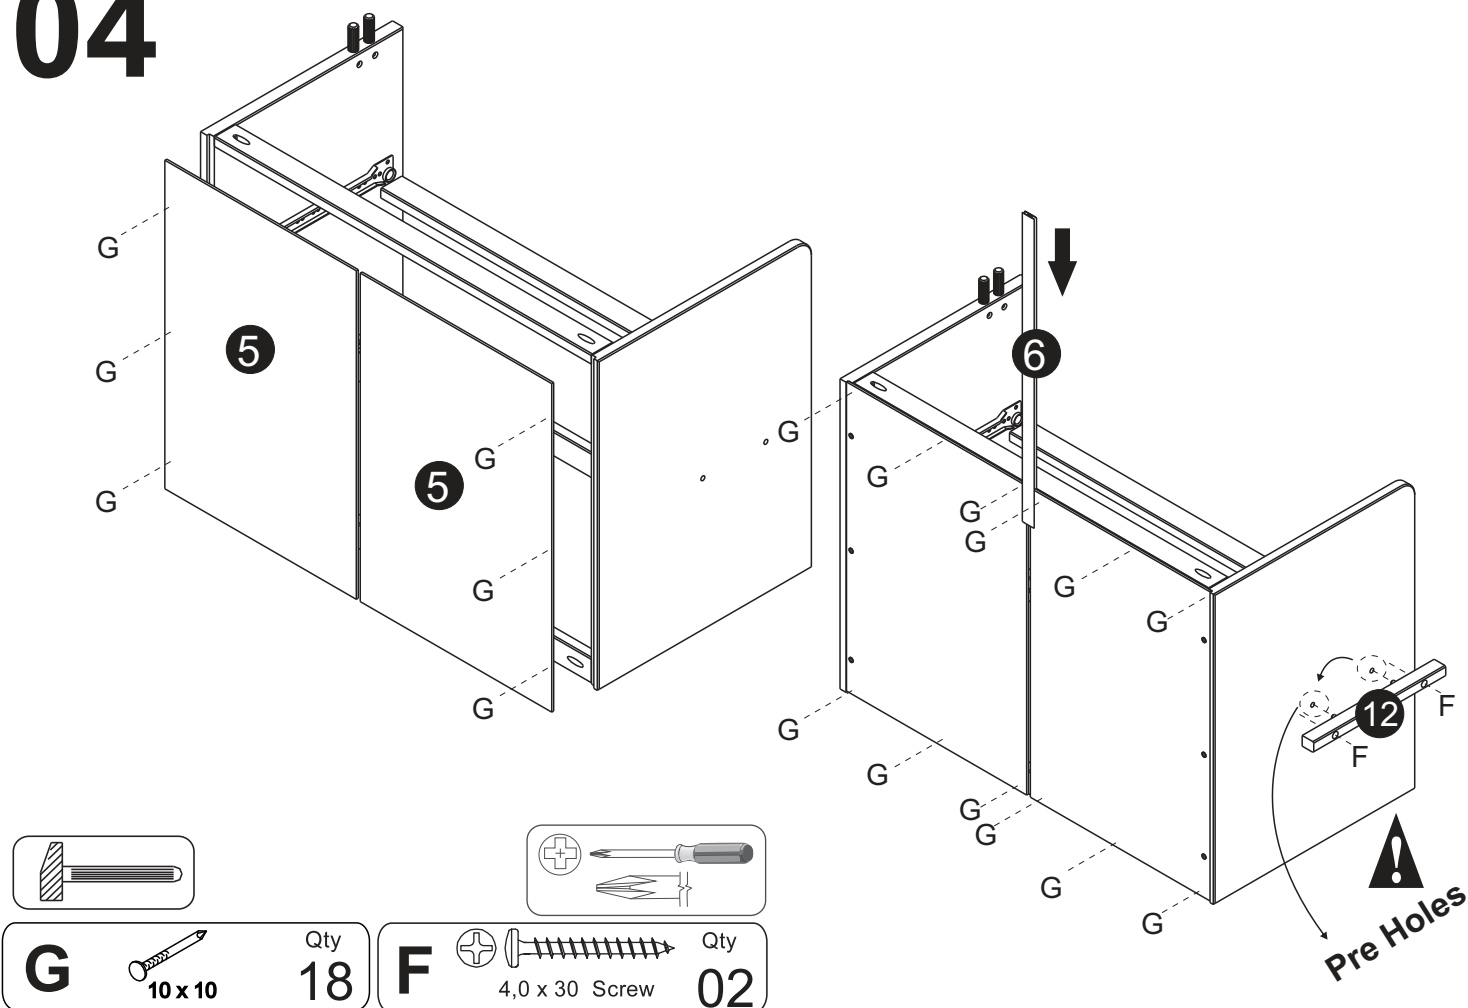


05

(x2)

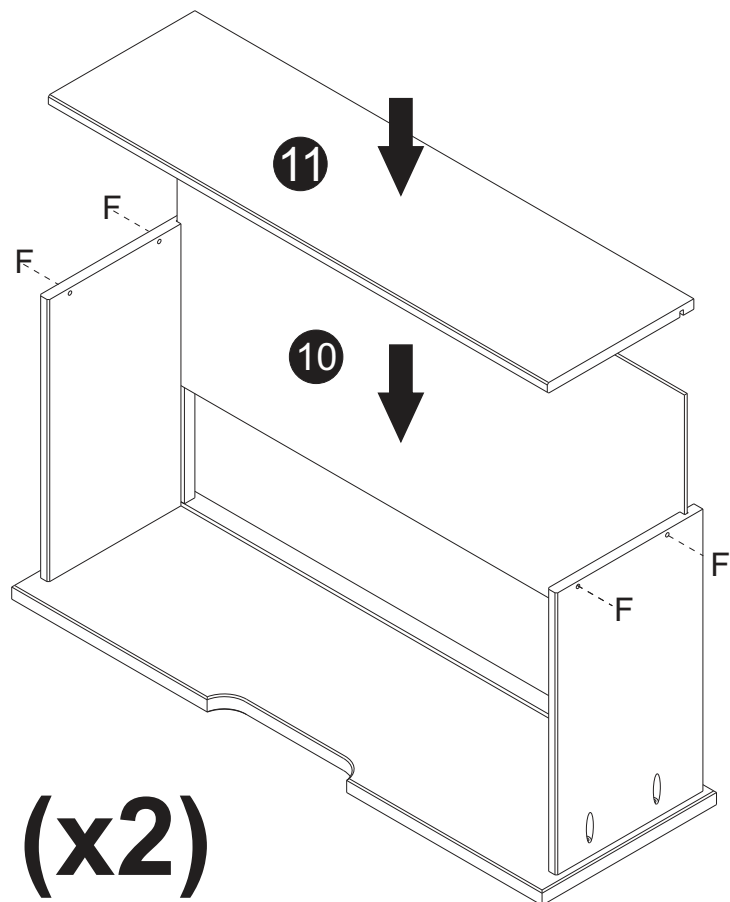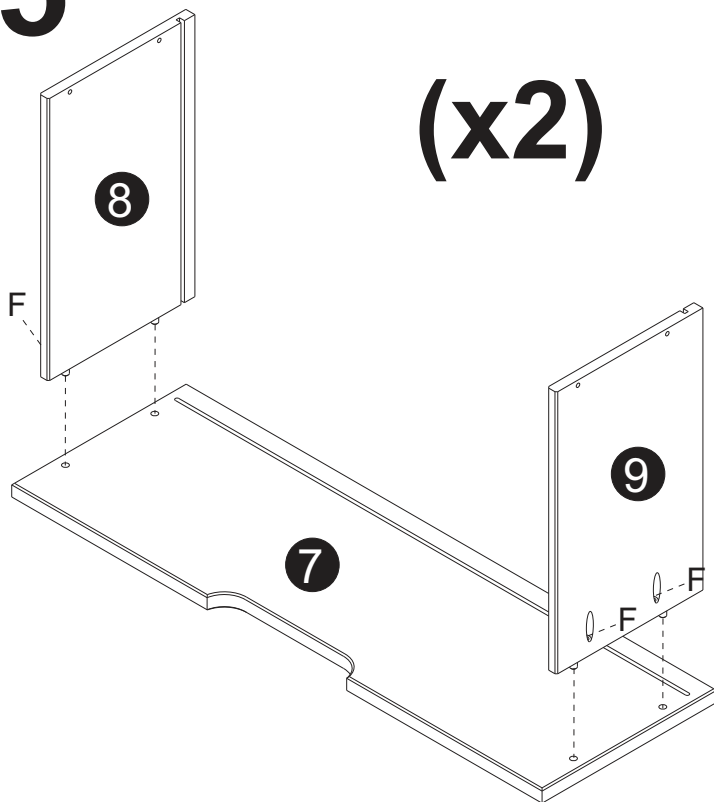

(x2)


F



4,0 x 30 Screw



Qty

16



06

(x2)

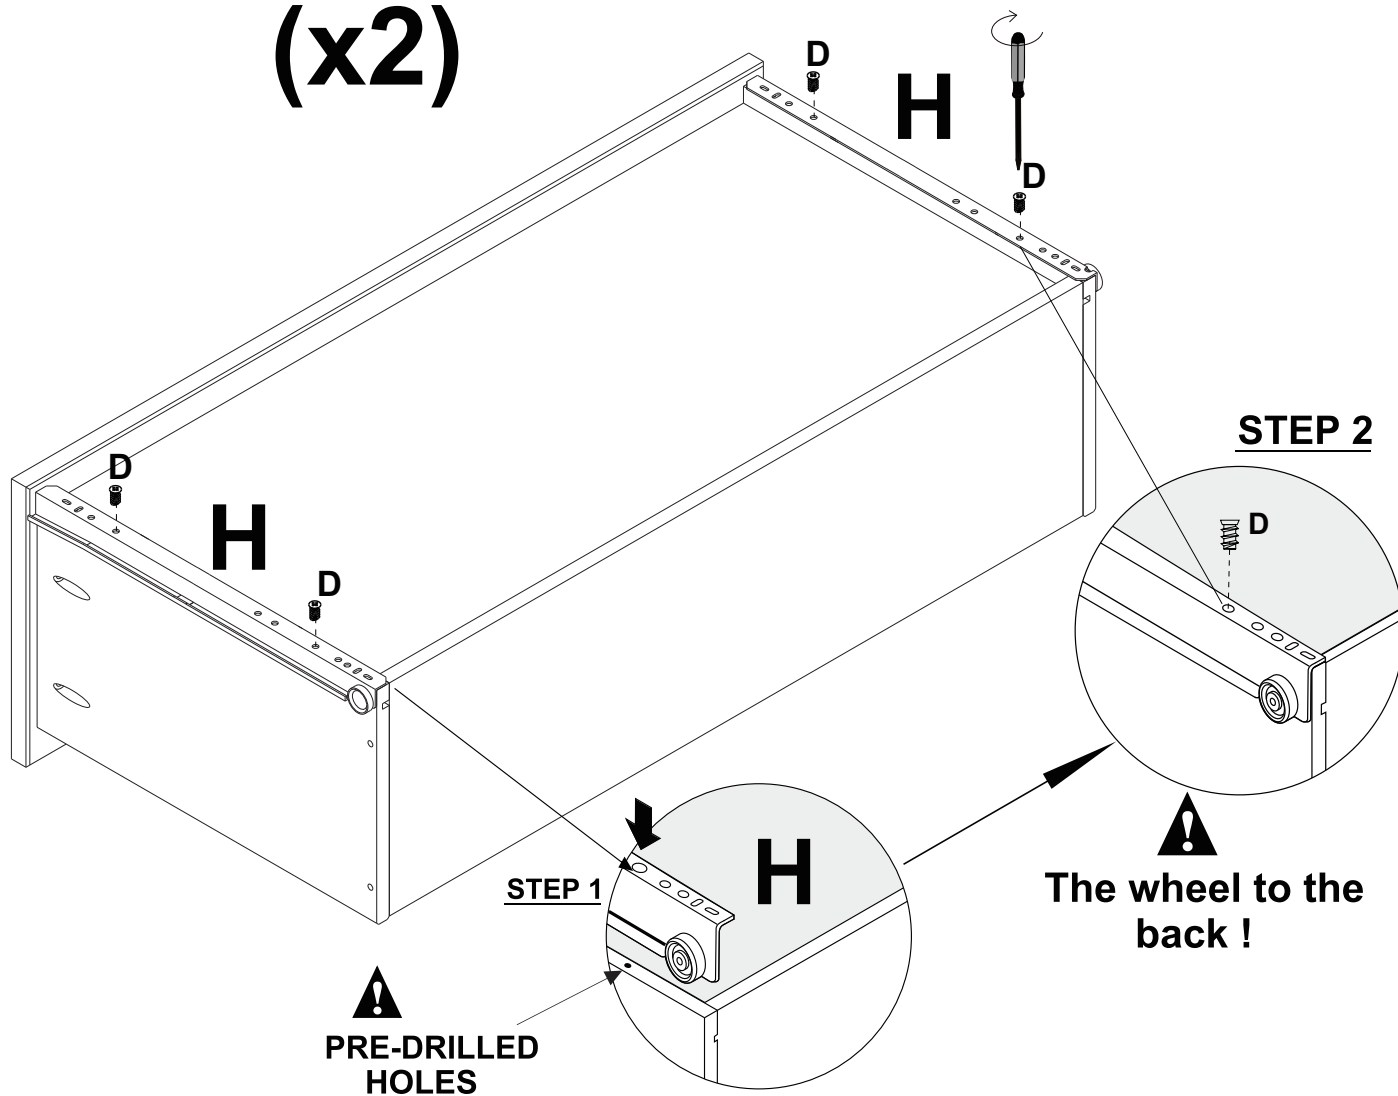


D

6,0 x 10 Screw

Qty
08

H




Drawer Runner 350mm




Qty

02


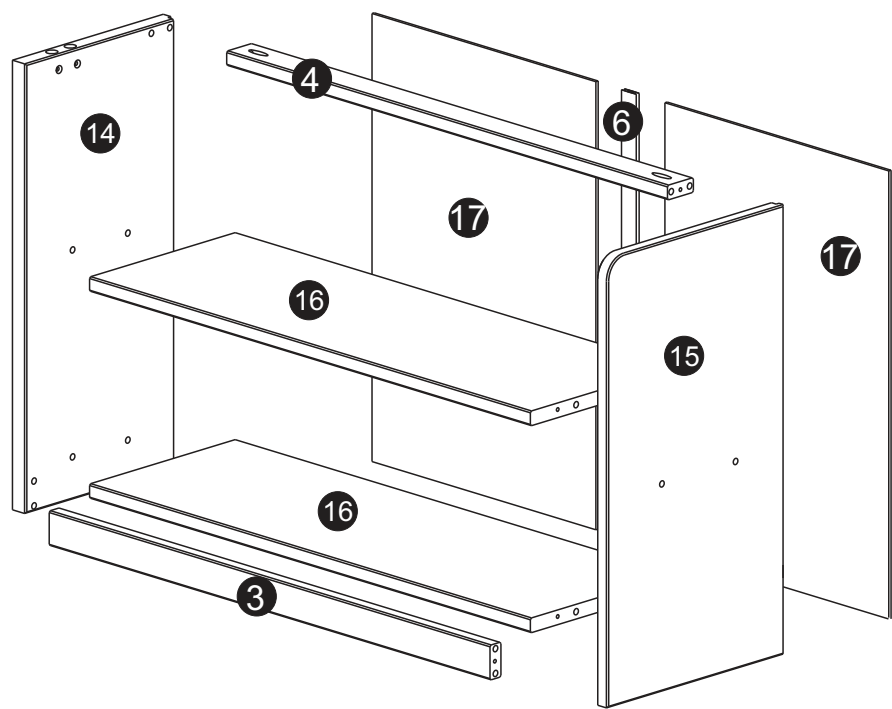
Part List - BOOKCASE LOW LOFT



Identifying the Hardware-Identify the hardware using the illustrations below.

B  15 x 90 Wood Dowel Qty 02	C  8x30 Wood Dowel Qty 16	F  4,0 x 30 Screw Qty 18	G  10 x 10 Qty 18
---	--	--	--


07

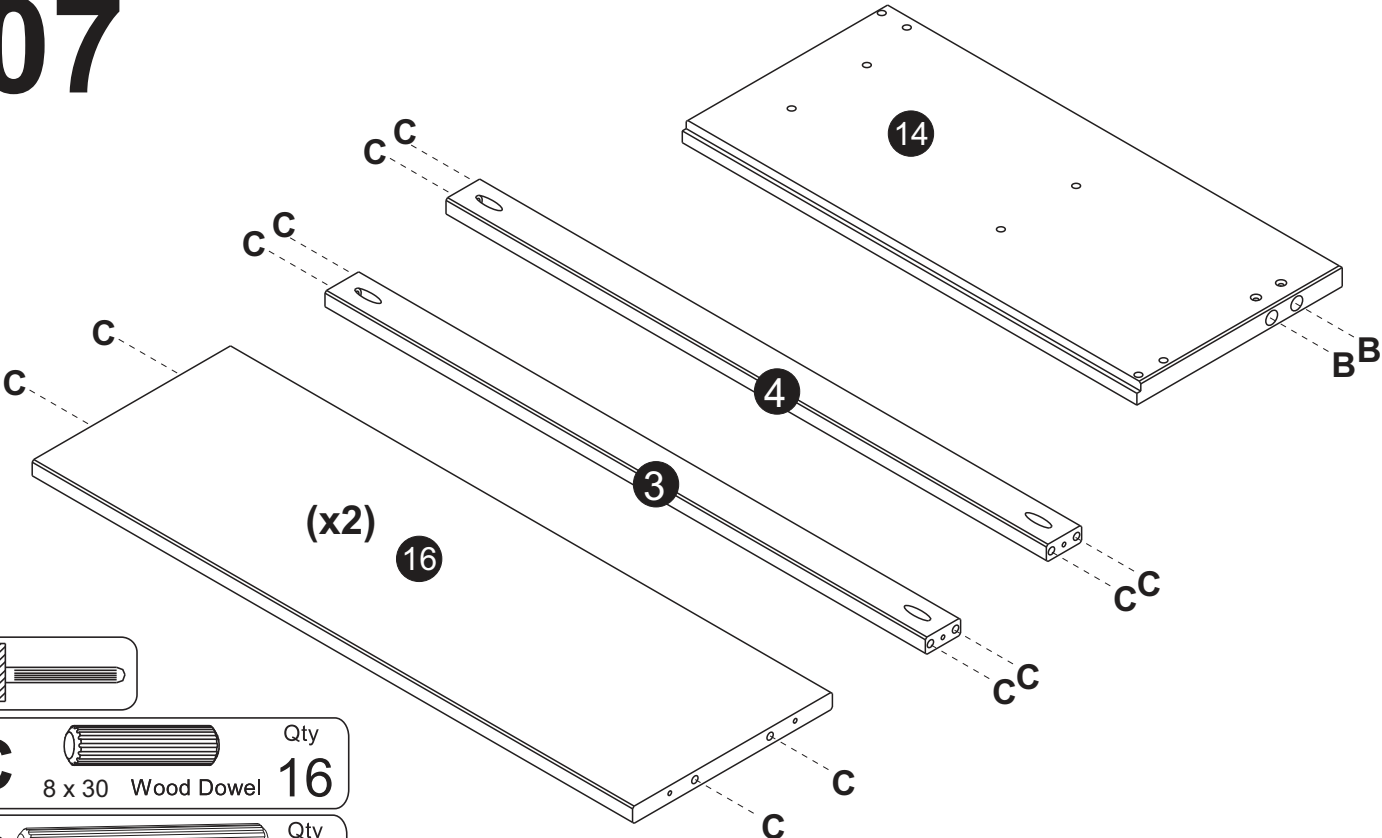


C  8 x 30 Wood Dowel Qty 16
--

B  15 x 90 Wood Dowel Qty 02



BACK

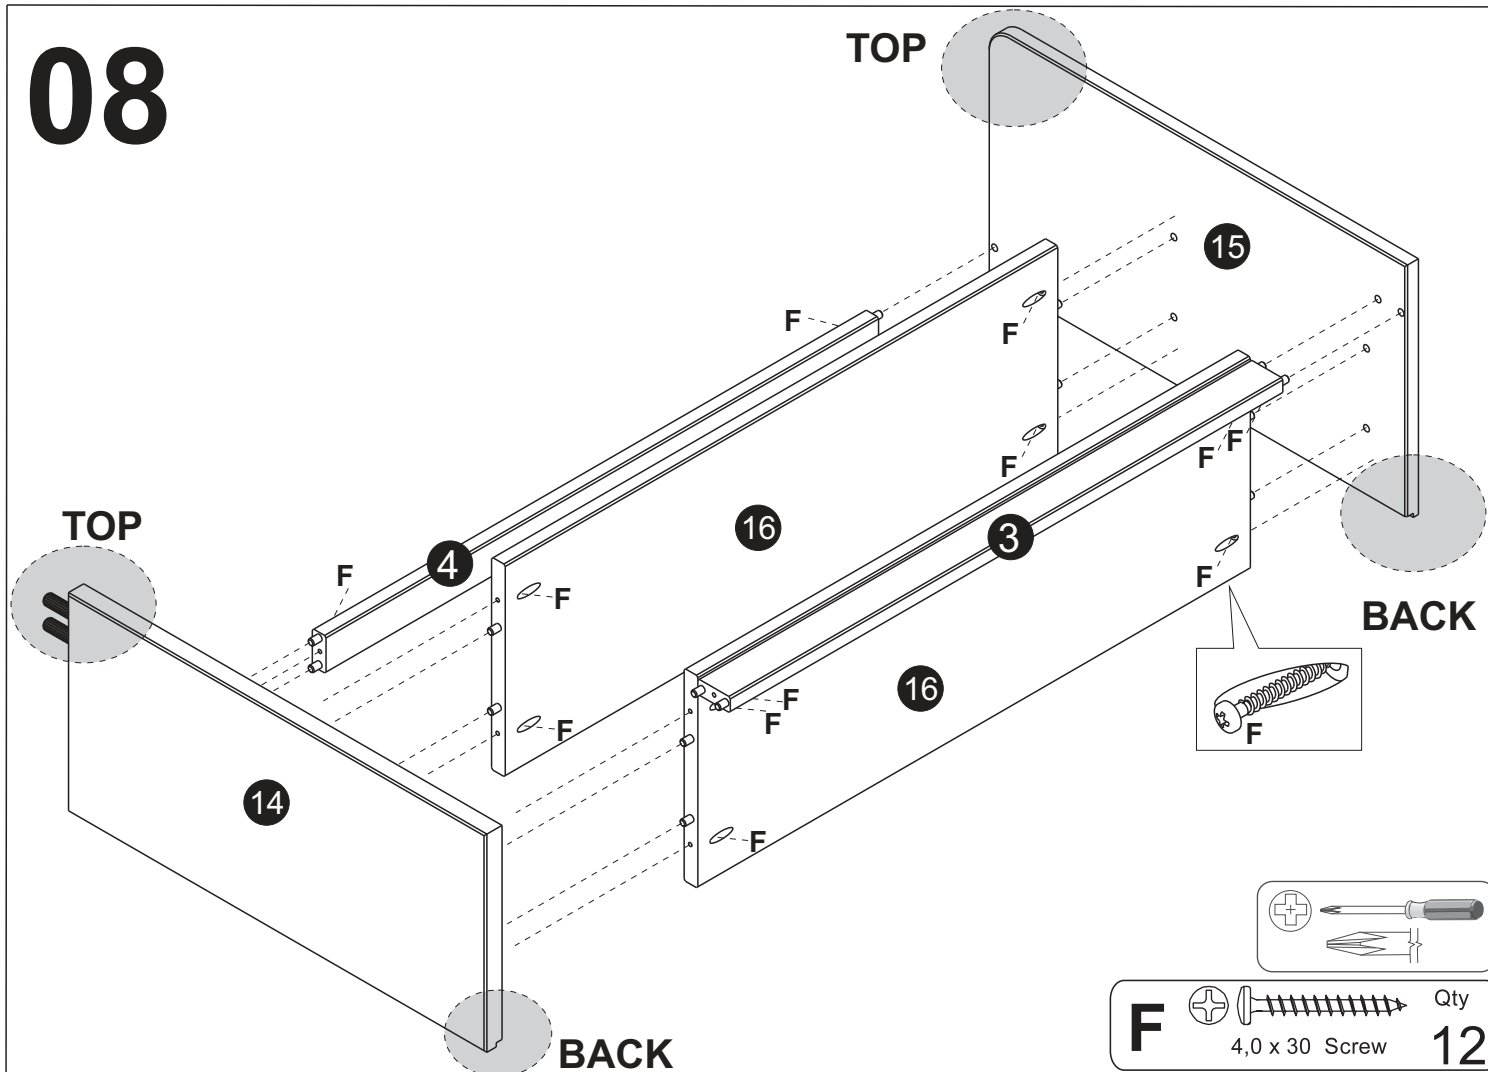


09

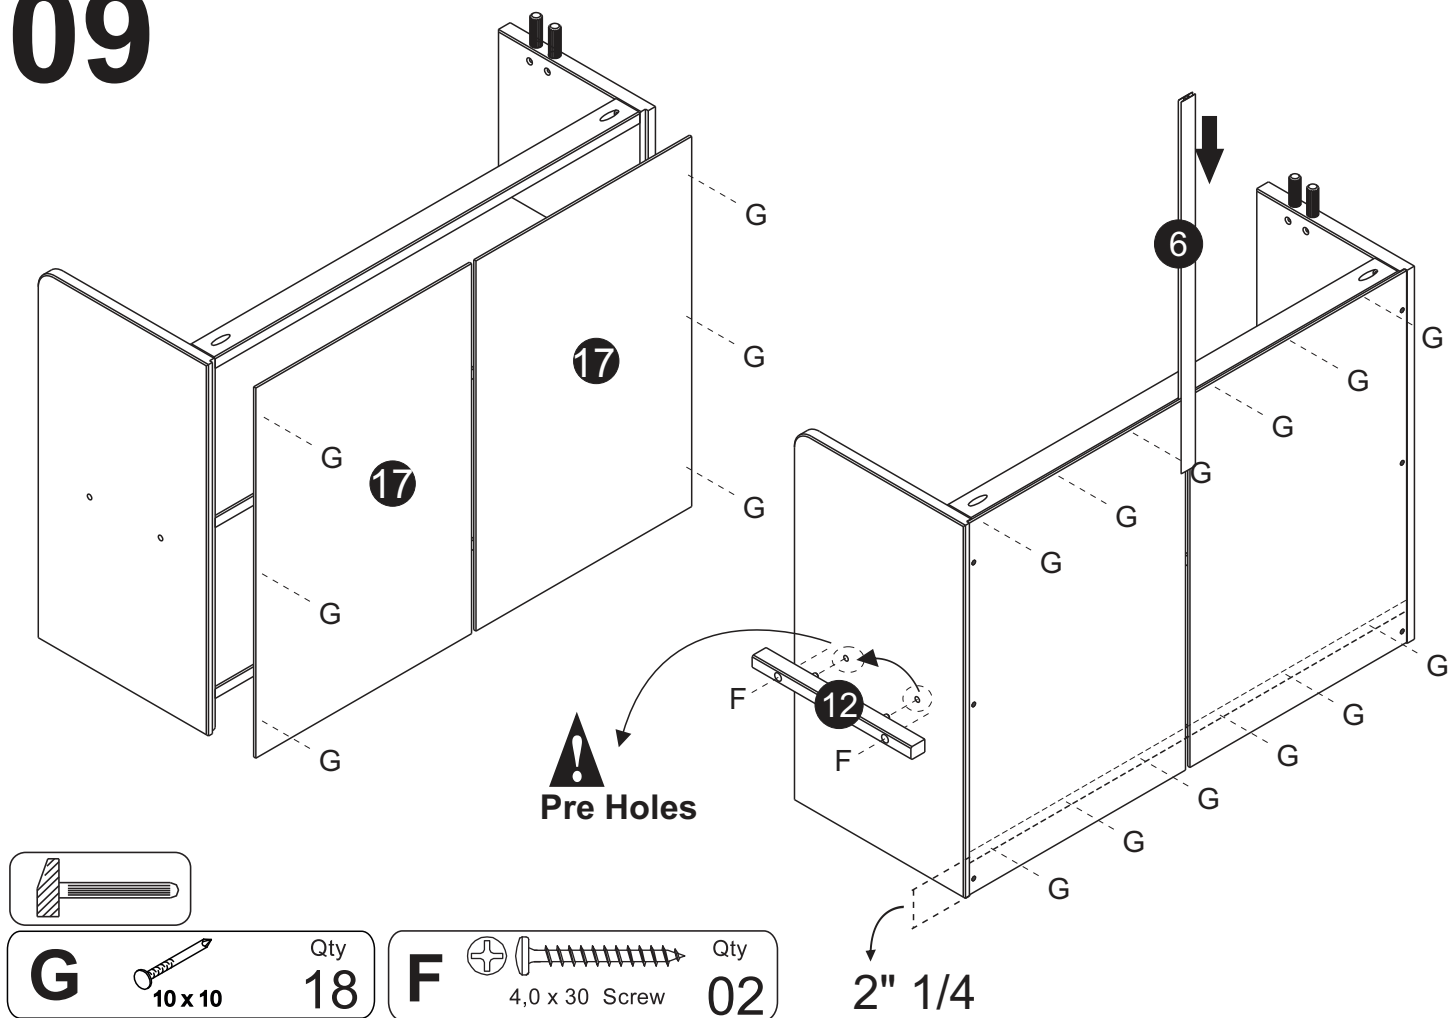

10

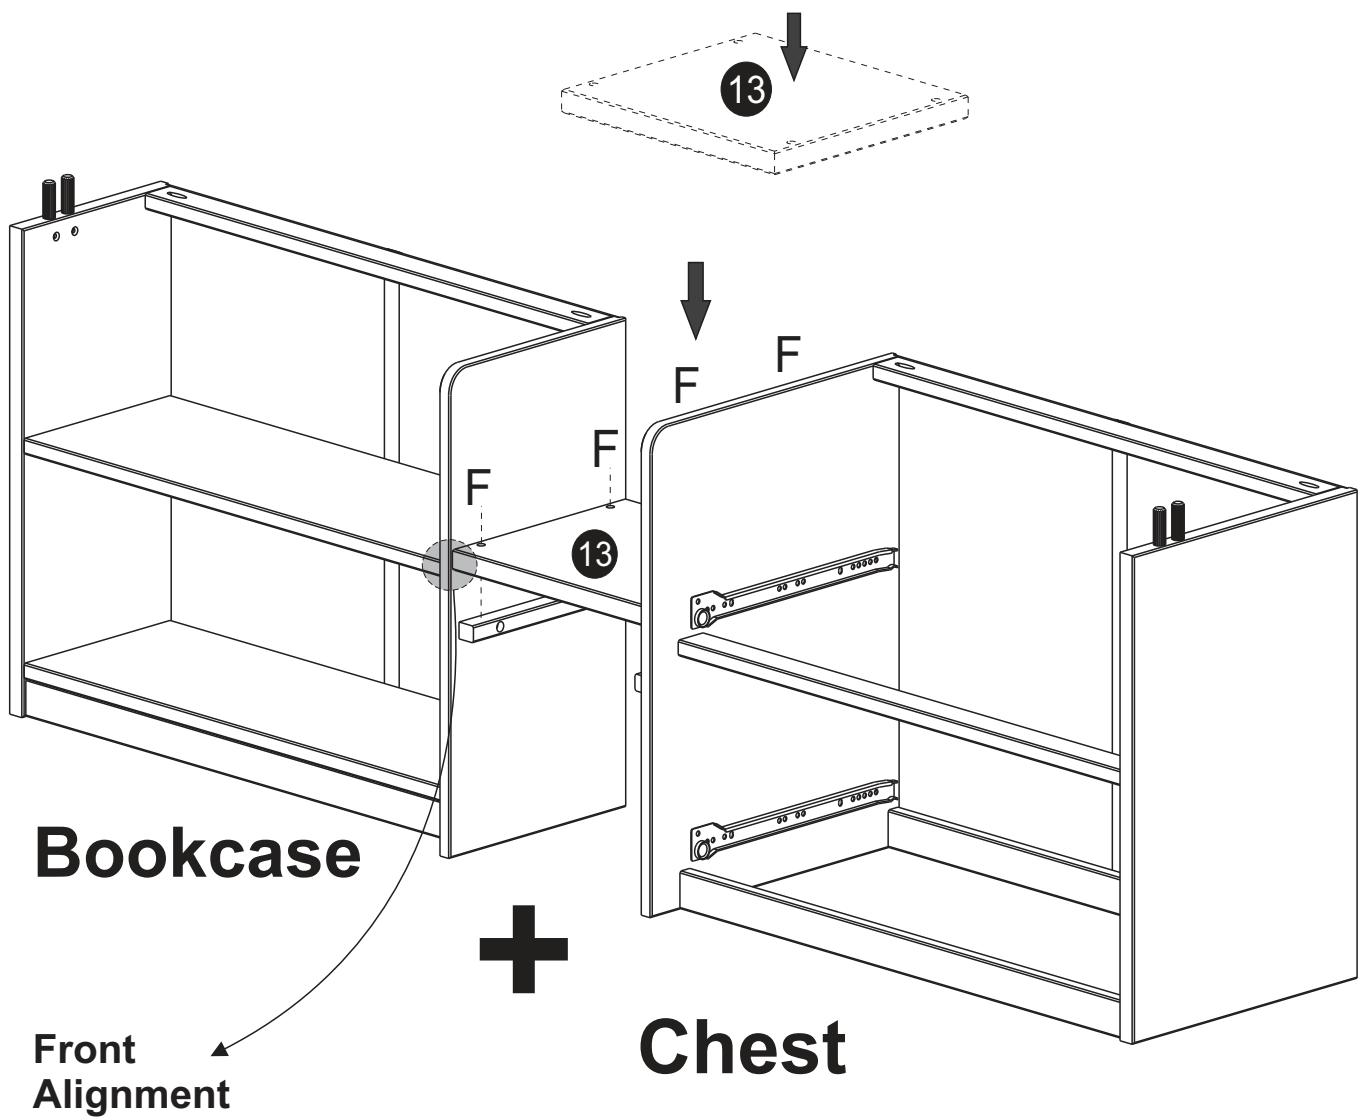

F




4,0 x 30 Screw











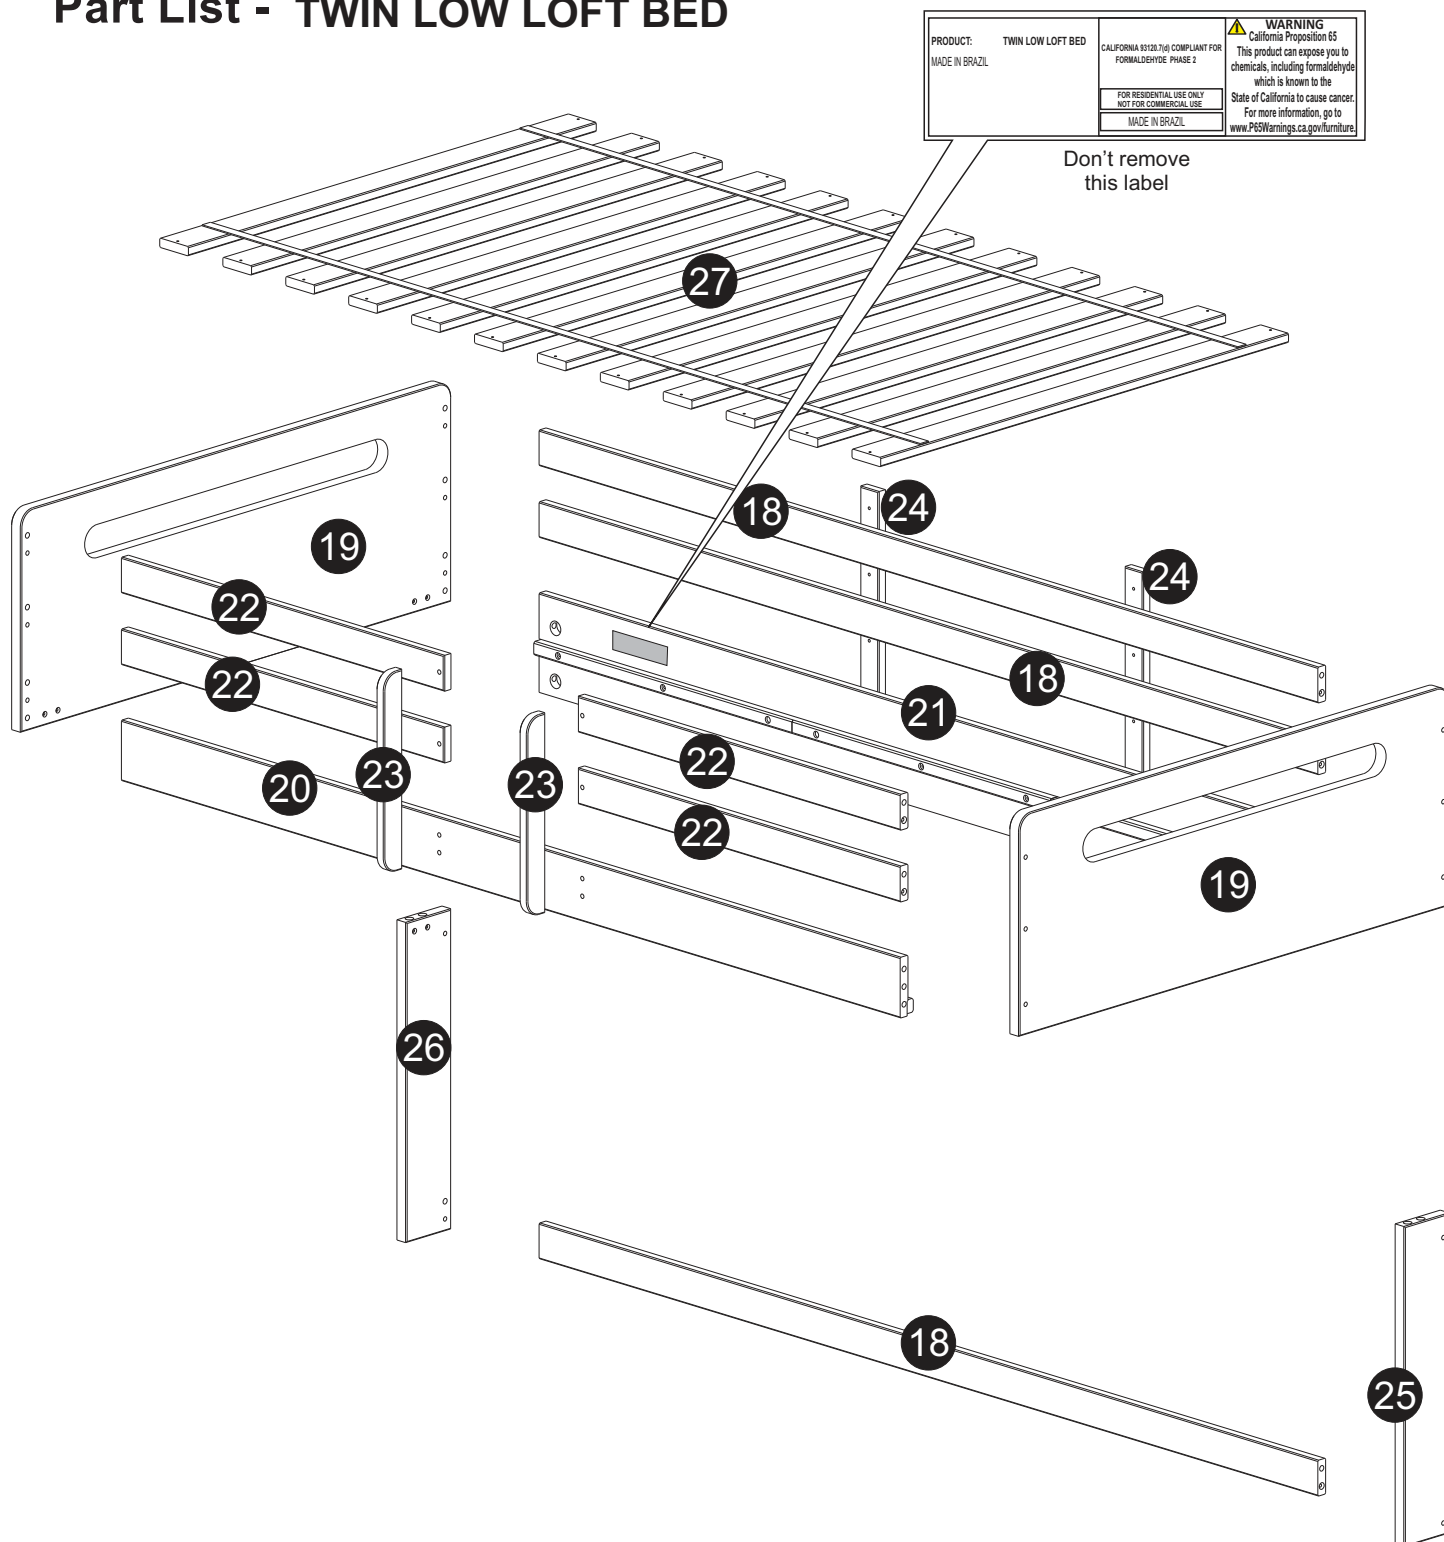
Qty

04



Part List - TWIN LOW LOFT BED



Identifying the Hardware-Identify the hardware using the illustrations below.

A  Qty 18	B  Qty 04	F  Qty 34	I  Qty 01	J  Qty 10
K  Qty 06	L  Qty 06	M  Qty 08	N  Qty 16	
O  Qty 08	P  Qty 04			


11

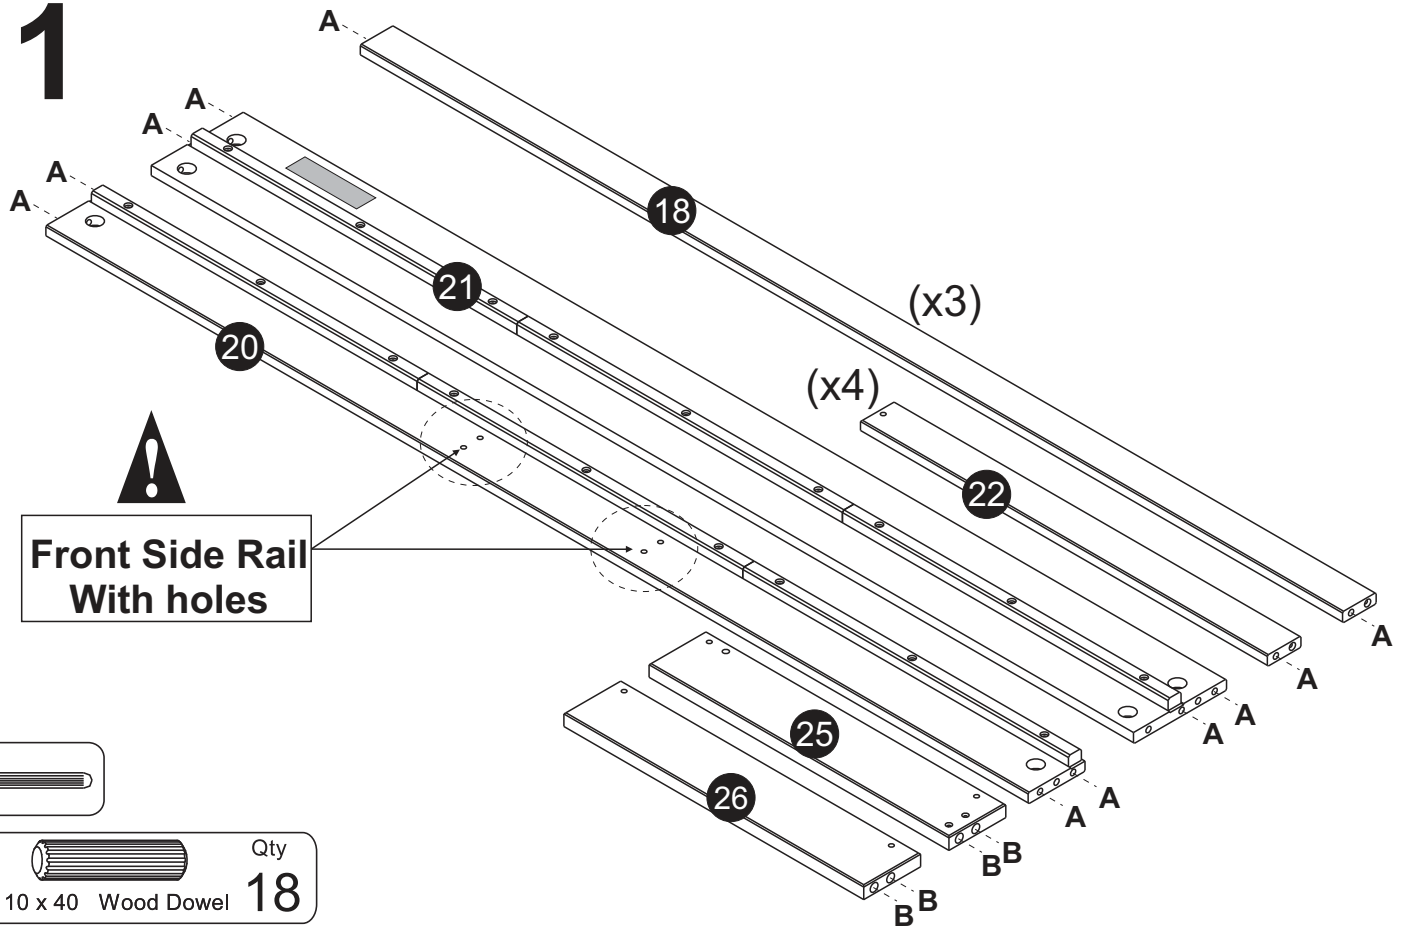

A 10 x 40 Wood Dowel Qty **18**

B 15 x 90 Wood Dowel Qty **04**


12

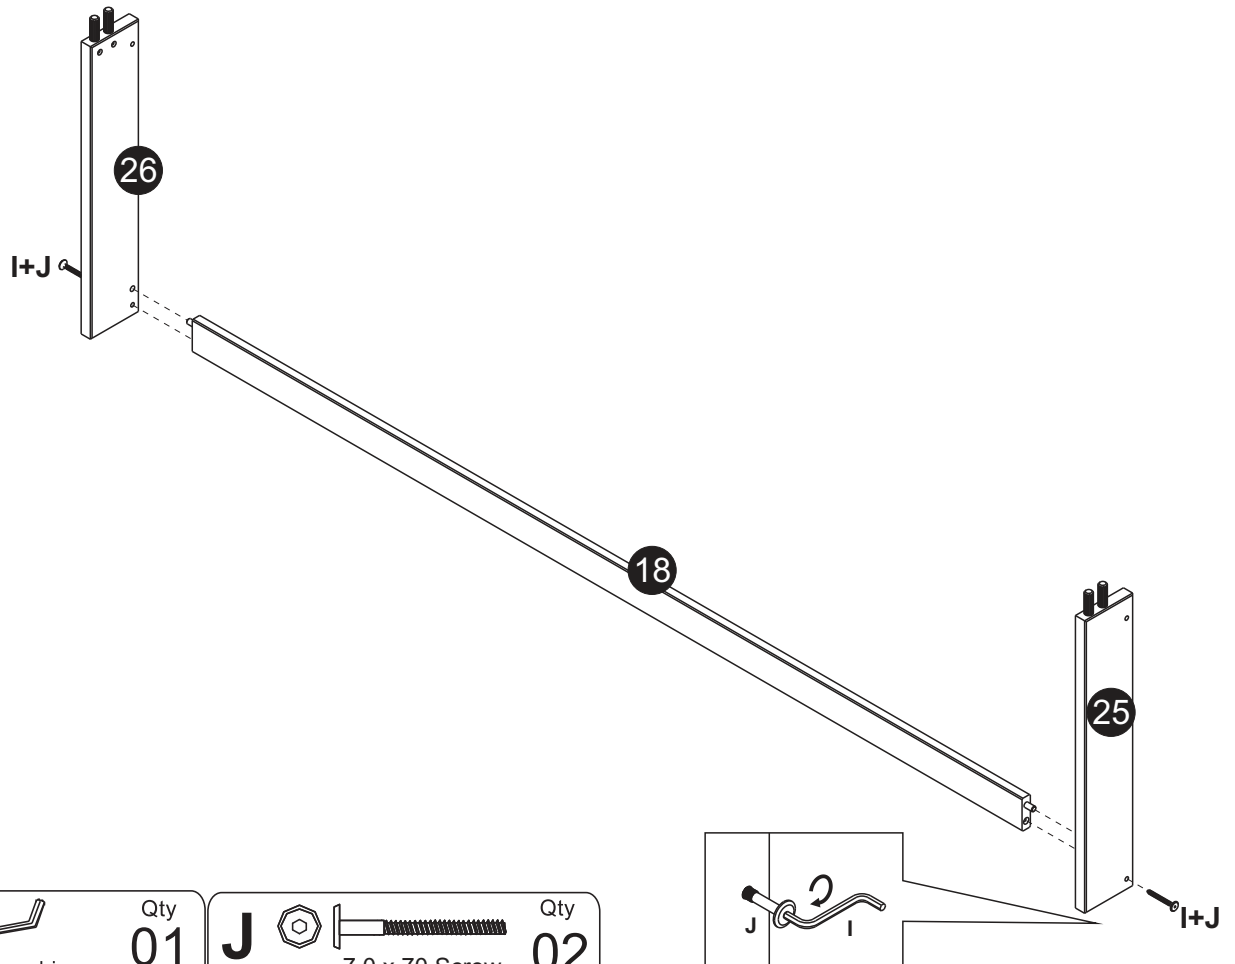


I Hex Screwdriver Qty **01**

J 7,0 x 70 Screw Qty **02**


13

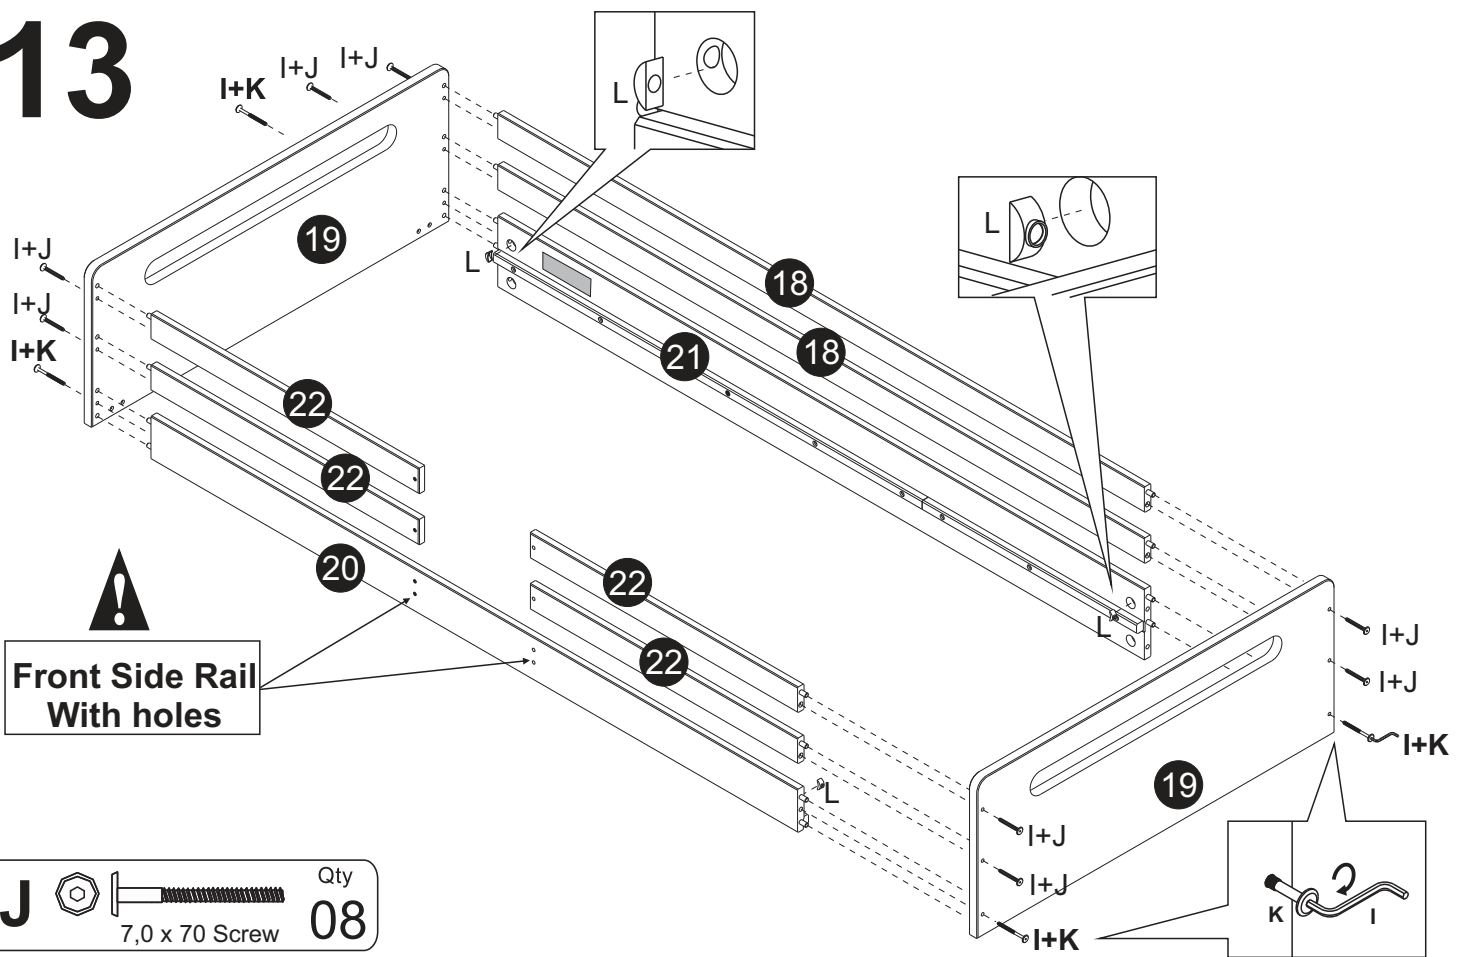


14

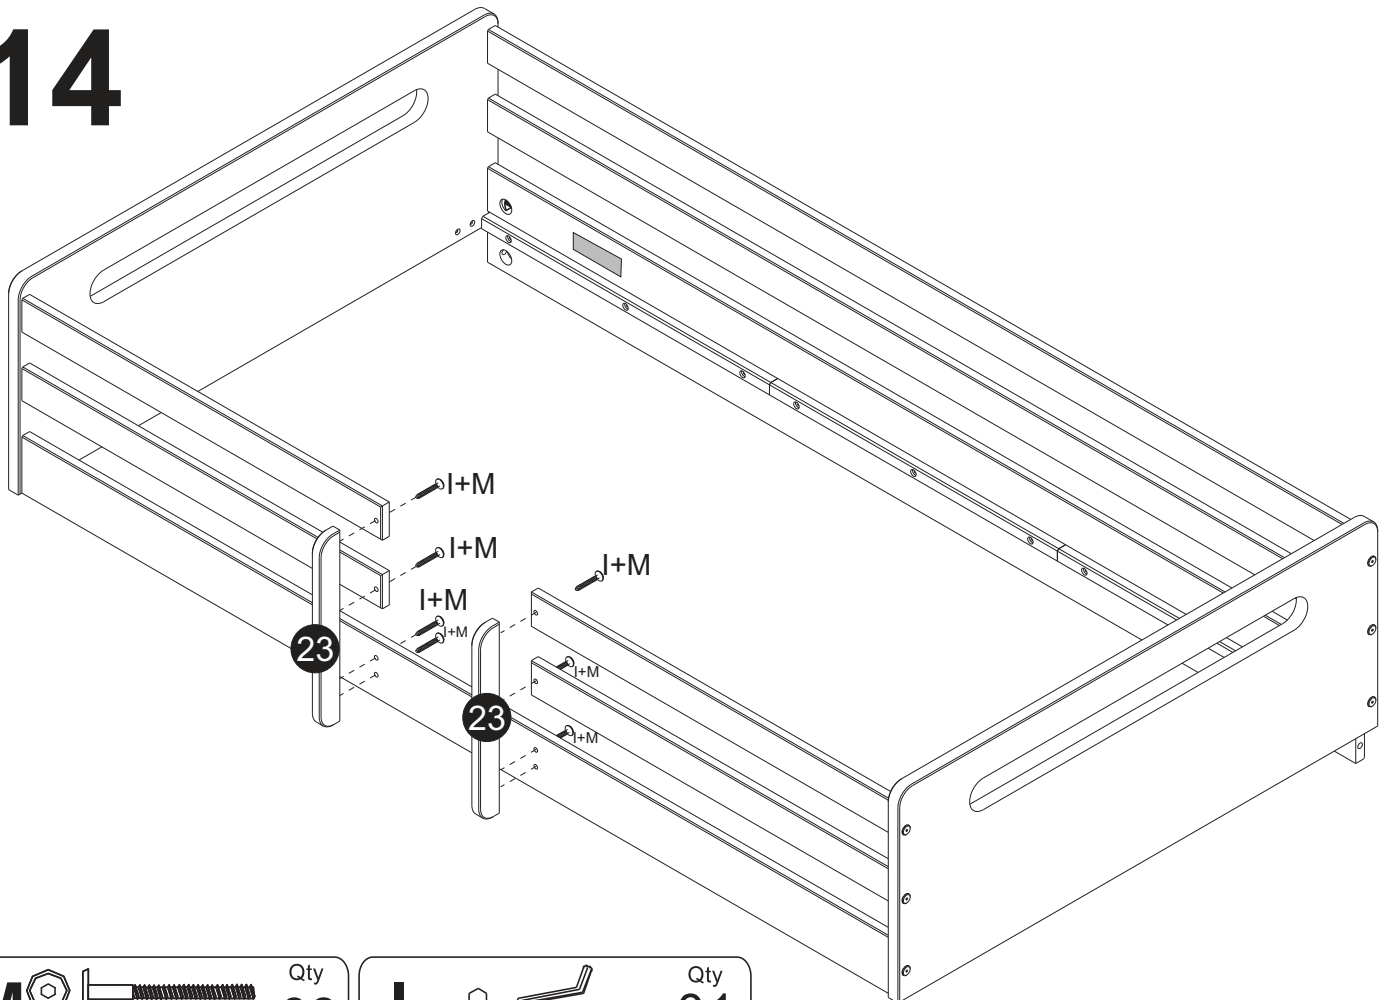


15

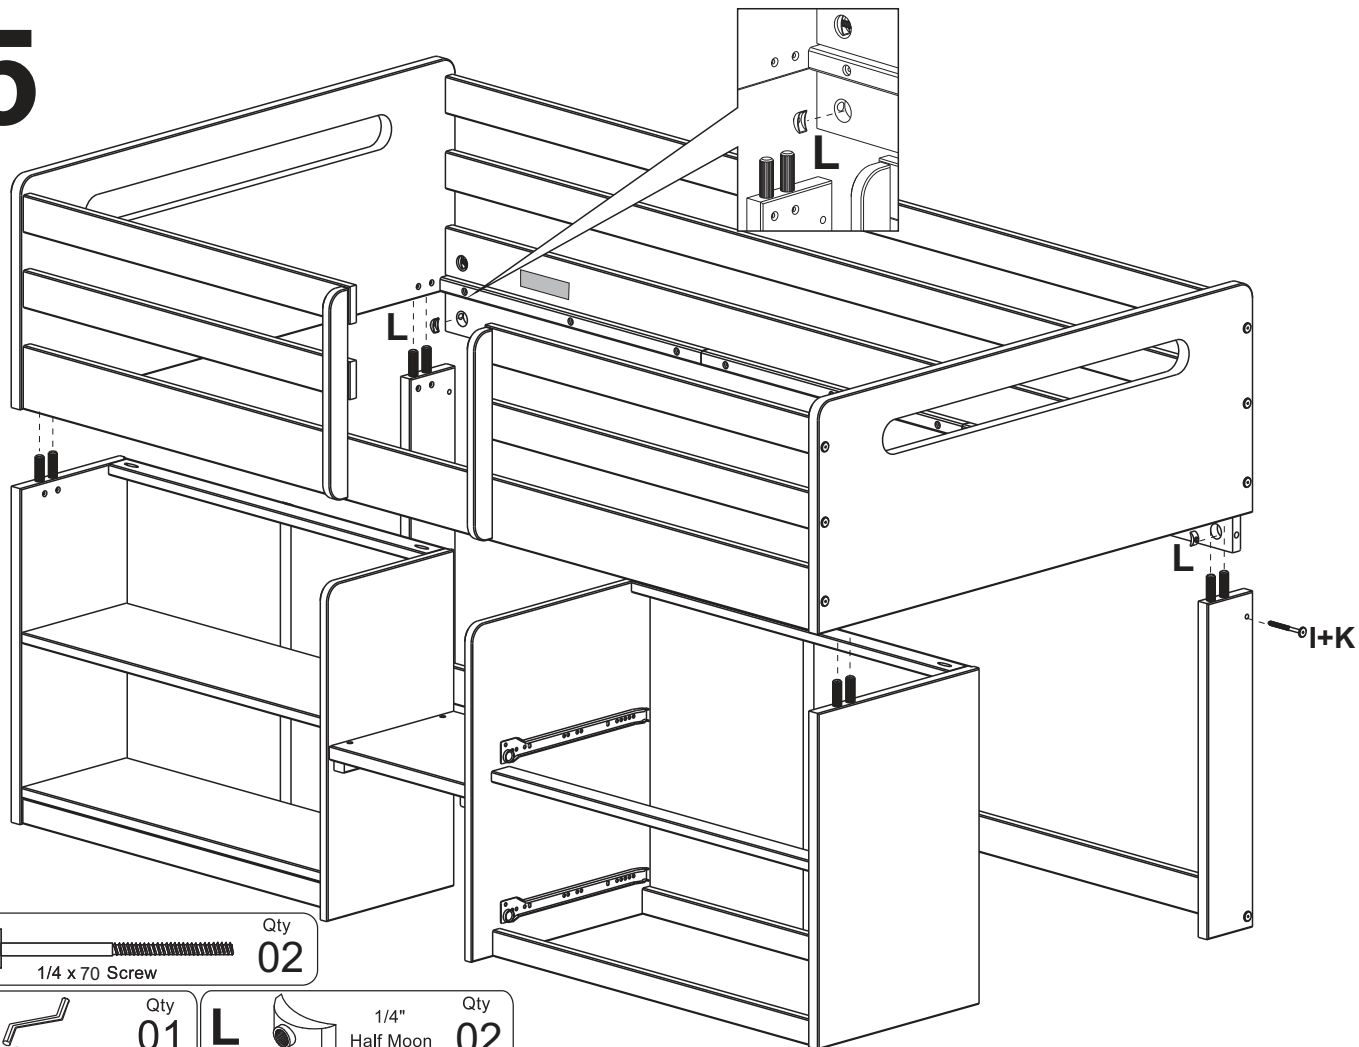


16

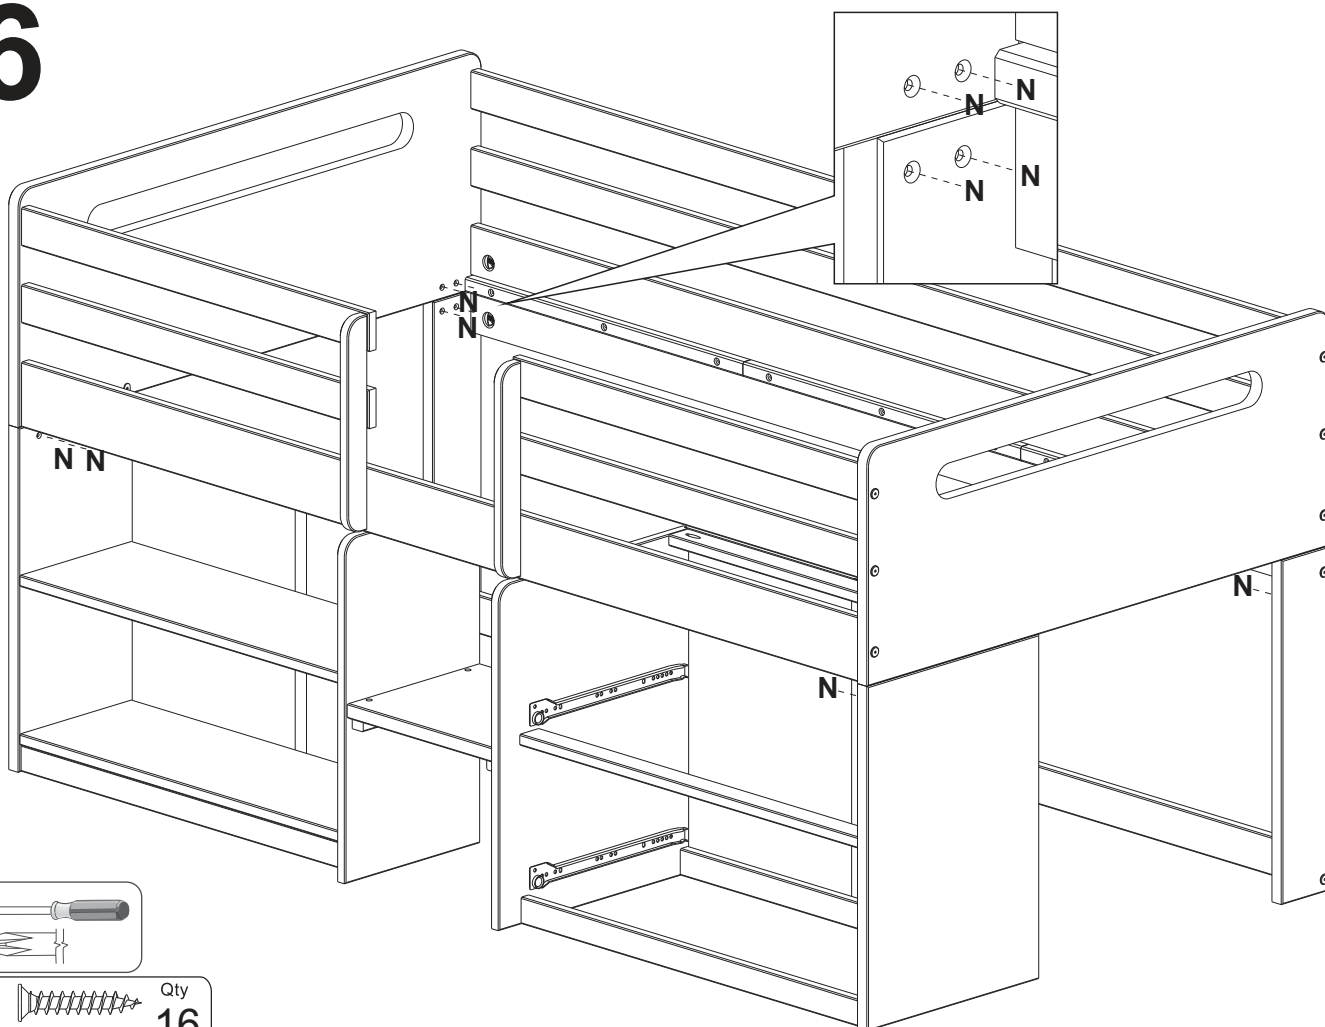

17

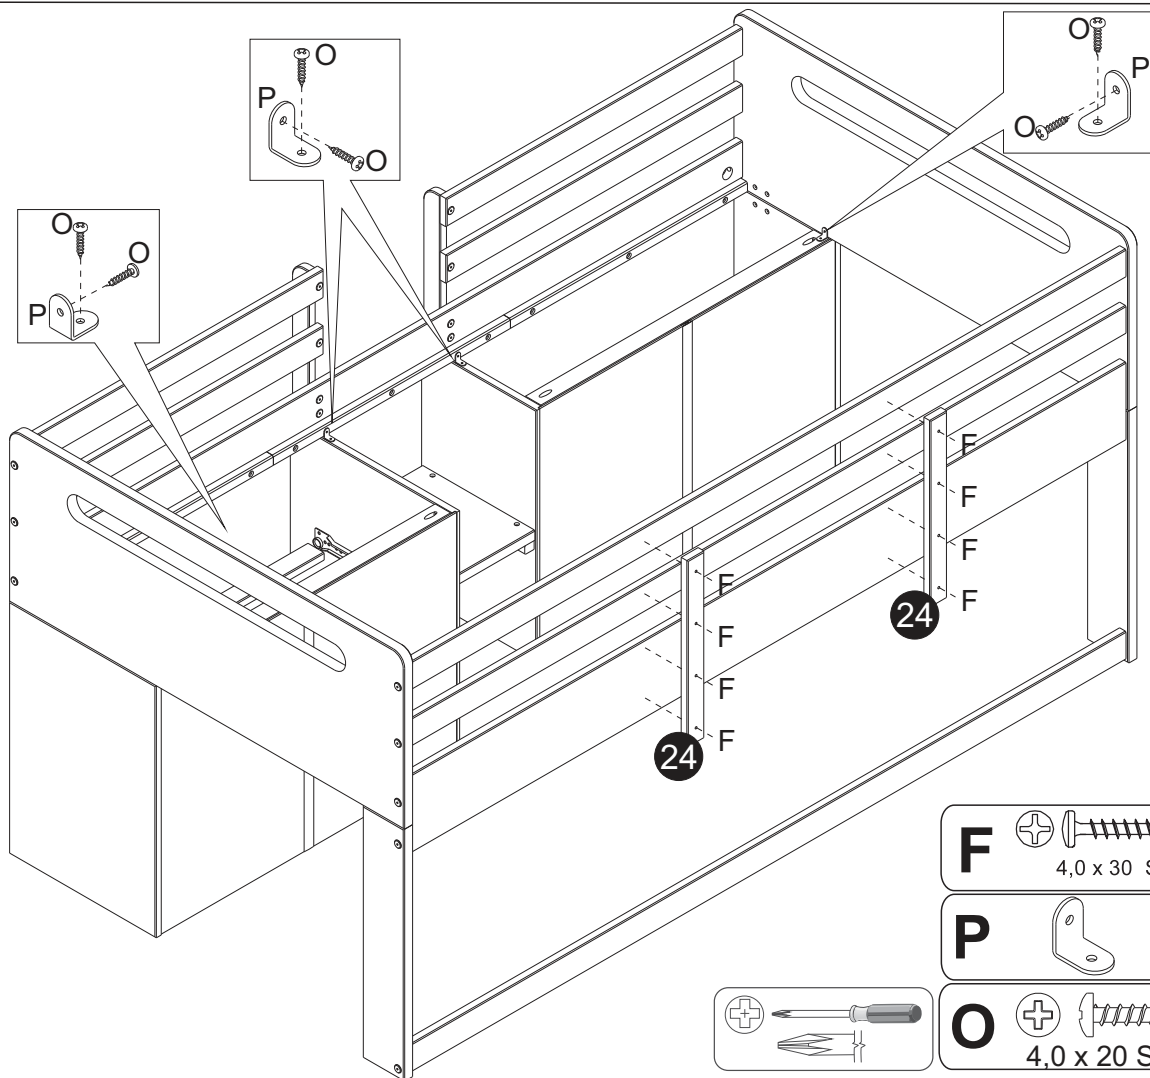




18

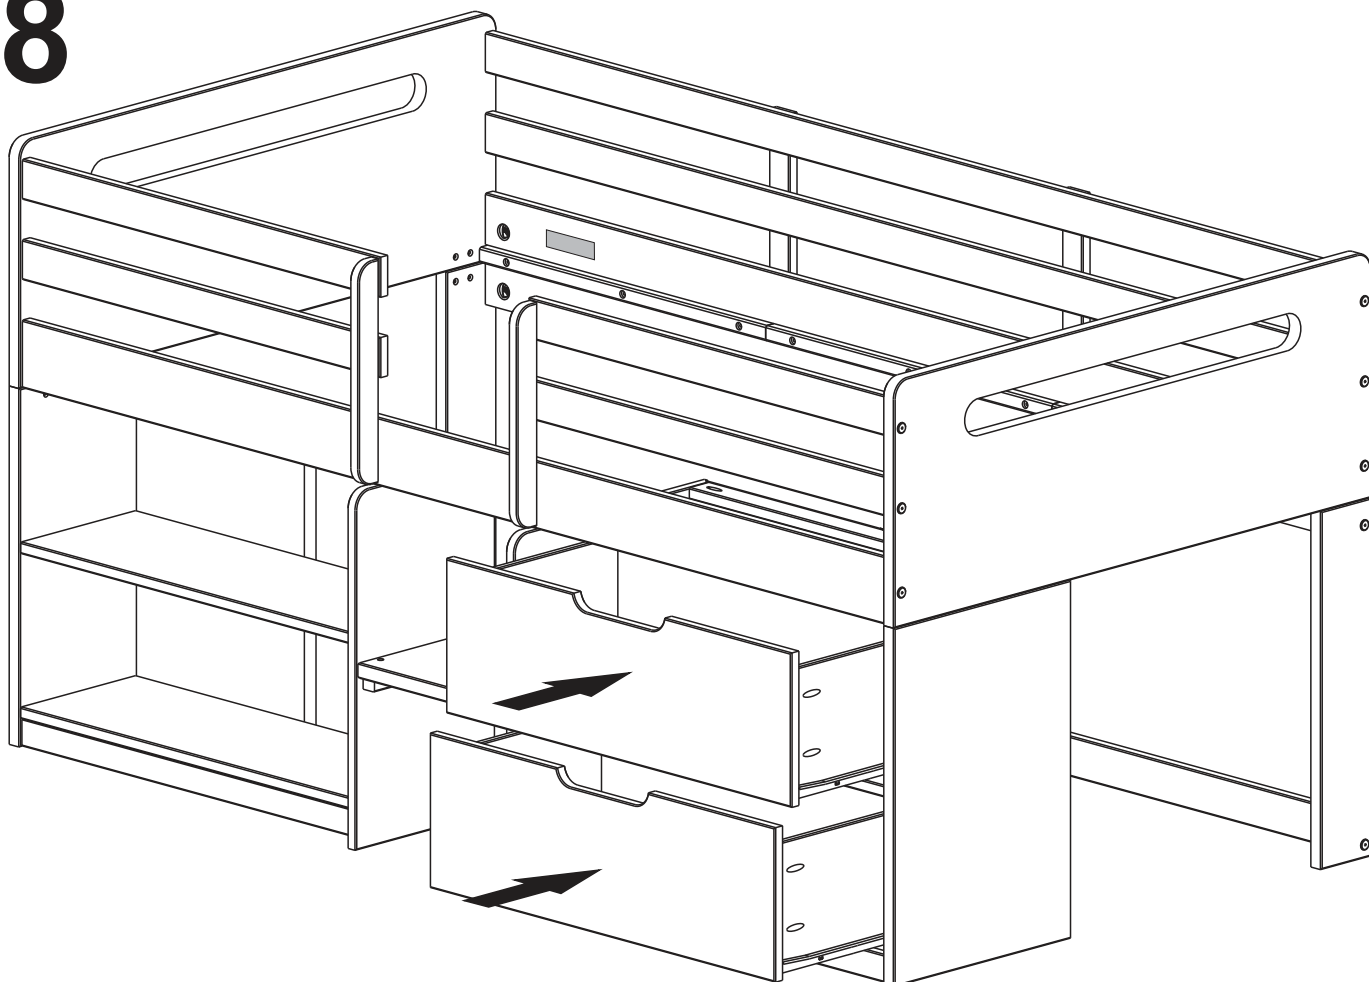


19

There must be at least 5" inches from top surface of mattress to top edge or guardrails.

“MATTRESS 7" HIGH LIMITED”

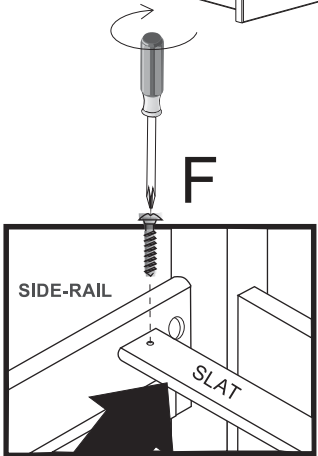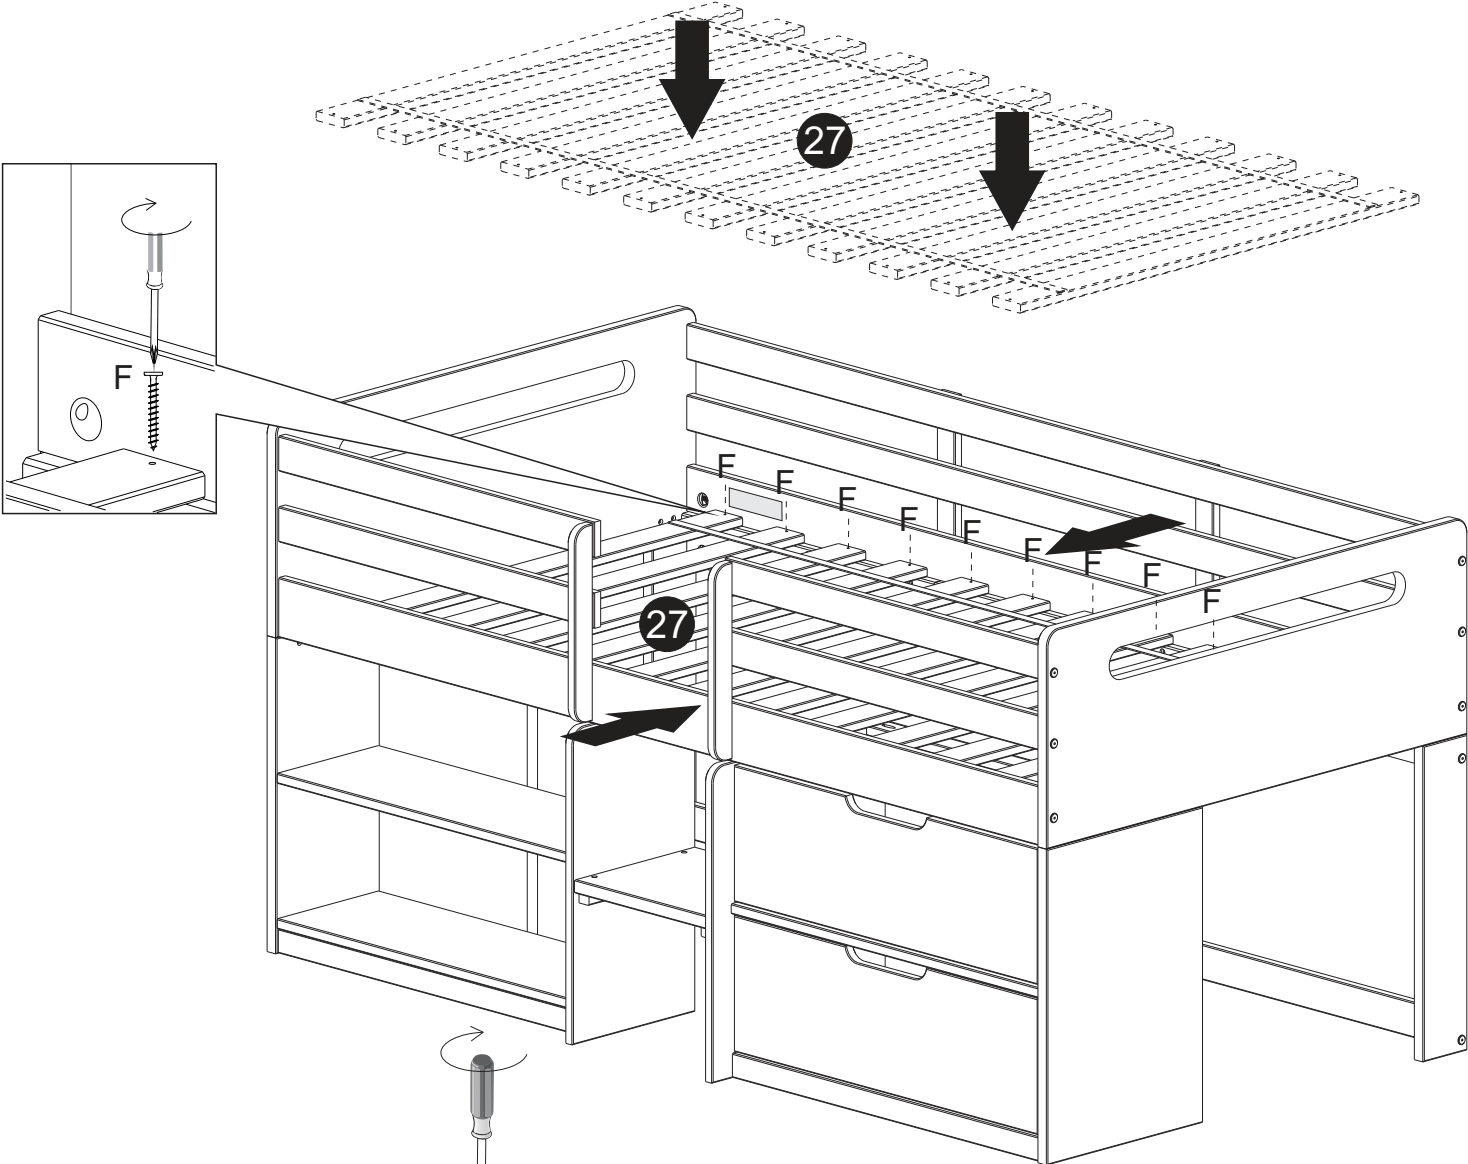

F  4,0 x 30 Screw Qty **24**

!
The first slats must be fixed at 3" from each headboard end.

!
“INSTALL SLAT KIT WITH SPACER TAPE ON TOP (FACING UP)”

IMPORTANT NOTE:

Please note warpage may occur because it is natural wood. To facilitate the placement of the screws, you must press the two siderails simultaneously, as shown by the arrows.

