


**Assembly&InstructionManual**

SKU:800-114 / 800-116

# Raised garden bed

## Installation Guide

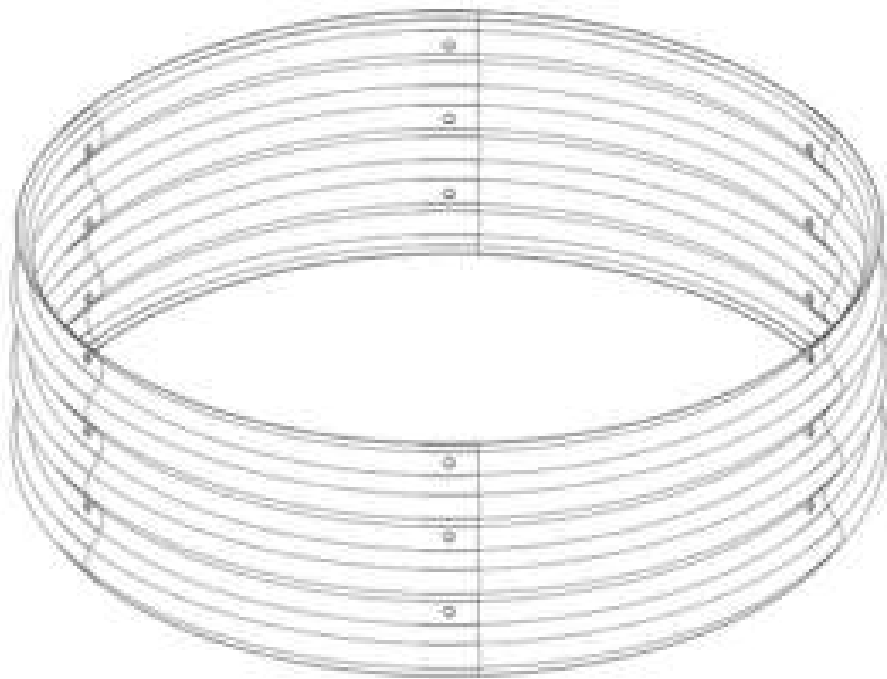

Save this manual for future reference

# INTRODUCTION

Thank you for purchasing Aoodor's raised garden bed! We hope you will find joy in our product for many years to come.

To ensure your personal safety during installation and to get the most out of your investment, please read this entire manual before beginning the installation process. If you feel that this process is too difficult to do on your own, we advise that you seek assistance from a local building or home improvement contractor.

**!** **WARNING** Improper installation and operation of your gazebo can result in severe personal injury as well as product failure not covered by warranty. Please follow all instructions carefully or contact technical support for assistance.

We believe that installation can be a simple, streamlined process if you follow the instructions in this manual. Please contact our customer support line for help any step of the way. If you need assistance with assembly, have missing or defective parts, or any other issues, please email us at [customerservice@aoodor.com](mailto:customerservice@aoodor.com)

## **!** SAFETY INFORMATION

Please read and understand this entire manual before attempting.

### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


### Parts Listing

Parts	Desc(dia30")	Qty	Ref No
A	Corner panel 	6	800-114-001
B	Screw,Nut and Washer 	18	800-114-002
C	Safetyrubberedsing 	1	800-114-003

Parts	Desc(dia42")	Qty	Ref No
A	Corner panel 	6	800-116-001
B	Screw,Nut and Washer 	36	800-116-002
C	Safetyrubberedsing 	1	800-116-003


# Assembly

## 1 Step One

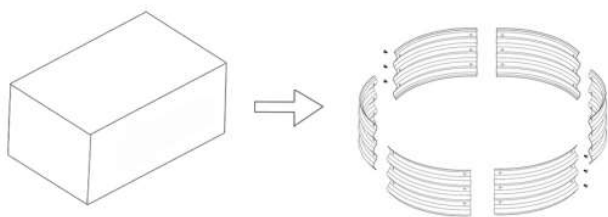

Remove protective films from all panels, and lay panels on a flat surface according to the above configuration

## 2 Step Two

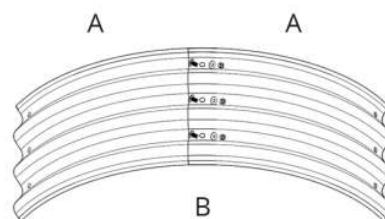


Assemble all curved panels : initially attach all bolts , washers and nuts loosely , and then tighten up using the wrench tool ( as supplied ) with a screwdriver / cordless drill

## 3 Step Three




Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

## 4 Step Four

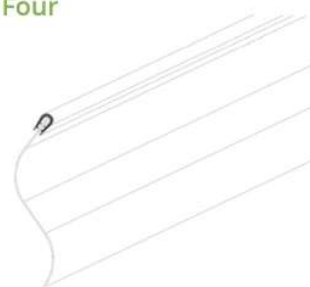

Push the safety rubber edging to the top rolled steel edge and cut the extra length off . Make sure edging is attached securely .

## 5 Step Five

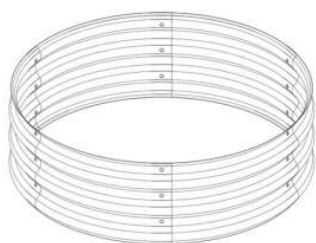

Congratulations on completing the assembly !  
Now you can start to build your dream garden .

## ✓ Enjoy



Please don't hesitate to contact us for any further questions,  
your satisfaction is guaranteed.  
customerservice@aodor.com  
<https://www.aodor.com/>