

CONNECT-IT COMPUTER DESK

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

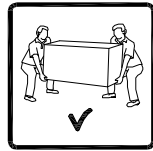

ASSEMBLY TIME 90 MINUTES


PARTS IDENTIFICATION:

(A) LEFT SIDE PANEL




1 PC

(B) RIGHT SIDE PANEL



1 PC

(C) MIDDLE DIVIDER PANEL




1 PC

(D) CROSS BRACE




1 PC

(E) BOTTOM PANEL




1 PC

(F) LARGE TOP PANEL




1 PC

(G) SMALL TOP PANEL




1 PC

(H) KEYBOARD SHELF




1 PC

(I) KEYBOARD FRONT CROSS BAR




1 PC

(J) BACK PANEL




1 PC

(K) REINFORCEMENT PANEL




1 PC

(L) BACK BOARD




1 PC

(M) BACK PANEL




1 PC

(N) BACK PANEL




1 PC

(O) MIDDLE DRAWER FRONT PANEL



1 PC

(P) UPPER DRAWER FRONT PANEL




1 PC

(Q) MIDDLE BACK PANEL












1 PC

















(R) UPPER BACK PANEL







1 PC

ASSEMBLY INSTRUCTIONS

(S) LEFT DRAWER SIDE PANEL		2 PCS	(X) LARGE DRAWER BACK PANEL		1 PC
(T) RIGHT DRAWER SIDE PANEL		2 PCS	(Y) LEFT DRAWER SIDE PANEL		1 PC
(U) DRAWER SUPPORT		3 PCS	(AA) RIGHT DRAWER SIDE PANEL		1 PC
(V) DRAWER BOTTOM PANEL		3 PCS	(AB) TOP GLASS		1 PC
(W) LARGE DRAWER FRONT PANEL		1 PC			


Z HARDWARE IDENTIFICATION							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HINGE SCREW (ϕ 4x15mm SR)		10 PCS
2	LARGE WOODEN DOWEL ϕ 8x30mm		44 PCS	10	PLASTIC FEET ϕ 15mm		6 PCS
3	SMALL WOODEN DOWEL ϕ 6x25mm		12 PCS	11	HANDLE L=400mm		3 PCS
4	CAM LOCK (ϕ 15x12mm SR)		24 PCS	12	HANDLE BOLT (ϕ 4x23mm SR)		9 PCS
5	CAM BOLT (ϕ 7x35.5mm SR)		24 PCS	13	POWER OUTLET		1 PC
6	GLIDES SCREW (ϕ 3x12mm SR)		36 PCS	14	HINGE (ϕ 26mm SR)		2 PCS
7	SCREW (ϕ 4.5x42mm SR)		6 PCS	15	GLIDES (L = 350mm WHT)		3 SET
8	SCREW (ϕ 4.3x35mm SR)		12 PCS	16	RAIL (L = 300mm WHT)		1 SET

ASSEMBLY INSTRUCTIONS

Z	HARDWARE IDENTIFICATION						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
17	RAIL SCREW (ϕ 3.5x14.5mm SR)		12 PCS	19	STICKER ϕ 20mm		4 PCS
18	SCREW DRIVER (60x31mm SR)		1 PC	20	IRON BAR (ϕ 9.5x352mm SR)		2 PCS


Z11,Z12,Z13,Z14,Z15,Z16,Z17,Z20 not included in blister packaging.

STEP 1

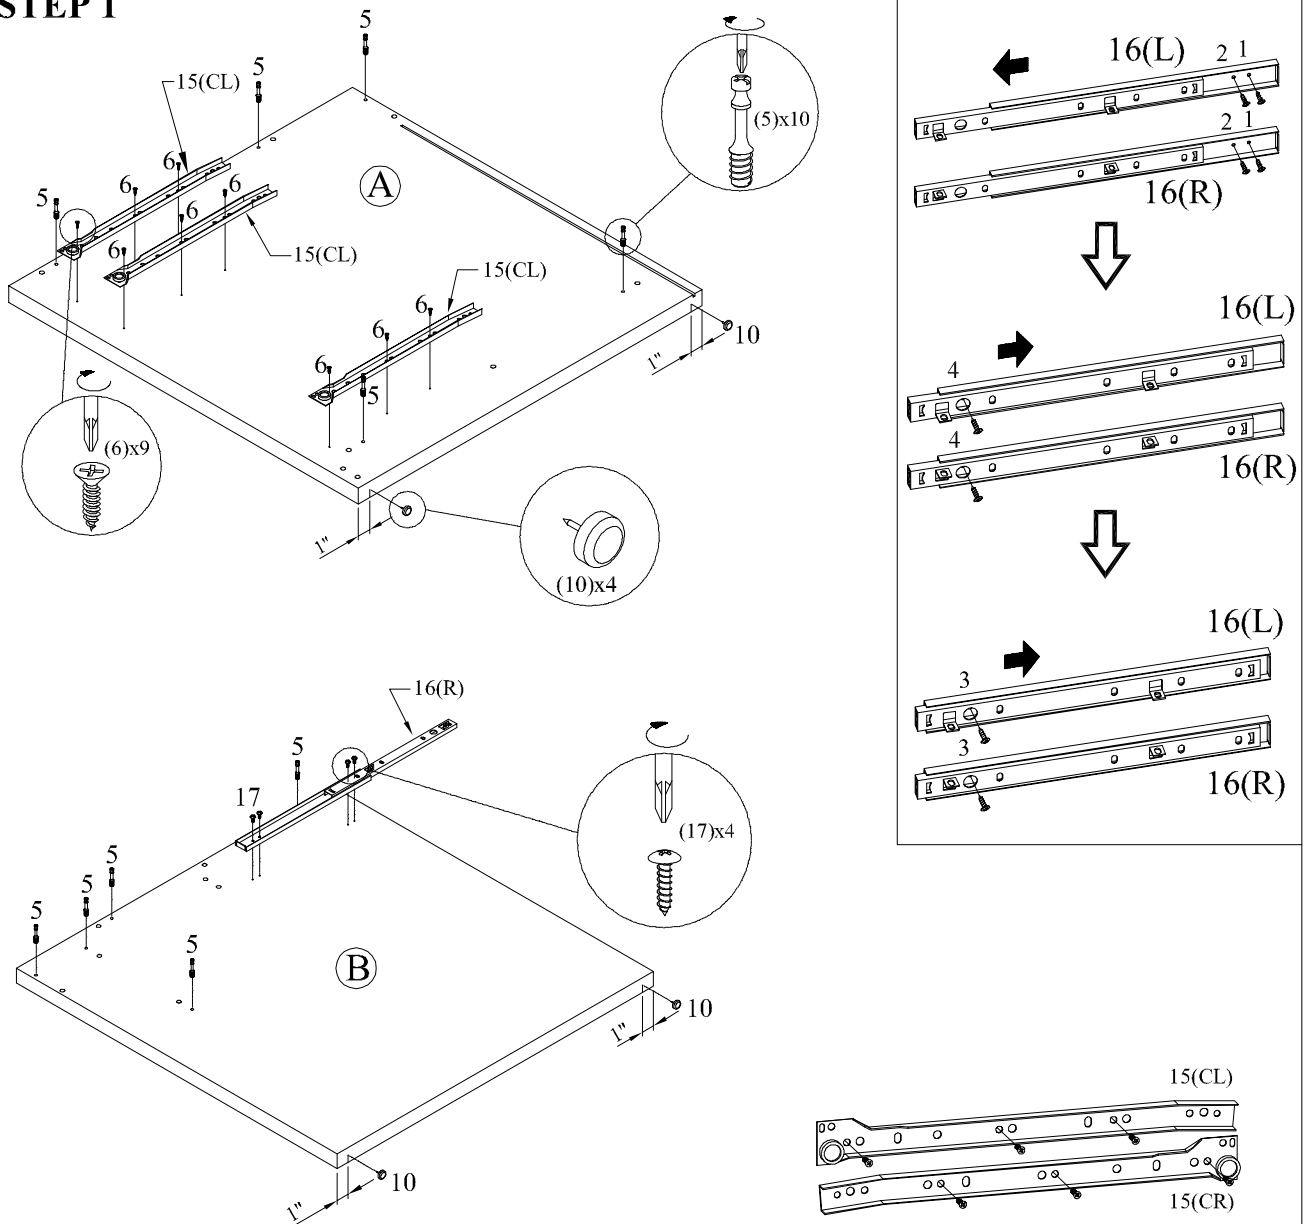


STEP 2


The Glue (1) should be used in the indicated locations to help solidify the assembled unit.

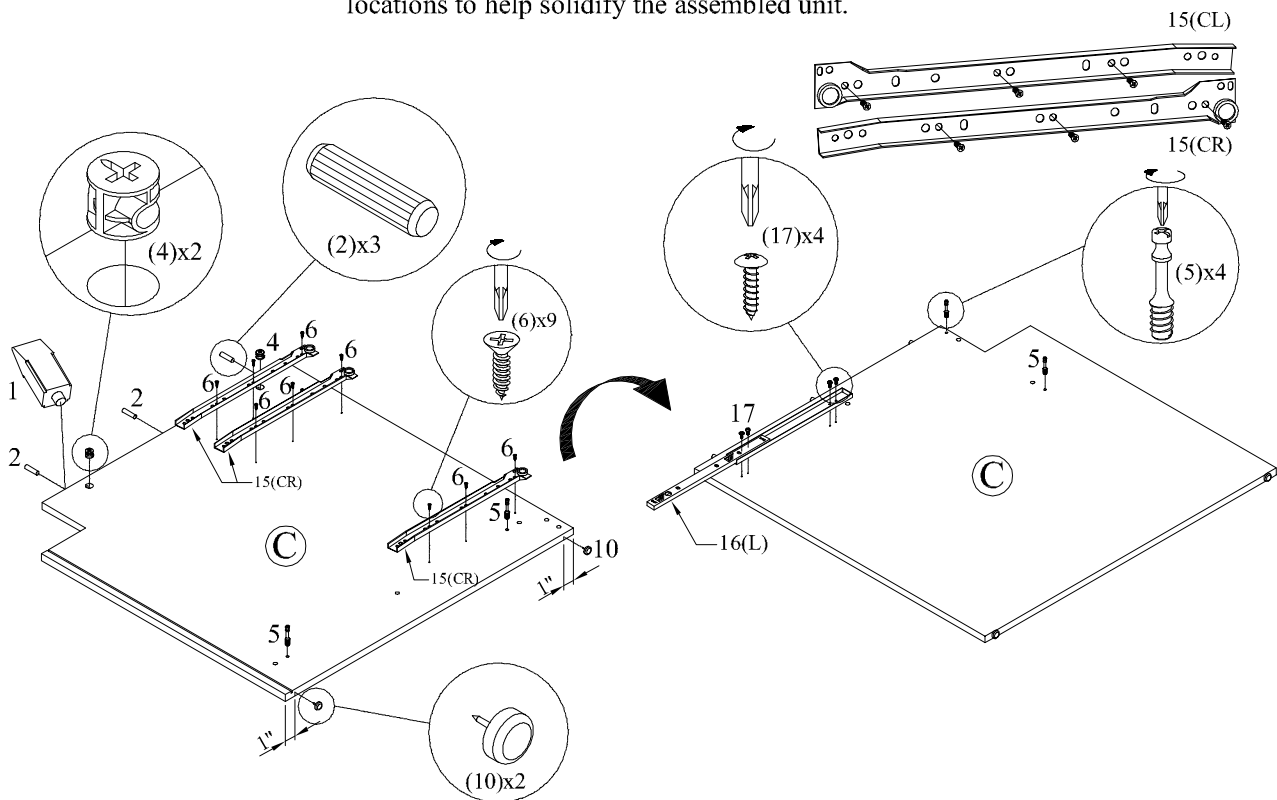


STEP 3

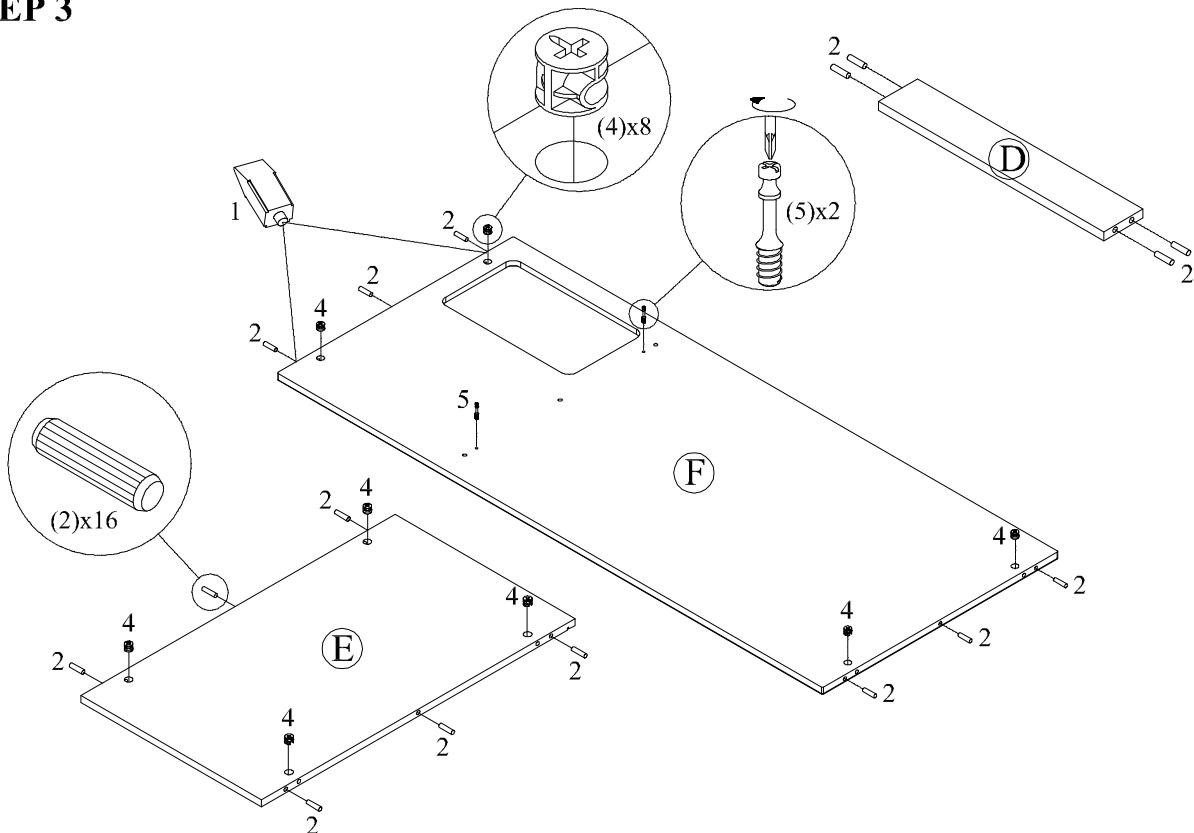


STEP 4

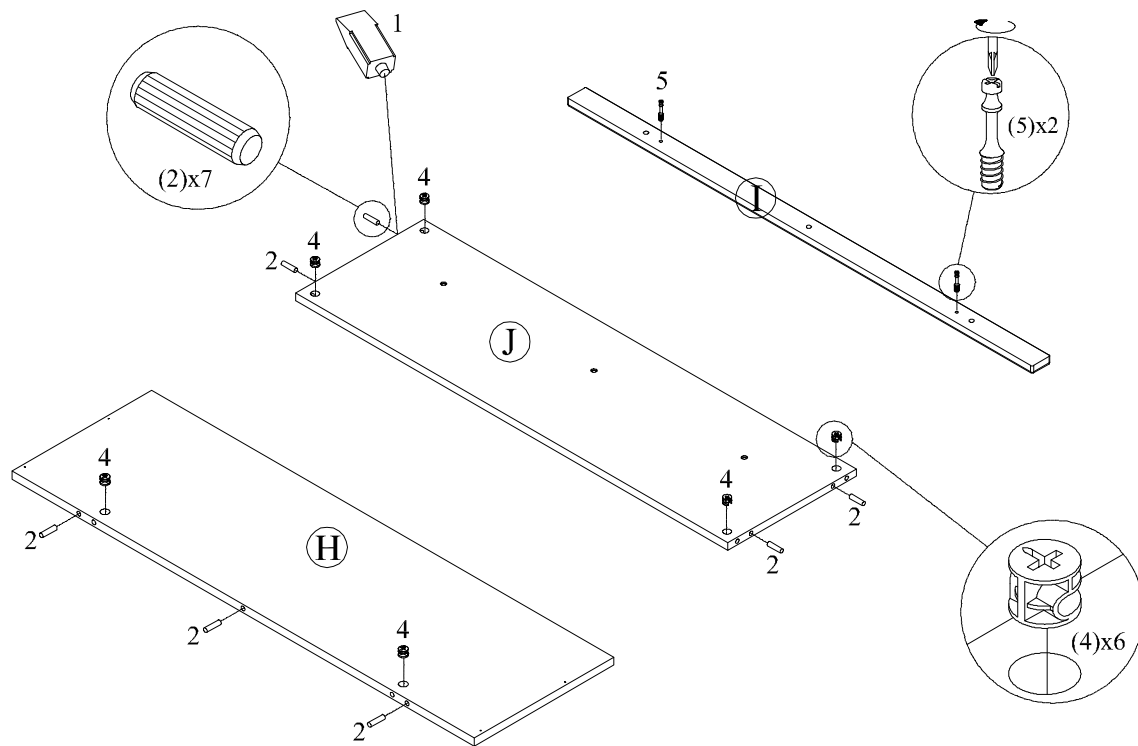


STEP 5

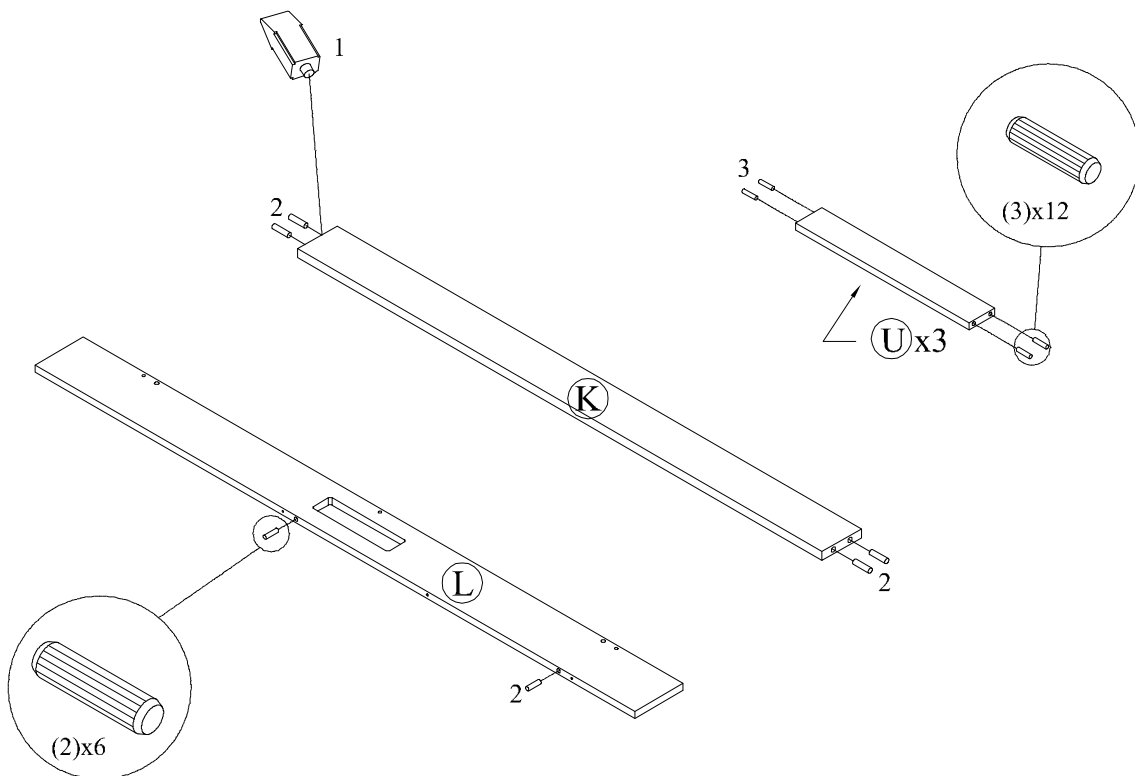


STEP 6

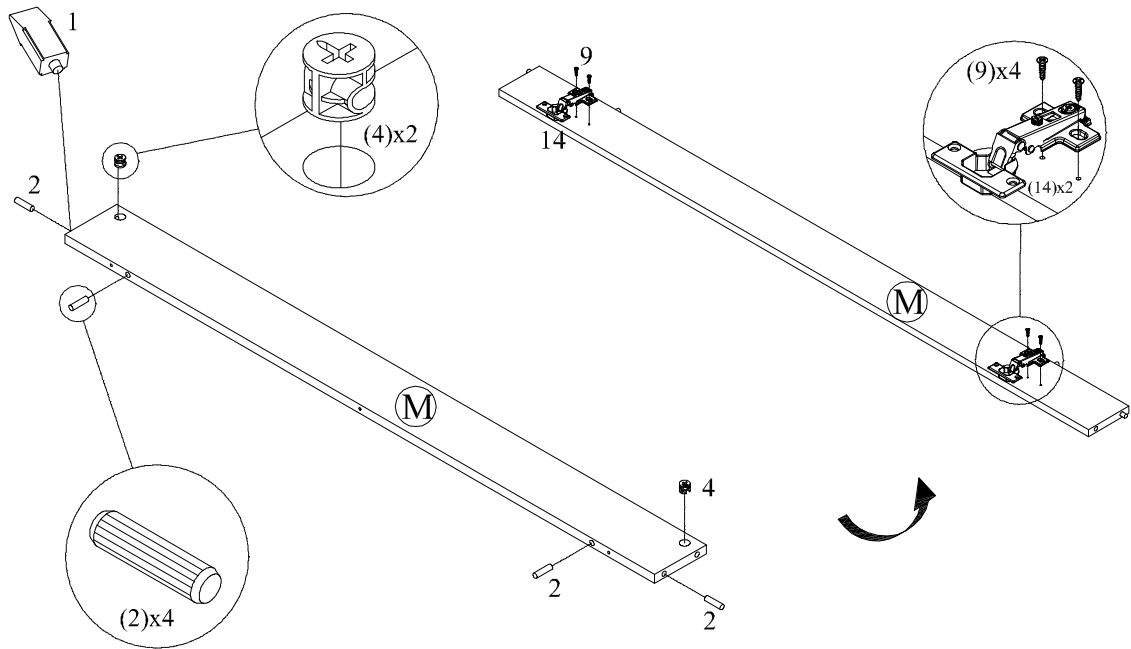


STEP 7

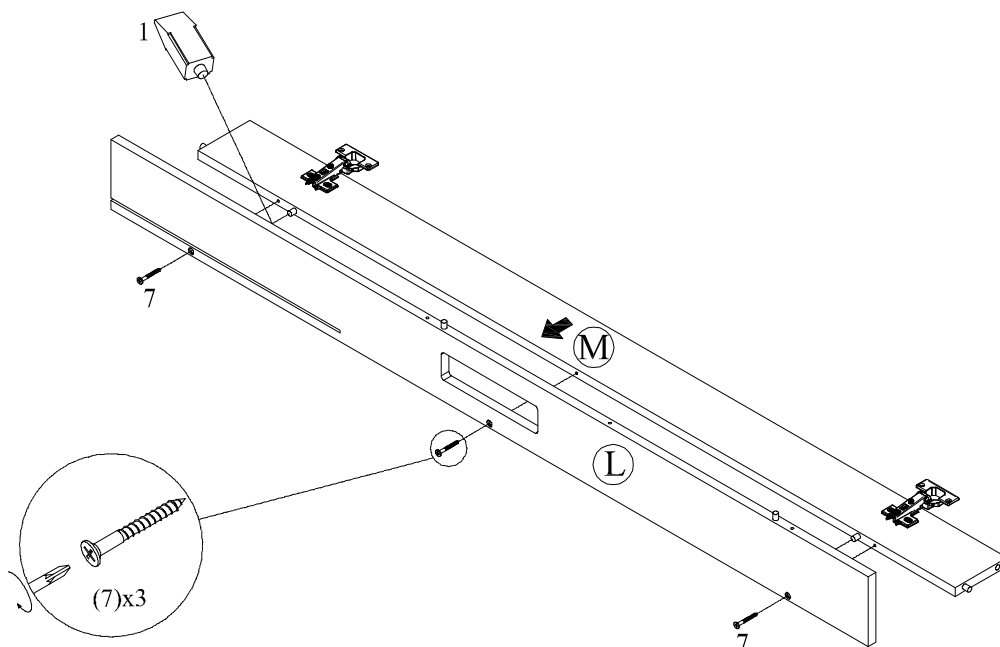


STEP 8

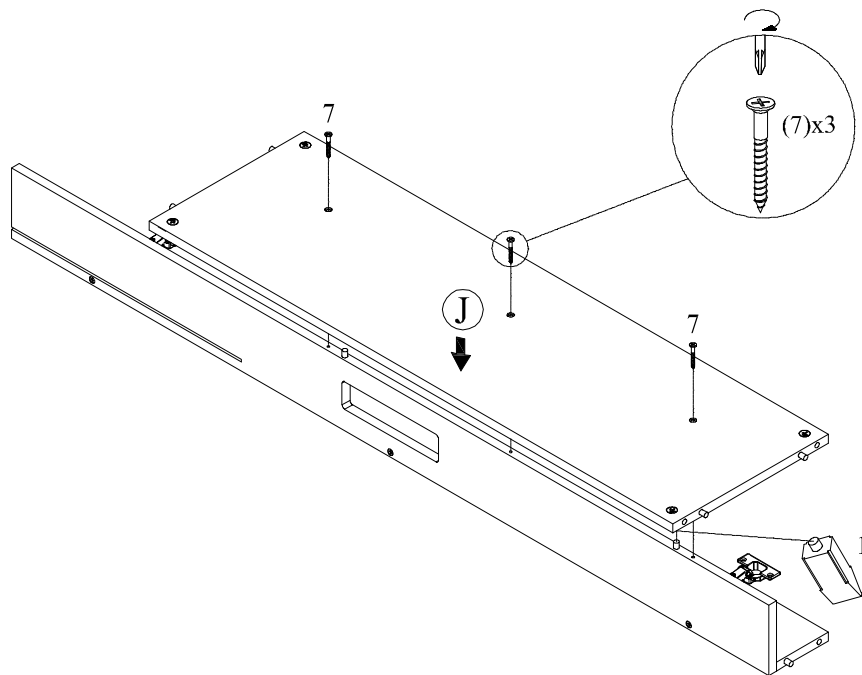


STEP 9

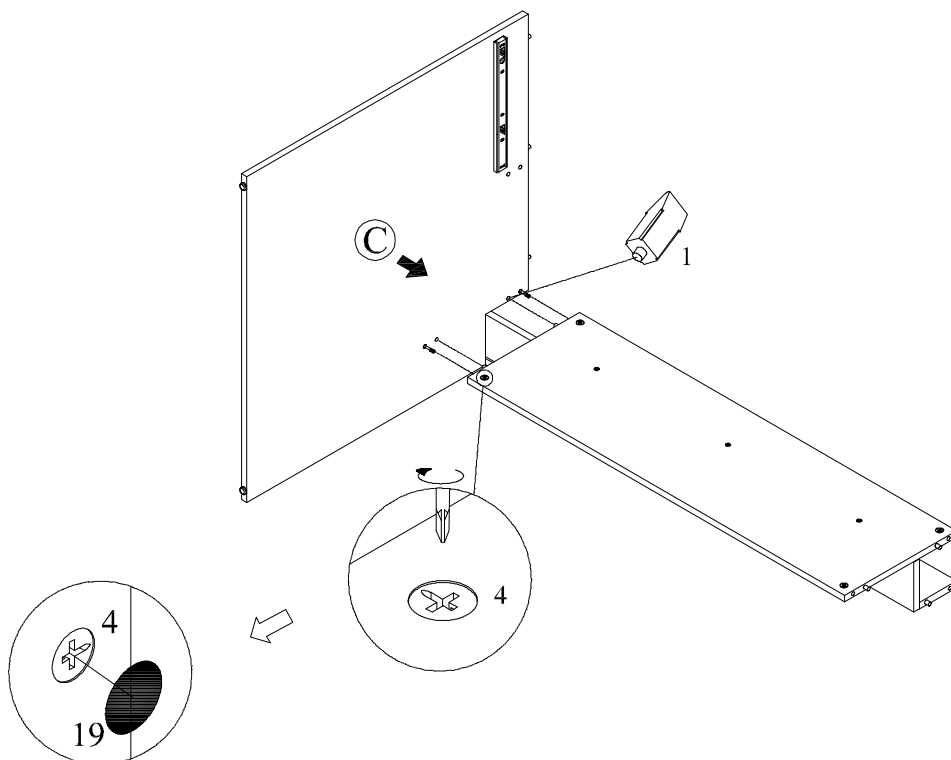


STEP 10

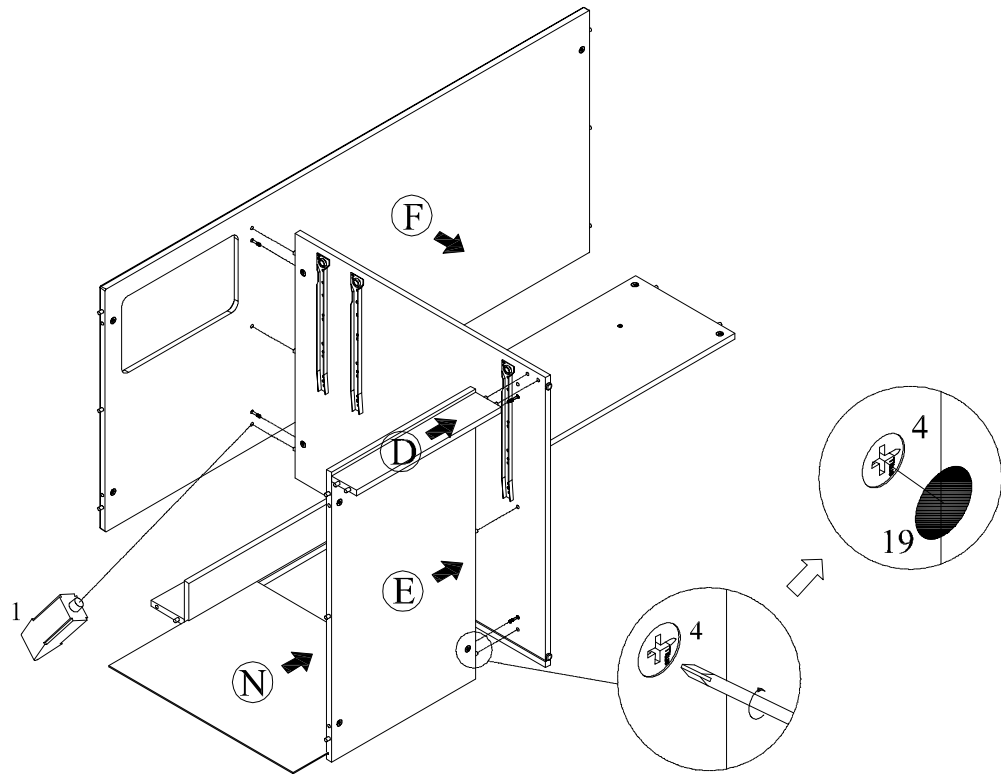


STEP 11

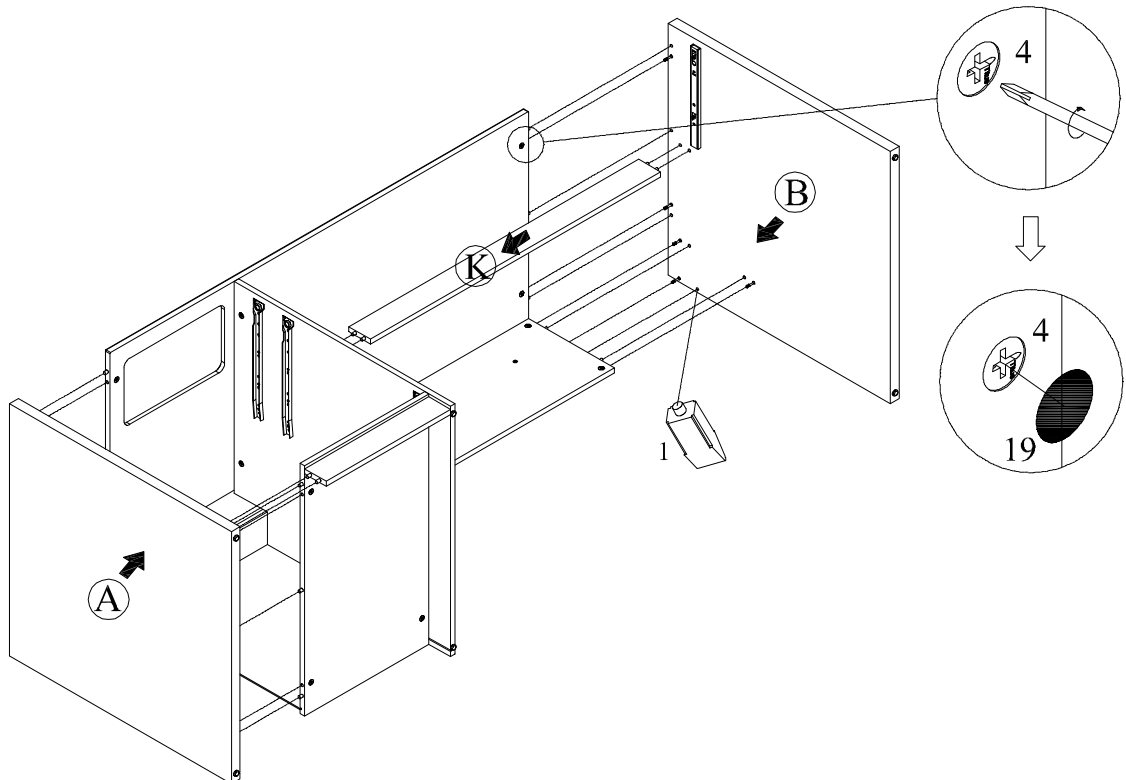


STEP 12

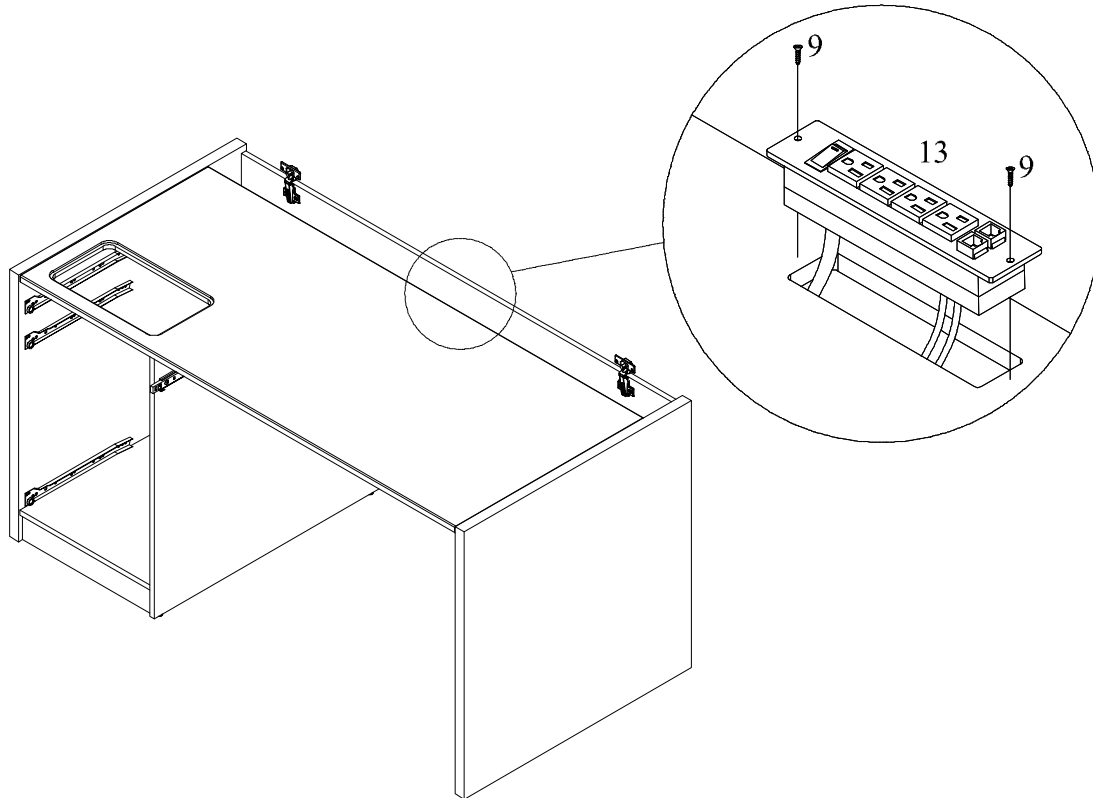


STEP 13

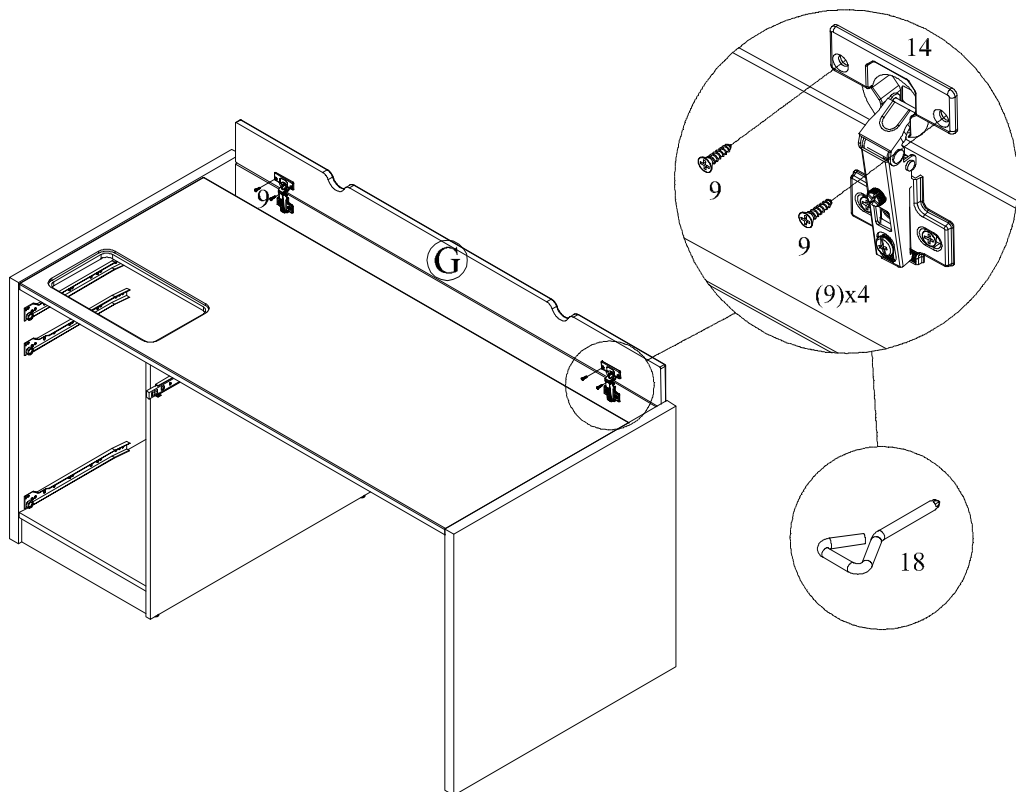


STEP 14

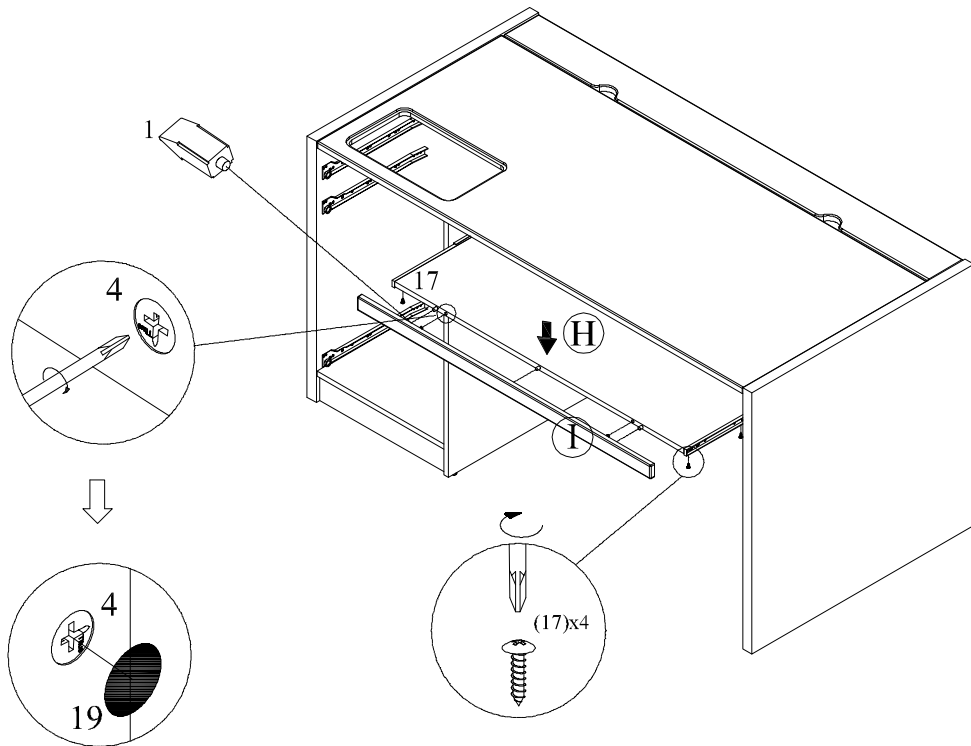


STEP 15

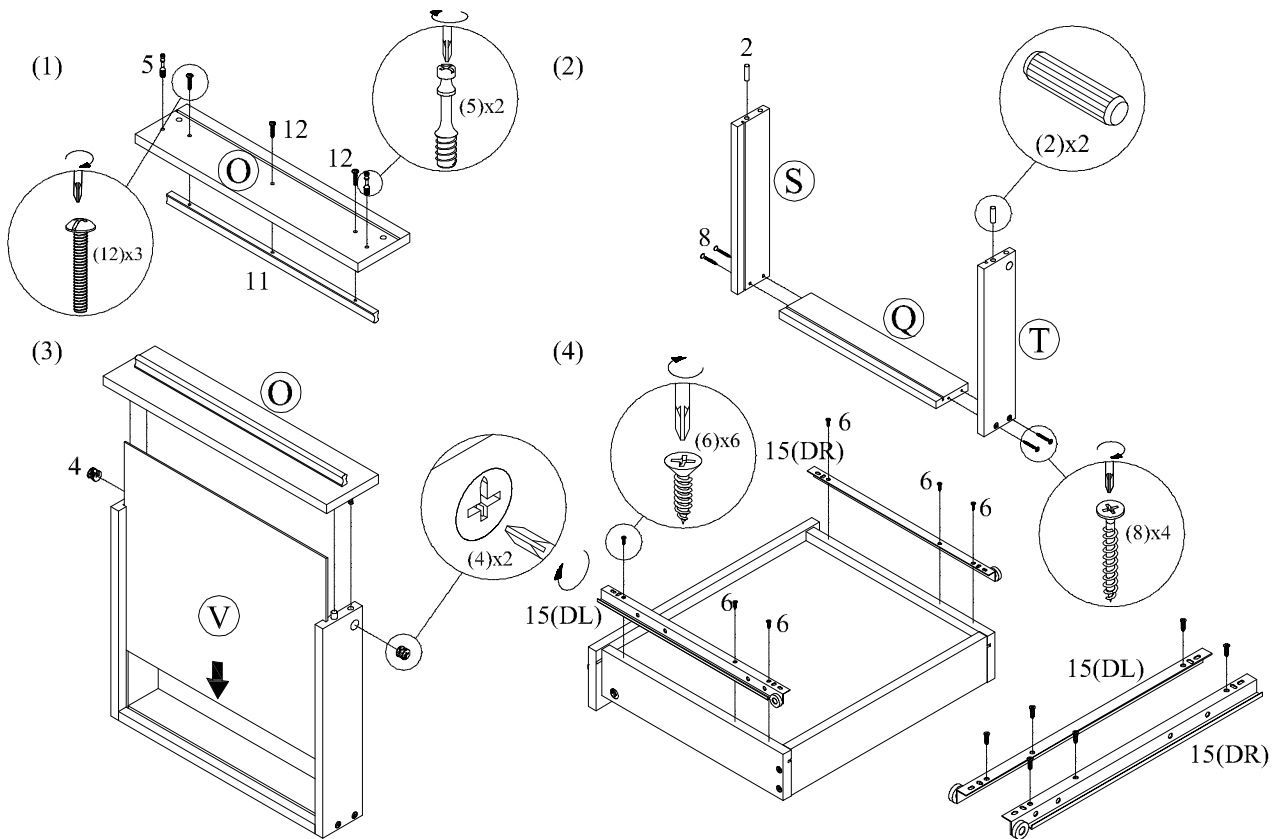

STEP 16

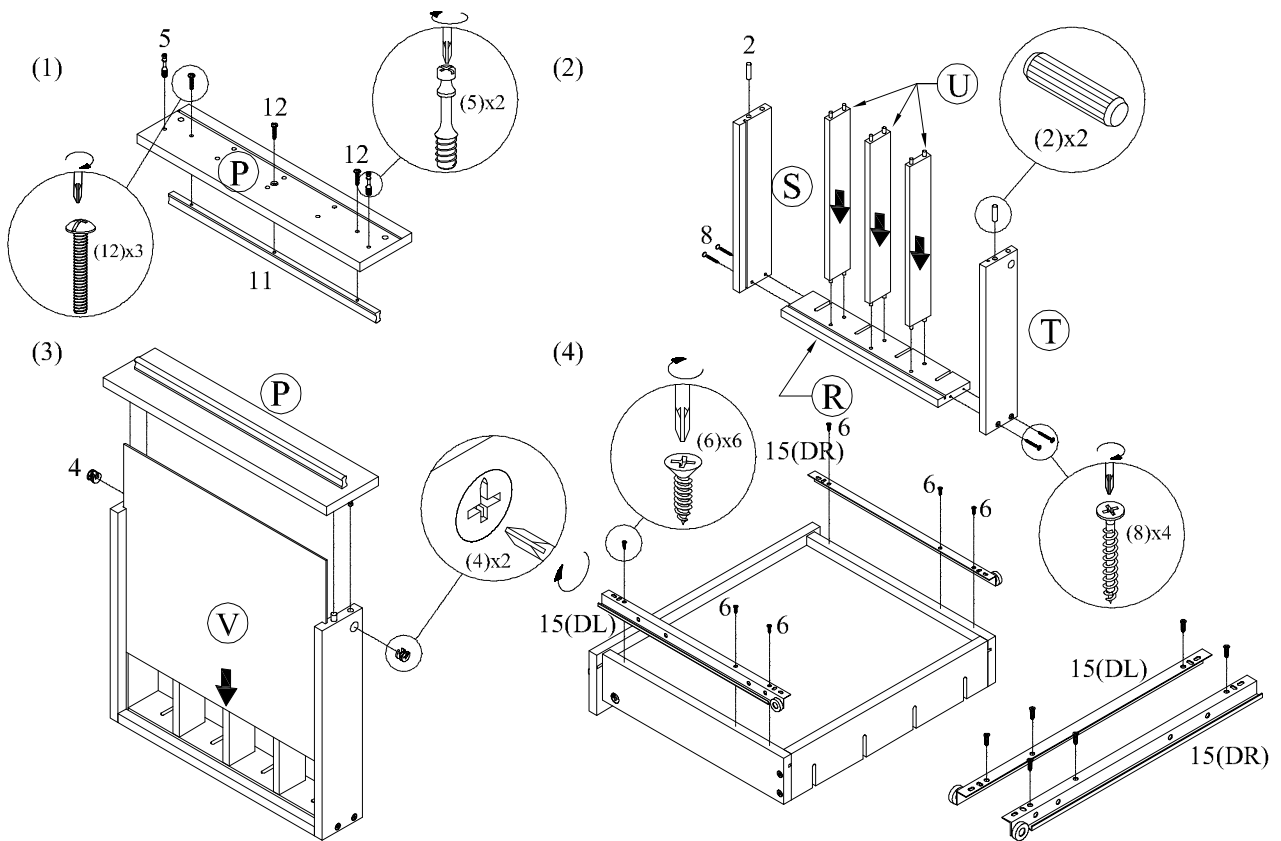



STEP 17

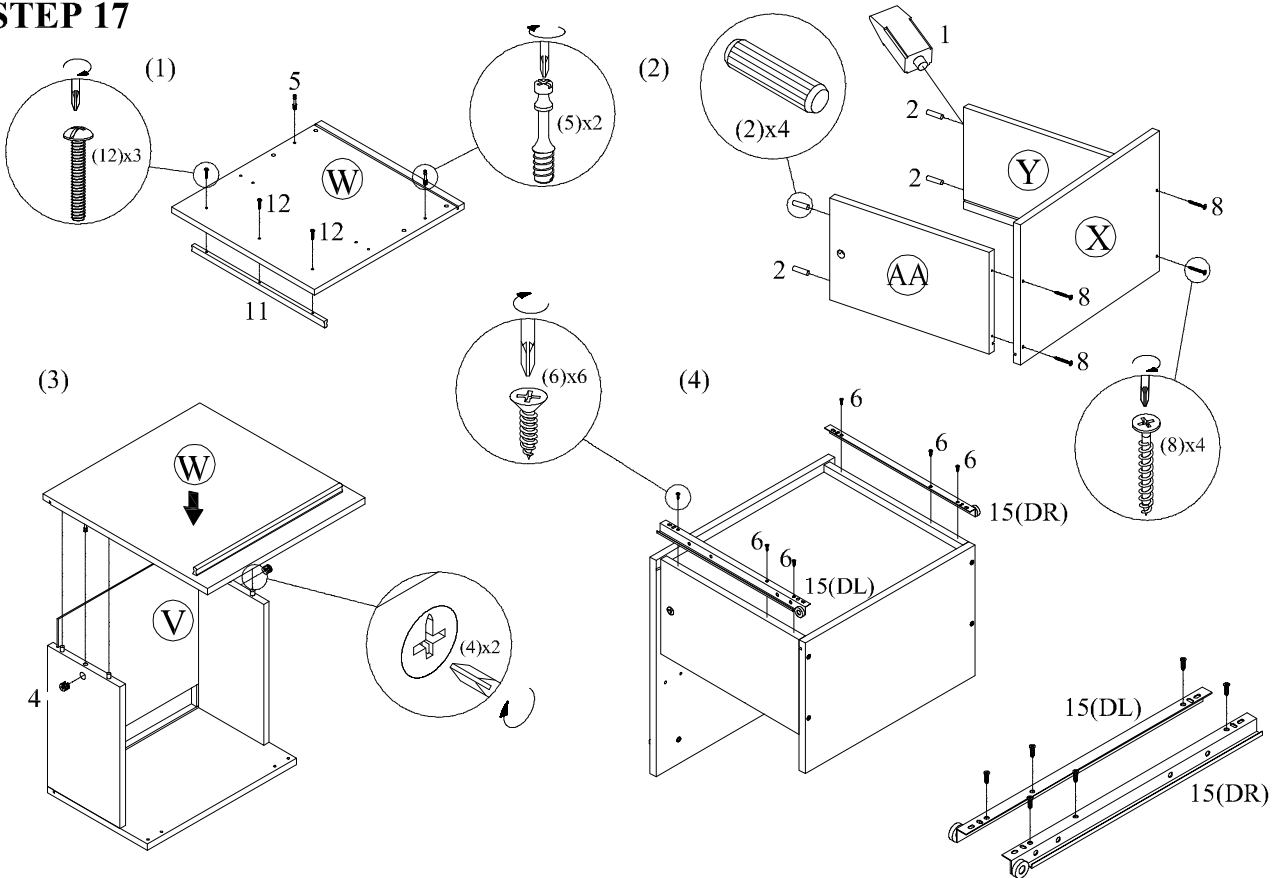


ASSEMBLY INSTRUCTIONS

STEP 18

Insert rails in outside holes for large files.
Insert rails in inside holes for small files.

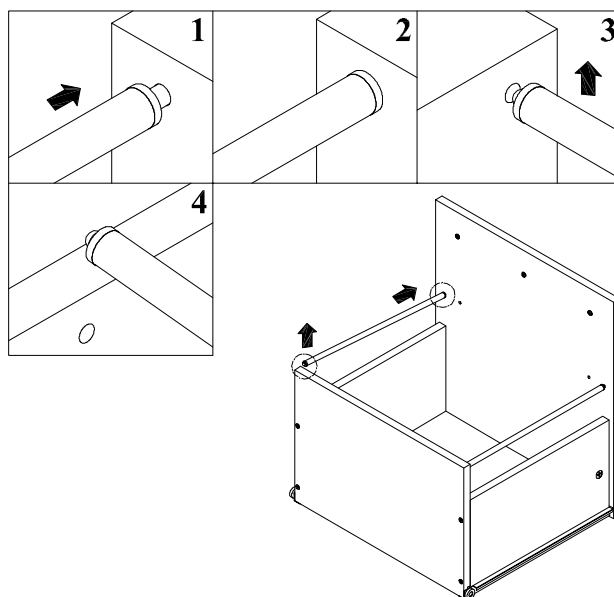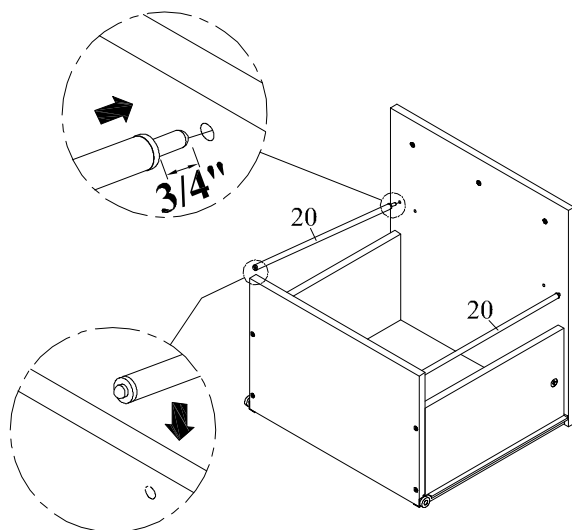

STEP 19

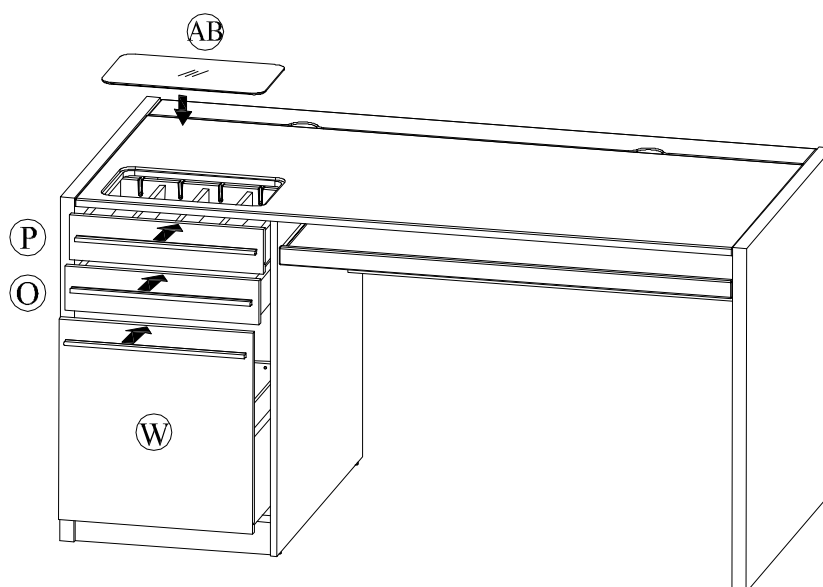

STEP 20

COMPLETE

