


# Assembly Instructions

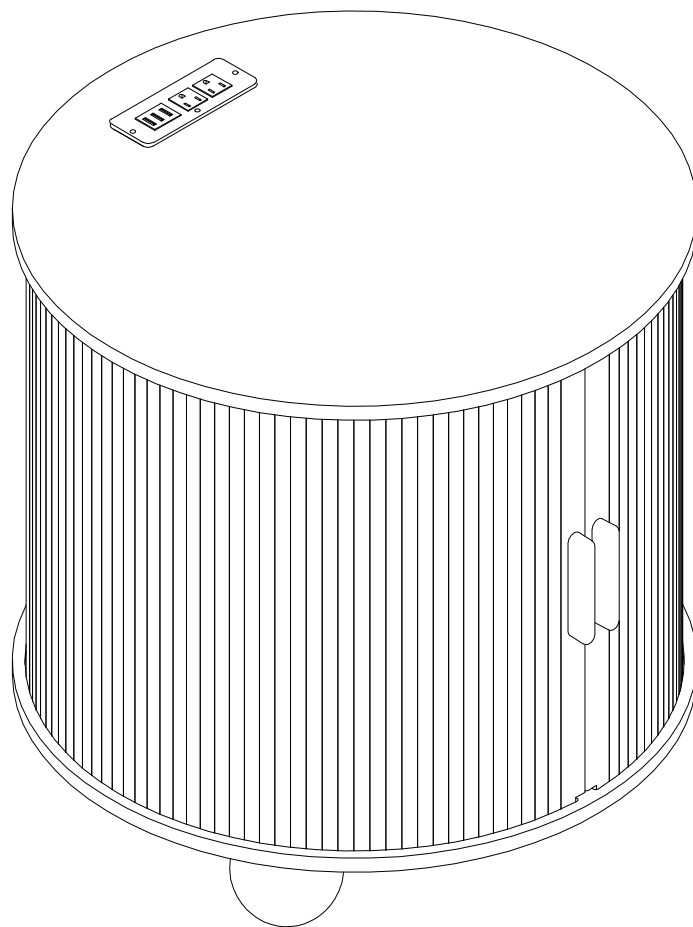


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

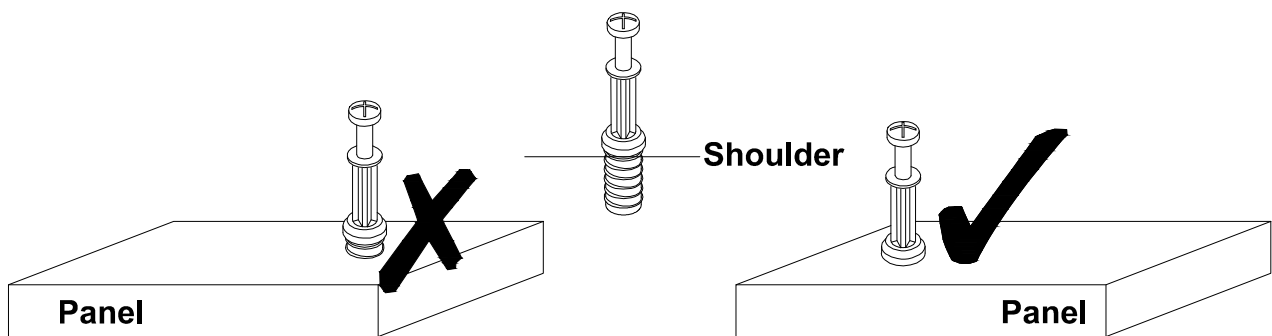

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

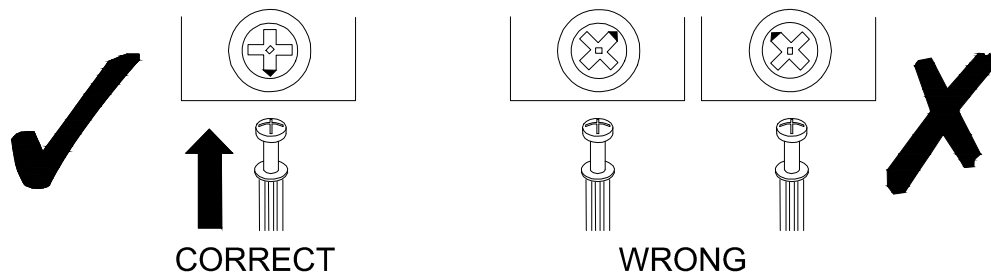

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT







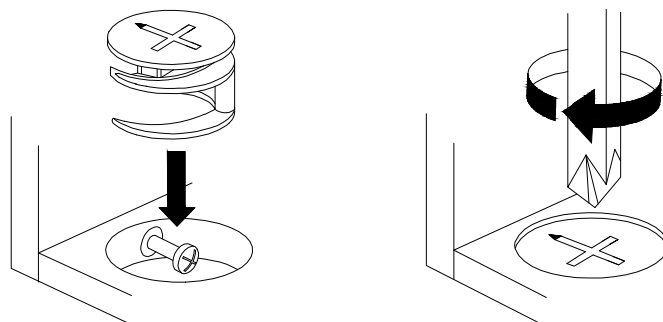




Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.




Turn cam lock clockwise to tighten.


# Part List

<b>No. A</b> Quantity:6 Pcs Cam Lock Dowel 8*28mm 	<b>No. B</b> Quantity:6 Pcs Cam Ø15 	<b>No. C</b> Quantity:6 Pcs Sticker Ø20 	<b>No. D</b> Quantity:3 Pcs Dowel 8*30mm 
<b>No. E</b> Quantity:2 Pcs Handle 110*20mm 	<b>No. F</b> Quantity:4 Pcs Screw M4*14mm 	<b>No. G</b> Quantity:16 Pcs Screw M6*40mm 	<b>No. H</b> Quantity:1 Pcs Allen Key 4# 
<b>No. I</b> Quantity:3 Pcs Foot Pad Ø20 	<b>No. J</b> Quantity:1 Sets Power strip 	<b>No. K</b> Quantity:2 Pcs Screw M3.5*14mm 	

# Product structure

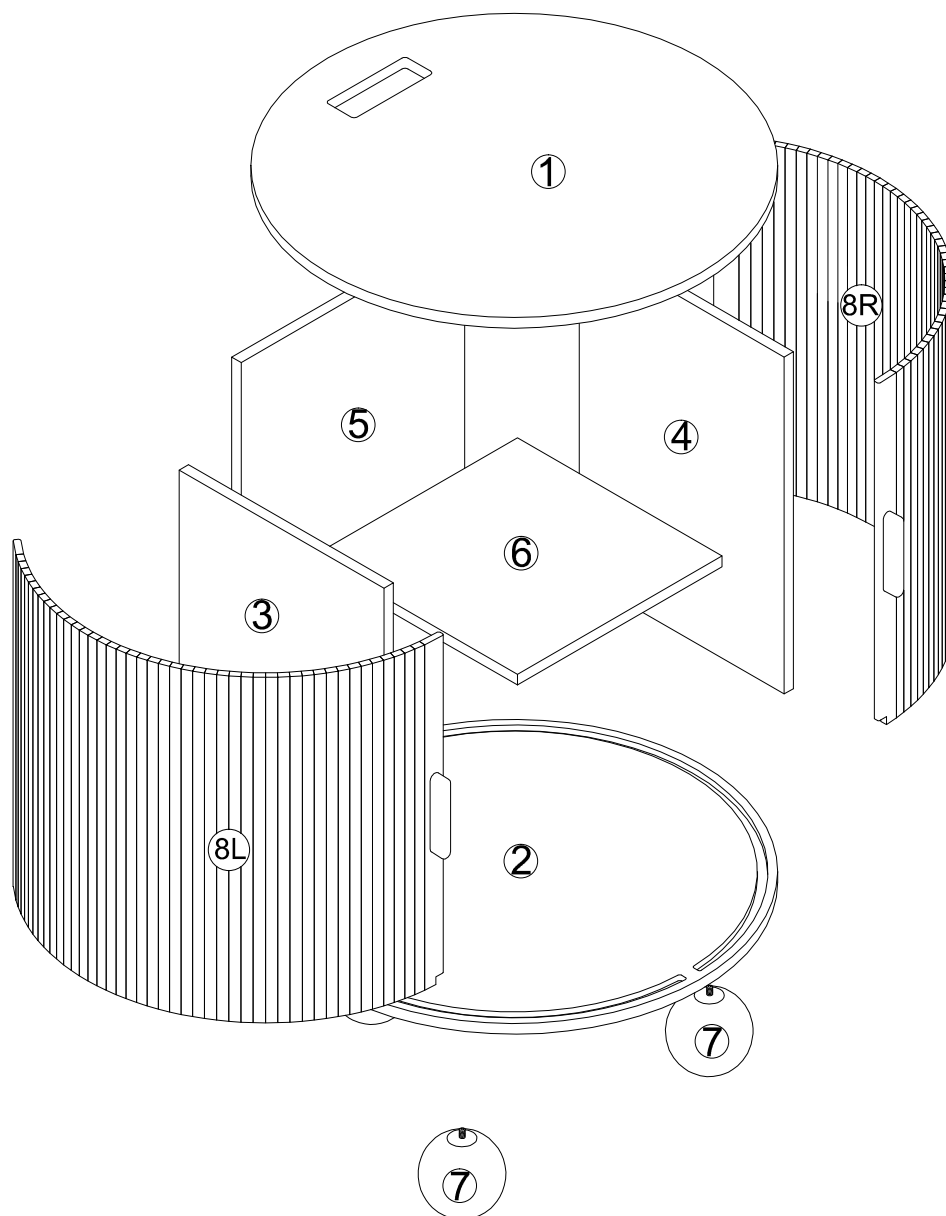

## STEP 1

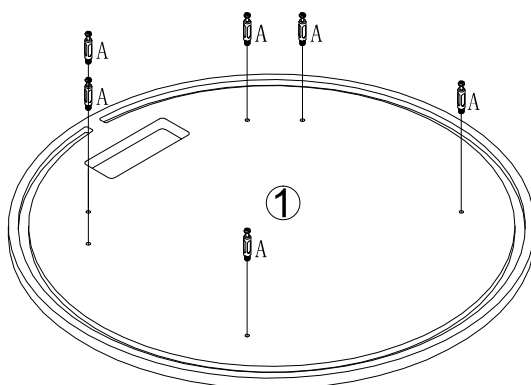


No. A  
Quantity: 6 Pcs  
8\*28mm



## STEP 2

Note the distinction between up and down,  
the lock hole is on the same side.

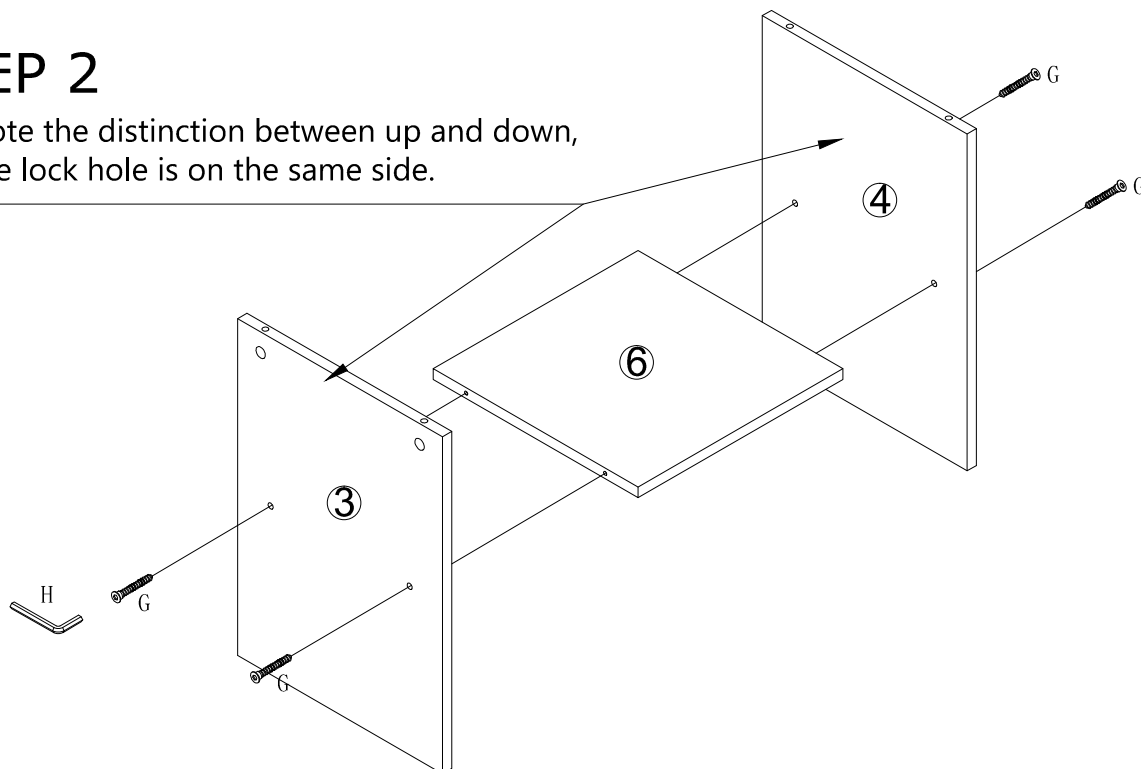

No. G  
Quantity: 4 Pcs  
M6\*40mm




No. H  
Quantity: 1 Pcs  
4#



## STEP 3

Note the distinction between up and down, the lock hole is on the same side.

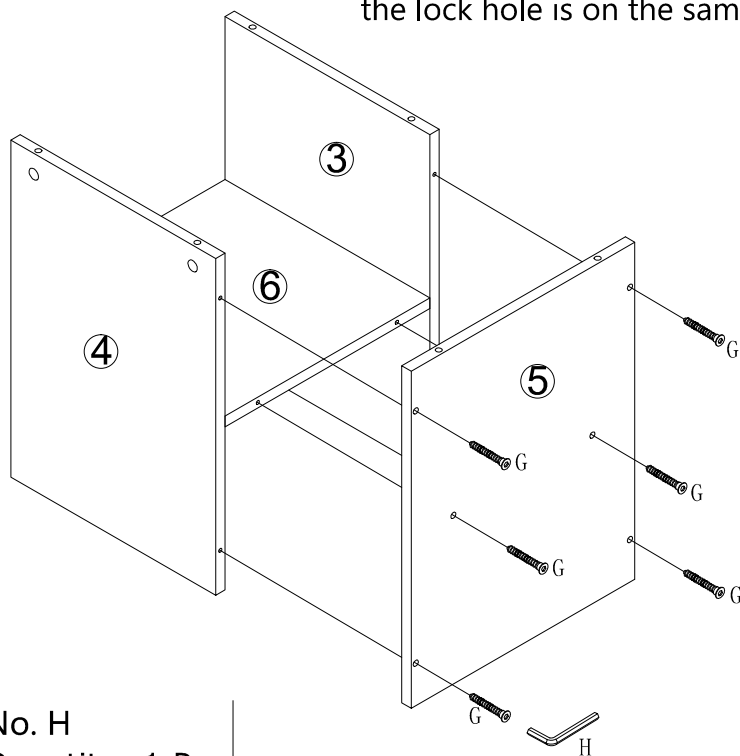


No. G  
Quantity: 6 Pcs  
M6\*40mm



No. H  
Quantity: 1 Pcs  
4#




## STEP 4

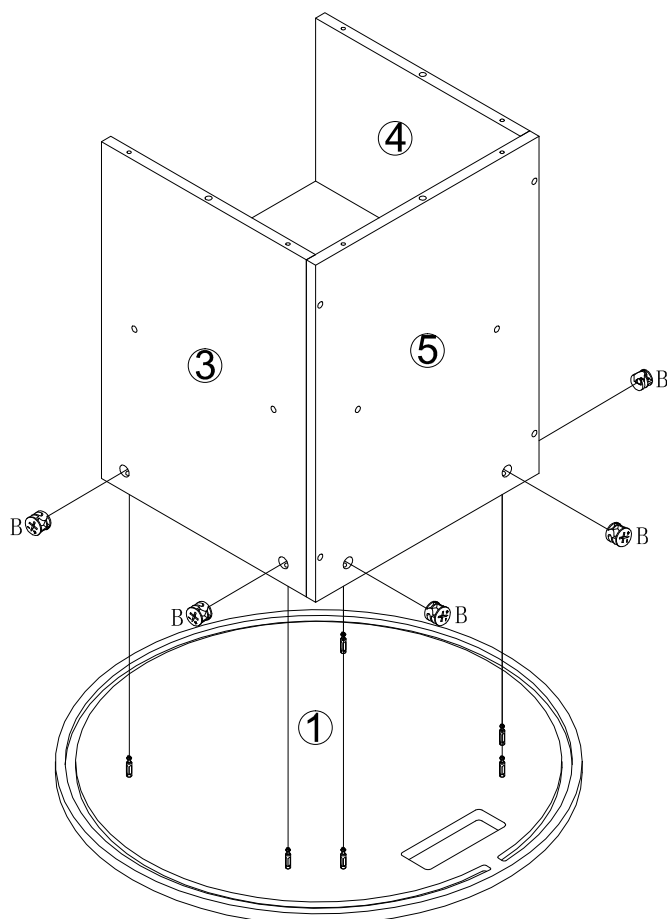

No. B  
Quantity: 6 Pcs  
Ø15



## STEP 5

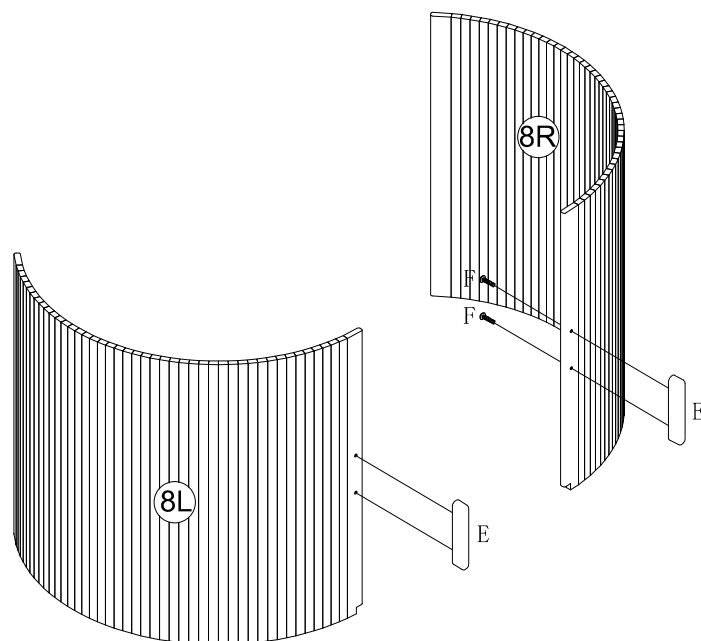


No. F  
Quantity: 4 Pcs  
M4\*14mm



No. E  
Quantity: 2 Pcs  
110\*20mm




## STEP 6

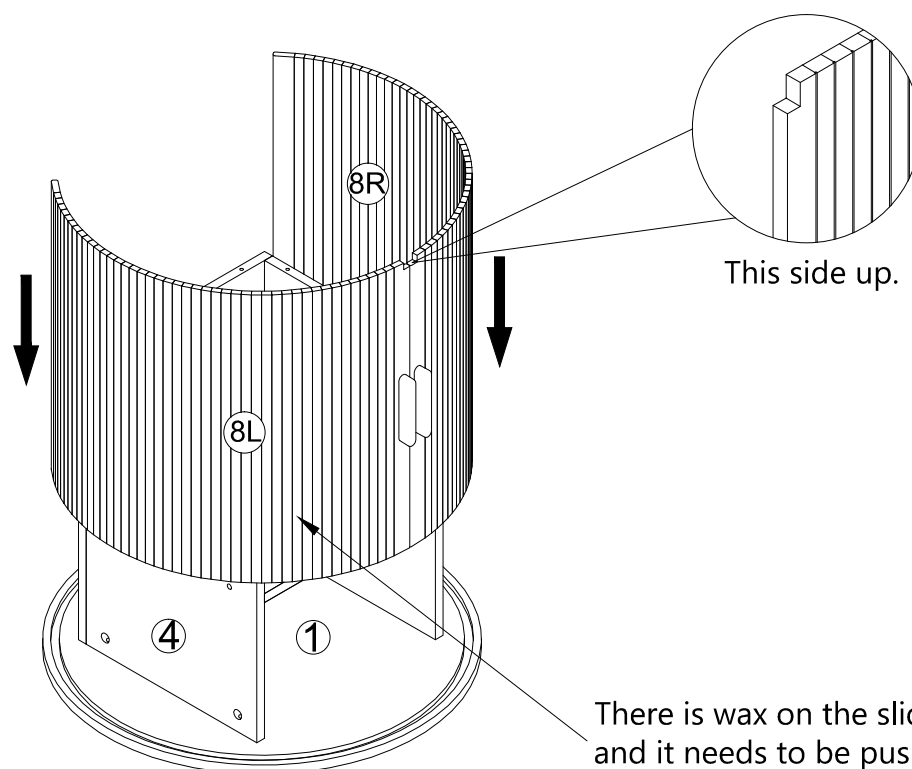

There is wax on the sliding door, and it needs to be pushed and rubbed back and forth before use, so that the wax is evenly attached to the board.

## STEP 7


No. D  
Quantity: 3 Pcs  
8\*30mm




No. G  
Quantity: 6 Pcs  
M6\*40mm




No. H  
Quantity: 1 Pcs  
4#

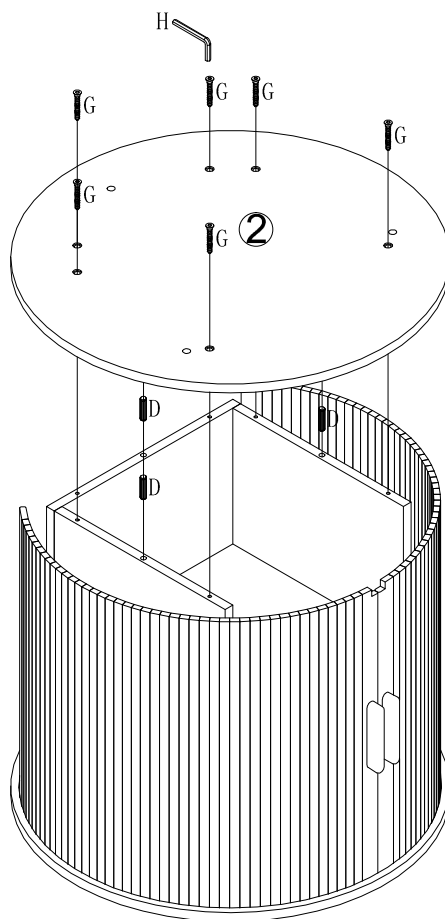

## STEP 8

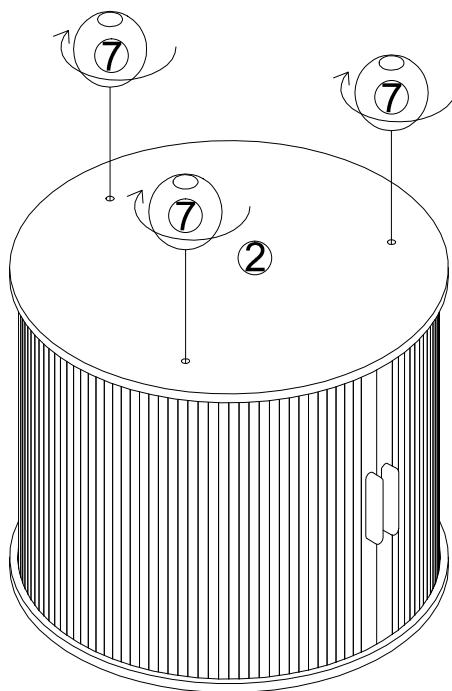


## STEP 9

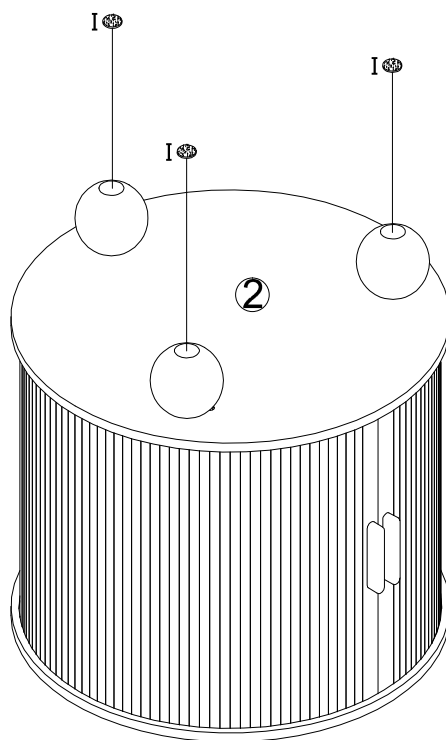


No. I  
Quantity: 3 Pcs  
Ø20



## STEP 10

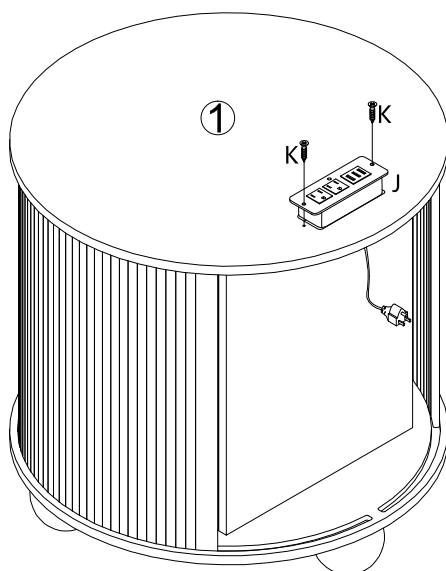

No. J  
Quantity: 1 Sets  
Power strip



No. K  
Quantity: 2 Pcs  
M3.5\*14mm

