


2FT Closet System with 3 Drawers

Assembly Instructions

BO-YCG2FT-3D_V1.0

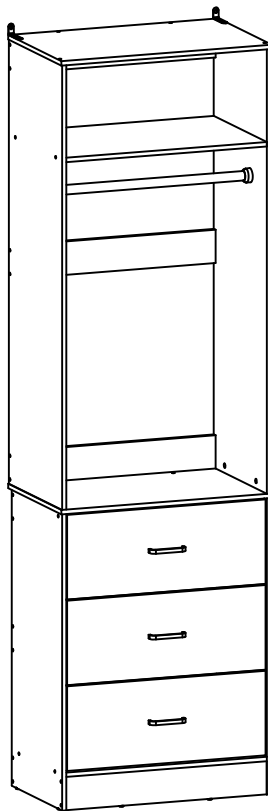

Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.


Have problems when installing or missing parts?

How to find us?











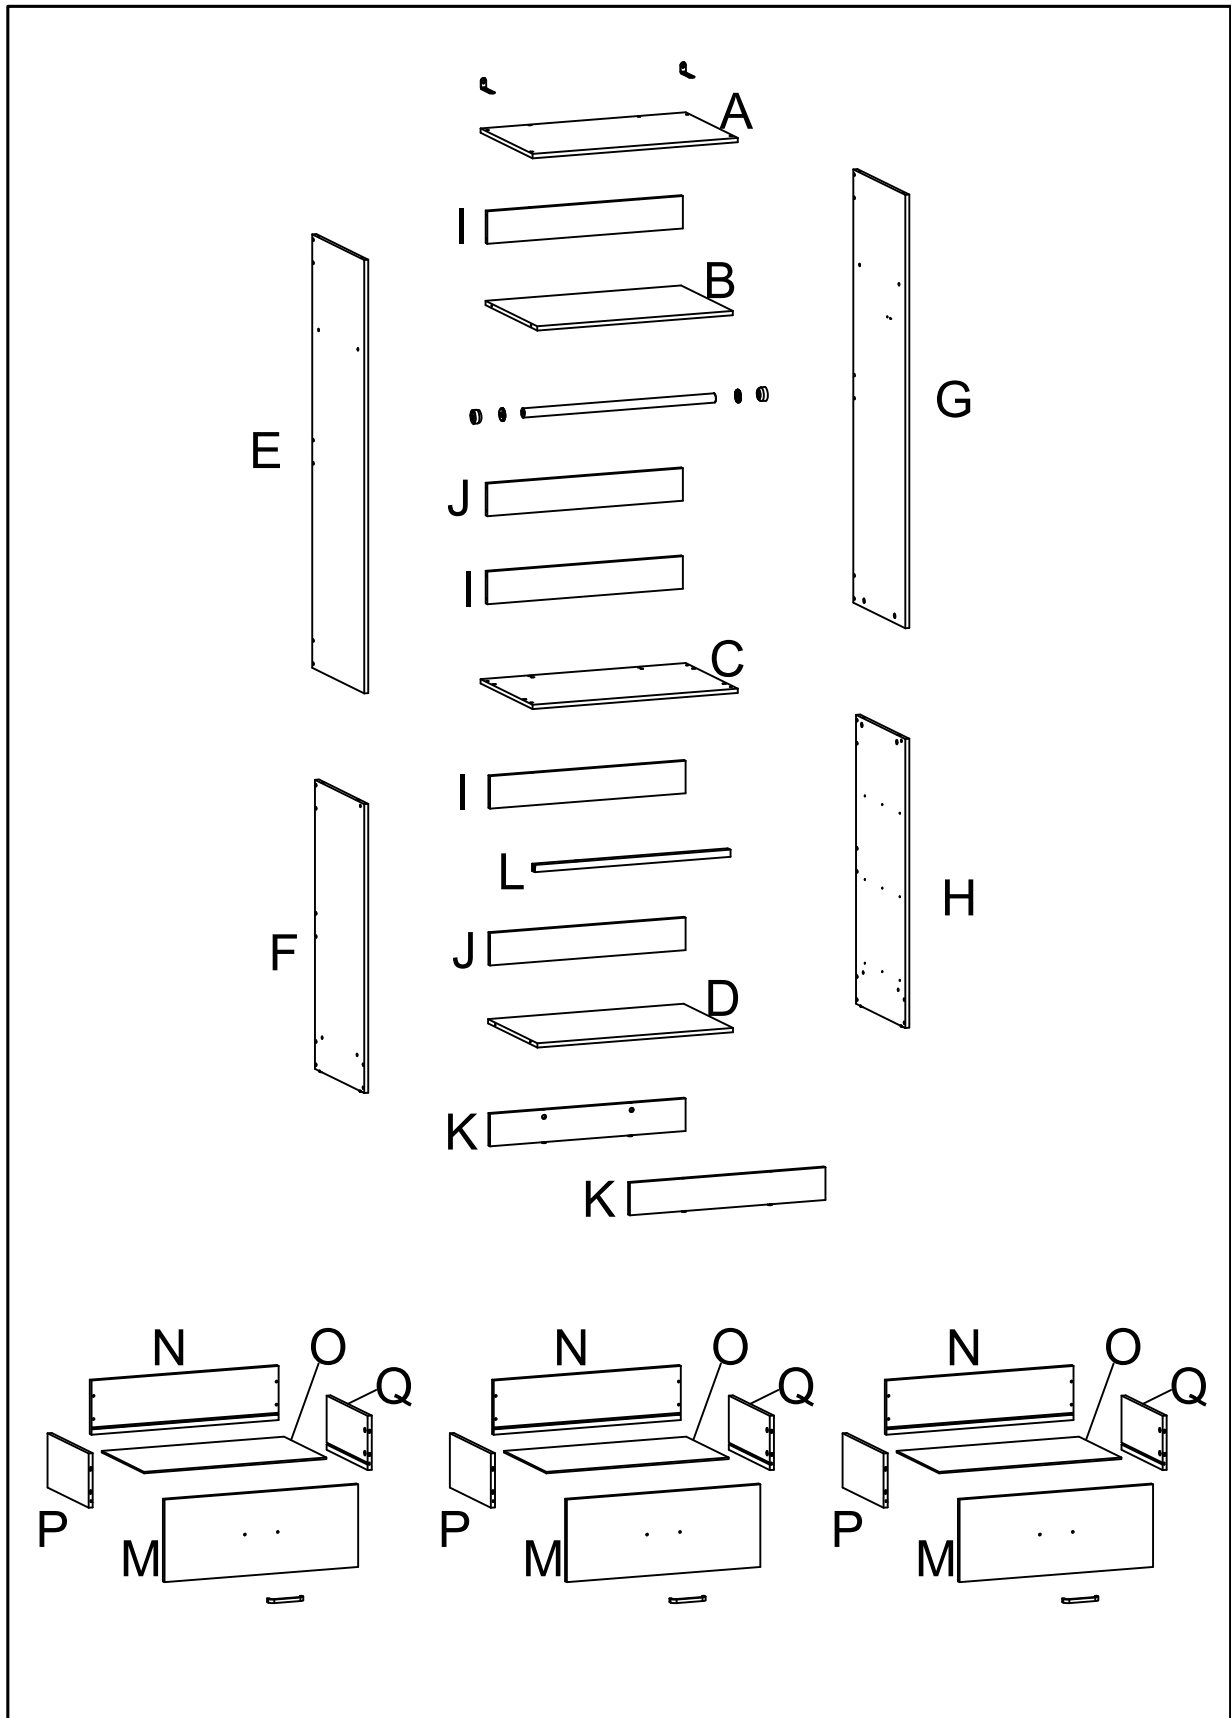








bettersp@hotmail.com


















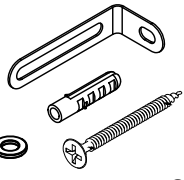


PART LIST



PART LIST
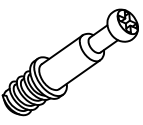
<p>A x 1pc</p> 	<p>B x 1pc</p> 	<p>C x 1pc</p> 	<p>D x 1pc</p> 
<p>E x 1pc</p> 	<p>F x 1pc</p> 	<p>G x 1pc</p> 	<p>H x 1pc</p> 
<p>I x 3pcs</p> 	<p>J x 2pcs</p> 	<p>K x 2pcs</p> 	<p>L x 1pc</p> 
<p>M x 3pcs</p> 	<p>N x 3pcs</p> 	<p>O x 3pcs</p> 	<p>P x 3pcs</p> 
<p>Q x 3pcs</p> 			

HARDWARE LIST

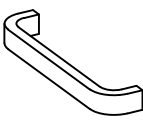
<p>①</p>  <p>M6x28 24 pcs</p>	<p>②</p>  <p>Ø12 24 pcs</p>	<p>③</p>  <p>M6x40 46 pcs</p>	<p>④</p>  <p>M4x15 6 pcs</p>
<p>⑤</p>  <p>M6x30 4 pcs</p>	<p>⑥</p>  <p>M3x12 36 pcs</p>	<p>⑦</p>  <p>M6x27 4 pcs</p>	<p>⑧</p>  <p>M4x12 4 pcs</p>
<p>⑨</p>  <p>Ø25x559 1 pc</p>	<p>⑩</p>  <p>2 pcs</p>	<p>⑪</p>  <p>2 pcs</p>	<p>⑫</p>  <p>3 pcs</p>
<p>⑬</p>  <p>300L 3 pcs</p>	<p>⑭</p>  <p>300L 3 pcs</p>	<p>⑮</p>  <p>300L 3 pcs</p>	<p>⑯</p>  <p>300L 3 pcs</p>
<p>⑰</p>  <p>M4x30 12 pcs</p>	<p>⑱</p>  <p>M4x40 2 pcs</p>	<p>⑲</p>  <p>M4 1 pc</p>	<p>⑳</p>  <p>1 pc</p>

Please count and verify all parts before assembly .

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN

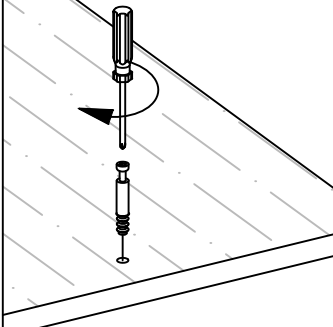

Put the male camlock into the entry hole.


2

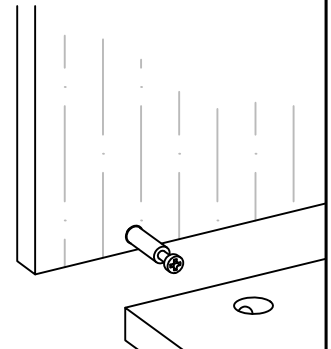

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

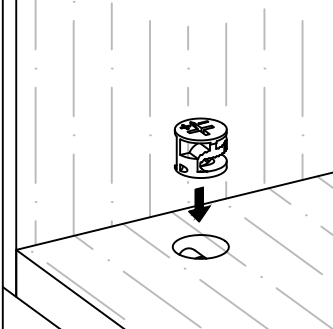


Screw the female camlock clockwise with a screwdriver.


You will feel a click when the camlock is locked in place.

The camlock is now completed.


4

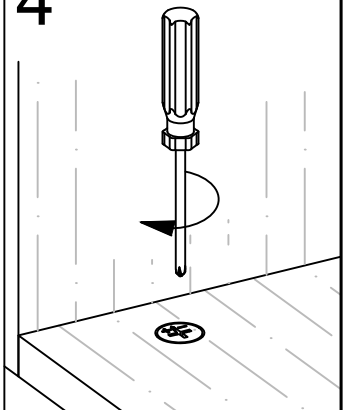

STEP 1

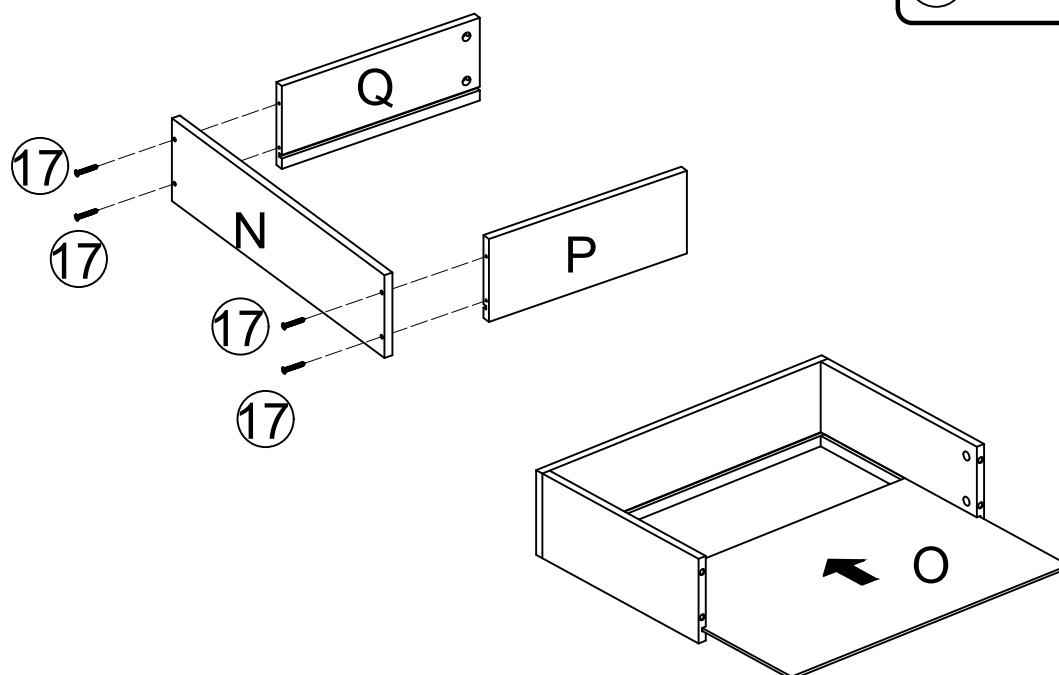


STEP 2

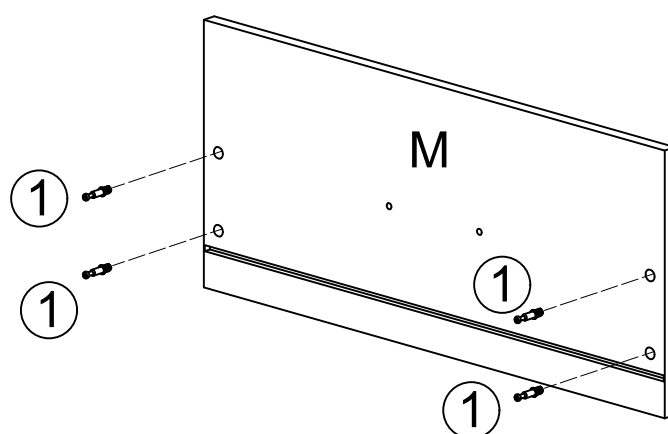


STEP 3

②  x4


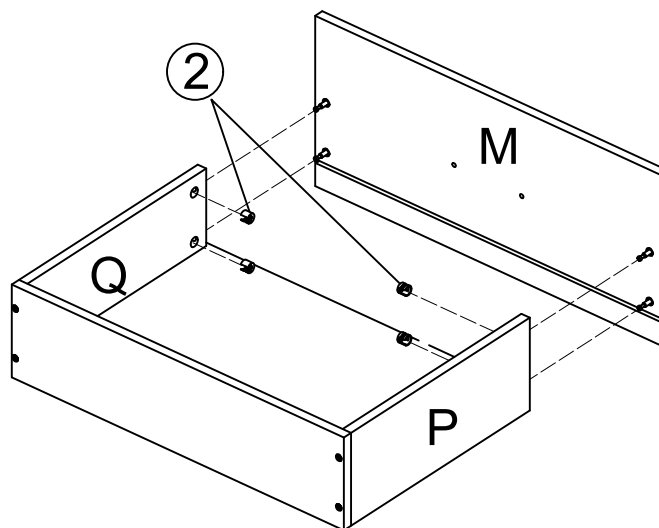


STEP 4




⑥  x6

⑭  x1

⑮  x1

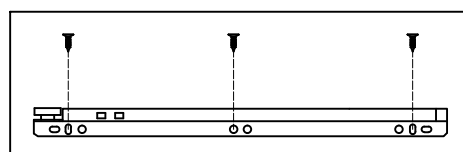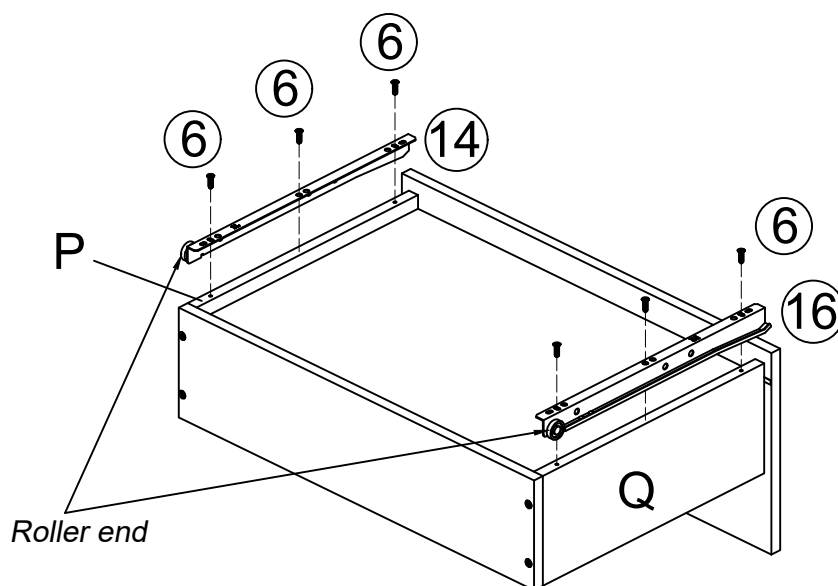


STEP 5

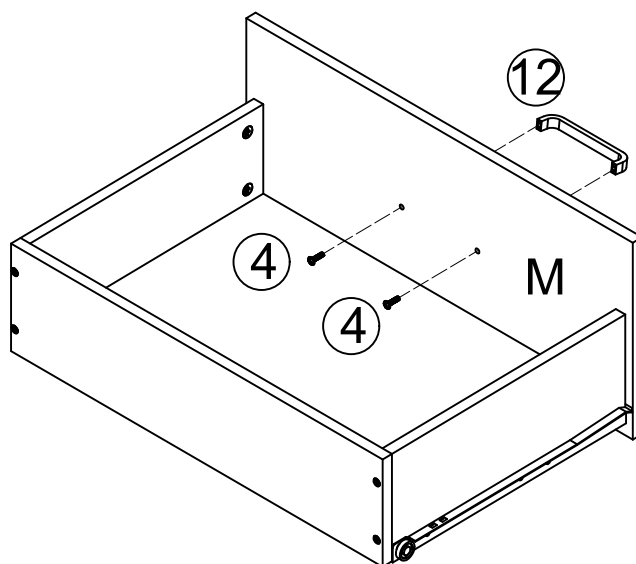

NOTICE:





The installation for all the three drawers is base on the five steps above.

STEP 6



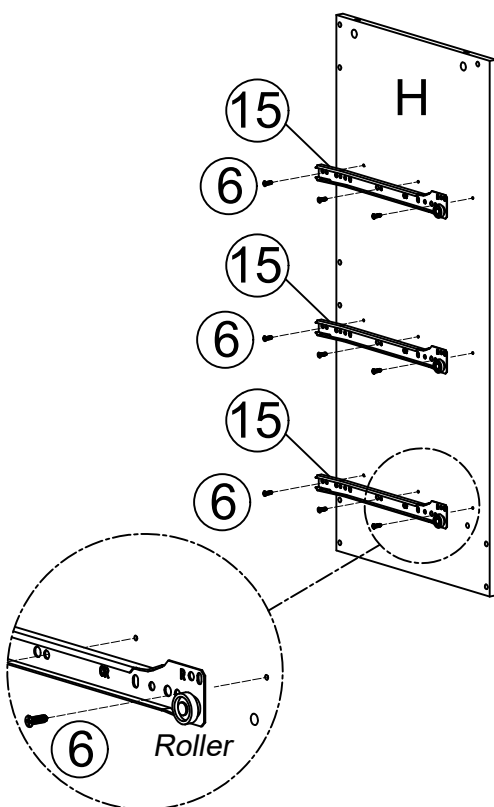


Front



Roller is at bottom

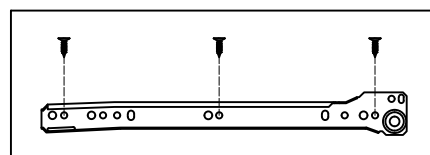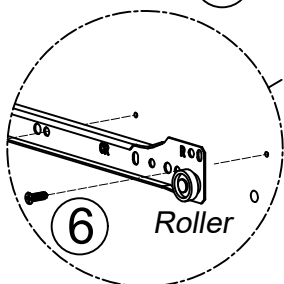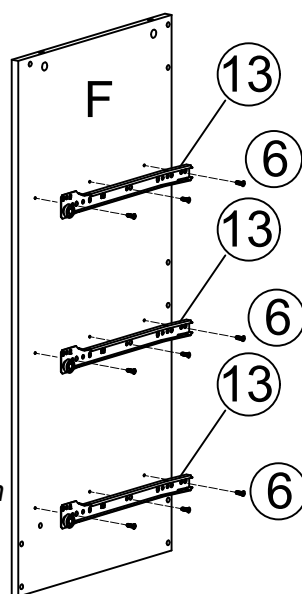

STEP 7

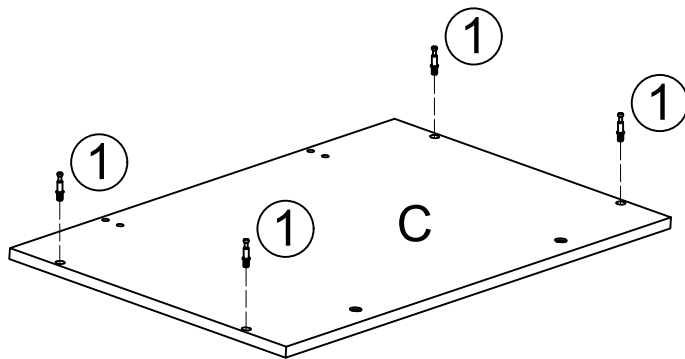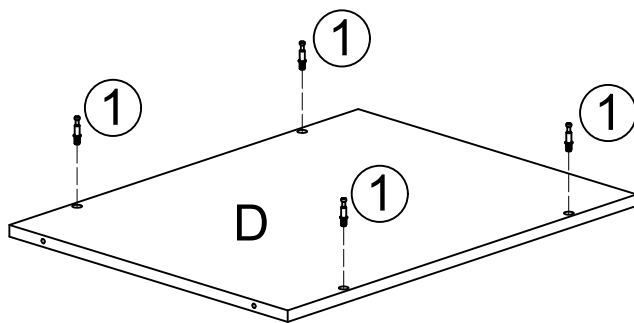



STEP 8

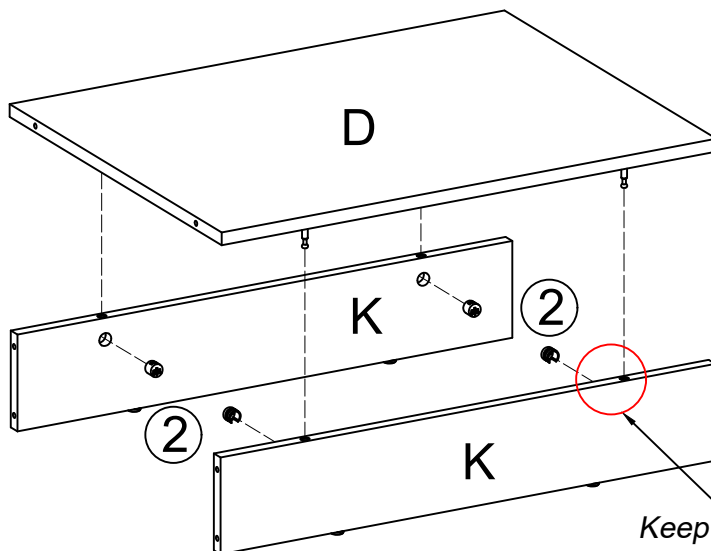



Keep the holes of the Part K toward this direction as shown

STEP 9




Keep the holes of the
Part I and Part L toward
this direction as shown

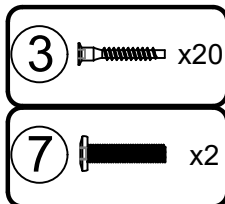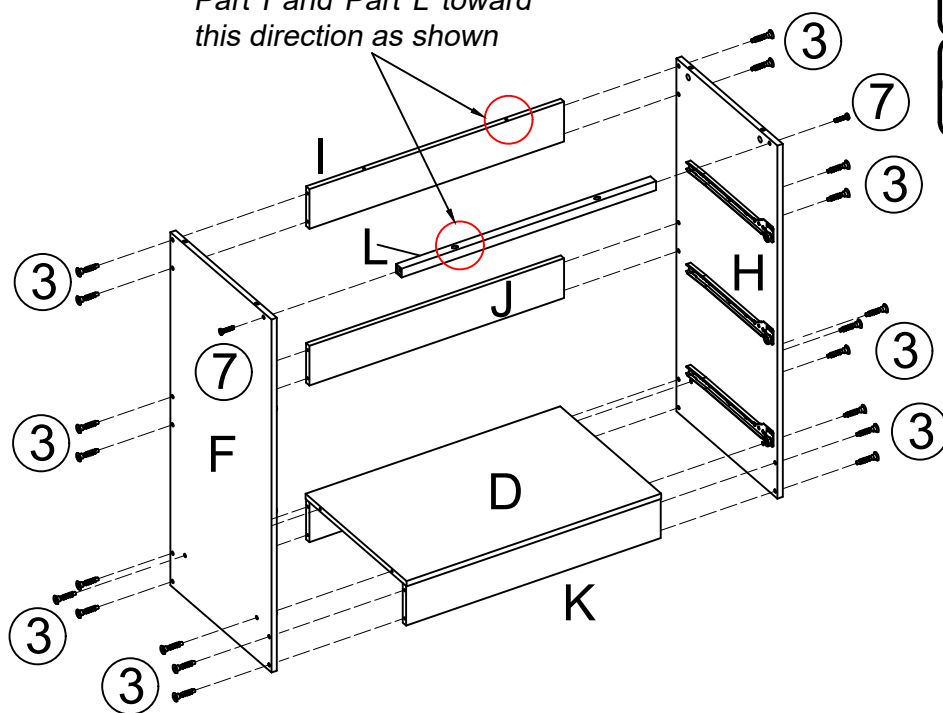




STEP 10

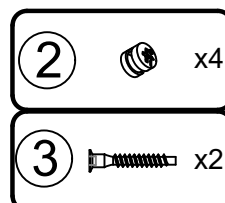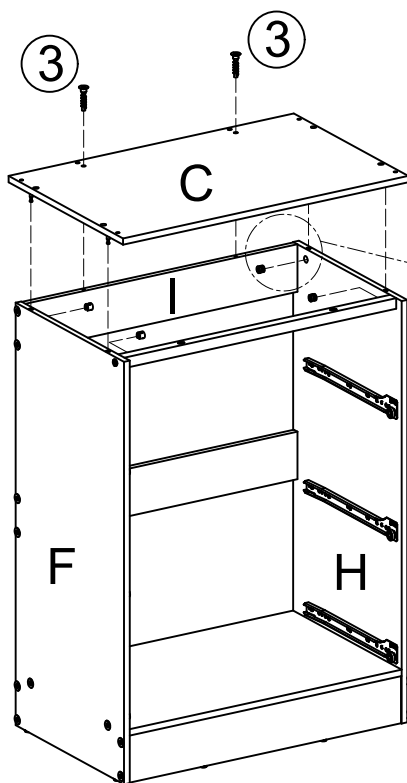

STEP 11

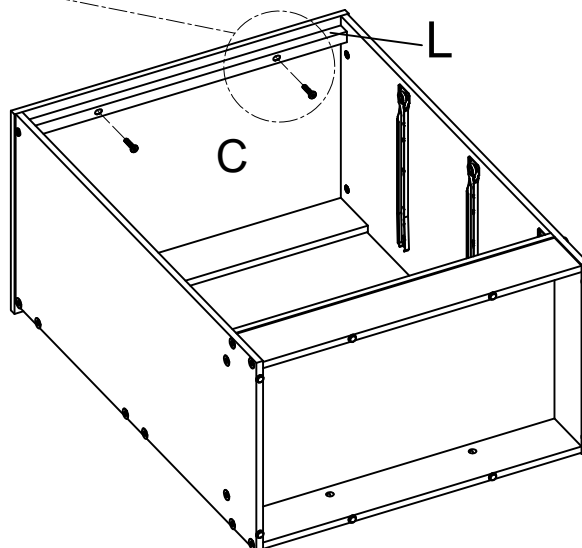
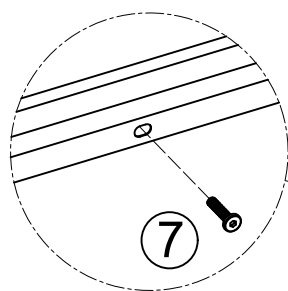


STEP 12

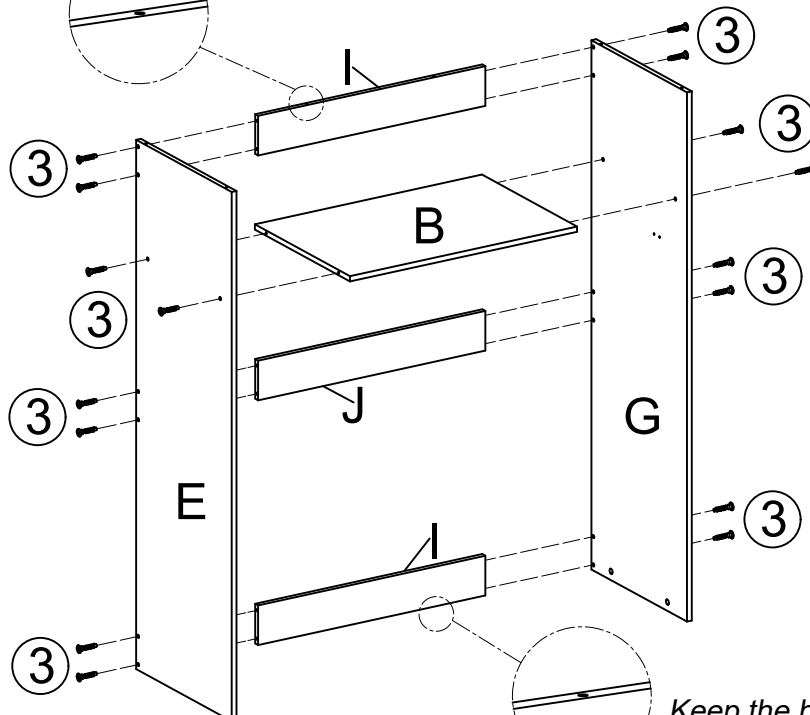
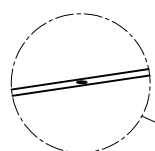


Keep the holes of the Part I toward this direction as shown




STEP 13

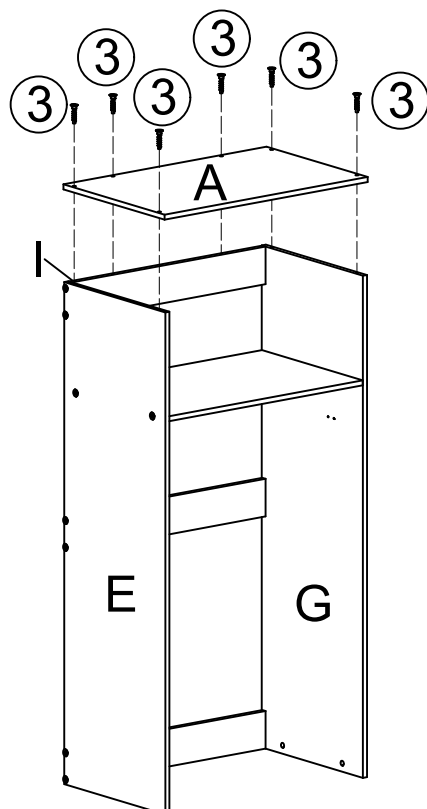




STEP 14

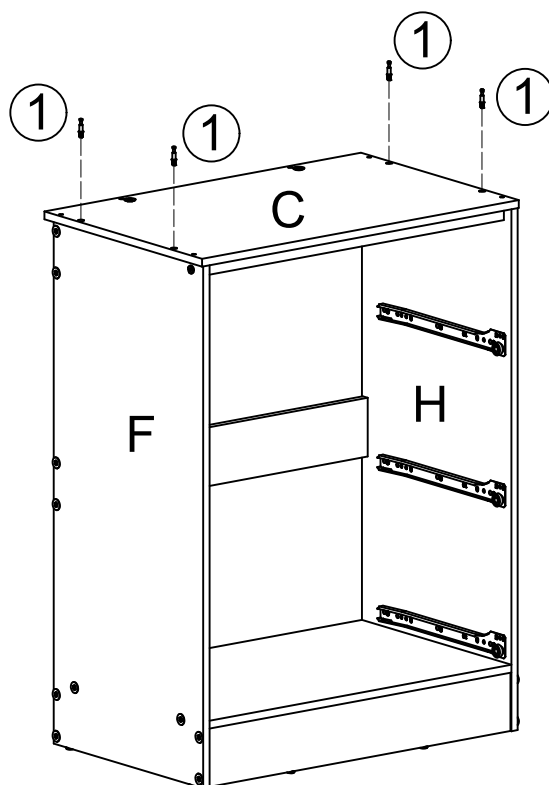





STEP 15

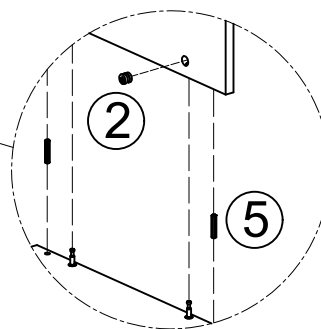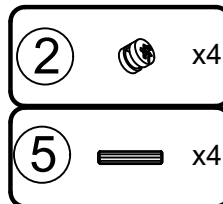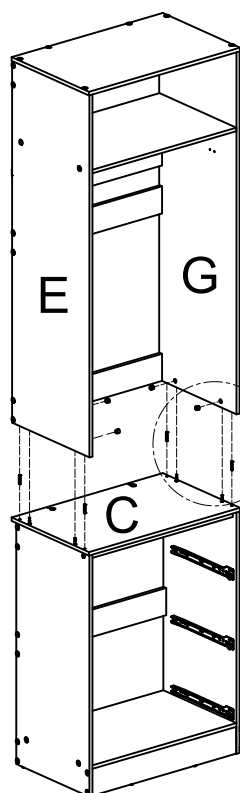

STEP 16

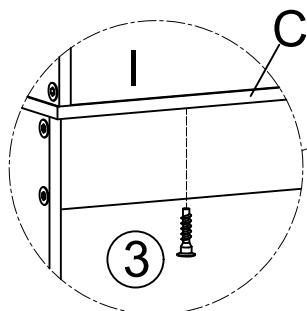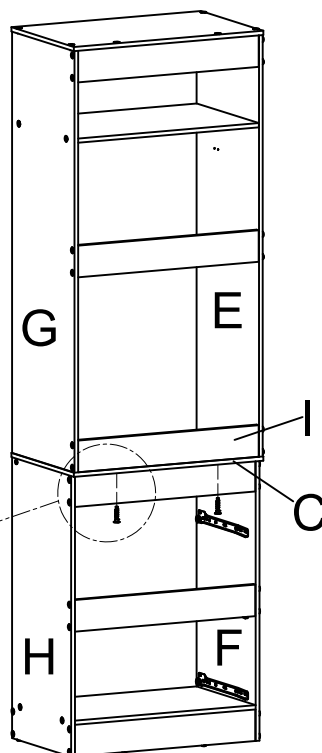




STEP 17

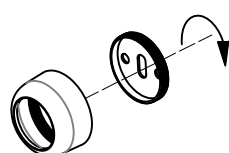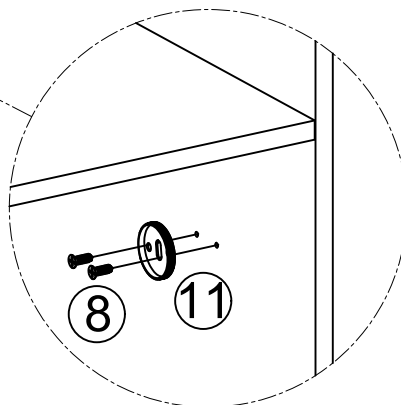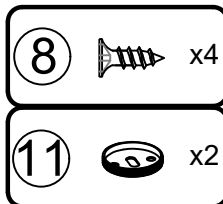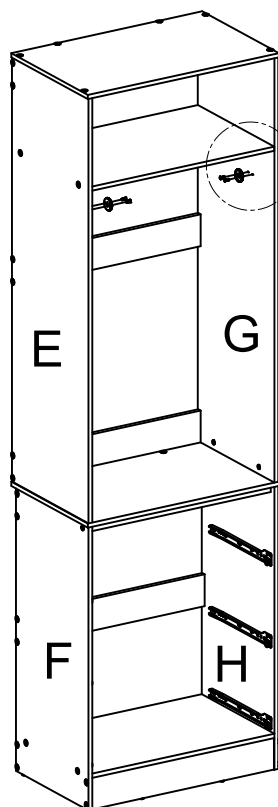

Please rotate and remove parts ⑩ and ⑪ as instructed.


Note: If necessary, please wear protective gloves during this step to avoid hand injuries.

STEP 18

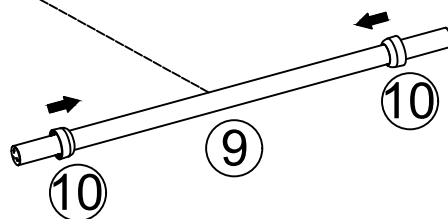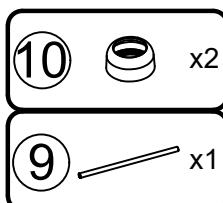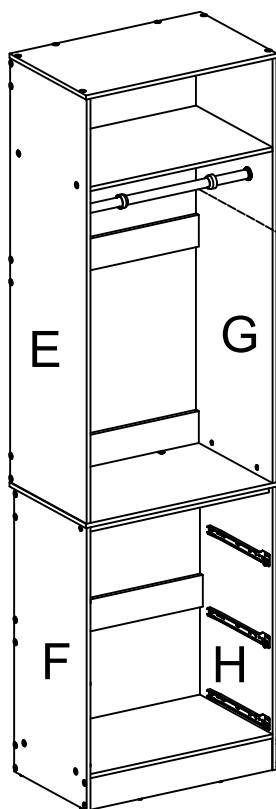


Please slide part ⑩ onto the rod part ⑨ with the threads facing outwards.

STEP 19

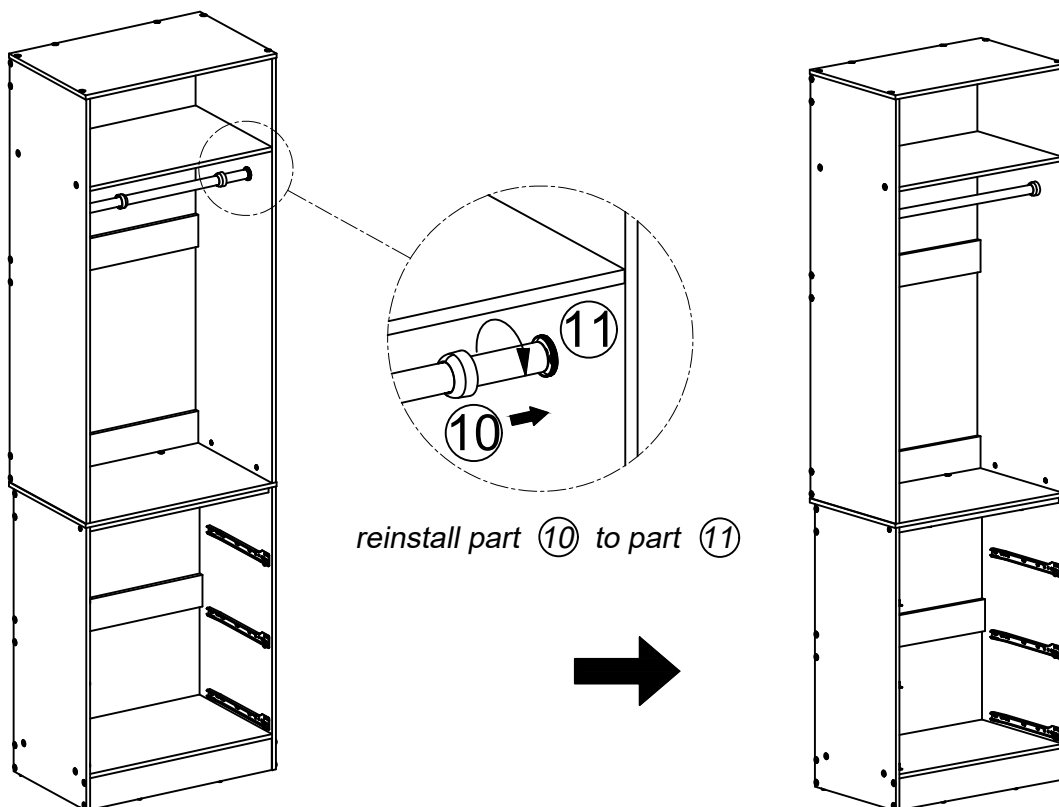


STEP 20

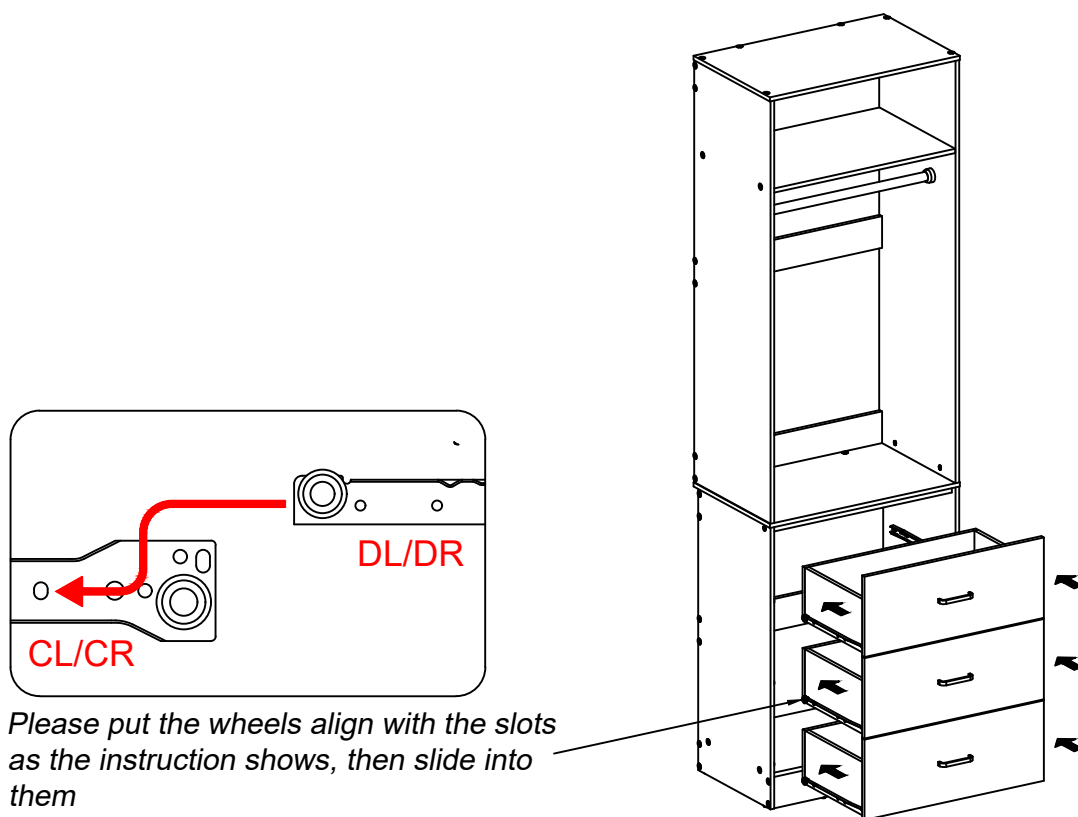


STEP 21

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.


Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

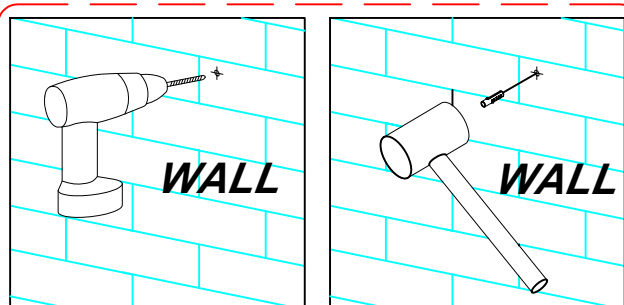

Step 1

Step 2

Please unscrew one Part ③ screw first, then install Part ⑱.

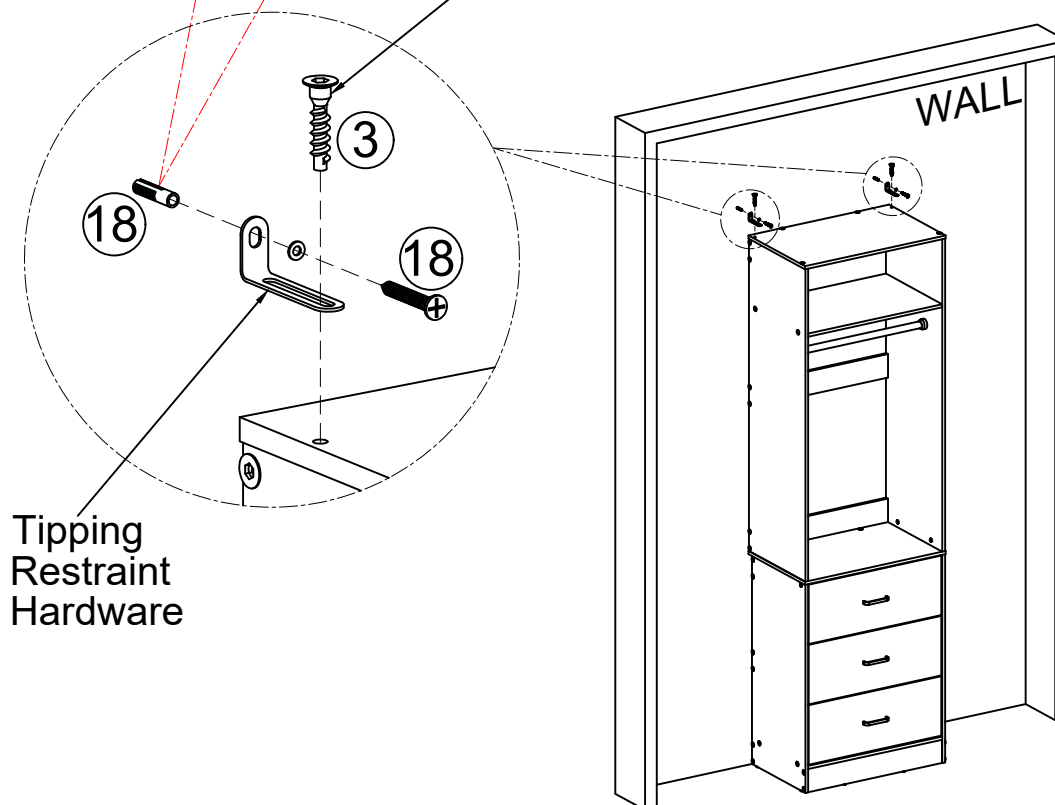

Tipping
Restraint
Hardware