





No.	LINEDRAWING	QTY	
A		24	F 8*40
B		1	
C		18	F 6*30
D		4	
E		12	
F		4	F 6*15
G		6	F 4*12

PARTS LIST

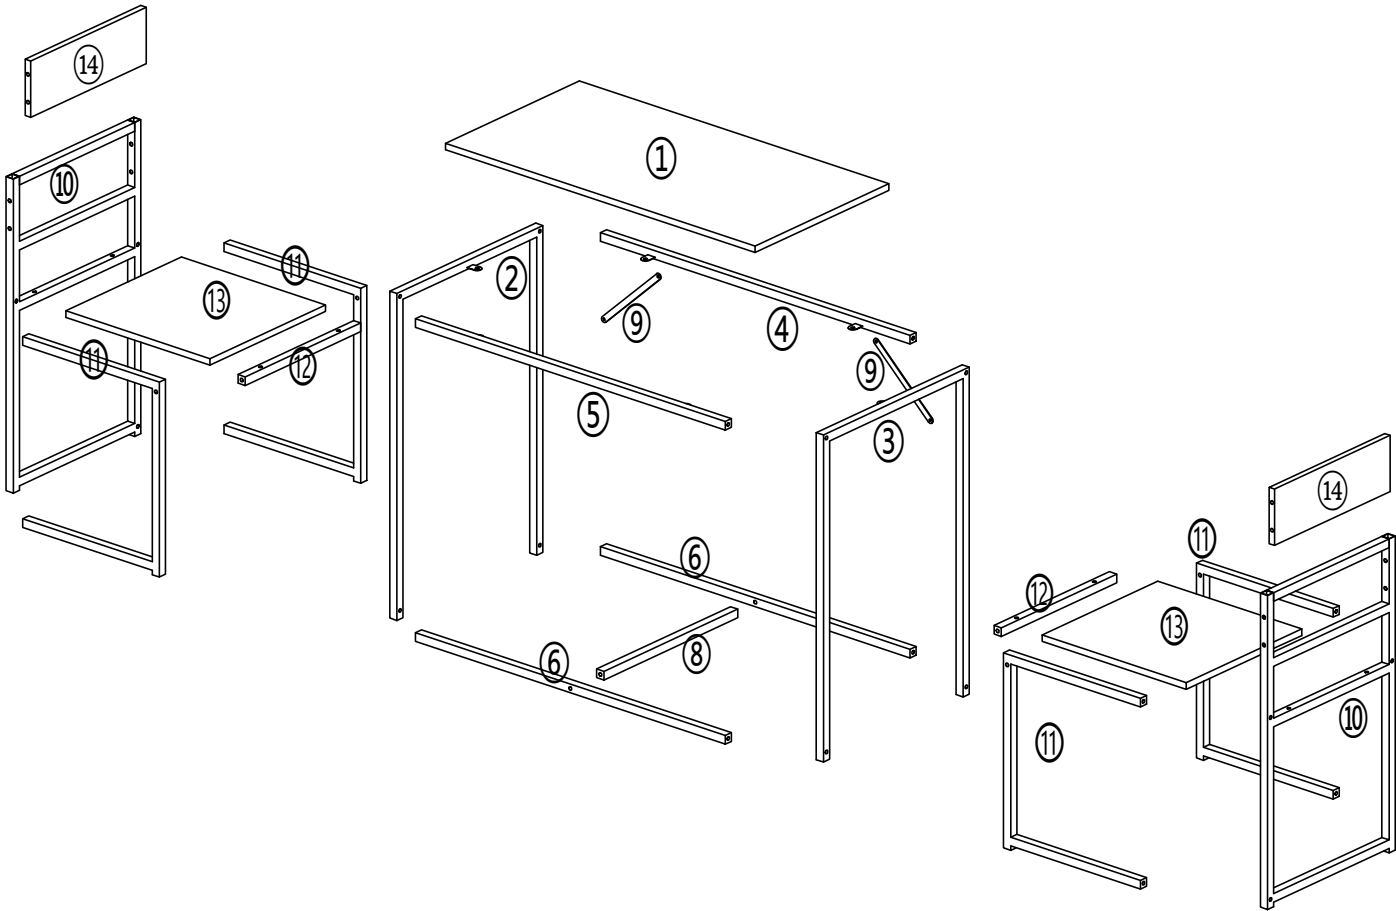





NO.	QTY.
①	1
②	1
③	1
④	1
⑤	1
⑥	2
⑧	1
⑨	2
⑩	2
⑪	4
⑫	2
⑬	2
⑭	2

- Connect bolt (A) through (11) to (12) as shown below
- Connect the steel frame (10) to (11) as shown below.
- Assemble the other one in the same way

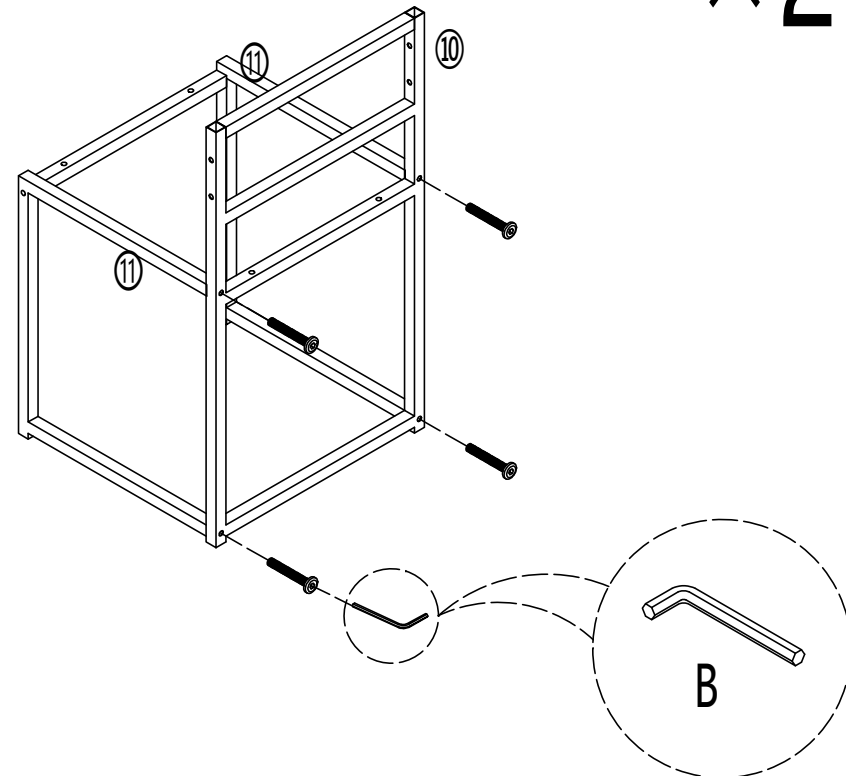
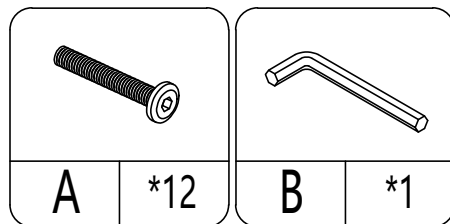
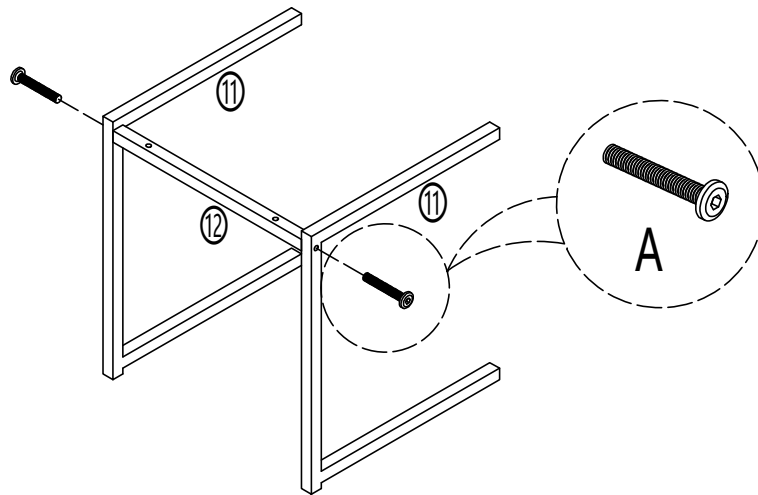


- Connect bolt (C) through the steel frame to the panel (14) as shown below.
- Cover (D) on the steel frame (10) as shown below.
- Connect bolt (C) through the steel frame to the panel (13) as shown below.
- Rotate the regulating pin (E) into (10&11) and assemble the other in the same way.



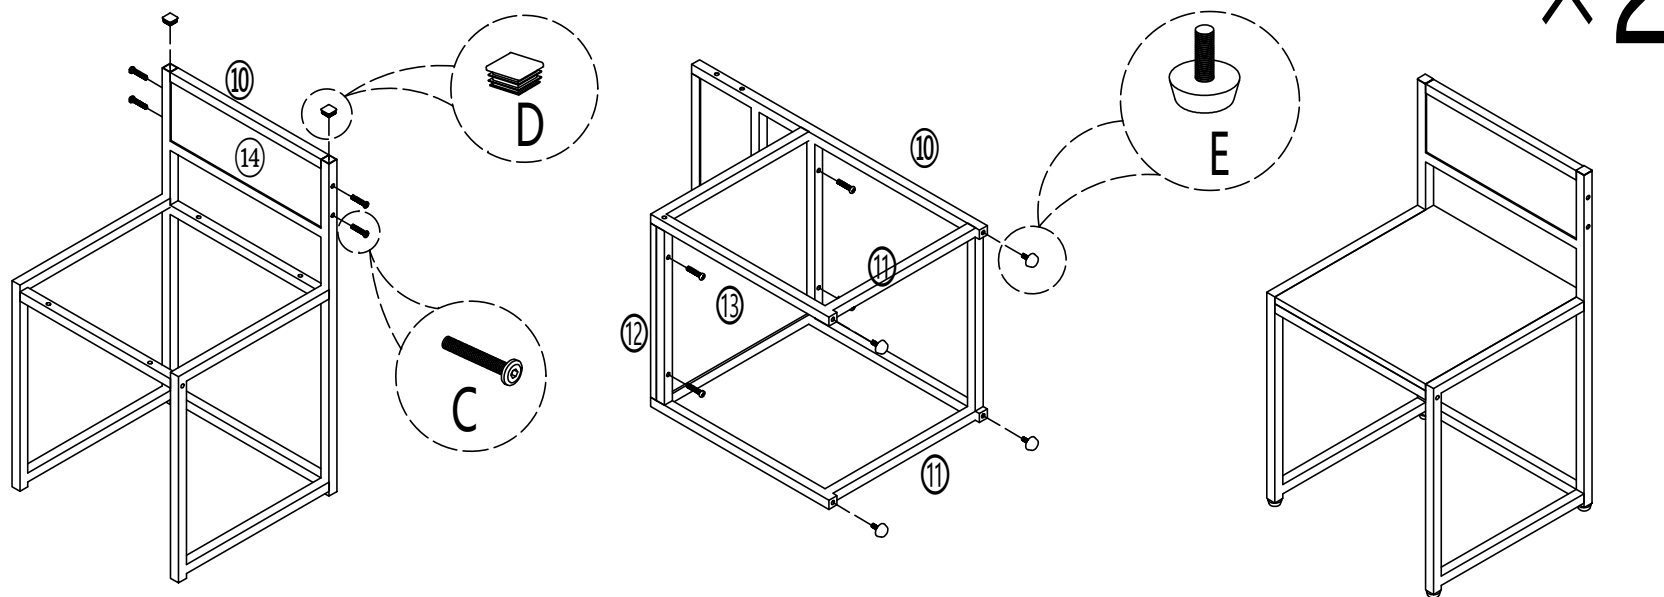


		
C    *16	D    *4	E    *8

- Connect bolt (A) through (6) to (8) as shown below
- Connect (2&3) to (4&5&6), as shown below.

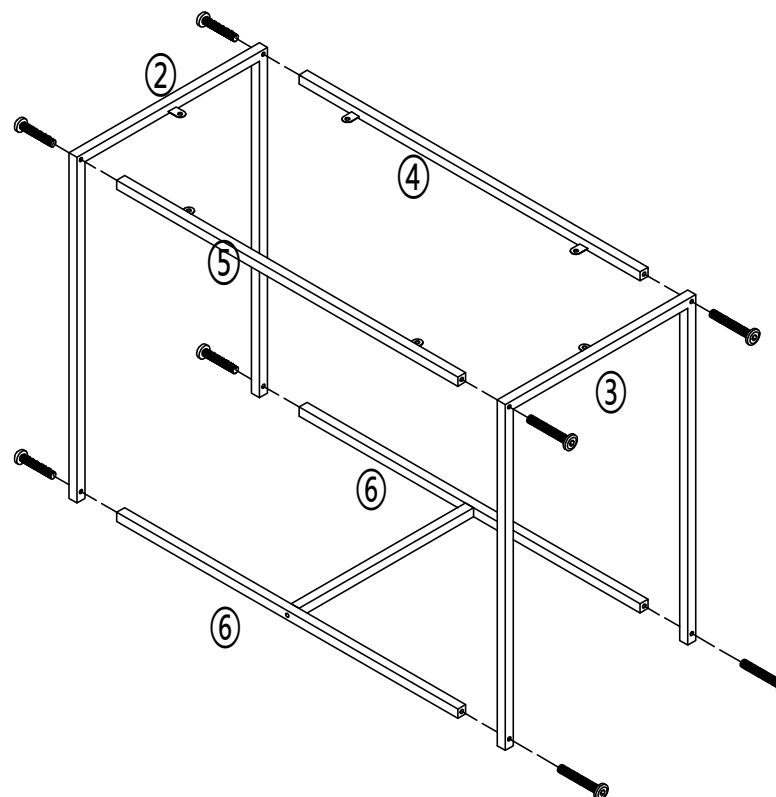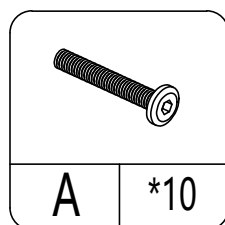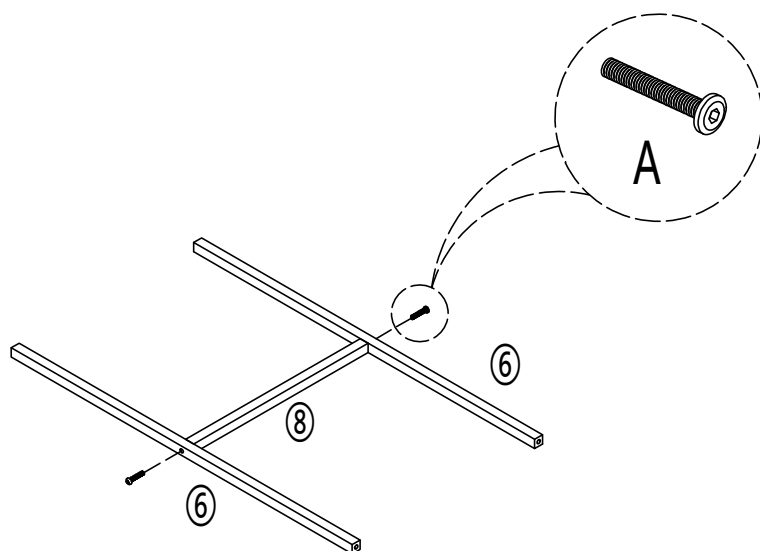

- Attach (9) to (2&3&4) as shown below.
- Attach panel (1) to the installed steel frame as shown below.
- Rotate the regulating foot (E) into (2&3) as shown below.

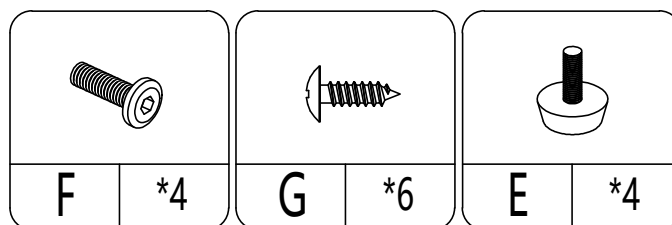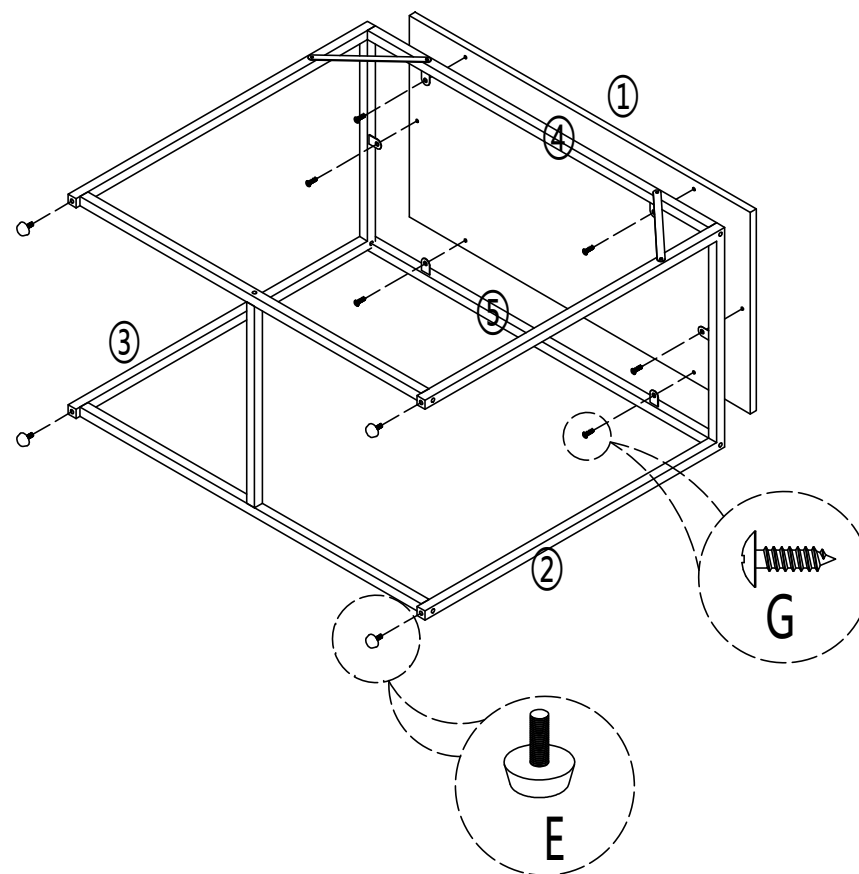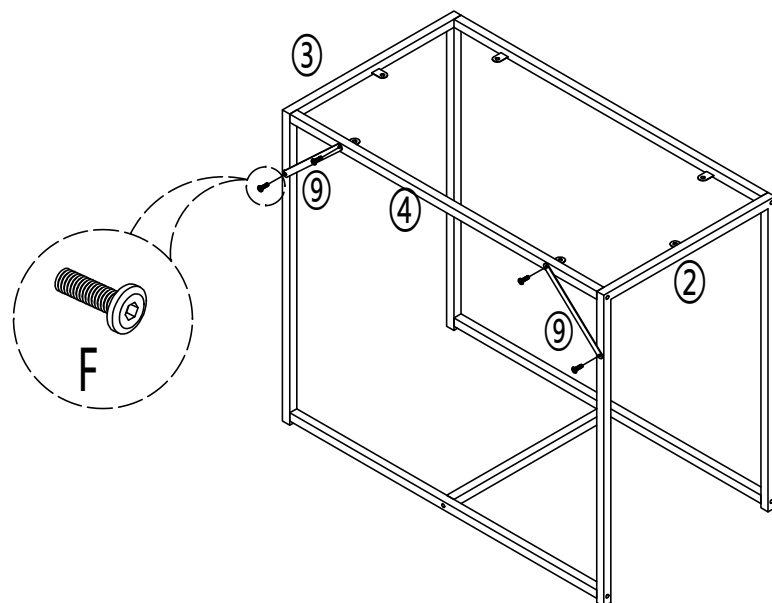

-Complete the chart

