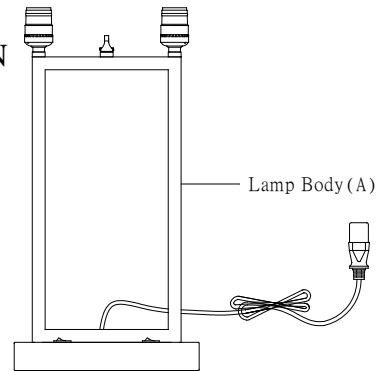
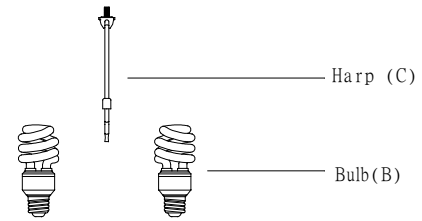
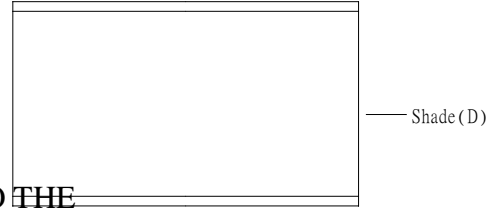
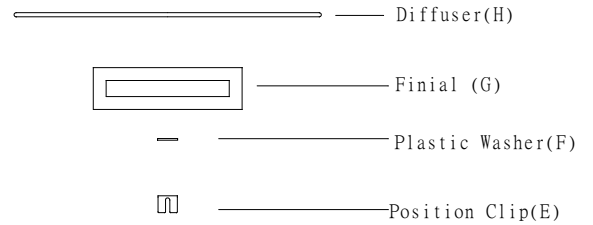



## ASSEMBLY INSTRUCTIONS:

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A FLAT SURFACE AND LINE THEM UP AS PER THE SKETCH.
2. INSERT HARP (C) INTO SADDLE OF LAMP BODY (A).
3. INSTALL SHADE (D) ONTO HARP (C).
4. PLACE POSITION CLIP (E) OVER THE STEEL WIRE, ONTO THE NIPPLE OF HARP (C), AS SHOWN IN PHOTO (1).
5. PLACE PLASTIC WASHER (F) ONTO THE NIPPLE OF HARP (C), AND SECURE WITH FINIAL (G).
6. SCREW BULBS (B) INTO SOCKET.
7. PLACE HOLE OF DIFFUSER (H) ONTO FINIAL (G).
8. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.



**PHOTO (1)**

In the same direction

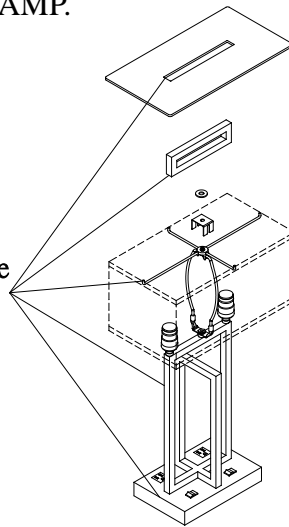

**USE A 13W 2PCS CFL TYPE BULB OR 60W 2PCS (MAXIMUM) INCANDESCENT A TYPE BULB.**

- ※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.
- ※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.